



ASSEMBLY INSTRUCTIONS

TWIN BED WITH TRUNDLE



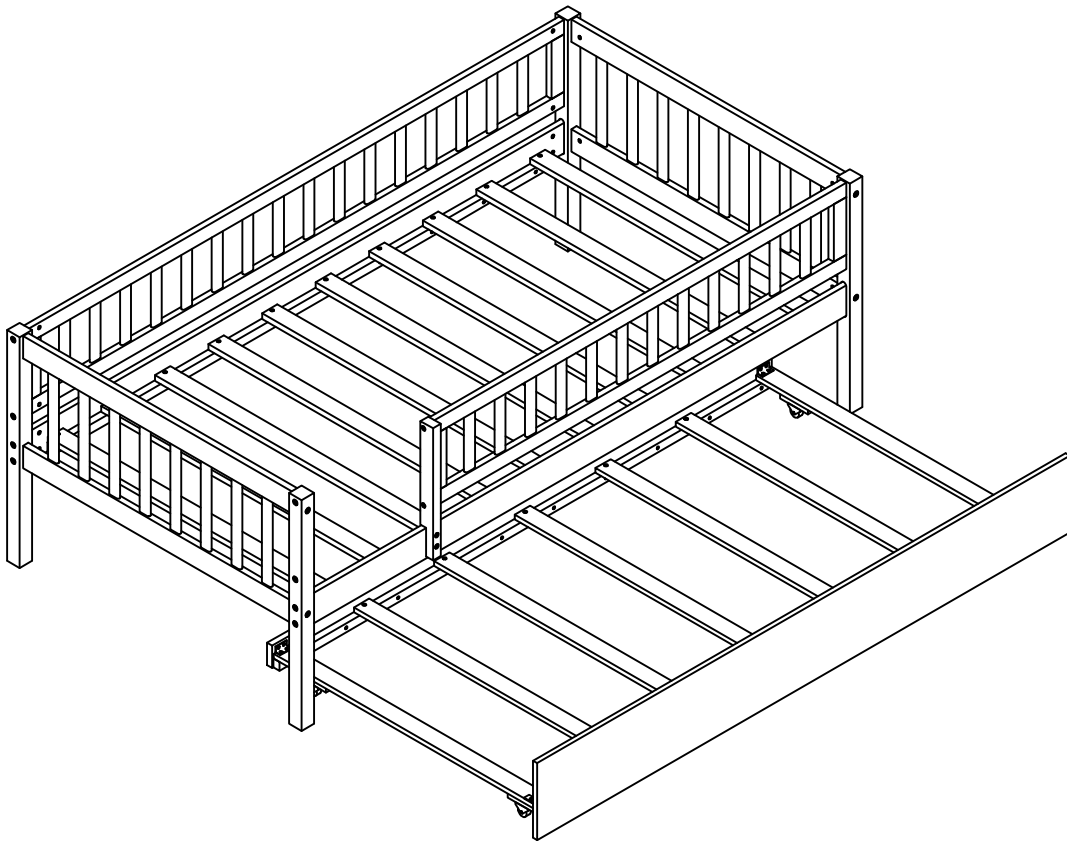










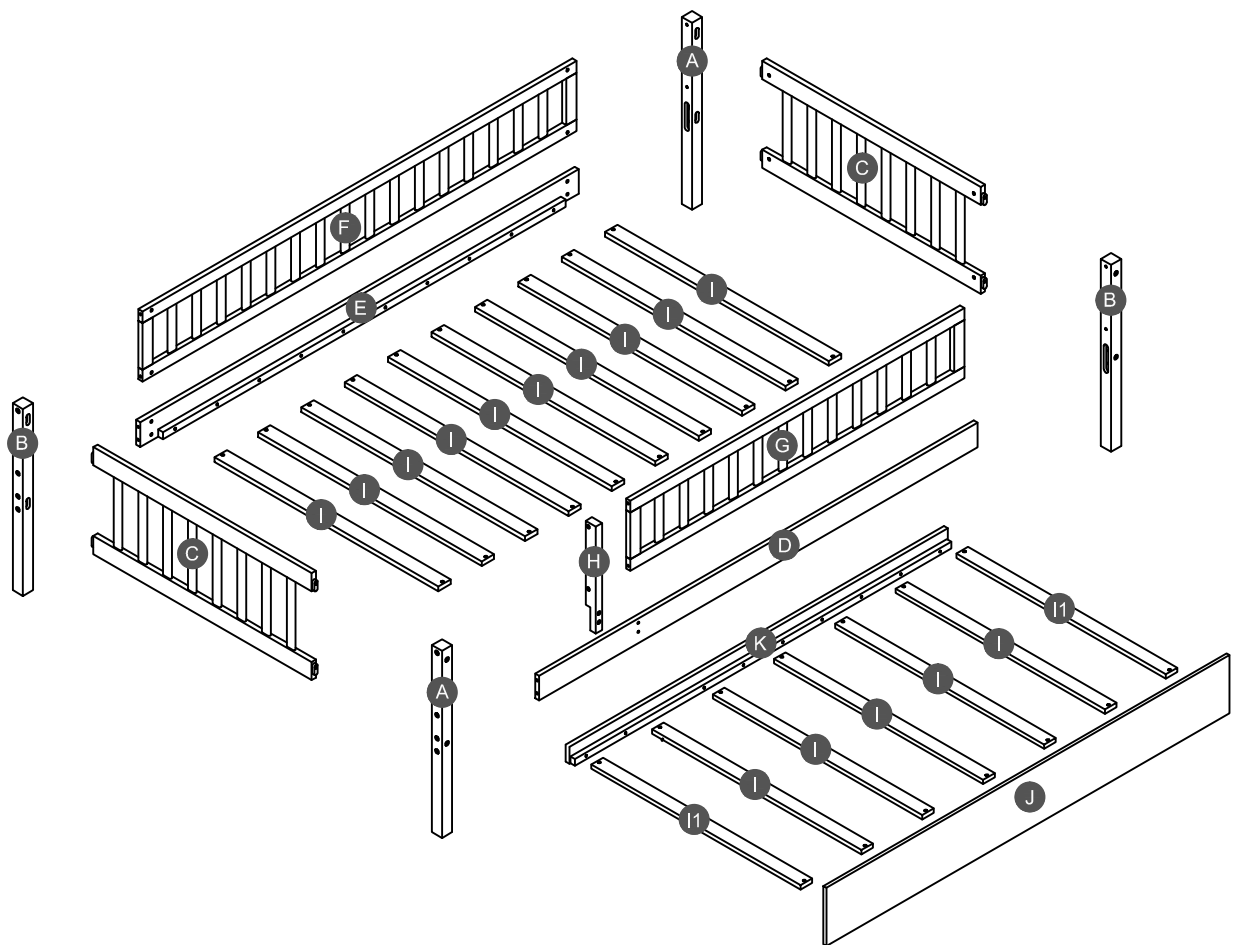
WF301862











Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Frame HB/FB - 2pcs
D  Side rail (Front) - 1pc	E  Side rail (Back) - 1pc	F  Long guard rail (Back) - 1pc
G  Short guard rail (Front) - 1pc	H  Support guard rail(Left) - 1pc	I  Slats - 15pcs
I1  Slats - 2pcs	J  Front panel of Trundle - 1pc	K  Back panel side rail of Trundle -1pc

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	3  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(24pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  Ø4*30mm Wood screws (42pcs)
7  Ø3.5*15mm Wood screws (16pcs)	8  95*95*18*3mm Metal bracket (2pcs)	9  40*18*18*2mm Metal bracket (2pcs)
10  100*63*20mm Wheels (4pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

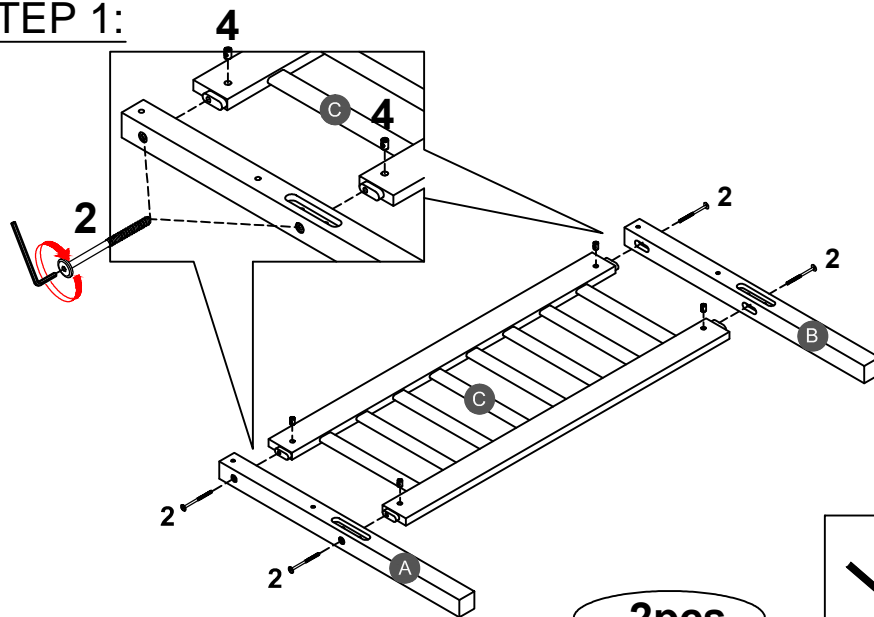

2



8PCS


4




8PCS

2pcs

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

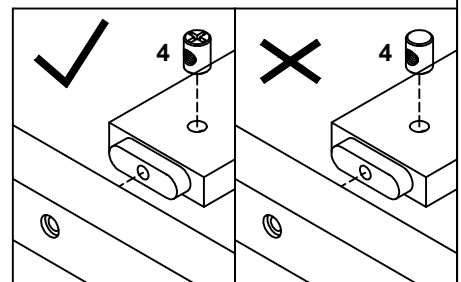

STEP 2:

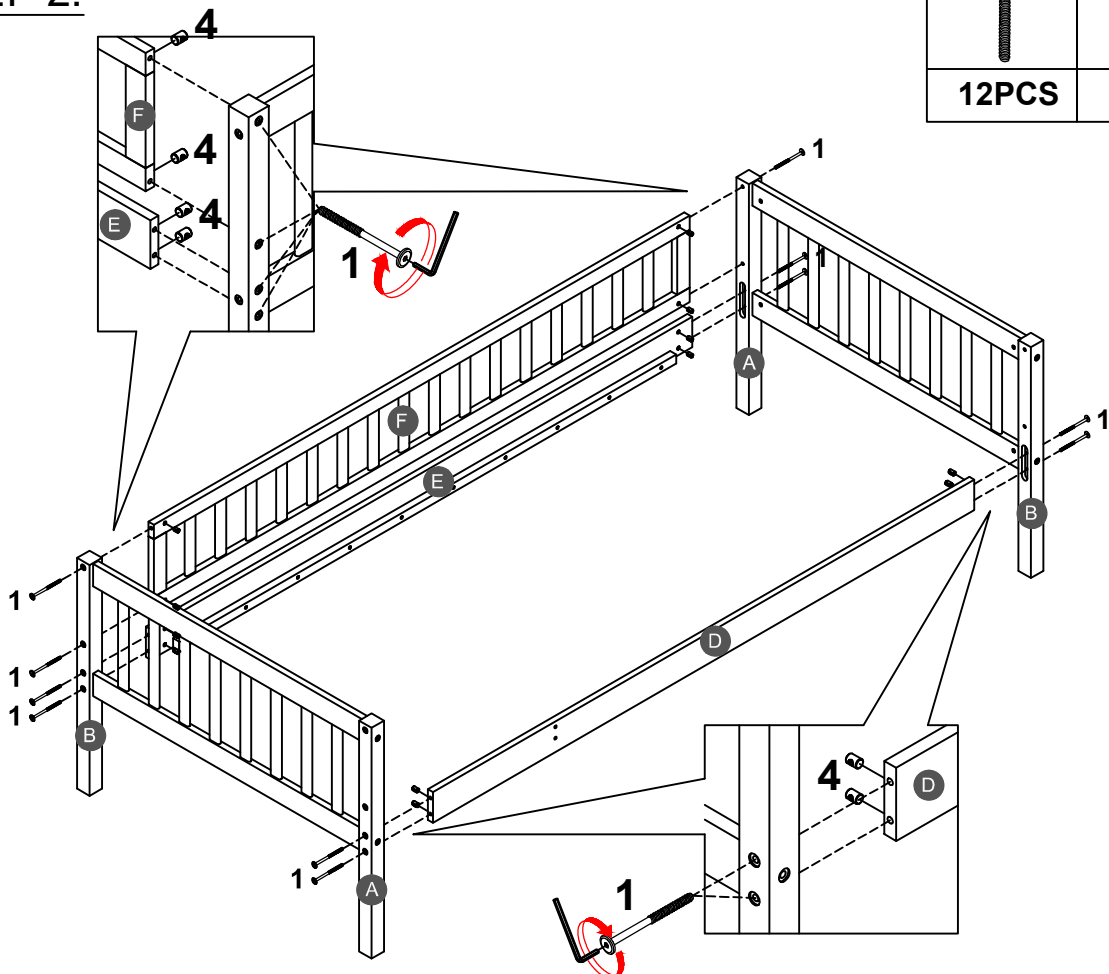

1




12PCS

4




12PCS

STEP 3:

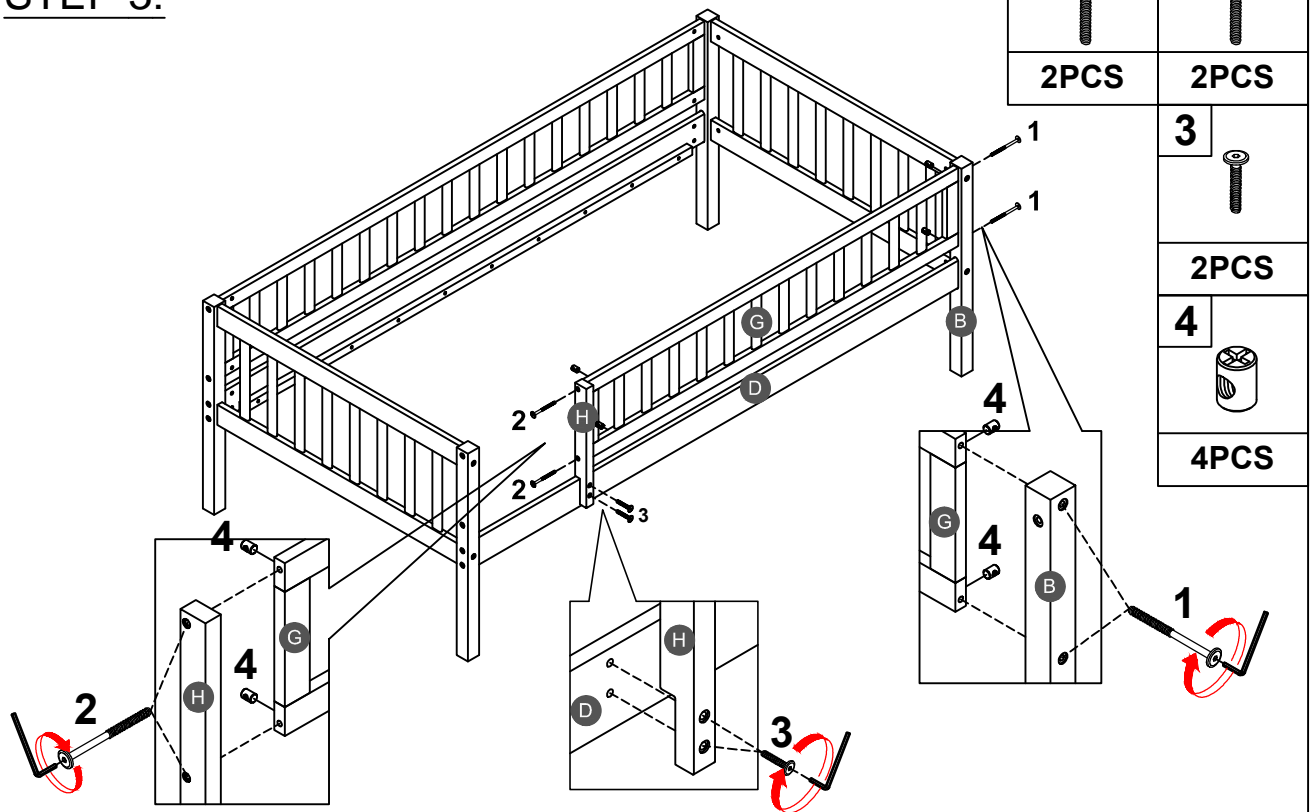


STEP 4:

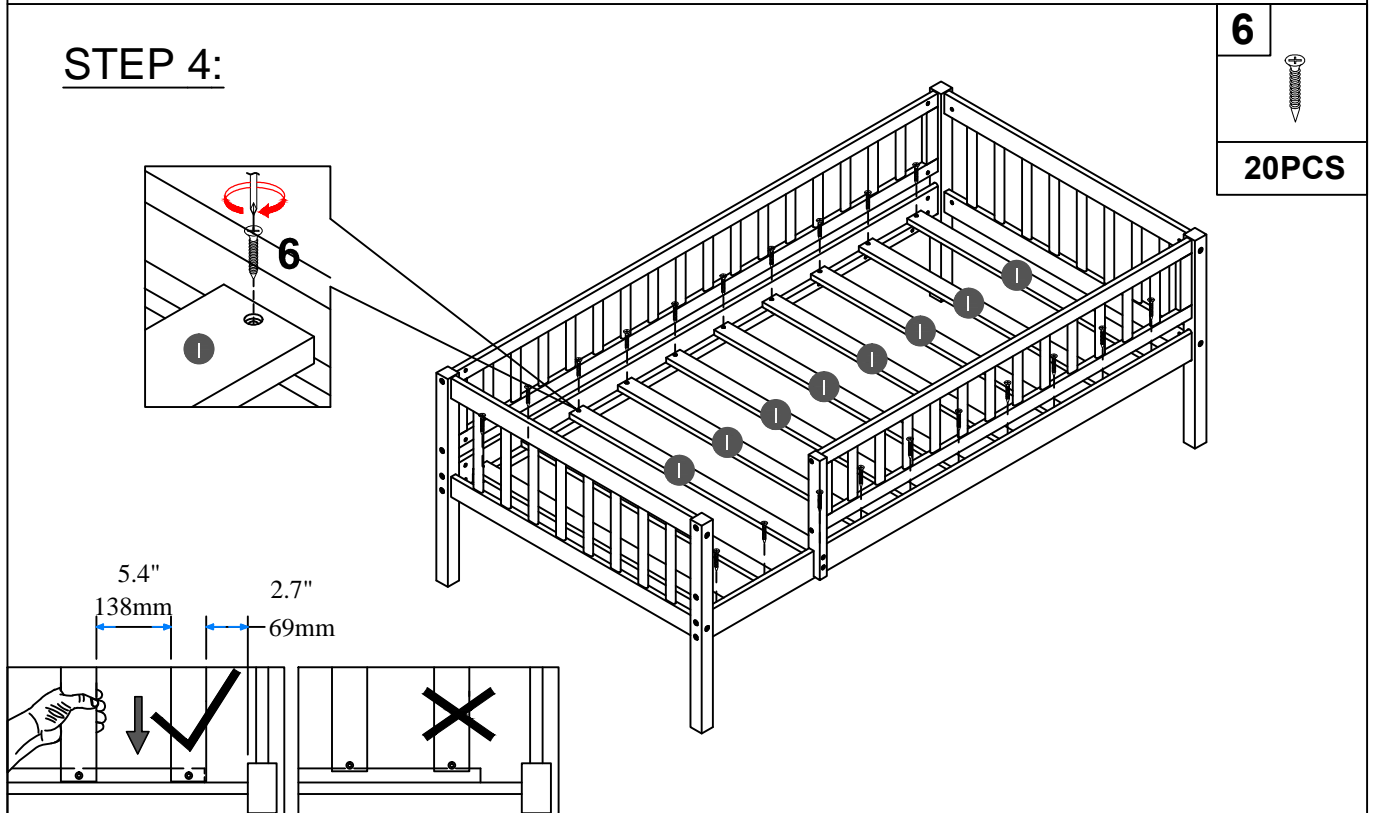

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 5:

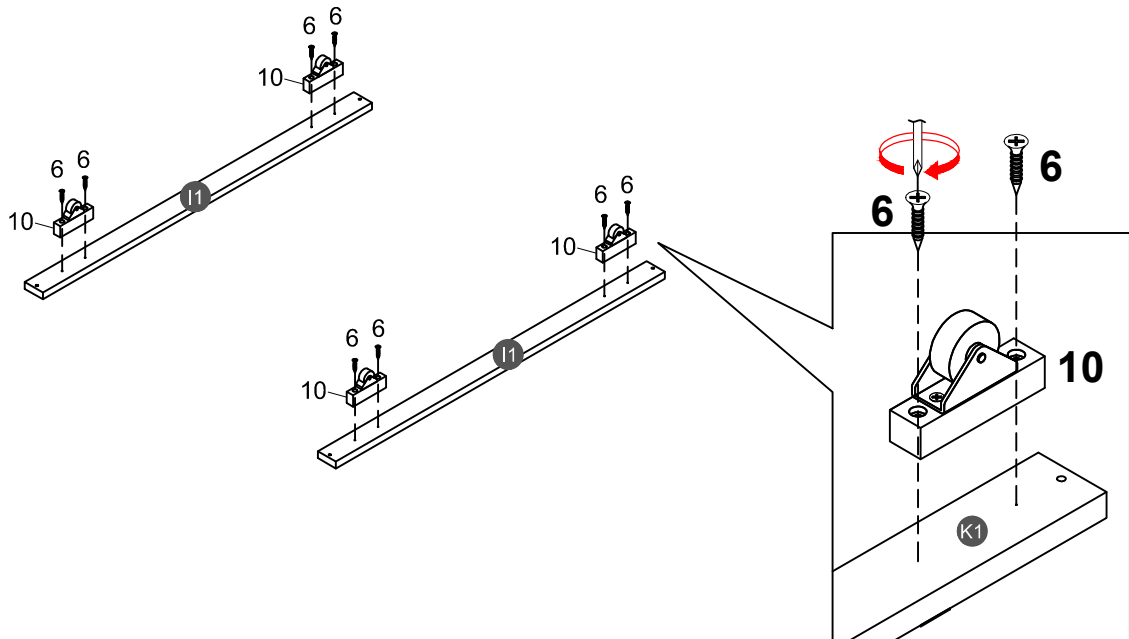

6




8PCS

10



4PCS



STEP 6:

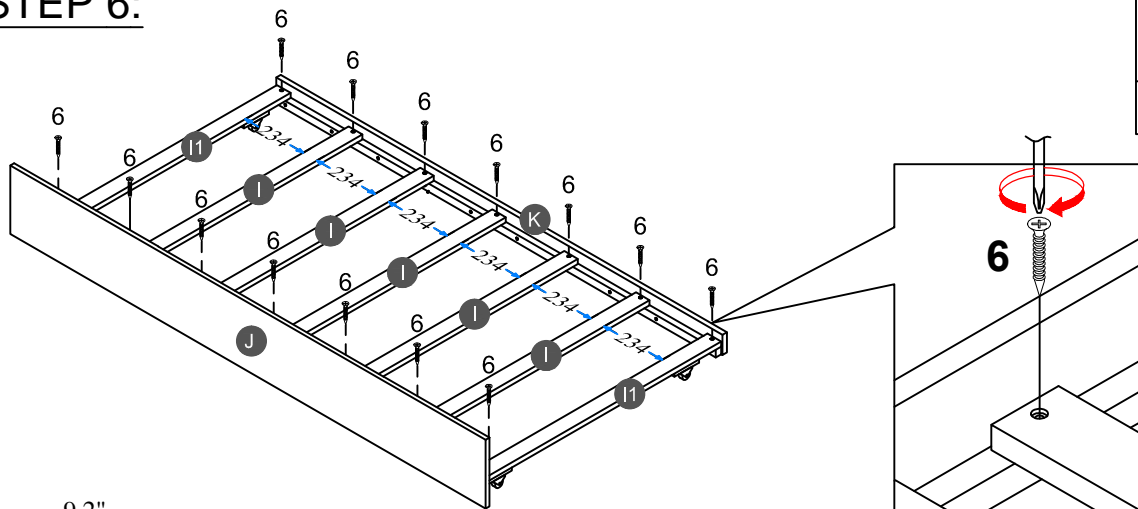

6




14PCS

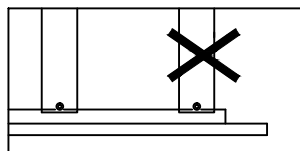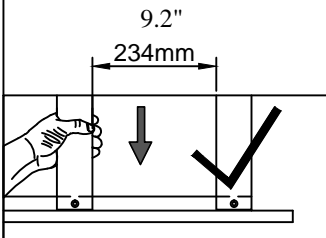


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 7:

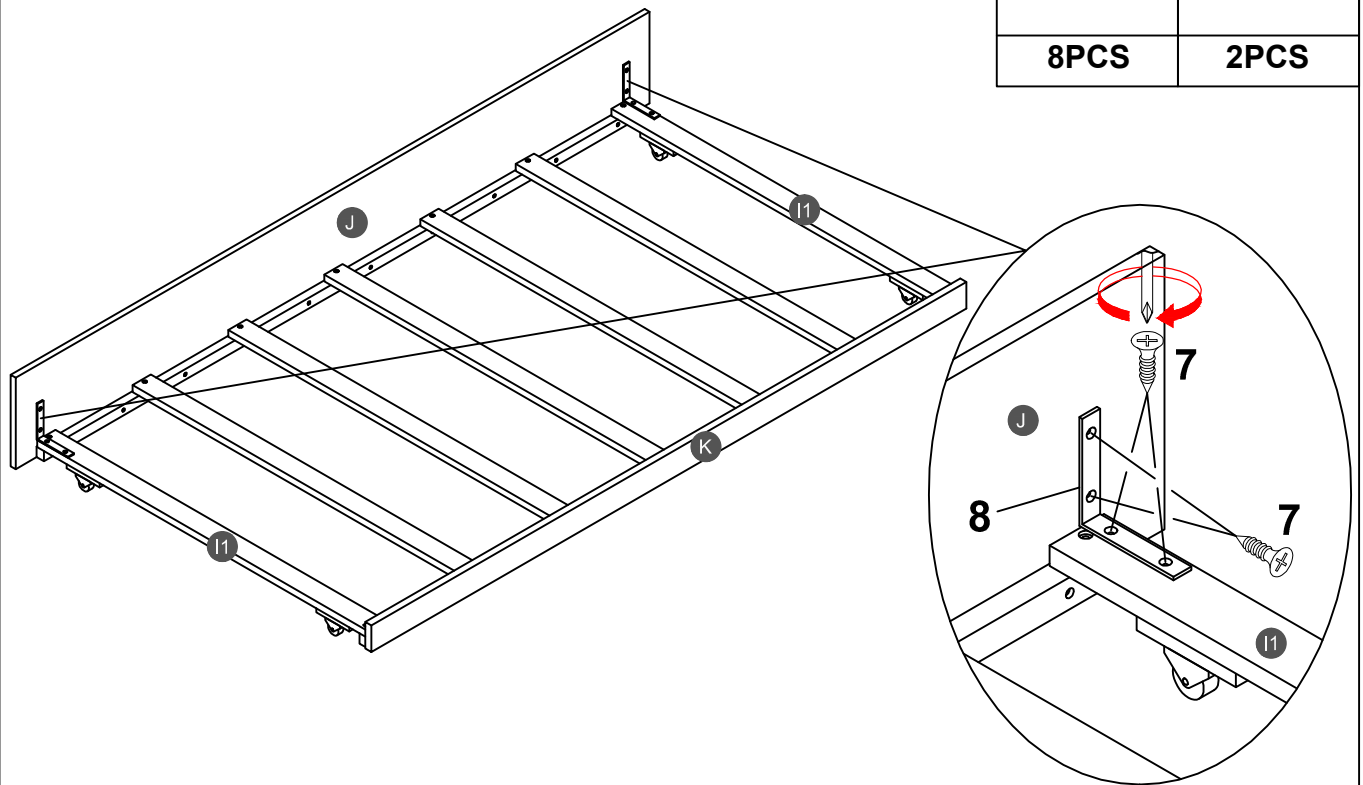

STEP 8:

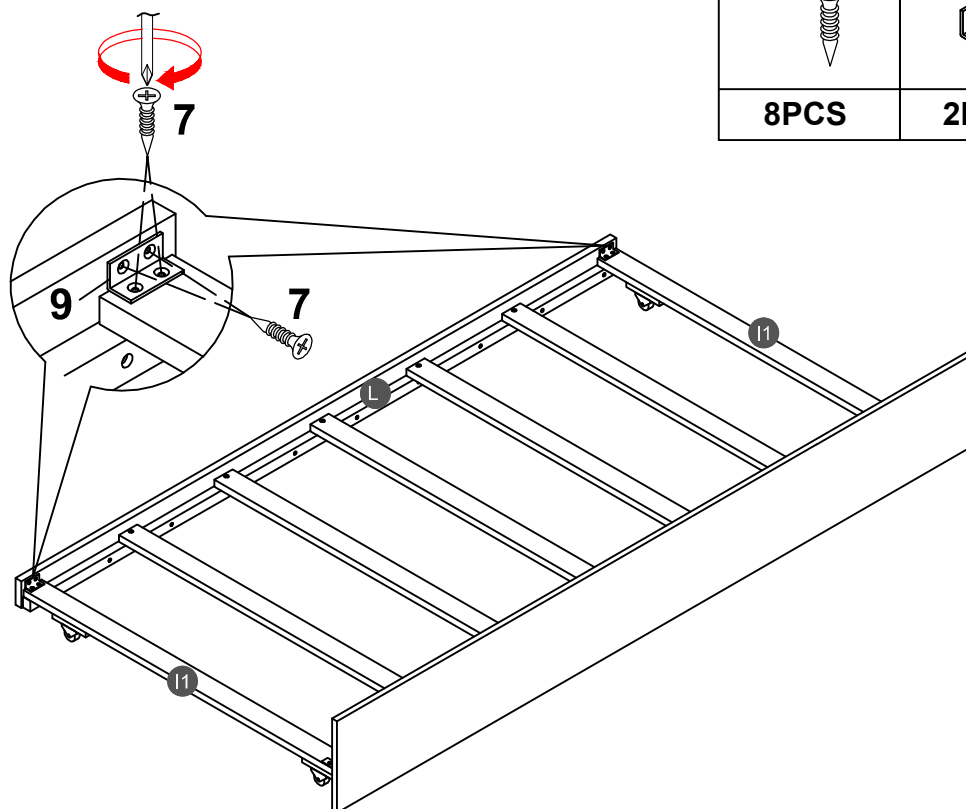

STEP 9:

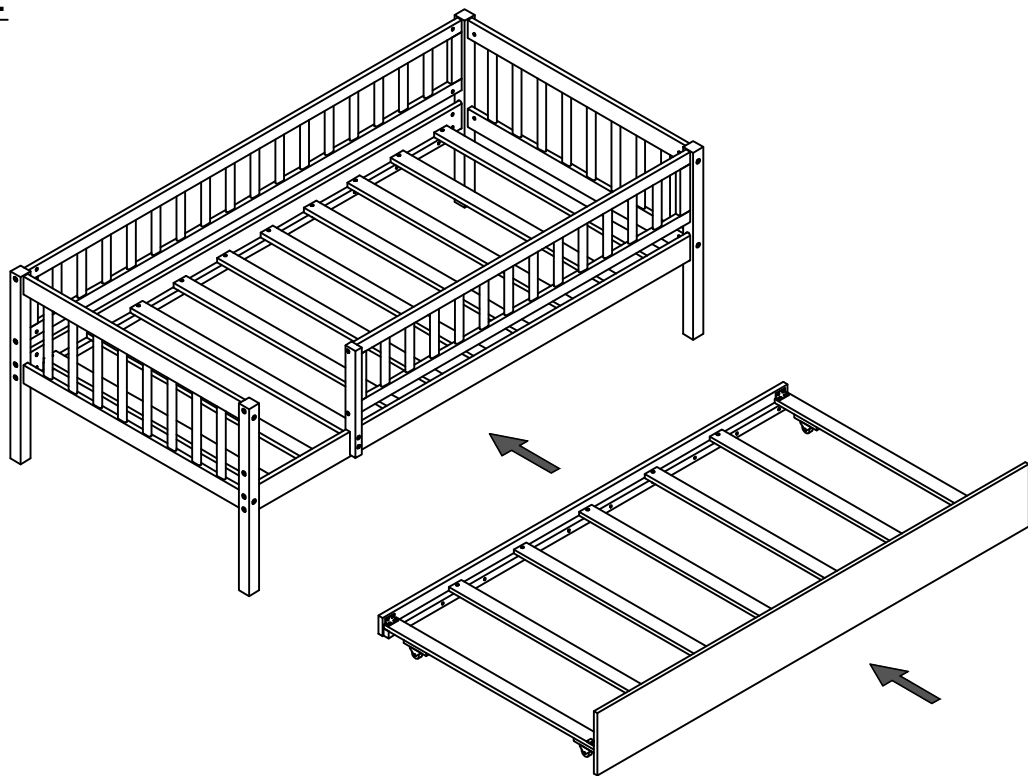

Push Trundle and Drawer under the bottom of Bunkbed.

