

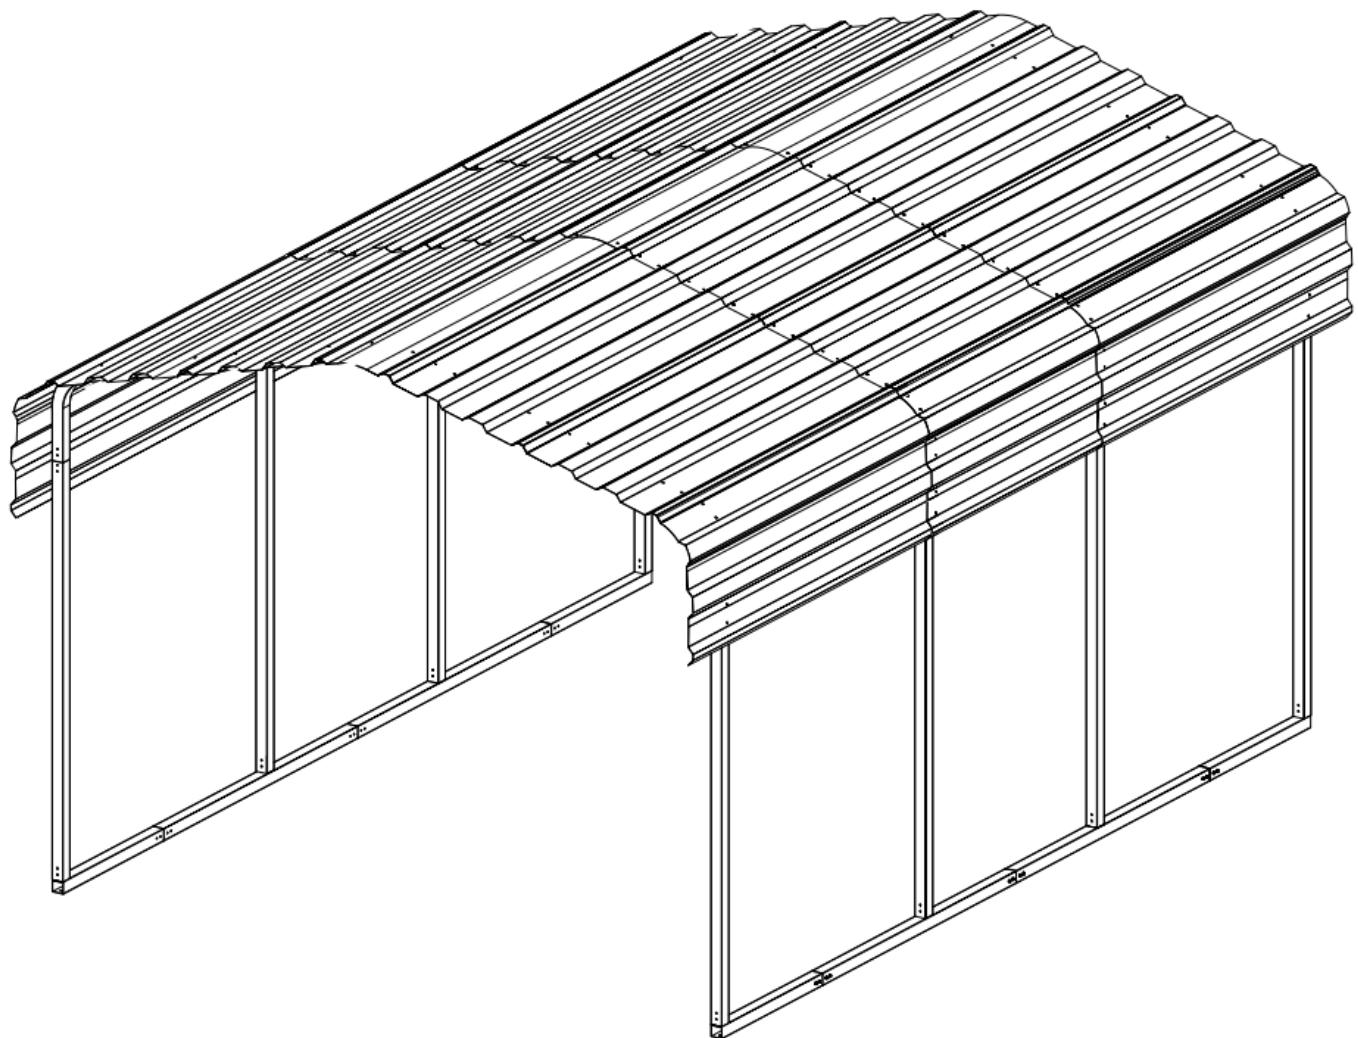
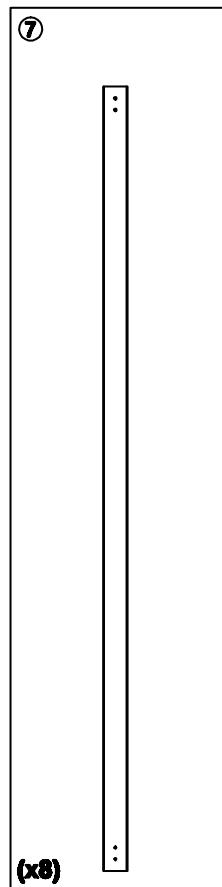
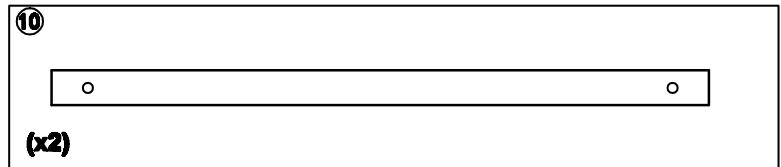
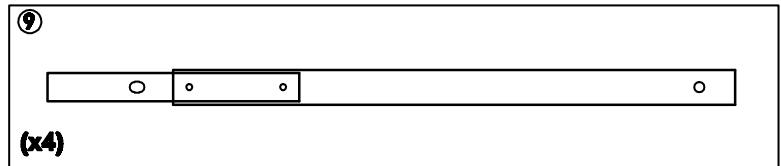
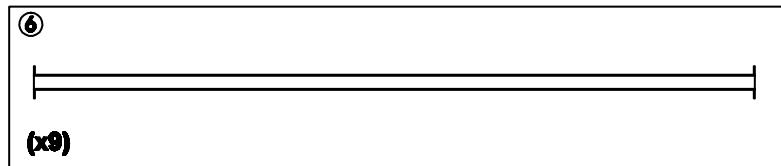
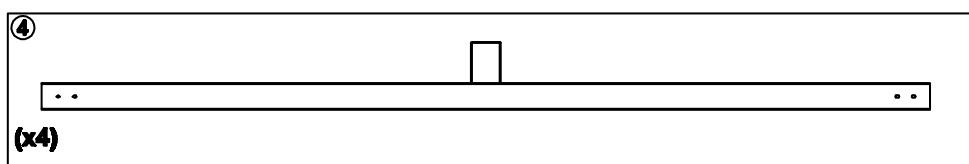
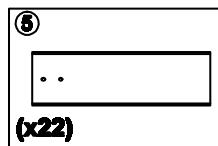
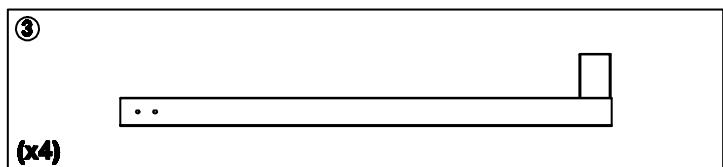
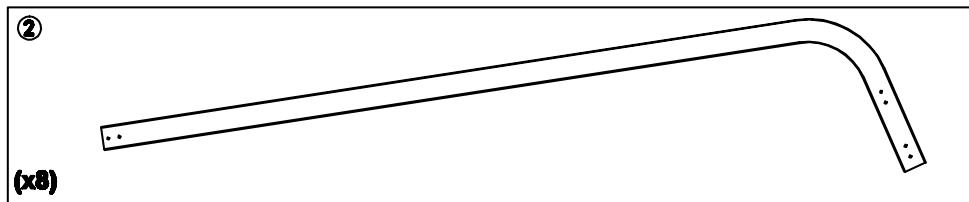
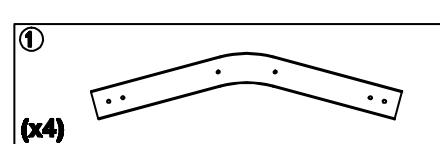
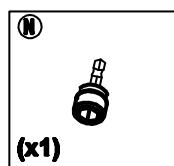
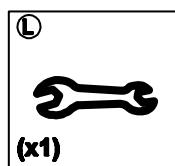
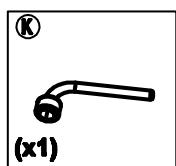

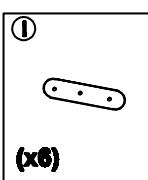
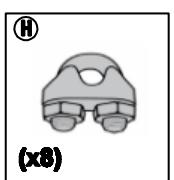
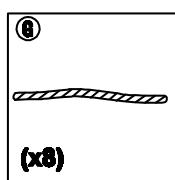
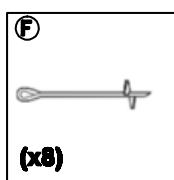
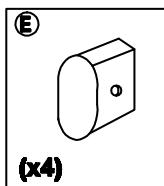
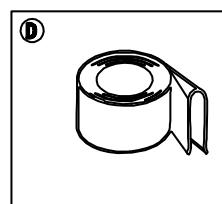
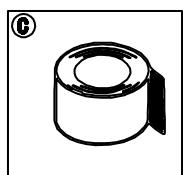


Tin Shed  
BAAP001GY

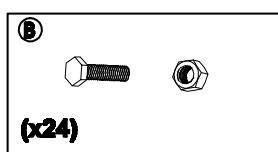


# 10X15 ACCESSORIES LIST

## A BOX

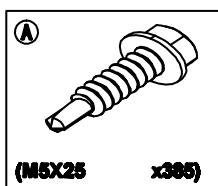


# 10X15 ACCESSORIES LIST






## B BOX

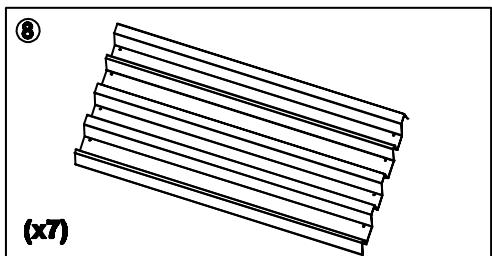


## C BOX

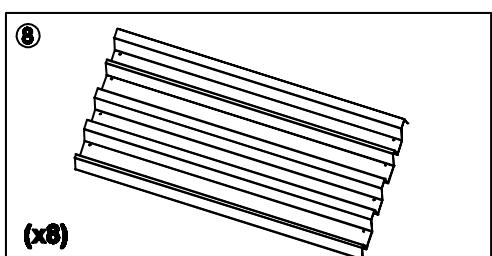



# Step 1

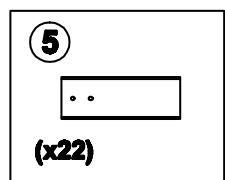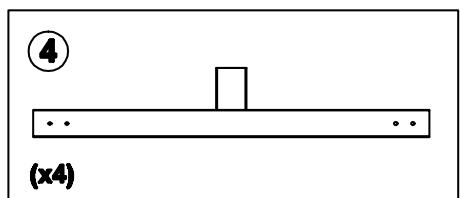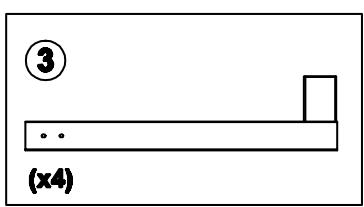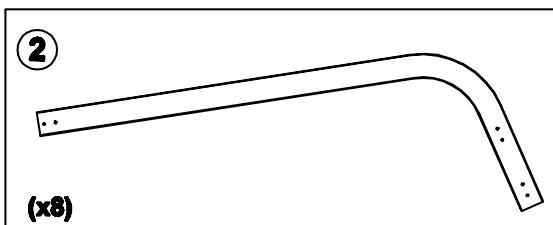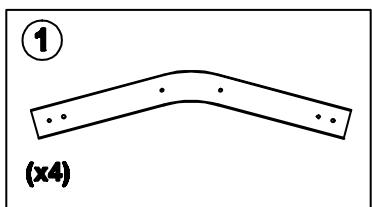


Put the parts in the space

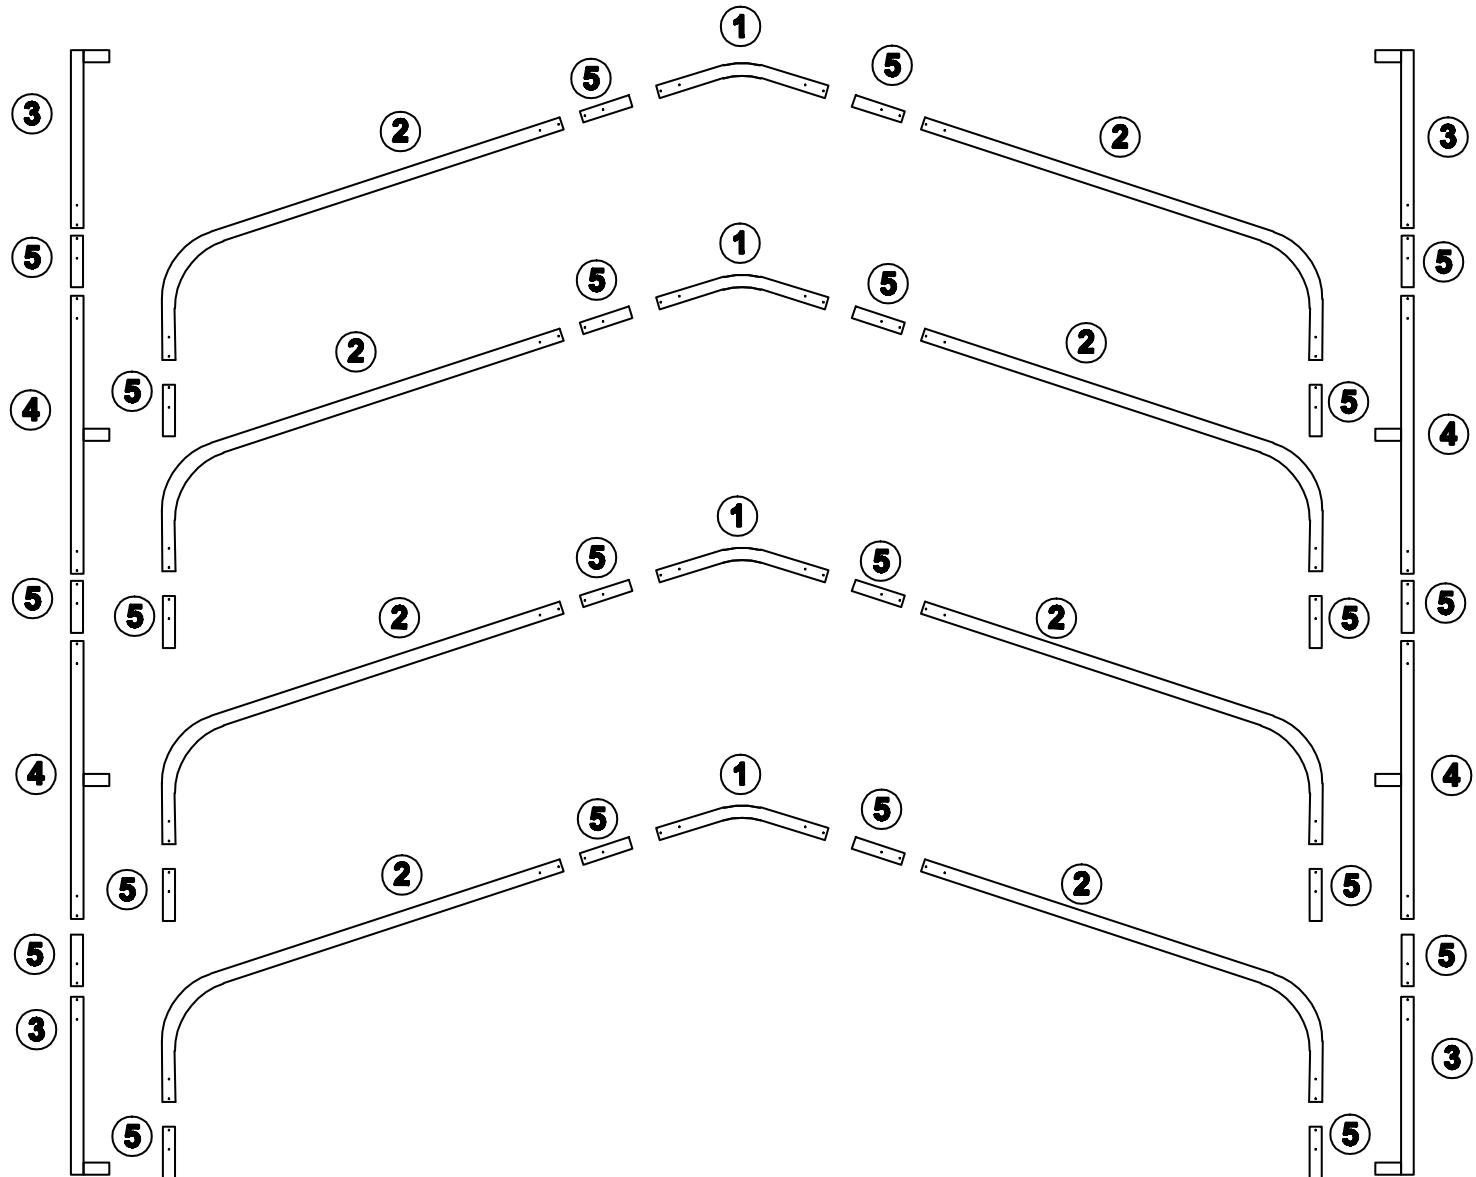





## Step 2

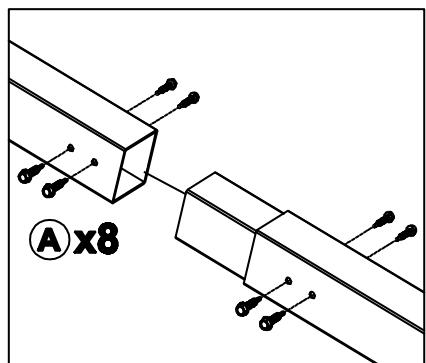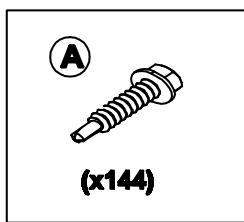




Connect each pipe fitting with screws as shown

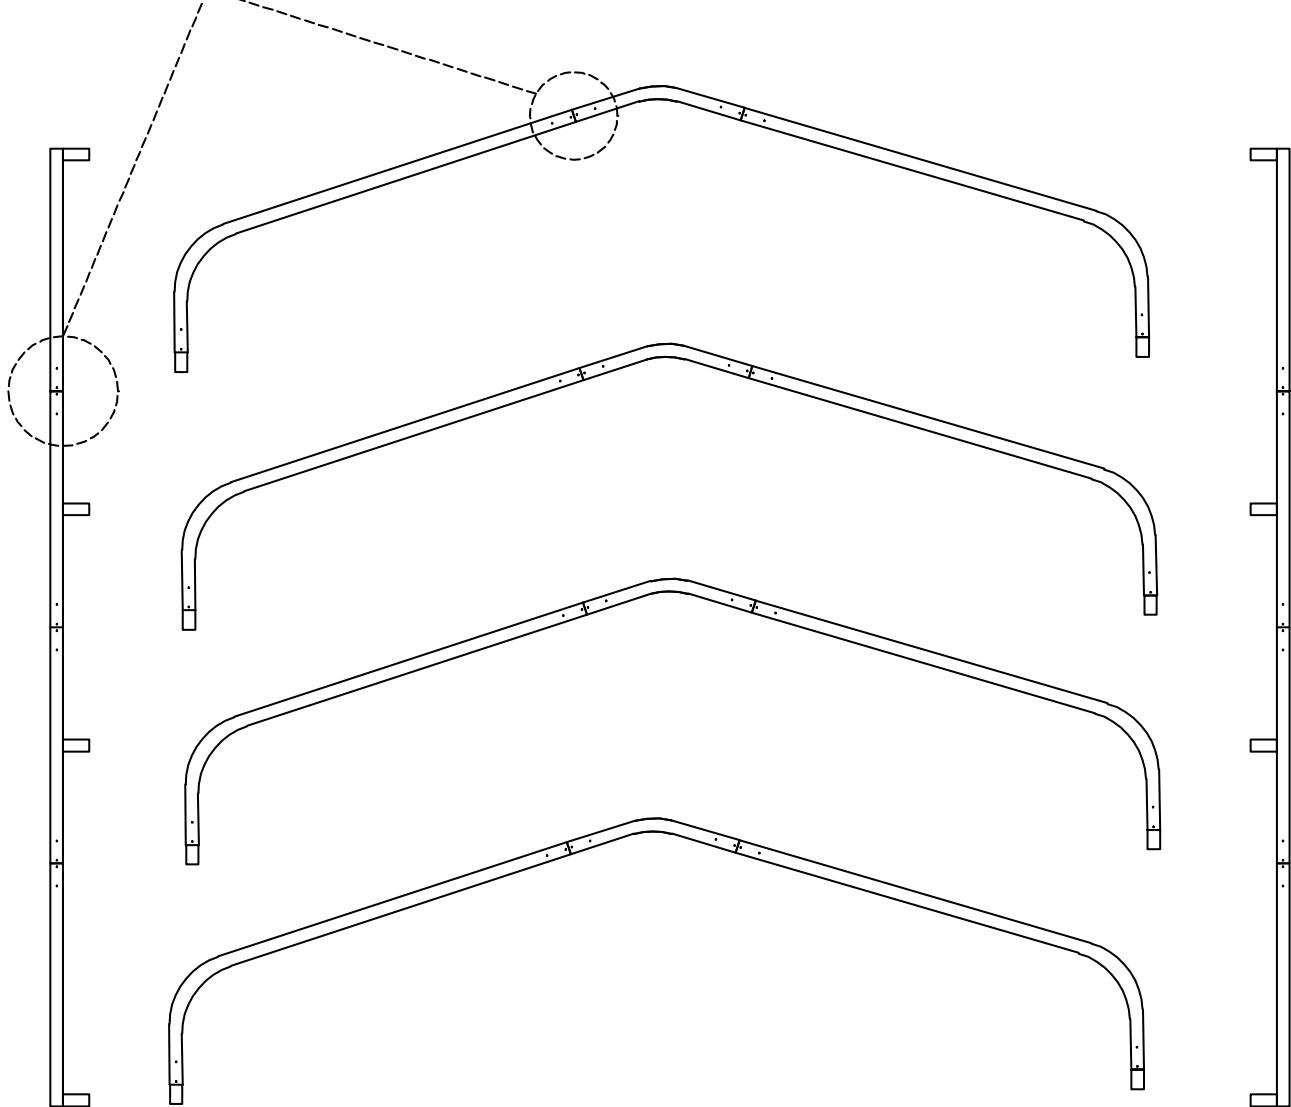

# Step 3

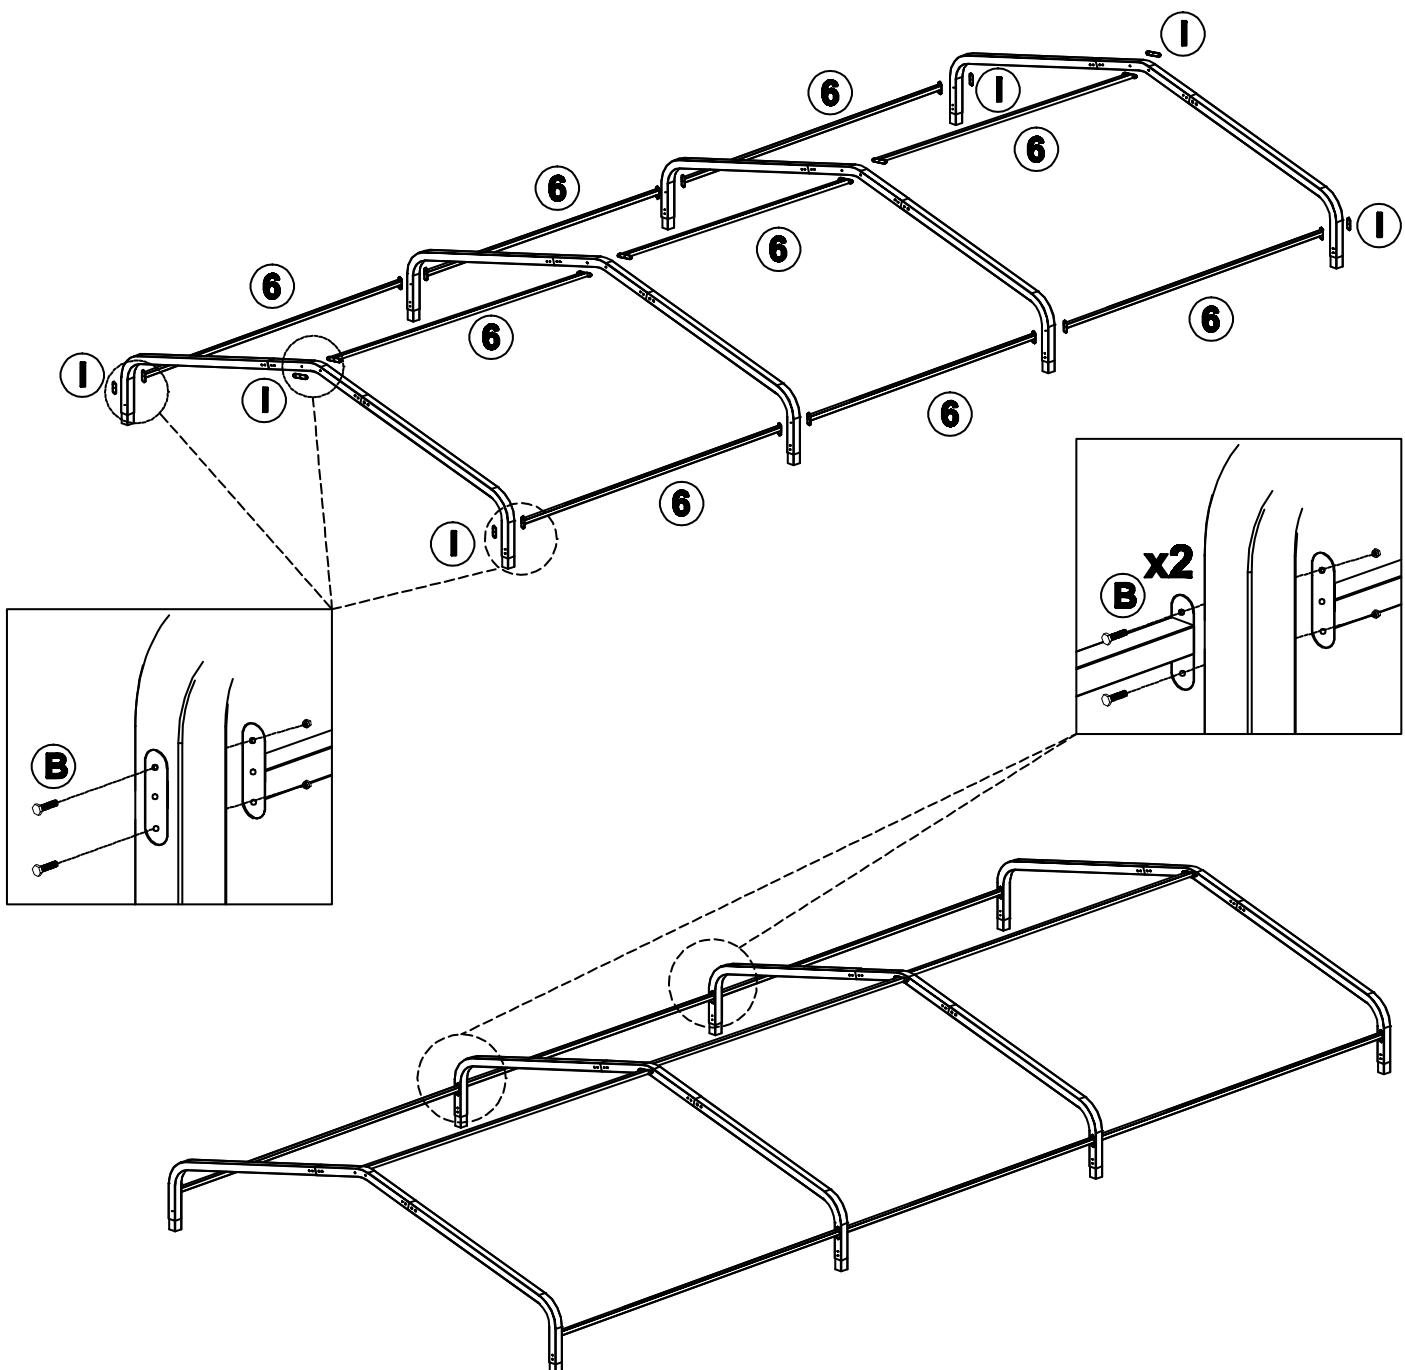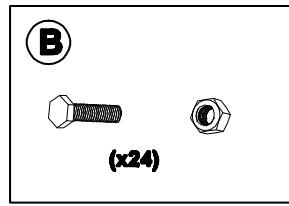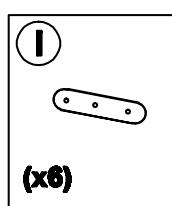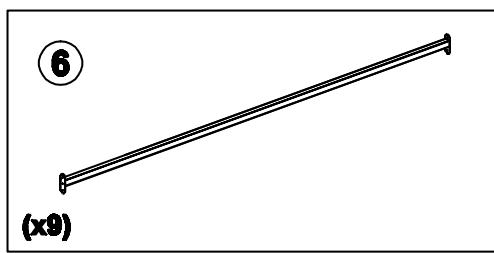





# Step 4

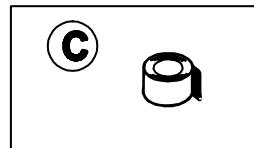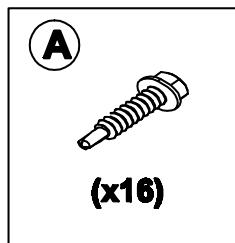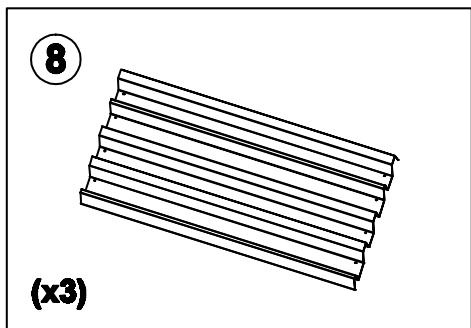




The waterproof strip is affixed to the iron pipe and do not cover the screw hole

Color steel tile laying to a direction, then and drainage.





Color steel tile sticking out of 8cm

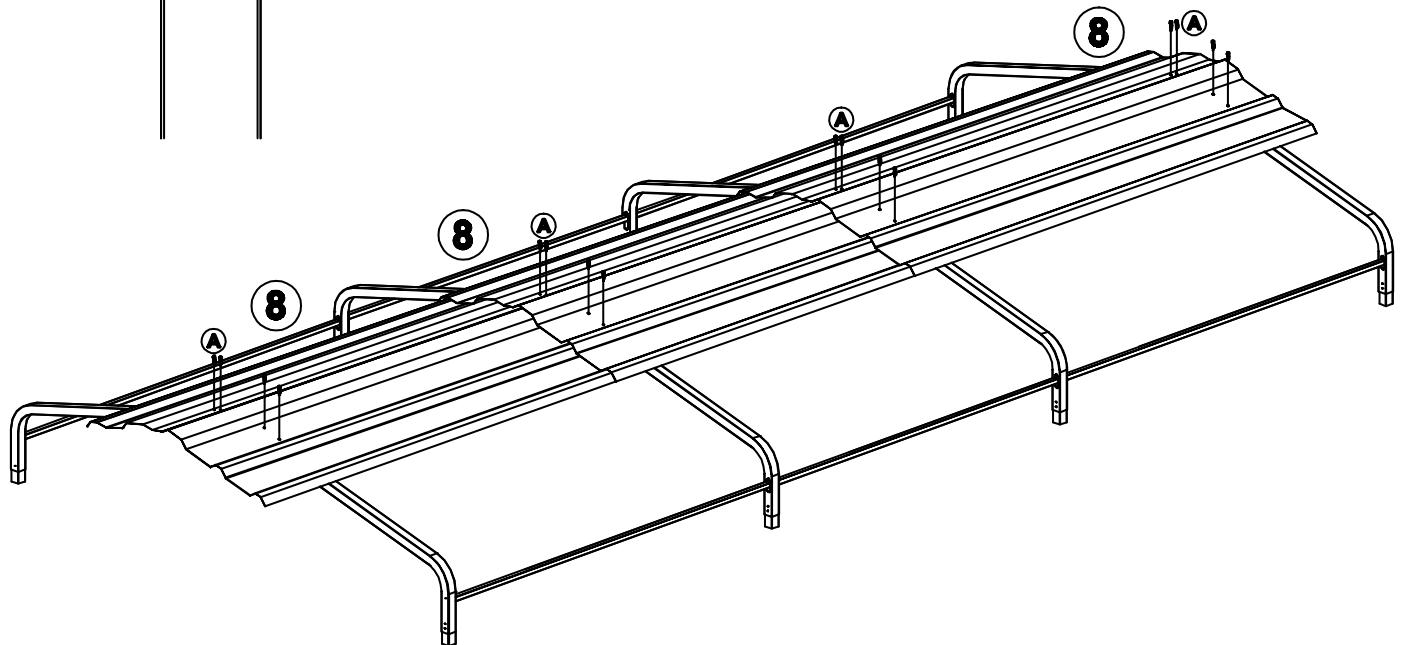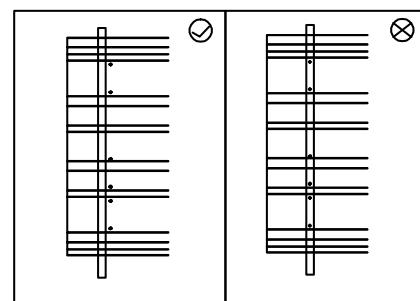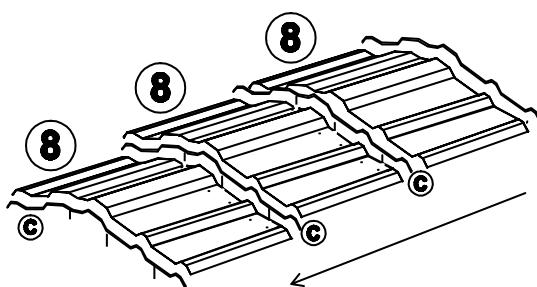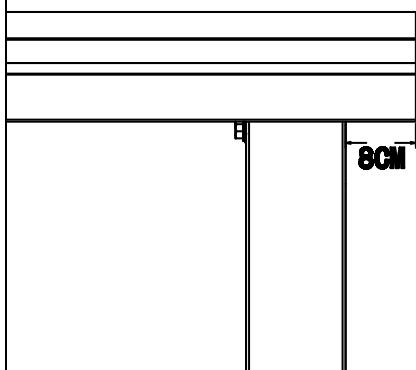



# Step 5

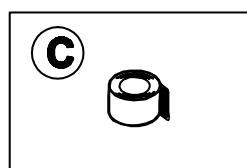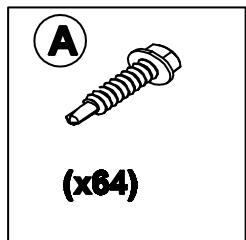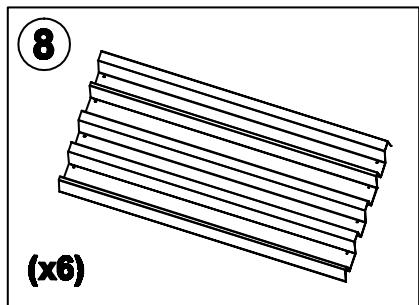





The waterproof strip is affixed to the iron pipe and do not cover the screw hole

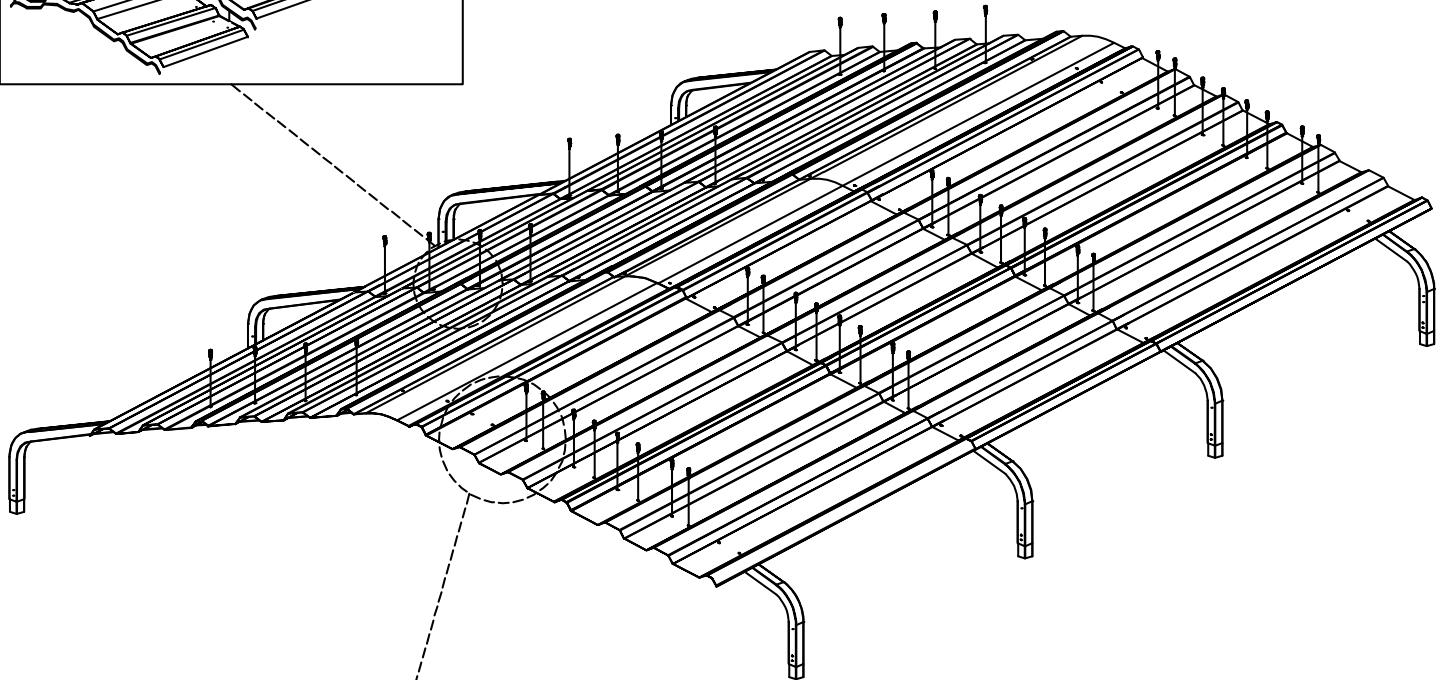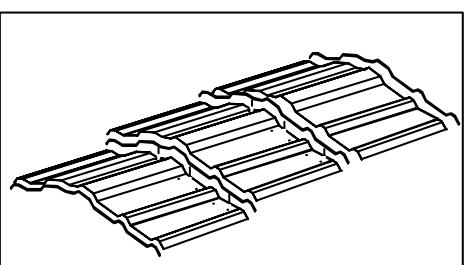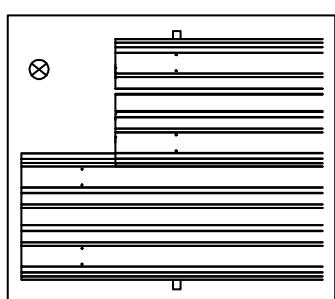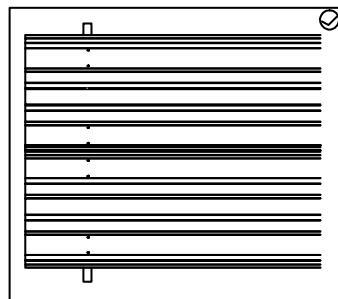


Color steel tile connection should pay attention to the above a piece of pressure below a piece, to prevent water

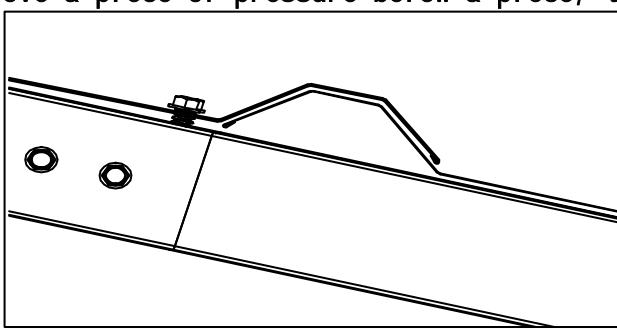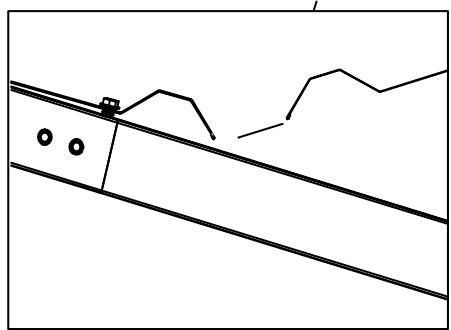




## Step 6

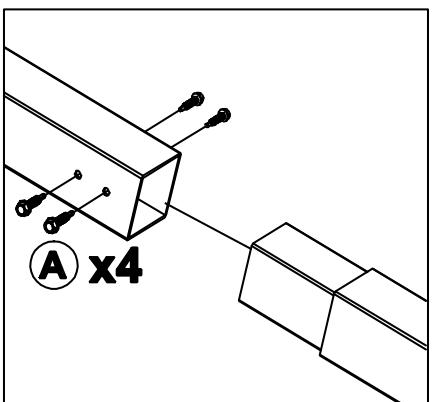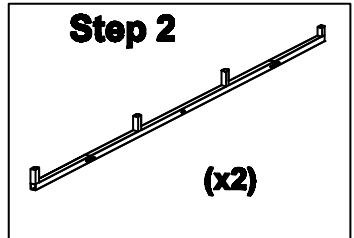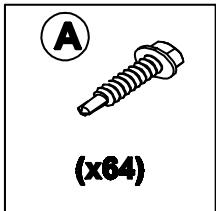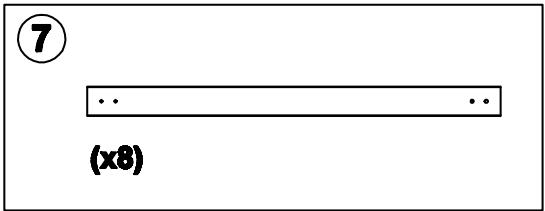



## Install the leg tube

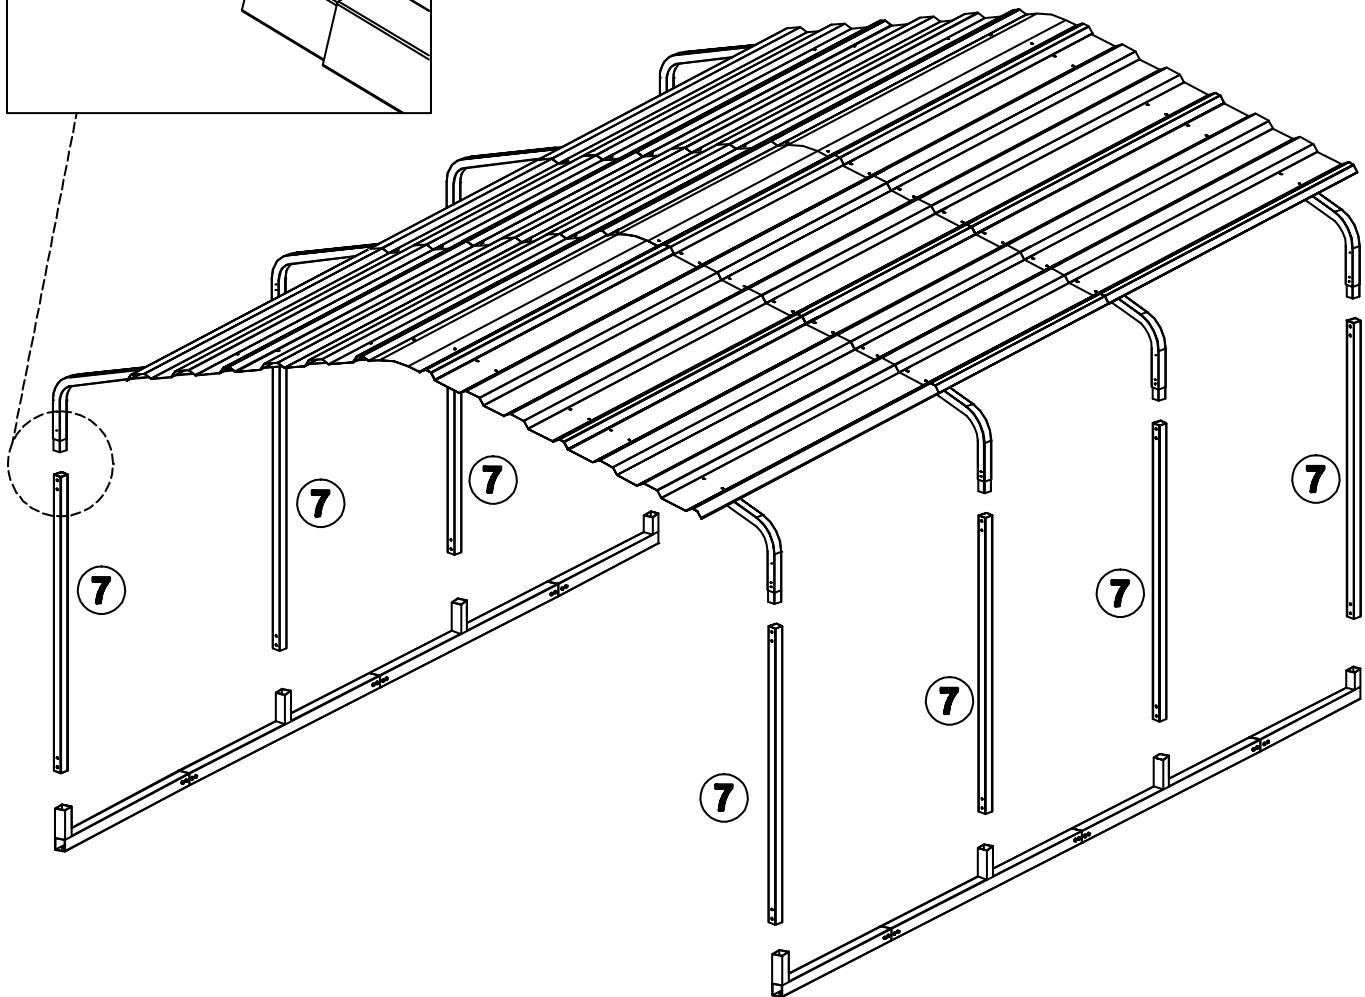










# Step 7

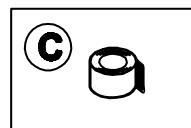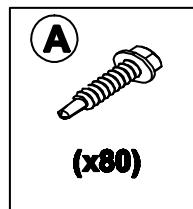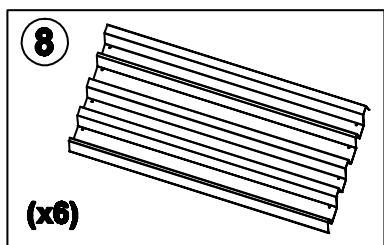



The waterproof strip is  
affixed to the iron pipe and  
do not cover the screw hole

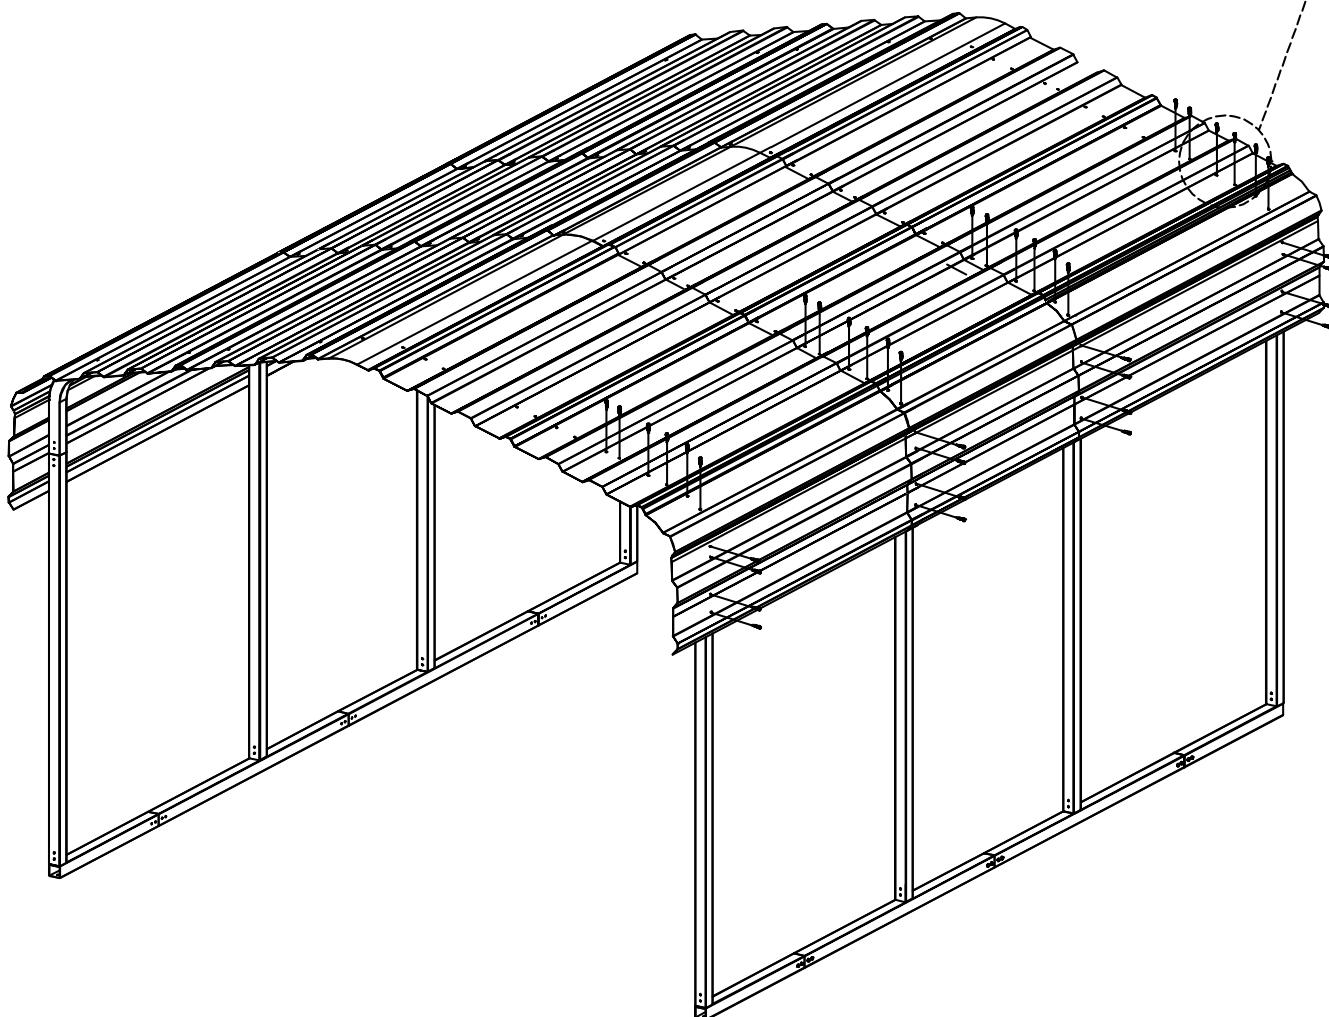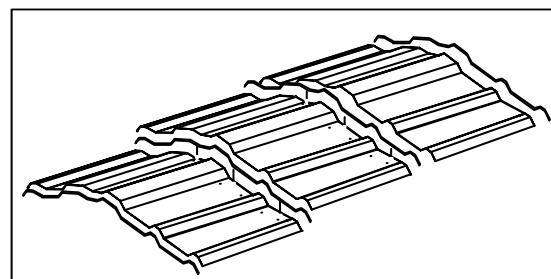


## Step 8

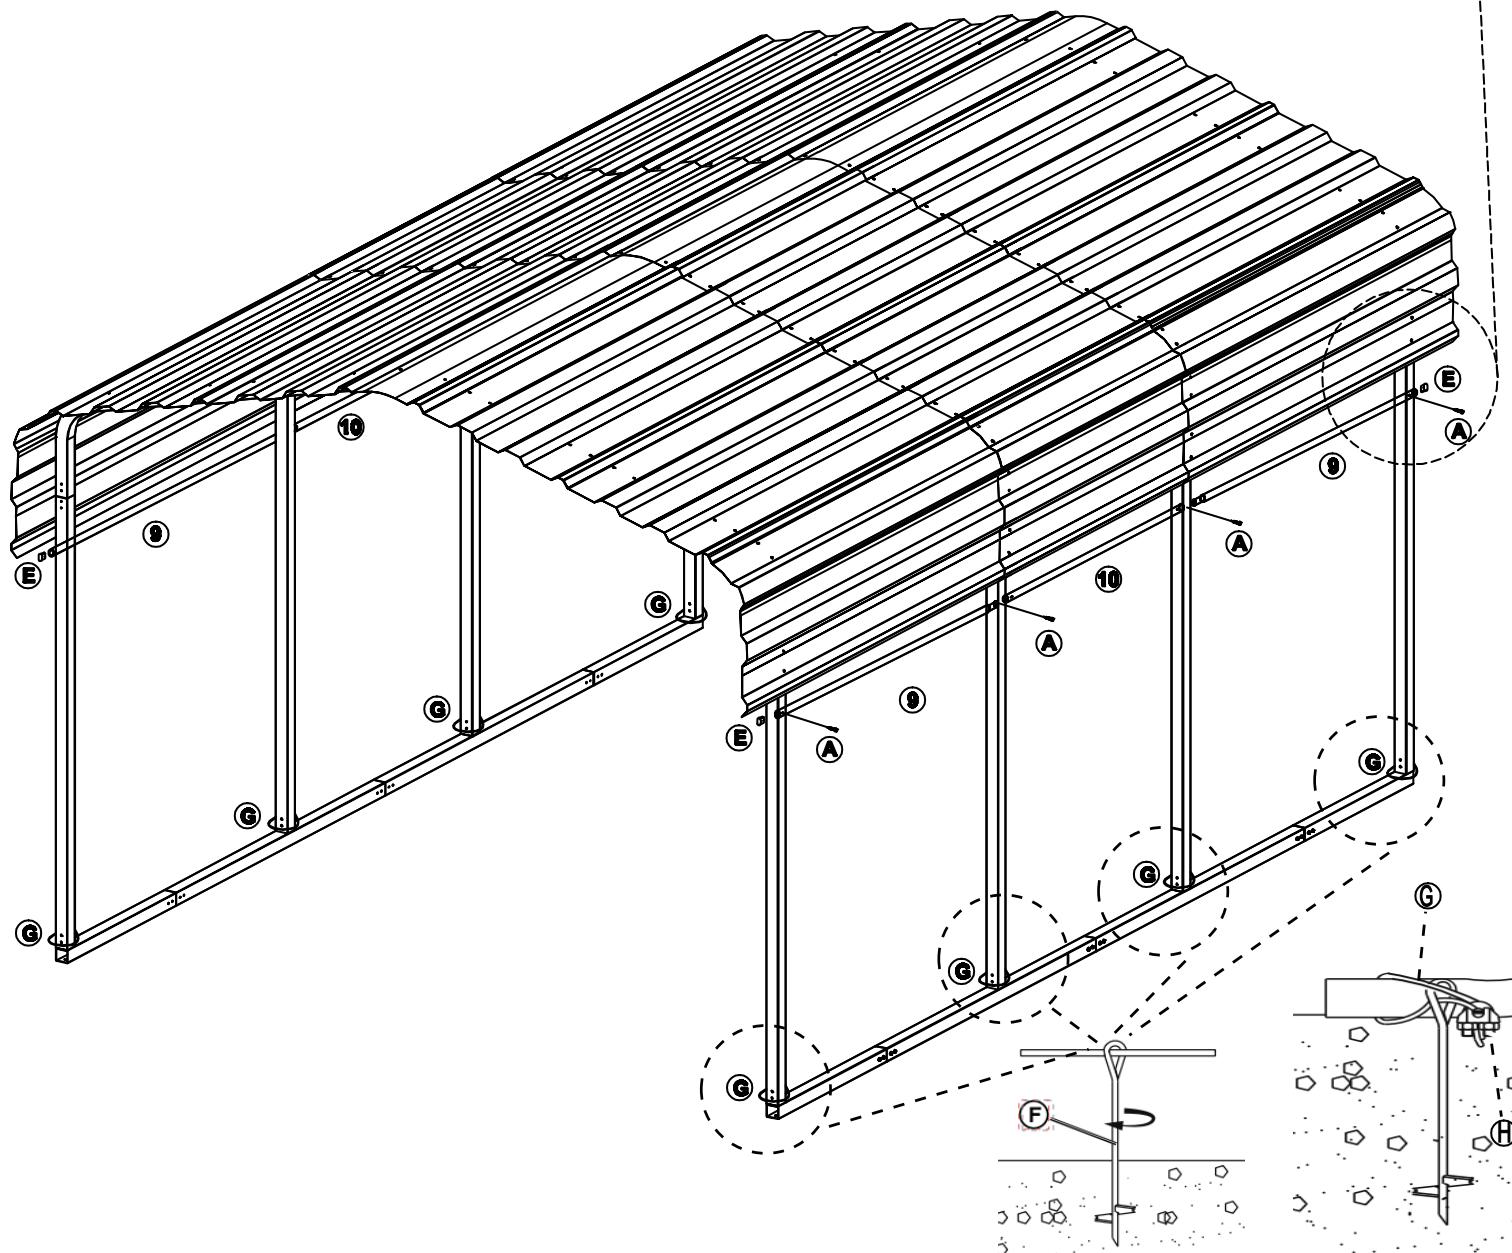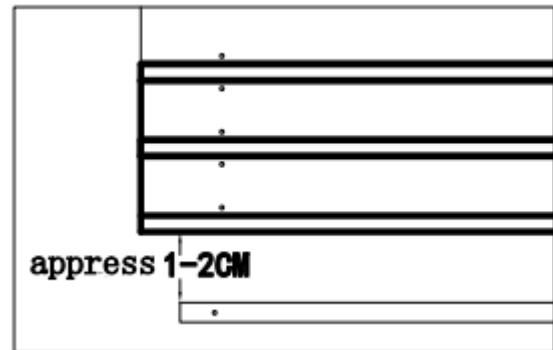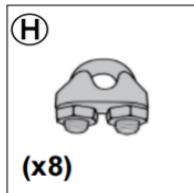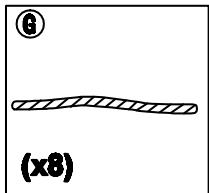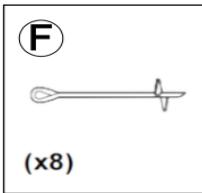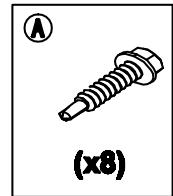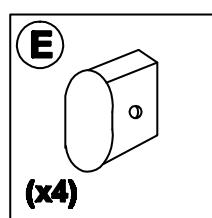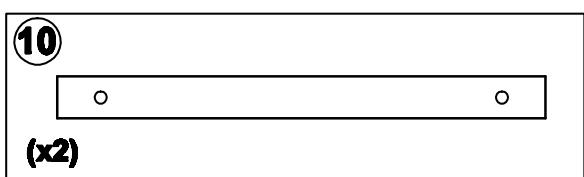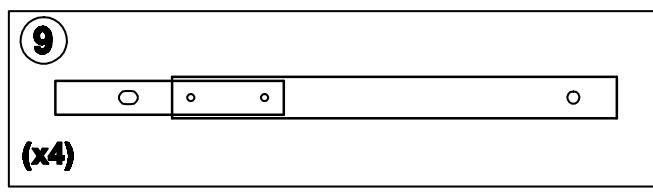

# Step 9

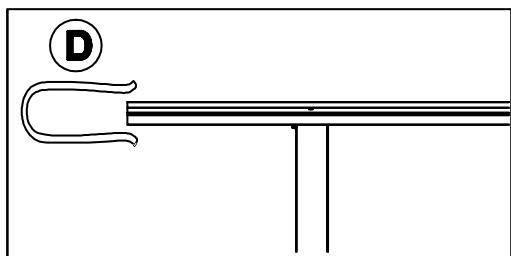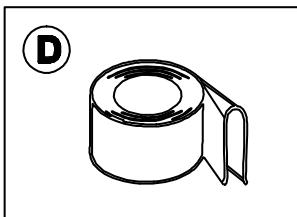

To extend the package of the color steel tile pointed Angle, to prevent injuries.

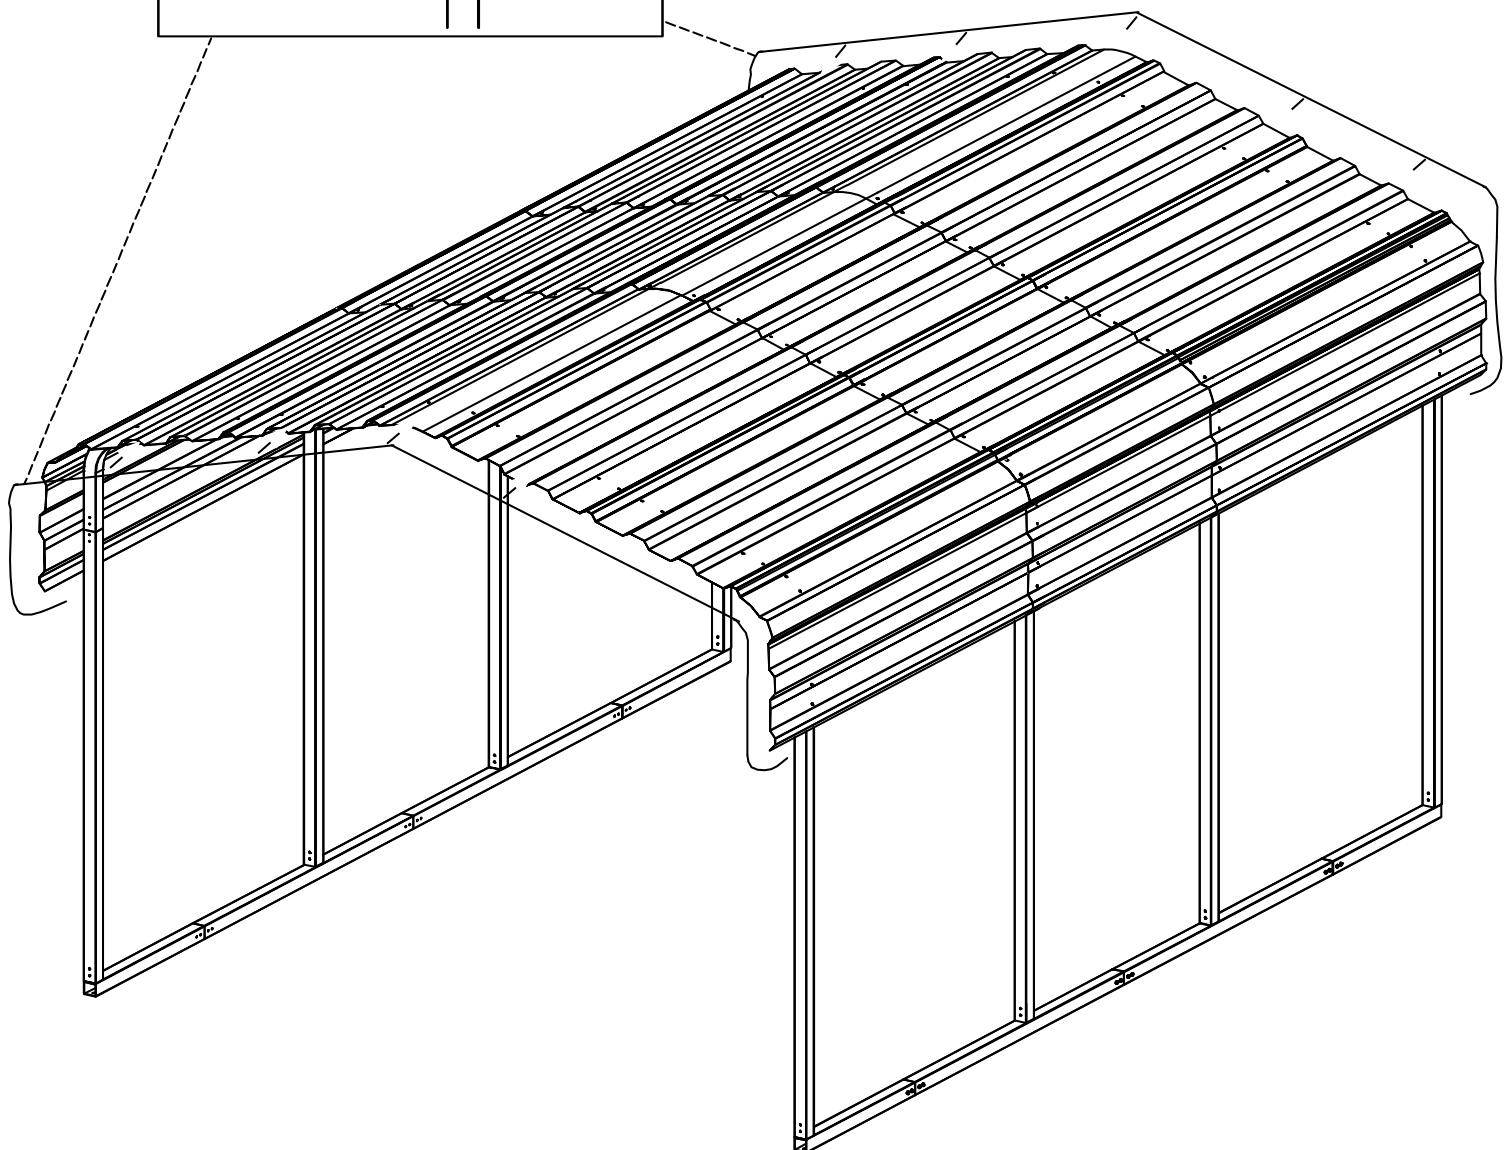


# TIP



The extra part of the model A screw is used for the situation shown in the circle above, and the customer decides whether to install it, if installed, as shown in the circle below.















Tin Shed  
BAAP002GY





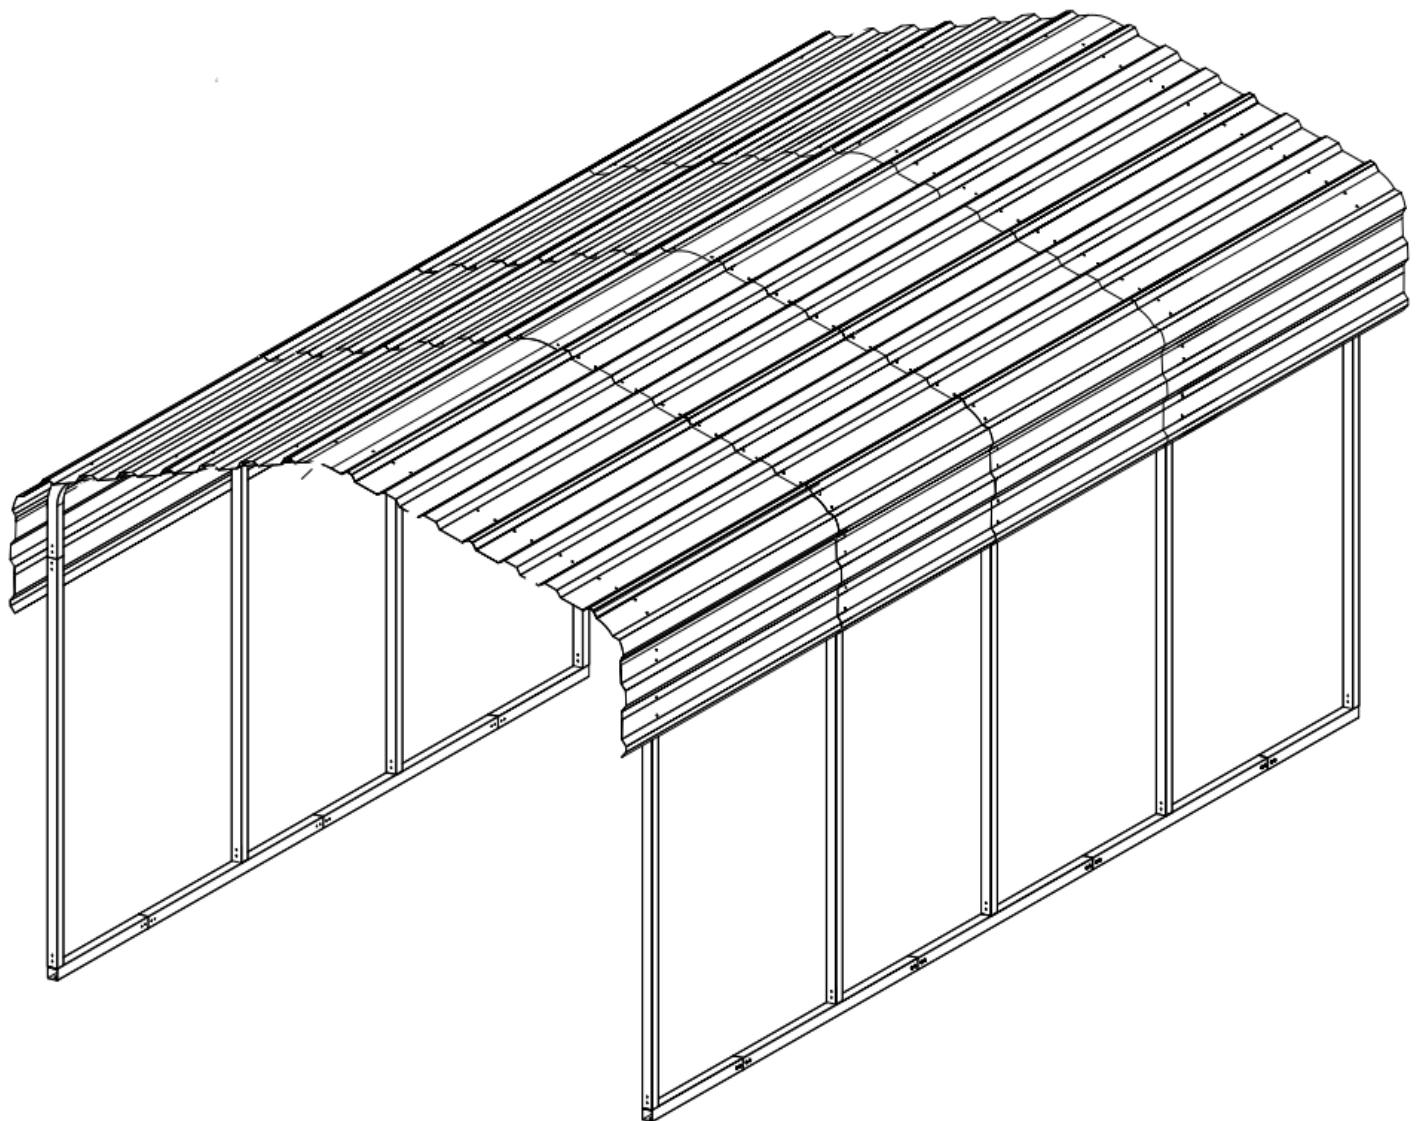


# 12X20 ACCESSORIES LIST

## A BOX

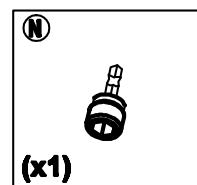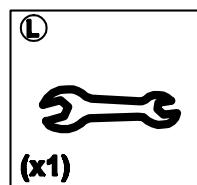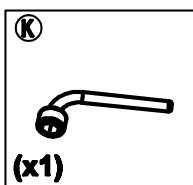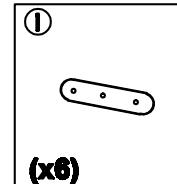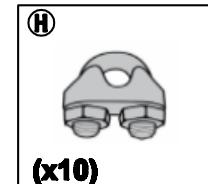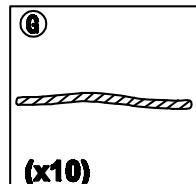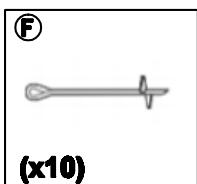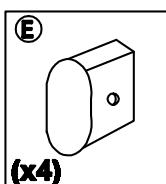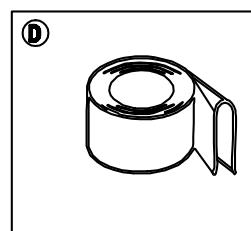
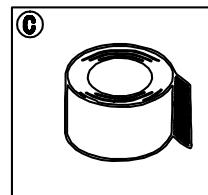
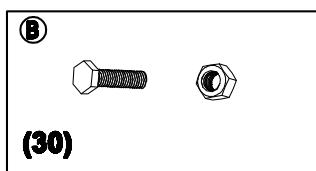
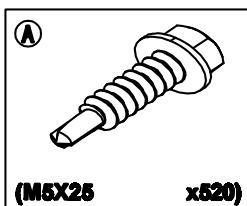


Pay attention to cutting hands

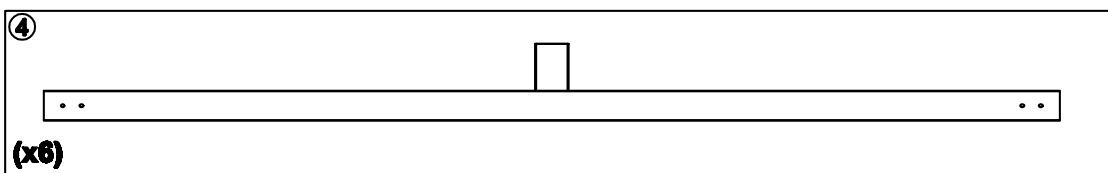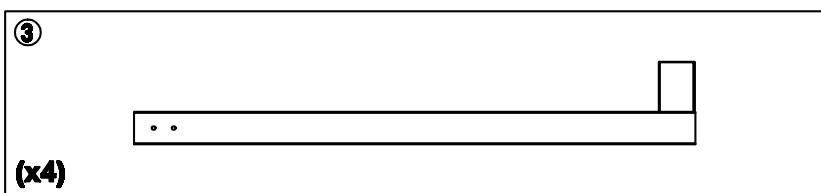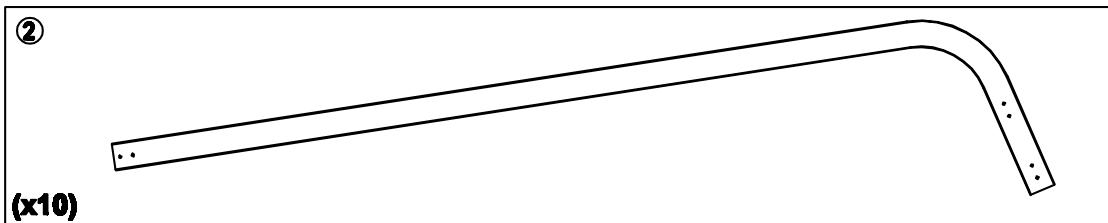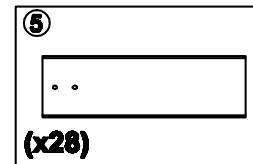
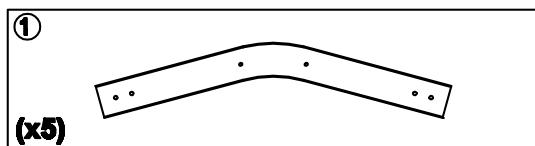


# 12X20 ACCESSORIES LIST



## B BOX

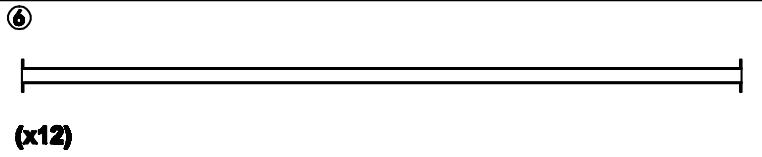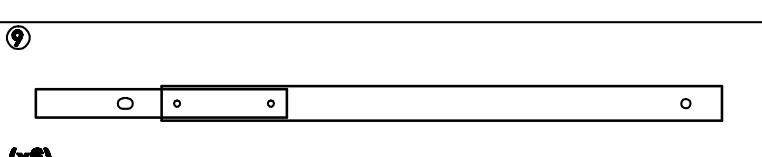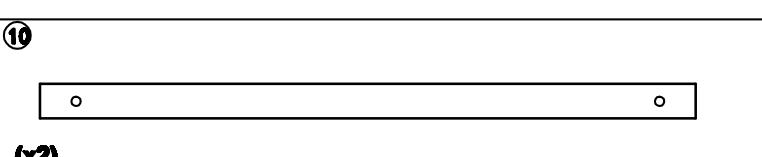- ⑥   
(x12)
- ⑦   
(x10)
- ⑨   
(x6)
- ⑩   
(x2)







## C BOX

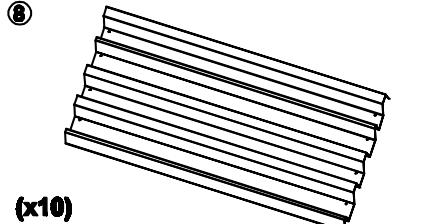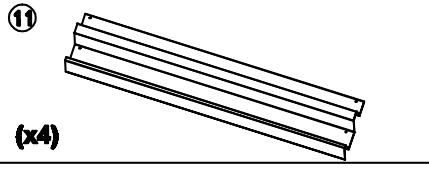- ⑧   
(x10)
- ⑪   
(x4)




## D BOX

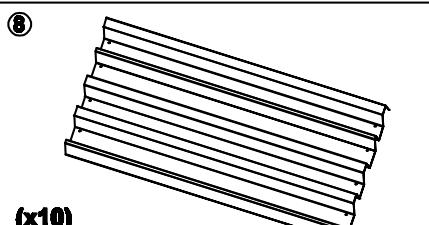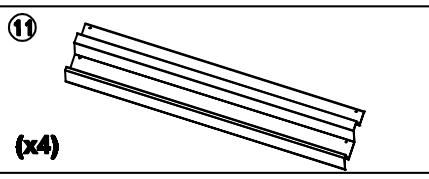- ⑧   
(x10)
- ⑪   
(x4)








# Step 1

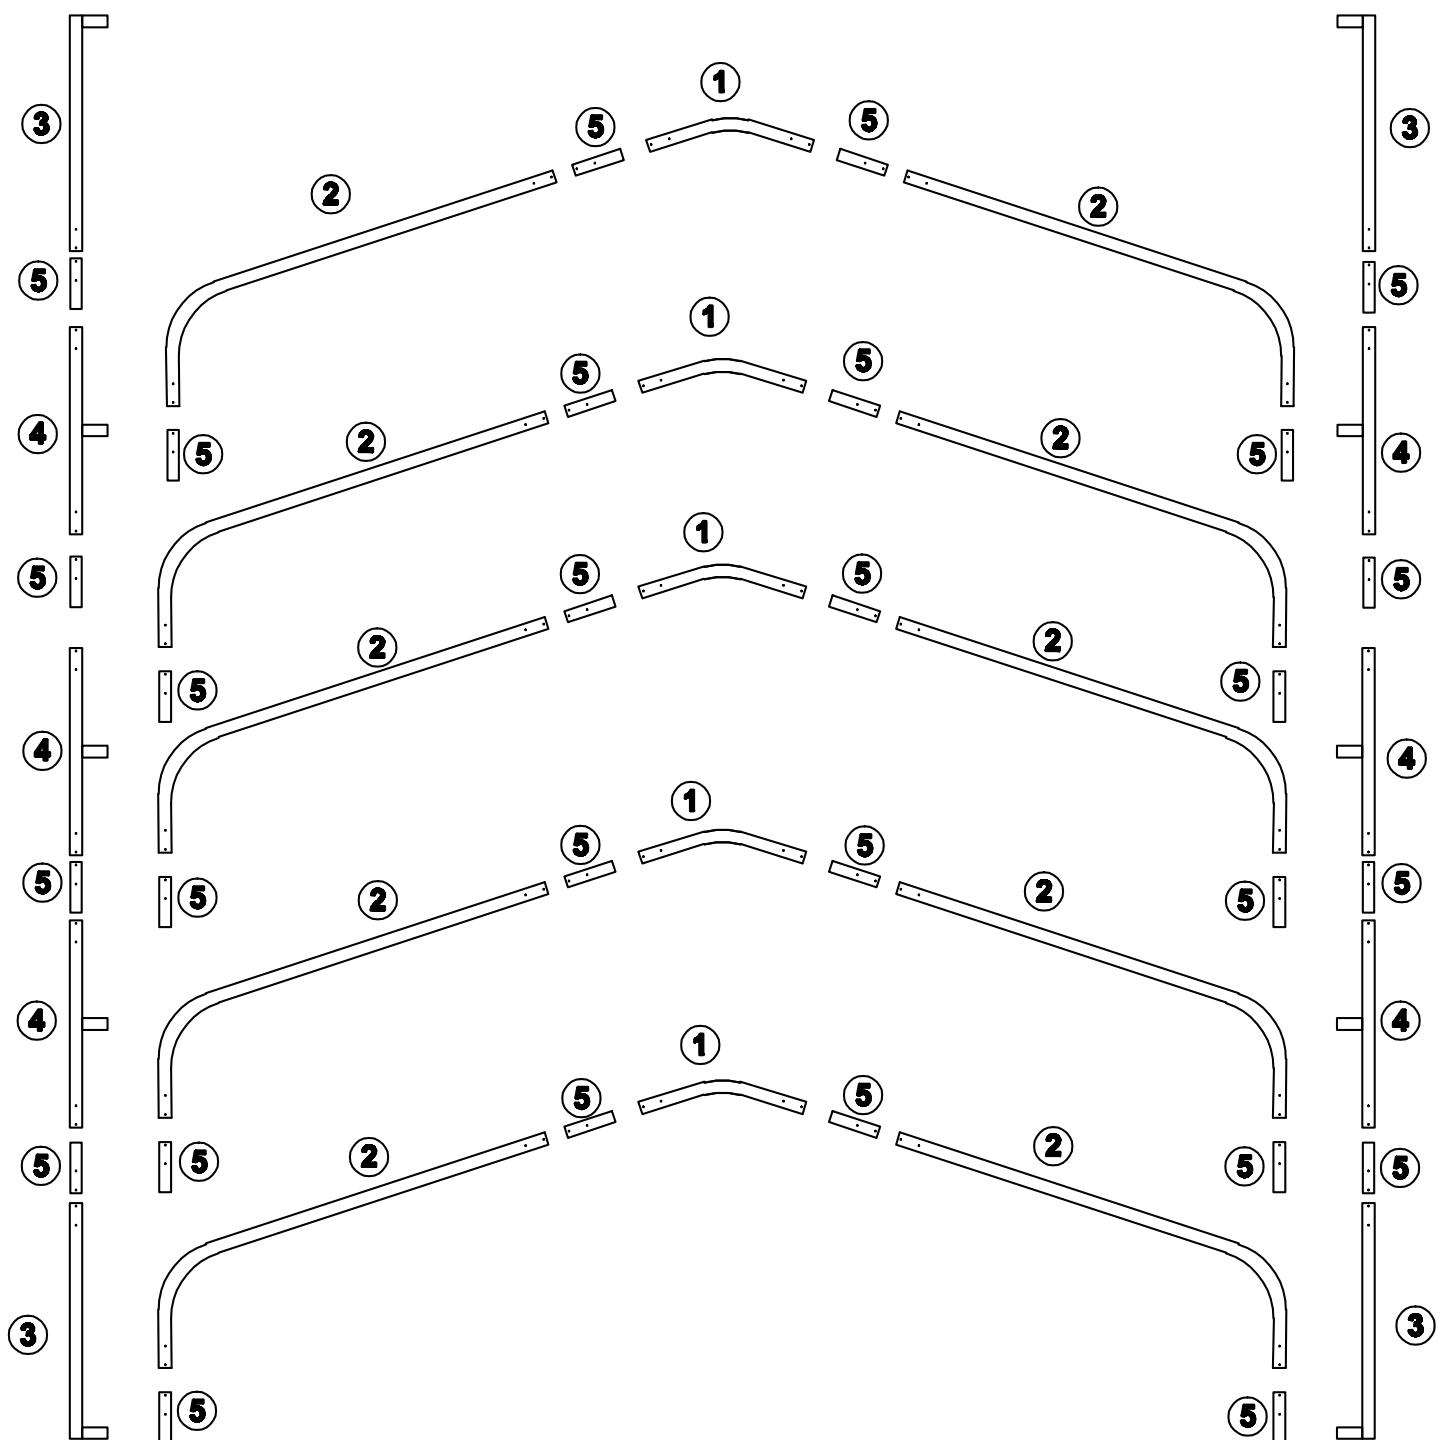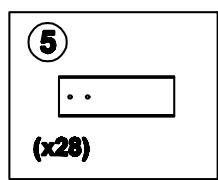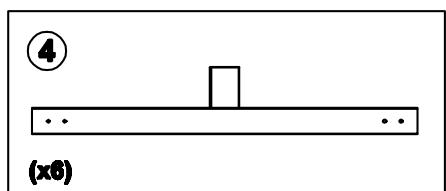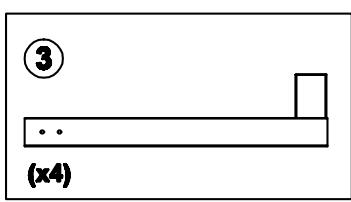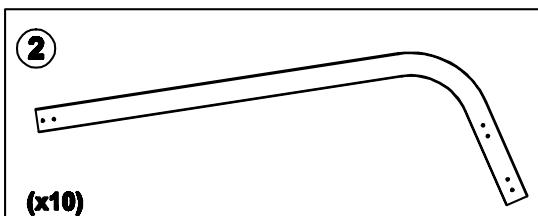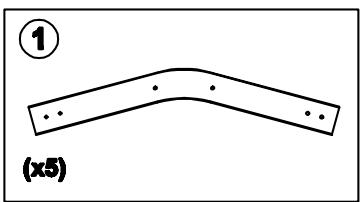




# Step 2

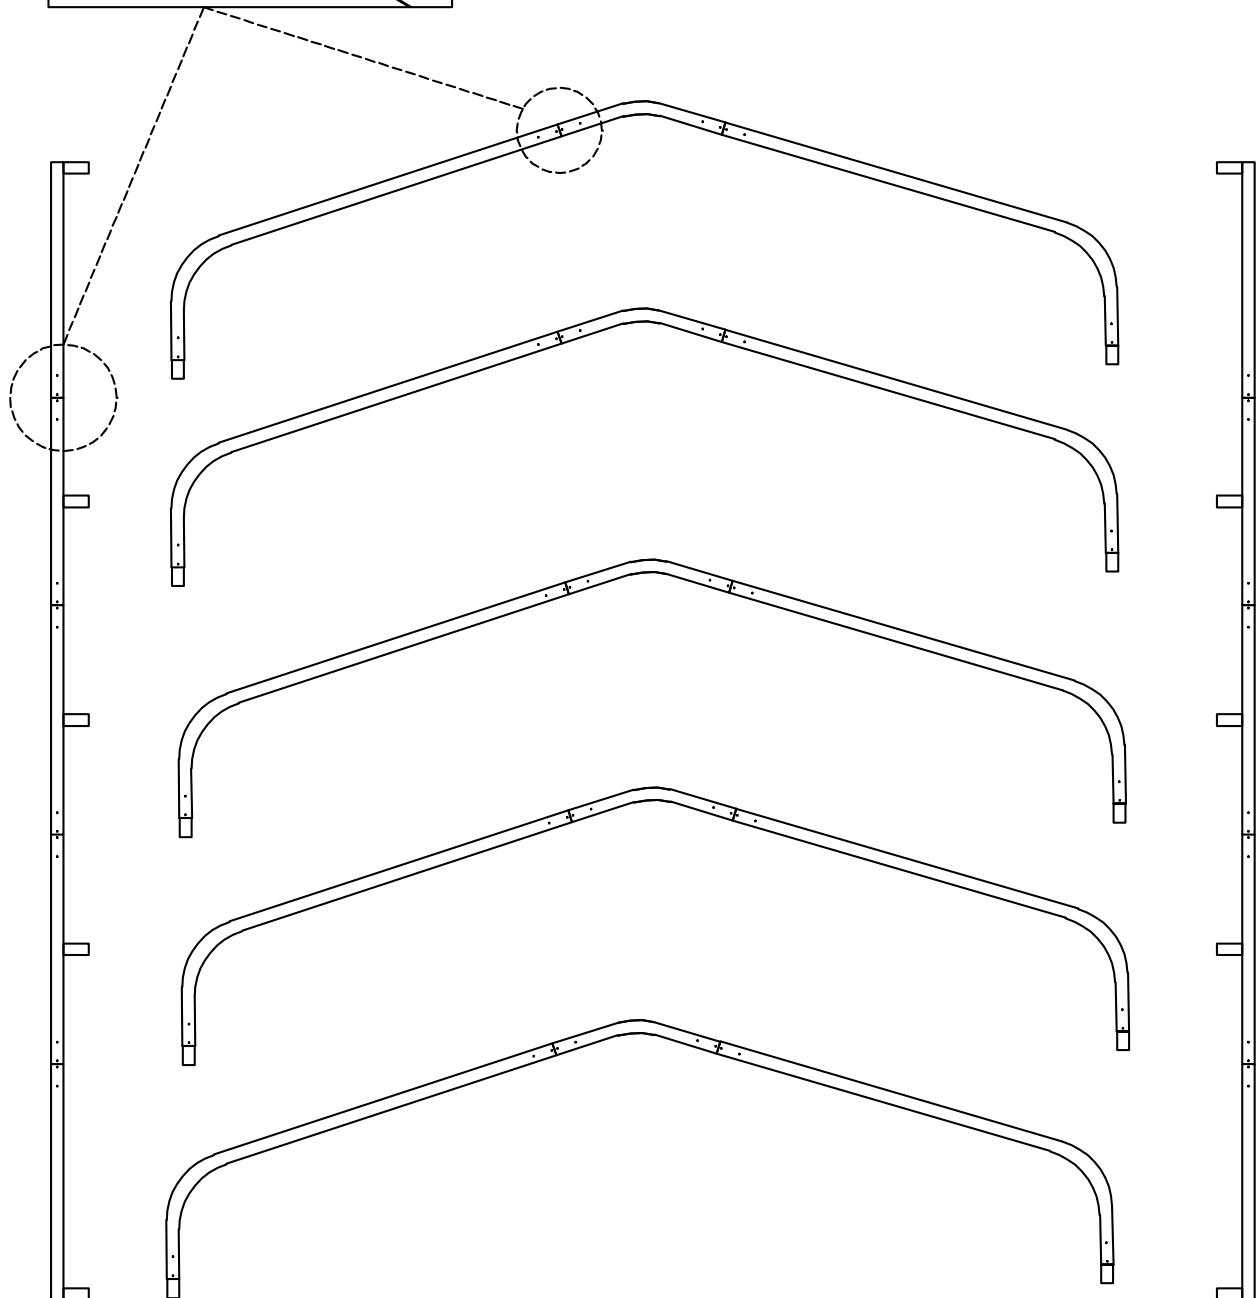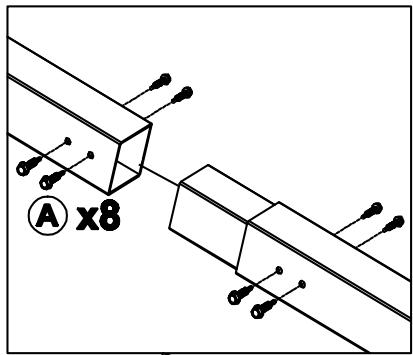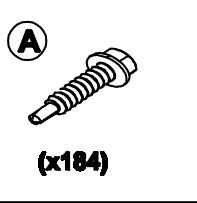

# Step 3

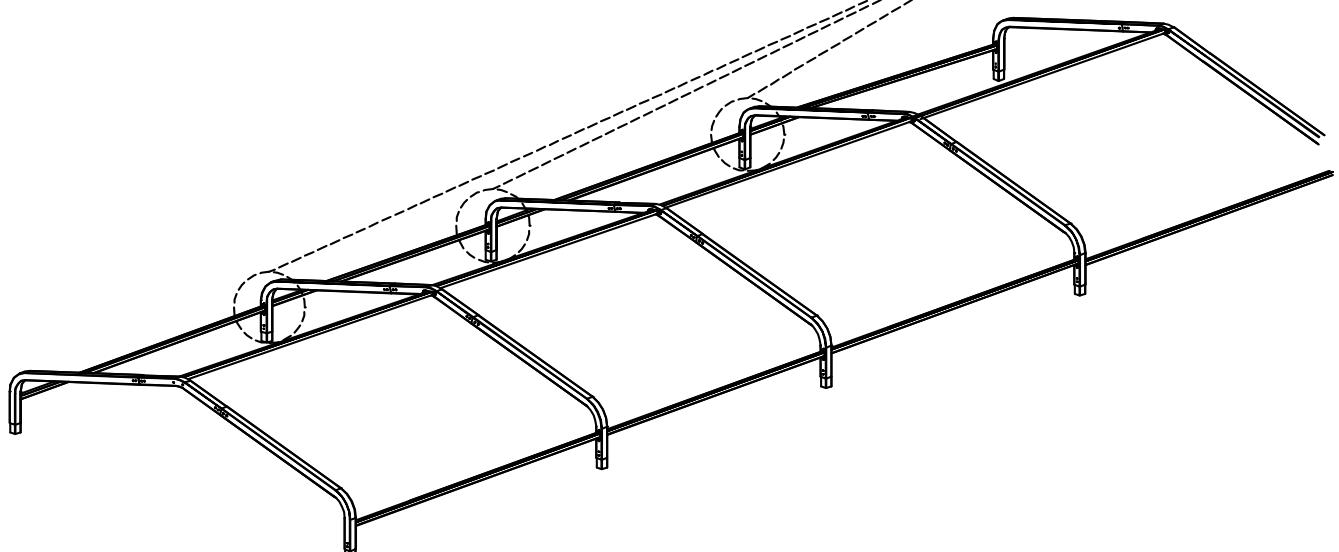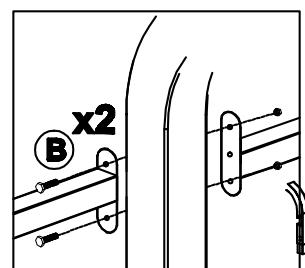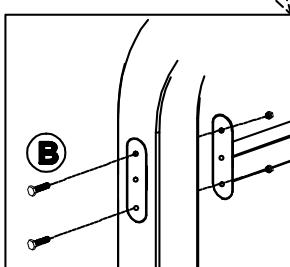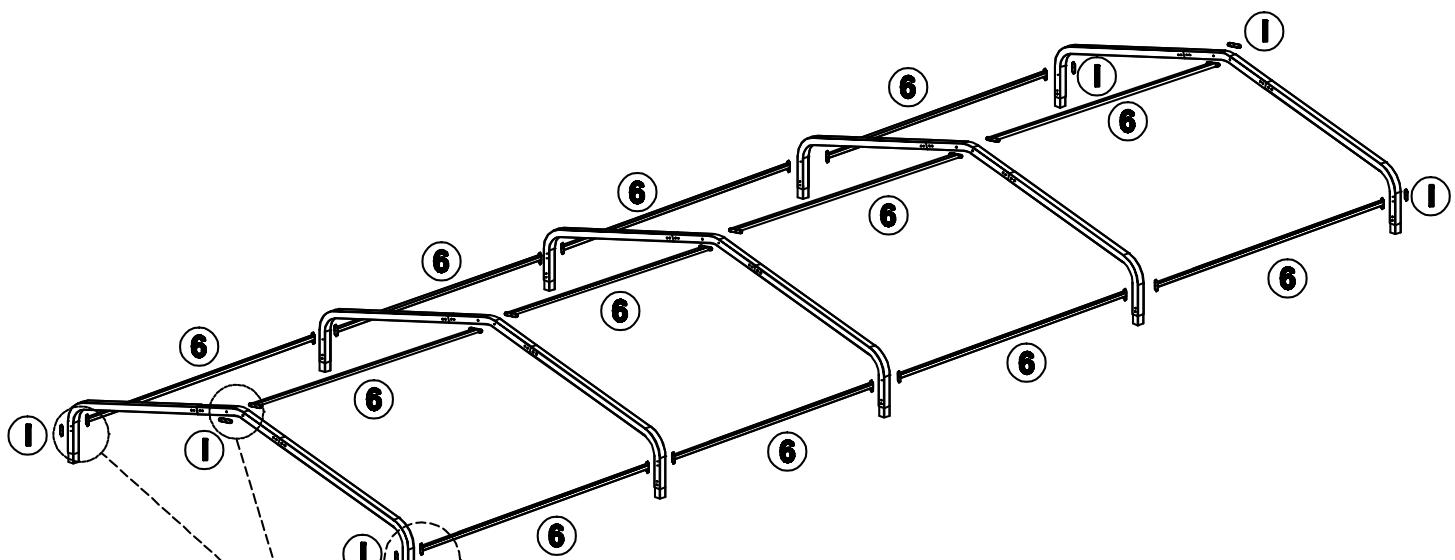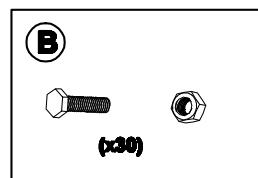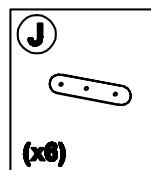
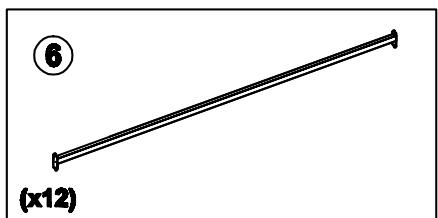


# Step 4

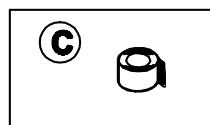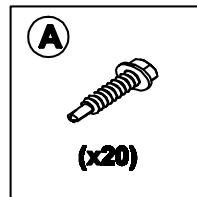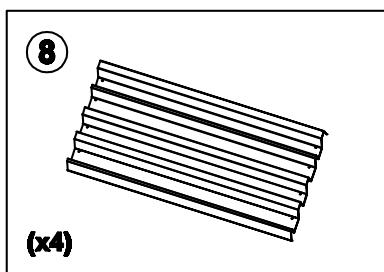


**The waterproof strip is affixed to the iron pipe and do not cover the screw hole**




**Color steel tile 8cm**

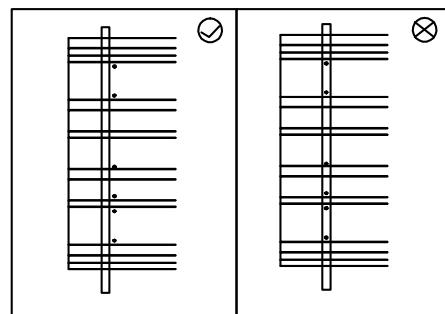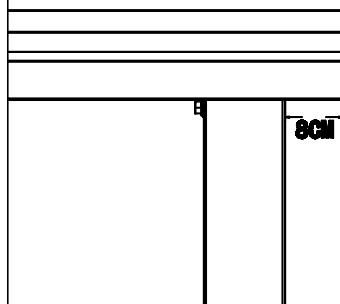





**Color steel tile laying to a direction ,then and drainage**

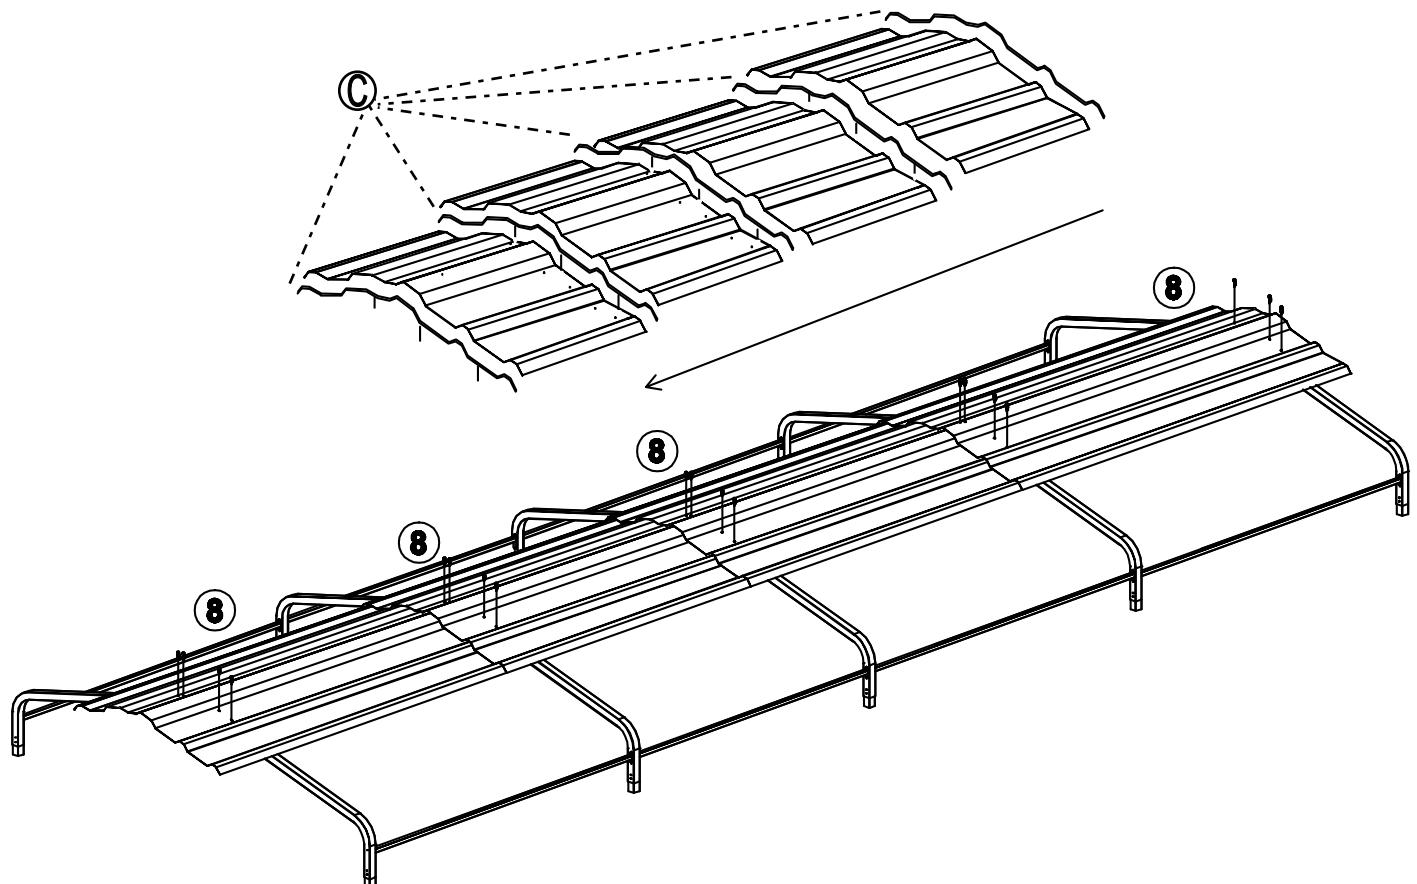



# Step 5

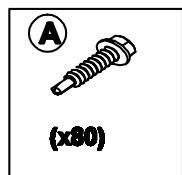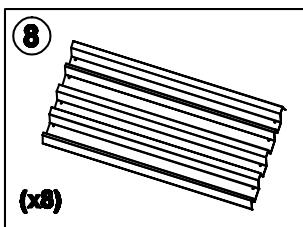






The waterproof strip is affixed to the iron pipe and do not cover the screw hole

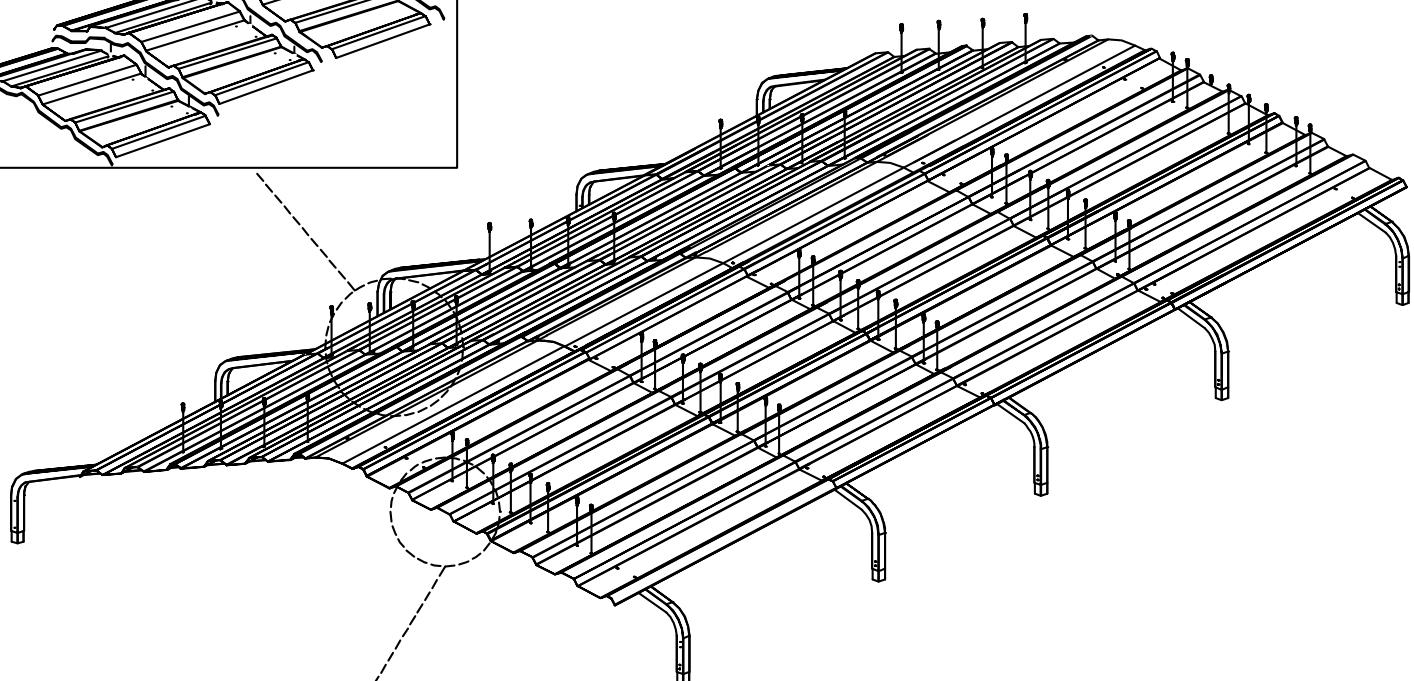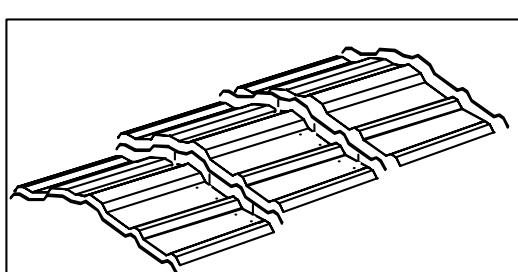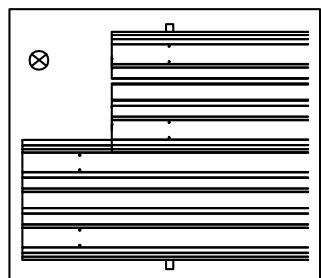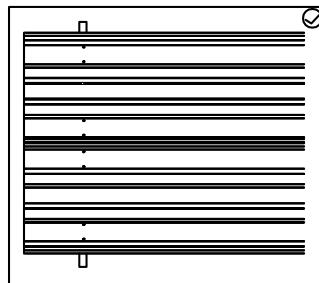





Color steel tile connection should pay attention to the above a piece of pressure below a piece, to prevent water

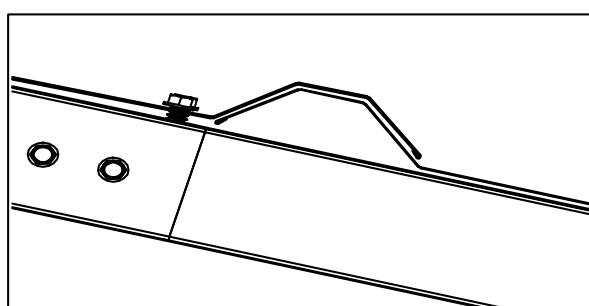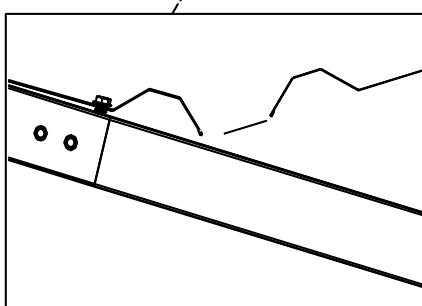



## Step 6

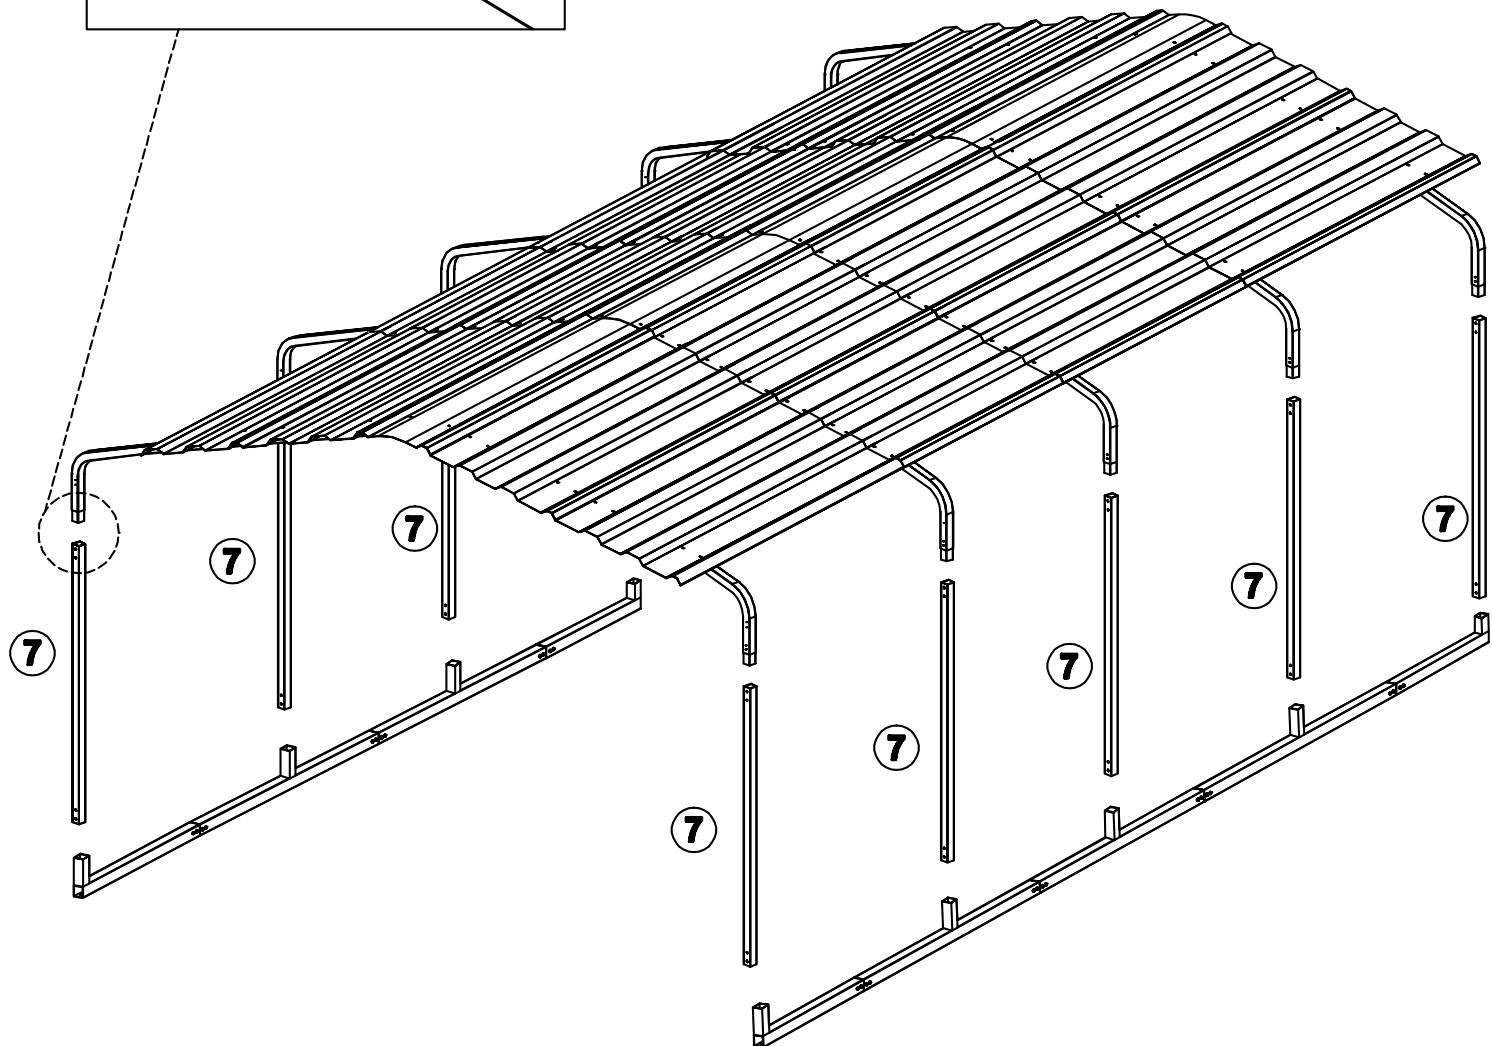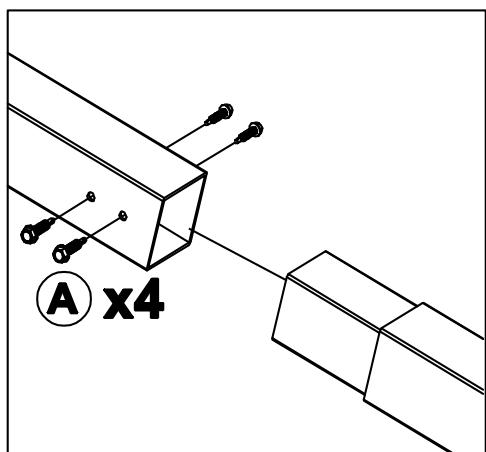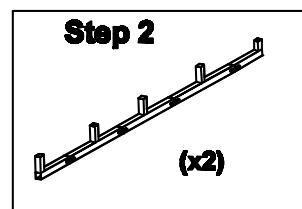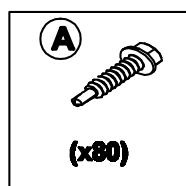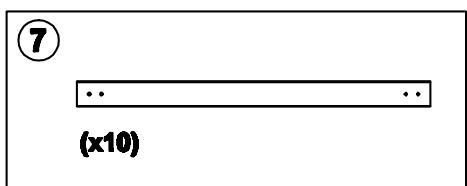










# Step 7

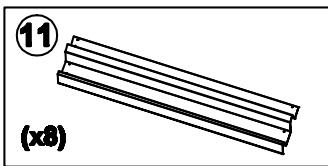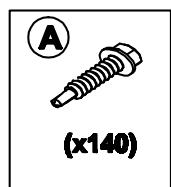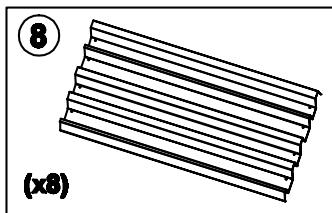


The waterproof strip is affixed to the iron pipe and do not cover the screw hole

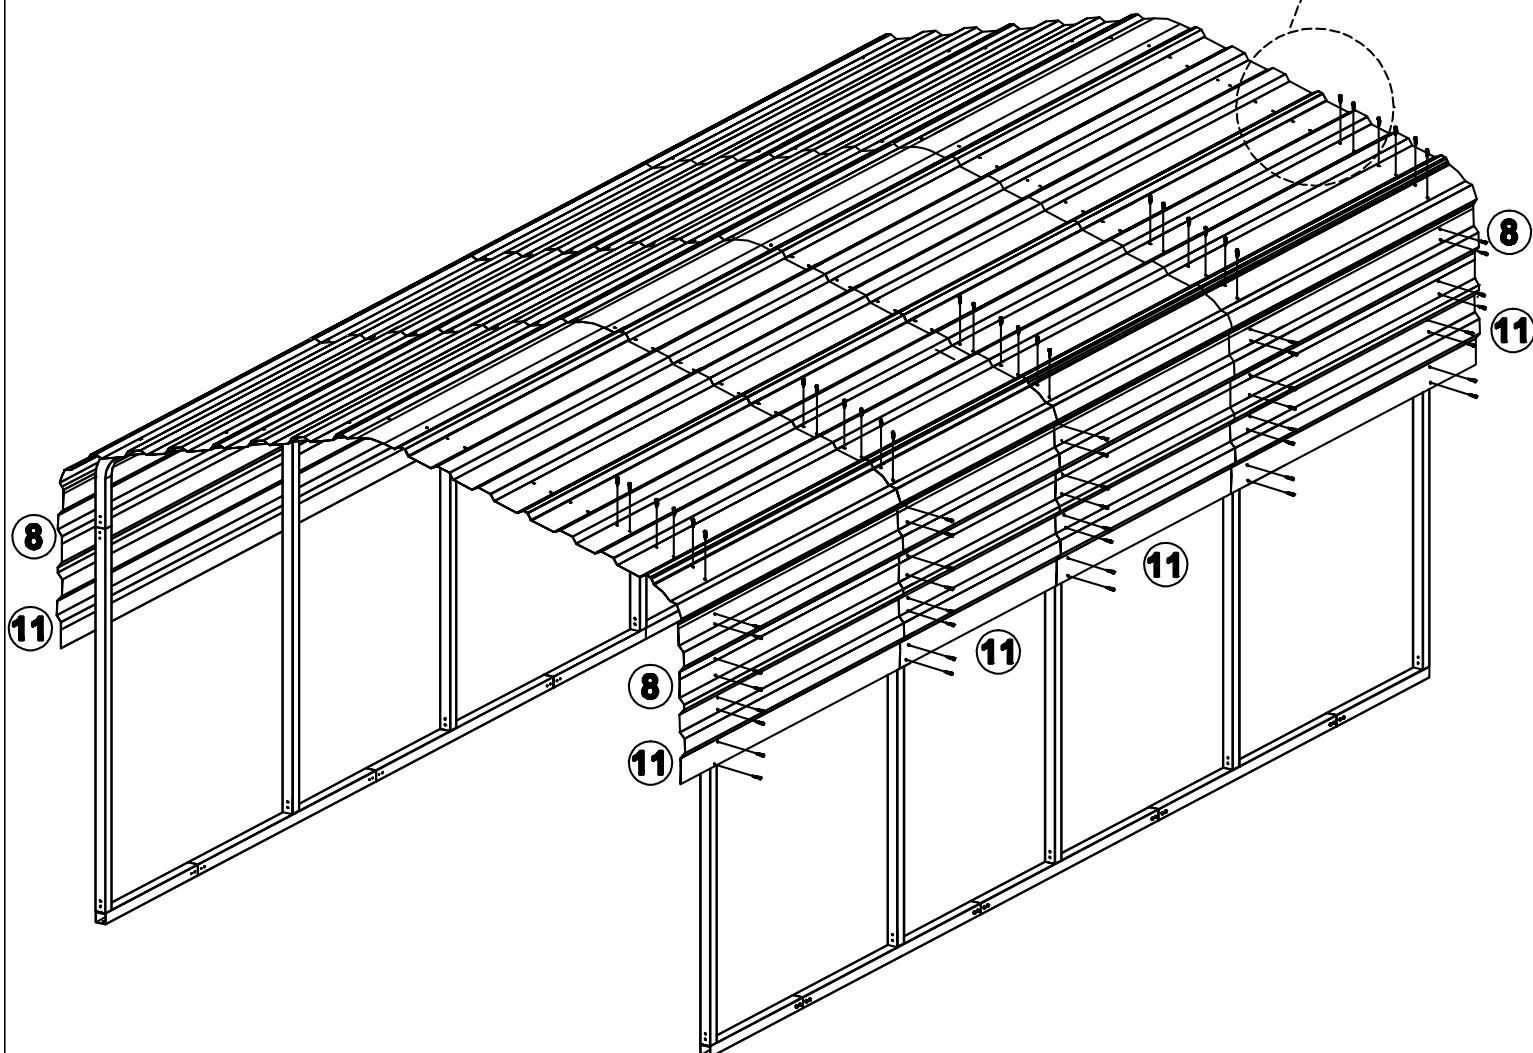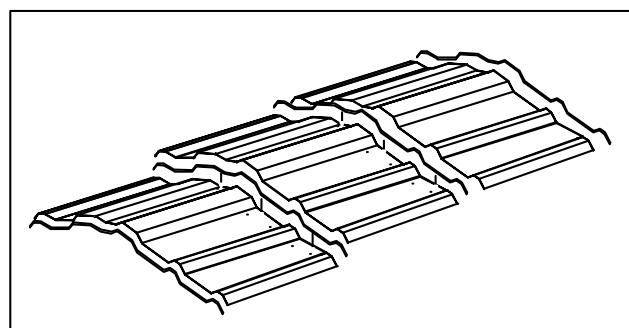



# Step 8

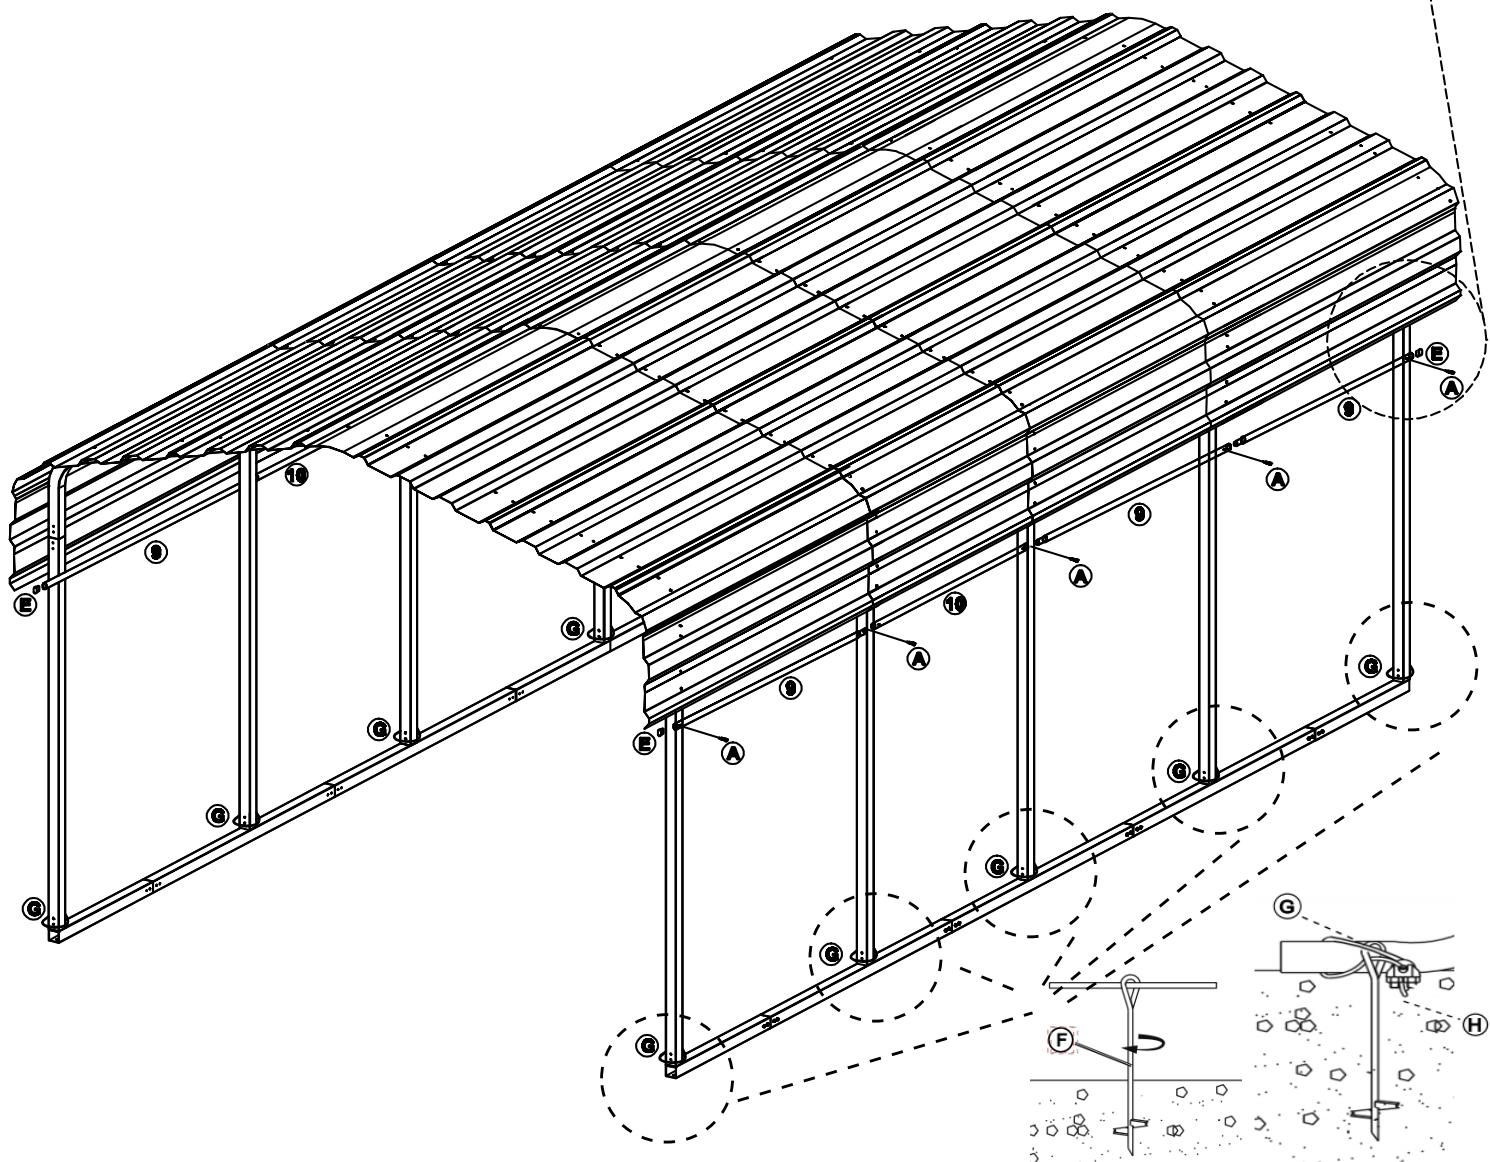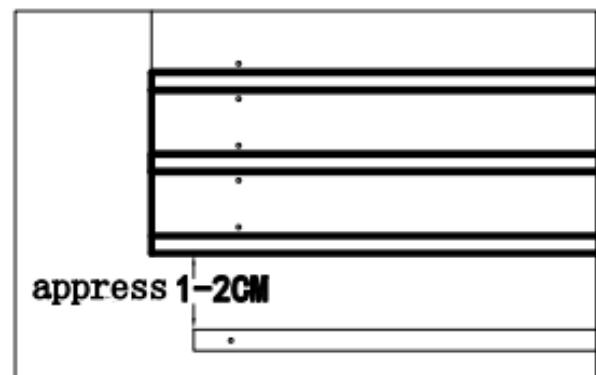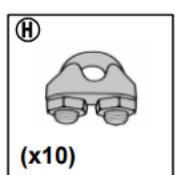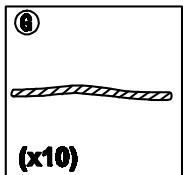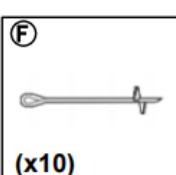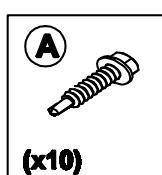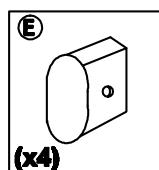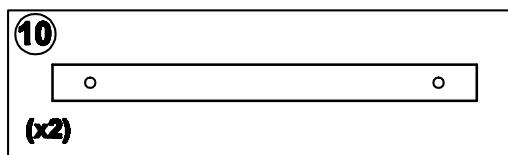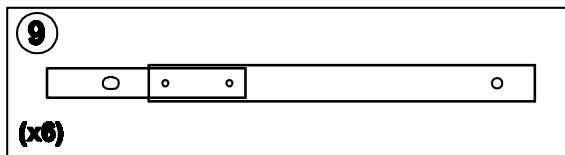

# Step 9

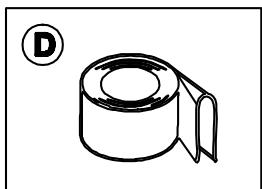

To extend the package of the color steel tile pointed Angle, to prevent injuries.

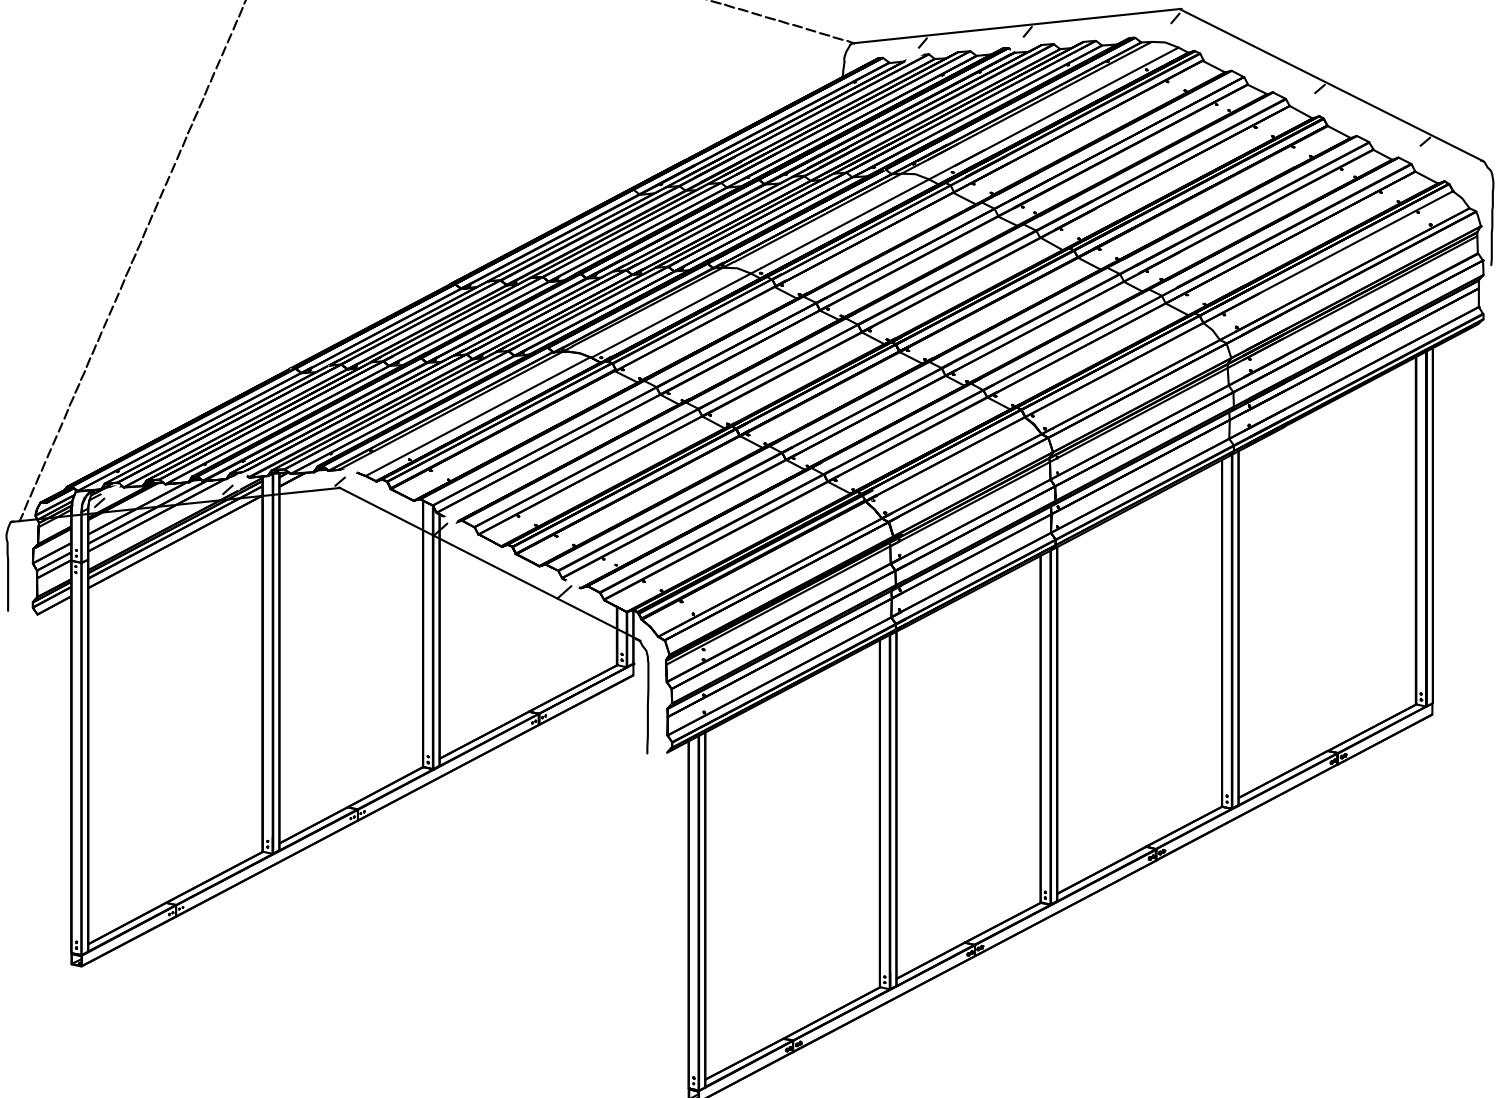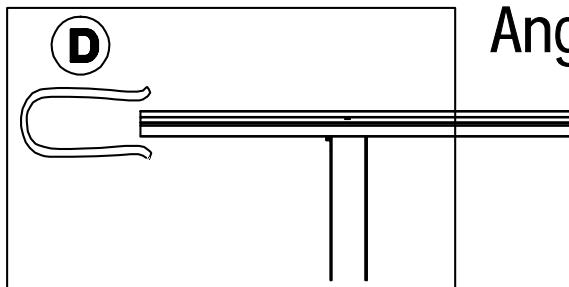



The extra part of the model A screw is used for the situation shown in the circle above, and the customer decides whether to install it, if installed, as shown in the circle below.

