



# ASSEMBLY INSTRUCTIONS

## FULL HOUSE BED WITH 2 DRAWERS

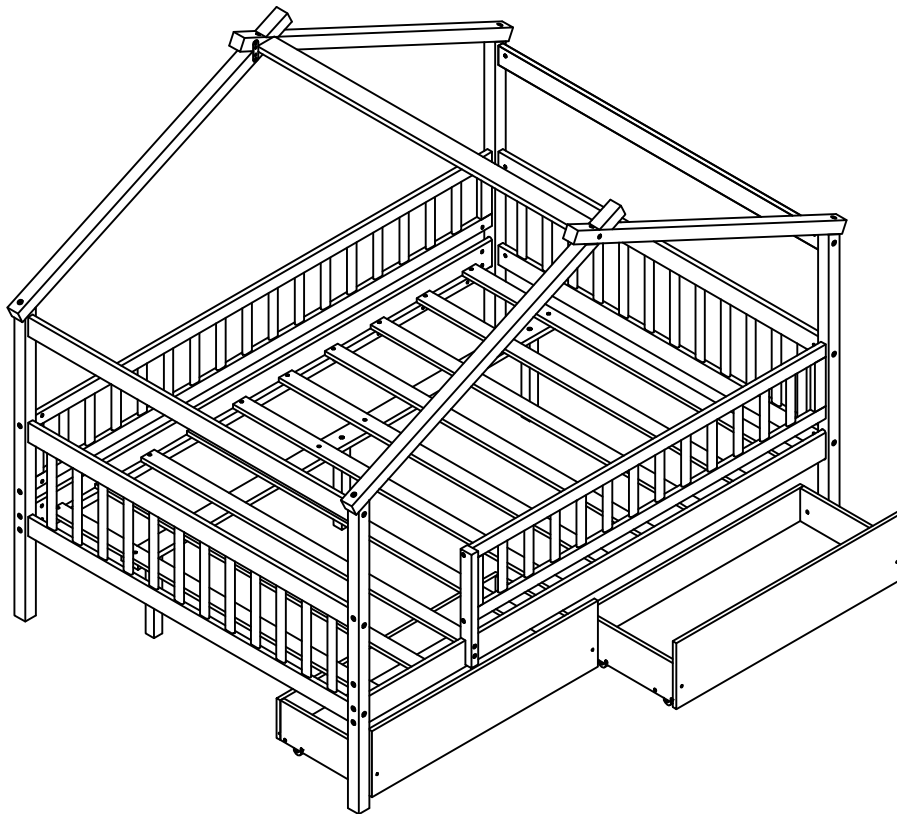



















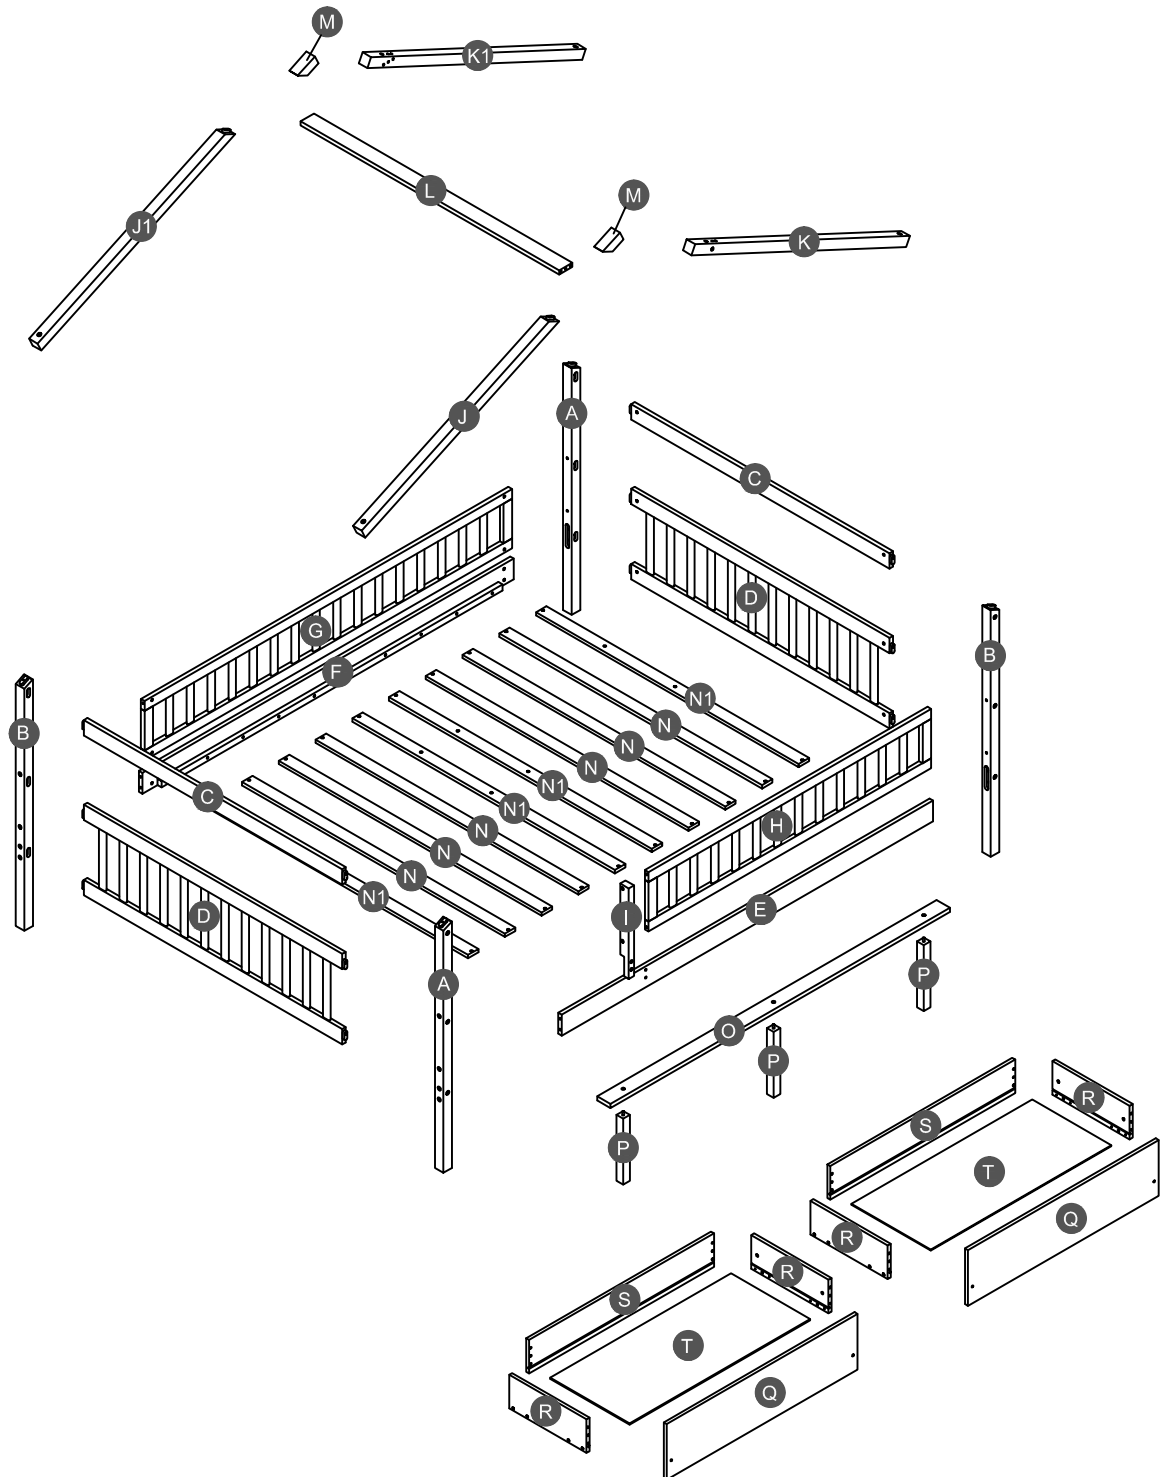
**WF302182/WF302183**

## Detail View







# Part List

## Hardware List WF302182












<b>A</b>  Leg (Left Front/Right Back) - 2pcs	<b>B</b>  Leg (Left Back/Right Front) - 2pcs	<b>C</b>  Horizontal bar HB/FB - 2pcs
<b>D</b>  Frame HB/FB - 2pcs	<b>E</b>  Side rail (Front) - 1pc	<b>F</b>  Side rail (Back) - 1pc
<b>G</b>  Long guard rail (Back) - 1pc	<b>H</b>  Short guard rail (Front) - 1pc	<b>I</b>  Support guard rail(Left) - 1pc
<b>J</b>  Upper (Left Front) - 1pc	<b>J1</b>  Upper (Left Back) - 1pc	<b>K</b>  Upper (Right Front) - 1pc
<b>K1</b>  Upper (Right Back) - 1pc	<b>L</b>  Upper horizontal bar - 1pc	<b>M</b>  Block - 2pcs
<b>N</b>  Slats - 6pcs	<b>N1</b>  Slats - 4pcs	<b>O</b>  Lower support slat - 1pc
<b>P</b>  Leg support - 3pcs		

## Hardware List WF302183







<b>Q</b>  Front drawer panel - 2pcs	<b>R</b>  Left / right drawer panel - 4pcs	<b>S</b>  Back drawer panel - 2pcs
<b>T</b>  Drawer bottom - 2pcs		

# Hardware List


## Hardware List WF302182

<b>1</b>	 Ø8*30mm Wood dowel (6pcs)	<b>2</b>	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	<b>3</b>	 (Ø15)1/4"*80mm Hex-Head bolts (16pcs)
<b>4</b>	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	<b>5</b>	 (Ø12)1/4"*65mm Hex-Head bolts (8pcs)	<b>6</b>	 1/4"*15 (9.5mm) Horizontal-Hole bolts(30pcs)
<b>7</b>	 (1/4")4.5*58mm Allen key (1pc)	<b>8</b>	 Ø4*30mm Wood screws (30pcs)	<b>9</b>	 Ø3.5*19mm Wood screws (8pcs)
<b>10</b>	 75*20*2 mm Metal bracket (2pcs)	<b>11</b>	 70*35*19 mm Trundle stopper (3pcs)		

## Hardware List WF302183


<b>1</b>	 Ø8*30mm Wood dowel (16pcs)	<b>6</b>	 1/4"*15 (9.5mm) Horizontal-Hole bolts(8pcs)	<b>8</b>	 Ø4*30mm Wood screws (16pcs)
<b>12</b>	 Ø10*20mm Wood dowel (8pcs)	<b>13</b>	 (Ø12)1/4"*60mm Hex-Head bolts (8pcs)	<b>14</b>	 100*54*20 mm Wheels (8pcs)

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

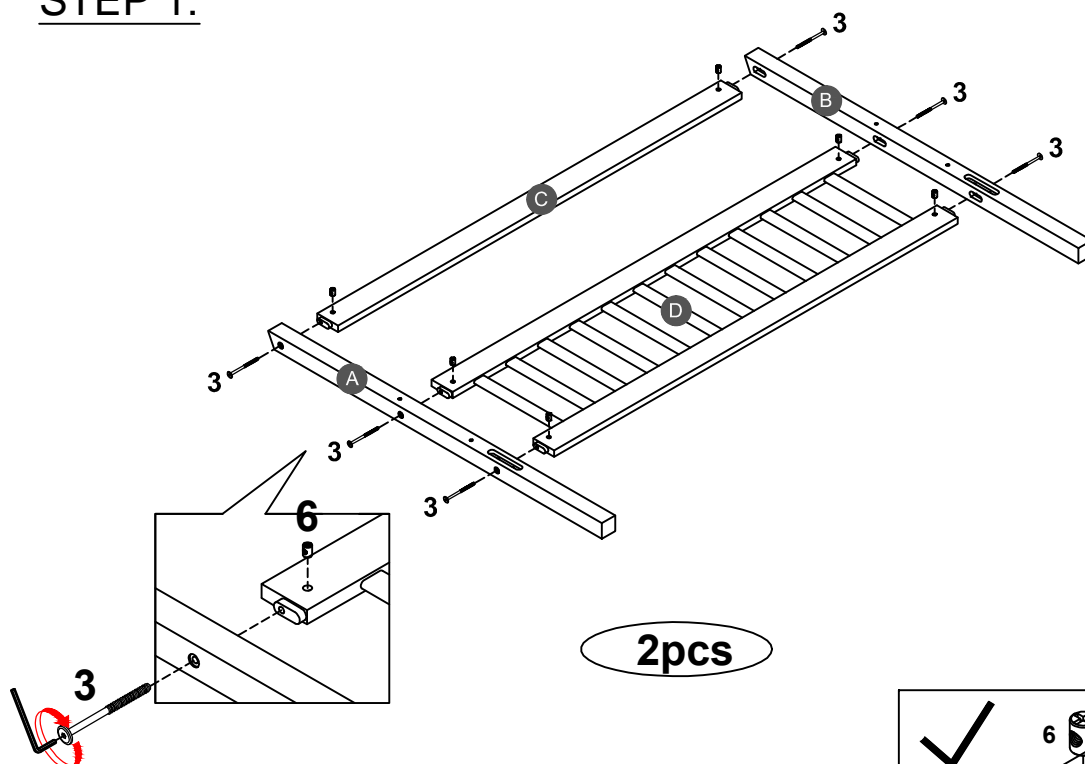

3




12PCS

6




12PCS

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

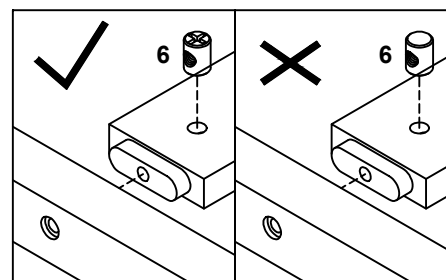

## STEP 2:

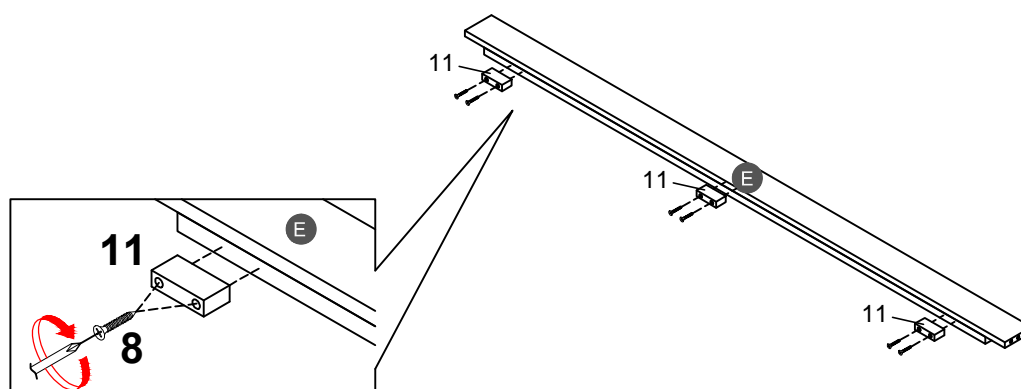

8



6PCS



11




3PCS





Drawer stopper (11) with lower side rail front (E) by using screw (8).

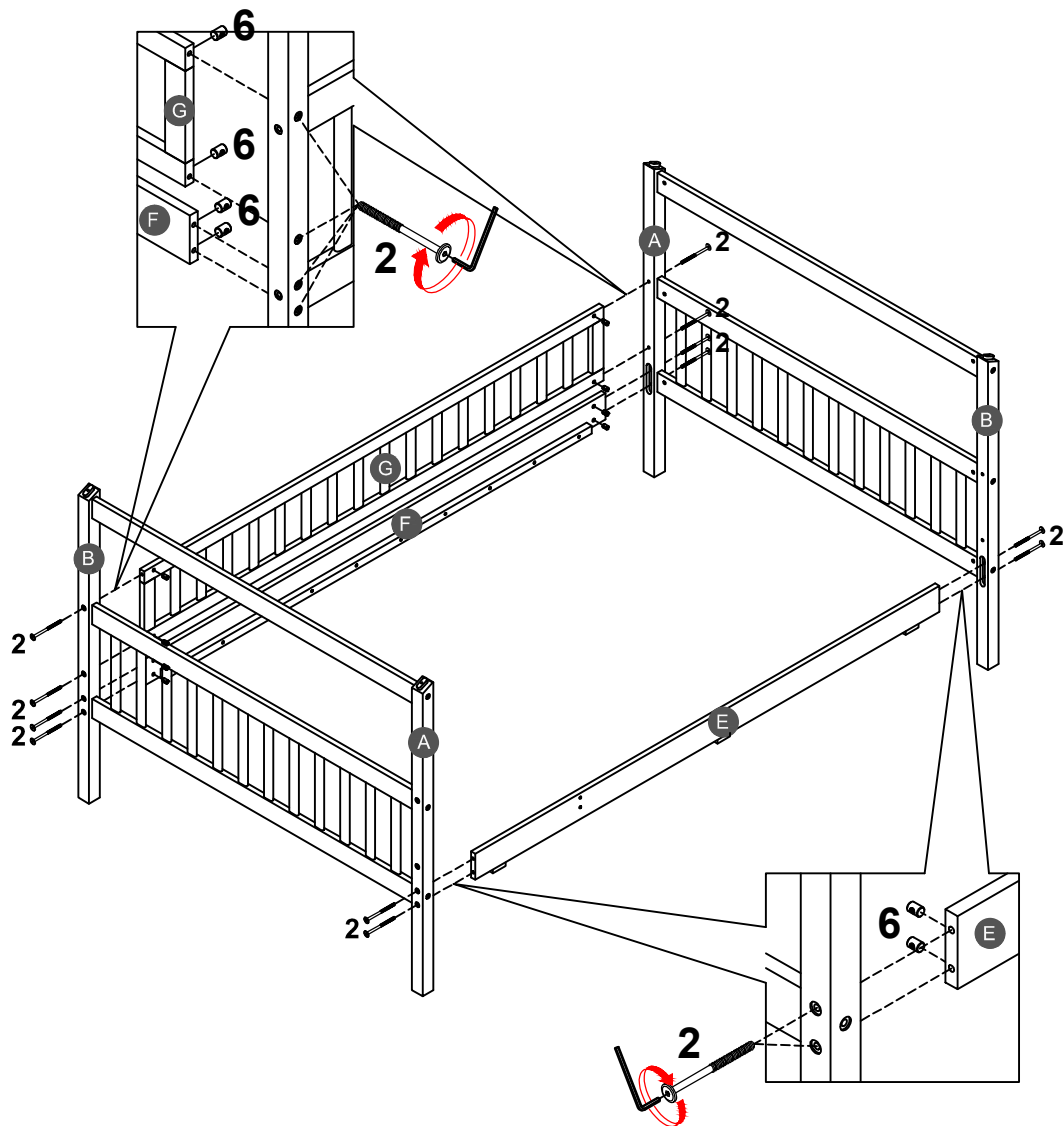
### STEP 3:

2		6	
12PCS		12PCS	




# STEP 4:


2		3		4		6	
2PCS		2PCS		2PCS		4PCS	

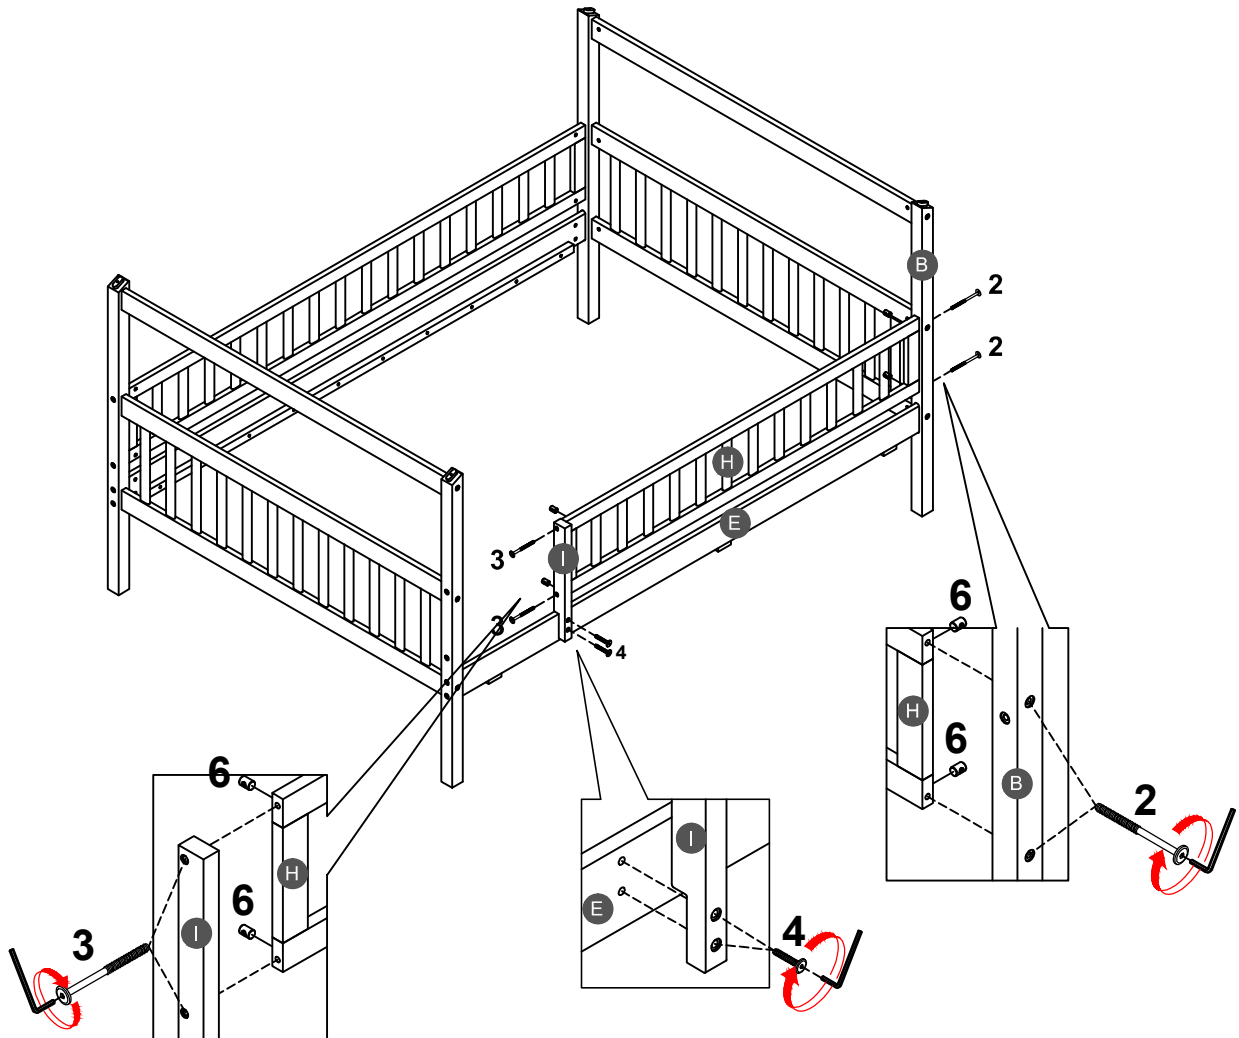

## STEP 5:

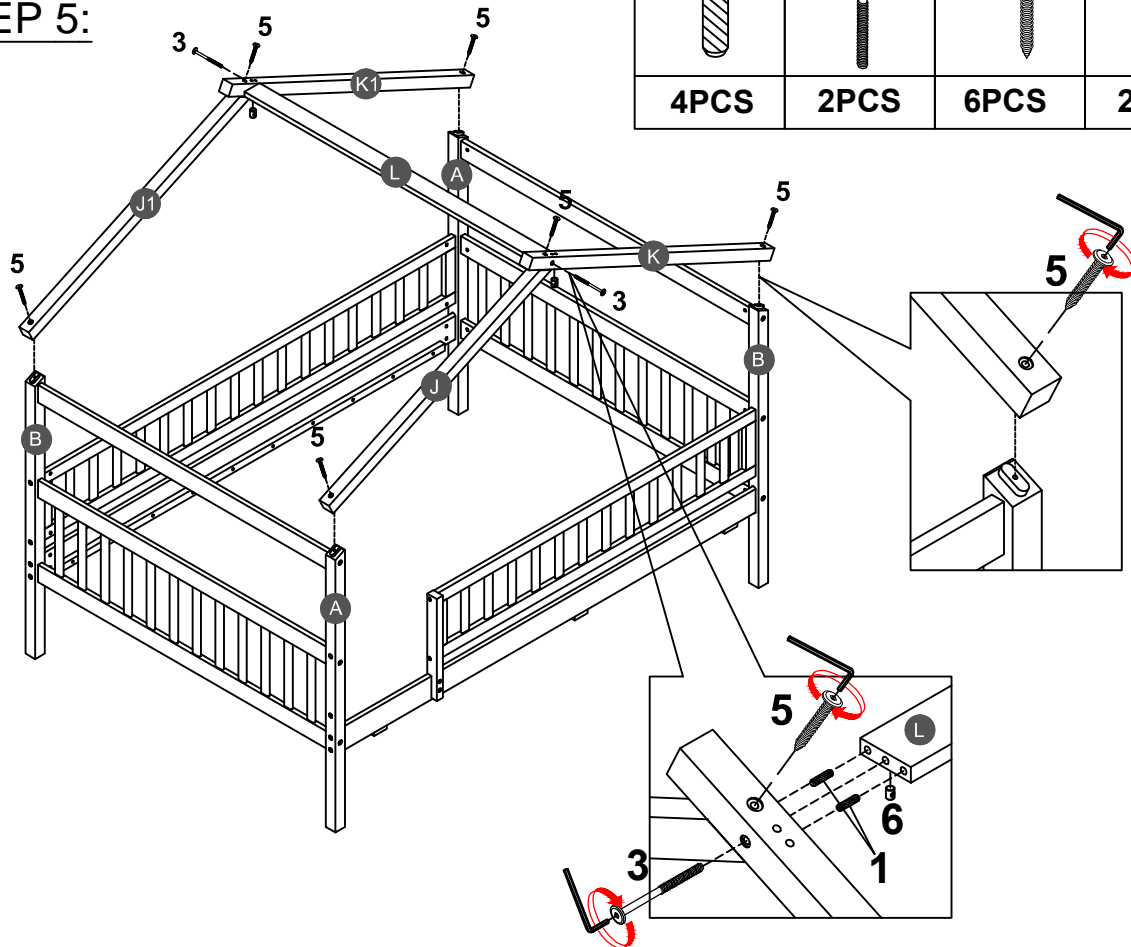




## STEP 6:

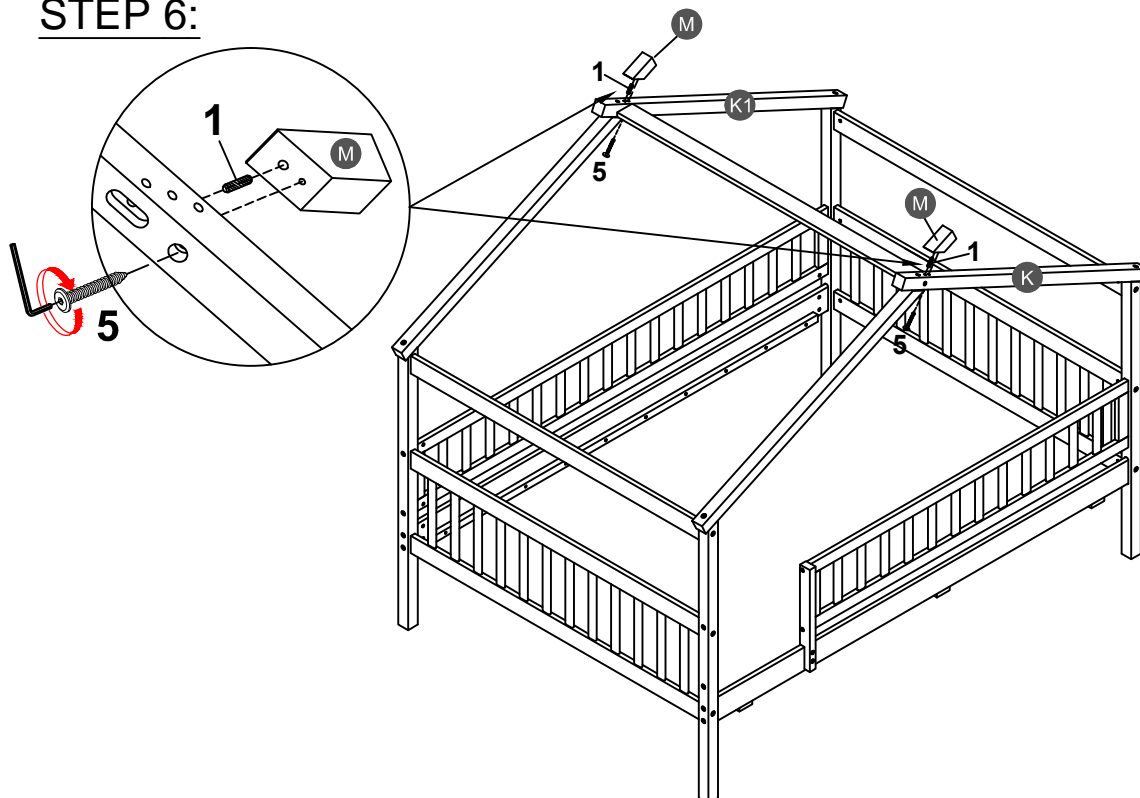




## STEP 7:

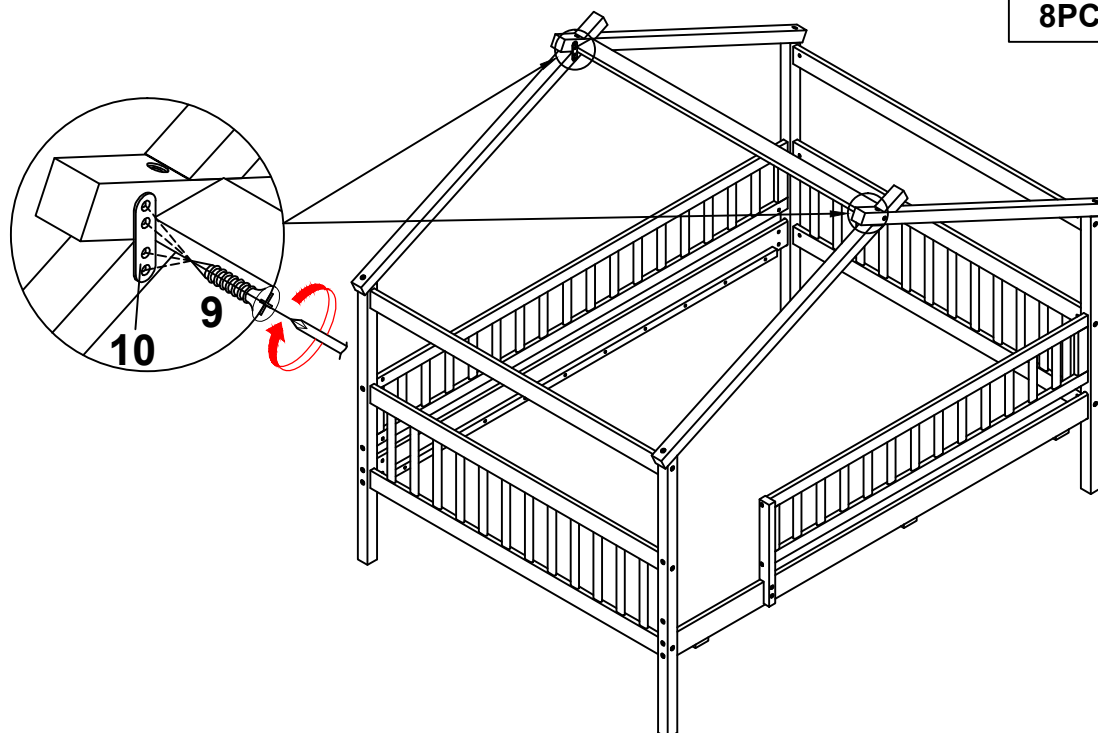

9	10
	
8PCS	2PCS

## STEP 8:

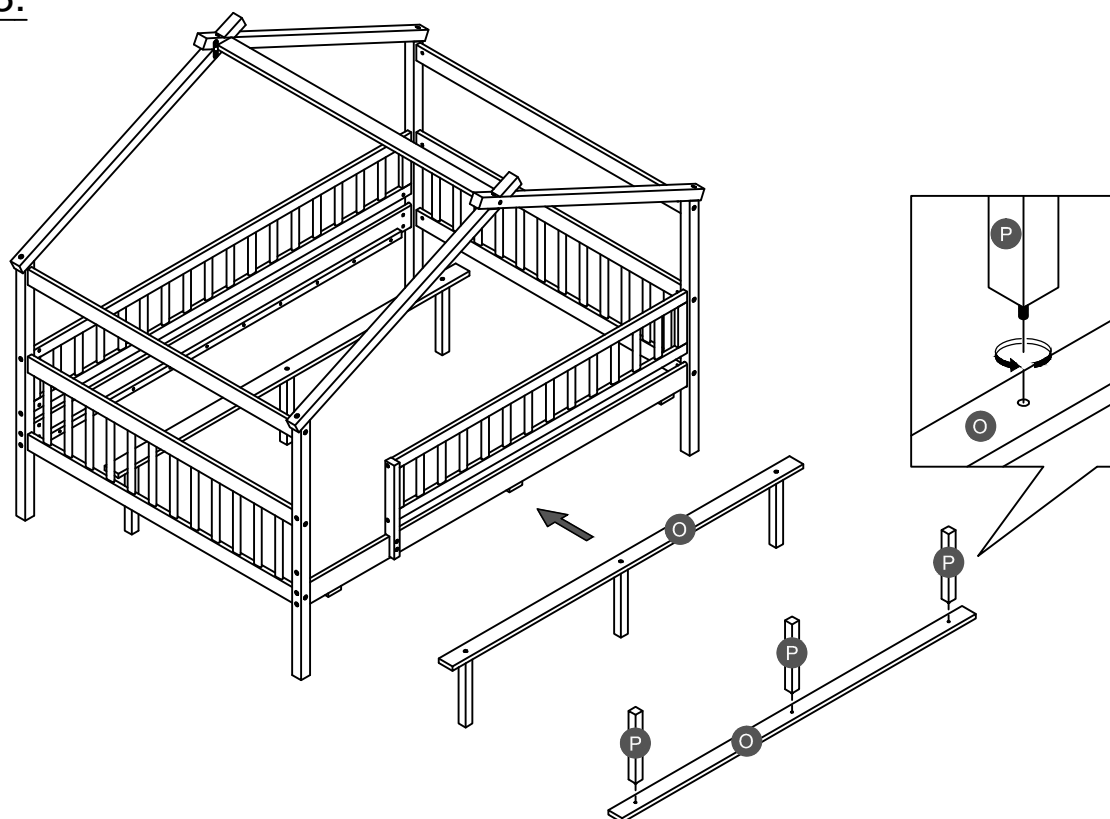




Assembling leg support (P) with lower support slat (O) later rotate, Move support slat inside Full bunkbed.

## STEP 9:


8



24PCS

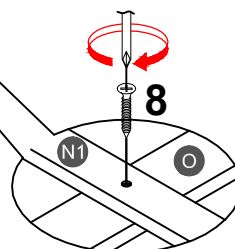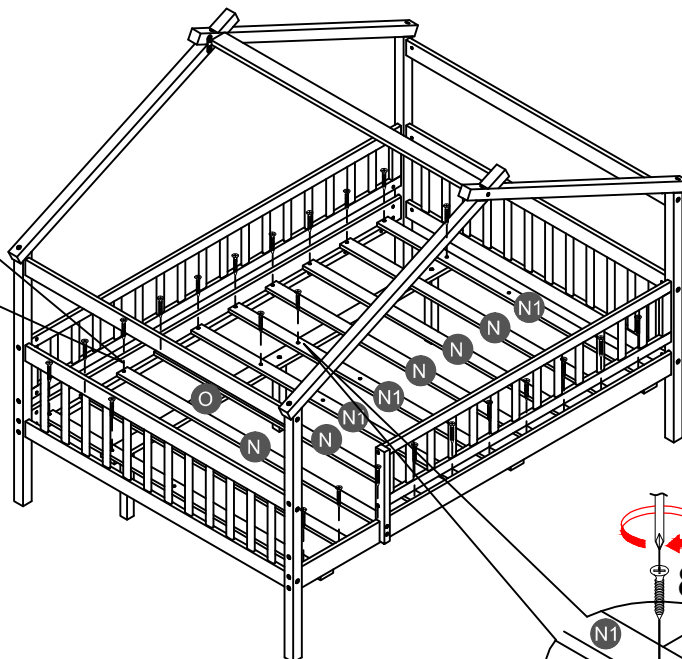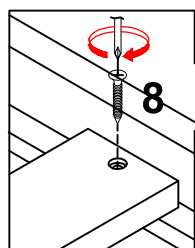

5.4"  
138mm  
2.7"  
69mm

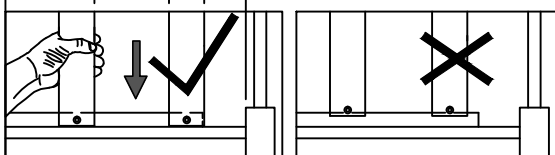

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

## STEP 10:

1



8PCS

6




4PCS

13



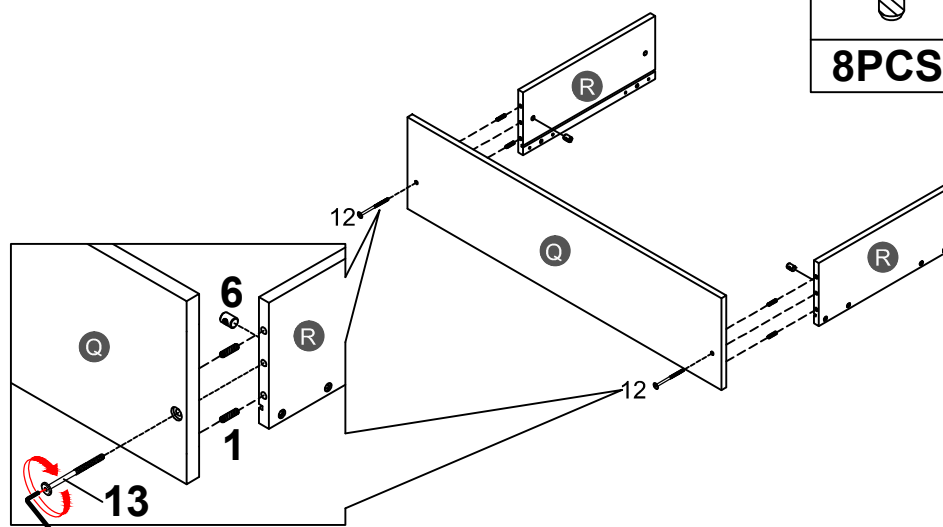


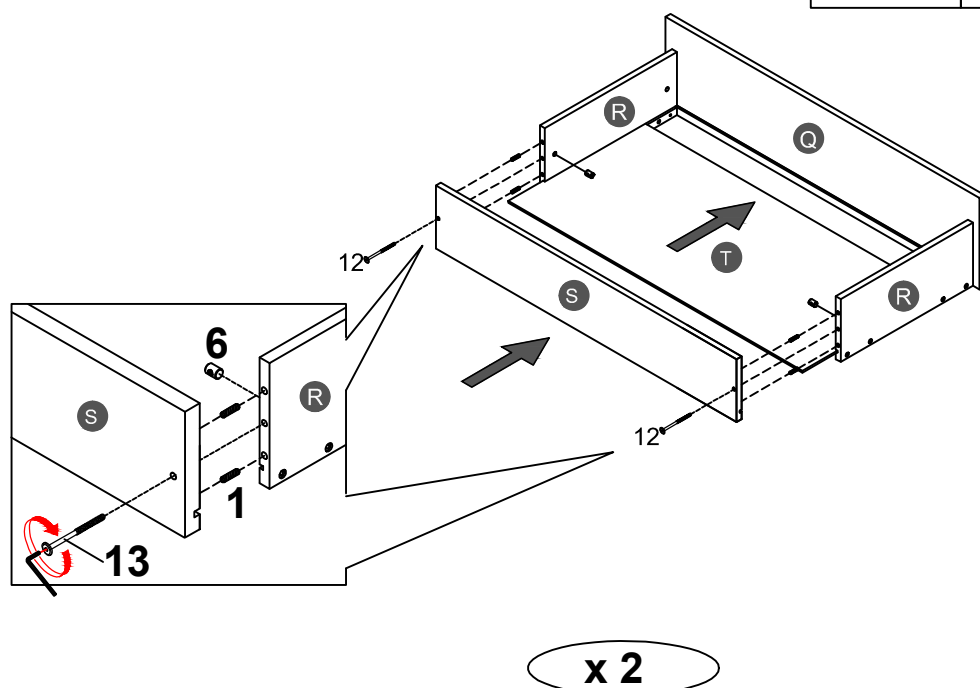
4PCS






x 2


## STEP 11:

<b>1</b>		<b>6</b>		<b>13</b>	
<b>8PCS</b>		<b>4PCS</b>		<b>4PCS</b>	




## STEP 12:

<b>8</b>		<b>12</b>		<b>14</b>	
<b>16PCS</b>		<b>8PCS</b>		<b>8PCS</b>	

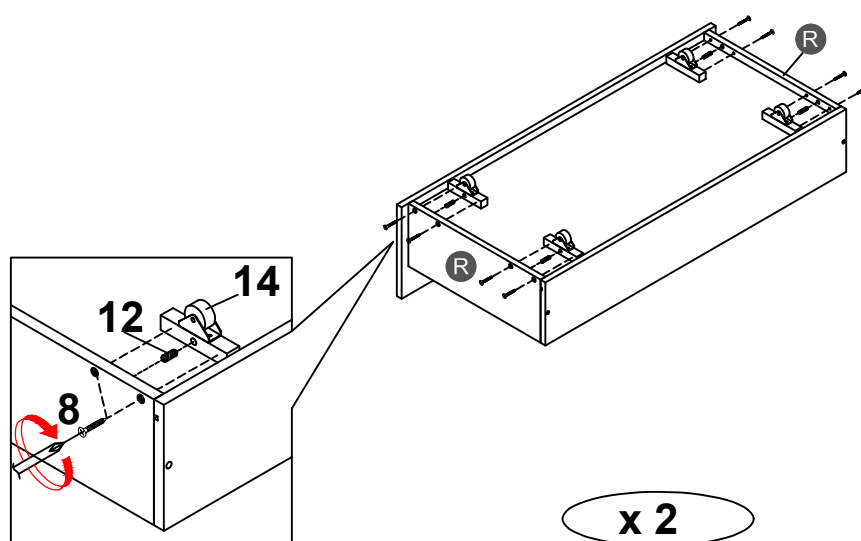

**STEP 13:**

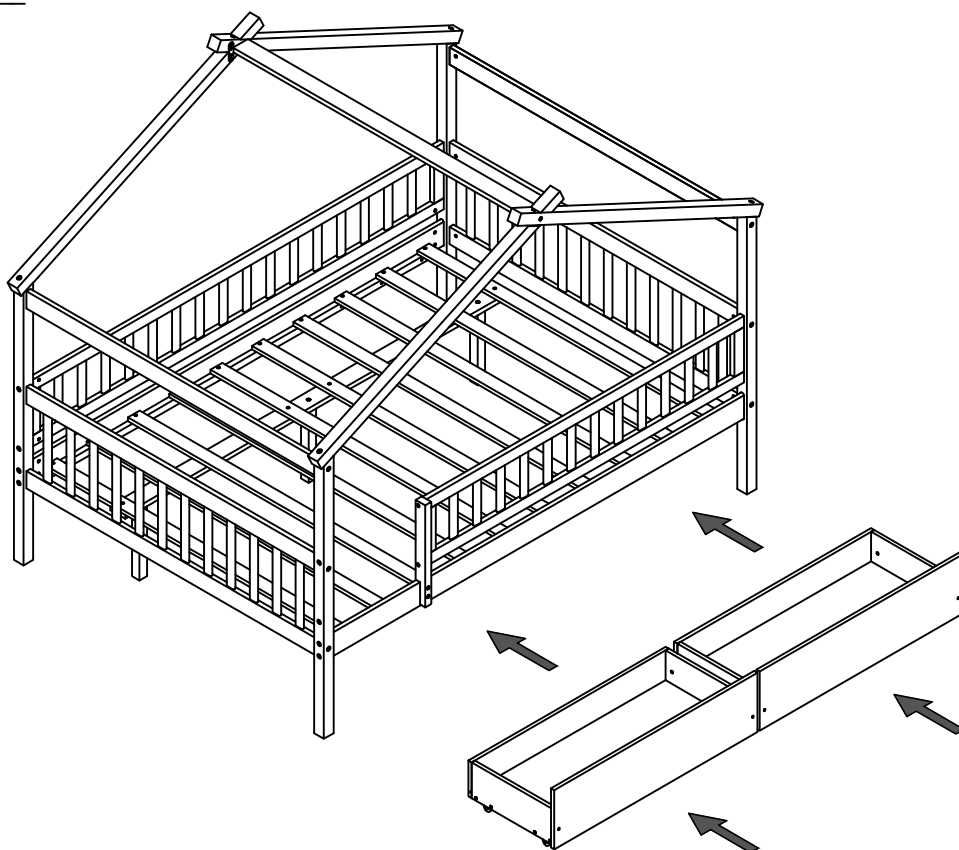

Push Trundle and Drawer under the bottom of Bunkbed.

