



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED WITH 2 DRAWERS









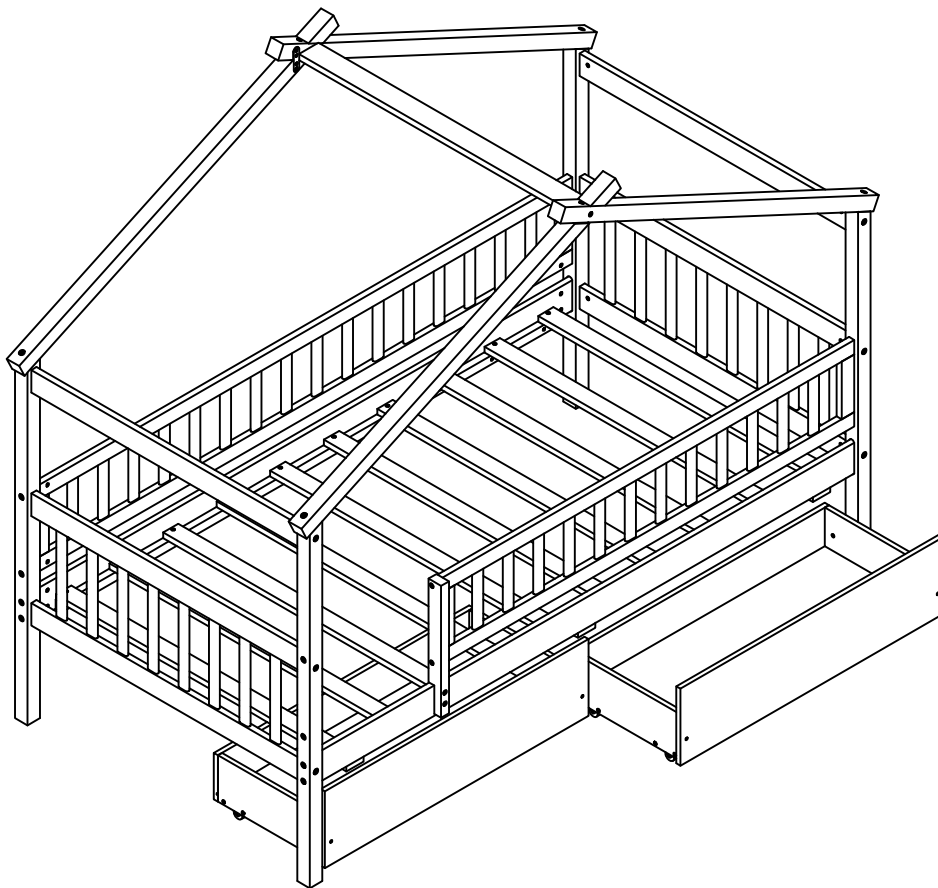









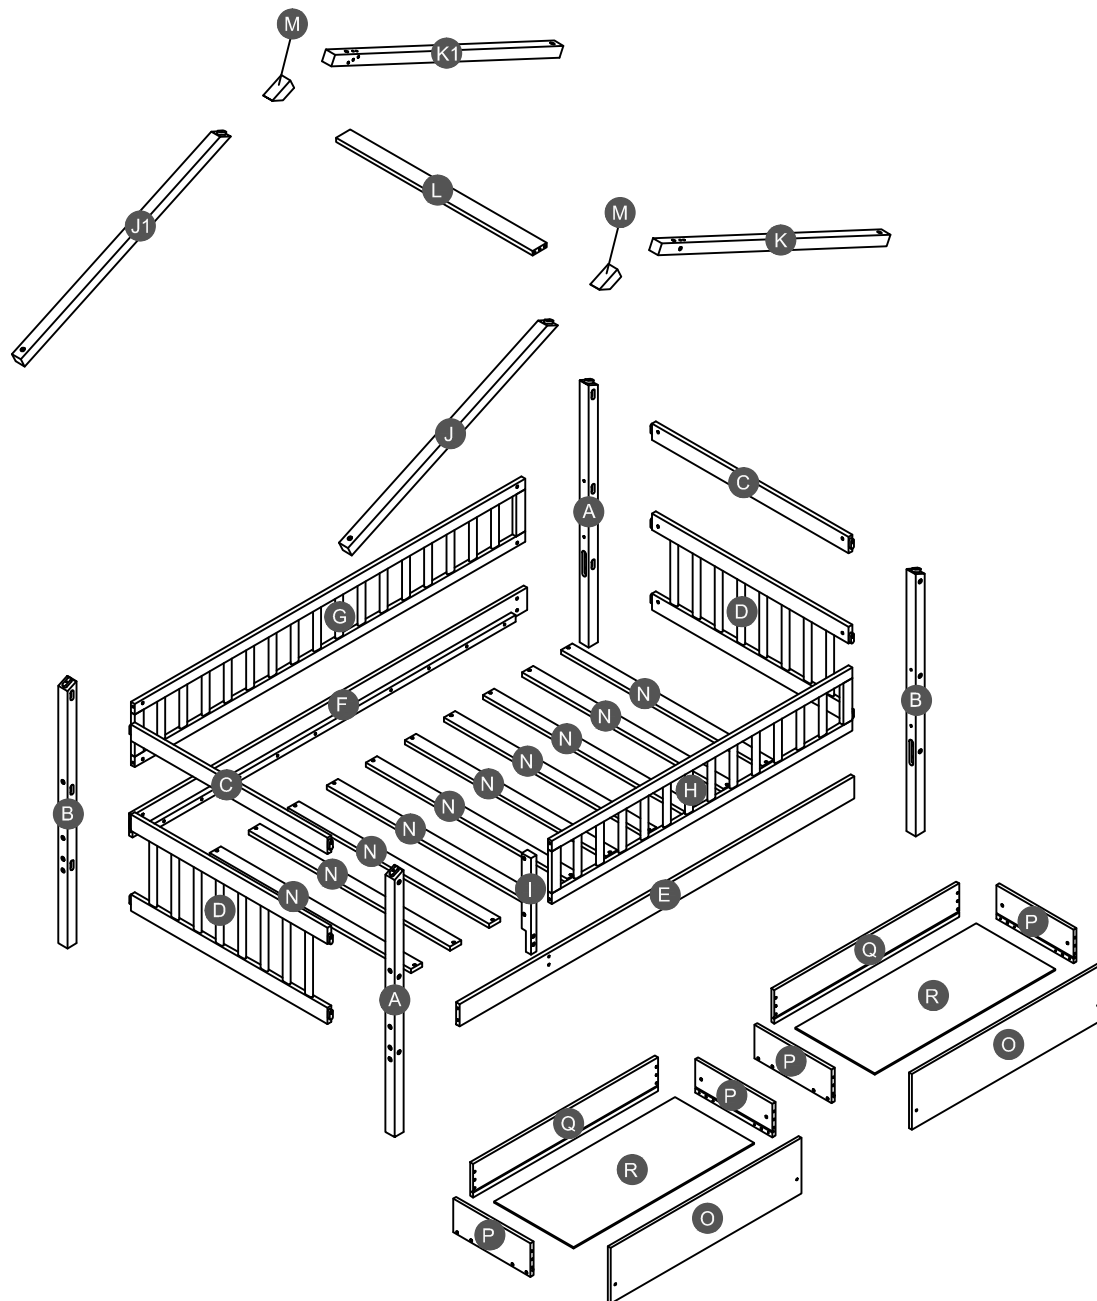



WF302181















Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail (Front) - 1pc	F  Side rail (Back) - 1pc
G  Long guard rail (Back) - 1pc	H  Short guard rail (Front) - 1pc	I  Support guard rail(Left) - 1pc
J  Upper (Left Front) - 1pc	J1  Upper (Left Back) - 1pc	K  Upper (Right Front) - 1pc
K1  Upper (Right Back) - 1pc	L  Upper horizontal bar - 1pc	M  Block - 2pcs
N  Slats - 10pcs	O  Front drawer panel - 2pcs	P  Left / right drawer panel - 4pcs
Q  Back drawer panel - 2pcs	R  Drawer bottom - 2pcs	

Hardware List


1  Ø8*30mm Wood dowel (22pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (16pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)	5  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	6  (Ø12)1/4"*65mm Hex-Head bolts (8pcs)
7  1/4"*15 (9.5mm) Horizontal-Hole bolts(38pcs)	8  (1/4")4.5*58mm Allen key (1pc)	9  Ø4*30mm Wood screws (42pcs)
10  Ø3.5*19mm Wood screws (8pcs)	11  75*20*2 mm Metal bracket (2pcs)	12  Ø10*20mm Wood dowel (8pcs)
13  70*35*19 mm Drawer stopper (3pcs)	14  100*54*20 mm Wheels (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

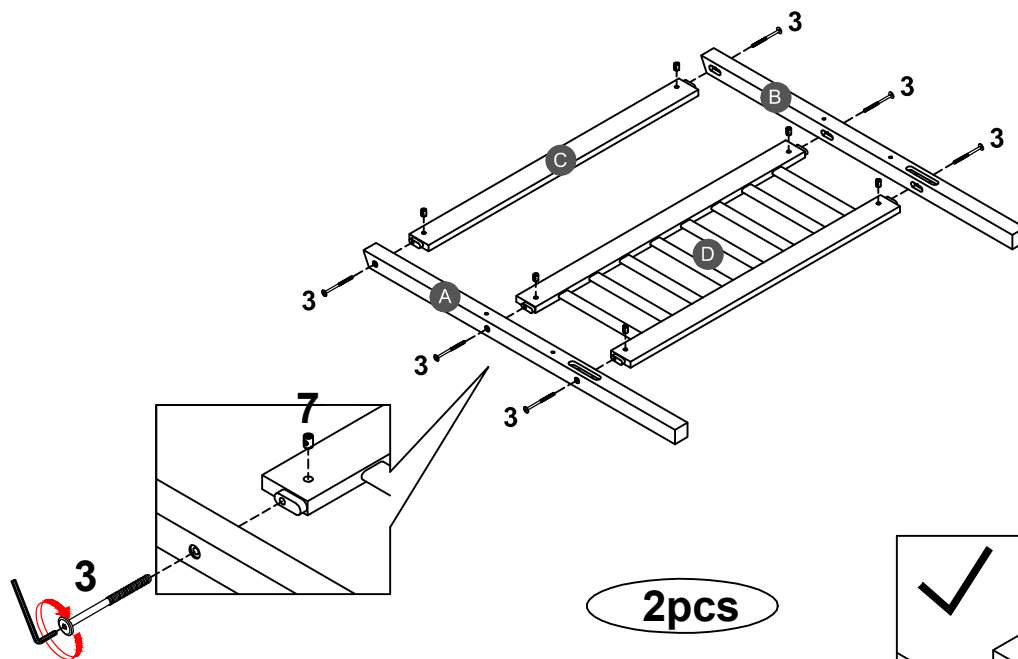

3



12PCS


7




12PCS

2pcs

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

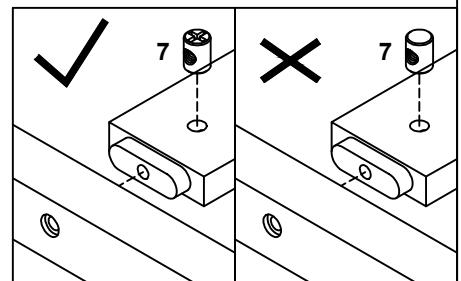

STEP 2:

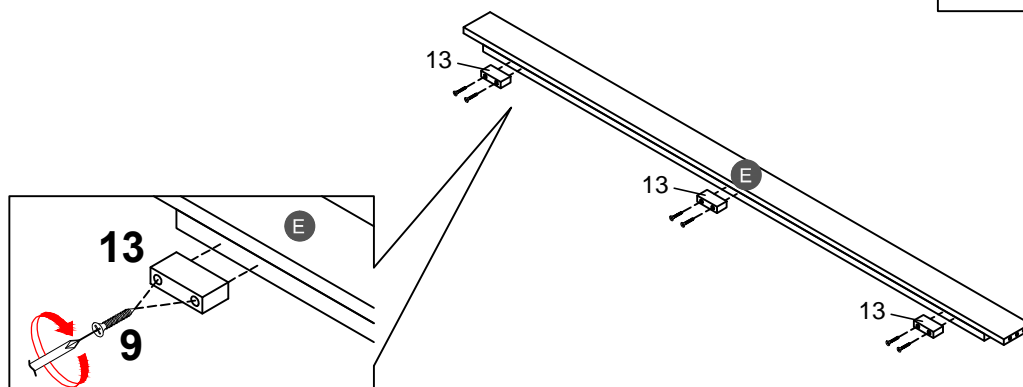


9



6PCS

13



3PCS

Drawer stopper (13) with lower side rail front (E) by using screw (9).

STEP 3:

2




12PCS





7

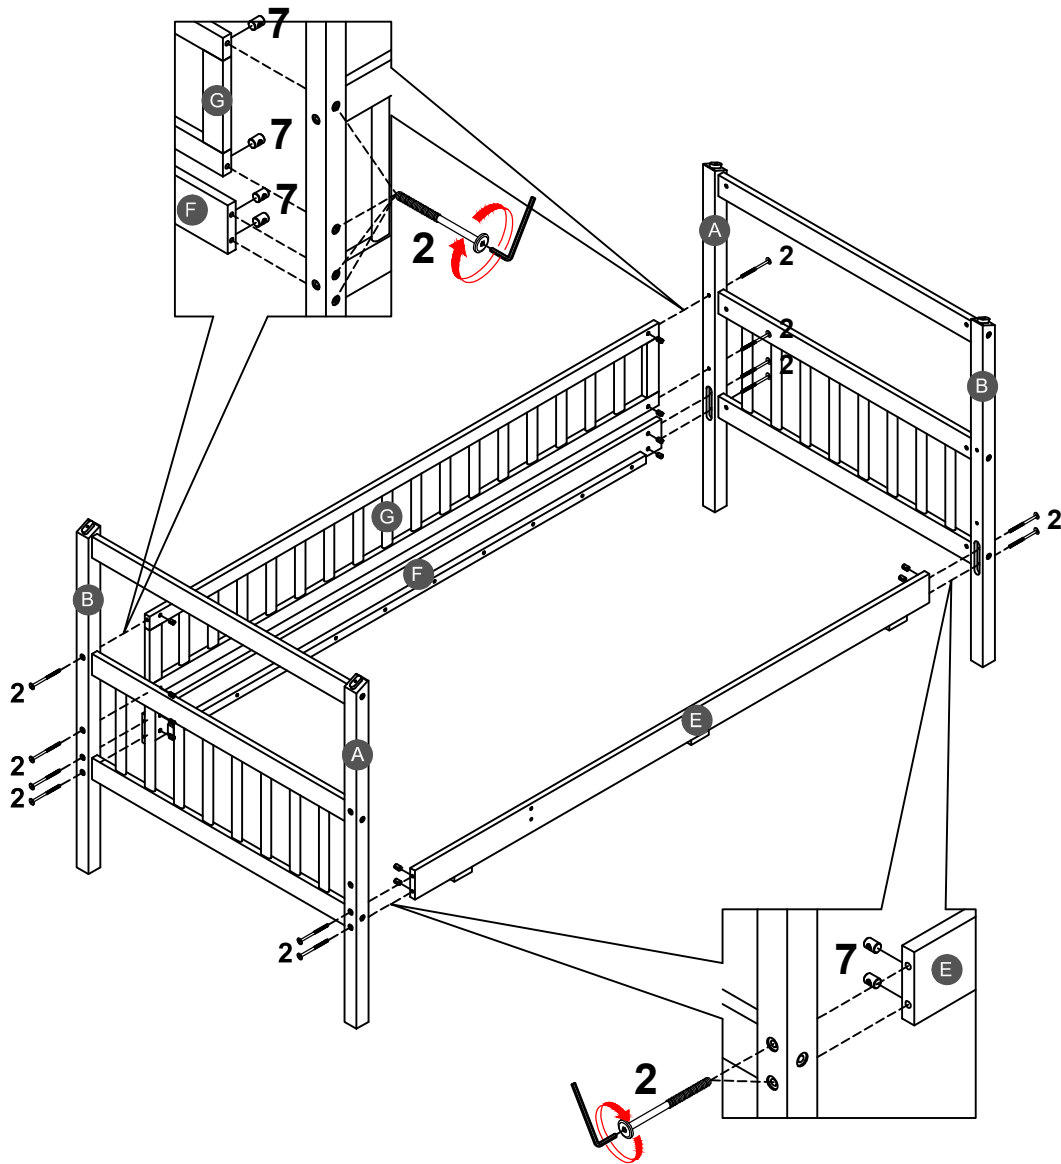


12PCS




STEP 4:


2		3		5		7	
2PCS		2PCS		2PCS		4PCS	

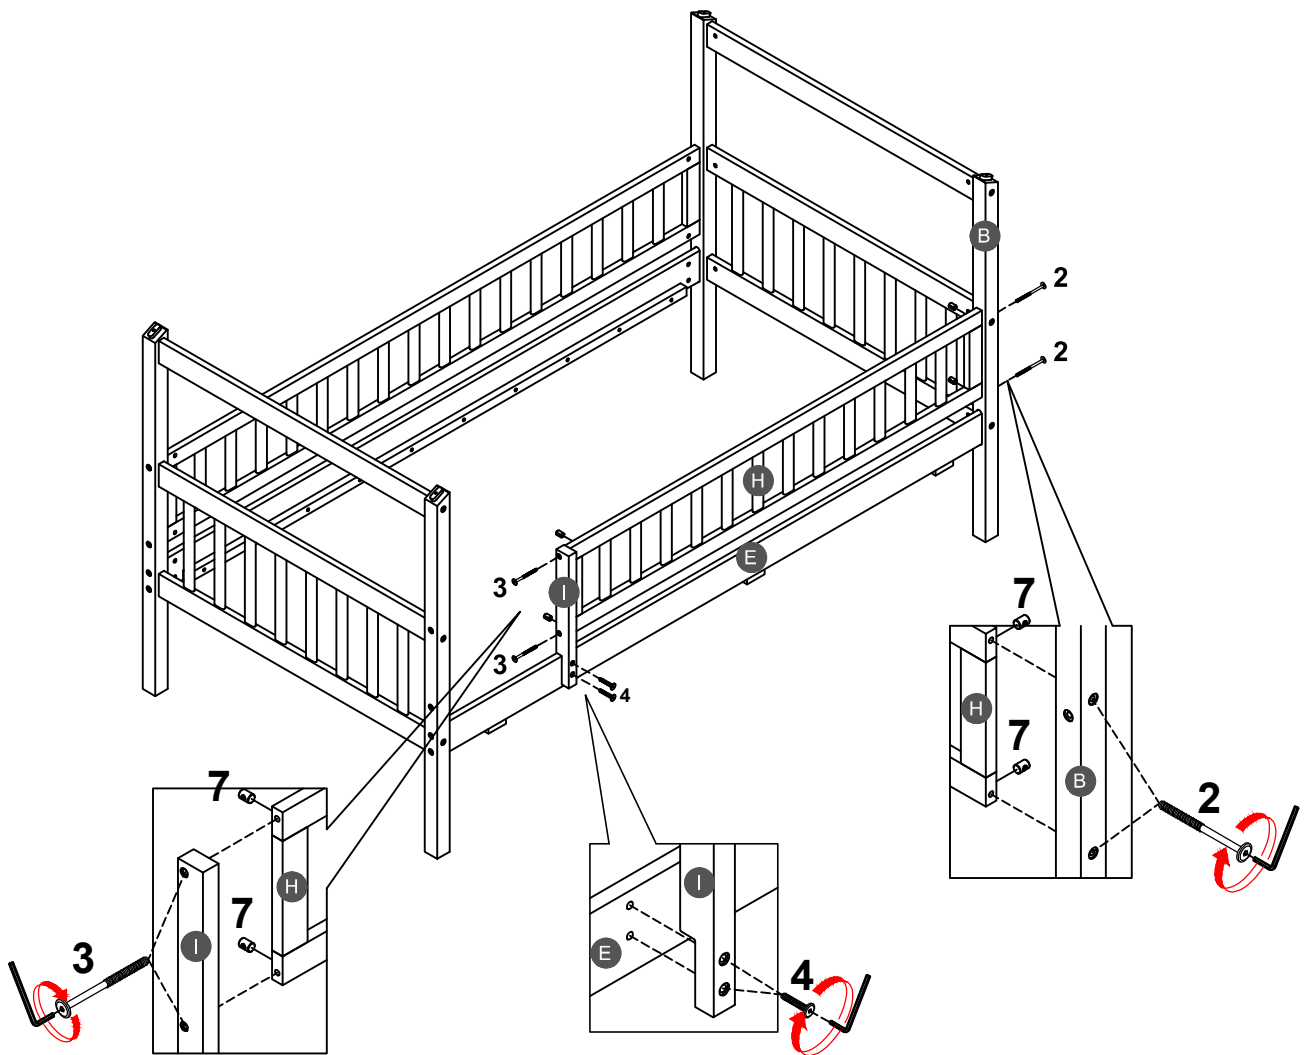



STEP 5:

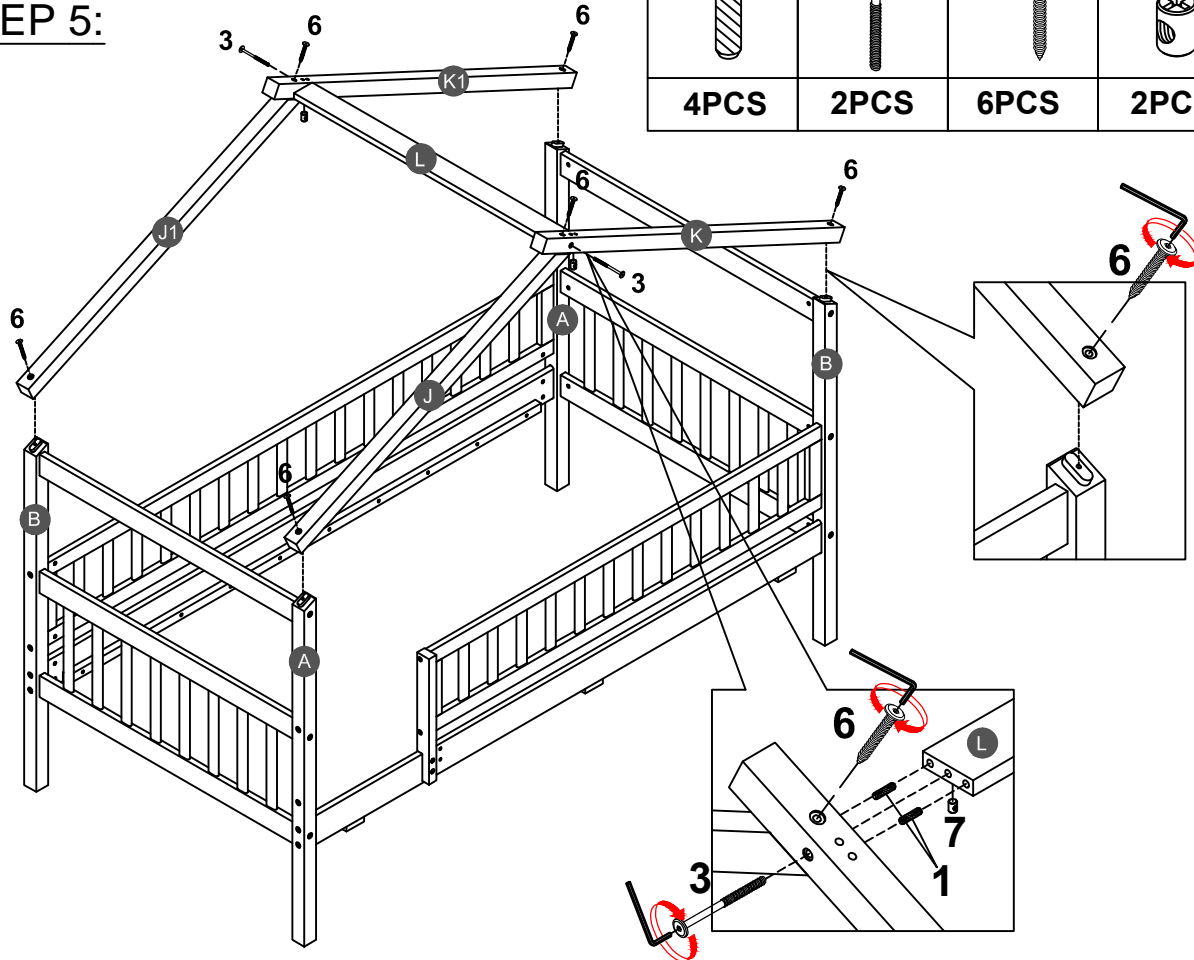

STEP 6:

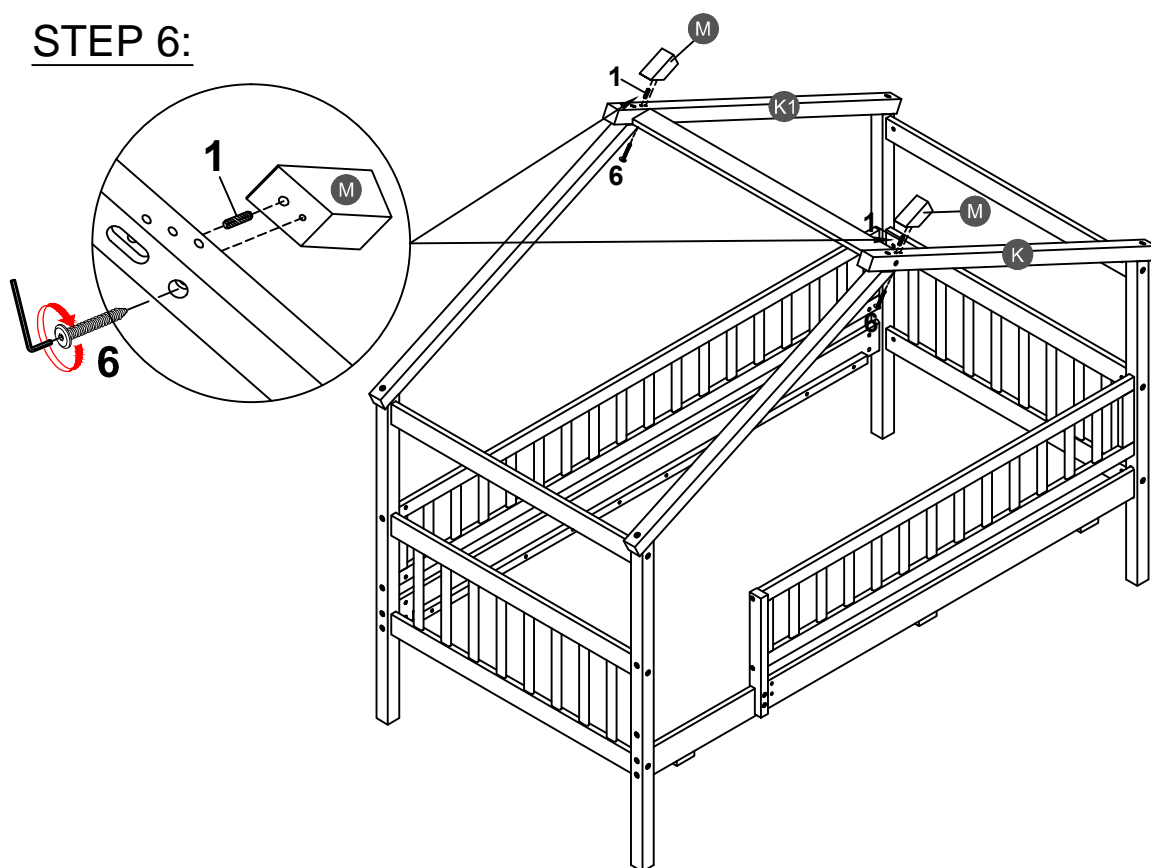

STEP 7:

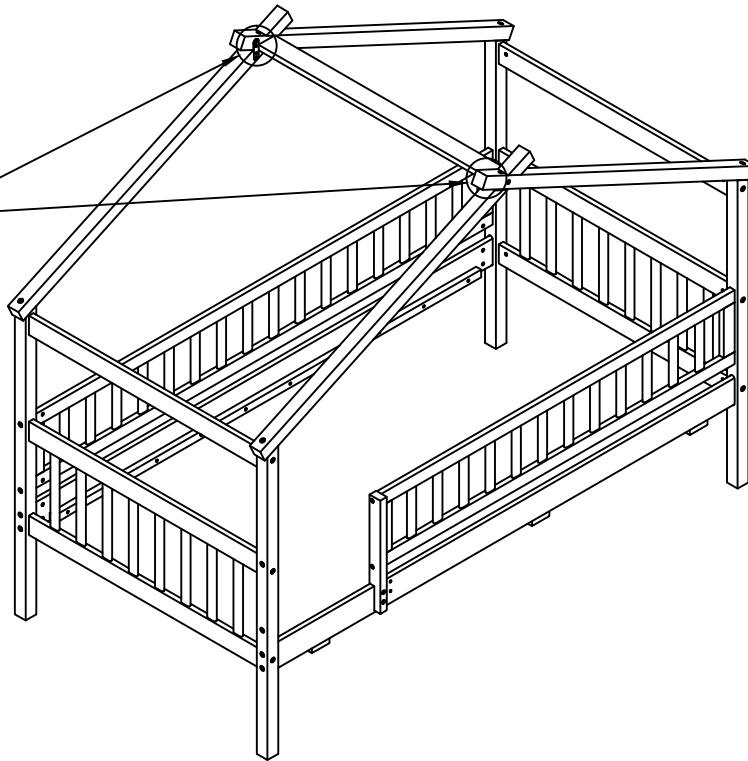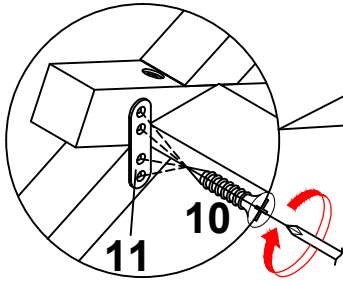

10




8PCS

11



2PCS



STEP 8:

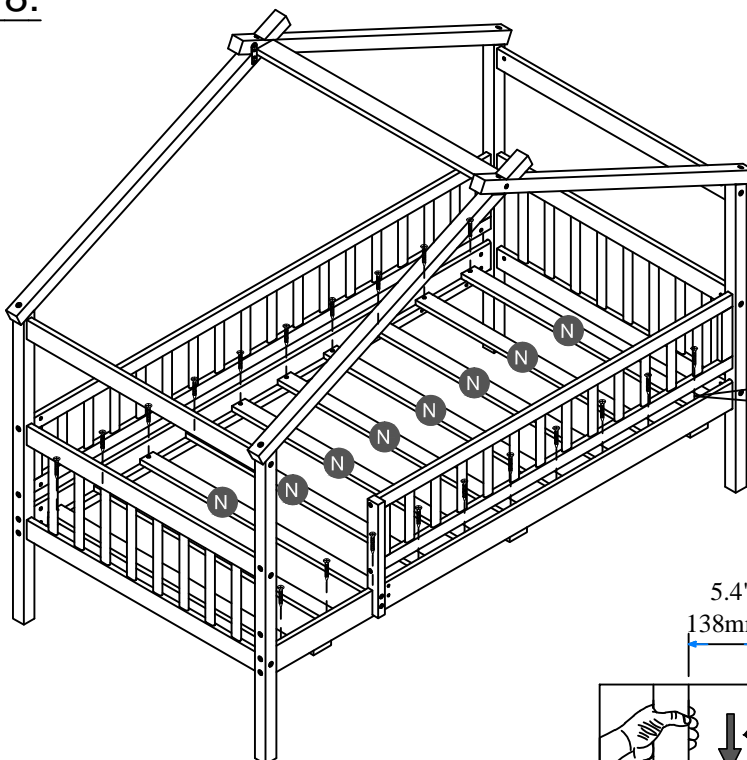

9



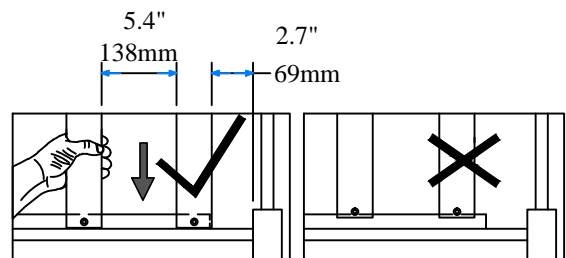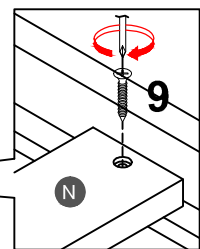


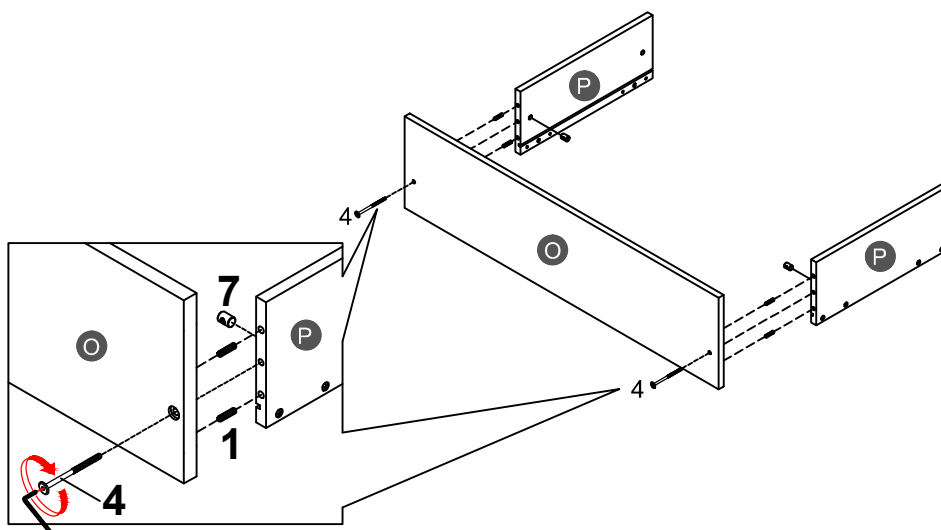
20PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.




STEP 9:


1	4	7
		
8PCS	4PCS	4PCS



x 2




STEP 10:


1	4	7
		
8PCS	4PCS	4PCS

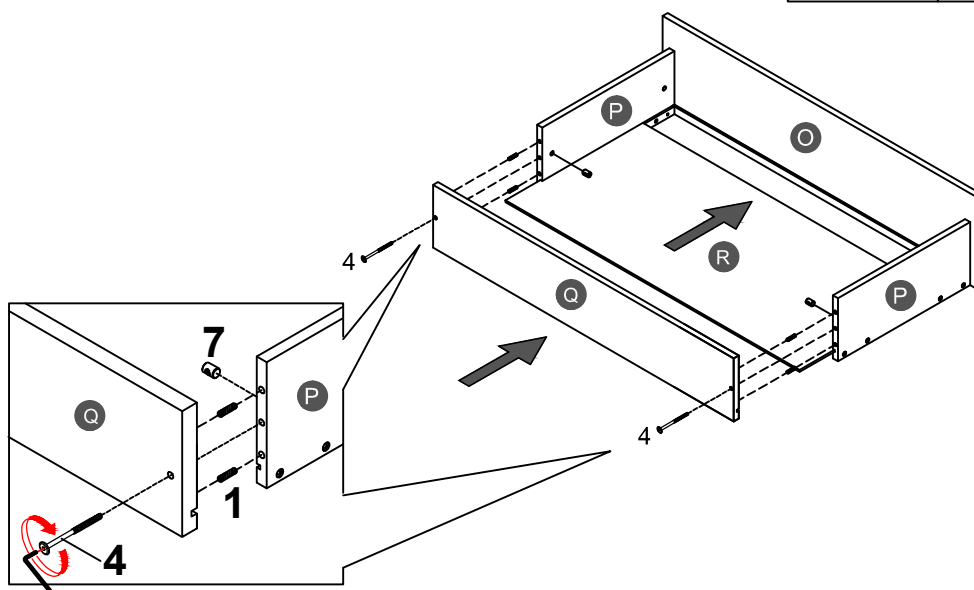


x 2

STEP 11:

9	12	14
		
16PCS	8PCS	8PCS

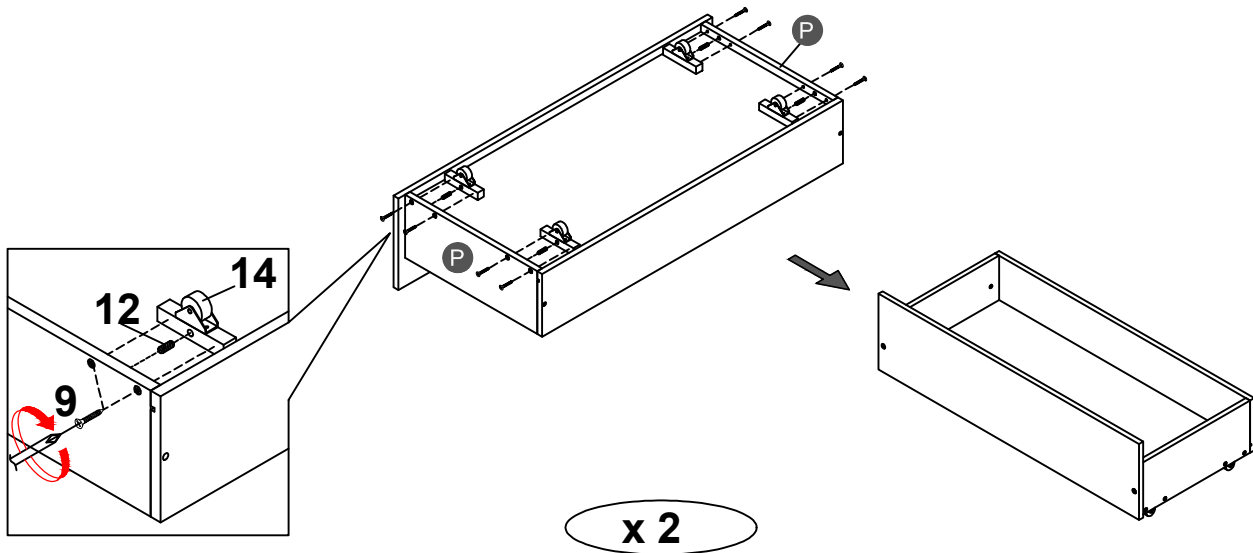

STEP 12:

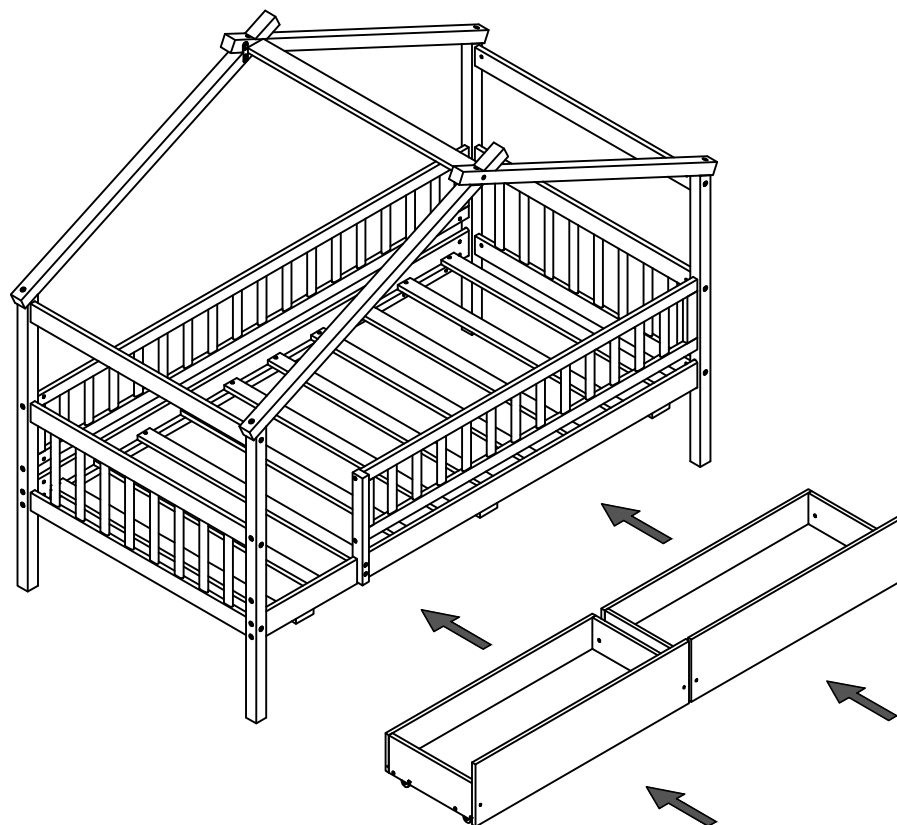

Push Drawer under the bottom of Bunk Bed.