


# INSTALLATION MANUAL

## SHOWER DOOR

HINGED FRAMELESS

---

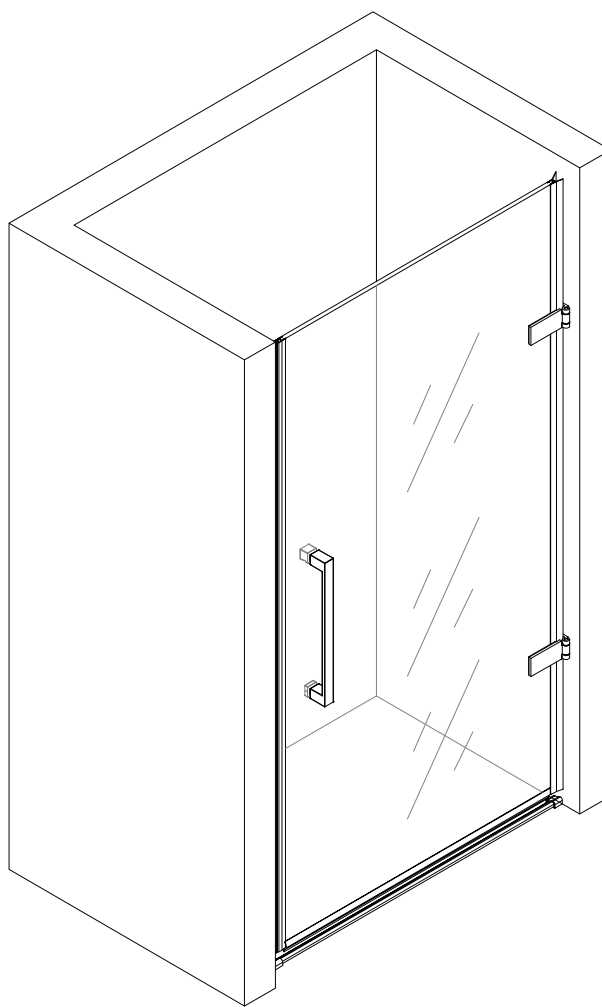

**MODEL# SDH1-24**



## **READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT**



INSTRUCTIONS THAT, IF IGNORED, COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

### **ATTENTION!**



**2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT**



**INSTALLATION OF THIS PRODUCT BY AN INEXPERIENCED INSTALLER MAY RESULT IN PERSONAL INJURY OR DEATH!**



- We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
- It is your responsibility to visit the website to download or contact customer service for the most updated version of the installation instructions.
- We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

### **NOTES:**


- Limited warranty is void on any commercial installation.
- We are not responsible for local code compliance for this product.
- Building and plumbing codes may vary from state-to-state in accordance to your location.
- We are not responsible for providing any compliance certifications.
- We are not responsible to provide any type of certifications for this product.
- Under no circumstances we shall not be liable for any and all incidental damages sustained in connection with this product Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.
- Under no circumstances We shall not be liable for any and all fees, cost defect. of installation/re-installation/removal, subsequent damage or transportation in case of the product defect.

### **ATTENTION:**


- Always rest glass on a leveled surface.
- The glass panels are tempered and cannot be cut.
- Fiberglass, acrylic or sheetrock construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface.
- By not leveling the unit during construction the unit may leak causing possible water damage.



## PARTS

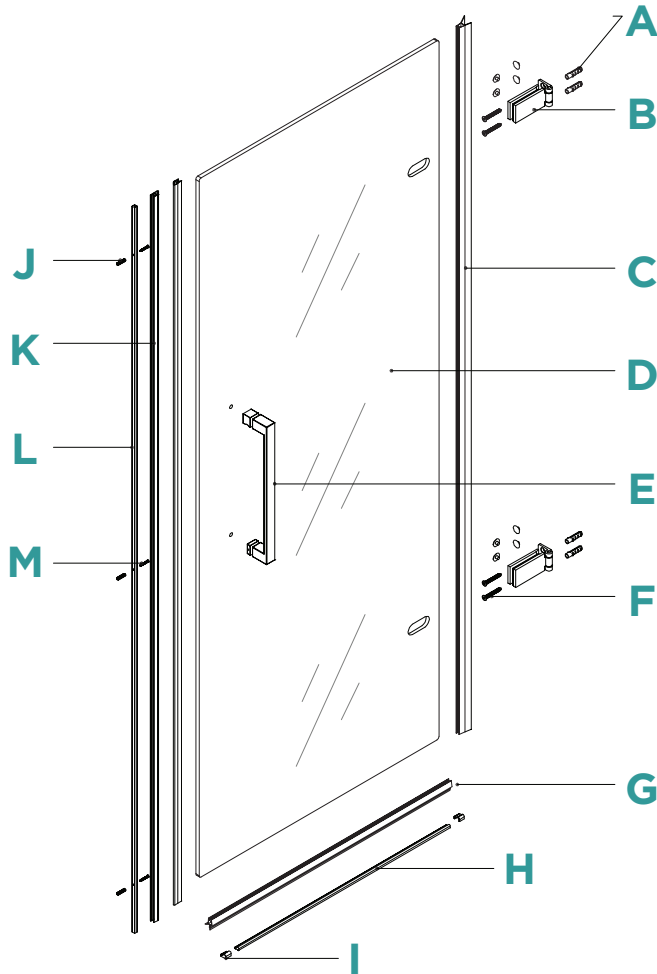


## REQUIRED TOOLS



DRILL



LEVEL



SILICON GUN



MEASURE TAPE



FLAT SCREWDRIVER



Ø6 DRILL BIT



PENCIL




PHILLIPS SCREWDRIVER



Ø8 DRILL BIT
















ALLEN KEY



UTILITY KNIFE

## COMPONENTS AND HARDWARE

During unpacking the product and prior to installation inspect your new product for any damages or missing parts. Do not attempt to install or operate the product if the product is damaged.

Part <b>A</b>		<b>4</b> Pieces	Plastic Anchor
Part <b>B</b>		<b>2</b> Pieces	Door Hinge
Part <b>C</b>		<b>1</b> Piece	Seal Strip
Part <b>D</b>		<b>1</b> Piece	Glass Door
Part <b>E</b>		<b>1</b> Piece	Door Handle
Part <b>F</b>		<b>4</b> Pieces	ST5 X 40 Screw
Part <b>G</b>		<b>1</b> Piece	Seal Strip
Part <b>H</b>		<b>1</b> Piece	Door Threshold
Part <b>I</b>		<b>2</b> Pieces	Threshold Clip
Part <b>J</b>		<b>3</b> Pieces	Plastic Anchor
Part <b>K</b>		<b>2</b> Pieces	Seal Strip
Part <b>L</b>		<b>1</b> Piece	Door Seal
Part <b>M</b>		<b>3</b> Pieces	ST4 x 30 Screw




1


## ATTACHING THE DOOR HINGES

### 1.1

Attach the door hinges (B) to the door (D) using screws included with the hinges.

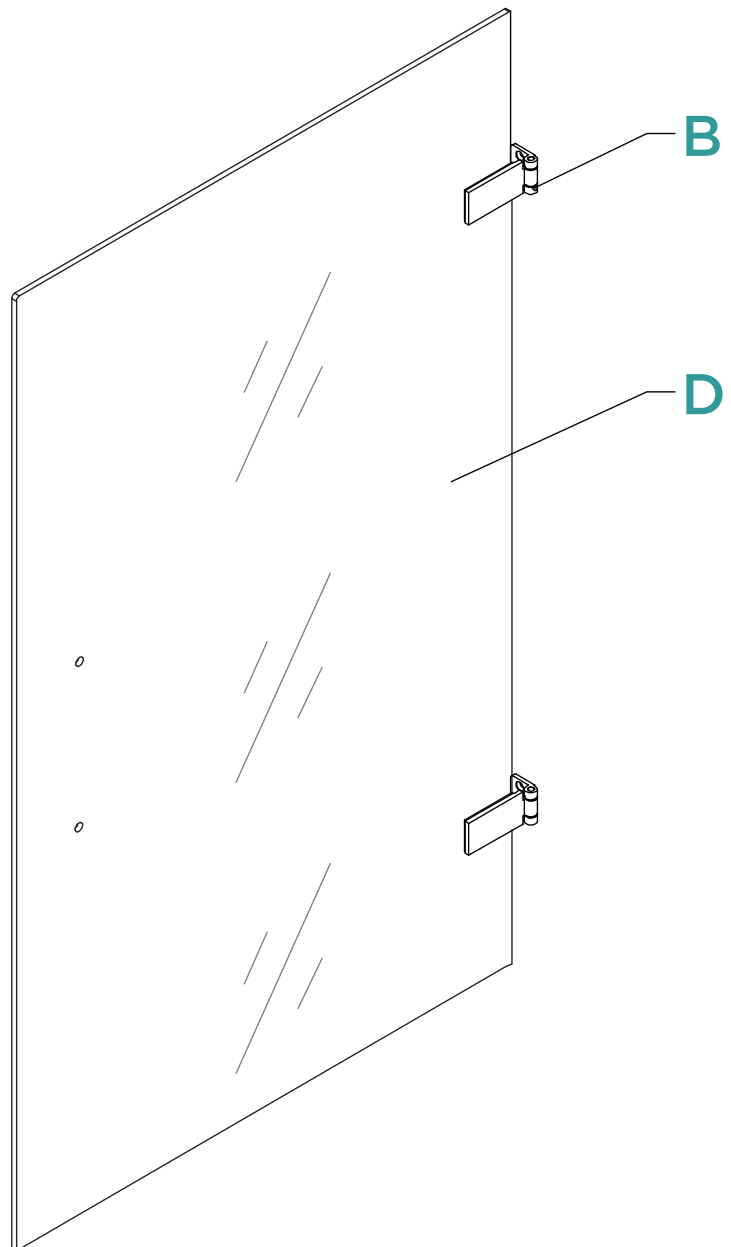

1.1

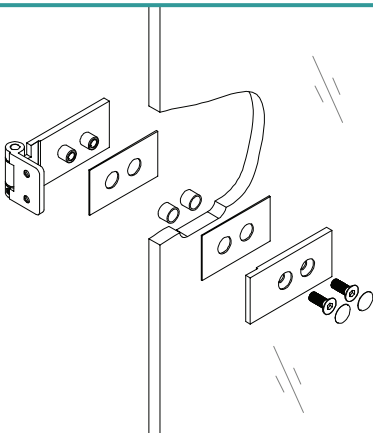



# 2

## ATTACHING THE DOOR TO THE WALL

Use a pencil to mark the two places on the wall where the screws will be inserted. Leave a 1" gap from the bottom, to insert the seal strip.

### 2.1

Use a size 8 drill bit to drill holes at the marked points.

### 2.2


Insert the wall anchors (A) into the holes using a mallet or hammer. Place the door (D) against the wall, lining up the hinges (B) with the drilled holes.

### 2.3


Attach the door hinges (B) to the wall, using screws (F).

### 2.4


Tighten with the Allen key.

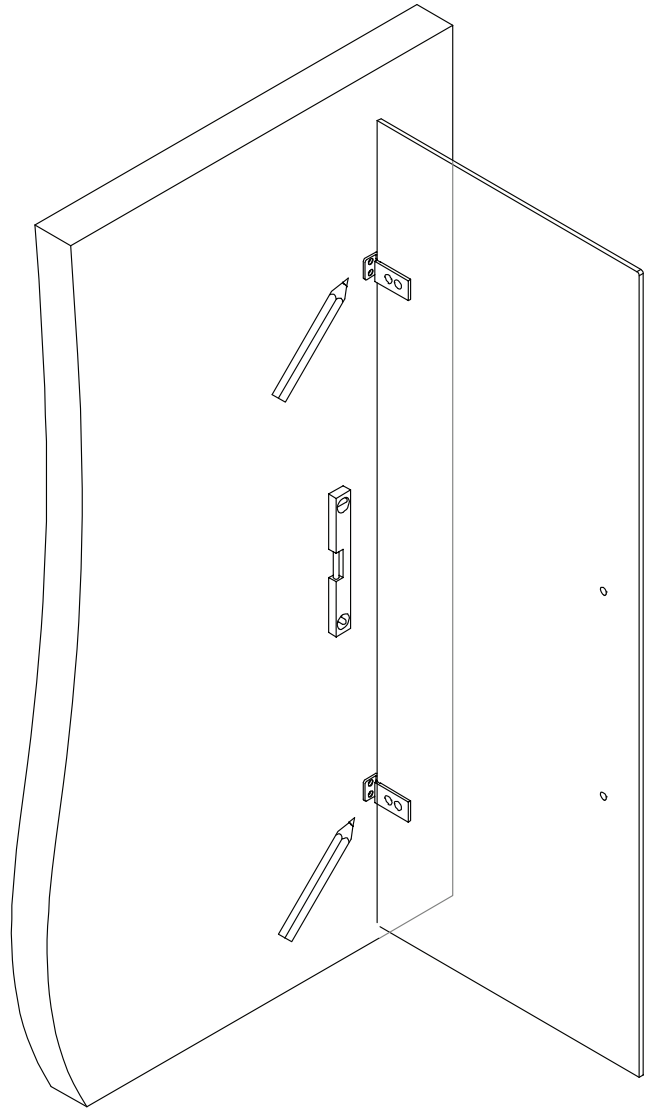


2.1

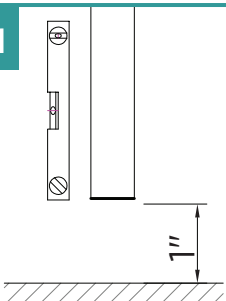


2.2

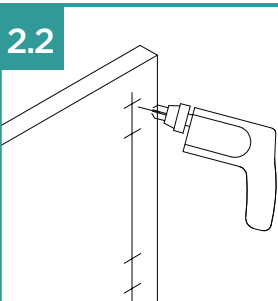


2.3

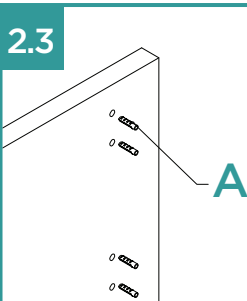

2.4

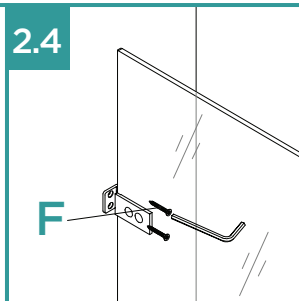

2.5

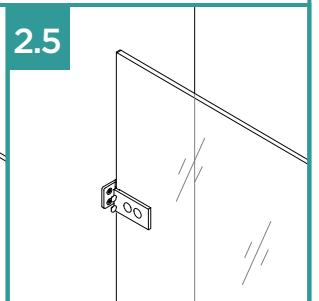



# 3

## ATTACHING DOOR SEAL STRIPS AND HANDLE

### 3.1

Attach the plastic seal strip (C) to the vertical side of the door (side of the hinges).

### 3.2


Attach the seal strip (K) to the vertical side of the door (side of the handle).

### 3.2


Attach the seal strip (G) to the horizontal lower side of the door (D).

### 3.2


Attach the handle (E) to the center of the door using screws included with the handle.

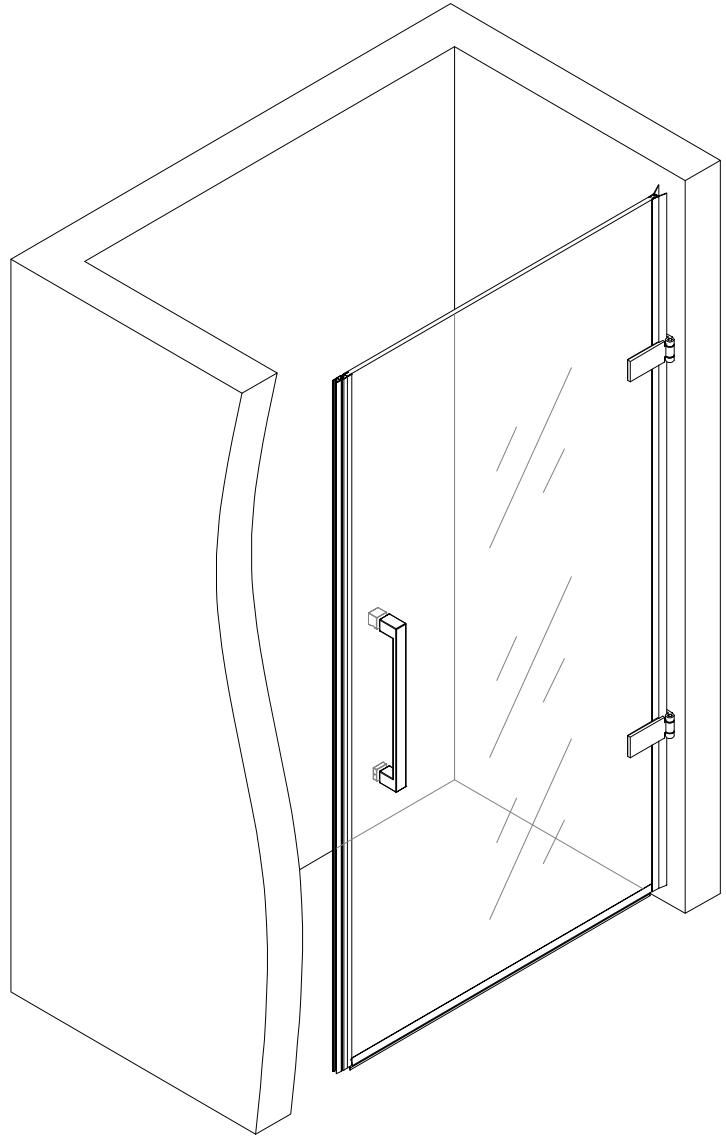


3.1

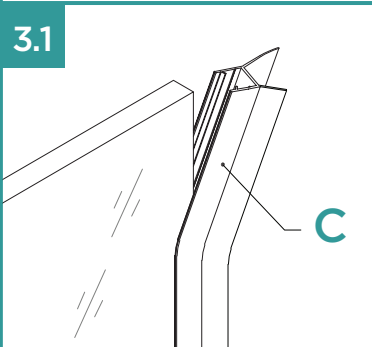


3.2

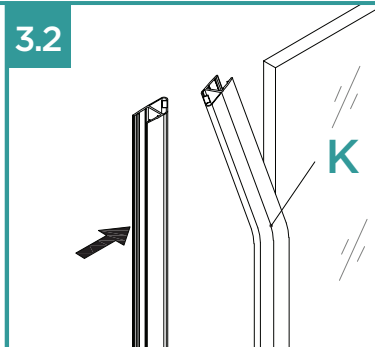

3.3

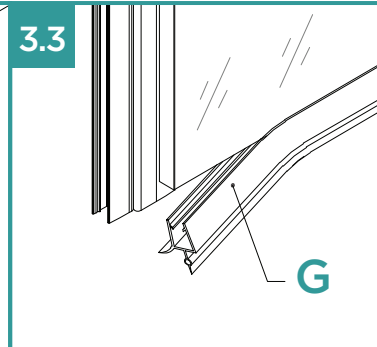

3.4

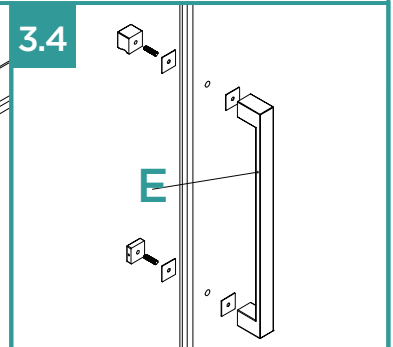



# 4

## ATTACHING THE DOOR SEAL

### 4.1

Use a pencil to trace the length of the door seal (L) on the glass.

### 4.2

Mark two points for the screws.

### 4.3


Using a drill and size 6 drill bit, drill two holes at the marked points then insert the wall anchors (J).

### 4.4


Then, insert screws (M) at those same points, using a screwdriver.

### 4.5


Attach the seal (K), as shown Below.

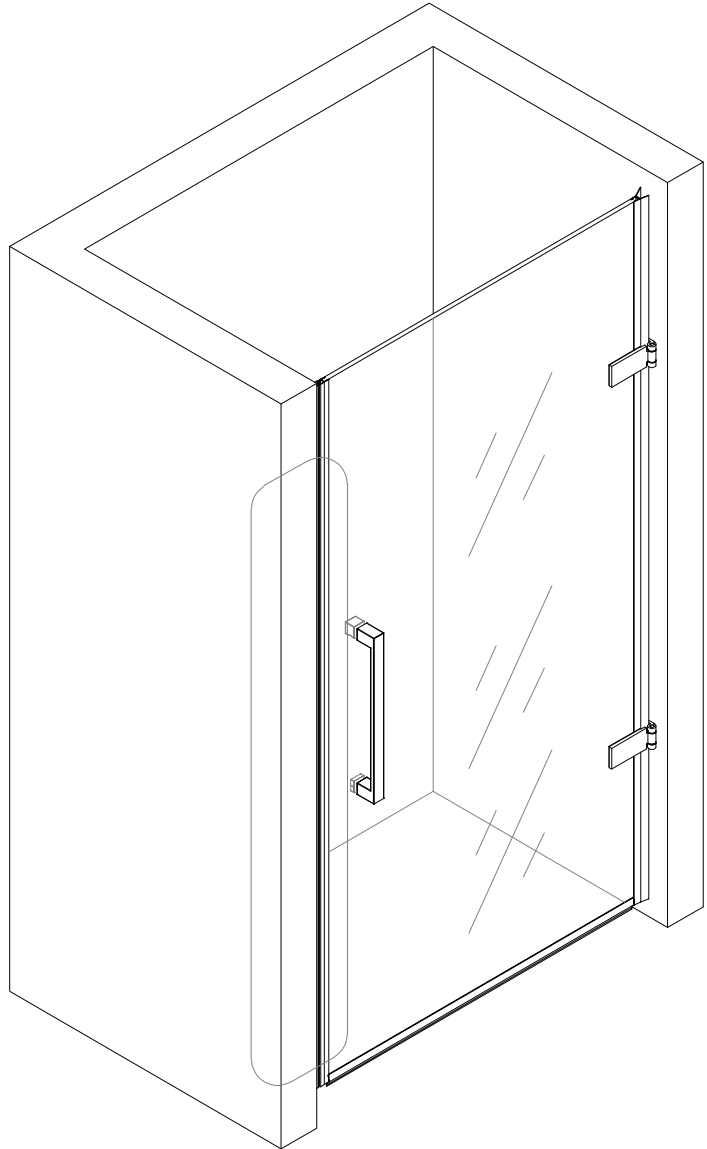


4.1

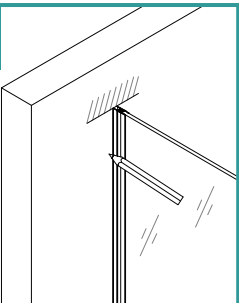


4.2

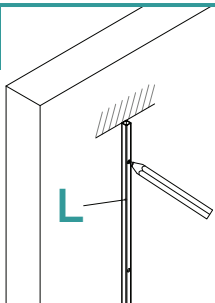


4.3

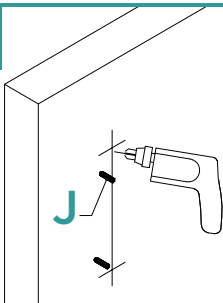

4.4

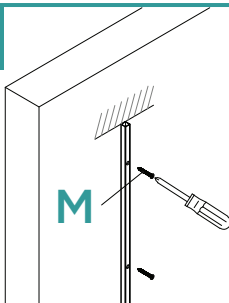

4.5

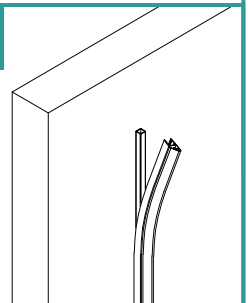



# 5


## ATTACHING THE BOTTOM THRESHOLD

### 5.1


Attach the threshold clips (I) onto the bottom threshold (H).

### 5.2


place the threshold under the door as shown.

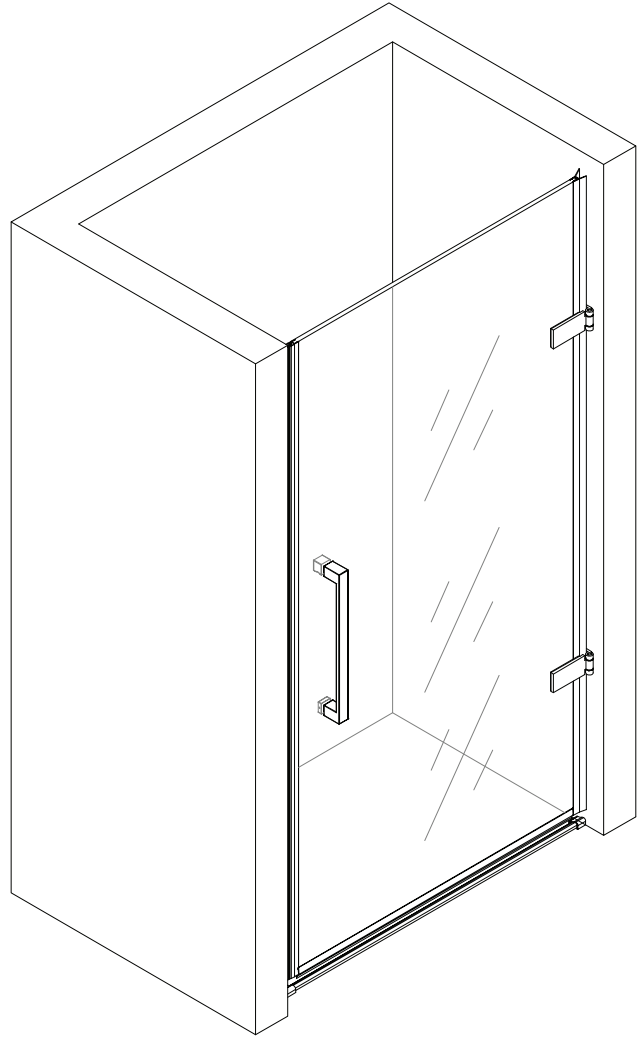

### 5.1

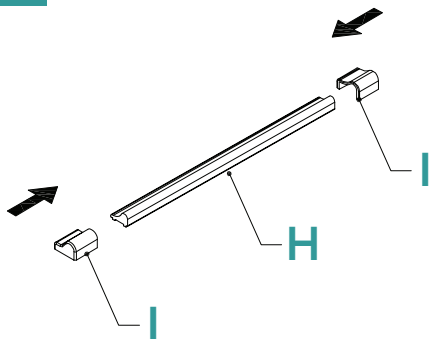

### 5.2

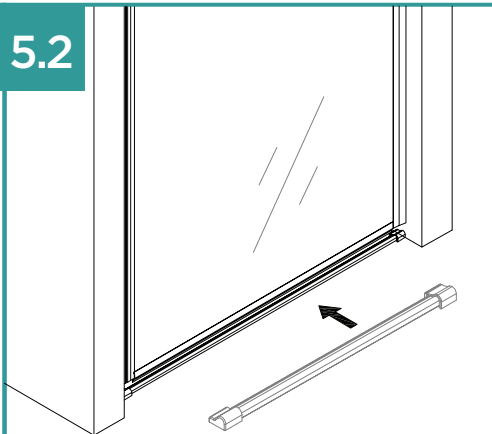






6

## SEALING THE THRESHOLD

Secure the threshold with caulking gun and high quality silicone or bathroom grade caulk.

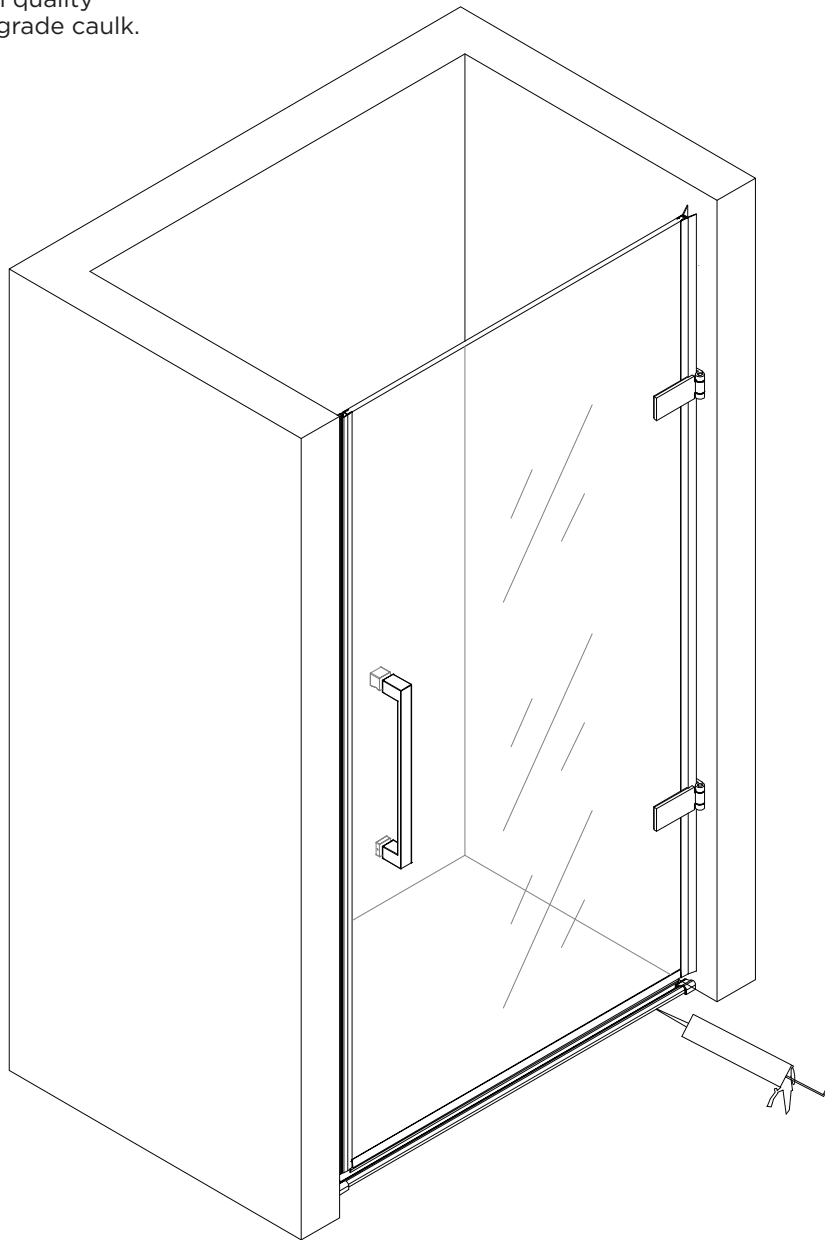




7

## DRYING THE DOOR

Leave the shower unused for 24 hours, so that it can dry completely.

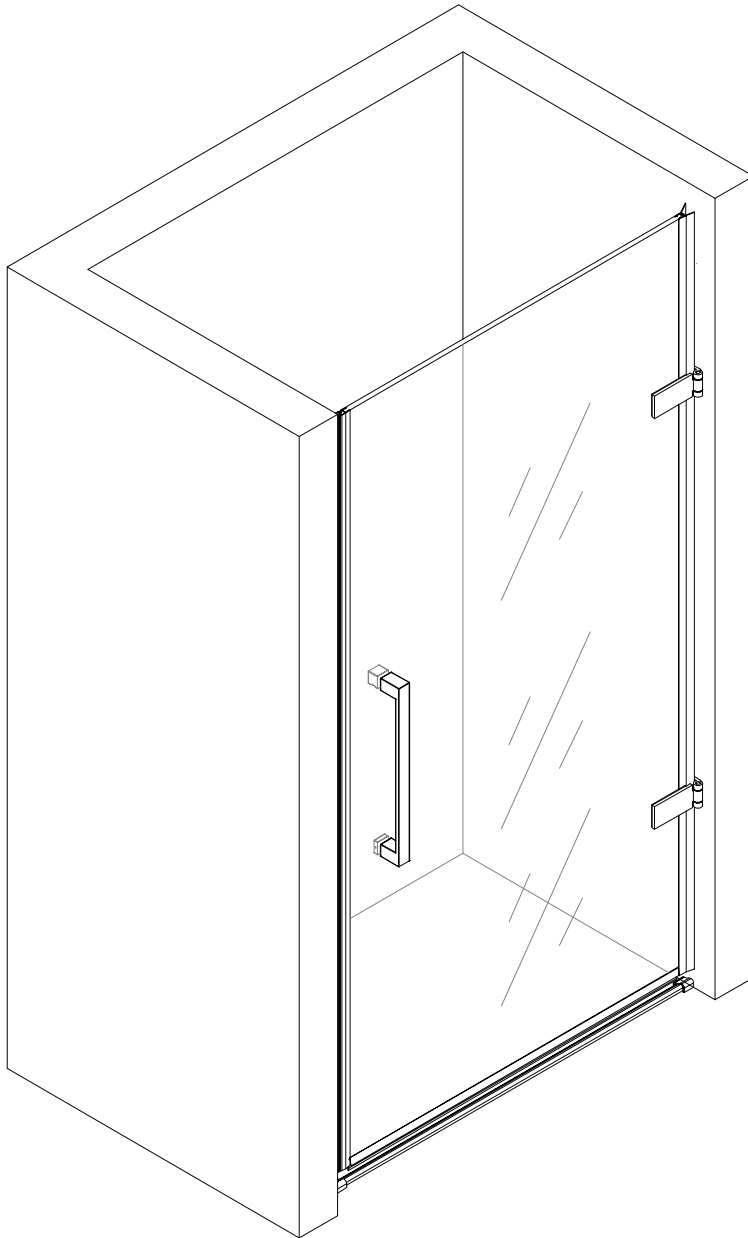

**AFTER  
INSTALLATION**



**WAIT 24 HRS  
BEFORE USE**





206 WEMBLY ROAD - NEW WINDSOR, NY 12553  
P: 718.602.6060 F: 718.963.2082 - E: INFO@FINEFIXTURES.COM  
TOLL FREE: 1.877.8FIXTURES  
[FINEFIXTURES.COM](http://FINEFIXTURES.COM)

