



Side table

Y00J09

Assembly Instructions

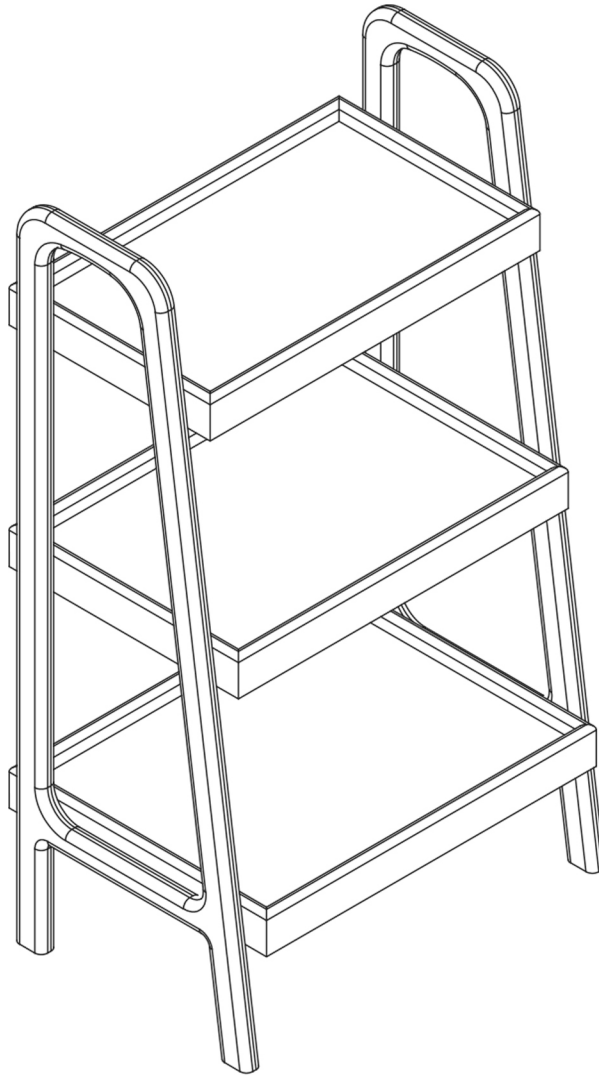

Step 1:
Lock the screws in sequence according to the corresponding hole positions.

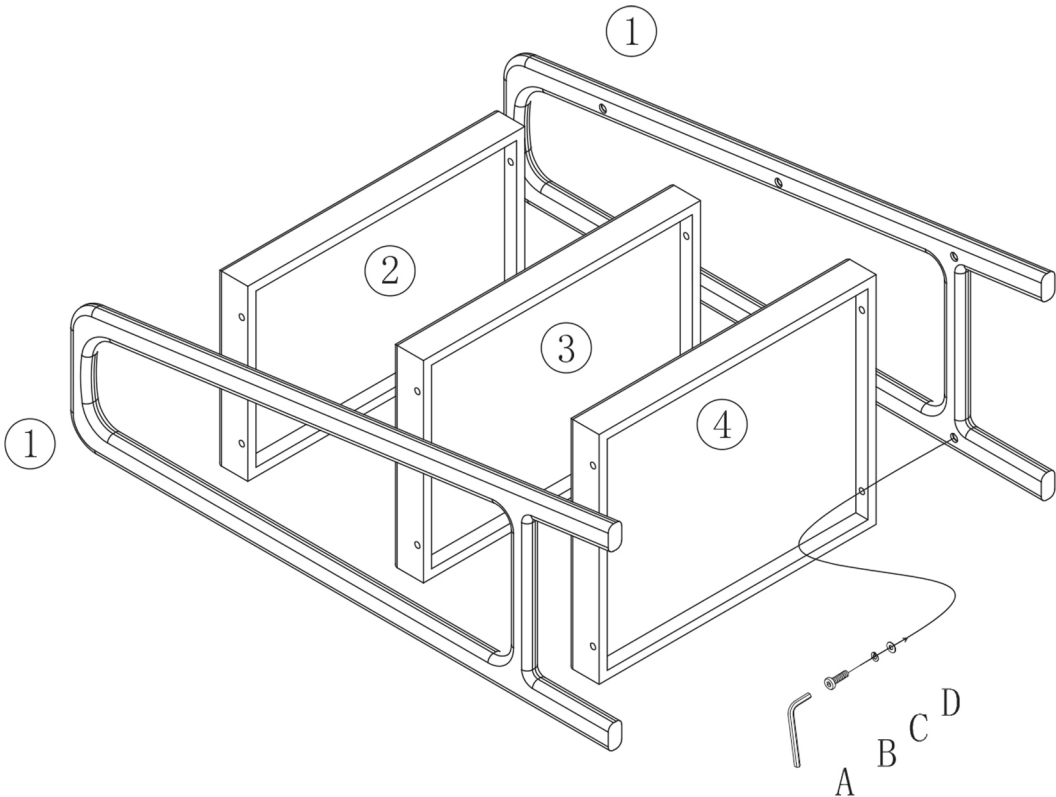

			
A. Allen key 4# = 1	B. Screw M6*25 = 12	C. Spring pad ø6 = 12	D. Flat pad ø6 = 12