


HZQD-V1


FTOFBC-6007














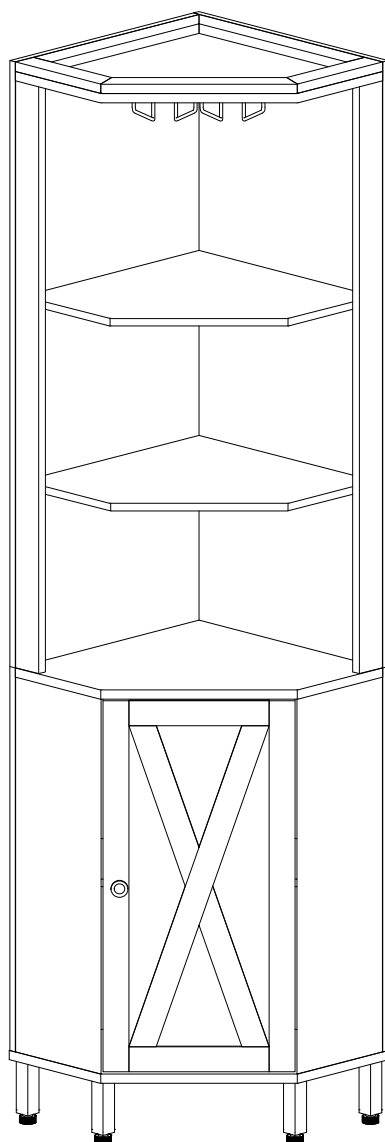


## BOOKSHELF

Notice :


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

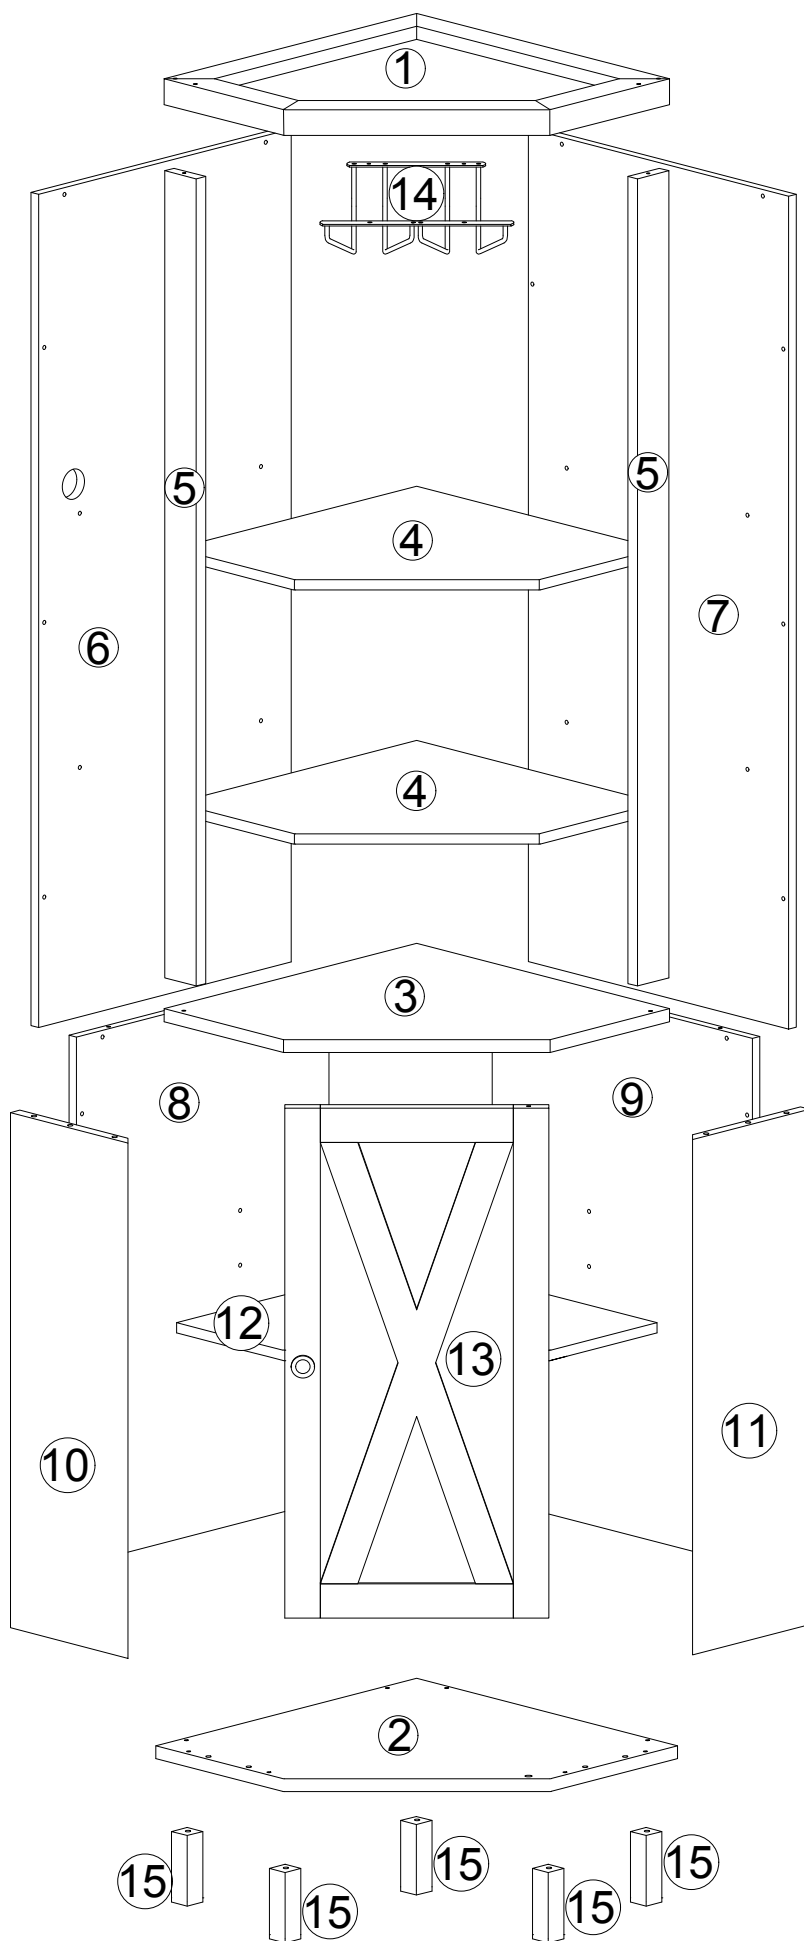

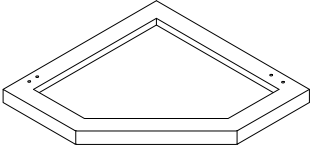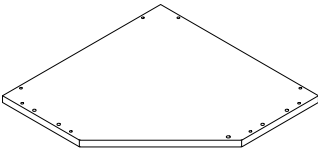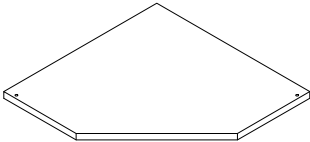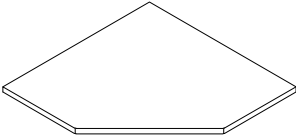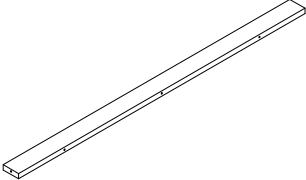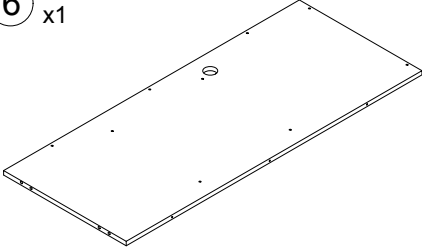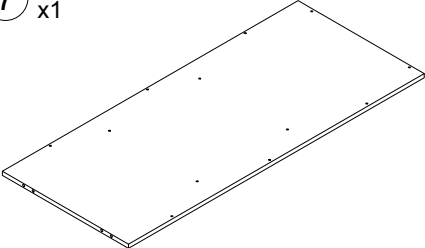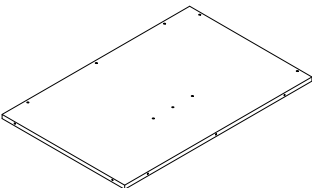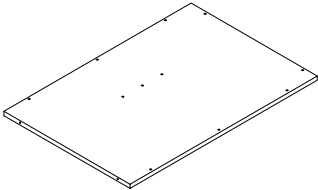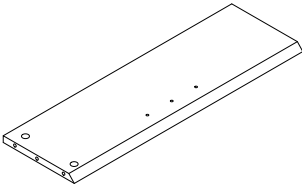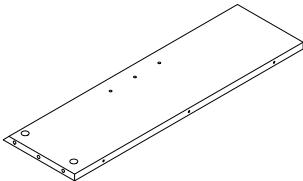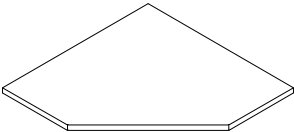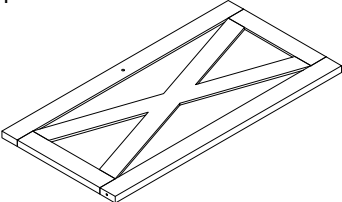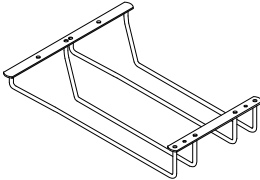
|                                                                                                     |                                                                                                     |                                                                                                       |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| <b>1</b> x1<br>    | <b>2</b> x1<br>    | <b>3</b> x1<br>    |
| <b>4</b> x2<br>    | <b>5</b> x2<br>    | <b>6</b> x1<br>    |
| <b>7</b> x1<br>     | <b>8</b> x1<br>    | <b>9</b> x1<br>    |
| <b>10</b> x1<br>  | <b>11</b> x1<br> | <b>12</b> x1<br> |
| <b>13</b> x1<br> | <b>14</b> x1<br> | <b>15</b> x5<br> |

## Attention

use the proper screws to avoid damaging the parts

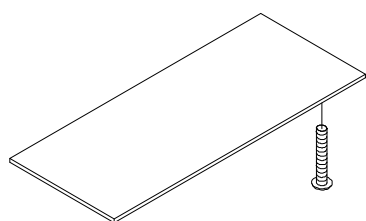


example

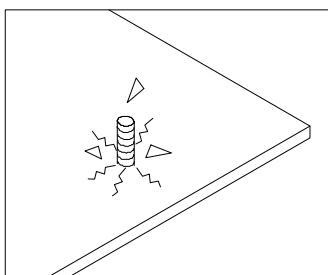
















✗

Wrong screws can cause the plank to crack

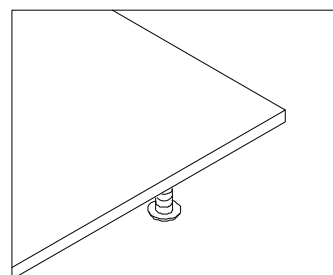


✓

The right screw is the right size
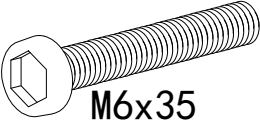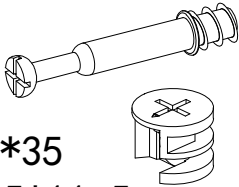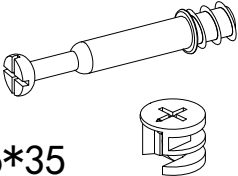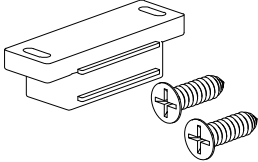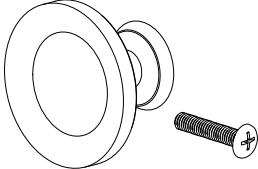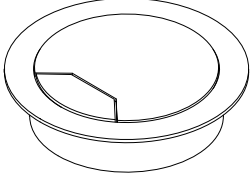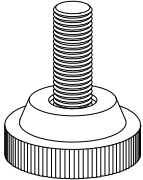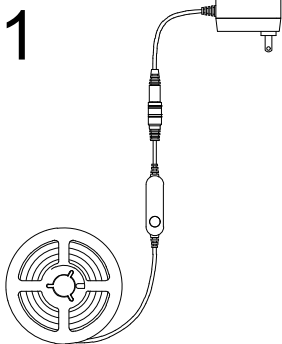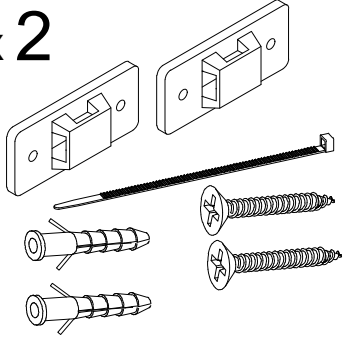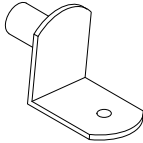
|                                                                                                                                 |                                                                                                                                 |                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>A x46+2</b></p>  <p>ø5x40</p>            | <p><b>B x5+1</b></p>  <p>M6x35</p>             | <p><b>C x4+1</b></p>  <p>M6*35<br/>ø15*11.5</p> |
| <p><b>D x4+1</b></p>  <p>M6*35<br/>ø12*9.5</p> | <p><b>E x8+1</b></p>  <p>ø6x35</p>             | <p><b>F x10+2</b></p>  <p>M3.5*12</p>           |
| <p><b>G x1</b></p>  <p>M3.0*16</p>            | <p><b>H x1</b></p>                            | <p><b>I x1+1</b></p>                           |
| <p><b>J x1+1</b></p>                         | <p><b>K x1</b></p>  <p>M4*22</p>             | <p><b>L x1</b></p>  <p>ø50</p>                |
| <p><b>M x5</b></p>  <p>ø30*M6x15</p>         | <p><b>N x1</b></p>                           | <p><b>O x2</b></p>                            |
| <p><b>P x4+1</b></p>                         | <p><b>Q x1</b></p>  <p>M3x57      M4x57</p> |                                                                                                                                    |


## STEP 1

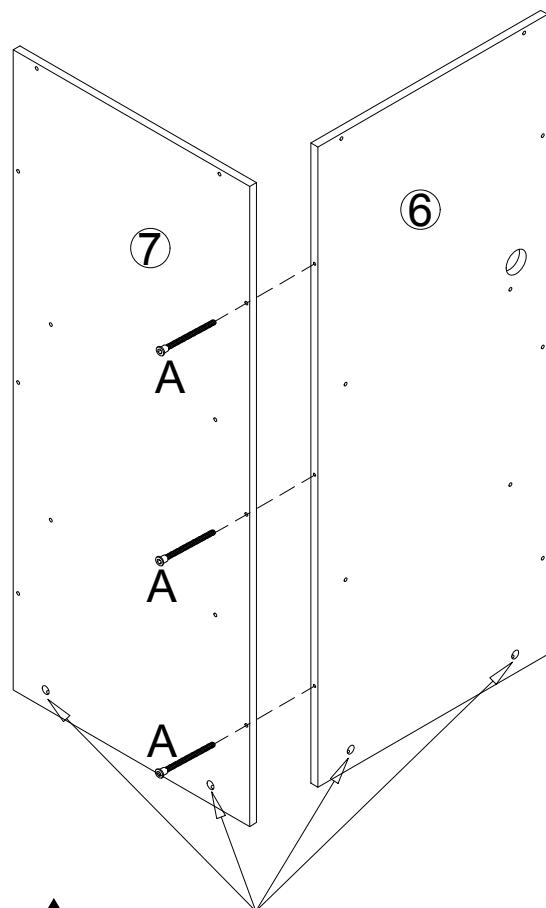

Notice the four large holes at the bottom


|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |   | 3mm |
| A |  | x3  |

## STEP 2

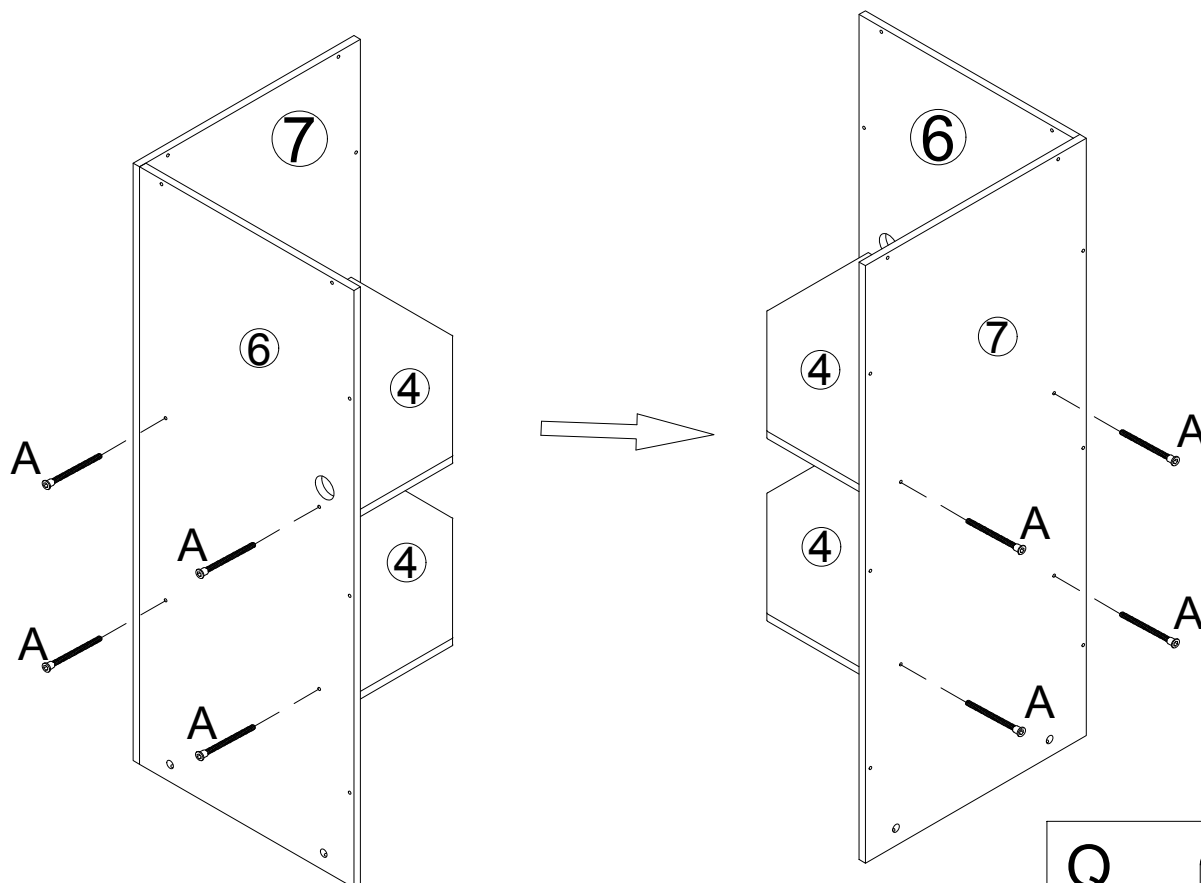


|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |  | 3mm |
| A |  | x8  |


STEP 3

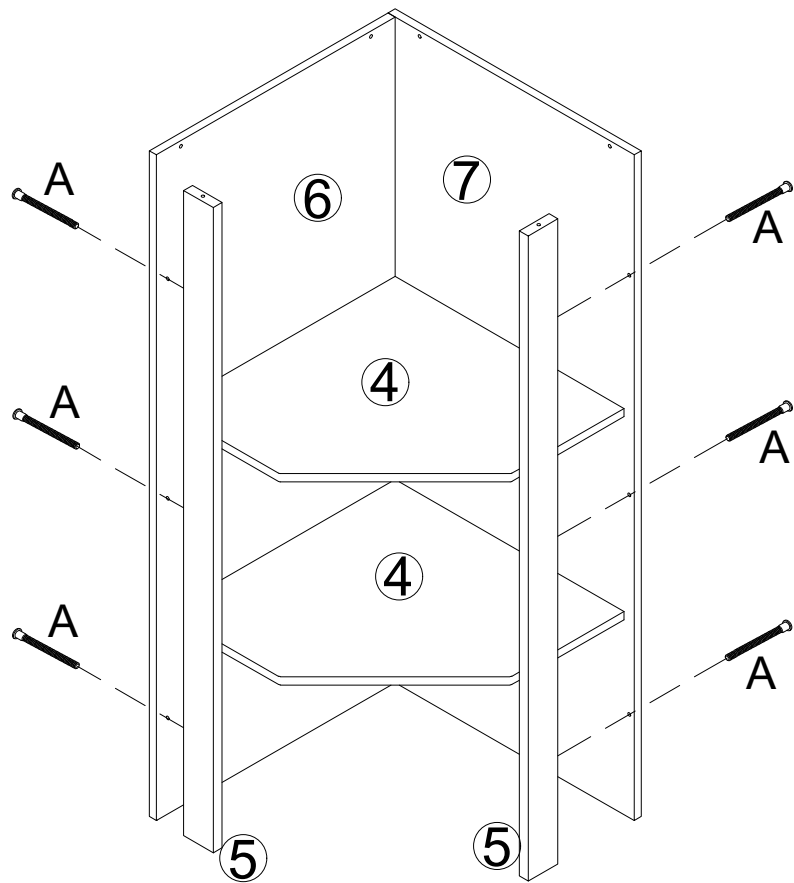


|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |   | 3mm |
| A |  | x6  |

STEP 4

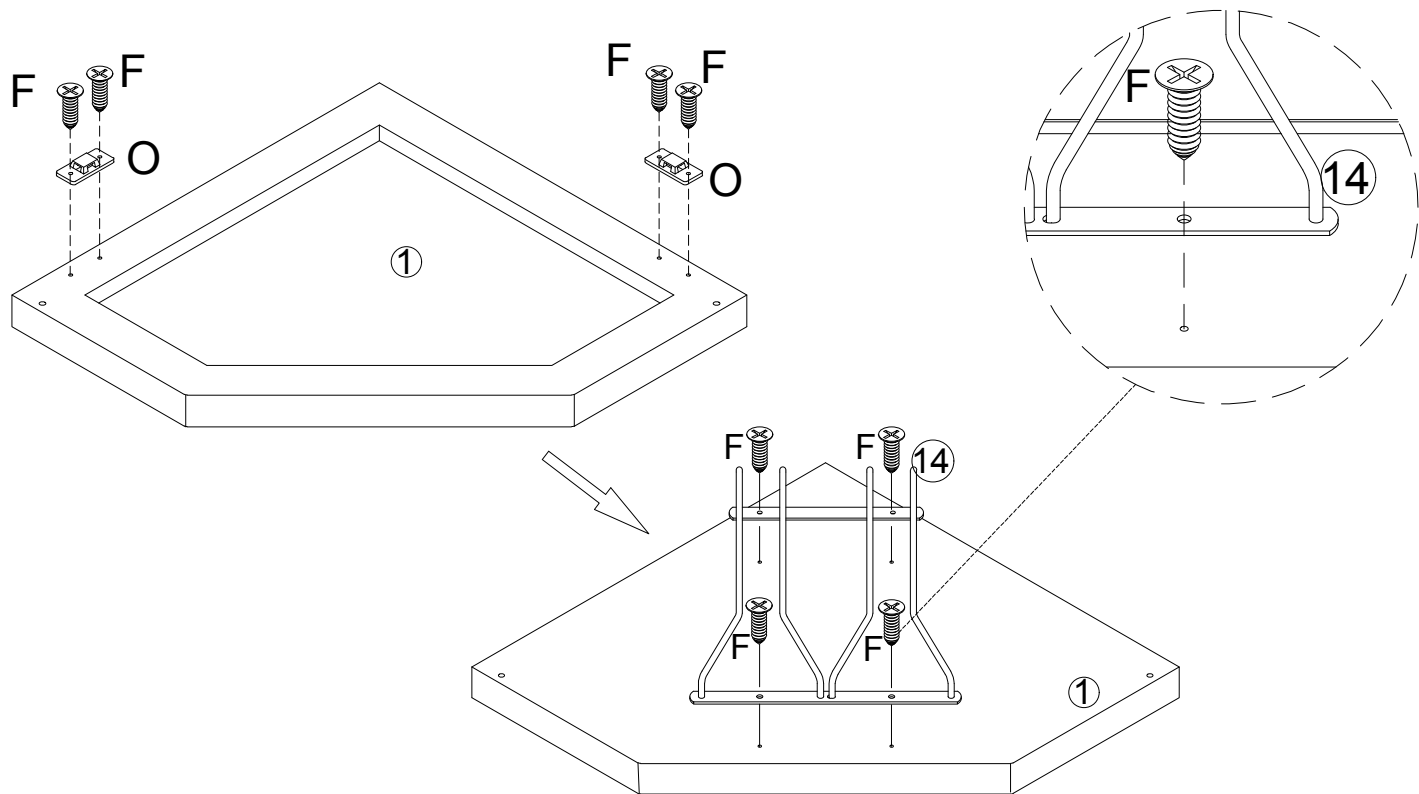




|   |                                                                                       |    |
|---|---------------------------------------------------------------------------------------|----|
| O |   | x2 |
| Q |  |    |
| F |  | x8 |



## STEP 5

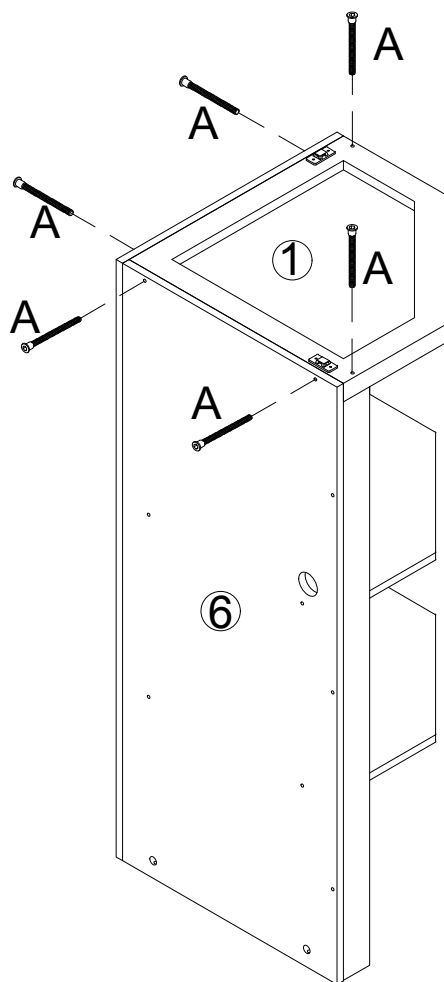


|          |                                                                                       |     |
|----------|---------------------------------------------------------------------------------------|-----|
| <b>Q</b> |   | 3mm |
| <b>A</b> |  | x6  |

## STEP 6

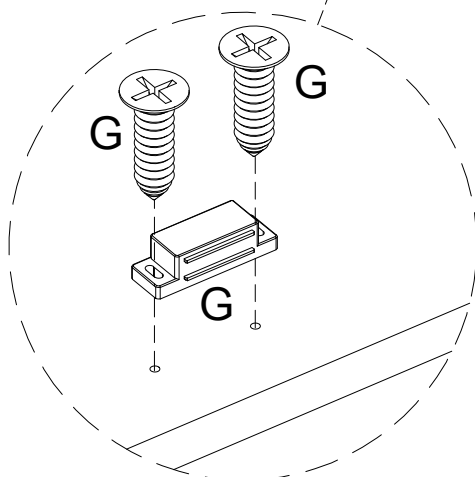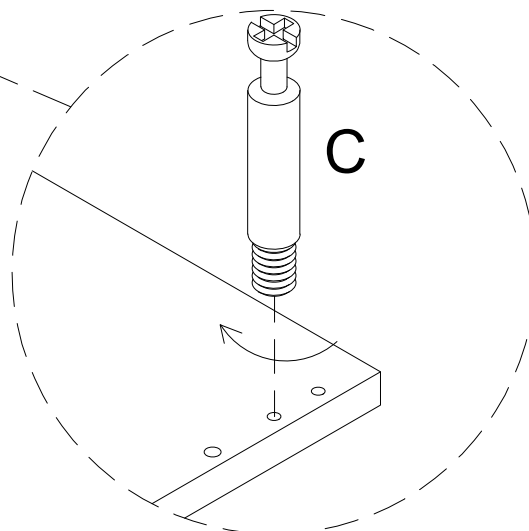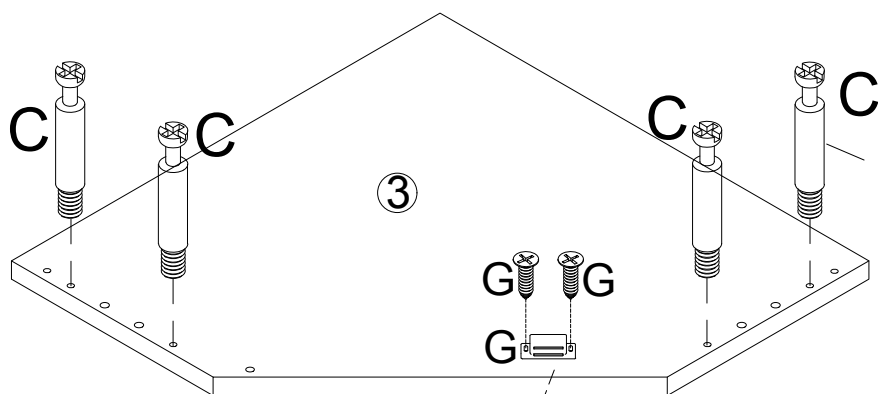


|          |                                                                                       |    |
|----------|---------------------------------------------------------------------------------------|----|
| <b>Q</b> |  |    |
| <b>C</b> |  | x4 |
| <b>G</b> |  | x2 |
| <b>G</b> |  | x1 |

## STEP 7

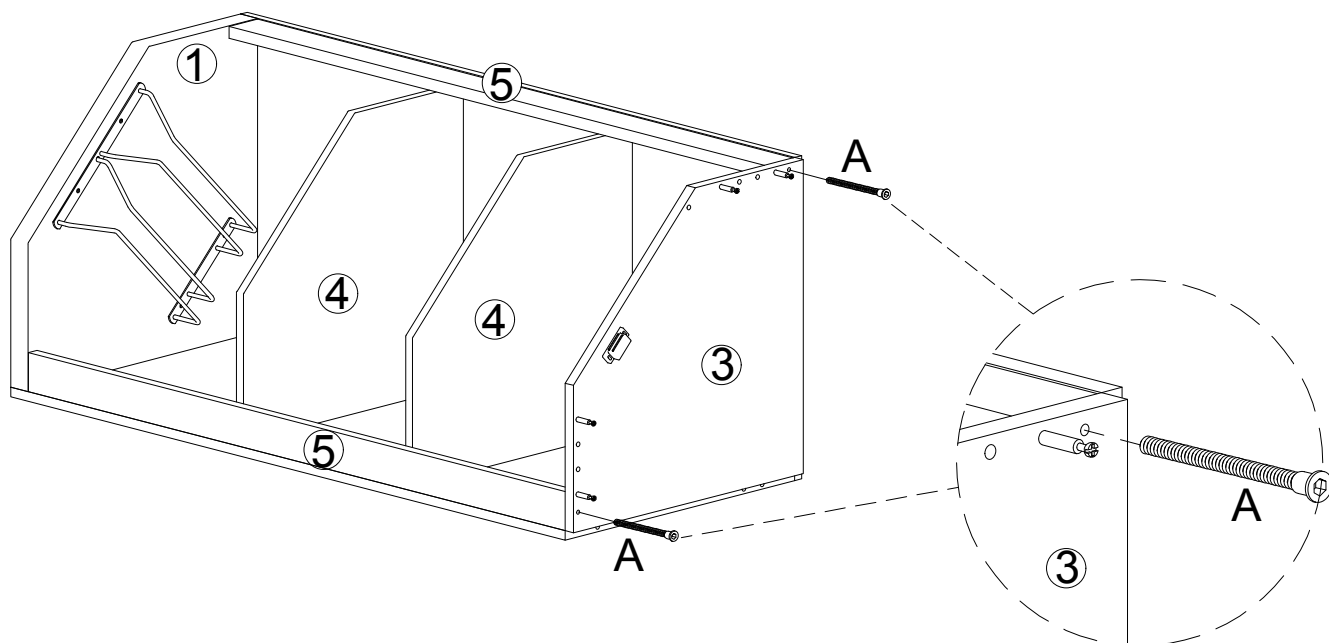

|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |   | 3mm |
| A |  | x2  |

## STEP 8

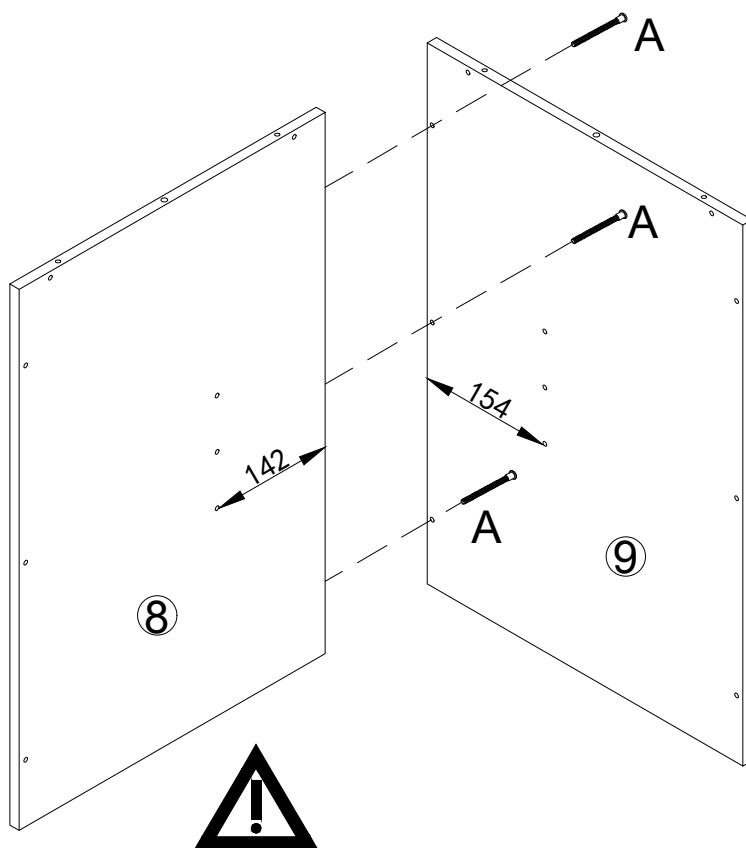


Pay attention to the hole spacing. Do not install it, otherwise it will be impossible to assemble.

|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |  | 3mm |
| A |  | x3  |



## STEP 9

Note the direction  
of the hypotenuse

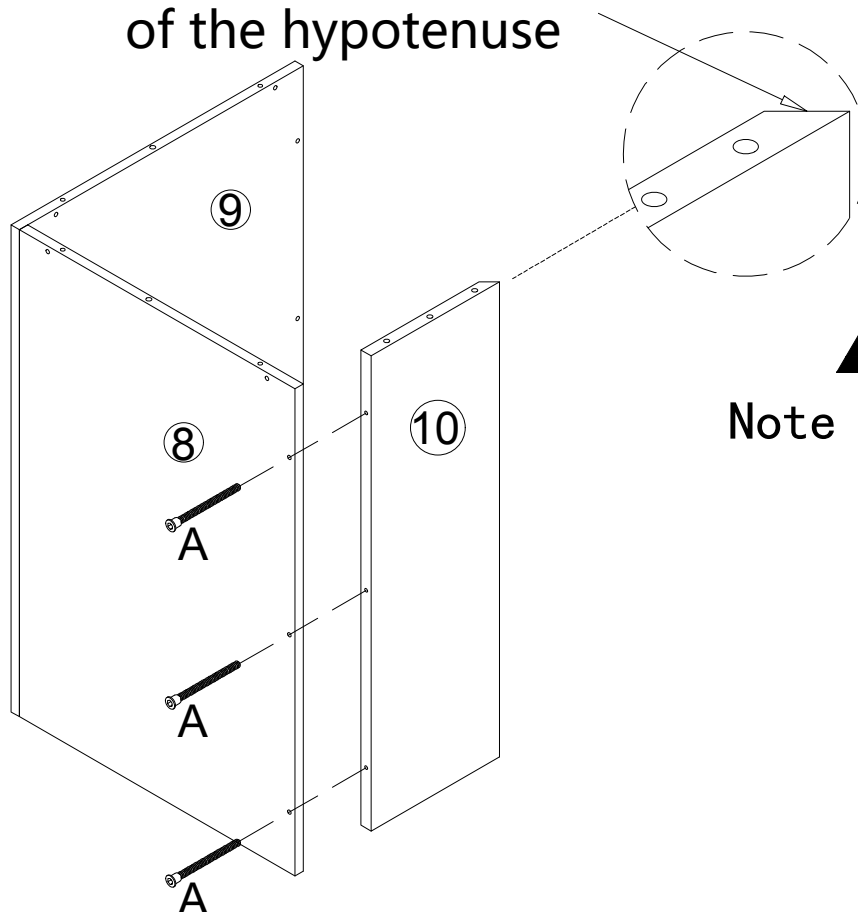


Note the bevel

|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |   | 3mm |
| A |  | x3  |

## STEP 10


Note the direction  
of the hypotenuse

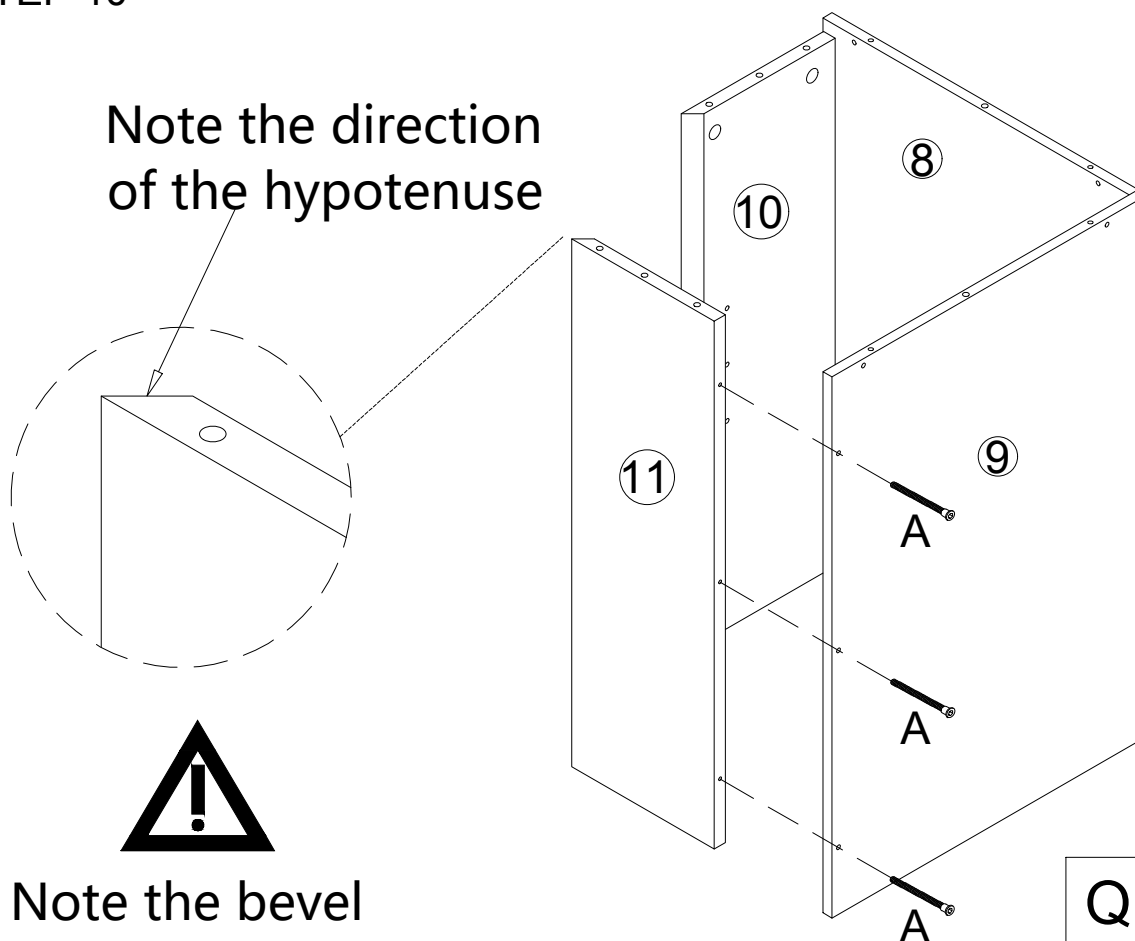


Note the bevel

|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| Q |  | 3mm |
| A |  | x3  |


## STEP 11

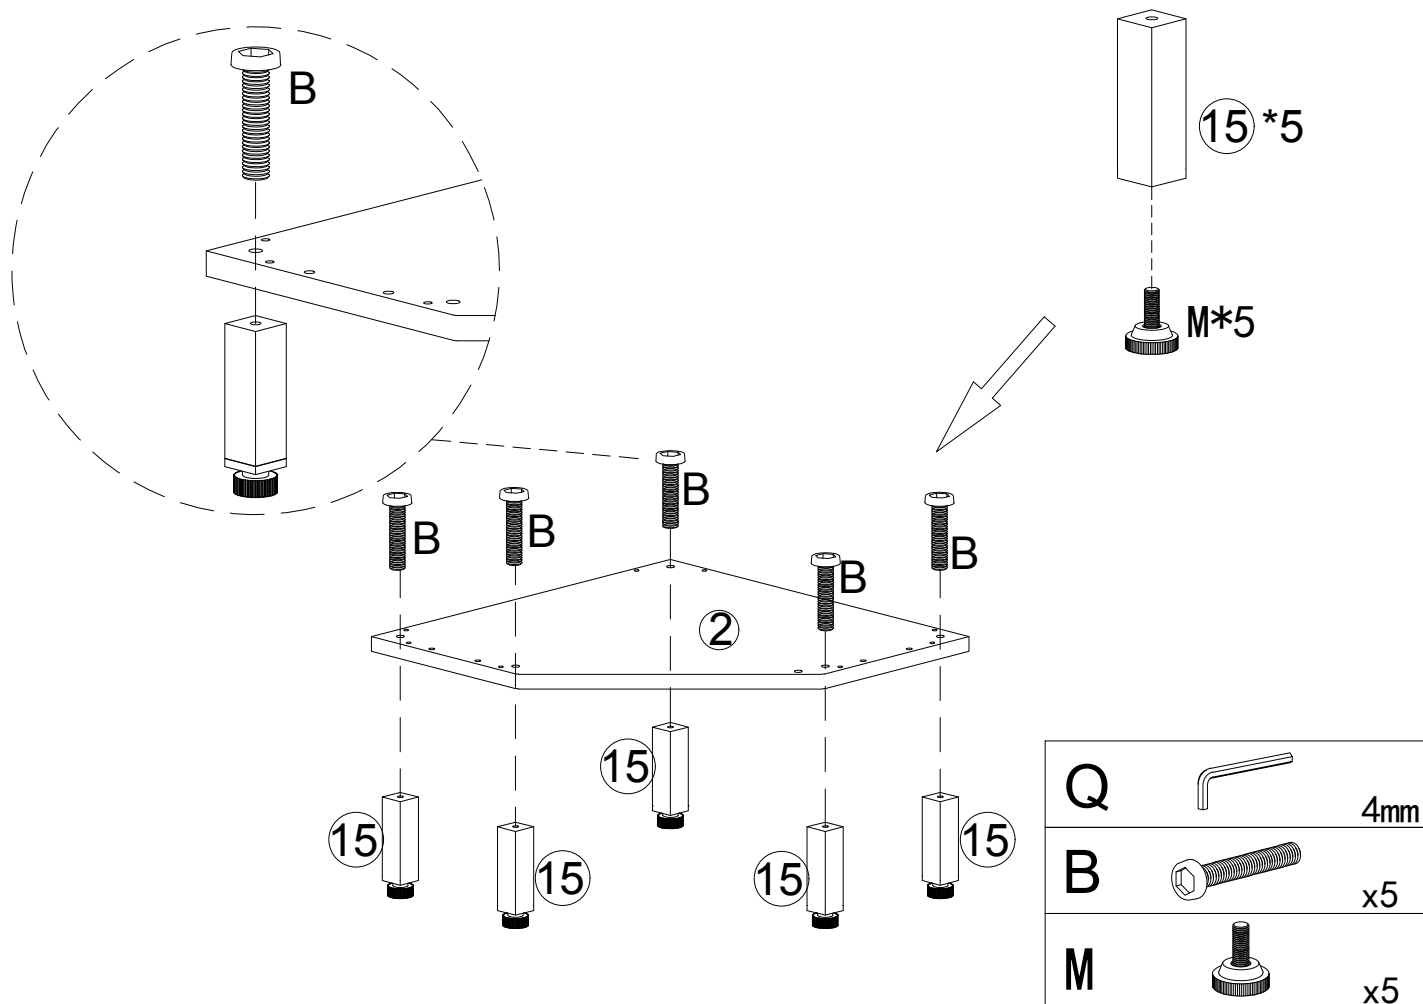


## STEP 12

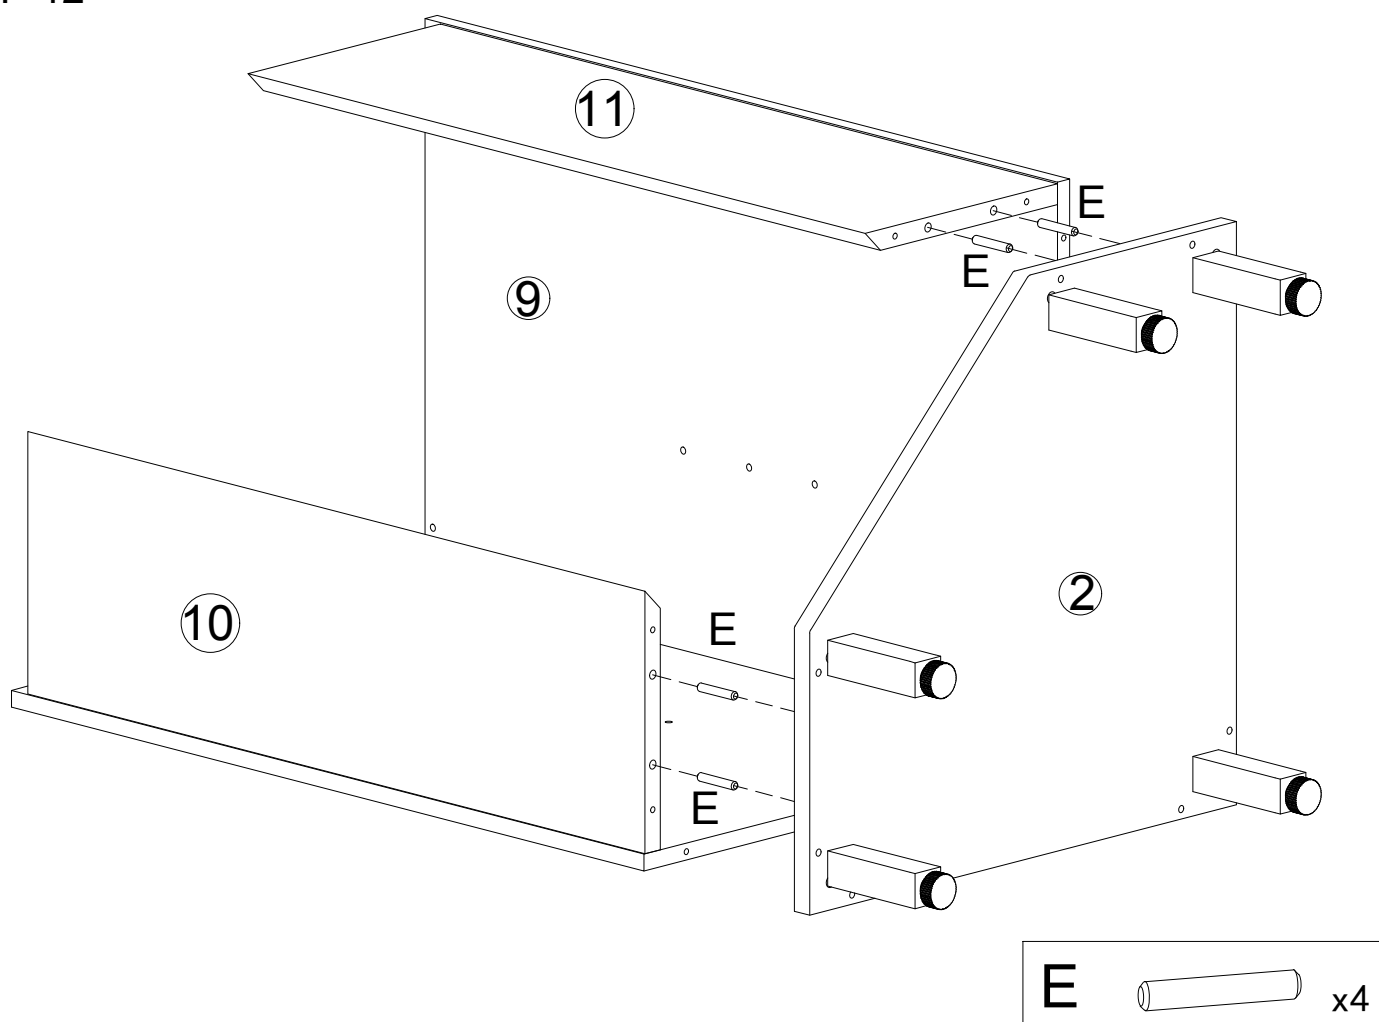


## STEP 13

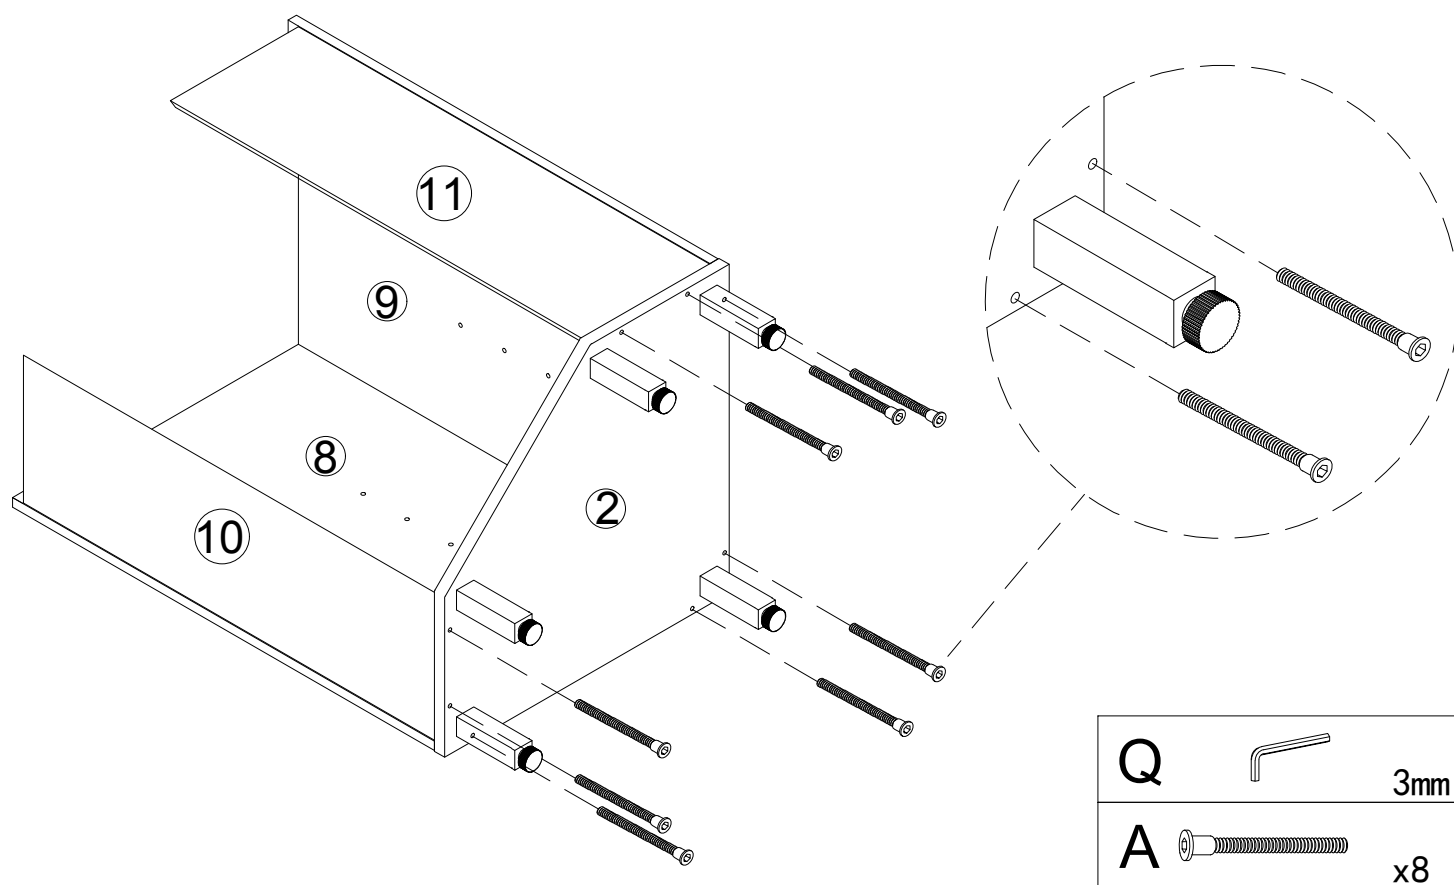

## STEP 14

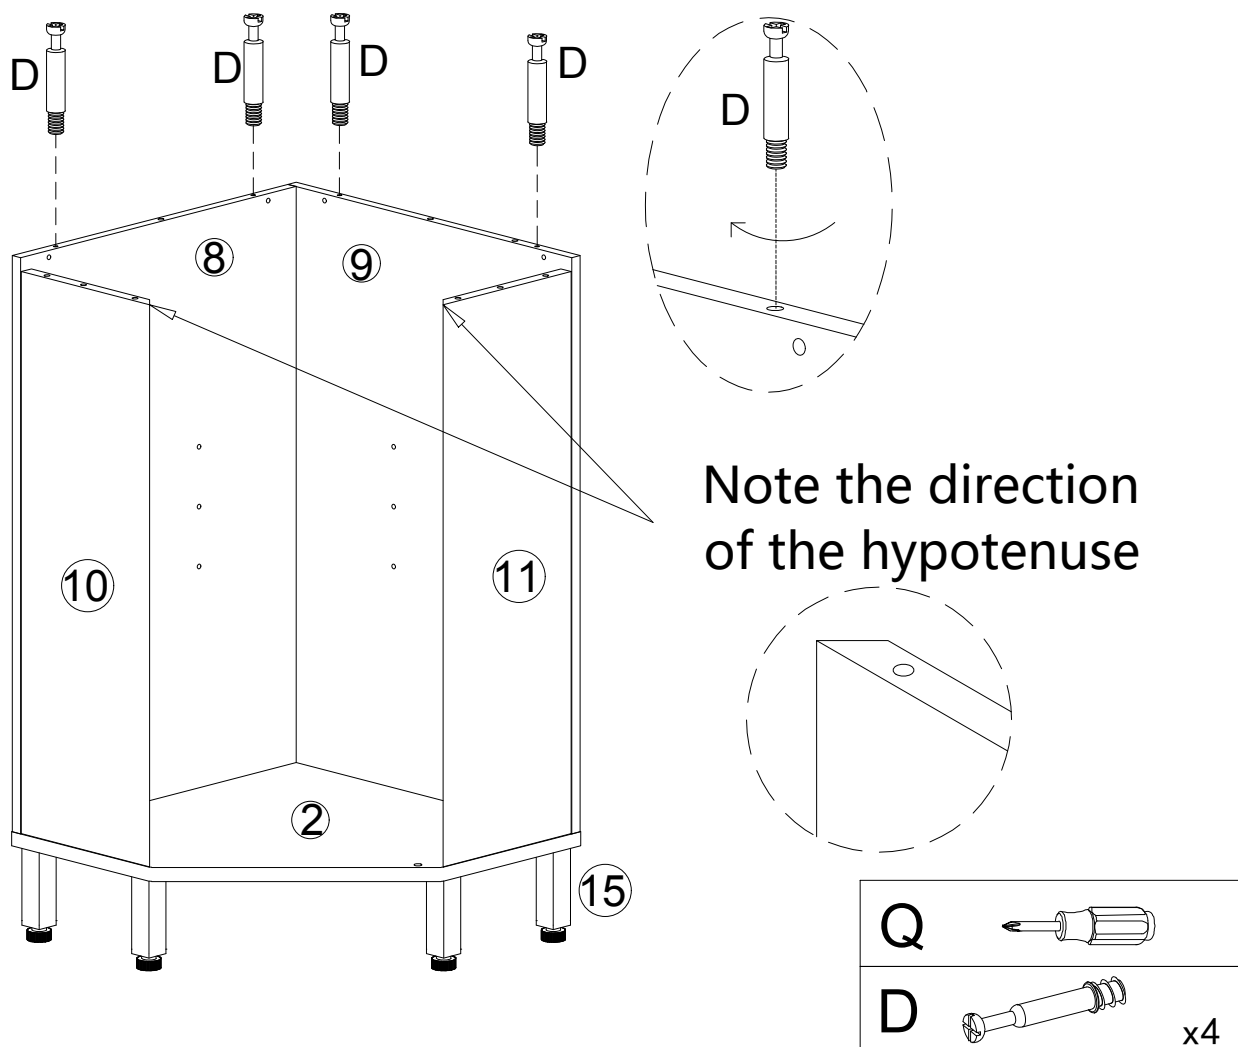

## STEP 15



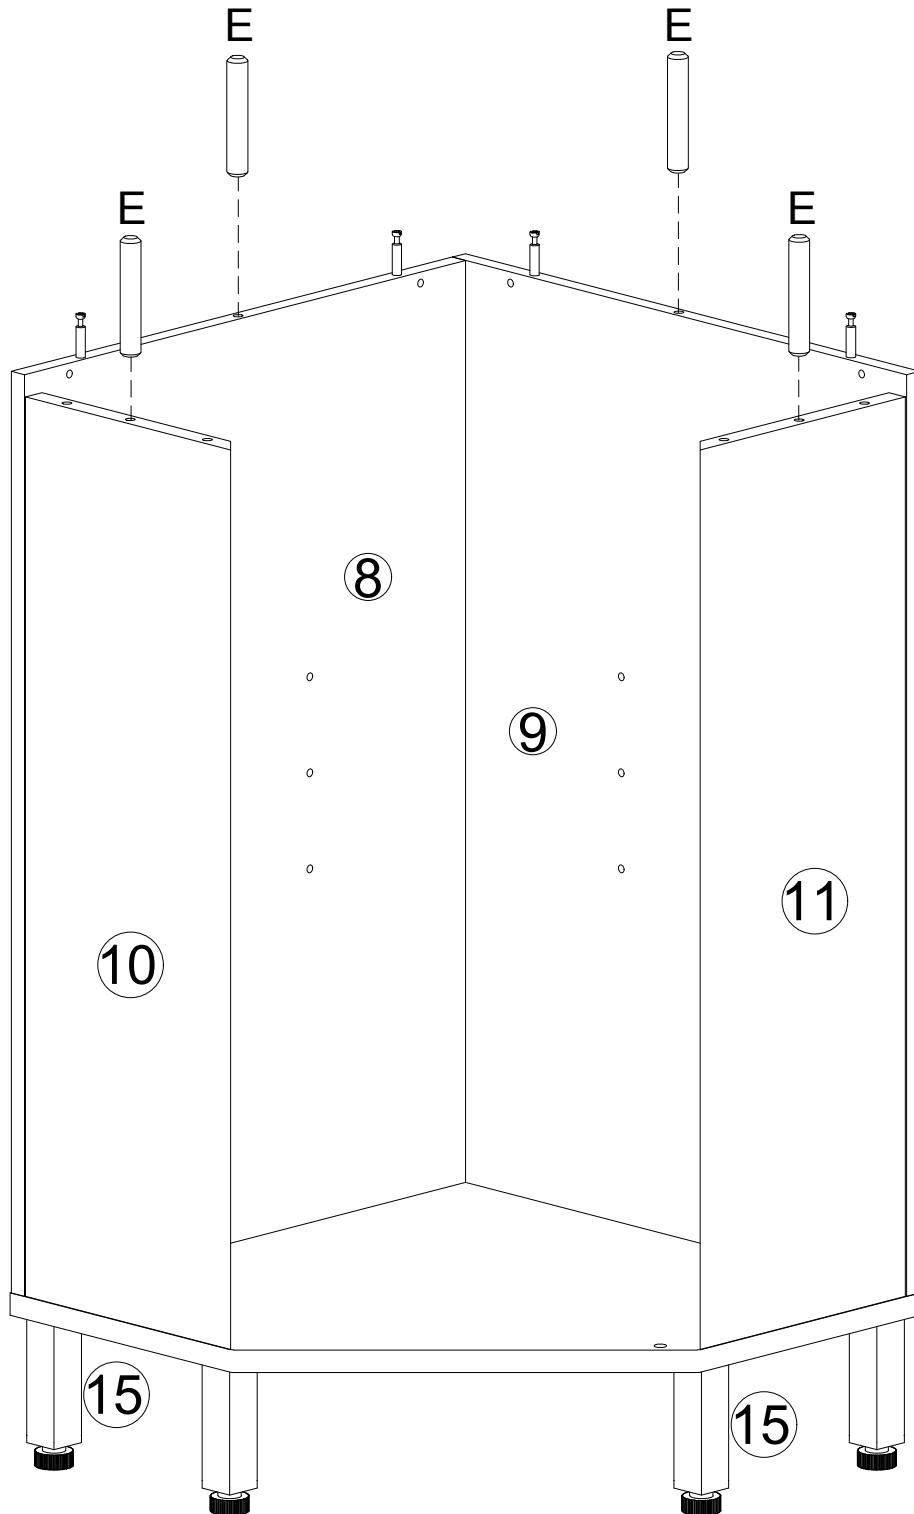


E  x4

# STEP 16




This step takes two people to complete

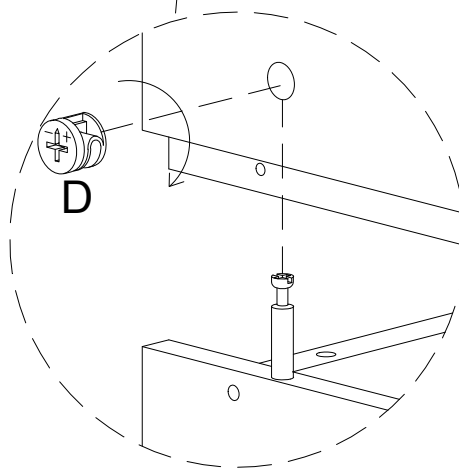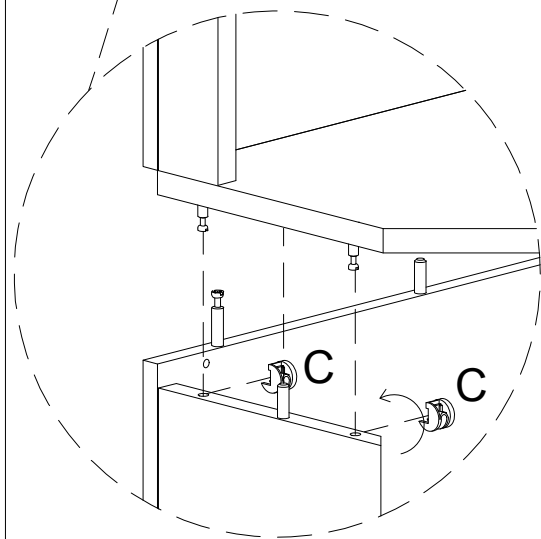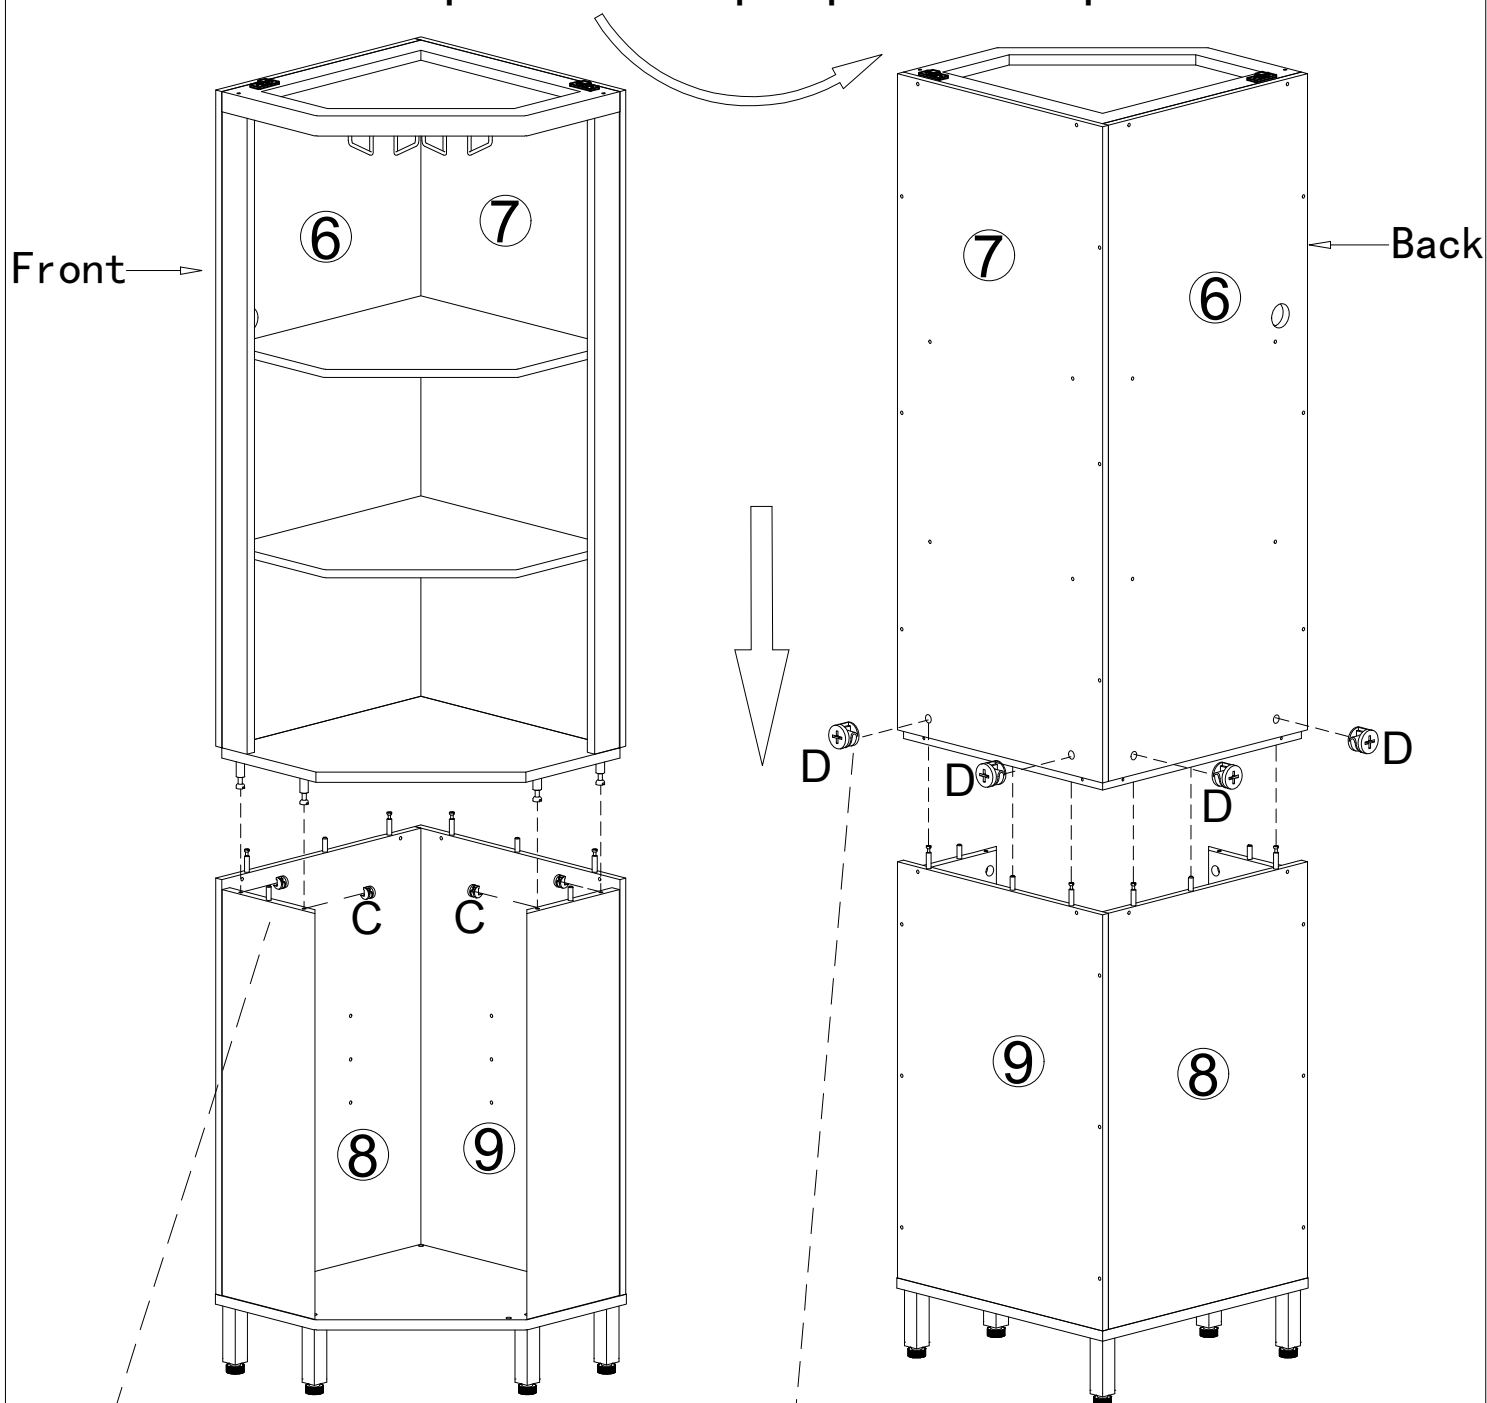


|   |  |    |
|---|--|----|
| Q |  |    |
| D |  | x4 |
| C |  | x4 |

## STEP 17

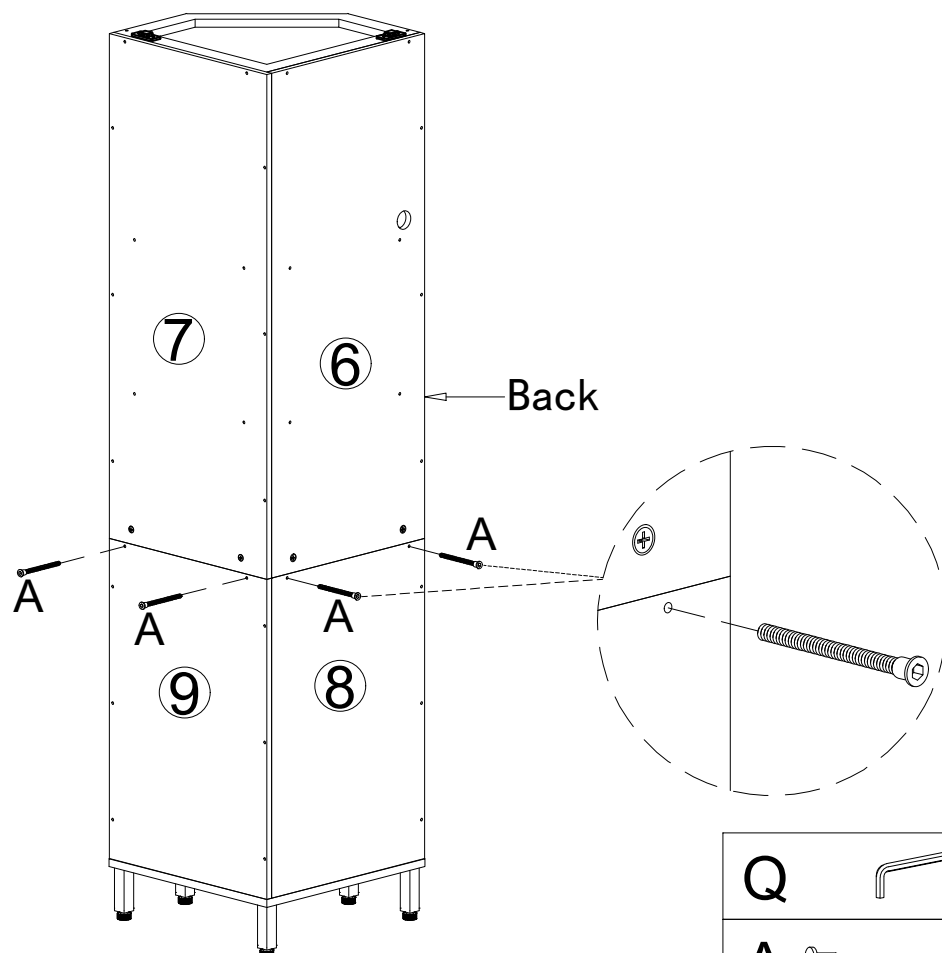



## STEP 18

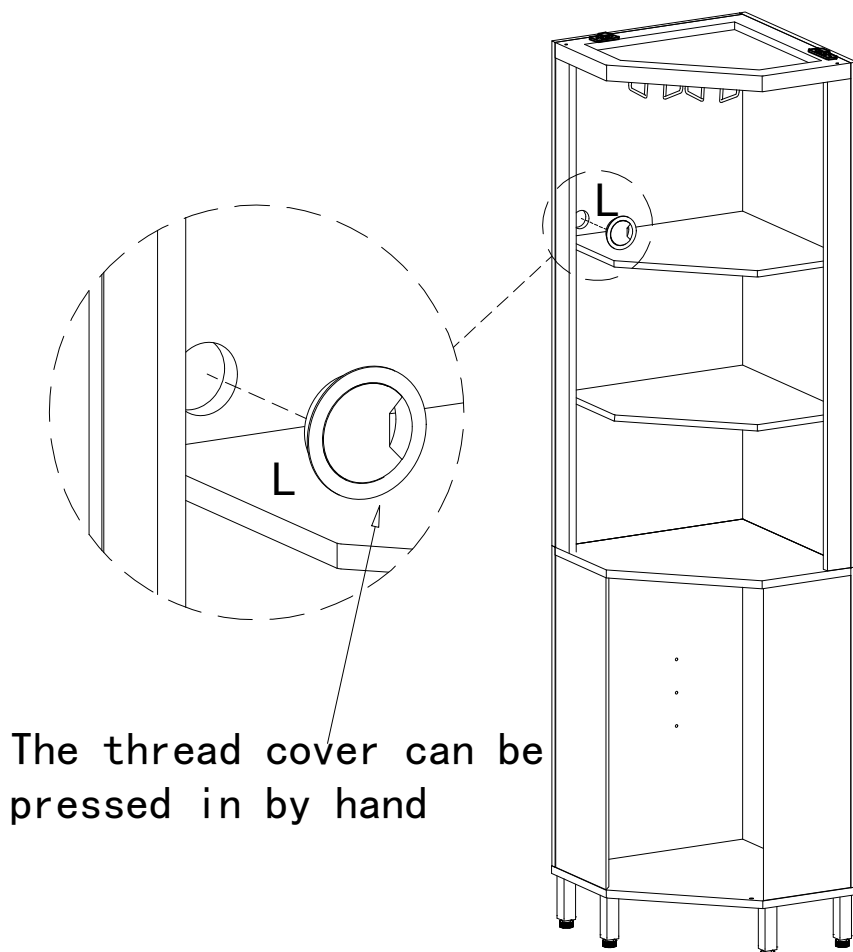


## STEP 19

The lamp band plug can be pulled out through the wire cover

Tape the lamp to the top of the ceiling position 90 ° bend to the top of the ceiling

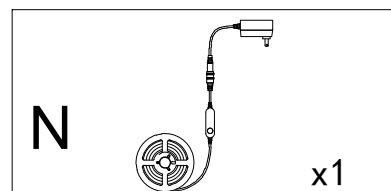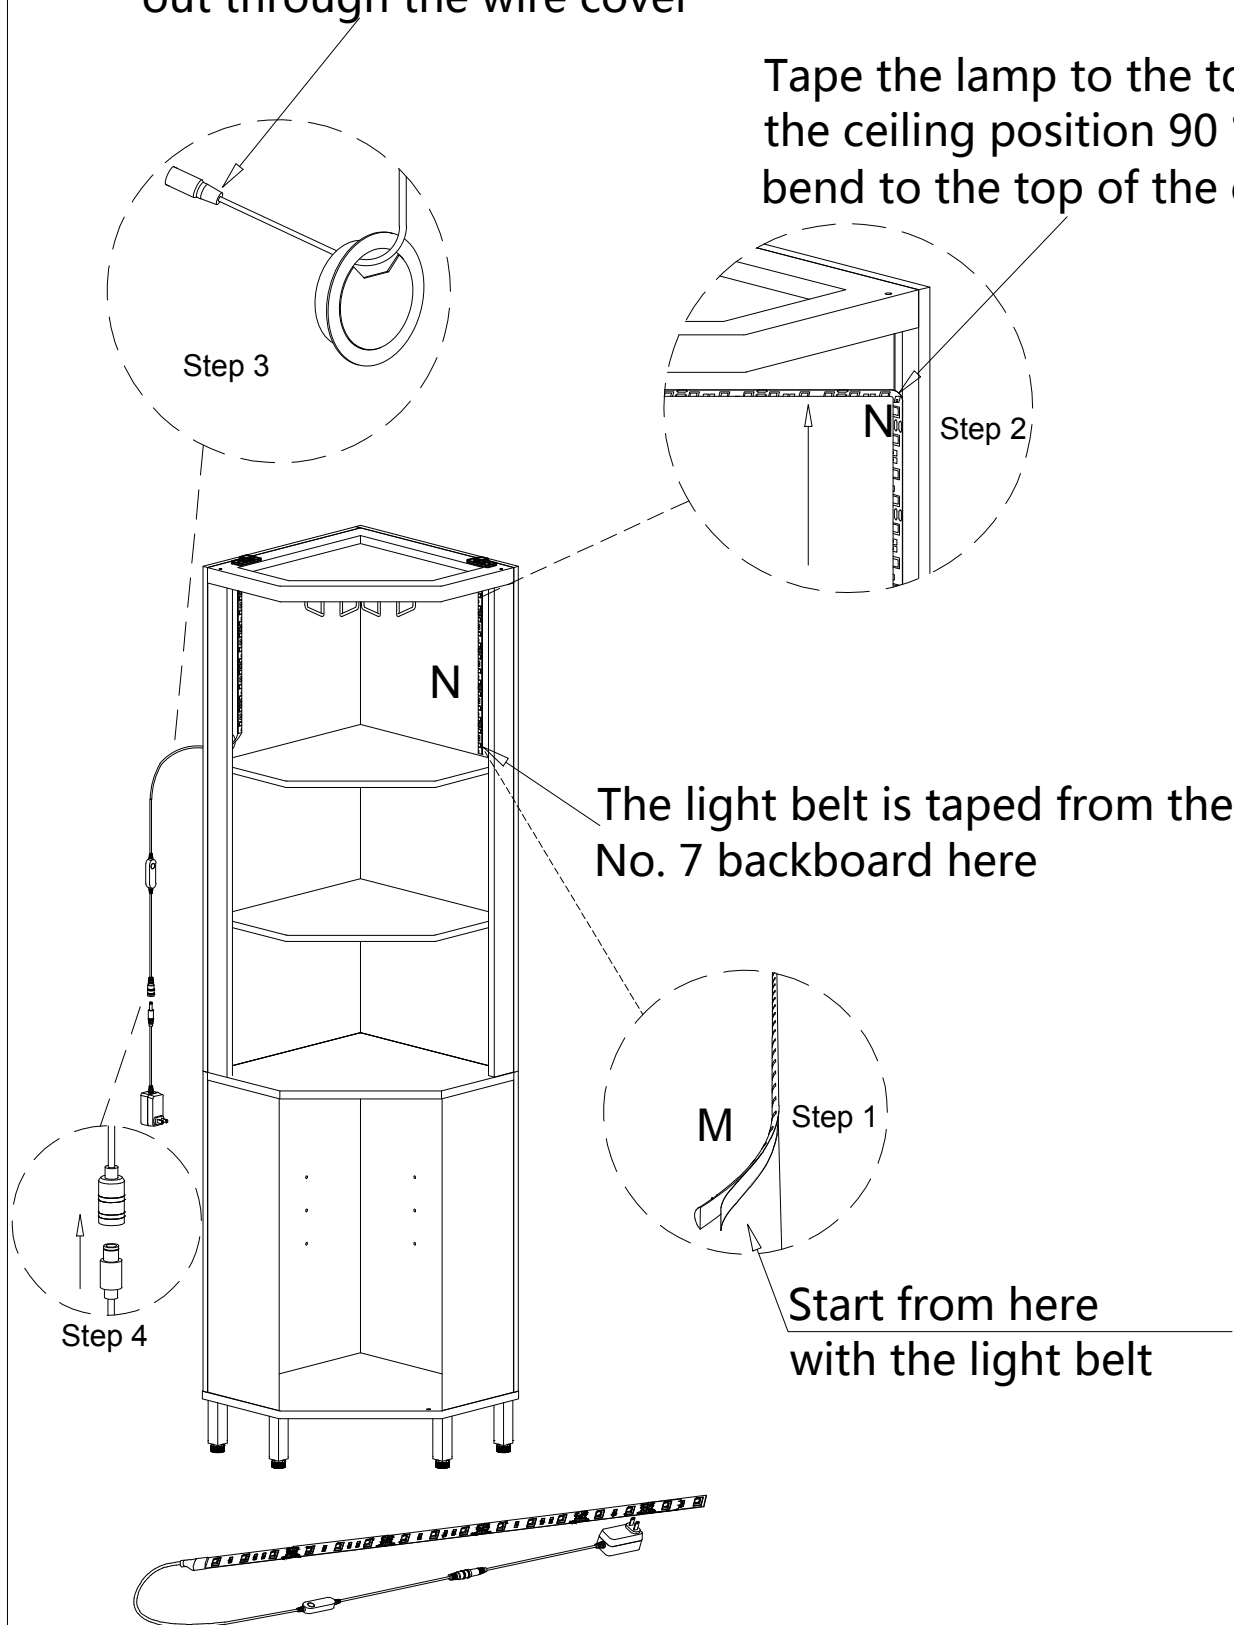

## STEP 20

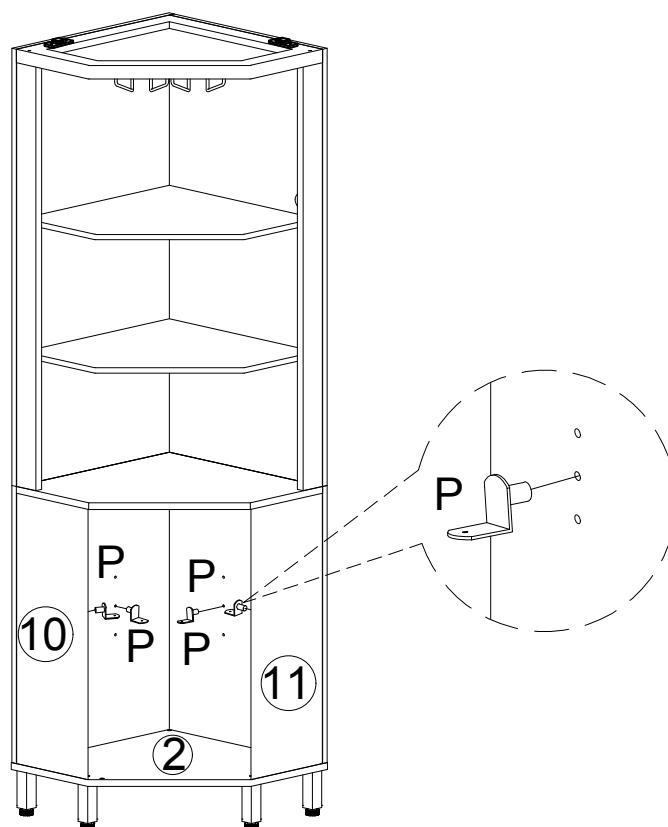


P




x4

## STEP 21

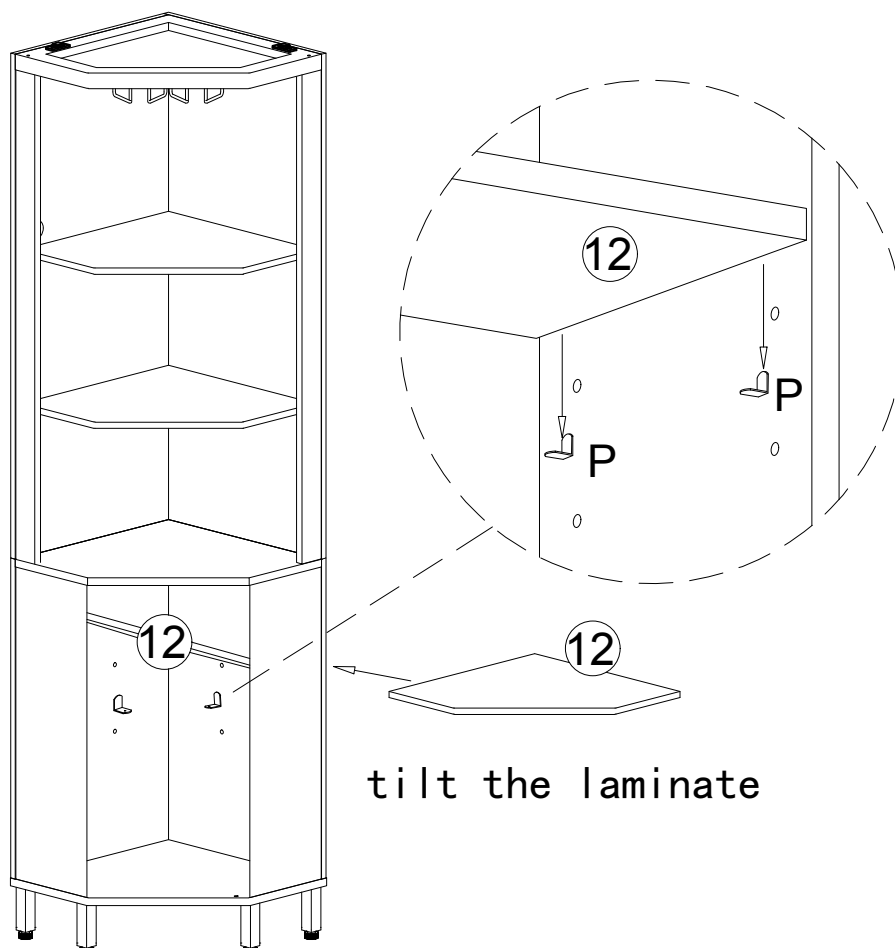




## STEP 22

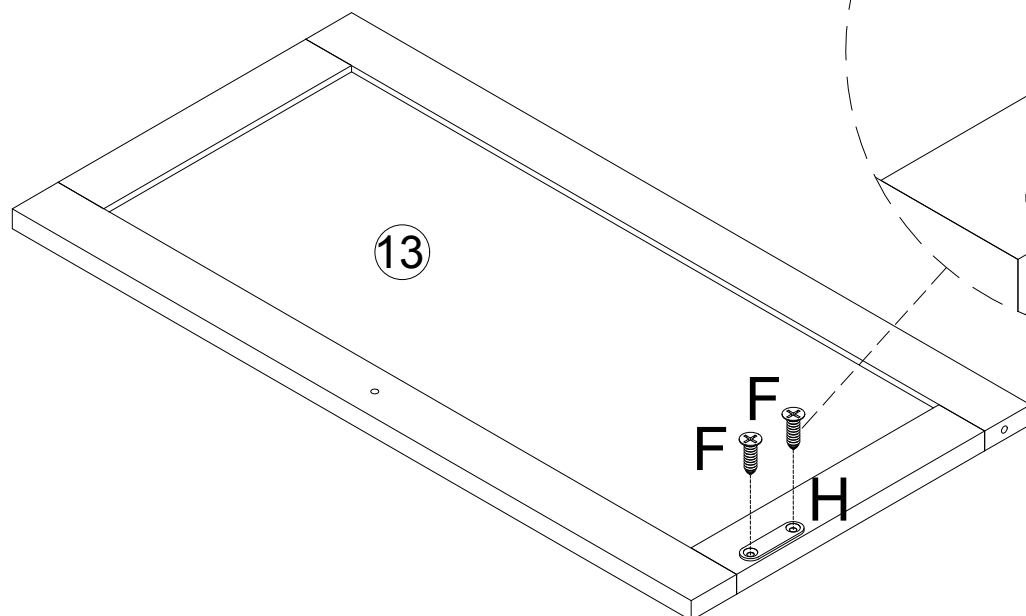

|   |  |    |
|---|--|----|
| Q |  |    |
| F |  | x2 |
| H |  | x1 |





## STEP 23

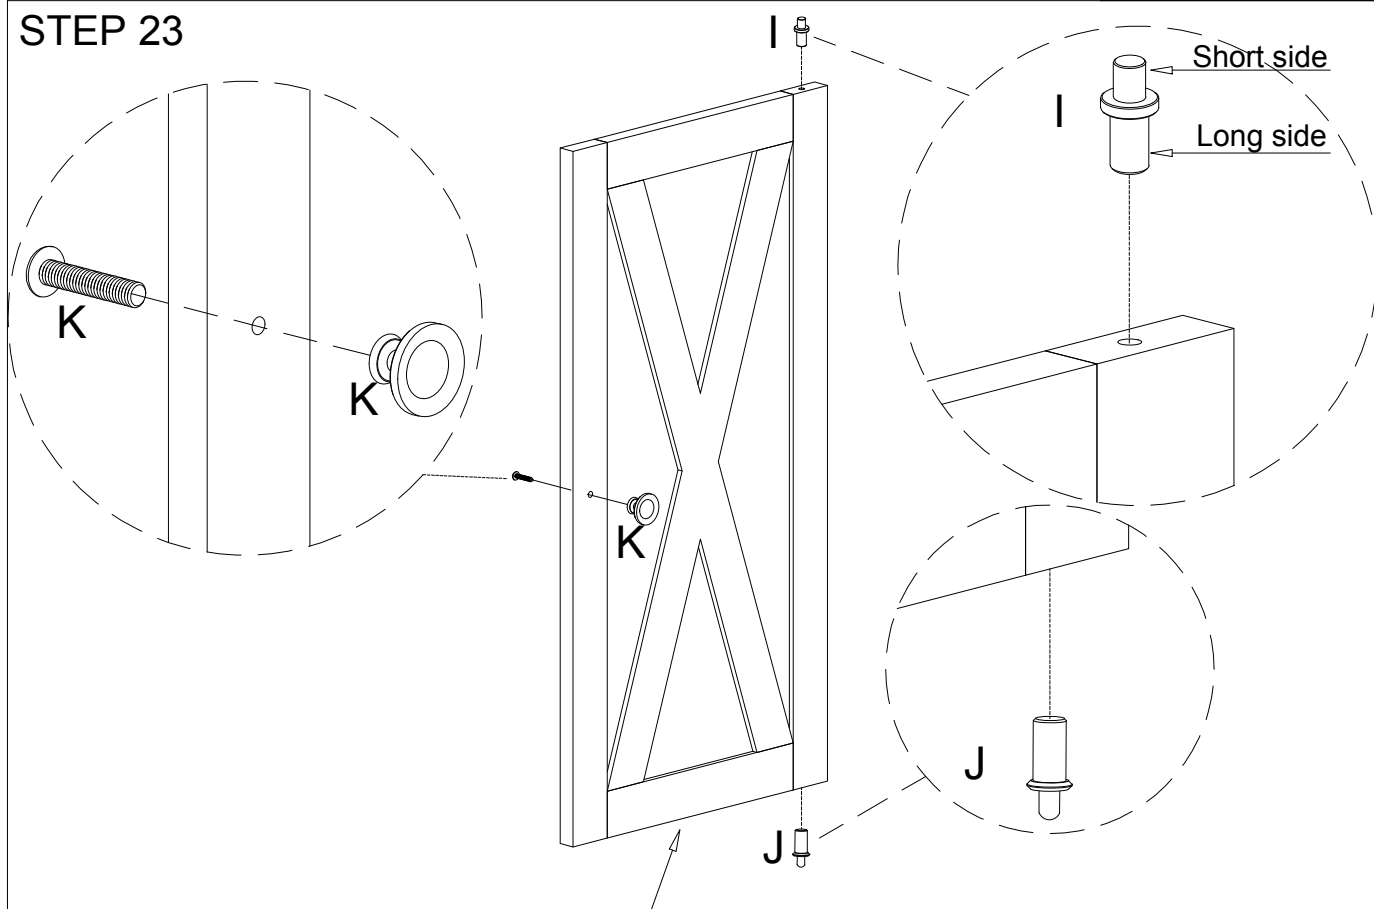






You need to hammer it in when installing I.  
Don't hammer it in when installing J.  
Large hole to install I, small hole to install J

|   |  |    |
|---|--|----|
| Q |  |    |
| K |  | x1 |
| I |  | x1 |
| J |  | x1 |


## STEP 24

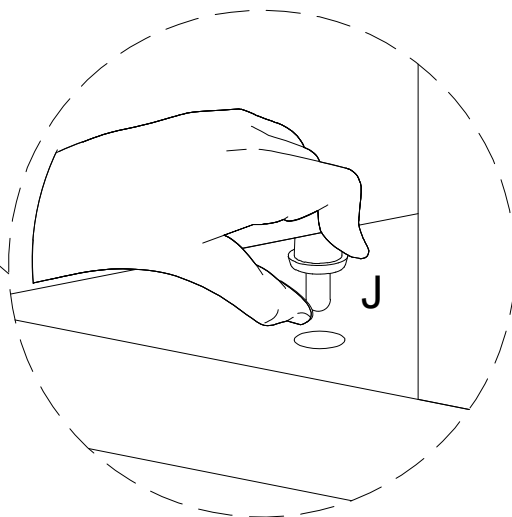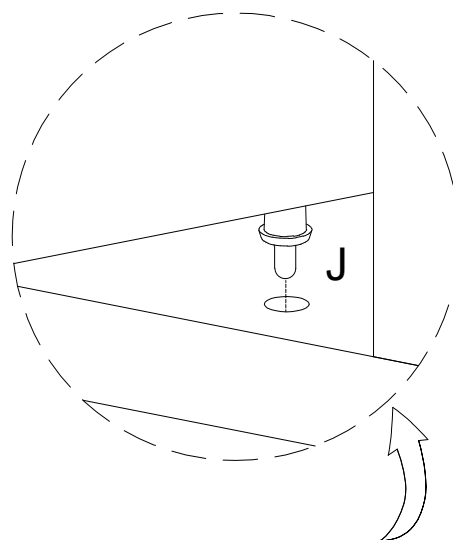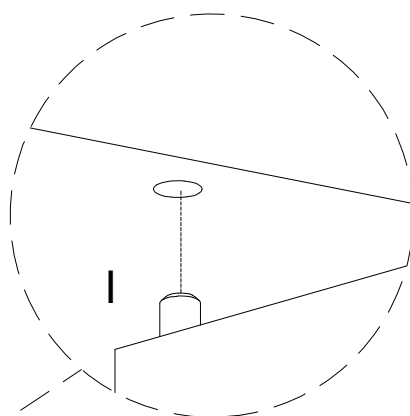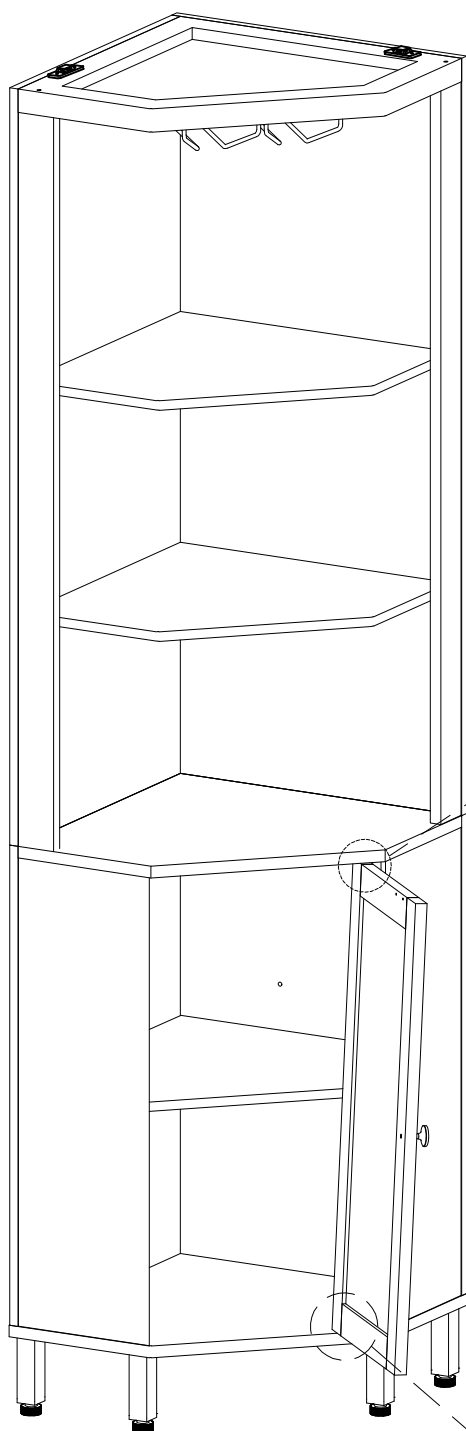

# STEP 25

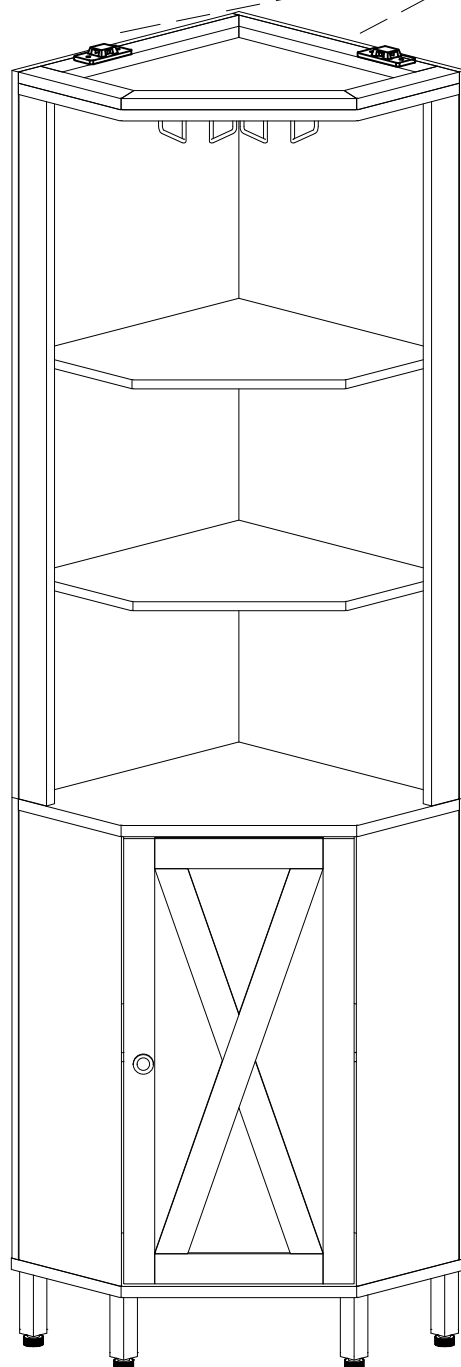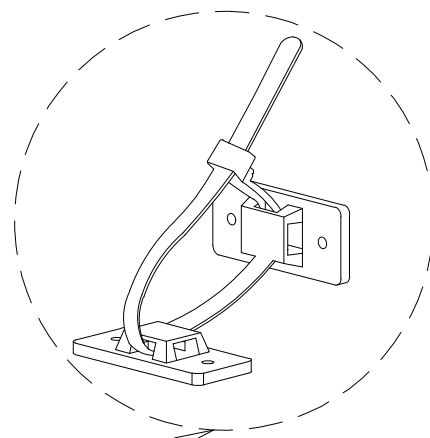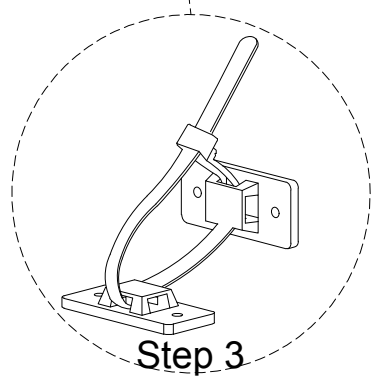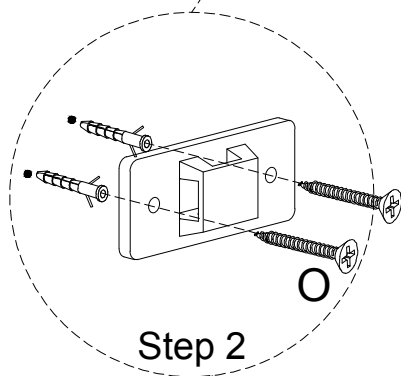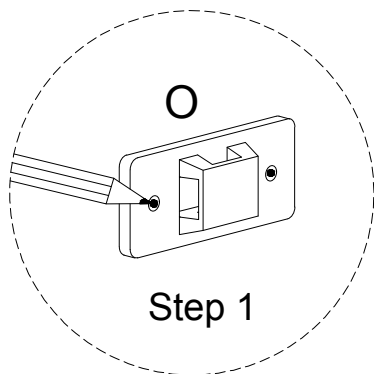

Installation Completed

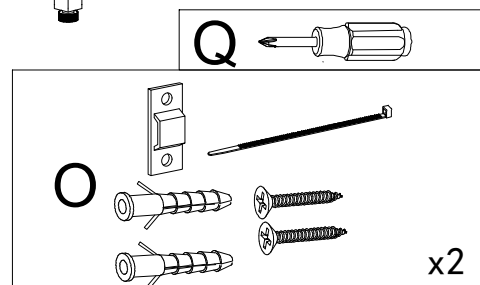



Pure & Easy

### CONTACT US:

If you have any questions about the installation of YITAHOME® products, just contact us at +1(888)-717-8084 from Mon-Fri 8:00 AM-16:30 PM PST / Saturday 8:00 AM-12:00 PMPST or E-mail us at: [after-sale.cs@hotmail.com](mailto:after-sale.cs@hotmail.com)

Alternative method to contact us(amazon.com orders only)

- 1.Log into your amazon account
- 2.Go to "Your Orders" and find the purchase
- 3.Click on "Contact Seller"