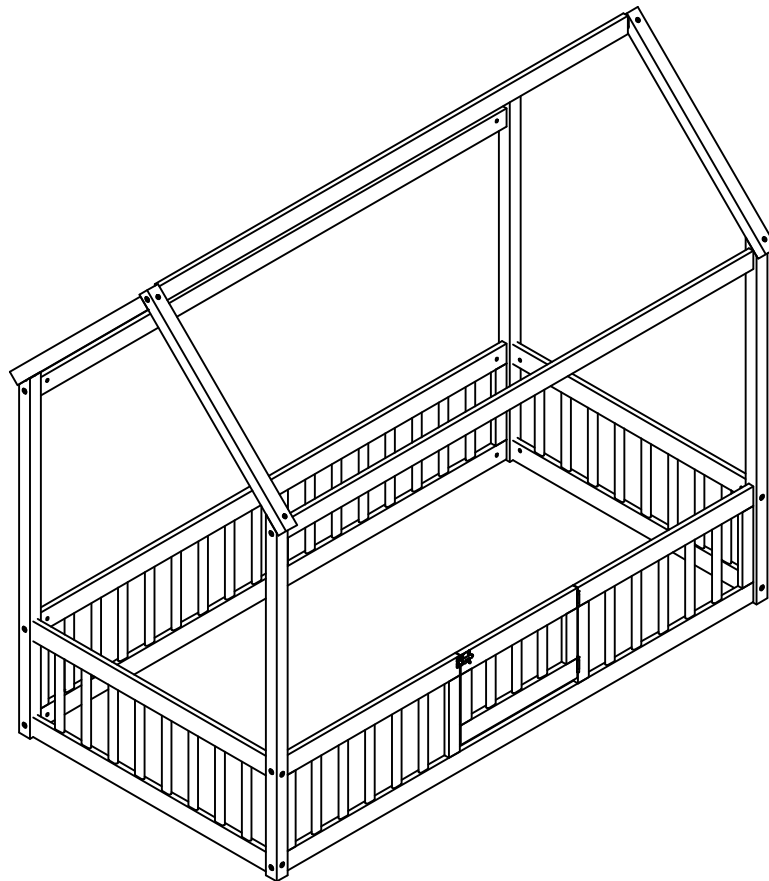



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED












WF303131



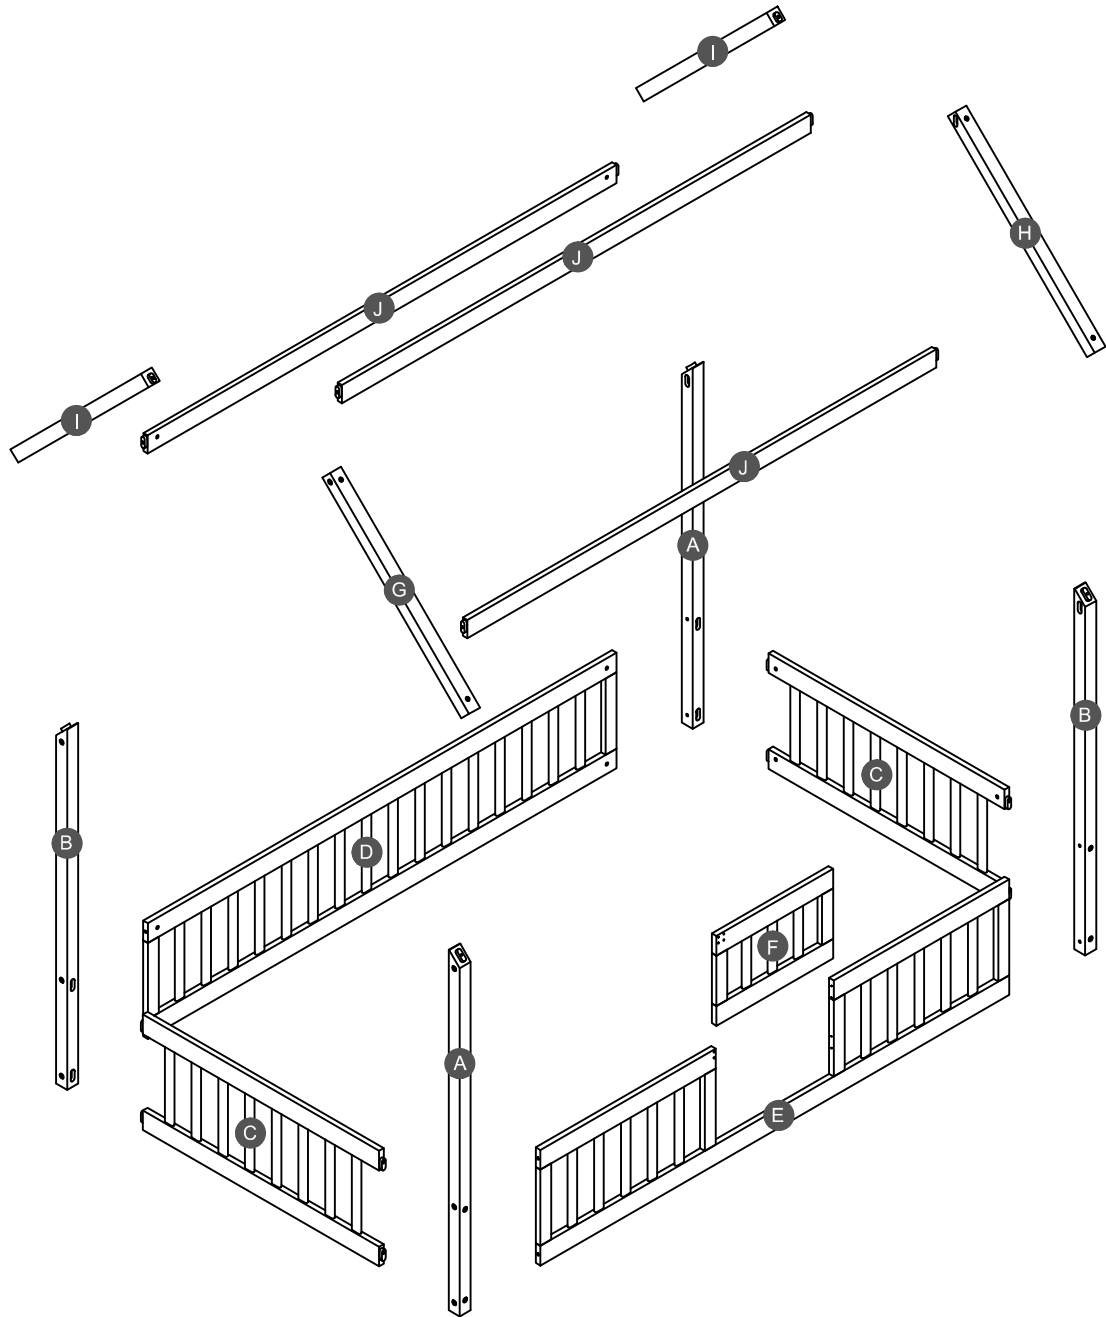
Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Frame HB & FB - 2pcs
D  Side rail (Back) - 1pc	E  Side rail (Front) - 1pc	F  Door - 1pc
G  Upper (Left Front) - 1pc	H  Upper (Right Front) - 1pc	I  Upper (Back) - 2pcs
J  Upper horizontal bar - 3pcs		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)	3  (Ø12)1/4"*65mm Wood screw bolts (6pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts (22pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  55*24*6mm(135°) Hinges (2pcs)
7  60*40*10mm Lock (1pc)	8  Ø3.5*15mm Wood screws (14pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

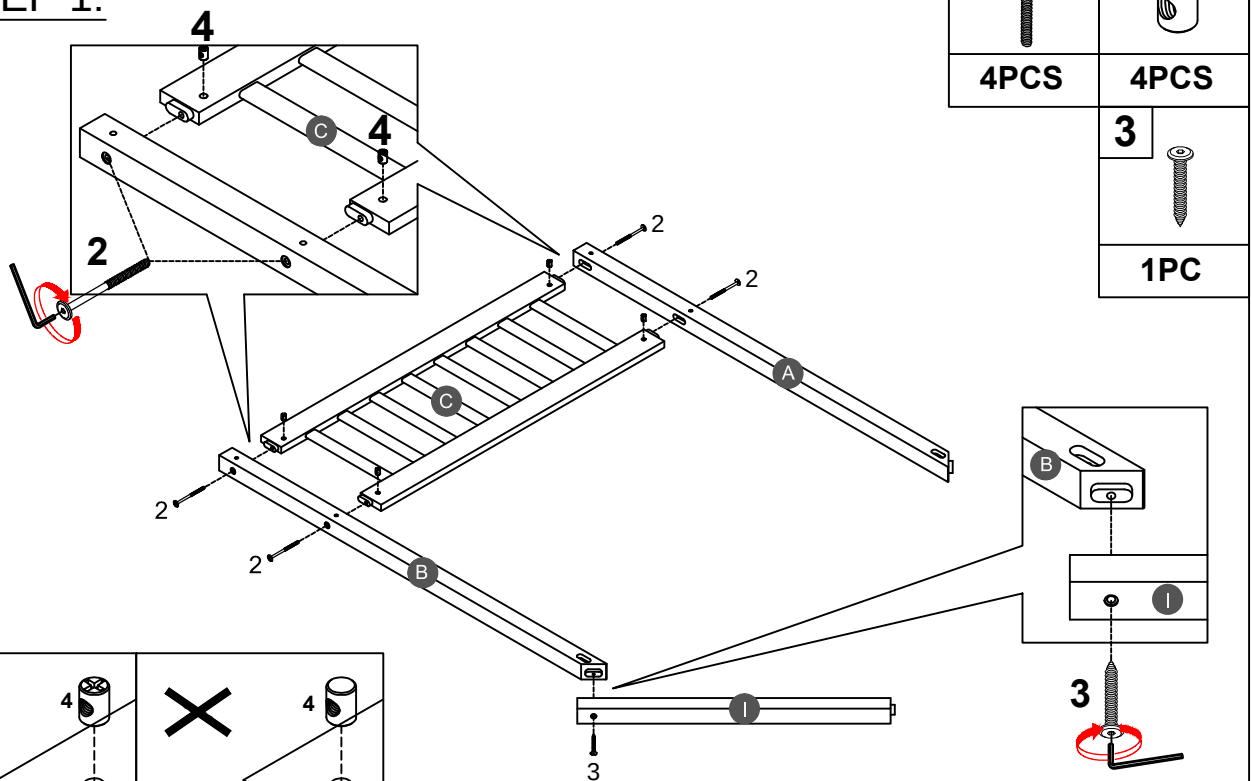STEP 1:




Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

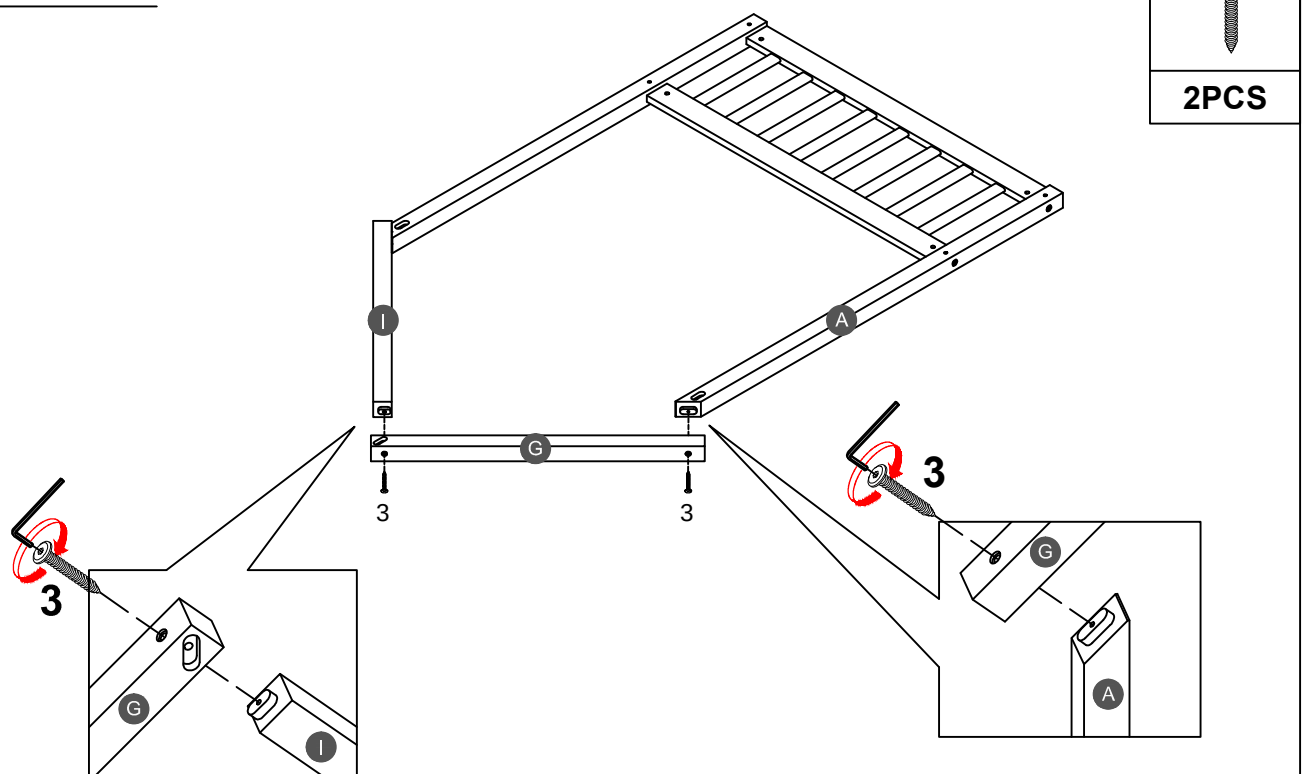
STEP 2:



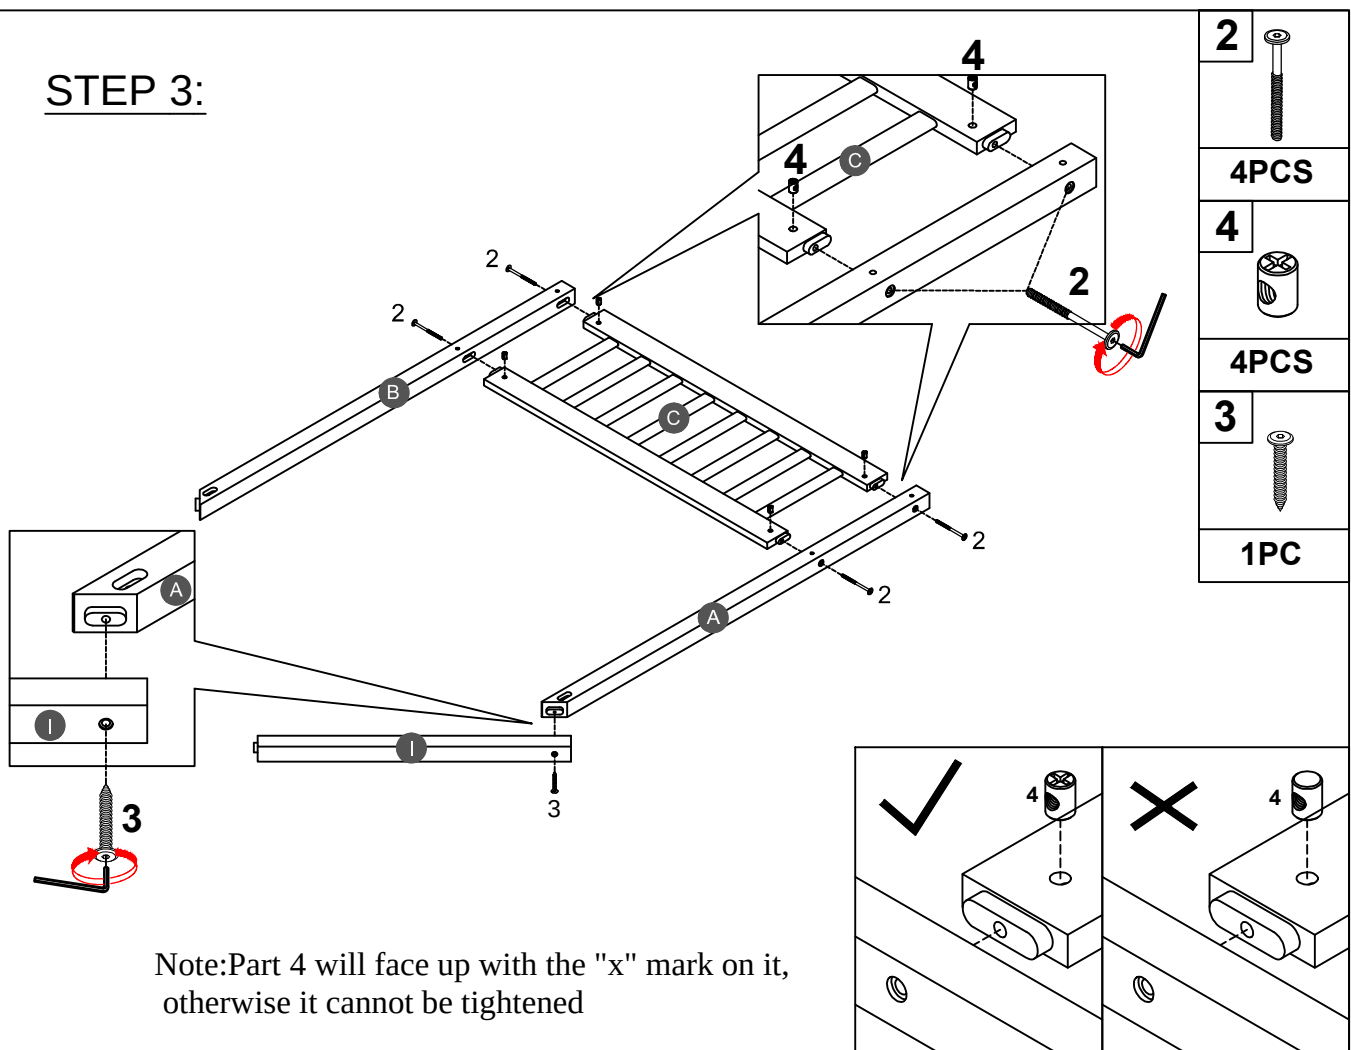STEP 3:




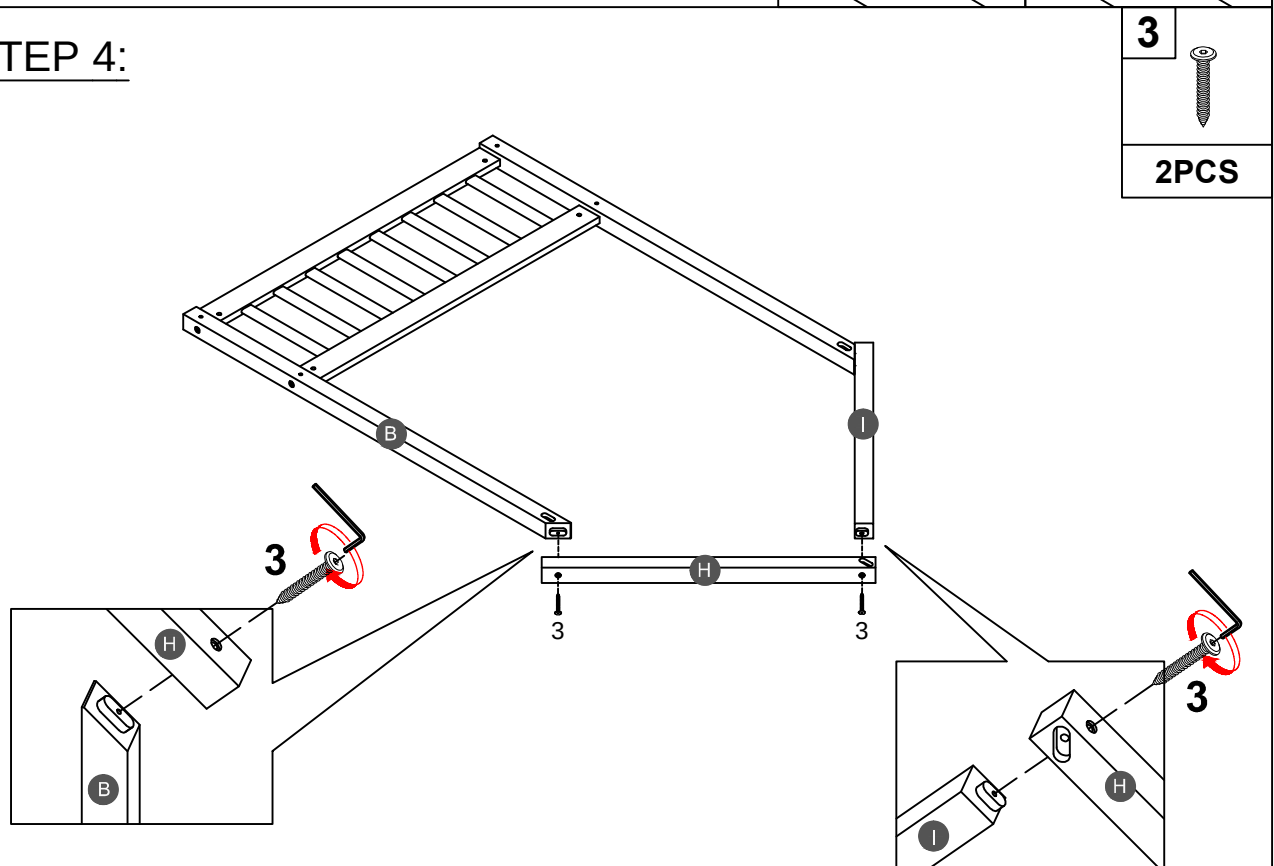STEP 4:



STEP 5:

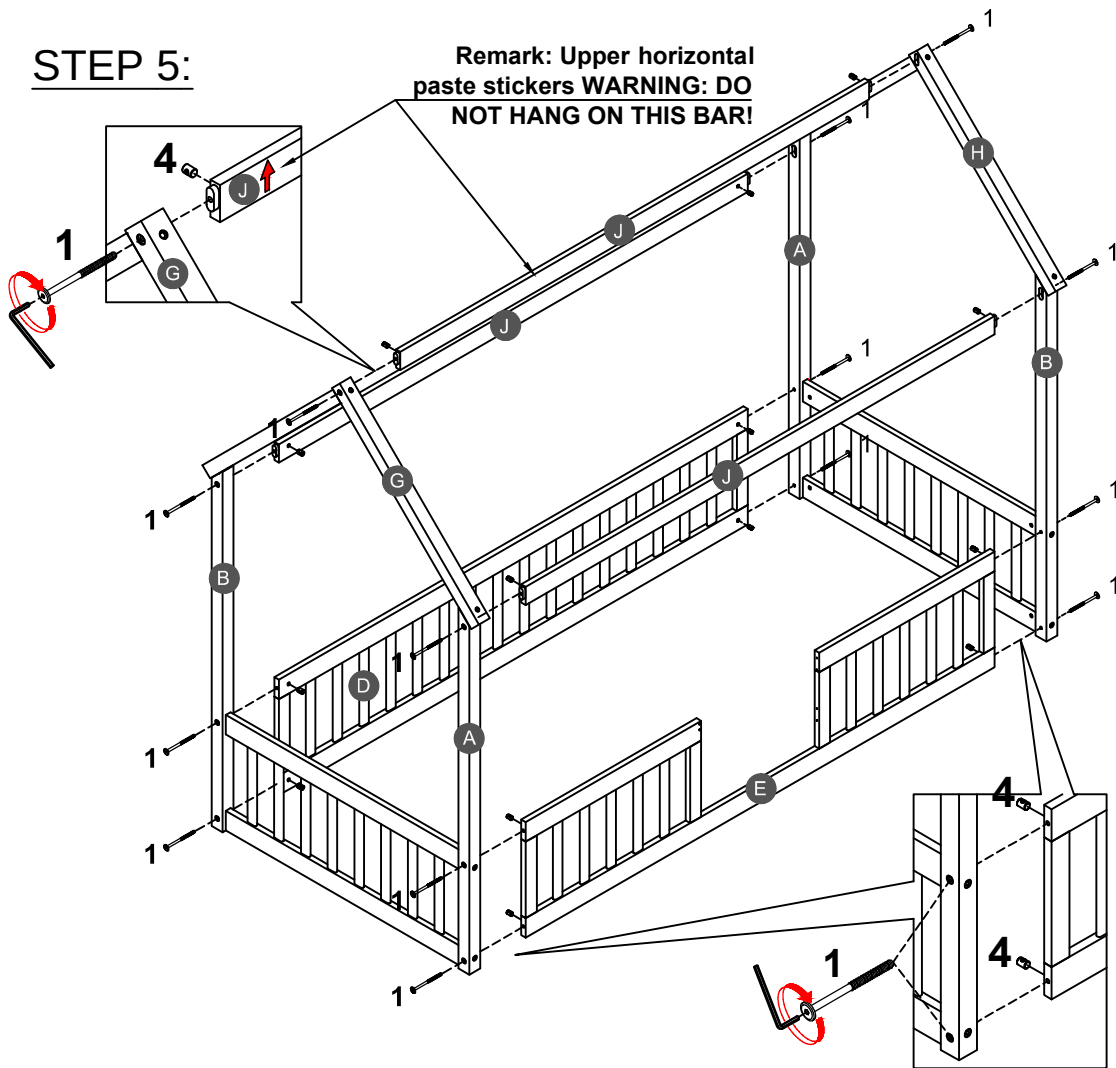Remark: Upper horizontal
paste stickers WARNING: DO
NOT HANG ON THIS BAR!



1



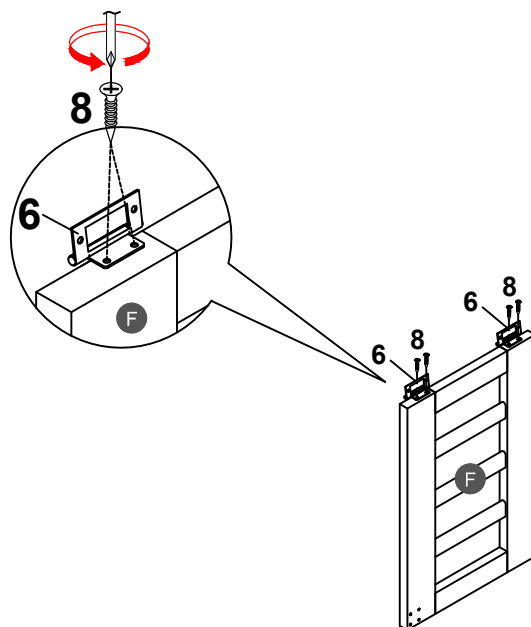
14PCS

4




14PCS

STEP 6:



6




2PCS


8




4PCS

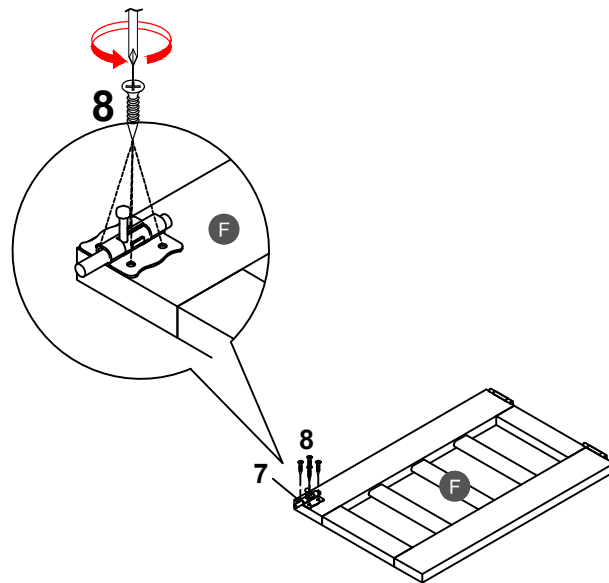STEP 7:



7	8
	
1PC	4PCS

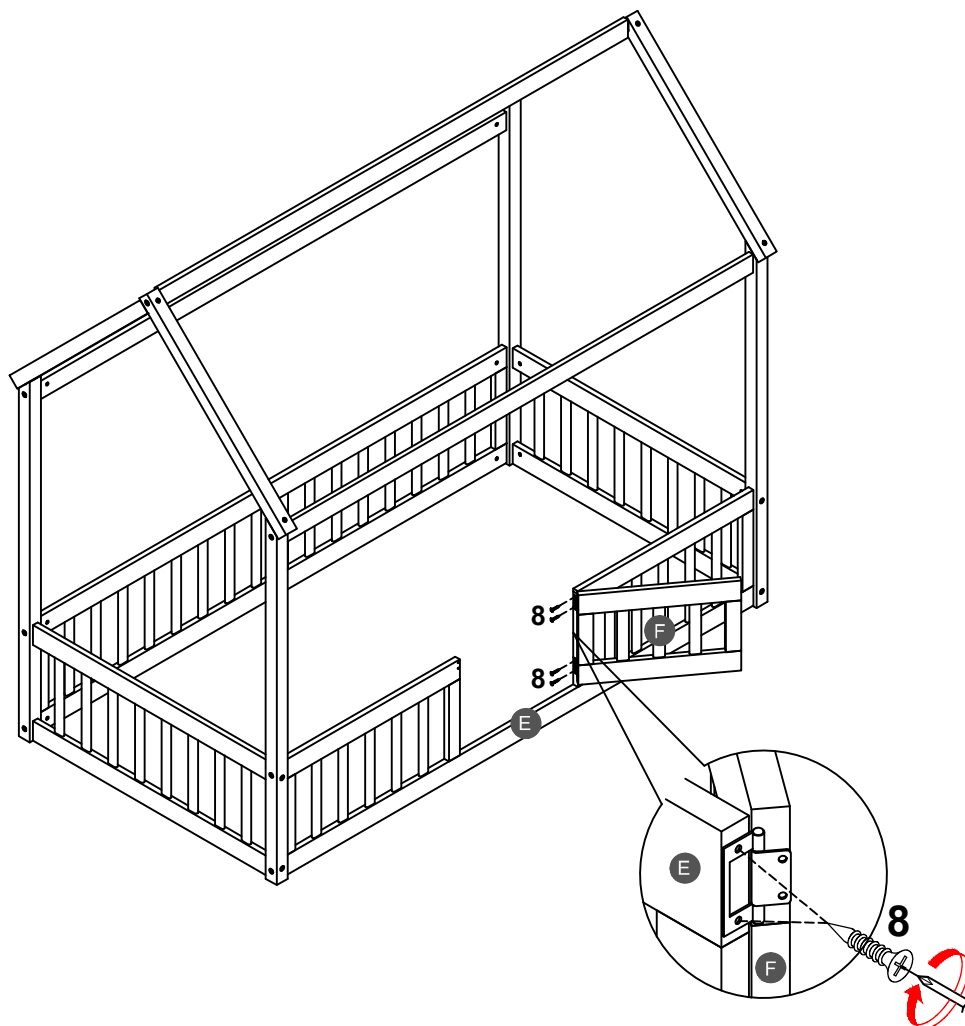STEP 8:



8

4PCS

STEP 9:

8



2PCS

