

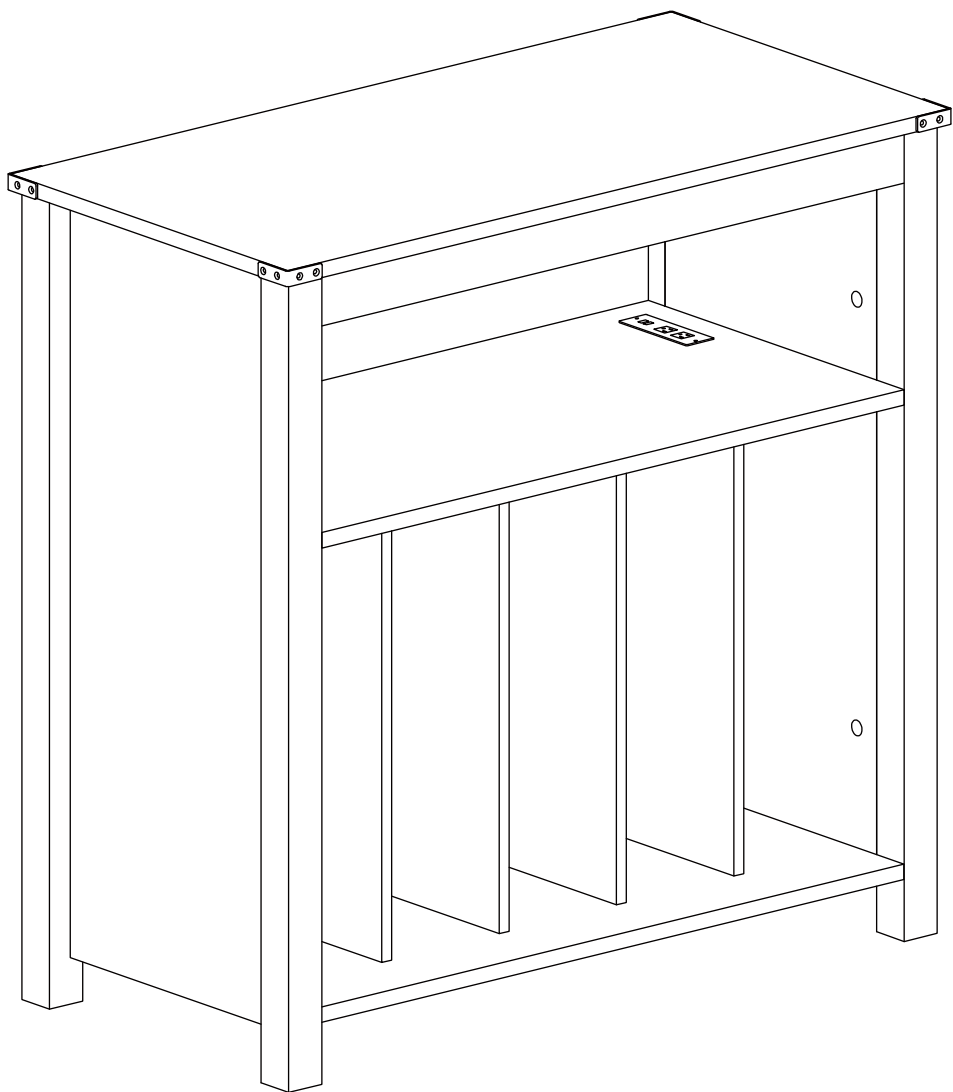


FZJQ-V1


FTLFST-6015
FTLFST-6027




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

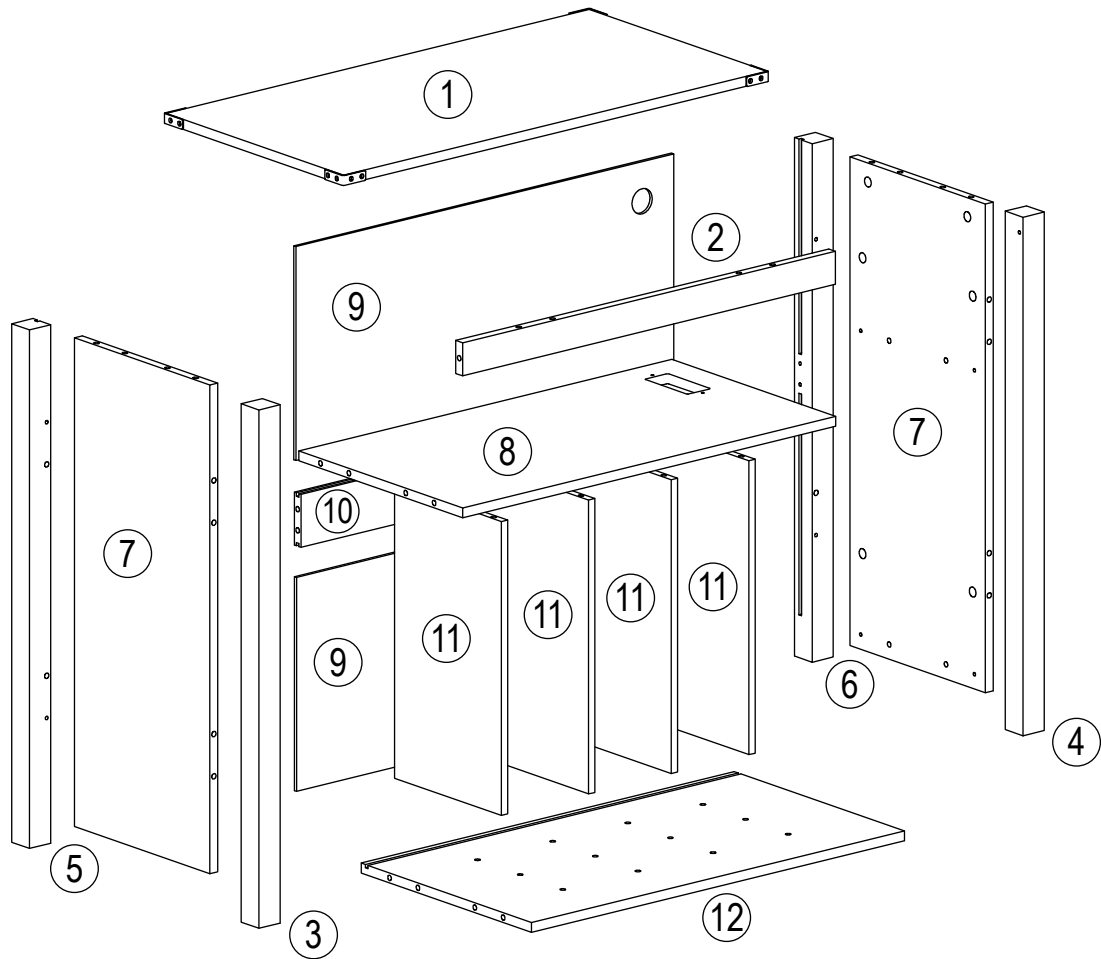


① ×1



② ×1



③ ×1




④ ×1



⑤ ×1



⑥ ×1



⑦ ×2



⑧ ×1




⑨ ×2



⑩ ×1





⑪ ×4




⑫ ×1


| | | | | | | | | | | | | | |
|---------|-------|----------|-------|----------|------|-----------|------|---------|-------|----------|-------|--------|------|
| A | ×36+4 | B | ×28+3 | C | ×8+1 | D | ×8+1 | E | ×22+3 | F | ×15+2 | G | ×9+1 |
| | | | | | | | | | | | | | |
| Ø6×35mm | | Ø15×12mm | | Ø15×10mm | | Ø6×30mm | | Ø8×30mm | | 3.5×14mm | | 4×35mm | |
| H | ×1+1 | I | ×1 | J | ×4 | K | ×8 | L | ×1 | M | ×1 | N | ×2 |
| | | | | | | | | | | | | | |
| Ø8×40mm | | 155×20mm | | Ø20mm | | 14×14×9mm | | | | | | | |


STEP 1

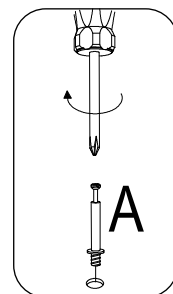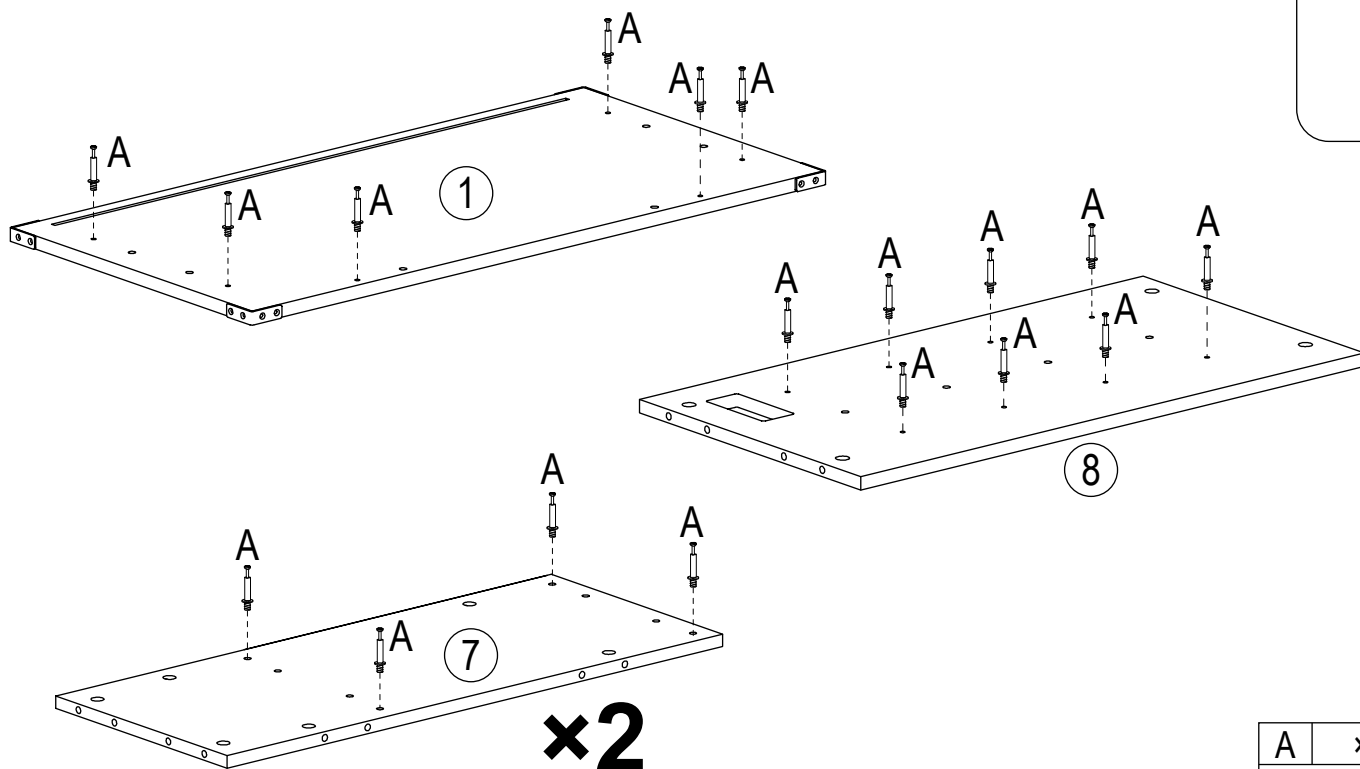


| | |
|--|-----|
| A | x22 |
|  | |
| Ø6×35mm | |

STEP 2

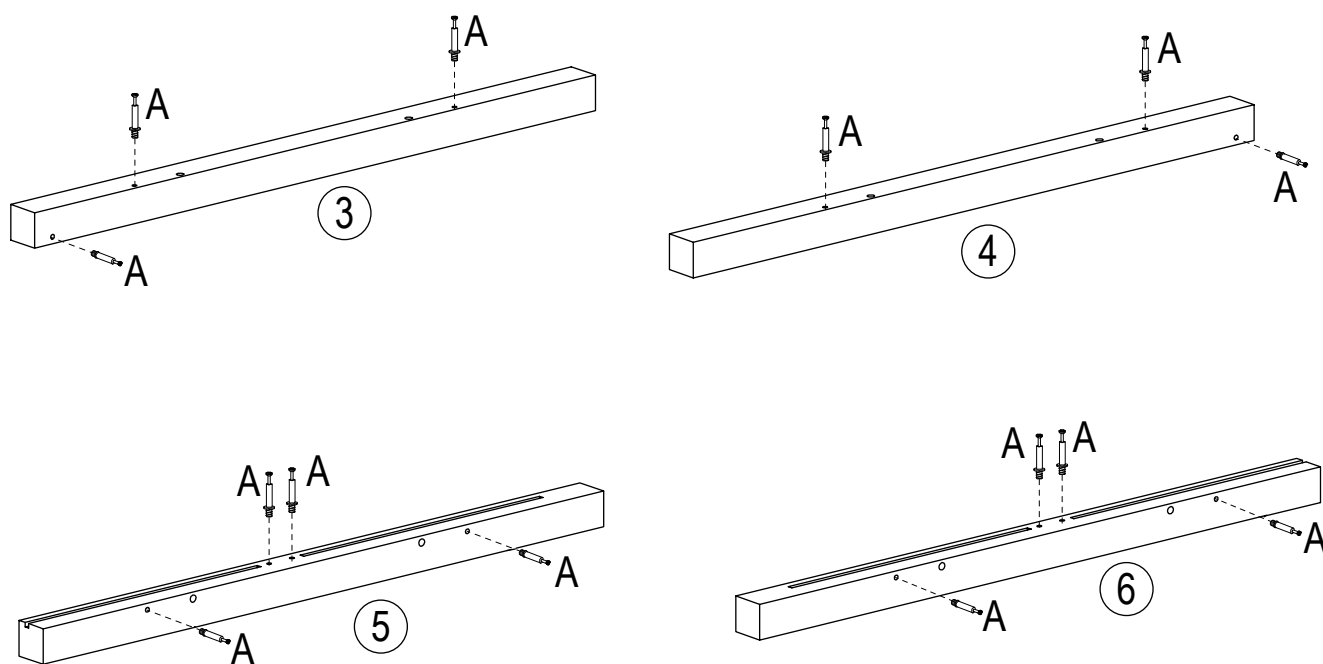


| | |
|---|-----|
| A | x14 |
|  | |
| Ø6×35mm | |


STEP 3

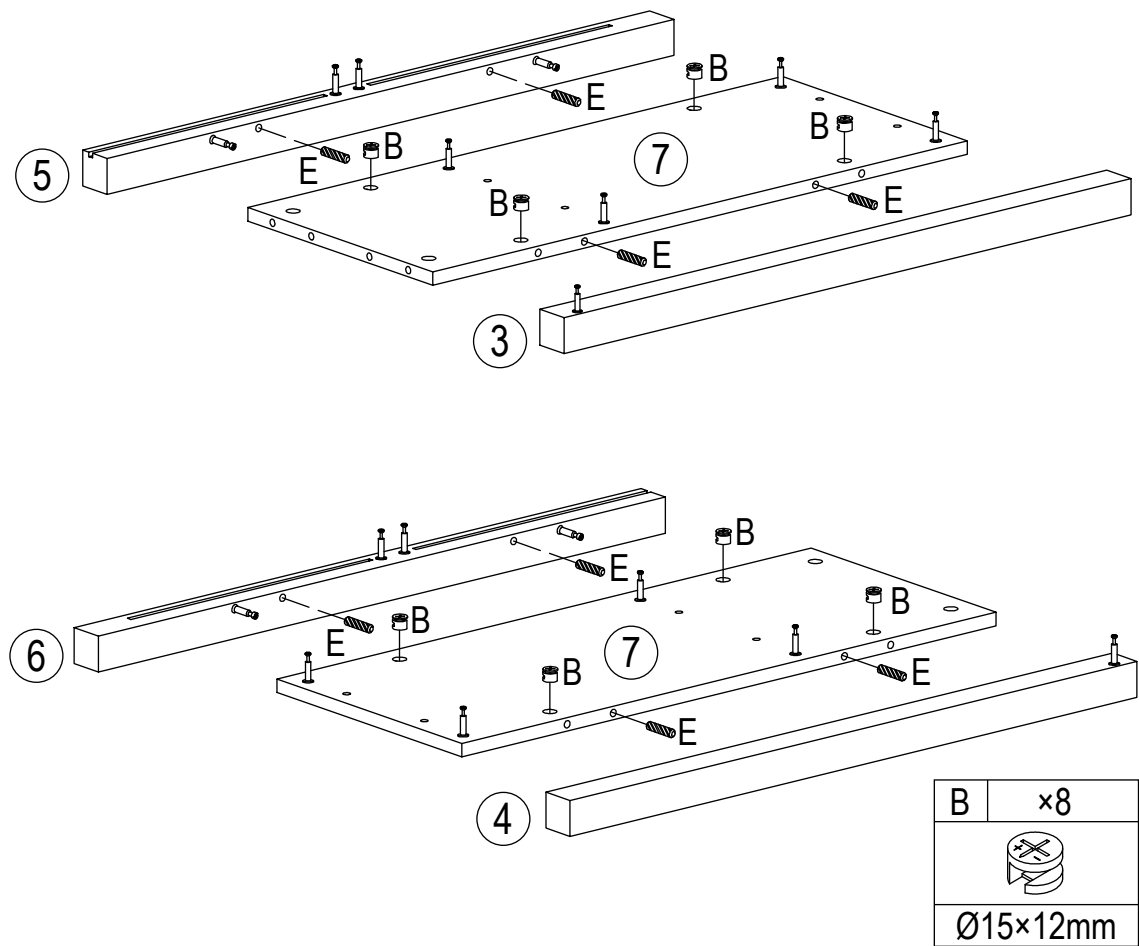

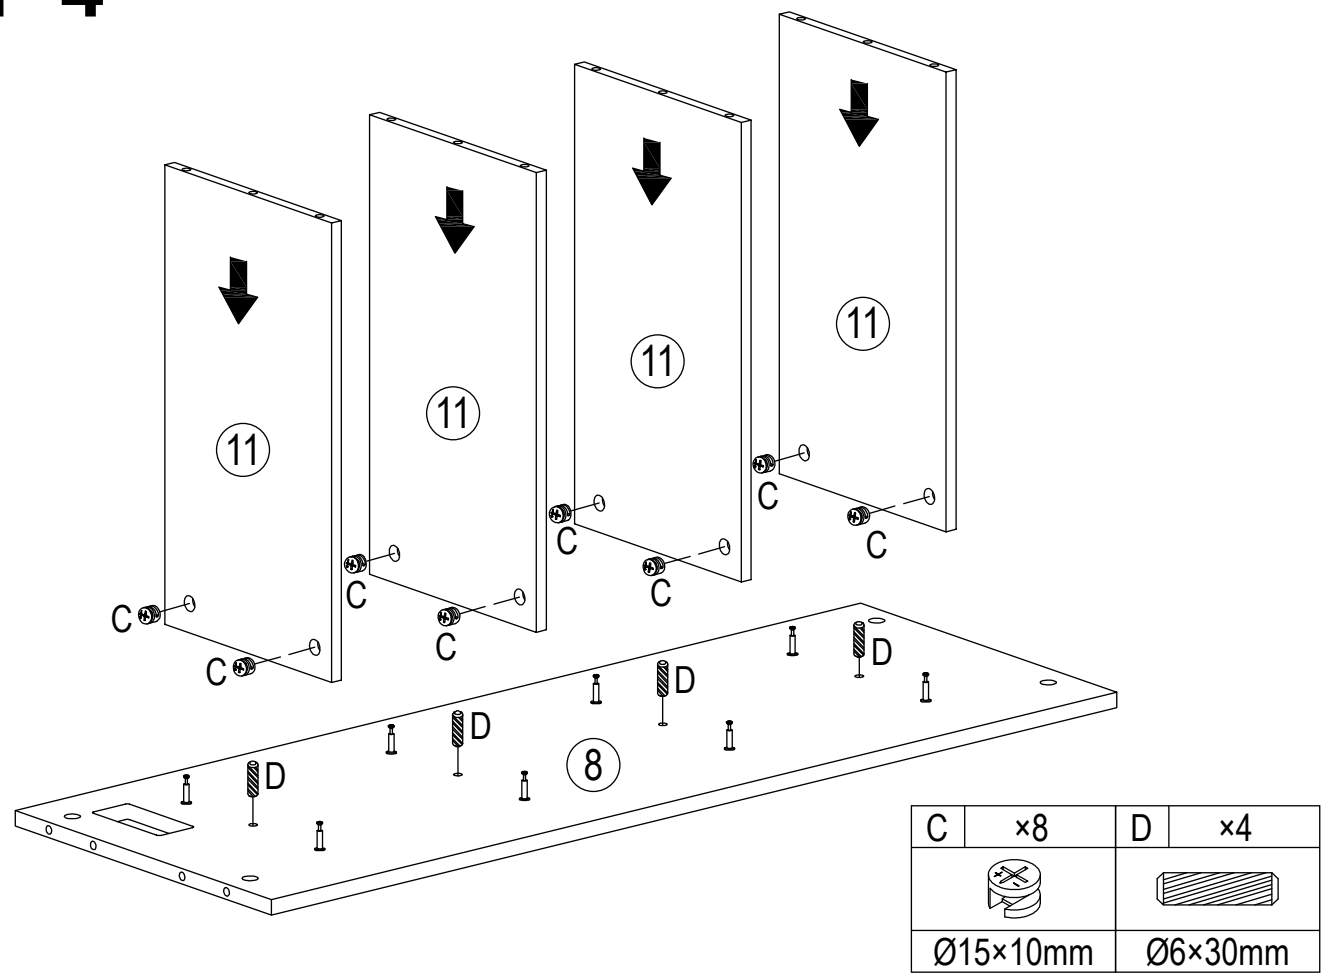

STEP 4




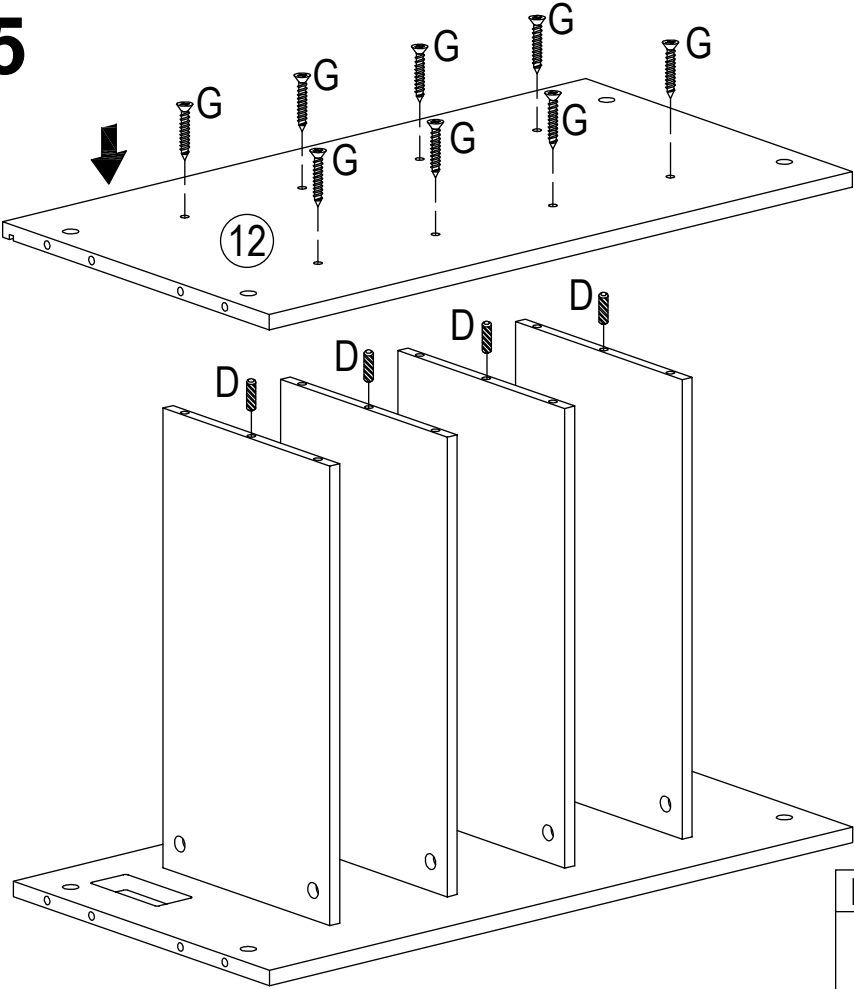

STEP 5




| | | | |
|--|----|--|----|
| D | x4 | G | x8 |
|  | |  | |
| Ø6×30mm | | 4×35mm | |

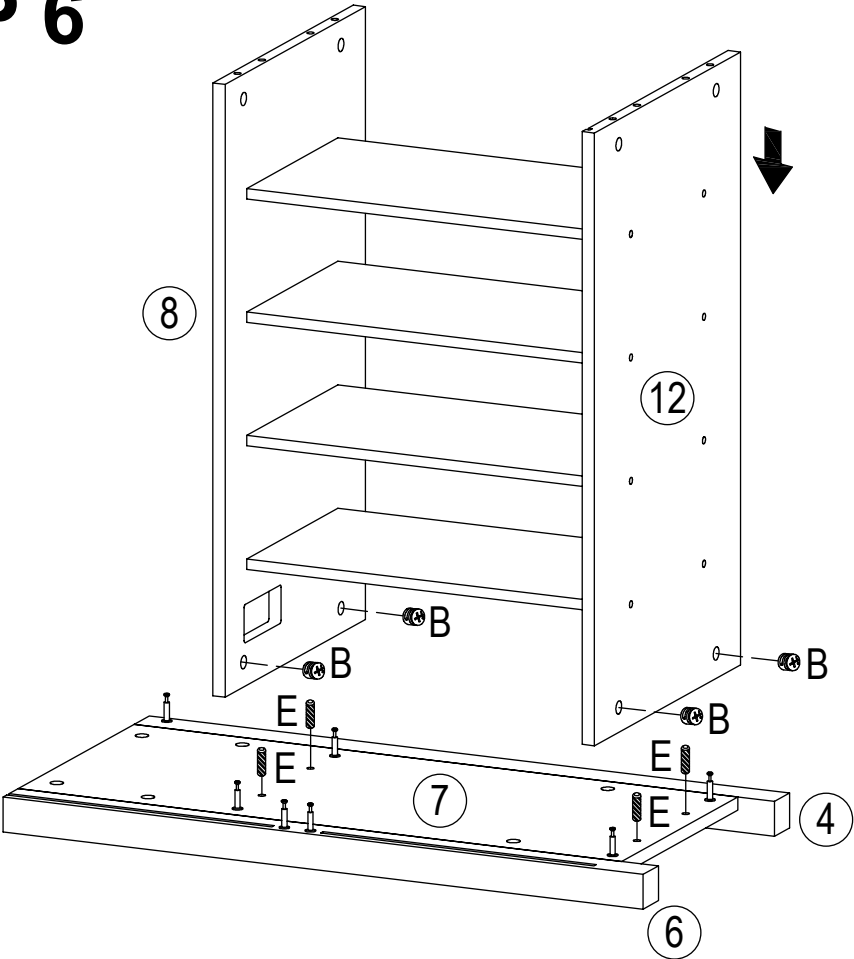STEP 6




| | | | |
|---|----|---|----|
| B | x4 | E | x4 |
|  | |  | |
| Ø15×12mm | | Ø8×30mm | |

STEP 7

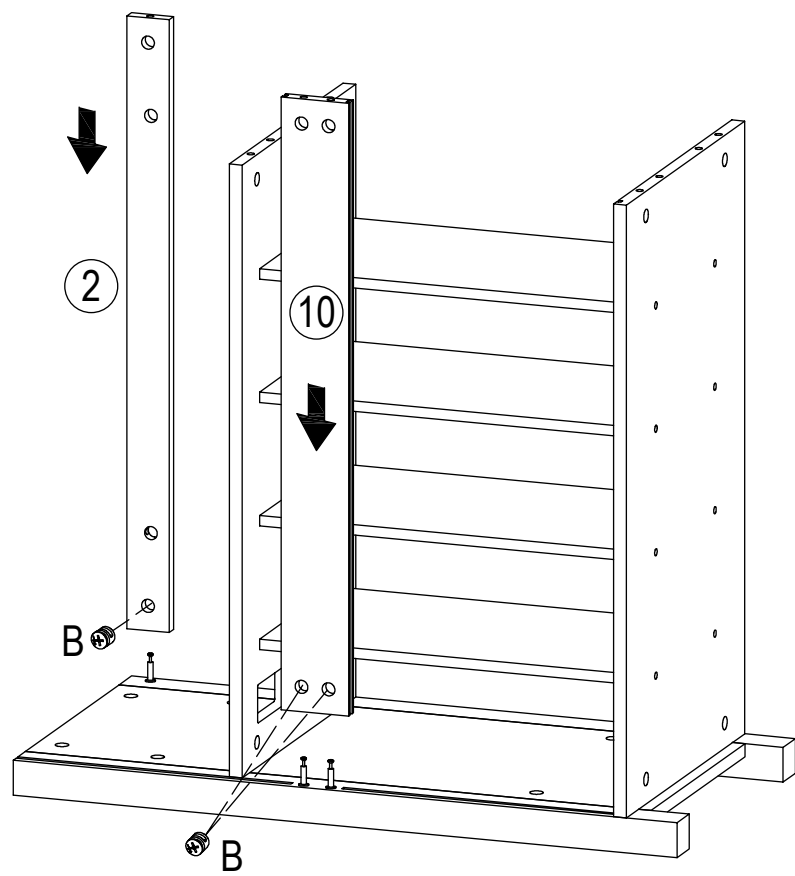


| | |
|----------|----|
| B | x3 |
| | |
| Ø15×12mm | |


STEP 8

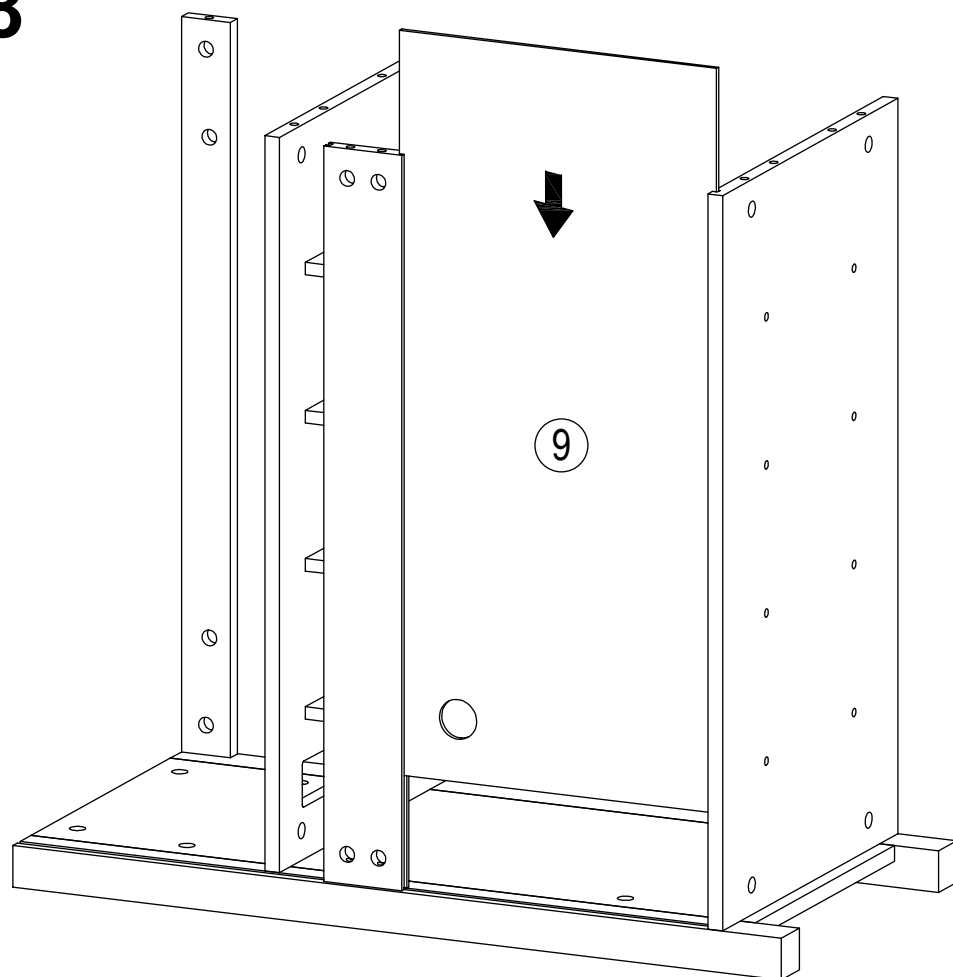


STEP 9

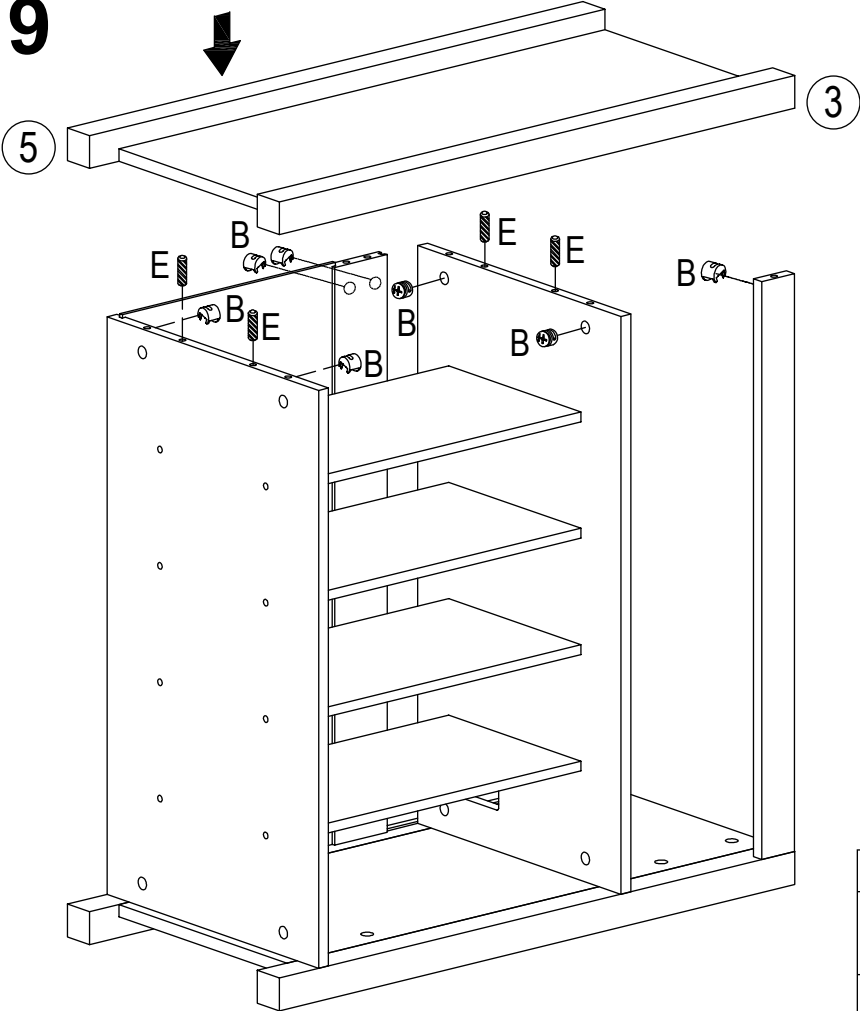



STEP 10

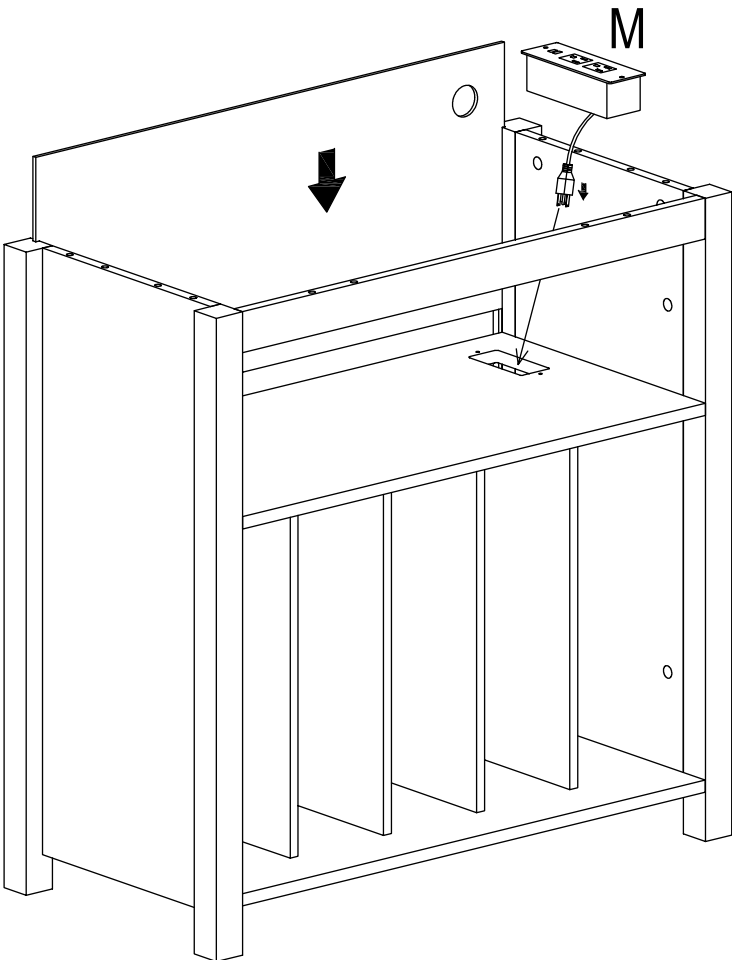


| | |
|---|----|
| M | x1 |
|  | |
| | |

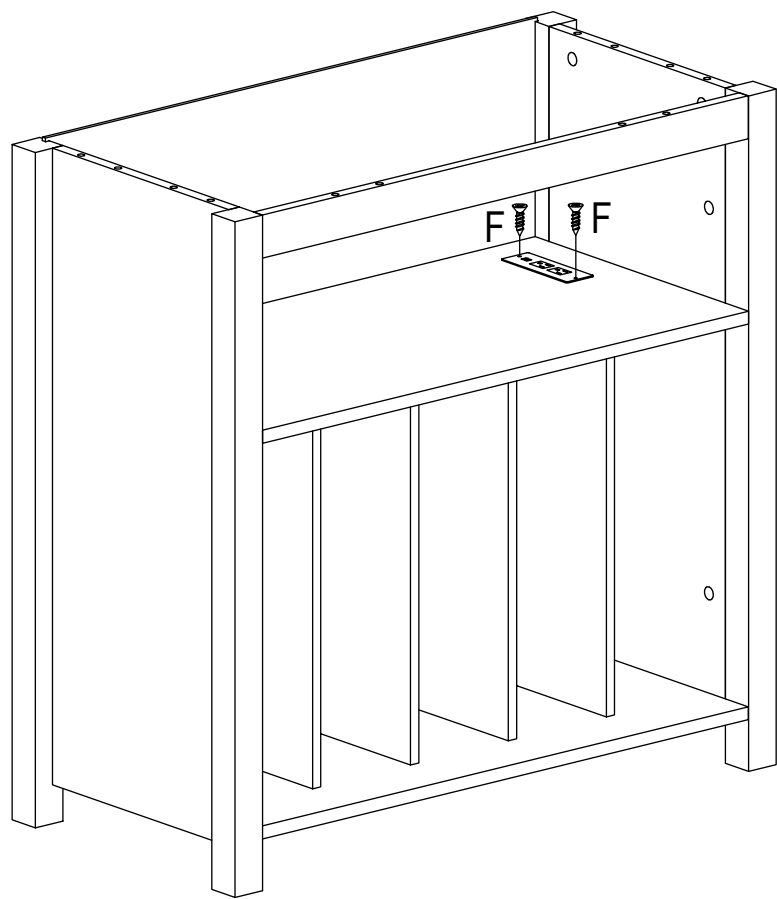

STEP 11




| | |
|--|----|
| F | x2 |
|  | |
| 3.5×14mm | |

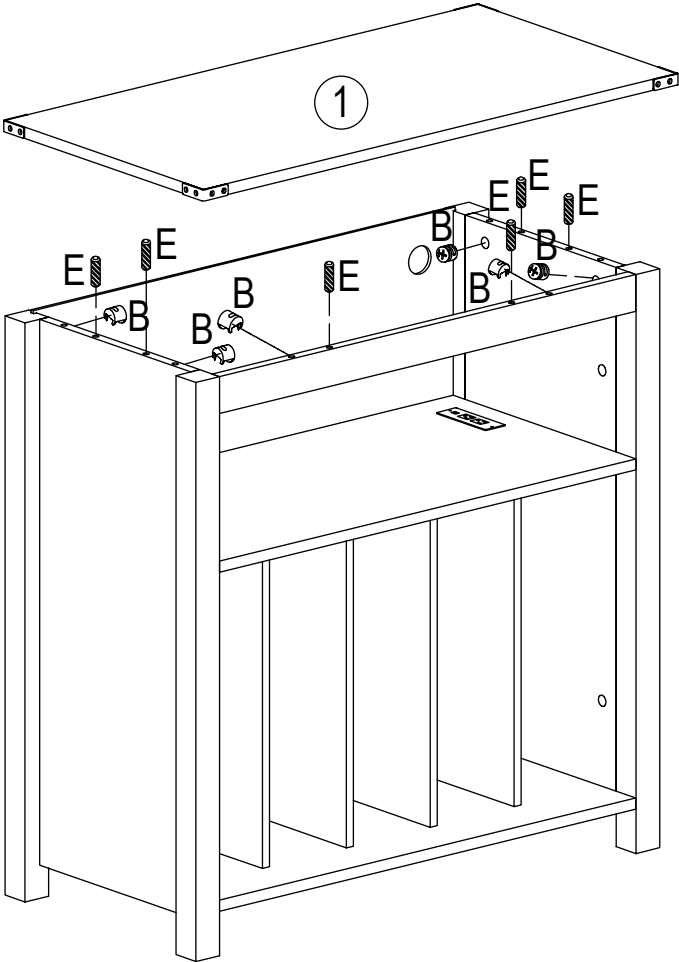STEP 12




| | | | |
|---|----|---|----|
| B | x6 | E | x6 |
|  | |  | |
| Ø15×12mm | | Ø8×30mm | |


STEP 13

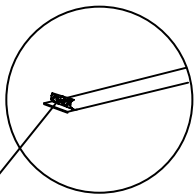

Tear off the tape and apply it to the bottom plate, then press it firmly with your hand

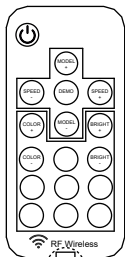


Please remove the plastic film here before using the remote control

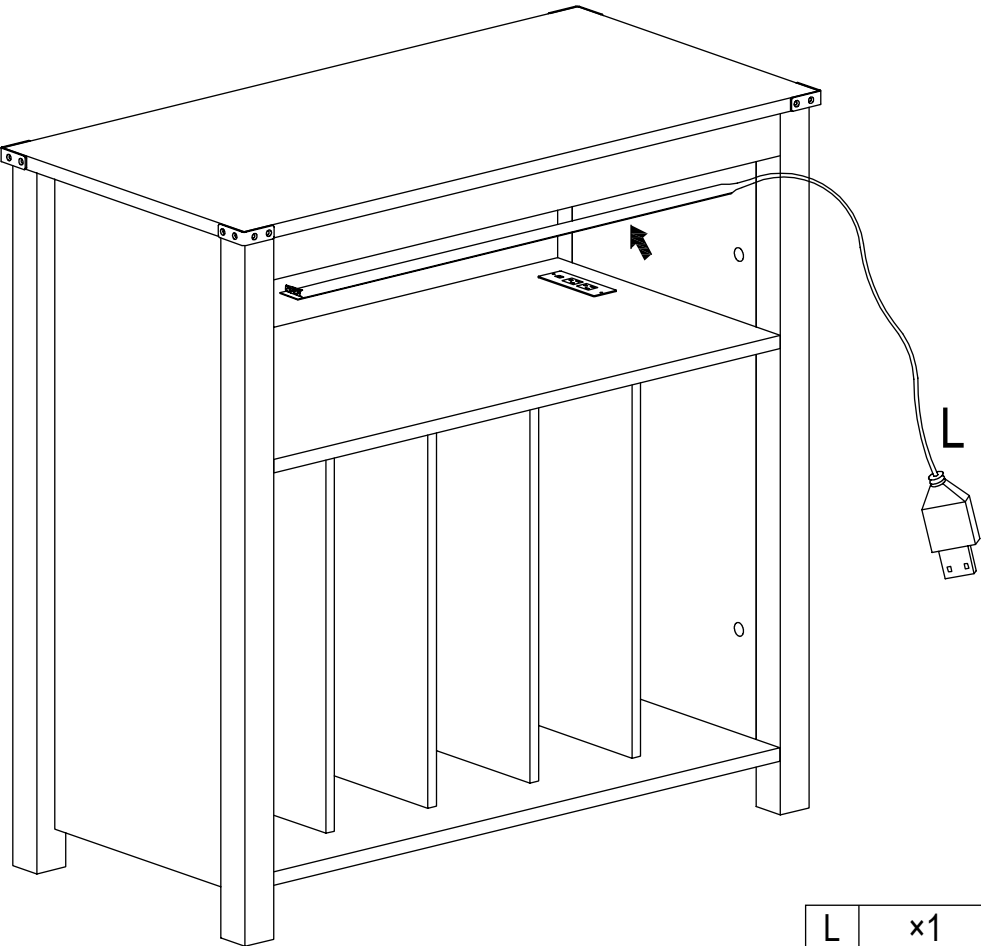

| | |
|---|----|
| L | x1 |
| | |
| | |


Tips

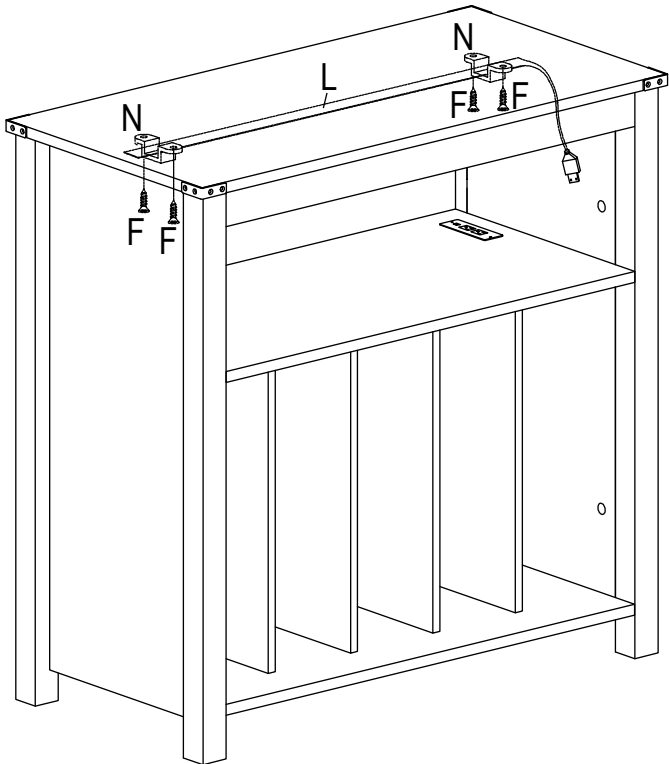


After the installation of LED lights, if necessary, you can be reinforced with locking clips(N).



| | | | |
|----------|----|---|----|
| F | x4 | N | x2 |
| | | | |
| 3.5×14mm | | | |

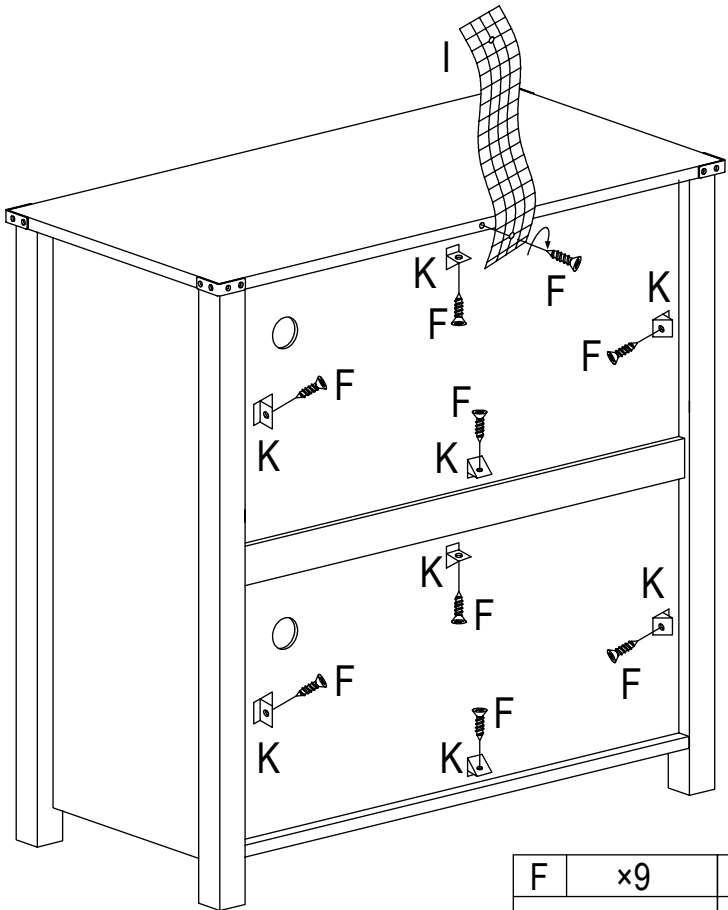STEP 14







| | | | | | |
|---|----|--|----|--|----|
| F | x9 | I | x1 | K | x8 |
|  | |  | |  | |
| 3.5×14mm | | 155×20mm | | 14×14×9mm | |

STEP 15

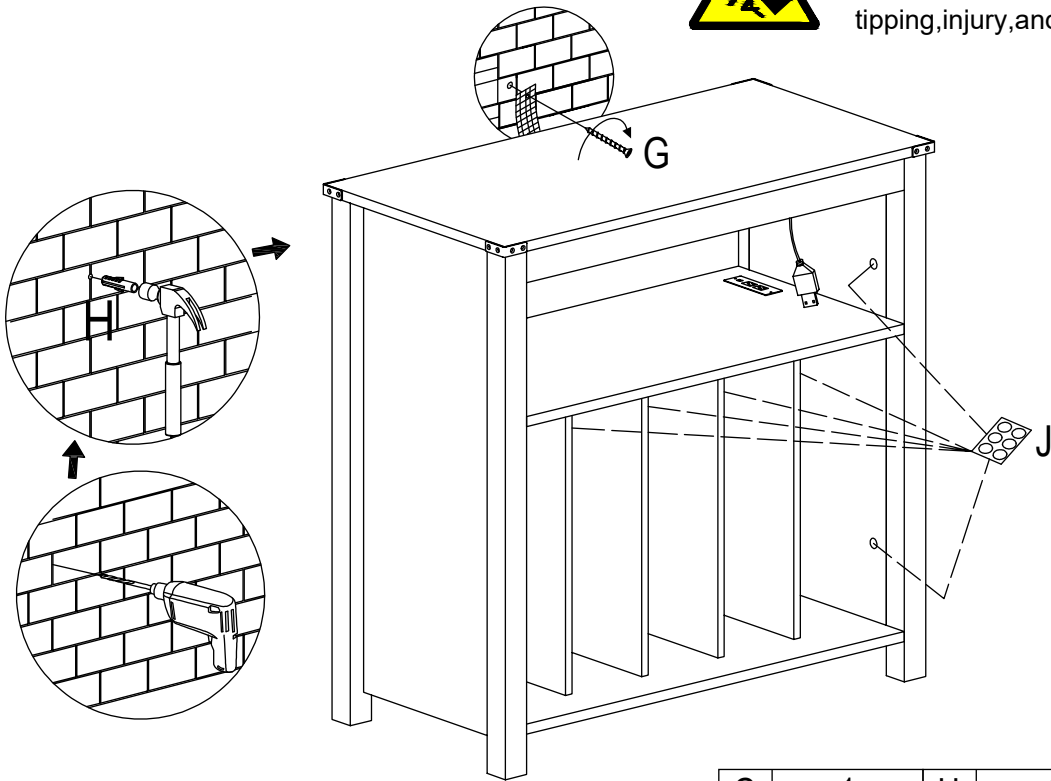

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.



| | | | | | |
|--|----|---|----|---|----|
| G | x1 | H | x1 | J | x4 |
|  | |  | |  | |
| 4×35mm | | Ø8×40mm | | Ø20mm | |

Installation Completed