

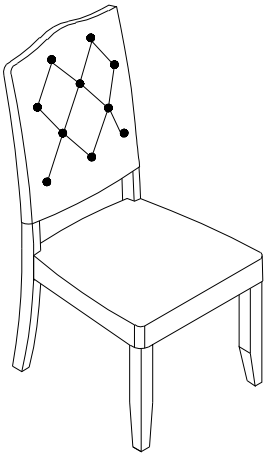
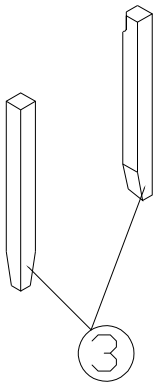
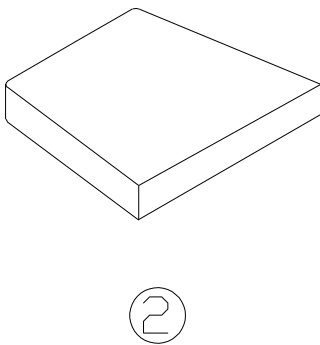


4068-02 : NEWBERRY UPHOLSTERY SIDE CHAIR (MOCHA BROWN)

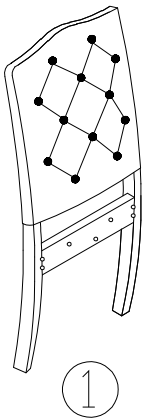

ASSEMBLY INSTRUCTIONS

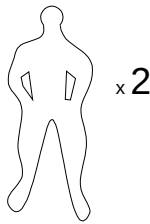


Hardwares

CODE	PICTURE	SIZE	AMOUNT
A		M6 x 45mm	7 pcs
B		M6 x 80mm	4 pcs
C		Ø6/13 mm	11 pcs
D		Ø6/19 mm	11 pcs
E		4 x 110 mm	1pc


NOTE: Do not fully tighten all screws and bolts until the entire item is completely assembled

Step1

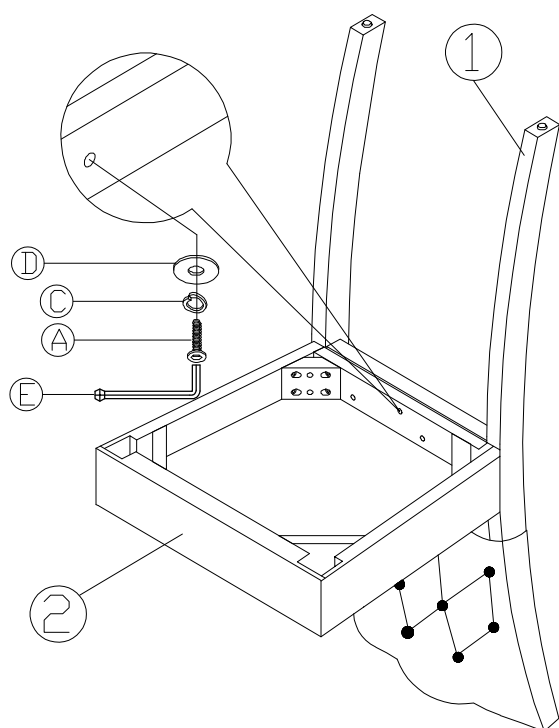


			
M6 x 45mm 3pcs	Ø6/13 mm 3pcs	Ø6/19 mm 3pcs	4 mm 1pc

Step2

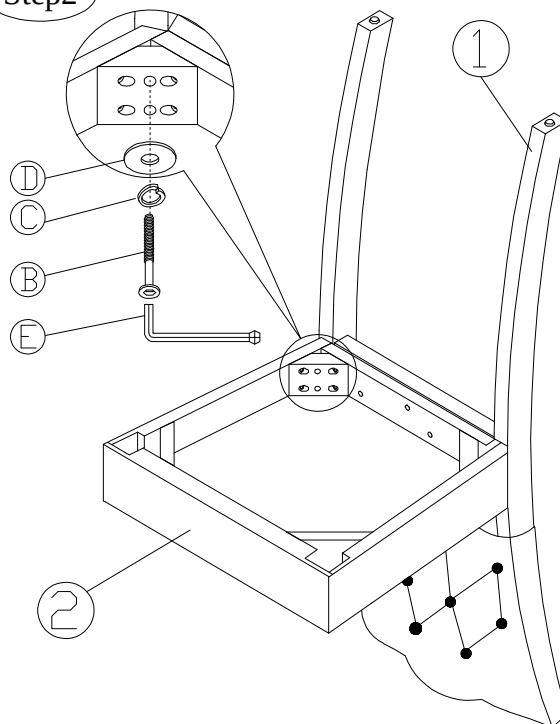

			
M6 x 80mm 4pcs	Ø6/13 mm 4pcs	Ø6/19 mm 4pcs	4 mm 1pc

Step3

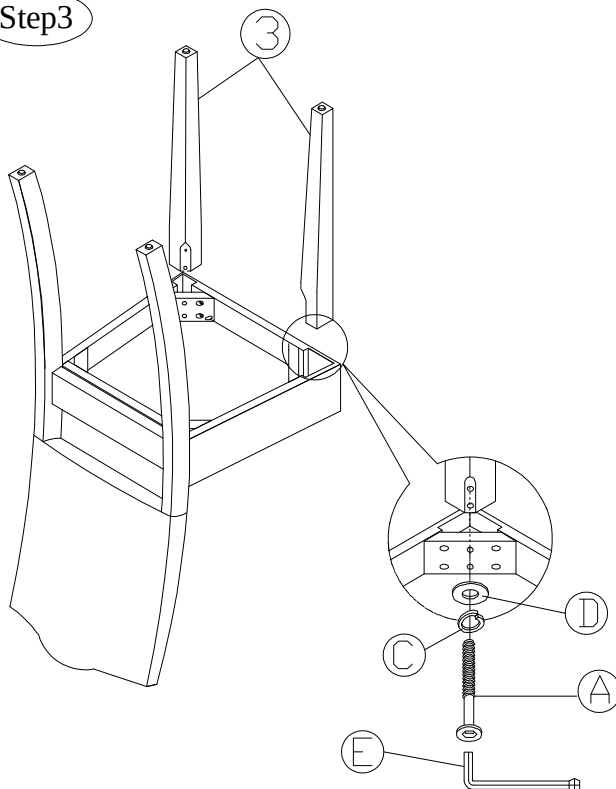

			
M6 x 45mm 4pcs	Ø6/13 mm 4pcs	Ø6/19 mm 4pcs	4 mm 1pc

COMPLETE

