

ASSEMBLY INSTRUCTIONS

GROUP NO.: 1196 BED

ITEM NO.: 1196F-HB

1196Q-HB

1196EK/CK-HB






FULL HEADBOARD





QUEEN HEADBOARD

E.KING/CALKING HEADBOARD



Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they be sent to you immediately.

! It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

HARDWARE LIST				
No.	Description	Sketch	Size	Quantity
1	Allen Bolt		Ø5/16" x 45mmL	6 PCS
2	Spring Washer		Ø5/16"	6 PCS
3	Flat Washer		Ø5/16" x 19mmL	6 PCS
4	Allen Bolt		Ø1/4" x 38mmL	4 PCS
5	Allen Key		4mmL	1 PC

PARTS LIST			
No.	Description	Sketch	Quantity
A	Headboard		1 PC
B	Right Headboard Post		1 PC
C	Left Headboard Post		1 PC
D	Wood Block 80*30*20 mmL		2 PCS

STEP 1 : Attached the Wood Block(D) to the Right & Left Headboard Post(B&C) by using Allen Bolt(4) and Allen Key(5).

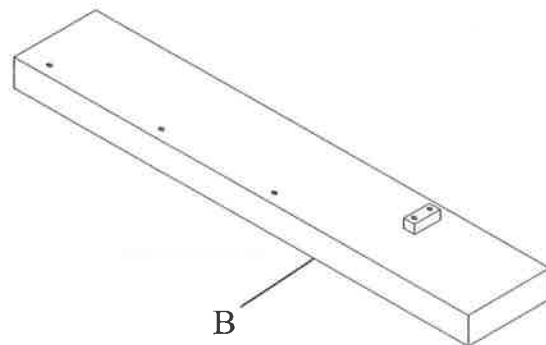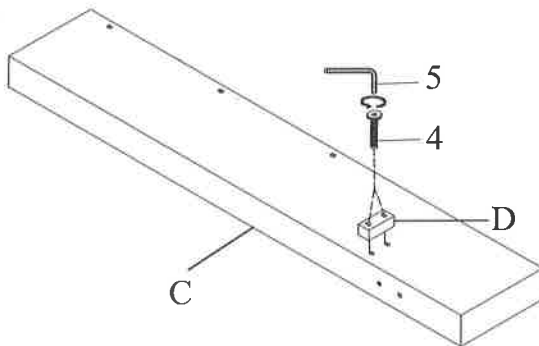

ASSEMBLY INSTRUCTIONS

GROUP NO.: 1196 BED

ITEM NO.: 1196F-HB

1196Q-HB


1196EK/CK-HB

FULL HEADBOARD

QUEEN HEADBOARD

E.KING/CALKING HEADBOARD

STEP 2 : Attached the Right & Left Headboard Post(B&C) to the Headboard(A) by using Allen Bolt(1), Spring Washer(2), Flat Washer(3) and Allen Key(5).

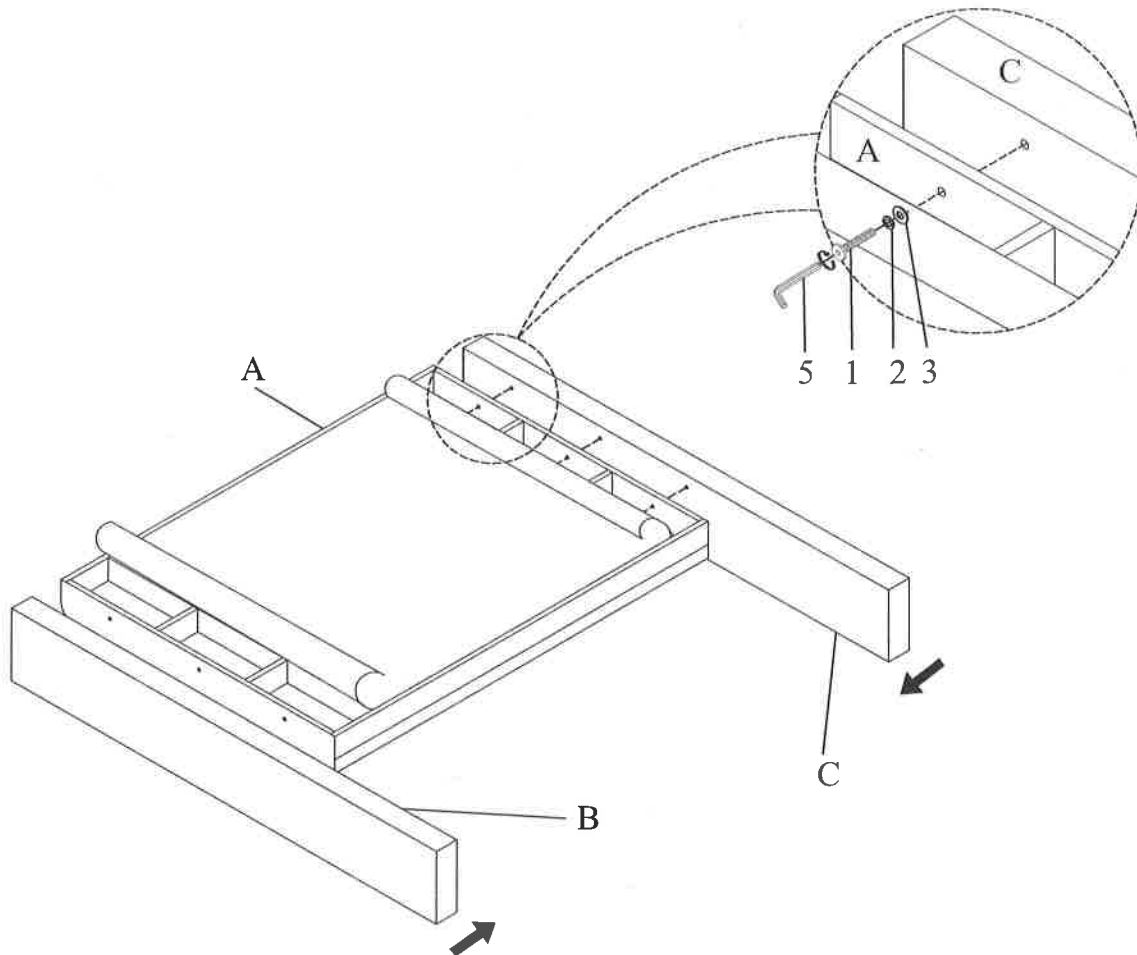










ASSEMBLY INSTRUCTIONS









GROUP NO.: 1196 BED

ITEM NO.: 1196CK-FB+RS CAL KING FOOTBOARD + SIDERAILS WITH 13PCS SLATS


Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they be sent to you immediately.

⚠ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

HARDWARE LIST				
No.	Description	Sketch	Size	Quantity
1	Thread Bolt		Ø5/16" x 80mmL	8 PCS
2	Curve Washer		Ø5/16"	8 PCS
3	Hex Nut		Ø5/16"	8 PCS
4	Screw		#4 x 30mmL	27 PCS
5	Allen Bolt		Ø1/4" x 38mmL	2 PCS
6	Open Wrench		Ø5/16"	1 PC
7	Allen Key		4mmL	1 PC
8	Allen Bolt		Ø1/4" x 55mmL	10 PCS
9	Spring Washer		Ø1/4"	10 PCS

PARTS LIST			
No.	Description	Sketch	Quantity
A	Headboard		1 PC
B	Footboard		1 PC
C	Side Rail		2 PCS
D	Slat Roll		1 Set
E	Center Slat Support		1 PC
F	Support Leg		4 PCS
G	Wood Block		1 PC
H	Cap Rail		2 PCS

STEP 1 : Attached the Wood Block(G) to the Footboard(B) by using Allen Bolt(5) and Allen Key(7).

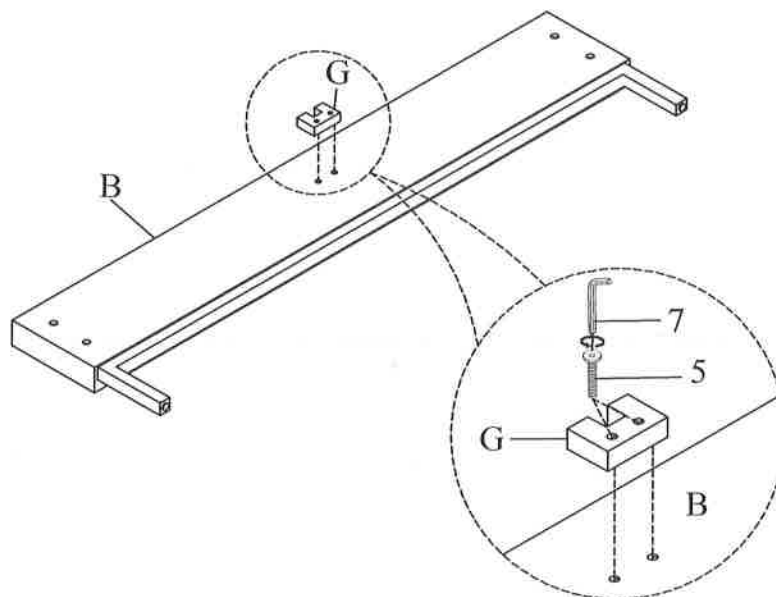


ASSEMBLY INSTRUCTIONS

GROUP NO.: 1196 BED


ITEM NO.: 1196CK-FB+RS

CAL KING FOOTBOARD + SIDERAILS WITH 13PCS SLATS

STEP 2 : Attach Side Rail(C) to Headboard(A) and Footboard(B) by using Thread Bolt(1), Curve Washer(2), Hex Nut(3) and Open Wrench(6).

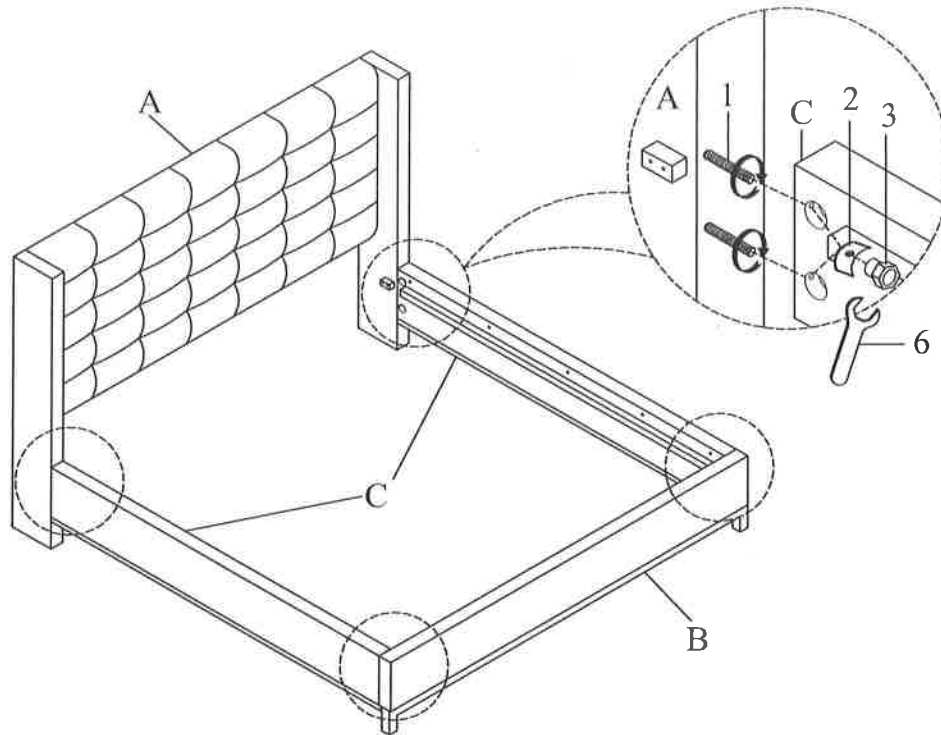

STEP 3 : Attached the Support Leg(F) and Center Slat Support(E) to the Slat Roll(D)

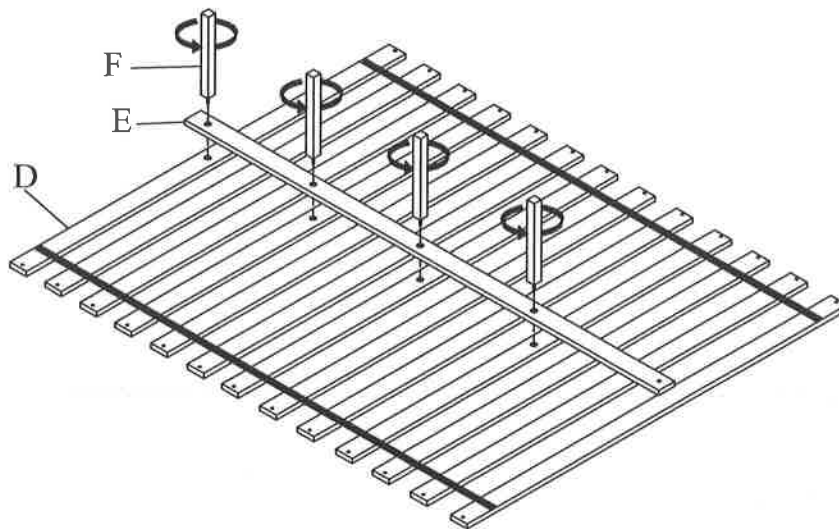


ASSEMBLY INSTRUCTIONS

GROUP NO.: 1196 BED


ITEM NO.: 1196CK-FB+RS CAL KING FOOTBOARD + SIDERAILS WITH 13PCS SLATS

STEP 4 : Then place Slat Roll(D) on Side Rail.

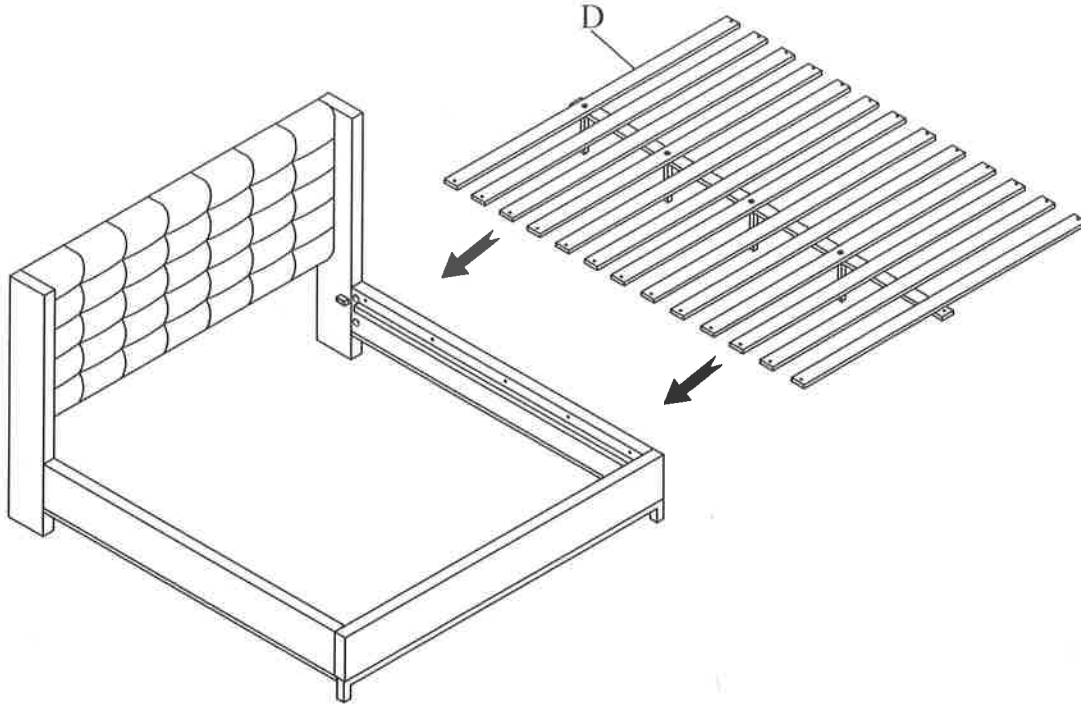


STEP 5 : Attached the Center Slat Support(E) to the Wood Block(G) by using Screw(4).
Attached the Slat Roll(D) to the Side Rail(C) by using Screw(4).
NOTE: SCREWDRIVER NOT INCLUDED.

STEP 5.1

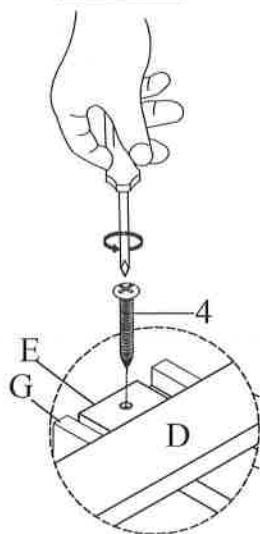

STEP 5.2

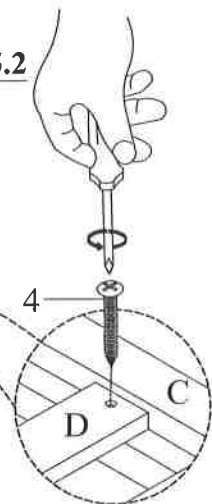


ASSEMBLY INSTRUCTIONS

GROUP NO.: 1196 BED

ITEM NO.: 1196CK-FB+RS

CAL KING FOOTBOARD + SIDERAILS WITH 13PCS SLATS

STEP 6 : Attached the Cap Rail(H) to the Side Rail(C) by using Allen Bolt(9), Spring Washer(8) and Allen Key(7).

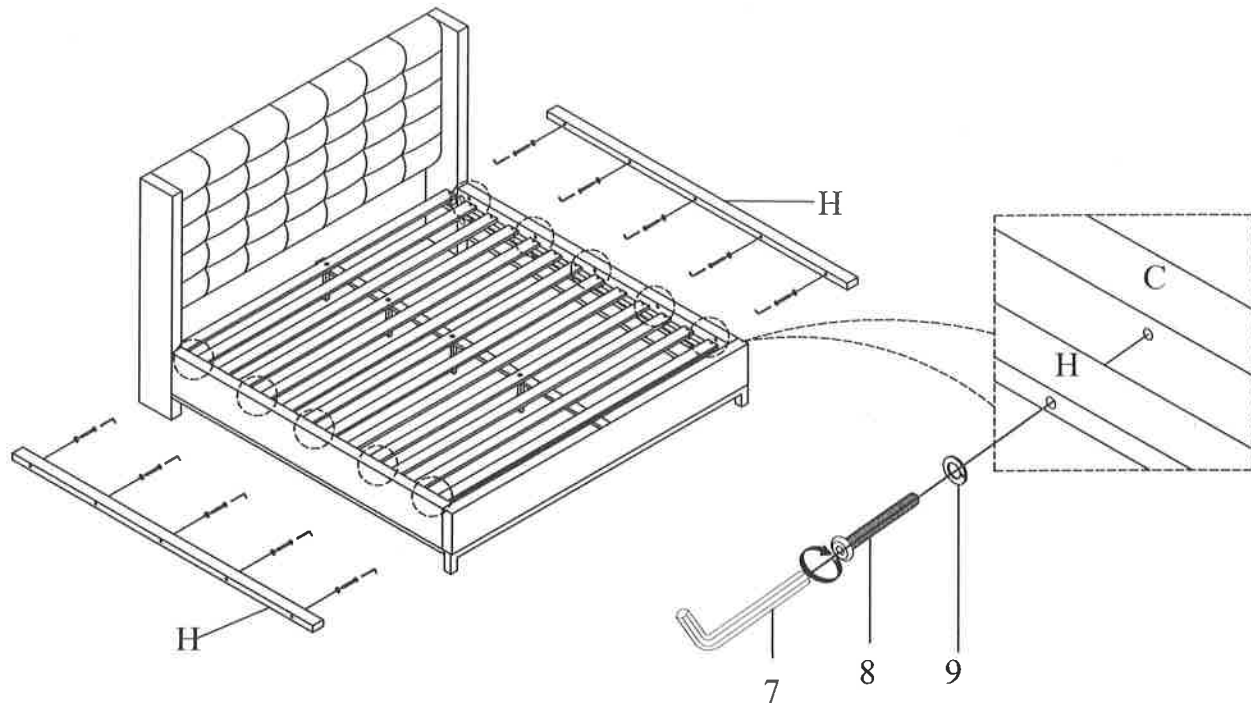

COMPLETE

