

# *ASSEMBLY INSTRUCTIONS*

## *BM296781*



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A BACK CUSHION




1PC

B SEAT CUSHION




1PCS

C FRONT LEG

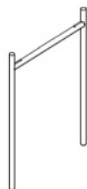

1PCS

D BACK LEG

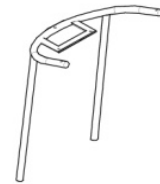

1PCS

E LEG CONNECTING  
TUBE



2PCS

F FOOTREST



1PCS

## NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES


## HARDWARE IDENTIFICATION

1	ALLEN KEY (6MM )		1PC	6	ALLEN SCREW (M6*25)		4PCS
2	ALLEN KEY (4MM)		1PC	7	ALLEN SCREW (M6*35)		2PCS
3	WRENCH SOCKET (M8)		1PCS	8	ALLEN SCREW (M8*40)		2PCS
4	ALLEN SCREW (M6*10)		2PCS	9	ALLEN SCREW (M6*55)		1PCS
5	ALLEN SCREW (M6*16)		2PCS				


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS


step1

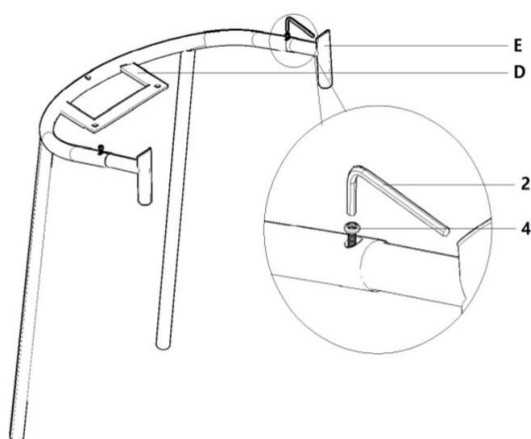

step2

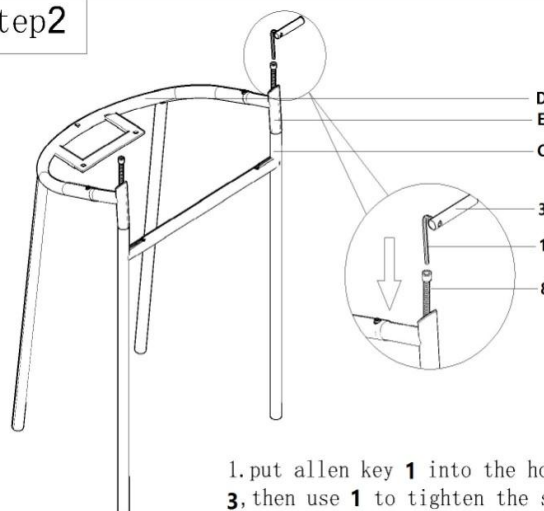


step3

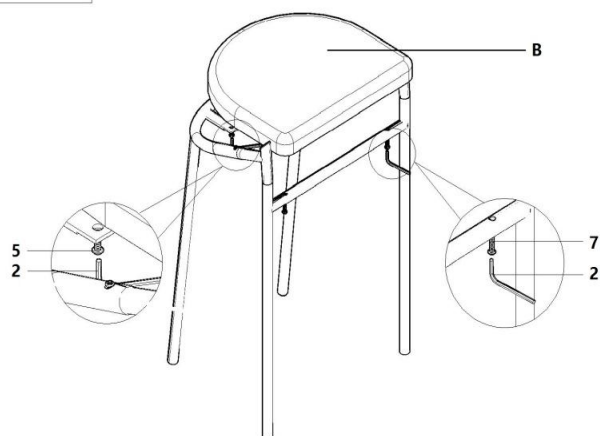


1.put the seat on the frame ,use allen key **2** to tighten screw **5** and **7** respectively,but not tighten completely.

step4

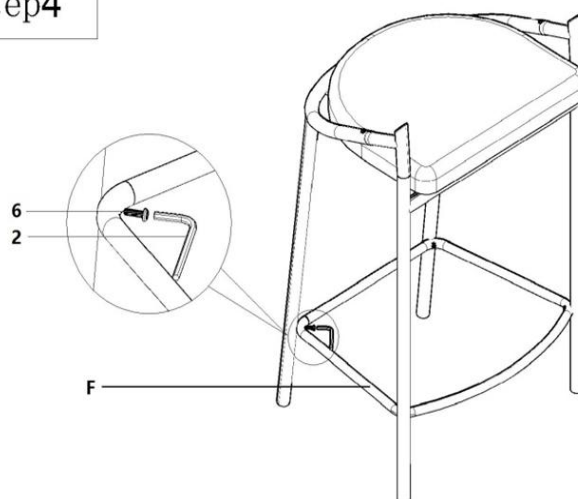

# ASSEMBLY INSTRUCTIONS


## step5

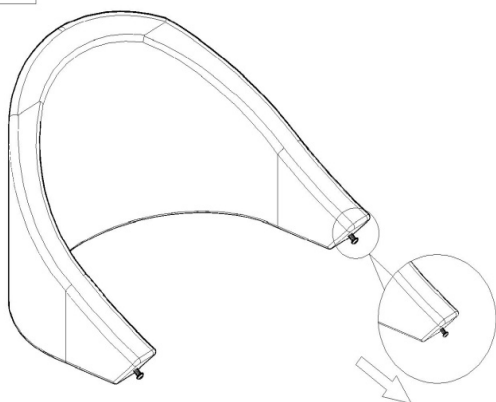

1. loosen the screw out about 10mm.


## step6

1. after finishing the step 5, insert the screw head into the hole of the frame.

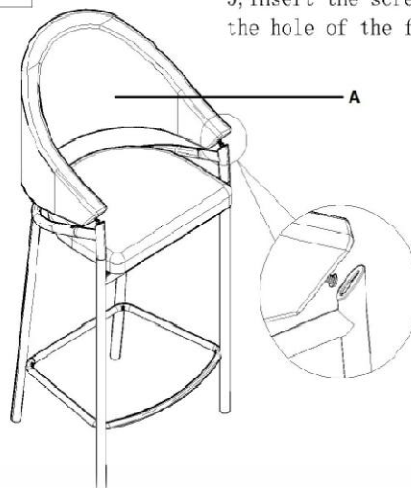

## step7

1. Use allen key **2** to tighten screw **9**, then tighten completely.  
2. tighten all the screw **5, 6, 7, 8, 9**, completely in all above steps.

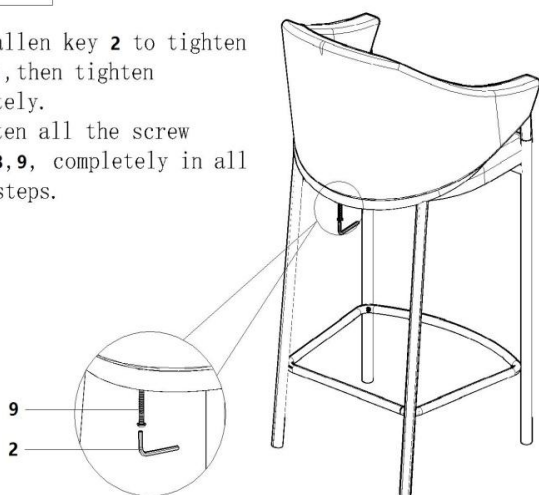

## COMPLETE

