



Assembly Guide

B2015P Dresser














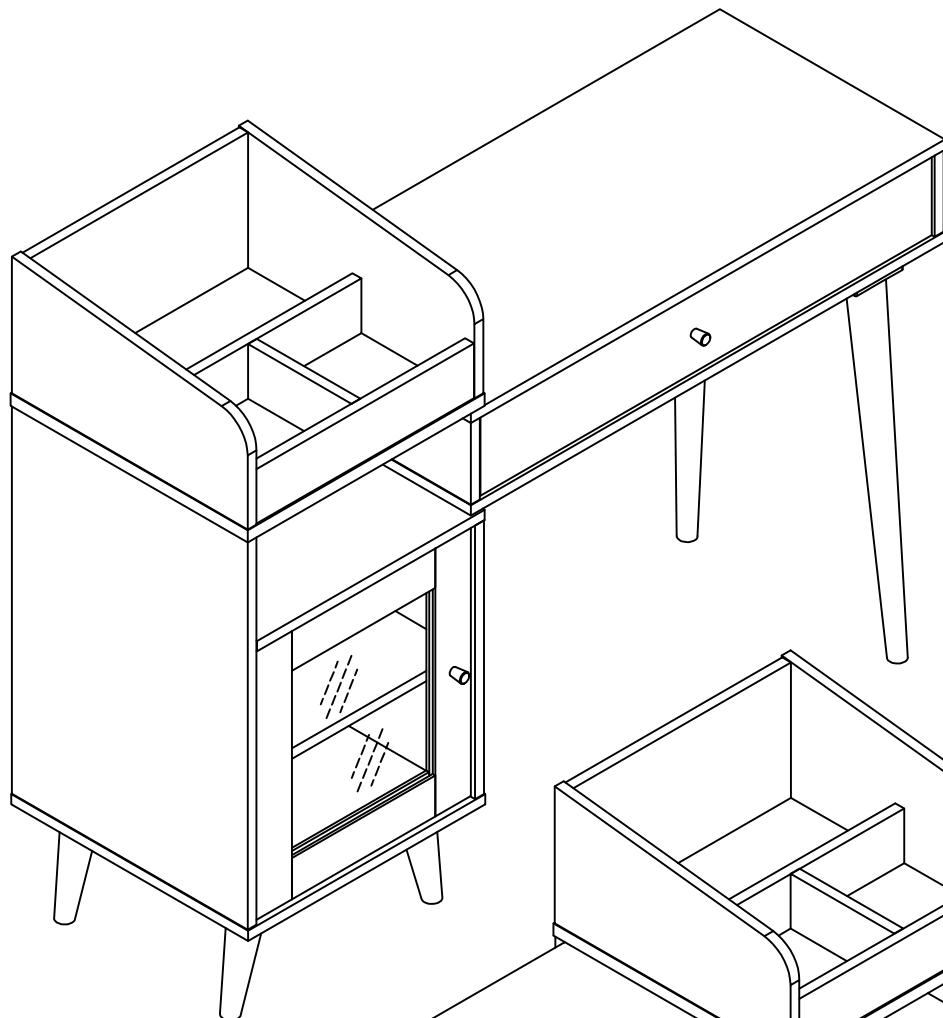


side cabinet
install in
left

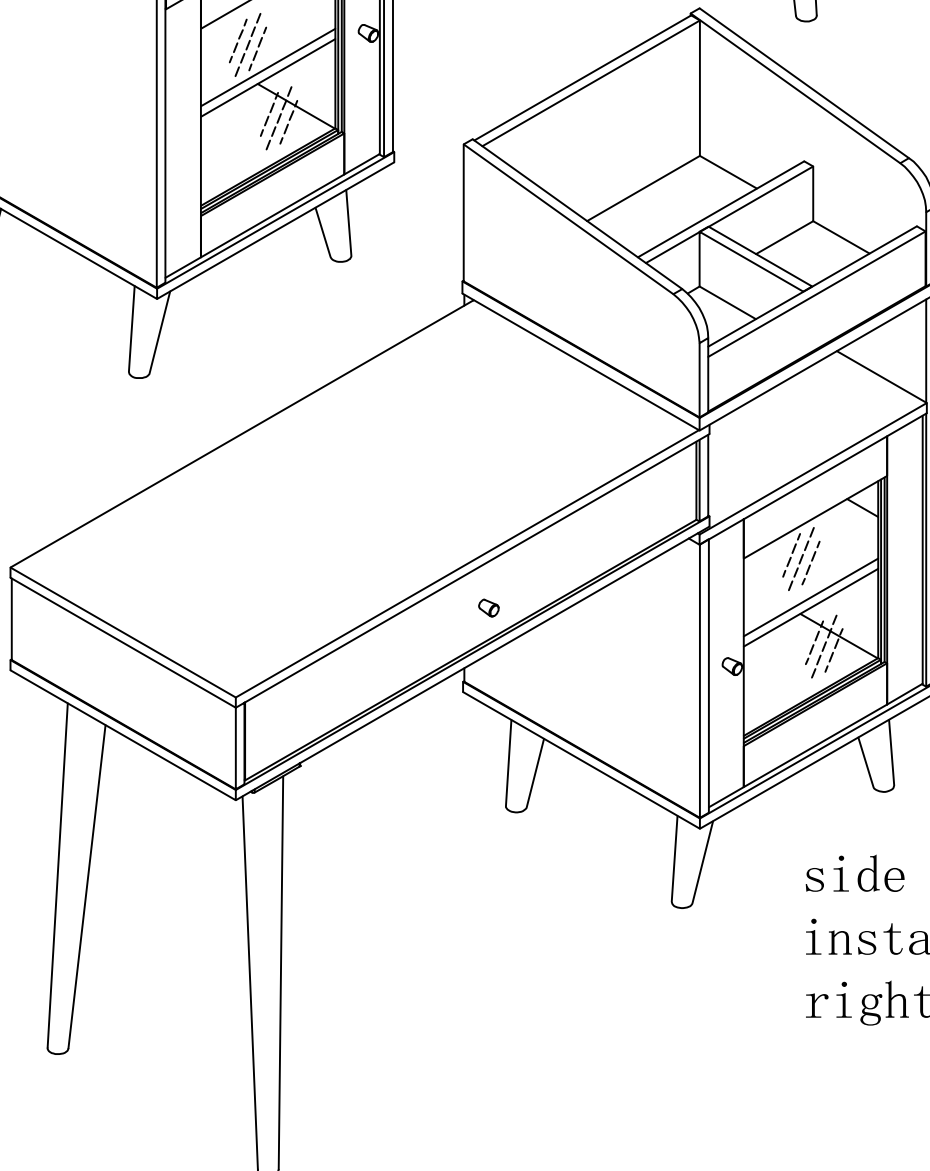










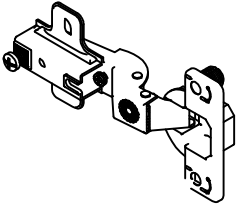
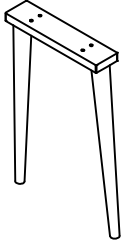
side cabinet
install in
right


PARTS LIST

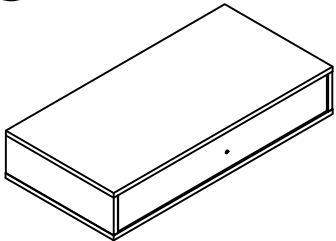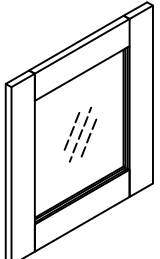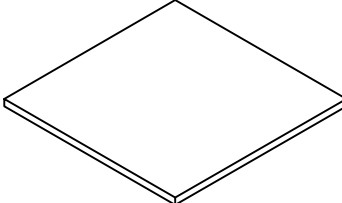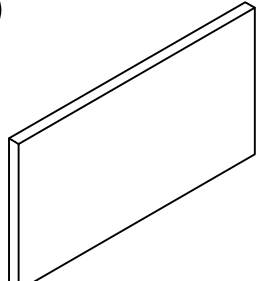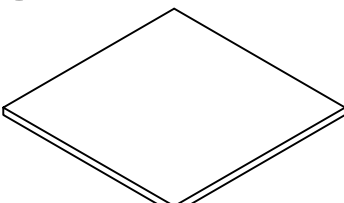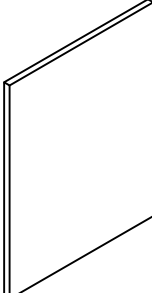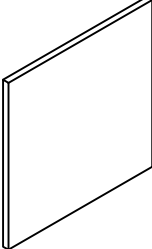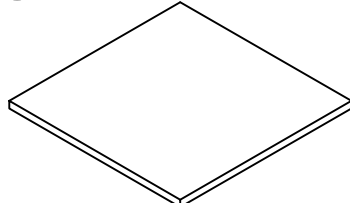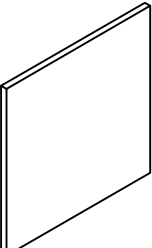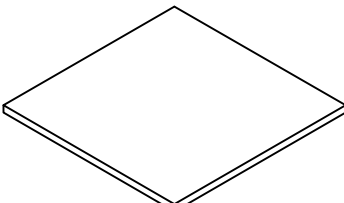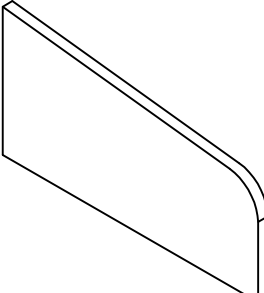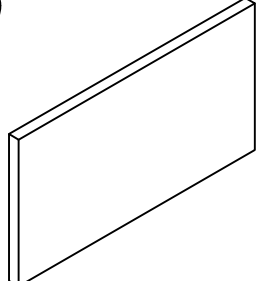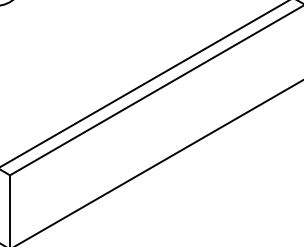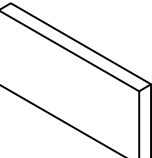① 	② 	③ 	④ 
table=1	side cabinet door panel=1	lower cabinet bottom panel=1	middle cabinet back panel=1
⑤ 	⑥ 	⑦ 	⑧ 
lower cabinet panel=1	lower cabinet tall side panel=1	lower cabinet inside side panel=1	lower cabinet laminate=1
⑨ 	⑩ 	⑪ 	⑫ 
lower cabinet back panel=1	upper cabinet bottom panel=1	upper cabinet side panel=2	upper cabinet back panel=1
⑬ 	⑭ 		
upper cabinet cross trim=2	upper cabinet vertical trim=1		

Tips: Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us. Assemble this item on a soft surface, such as carpet to protect the finish.


HARDWARE LIST
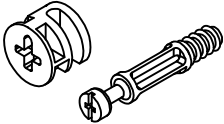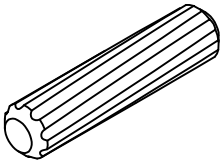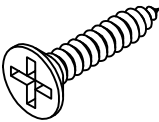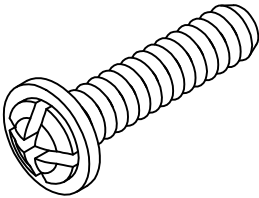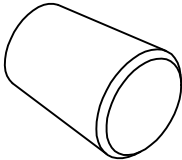
<p>(A)</p> 	<p>(B)</p> 	<p>(C)</p> 	<p>(D)</p> 	<p>(E)</p> 
<p>3 in 1 camlocks and rods=44</p>	<p>8*30 wood dowels=30</p>	<p>6*45 big flat screws=4</p>	<p>3.5*14 self-tapping screws=60</p>	<p>4*18 handle screws=2</p>
<p>(F)</p> 	<p>(G)</p> 	<p>(H)</p> 	<p>(I)</p> 	<p>(J)</p> 
<p>copper handles=2</p>	<p>black pads=4</p>	<p>short solid wood legs=4</p>	<p>80*80 iron sheets=4</p>	<p>large curved door hinge=2</p>
<p>(K)</p>  <p>long solid wood legs=1</p>				

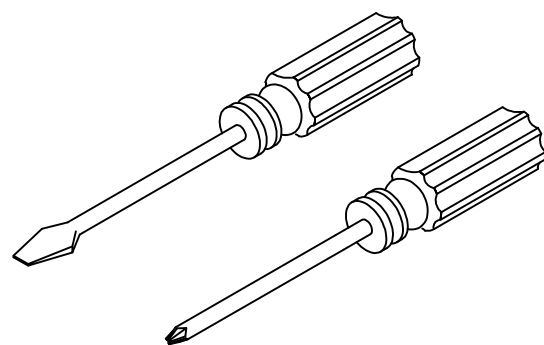


phillips head screw driver required
for assemble---not include

Step 1

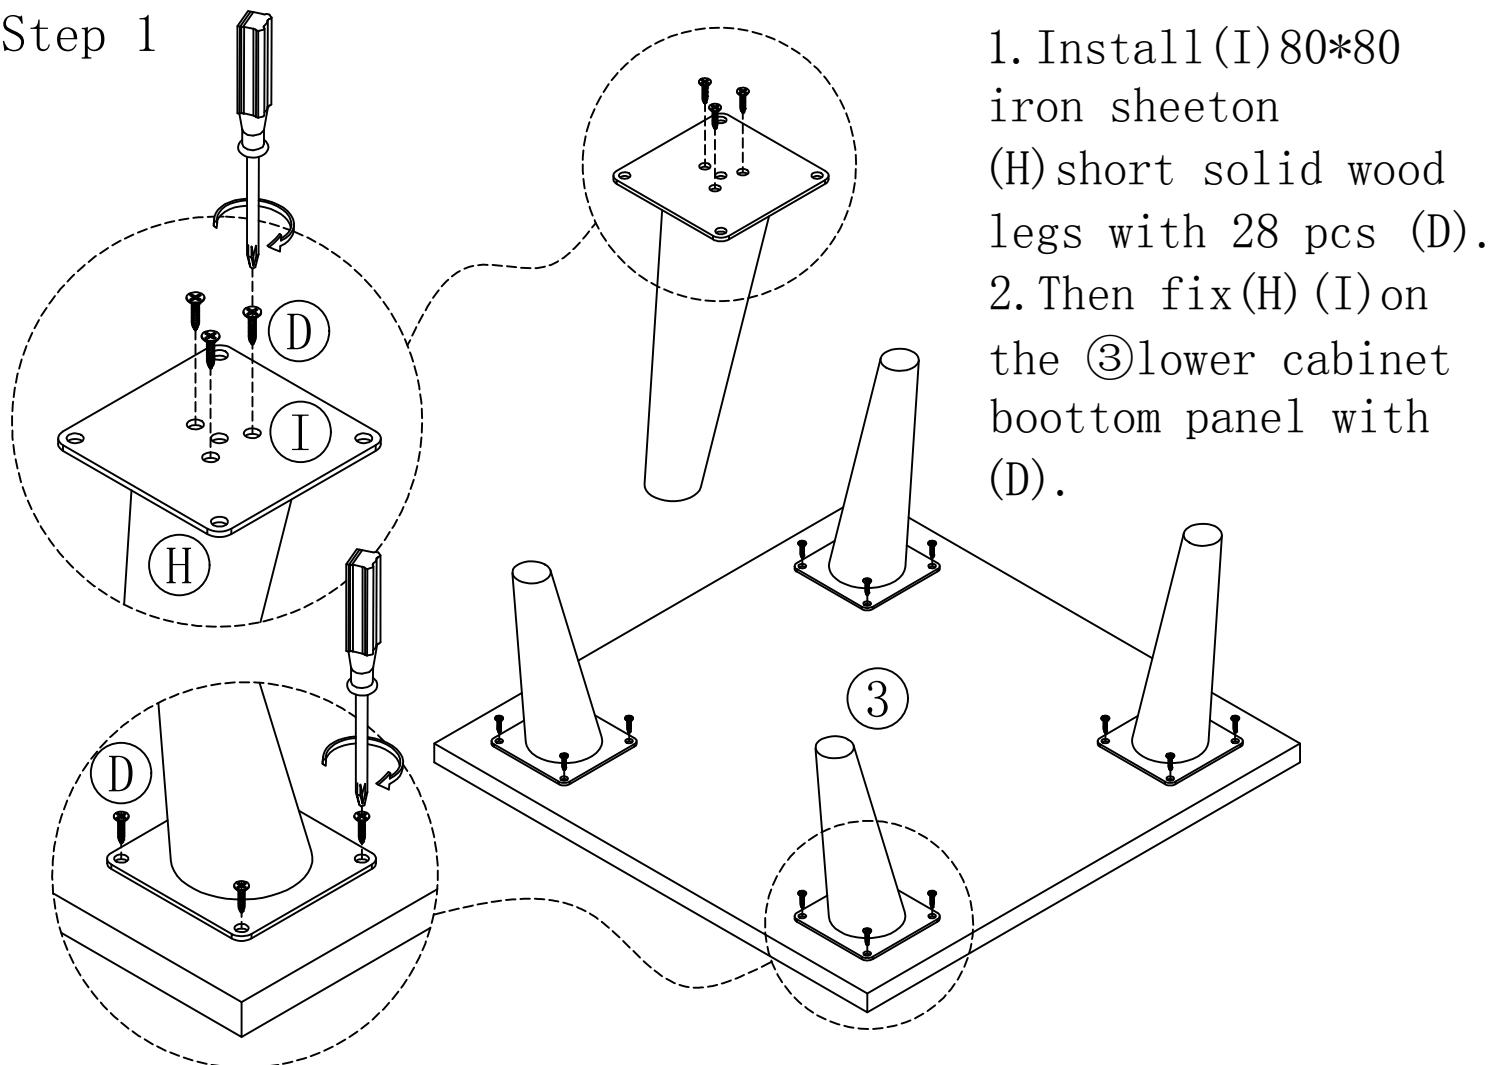


Step 2

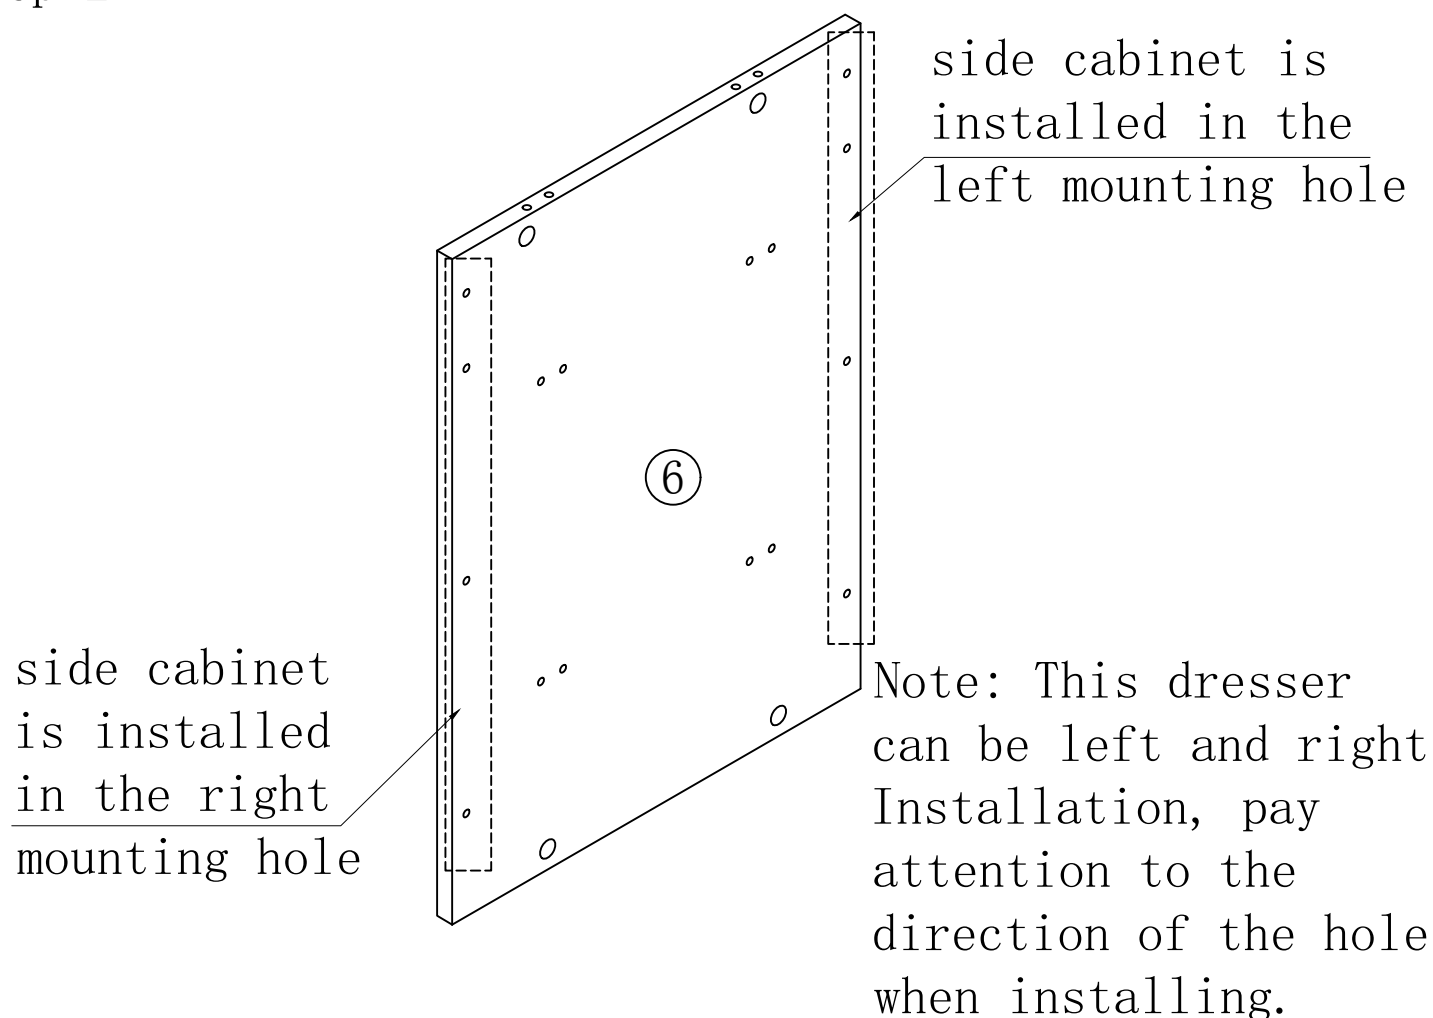


Step 3

Connect ③④⑤
⑥⑦⑧⑨⑩ with
28 pcs (A) and 14
pcs (B).

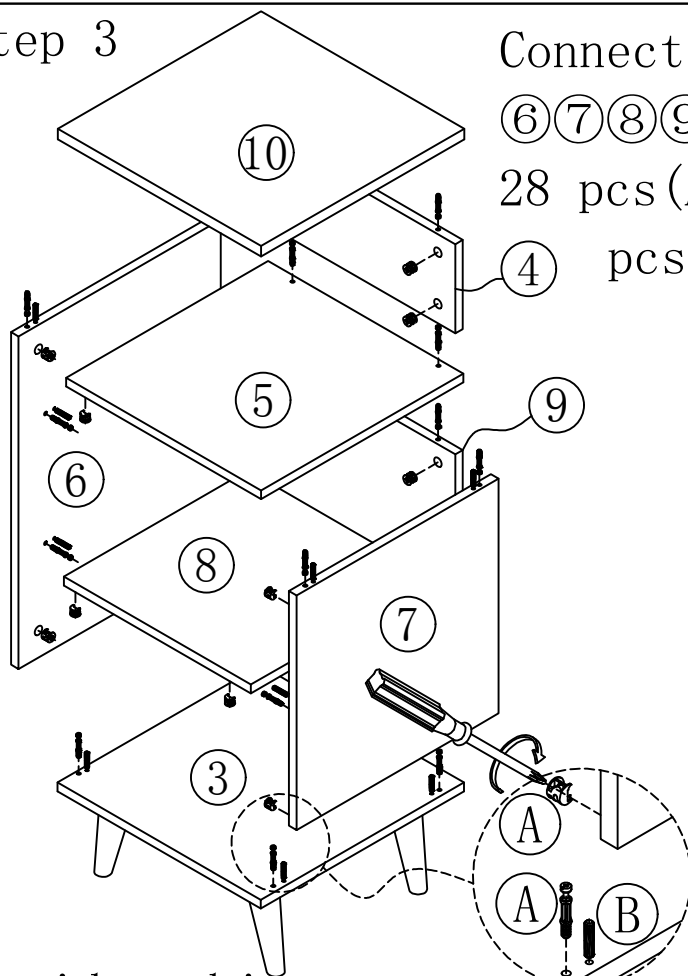


side cabinet
install in left

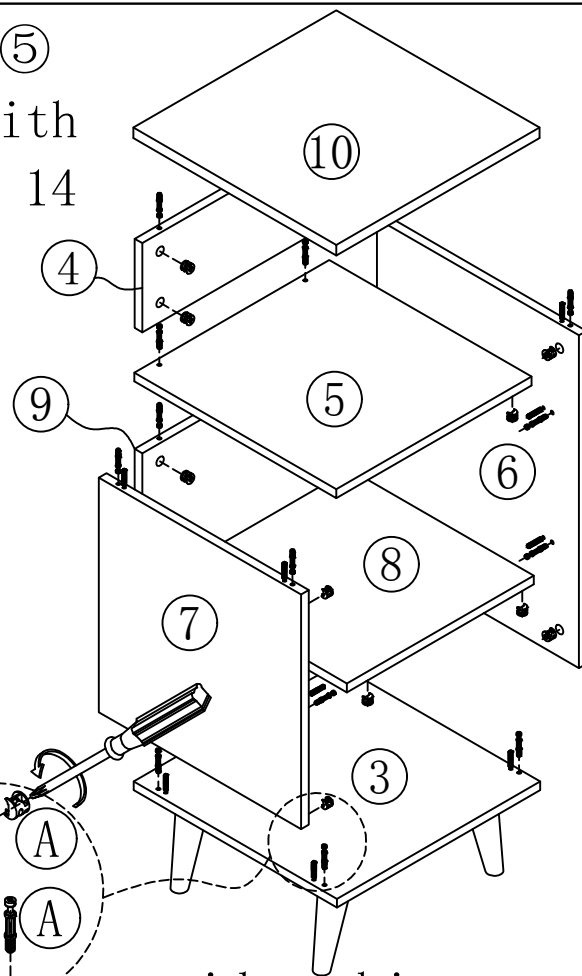

side cabinet
install in right


Step 4

Connect ⑪⑫⑬⑭
with 4 pcs (A) and 12
pcs (B).

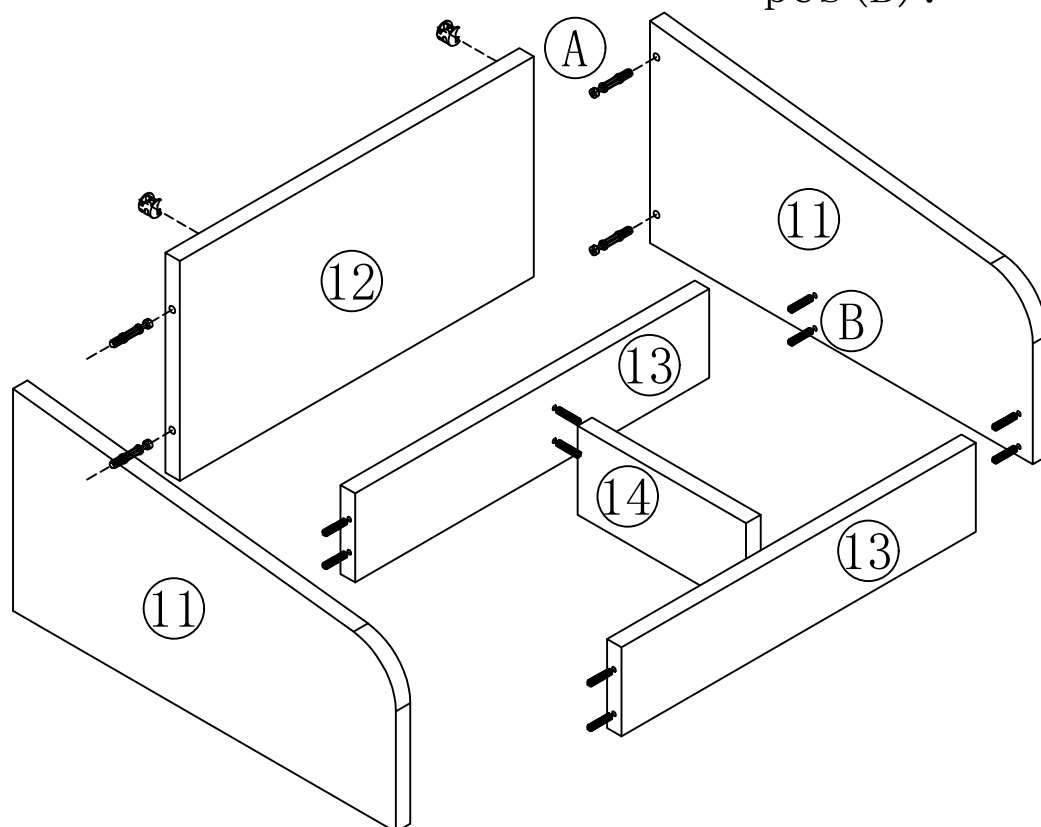


Step 5

Connect the upper and lower cabinet with 8 pcs (A) and 4 pcs (B).

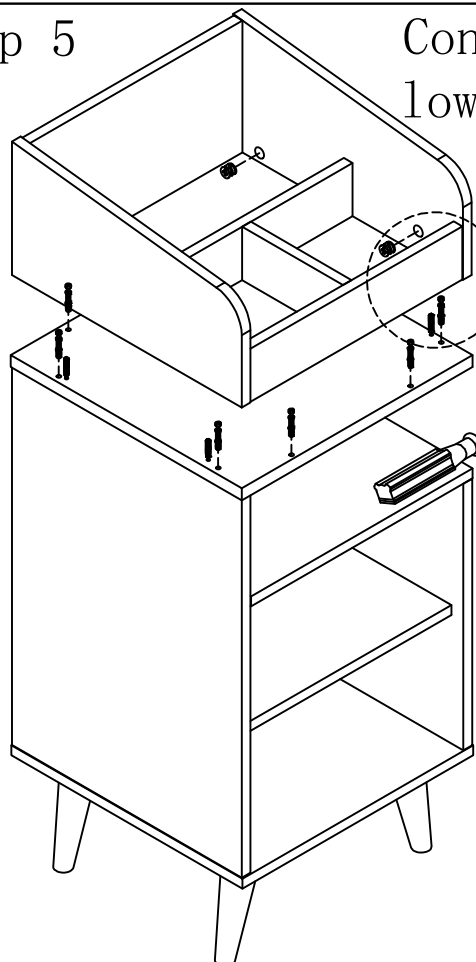


side cabinet
install in left

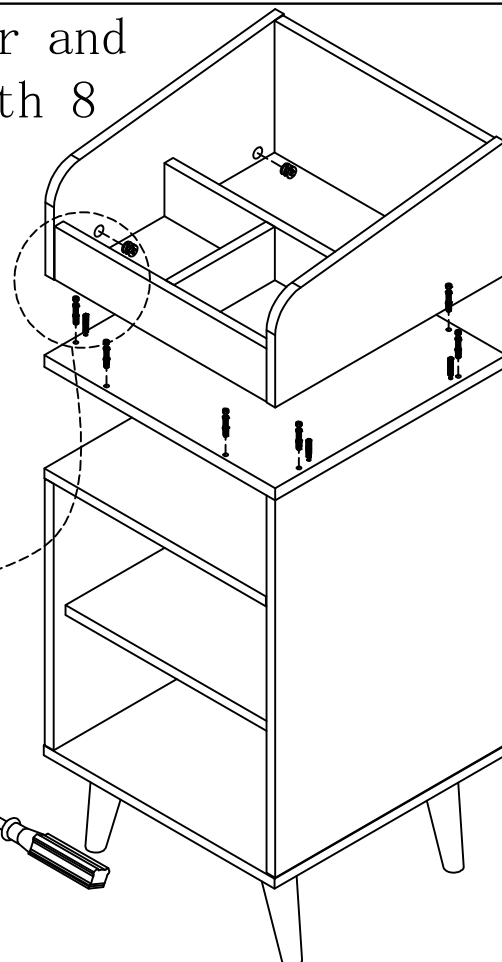


side cabinet
install in right

Step 6

Install (K) long solid wood legs on ① table with 4 pcs (C).

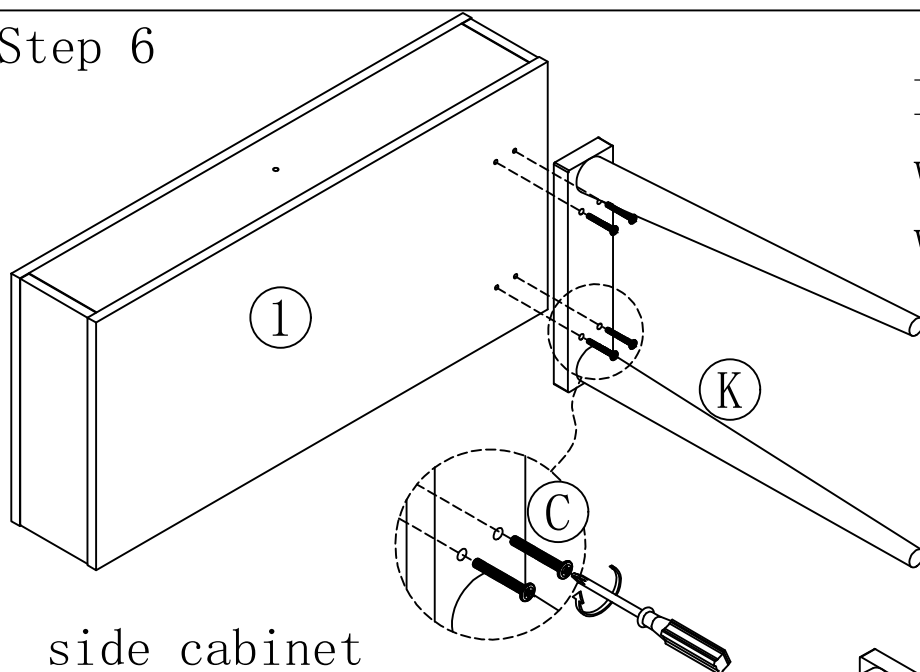



side cabinet
install in left

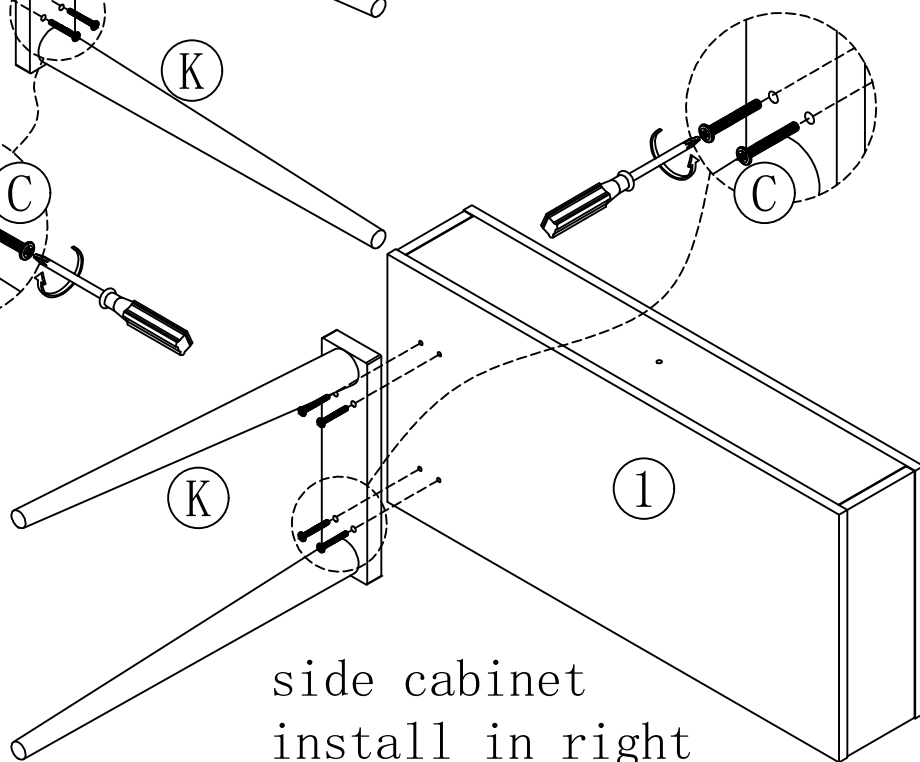



side cabinet
install in right

Step 7

Put (G) black pads on the side cabinet and put the table into the side cabinet.

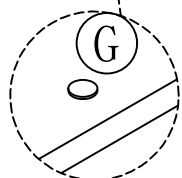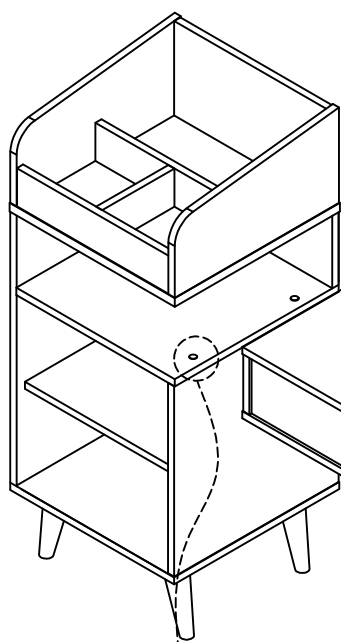


side cabinet
install in left

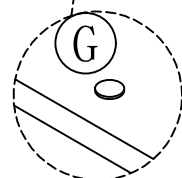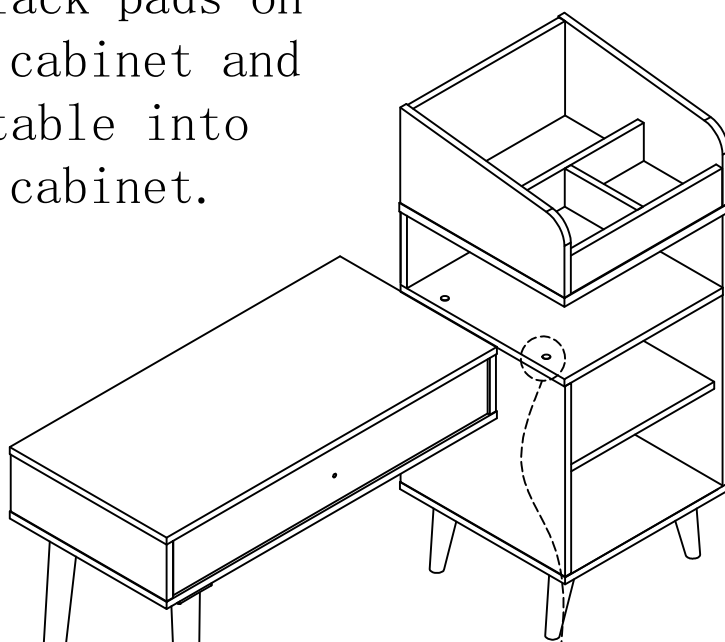


side cabinet
install in right

Step 8

Install (F) copper handle on the drawer panel with (E).

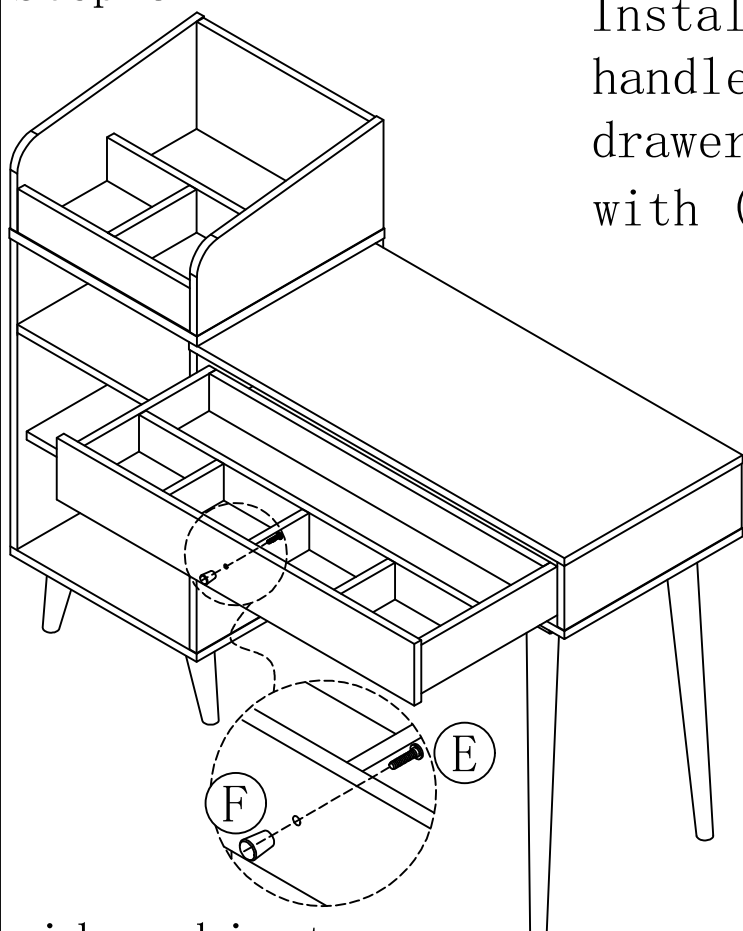


side cabinet
install in left

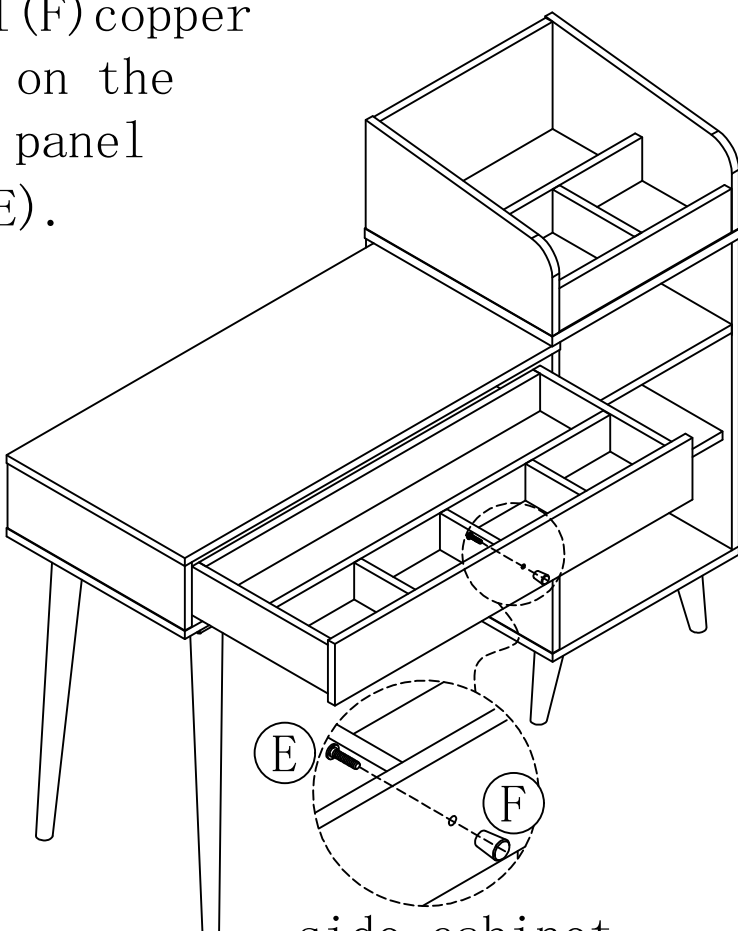


side cabinet
install in right

Step 9 1. Install ②side cabinet door panel on the side cabinet with (D) (J).

2. Then install (F) on the ②side cabinet door panel with (E).

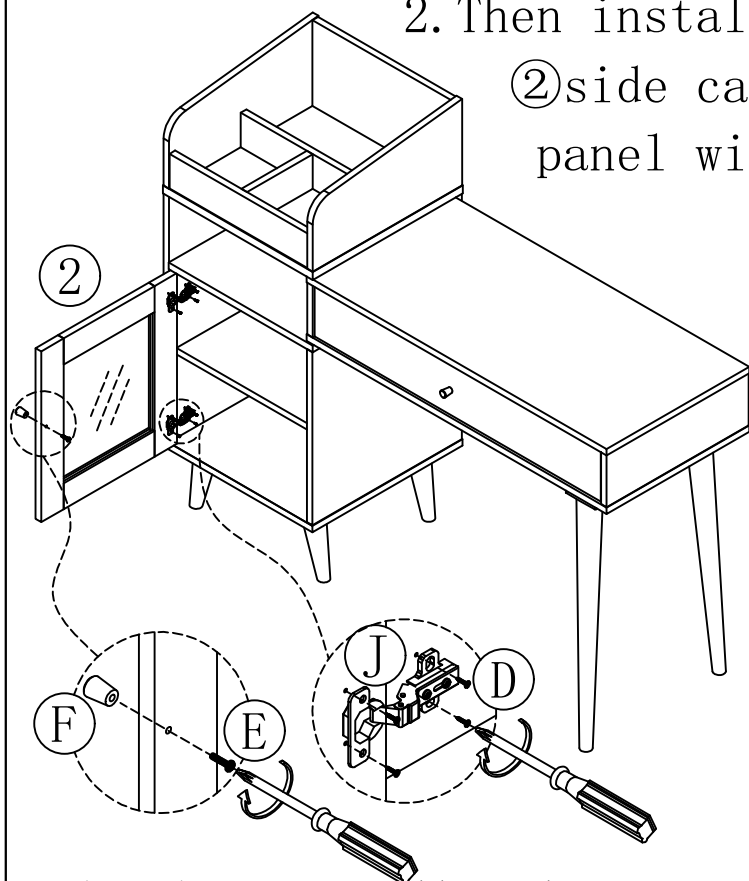


side cabinet install in left

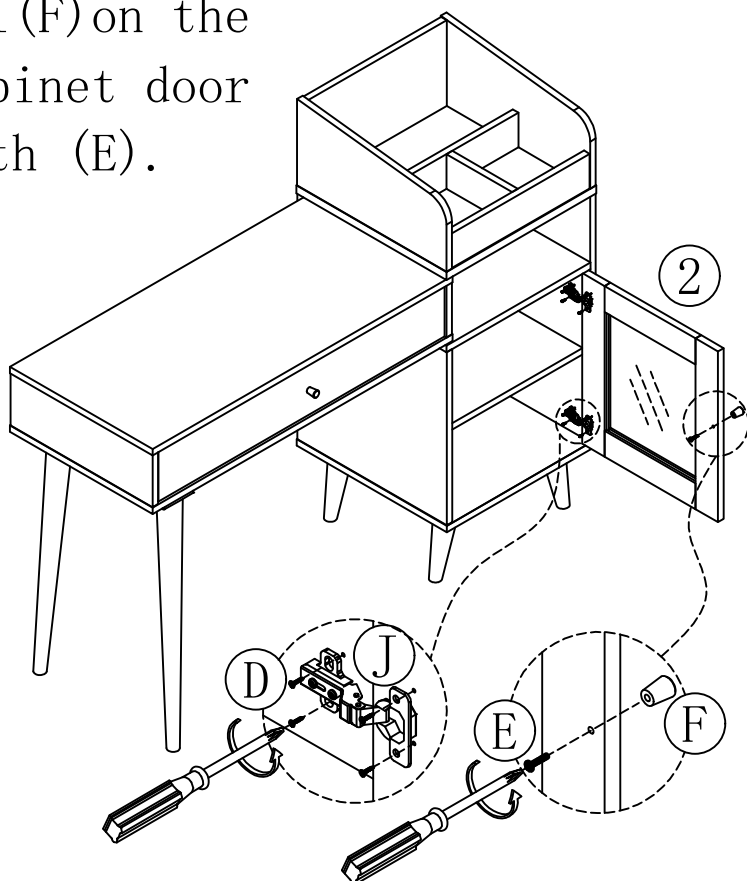


side cabinet install in right

Finished

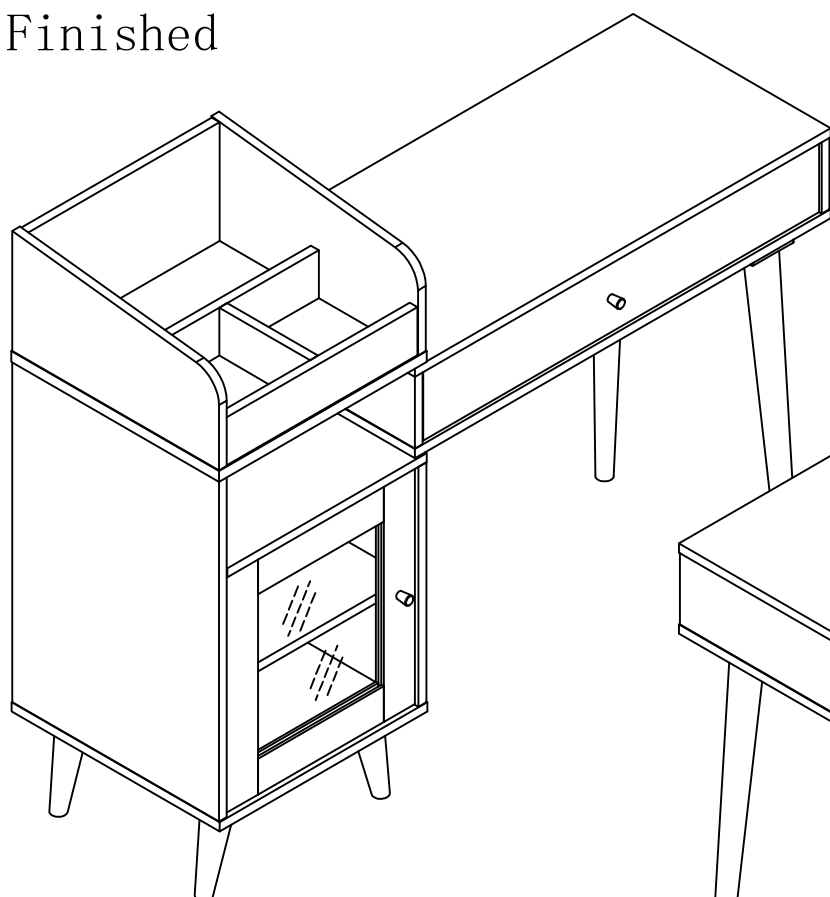

side cabinet
install in left

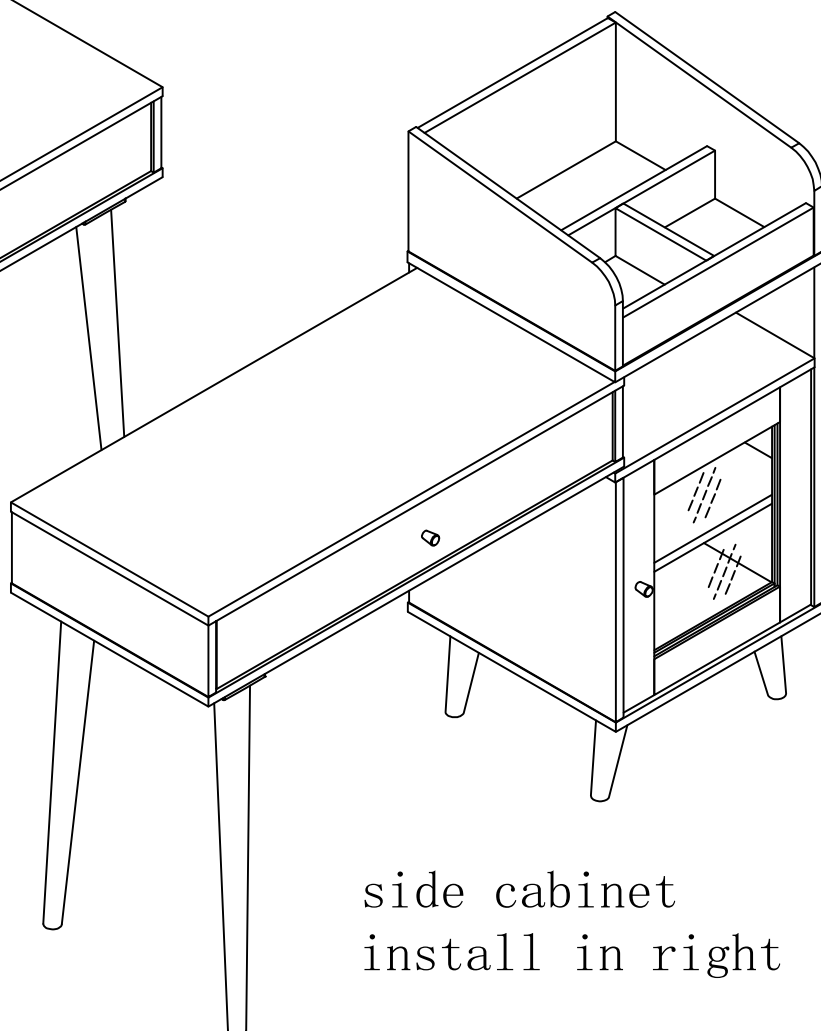

side cabinet
install in right