

INSTALLATION PACKAGE KIT INCLUDED



PRODUCT FUNCTION INSTRUCTIONS



Touch key to turn on/off defogging funcon. When defogger is on, the buon should be in blue color. The an-fog funcon can only be used aer 5 minutes of turning on, and will automacally cancel aer 60 minutes of standby. If extended use is required, it must be re-enabled.



After power on, the button shows blue and it is in waiting state





The lighting color temperature will be changes with each short press

Click the light buon to turn on and the color changes to white Click again to change the light color Click the fourth me to turn off the light





Long press to adjust the brightness Long press to make the light gradually dims
Long press again and the light gradually brightens

When you adjust to your favorite color temperature, long press the buon, you can adjust the brightness of the color temperature, click again, you can adjust to another color temperature.



Memory funcon: The medicine cabinet will record the color temperature and brightness of your last use. When you turn off the color and brightness aer using it last me, when you use

When using an electrical furnishing, basic precautions should always be followed, including the following:



WARNING: To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.



WARNING: Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See grounding instructions.





CAUTION: Maximum shelf load 34lbs/15.4kg

60 inch Installation

Step 1

Unpack all the packaging, take out the mirror cabinet, and put it together to measure the total size of the mirror cabinet combination

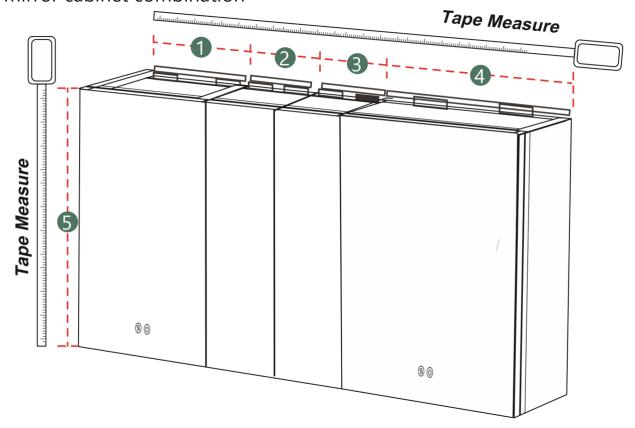


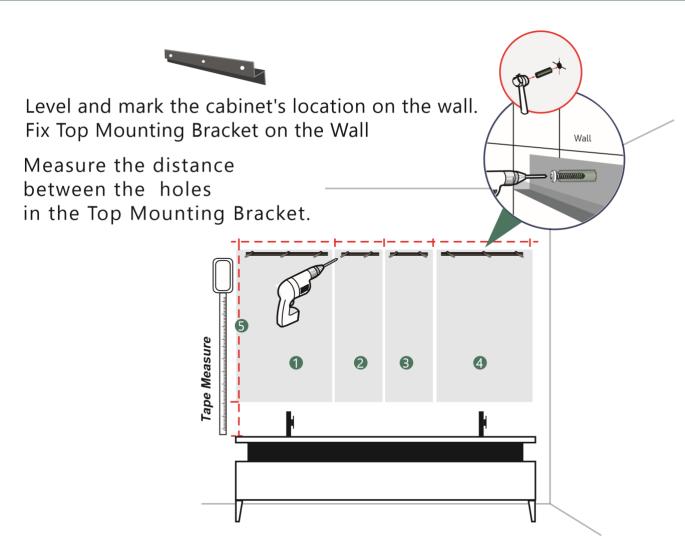

Step 2

Hanging the Cabinet on the top mounting **Step**

3 bracket. Make sure top brackets are locked in the grooves.

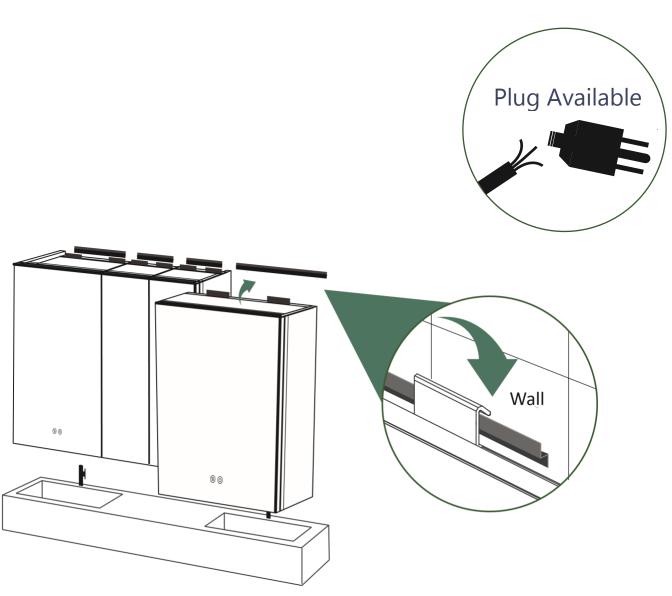



Step 4

Connect the wire to Junction Box inside the wall.

The electric wire comes through the access hole on the top of the cabinet, exact location of access hole varies depending on the product models. Please refer to the actual product for the exact location.



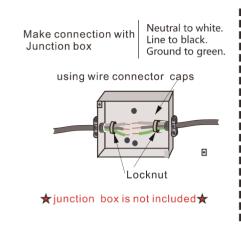

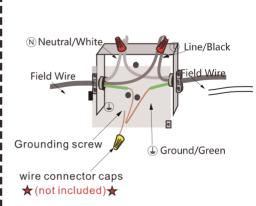

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.

WARNING: Shut off power before wiring the cabinet.

Requires 120 VAC 20 Amp GFI protected Circuit.

GROUNDING INSTRUCTIONS:



CAUTION: This product must be connected to a grounded metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.




WARNING: An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.

Step 5

Move the cabinet to the right position and screw in the bottom supporting bracket and fix it.

Step 6

According to you own needs and preferences, adjust and install the height of the glass shelves, first insert the transparent glass clip, then put the glass shelves on the clip, pay attention to the level of the glass.

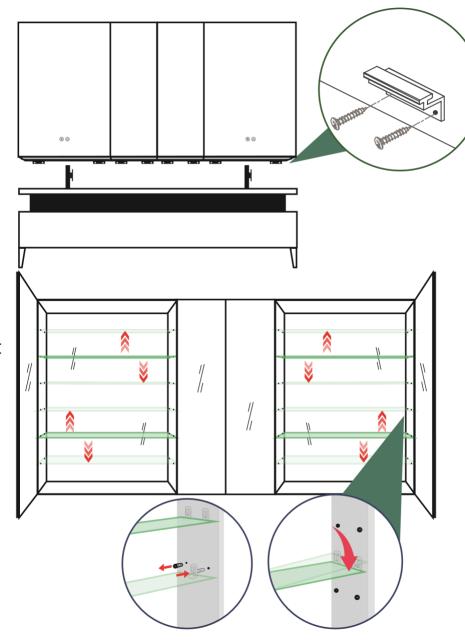

Step 7 If the cabinet

door does not close well or unbalanced, it is necessary to adjust the hinge.

