

Bed Frame

How to find us?

Email: support@vecelo.com

Website: www.vecelo.com



Tips!

Check all the components & screws before assembly. Do not install in case part is missing, contact us to get. Send email with your question to support@vecelo.com. We will resend within 24 hours.


Return Policy

We believe you will absolutely love your new item. But if for some reason you want to return, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new item, please email us first at: support@vecelo.com. The item must be returned within 30 days of delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories.


SKU:KHD-F38/KHD-Q38

Lot No.:DX-NO.1

Trouble shooting:

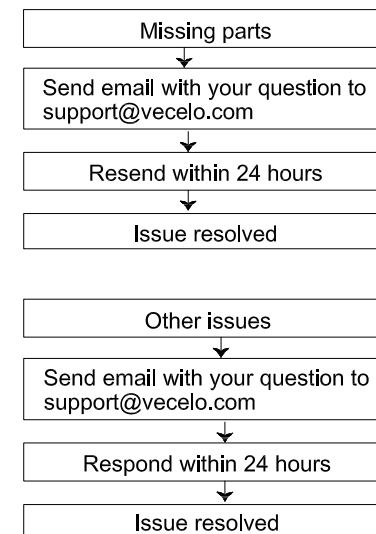

We control manufacturing and distribution ourselves, ensure the quality.


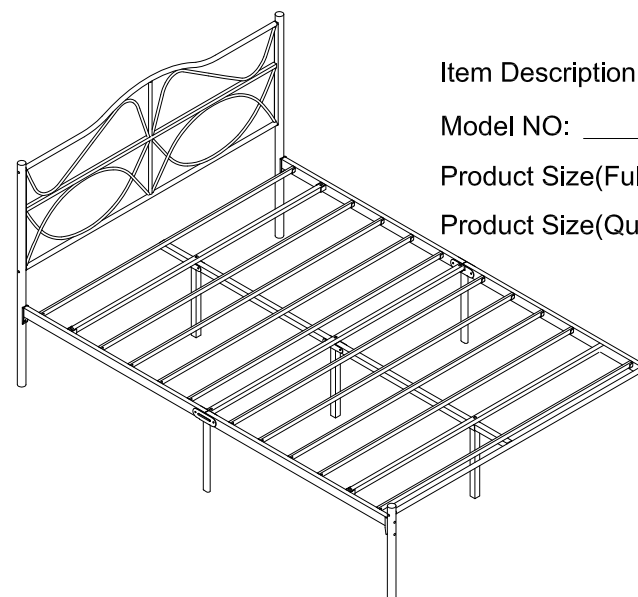


Item Description: Bed Frame


Model NO: DX-NO.1

Product Size(Full): 190.5×137×1010CM

Product Size(Queen): 203.5×153×1010CM

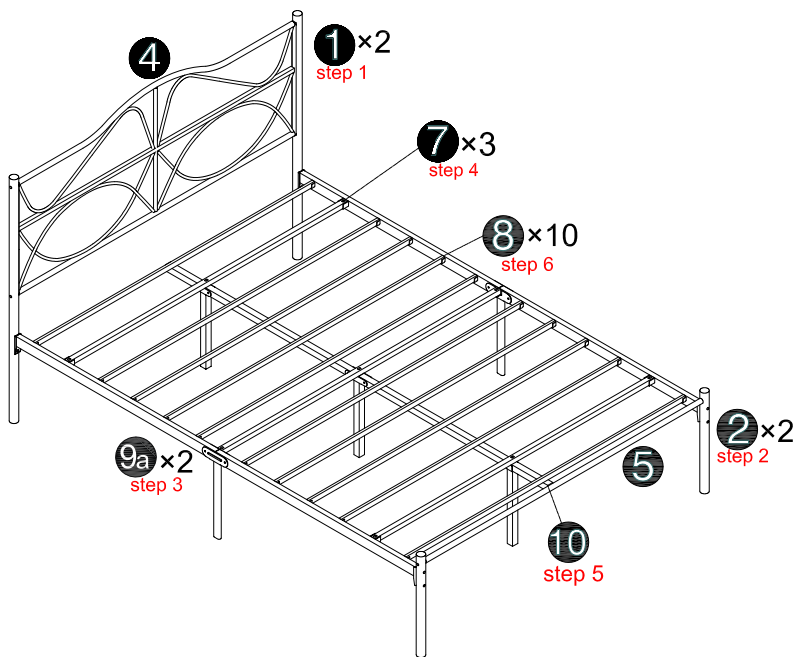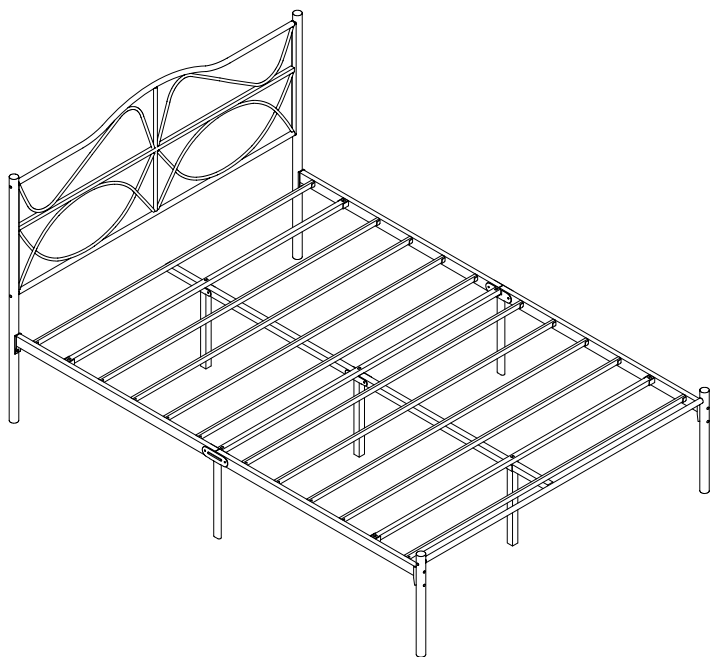







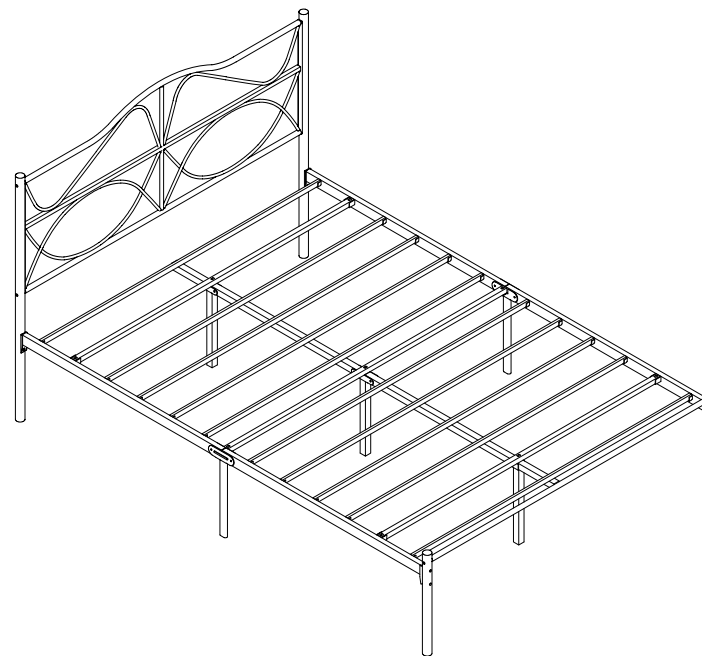


Step 7













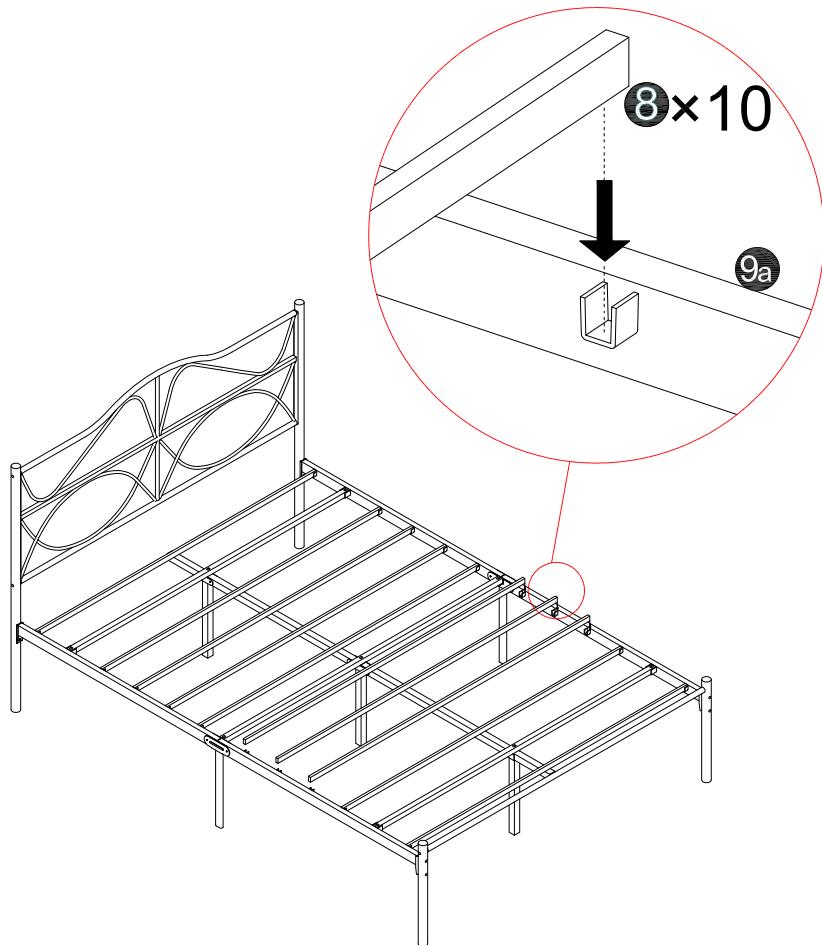Note:
Check and tighten all screws

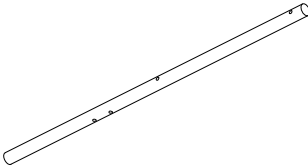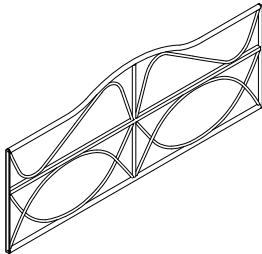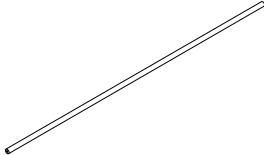
Step 6



Components					
1	 Full:1010×32mm Queen:1010×32mm	2pcs	2	 Full:420×32mm Queen:420×32mm	2pcs
4	 Full:1322×546×19mm Queen:1482×546×19mm	1pc	5	 Full:1318×19mm Queen:1478×19mm	1pc
7	 With Screw Holes Full:1328×20×20mm Queen:1488×20×20mm	3pcs	8	 Without Screw Holes Full:1330×20×10mm Queen:1490×20×10mm	10pcs
9a	 Full:1910×360mm Queen:2035×360mm	2pcs	10	 Full:1820×335mm Queen:1910×335mm	1pc


Screws&Toos 					
A	 M8×45mm	8pcs	B	 M6×45mm	6pcs
C	 M6×28mm	6pcs	D	 M6×55mm	3pcs
E	 φ8.5mm	14pcs	F	 M8	4pcs
G	 M13/M10	1pc	H	 5mm	1pc
N	 1pc	1pc			

Step 5




M6×55mm

3PCS




5mm


1PC



1PC


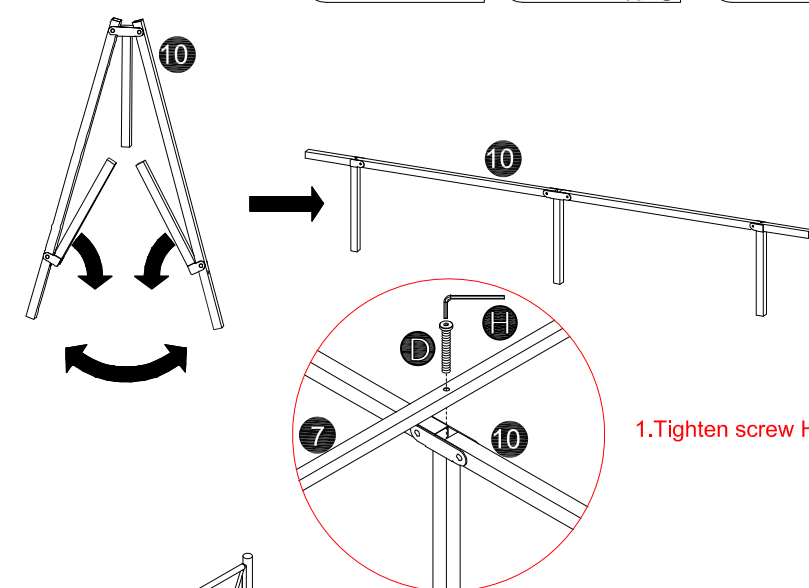


1.Tighten screw H

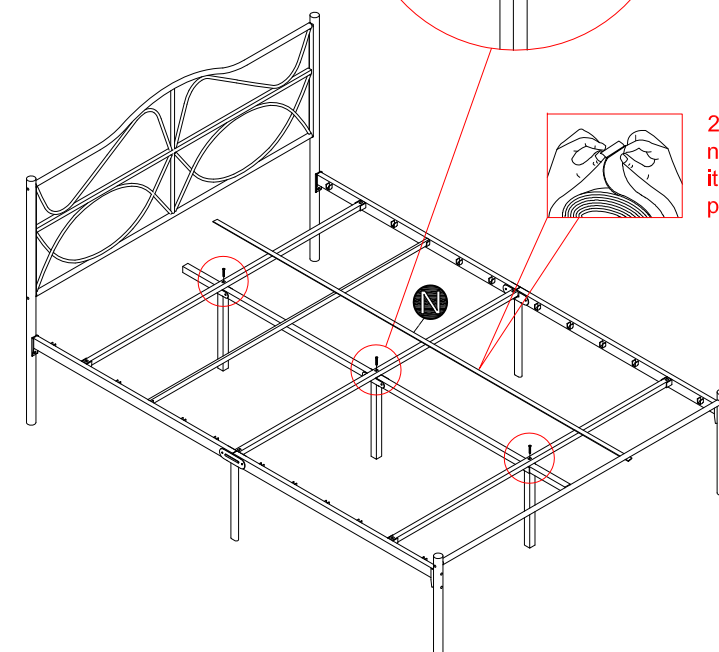


2.To prevent friction noise, unroll part N and fit it on part 10,the lenght of part N can cut as you will.

Step 4

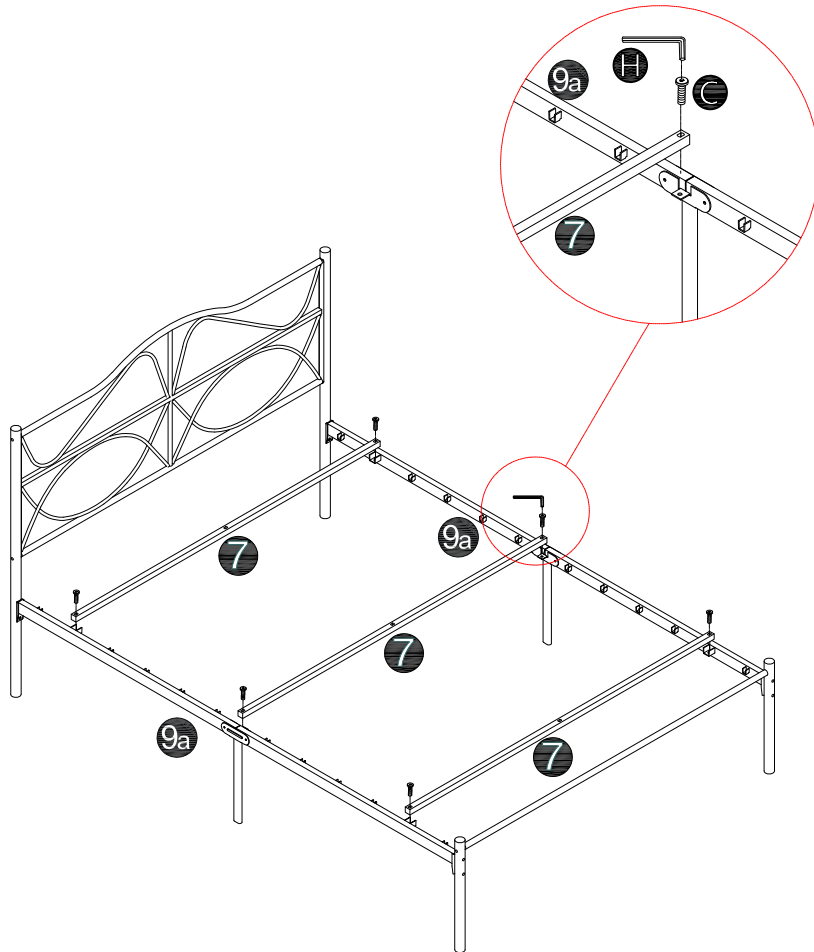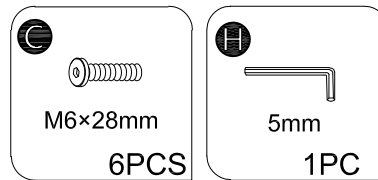

Step 1

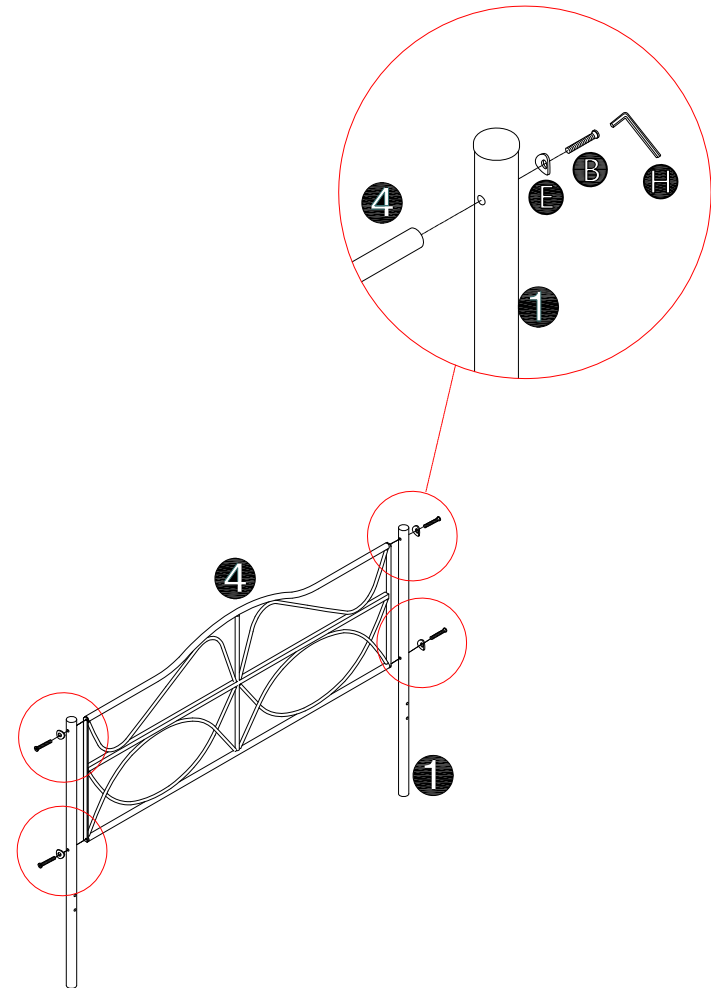

Step 2

B



M6×45mm

2PCS

E




2PCS

H




5mm

1PC

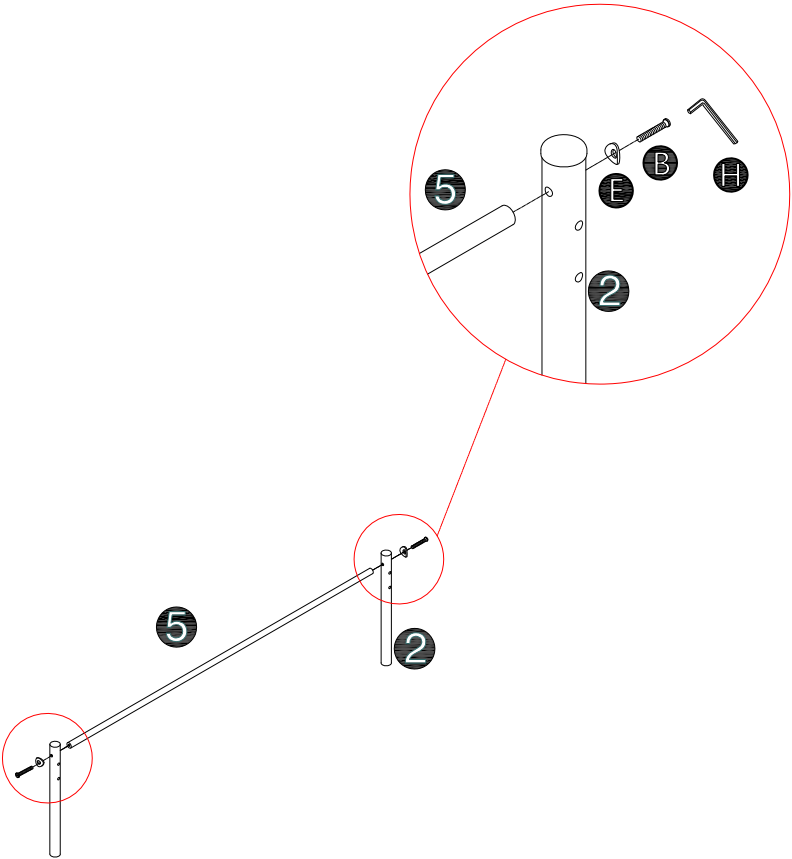

Step 3


A



M8×45mm


8PCS

E



8PCS


F



M8mm


4PCS

G



1PC

H



5mm

1PC

