























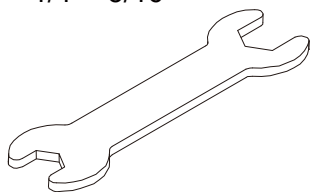


ASSEMBLY INSTRUCTIONS


METAL TWIN FULL BUNK BED

A Front Left Post  1PC	B Rear Left Post  1PC	C Rear Right Post  1PC	D Front Right Post  1PC
E Rear Guard Rail  1PC	F Front Guard Rail  1PC	G End Guard Rail  2PCS	H Front Upper Rail  1PC
I Rear Rail  2PCS	J Front Lower Rail  1PC	K Upper Slat  22PCS	L Lower Slat  22PCS
M End Rail  2PCS	N Center Brace  1PC	O Ladder  1PC	P Slat Connector  88PCS
Q Slat Spacer  63PCS	1 Bolt 1/4" x 60mm  2PCS	2 Bolt 1/4" x 50mm  22PCS	3 Bolt 1/4" x 30mm  8PCS
4 Bolt 5/16" x 19mm  16PCS	5 Nut 1/4"  4PCS	6 Pad  3PCS	7 Allen Key 4mm x 100mm  1PC

8 Wrench
1/4" - 5/16"

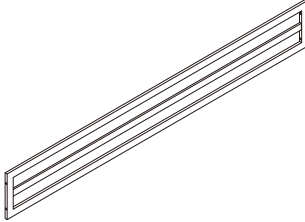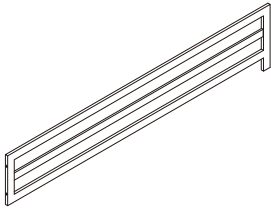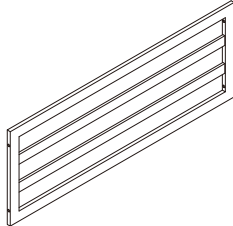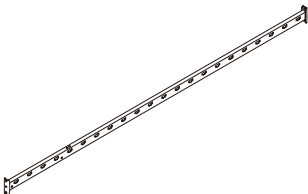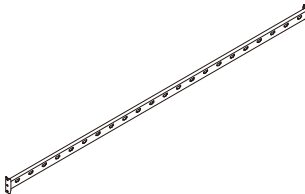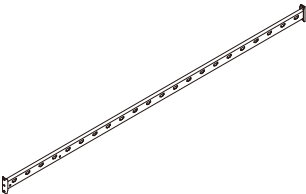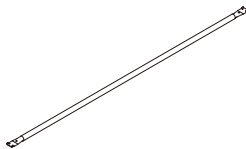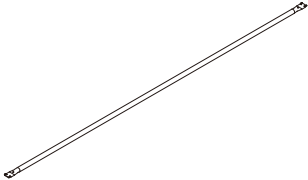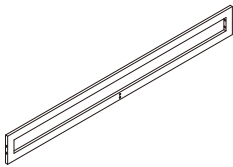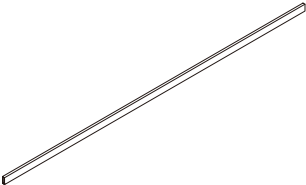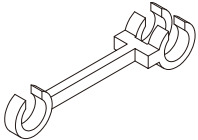


1PC

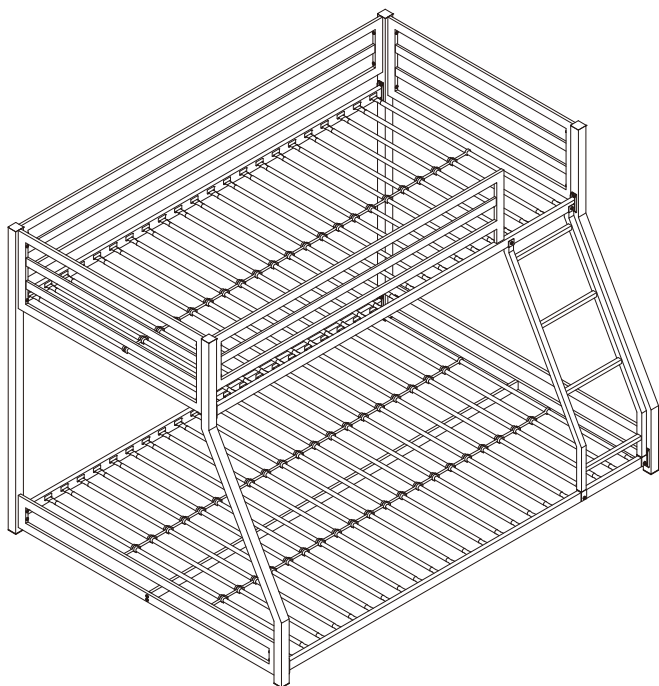


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Attach Post (A & B) to End Guard Rail (G) and End Rail (M) using Bolt (2) with Allen Key (7).

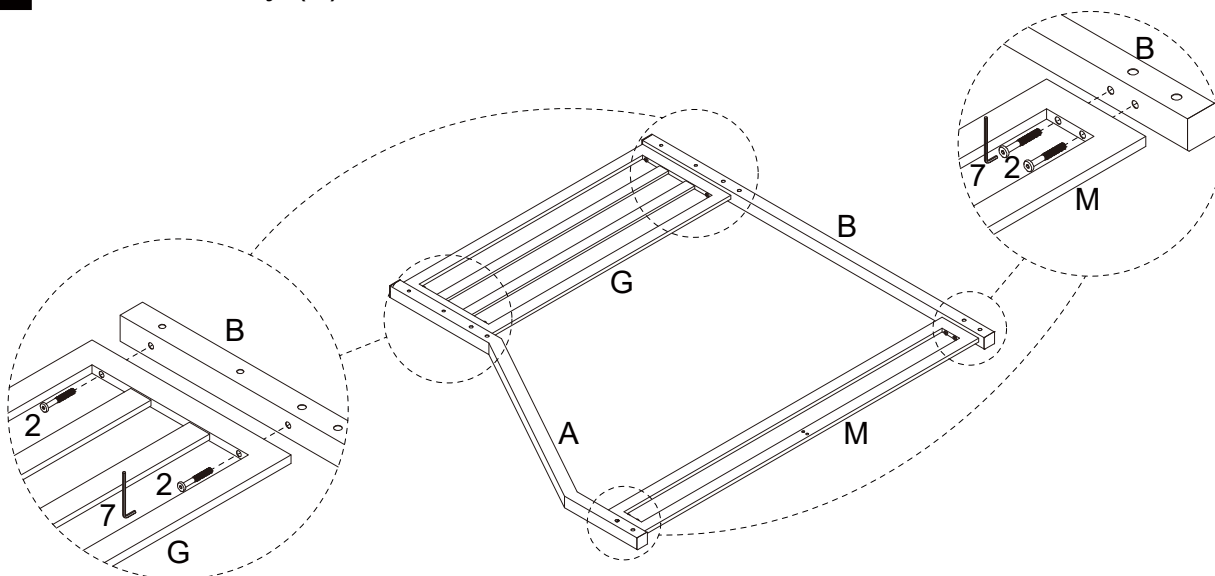**2**

Attach Post (C & D) to End Guard Rail (G) and End Rail (M) using Bolt (2) with Allen Key (7).

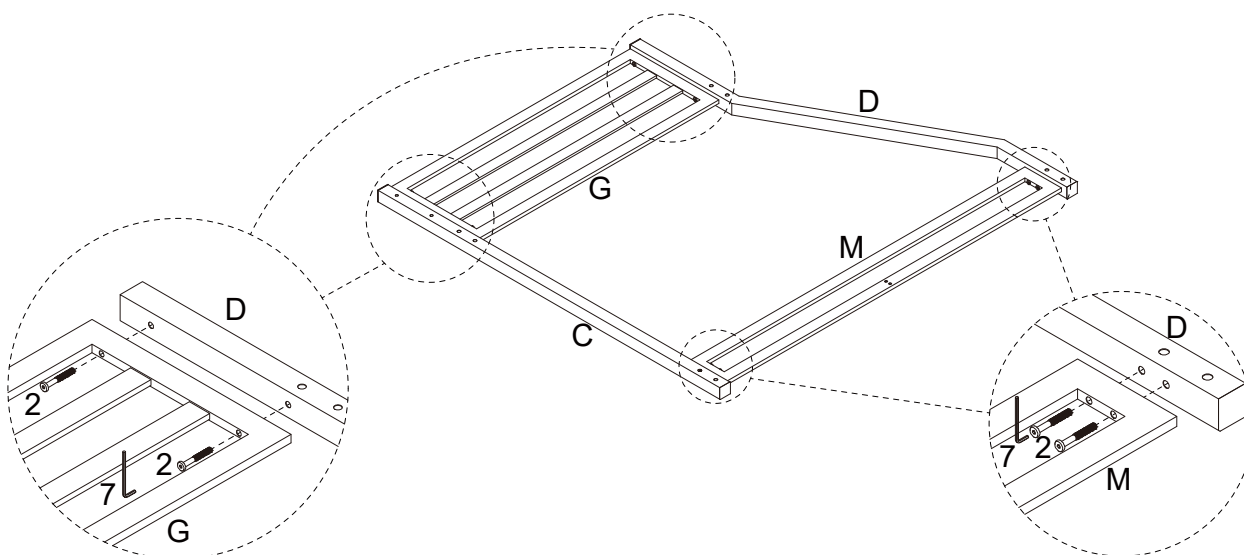
**3**

Attach Pad (6) to Center Brace (N) as shown.

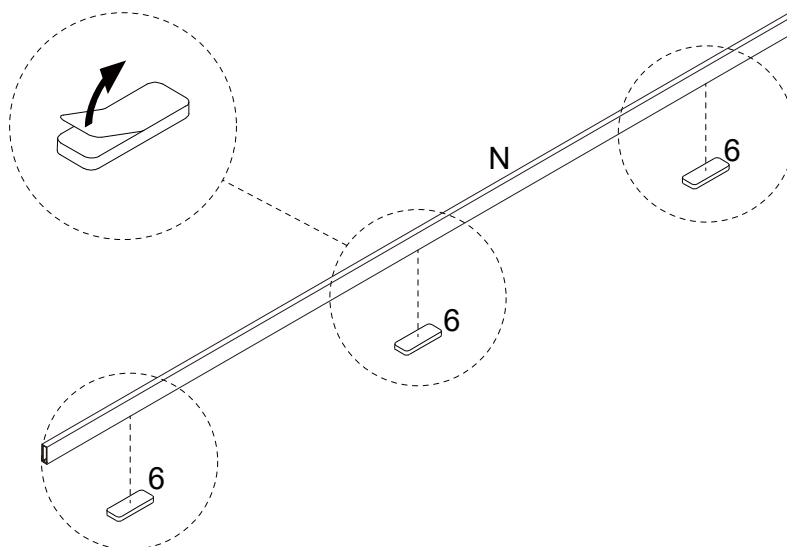


4

Attach Rail (H, I, J) to Post (A, B, C, D) using Bolt (4) with Allen Key (7).
Attach Center Brace (N) to End Rail (M) using Bolt (3) with Allen Key (7).

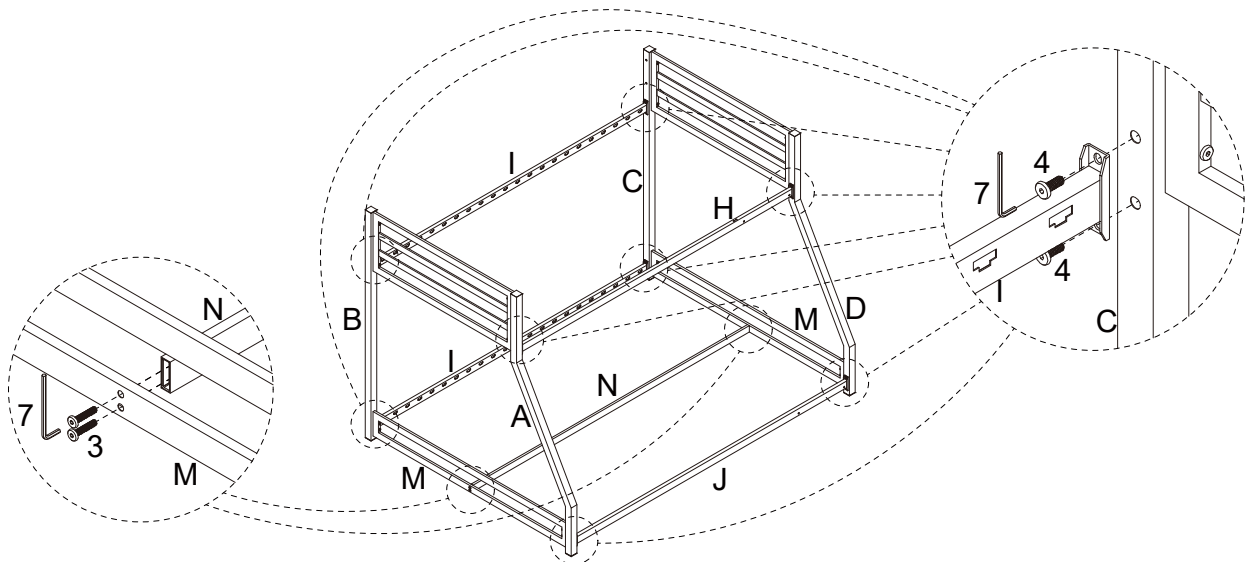


5

Insert Slat (K & L) into Rail (H, I, J) as shown. Then lock Slat Connector (P) to fix Slat (K & L).

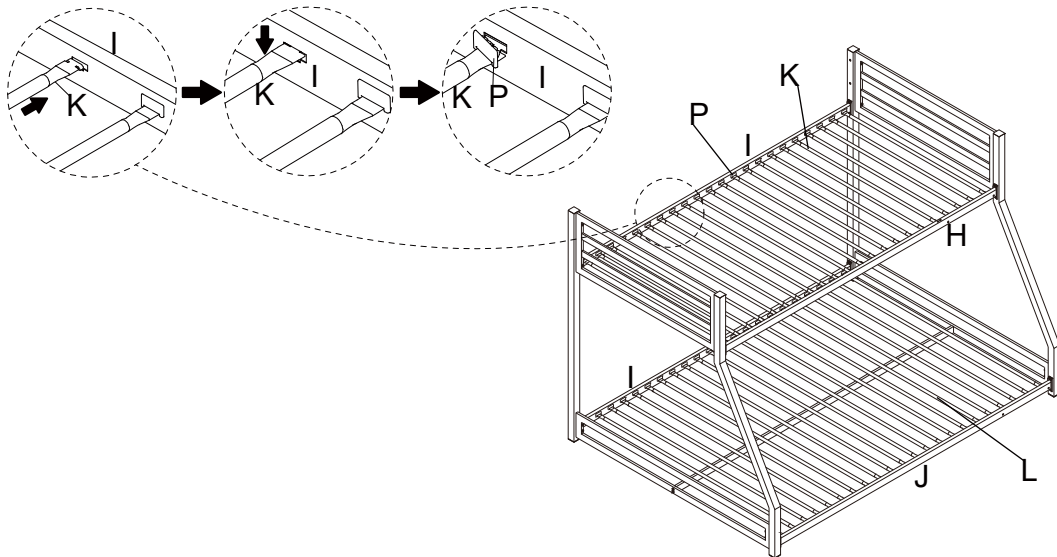


6

Connect Slat (K & L) using Slat Spacer (Q) as shown.

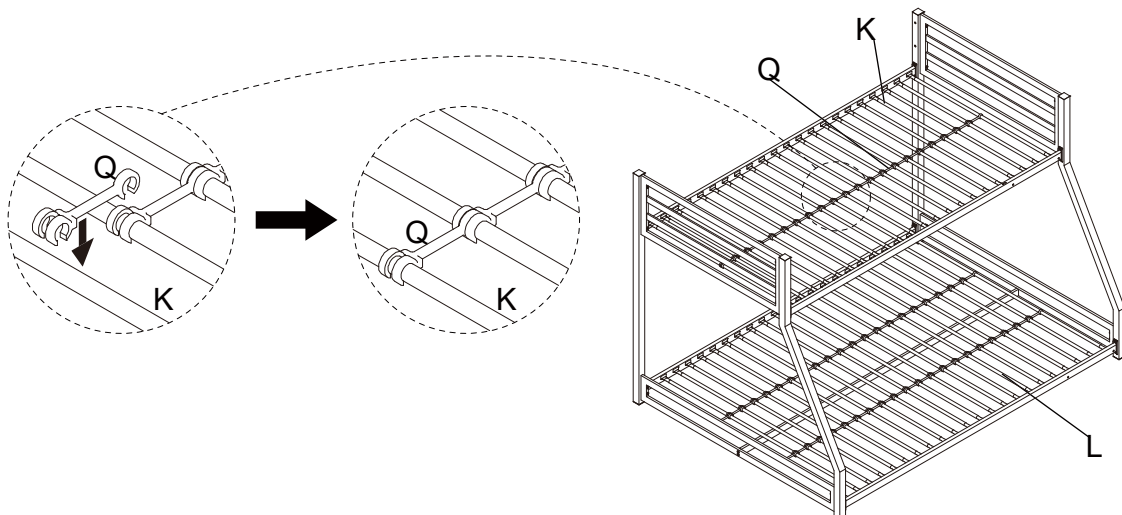


7

Attach Rear Guard Rail (E) to Post (B & C) using Bolt (2) with Allen Key (7). Attach Front Guard Rail (F) to Front Left Post (A) and Front Upper Rail (H) using Bolt (1 & 2) with Allen Key (7).

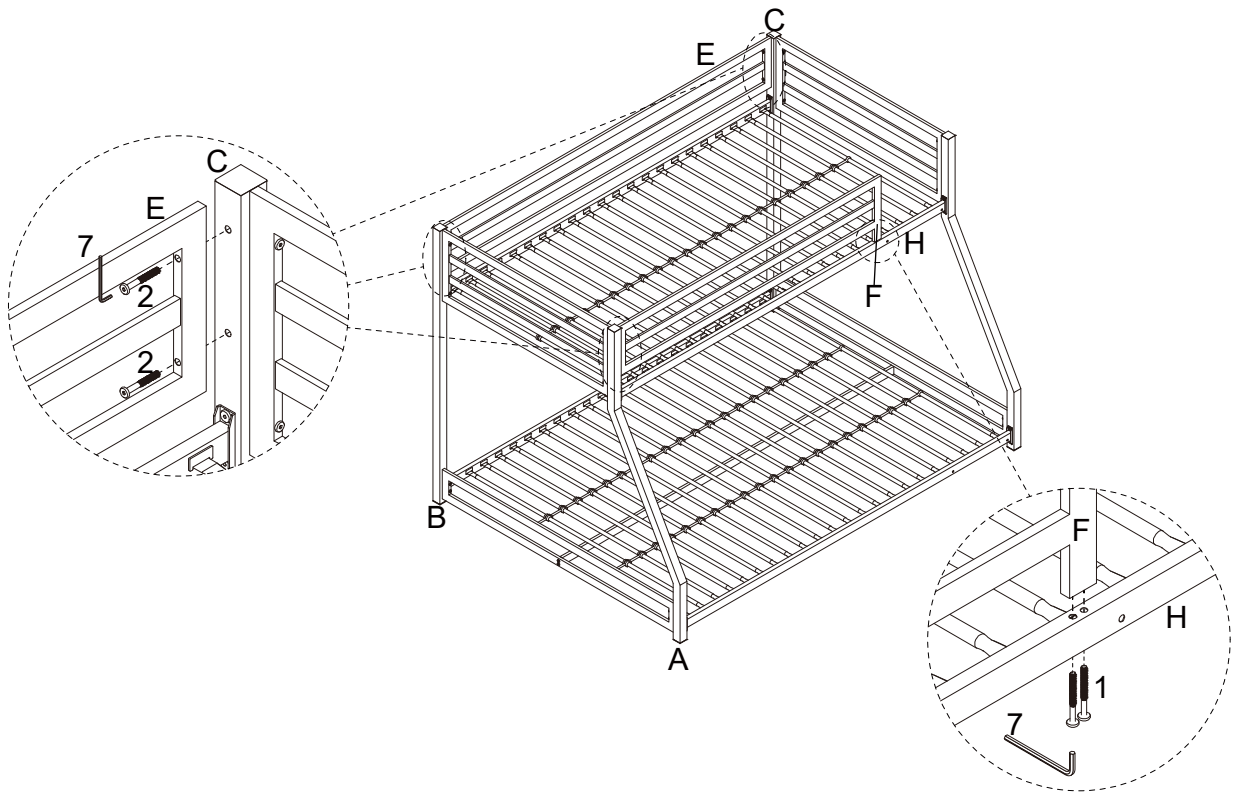**8**

Attach Ladder (O) to Rail (H & J) using Bolt (3) and Nut (5) with Allen Key (7) and Wrench (8).

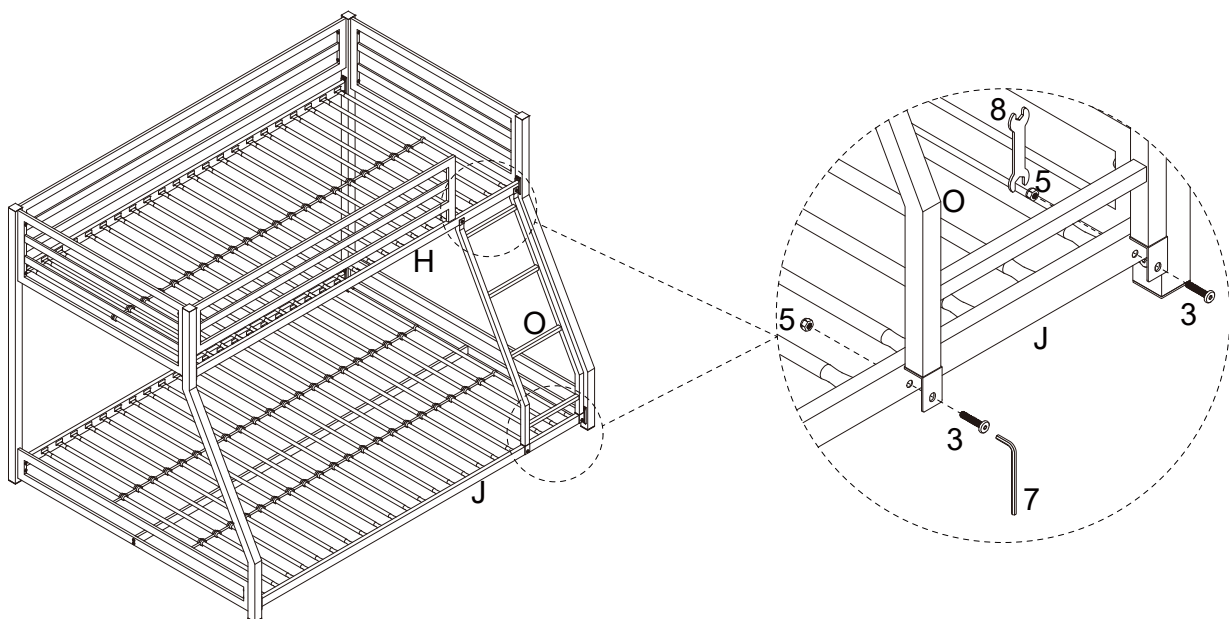

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

IMPORTANT NOTICE

FOR TWIN/FULL BUNK BED:

- Use only mattress which is 74¾" long and 38½" wide on upper bunk.
- Use only mattress which is 74¾" long and 53" wide on lower bunk.
- Ensure thickness of mattress does not exceed 6" and mattress surface is at least 5" below upper edge of guardrails.

FOR TWIN/TWIN BUNK BED:

- Use only mattress which is 74¾" long and 38½" wide on upper bunk.
- Use only mattress which is 74¾" long and 38½" wide on lower bunk.
- Ensure thickness of mattress does not exceed 6" and mattress surface is at least 5" below upper edge of guardrails.

SAFETY WARNING

- Follow the warnings on the upper bunk and carton. Do not remove warning label from bed.
- Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Prohibit more than one person on the upper bunk.
- Always use the ladder for entering and leaving the upper bunk.
- Do not use substitute parts – Contact the manufacturer or dealer for replacement parts.
- Replacement parts, including additional guardrails, may be obtained from any of our (Top-Line Furniture Corporation) dealers.
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattress is prohibited.
- **STRANGULATION HAZARD** – Never attach or hang items to any parts of the bunk bed that are not designed for use with the bed; for example, but not limited to hooks, belts and jump ropes.
- Keep these instructions for future reference.