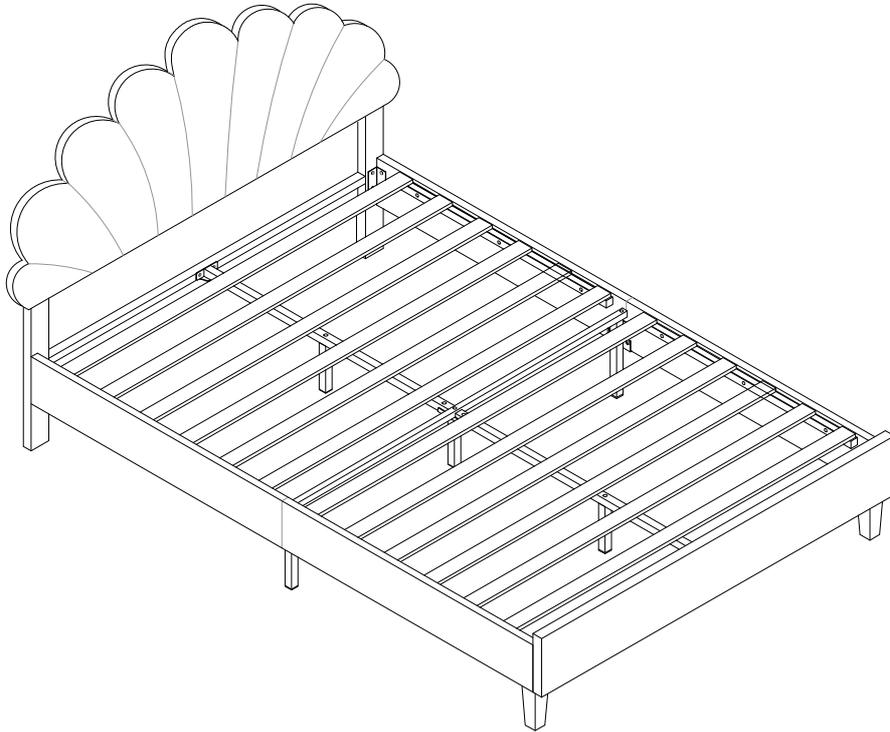
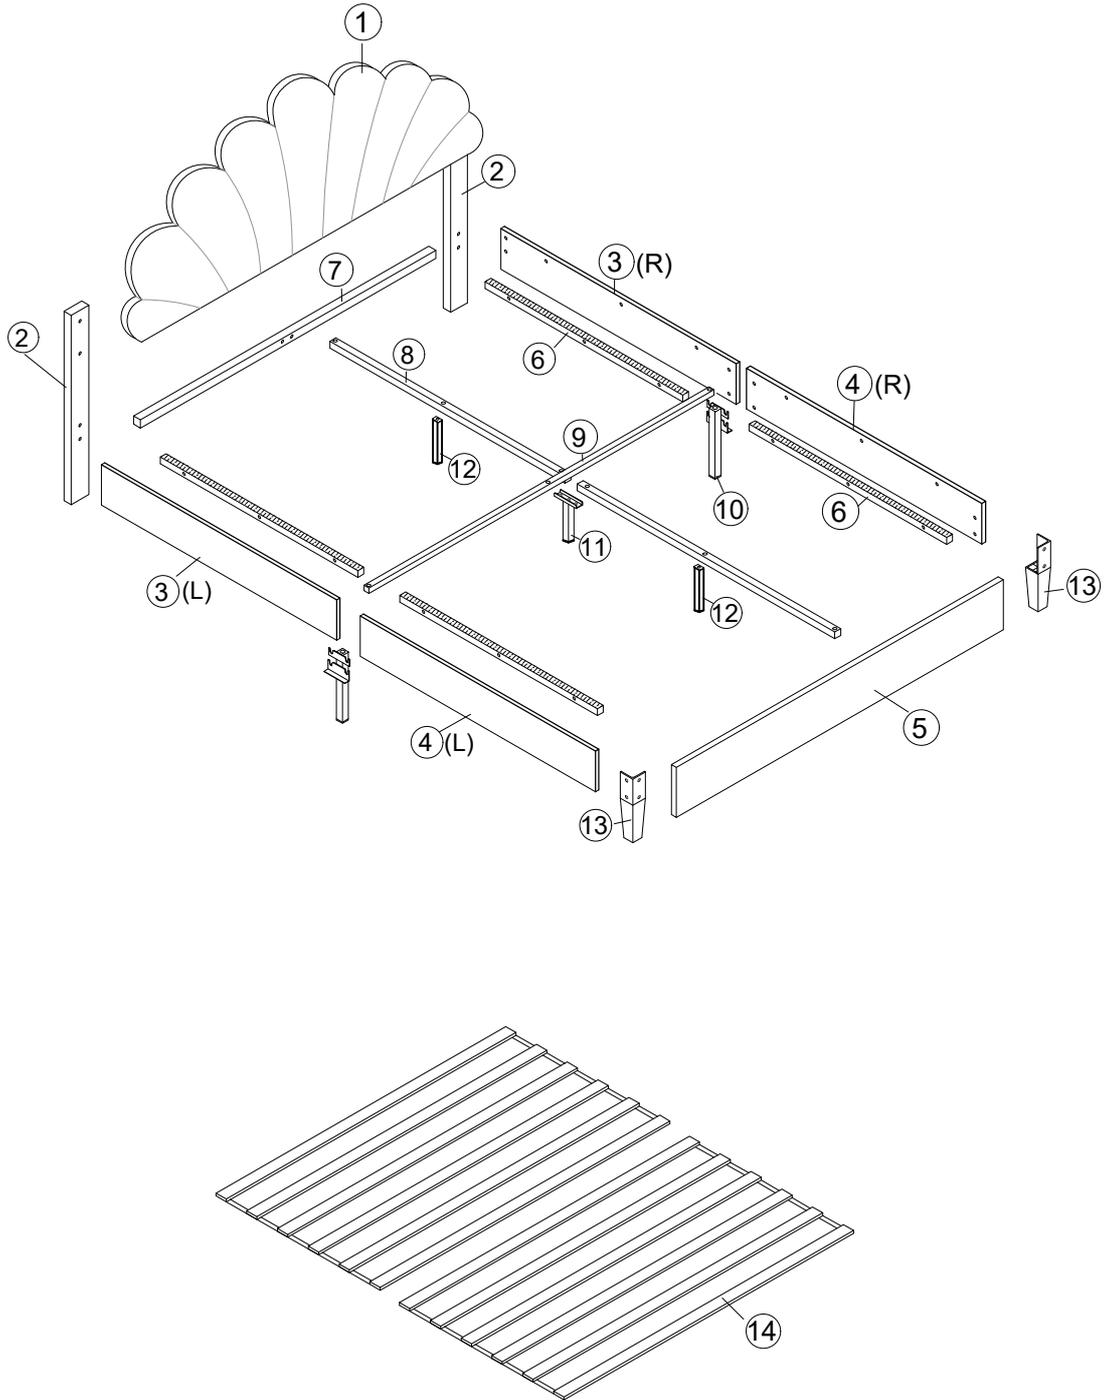


# ASSEMBLY INSTRUCTION

SKU:WF305290AAA / WF305290AAH  
WF305291AAA / WF305291AAH

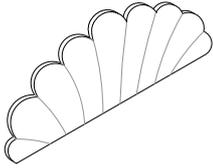
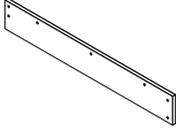
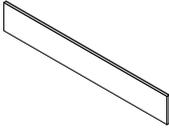
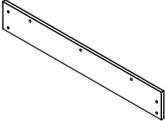
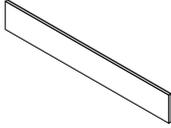
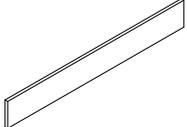


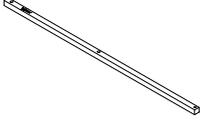
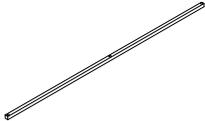
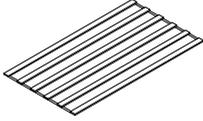


# Detail View





# Part List

WF305290AAA / WF305290AAH  
 WF305291AAA / WF305291AAH

<p><b>1</b></p>  <p>Head board-1pc</p>	<p><b>2</b></p>  <p>Head board legs -2pcs</p>	<p><b>3.1</b></p>  <p>Side rails-1pc</p>
<p><b>3.2</b></p>  <p>Side rails-1pc</p>	<p><b>4.1</b></p>  <p>Side rails-1pc</p>	<p><b>4.2</b></p>  <p>Side rails-1pc</p>
<p><b>5</b></p>  <p>Foot board -1pc</p>	<p><b>6</b></p>  <p>Side rails support bar-4pcs</p>	<p><b>7</b></p>  <p>Head board cross bar-1pc</p>
<p><b>8</b></p>  <p>Center support bar-2pcs</p>	<p><b>9</b></p>  <p>Cross bar-1pc</p>	<p><b>10</b></p>  <p>Side rails support legs-2pcs</p>
<p><b>11</b></p>  <p>Connected support leg-1pc</p>	<p><b>12</b></p>  <p>Middle support leg-2pcs</p>	<p><b>13</b></p>  <p>Legs-2pcs</p>
<p><b>14</b></p>  <p>Slats-12pcs</p>		


# Hardware List

<p><b>A</b></p>  <p>20*70mm</p>	<p><b>B</b></p>  <p>Ø8*45mm</p>	<p><b>C</b></p>  <p>Ø8*18mm</p>
<p>Allen Key(1pc)</p>	<p>Bolts(4pcs)</p>	<p>Bolts(32pcs)</p>
<p><b>D</b></p>  <p>Ø8*40mm</p>	<p><b>E</b></p>  <p>105*25*2mm</p>	<p><b>F</b></p>  <p>75*33*33mm</p>
<p>Bolts(4pcs)</p>	<p>Two hole iron(2pcs)</p>	<p>"7" Connector(2pcs)</p>
<p><b>G</b></p>  <p>Center support bar fittings(2pcs)</p>		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

## Step 1 x2

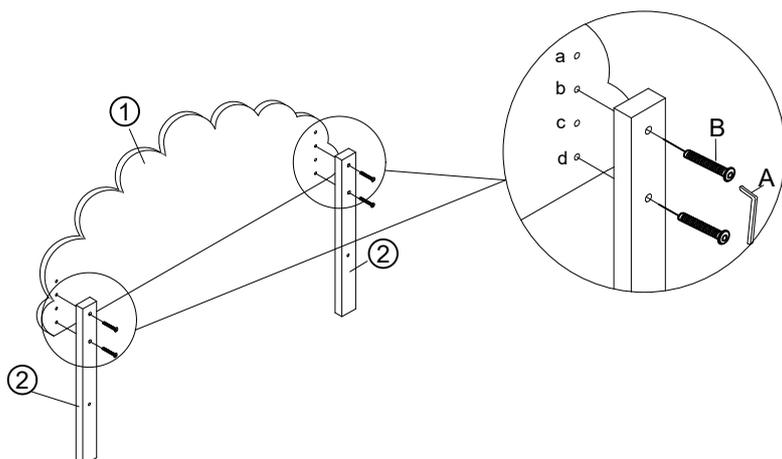
Fix the Headboard legs ② to the Headboard ① with Bolt B by using Allen key A. You can chose the holes a and c or b and d.



Allen Key	B Bolts x 4
	 M8X45mm

## Step 2 x2

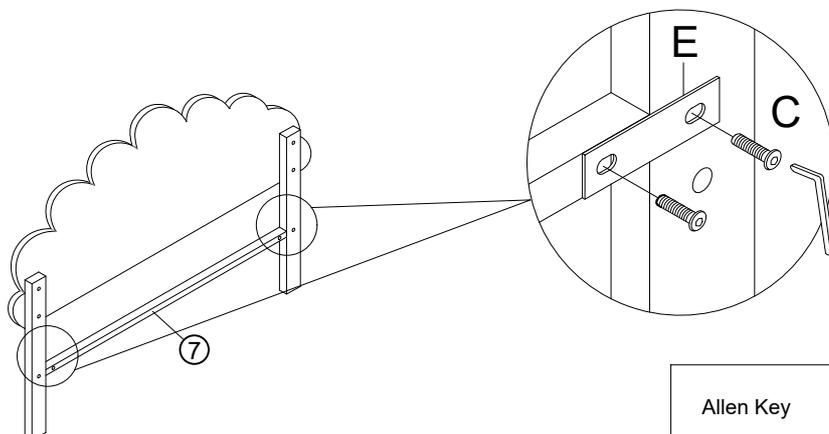
Fix the Headboard cross bar ⑦ to the Headboard legs ② with Bolt C and Two hole iron E by using Allen key A.



Allen Key	C Bolts x 4	E Two hole iron x 2
	 M8X18mm	

## Step 3 x2

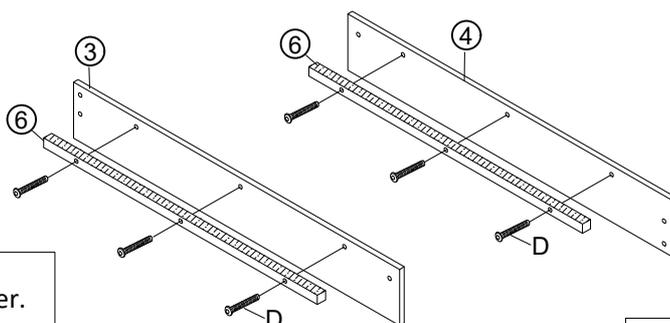Connect to Siderail support bar ⑥ Siderails ③ and ④ with Bolts D by using Allen key A.




NOTICE:  
Please assemble ③ and ④ together.

Allen Key	D Bolts x 12
	 M8X40mm

## Step 4 x2

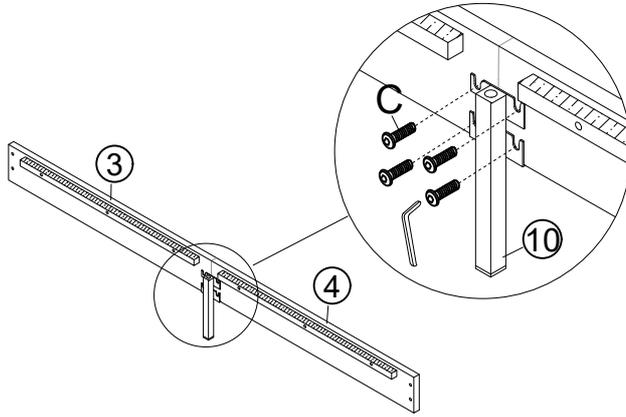
Fix the side rails support leg ⑩ to the side rail with Bolts C by using Allen key A



Allen Key 	C Bolts x 8  M8X18mm
--	---

## Step 5 x2

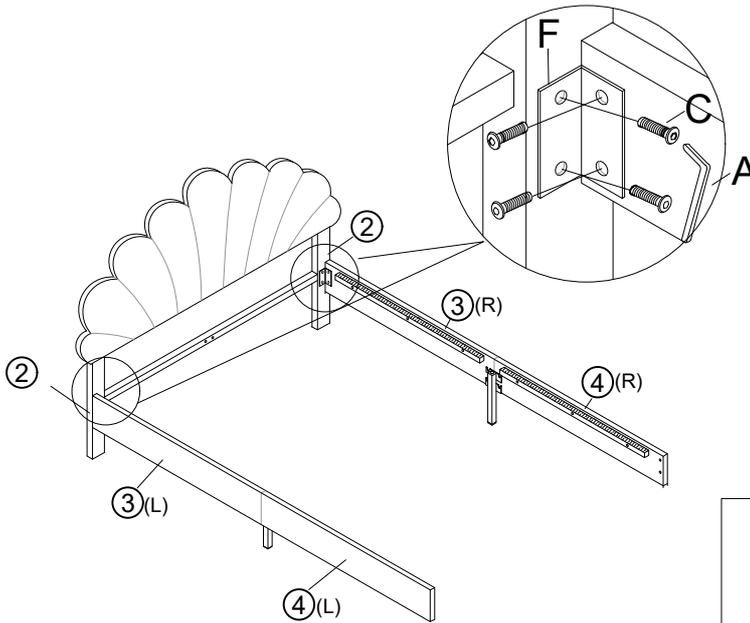
Fix the assembled siderail to the Headboard legs ② with Bolt C and "7" Connector F by using Allen key A.



Allen Key 	C Bolts x 8  M8X18mm	F "7" Connector x 2 
--	---	--

## Step 6 x2

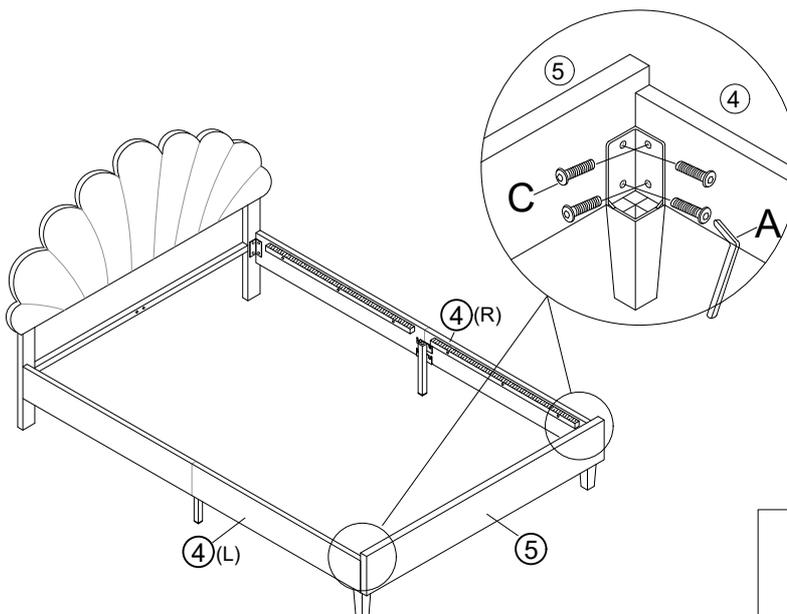
Fix the assembled siderail to the footboard ⑤ with Bolt C and legs ④ by using Allen key A.



Allen Key 	C Bolts x 8  M8X18mm
--	---

## Step 10

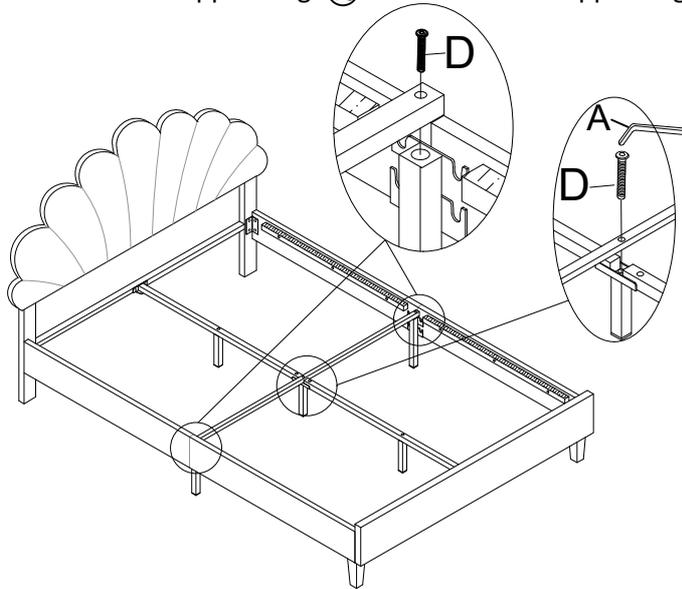Fix the cross bar ⑨ to the side rails support legs ⑩ and Connected support legs ⑪ with Bolts D by using Allen key A



Allen Key 	D Bolts x 3  M8X40mm
--	---

## Step 11

Fix the slats ⑭ to the side support bar, then assemble is finished, now please tighten all hardware and enjoy the bed.

