

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224601Q(B1-B3) Queen Bed

REVISION 0 : 12/21/2022 PAGE 1 OF 5 COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)									
Α	HEADBOARD PANEL		1PC	В	HEADBOARD BOTTOM RAIL		1PC		
С	RIGHT HEADBOARD LEG		1PC	D	LEFT HEADBOARD LEG		1PC		
<u>B2</u>	B2 (BOX 2)								
E	FOOTBOARD PANEL		1PC	F	RIGHT FOOTBOARD LEG WITH "F" LABEL		1PC		
G	LEFT FOOTBOARD LEG WITH "G" LABEL		1PC						
<u>B3</u>	(BOX 3)			I					
н	BED RAIL		2PCS	ı	BED SLAT SUPPORT WITH LEVELER		4PCS		
J	BED SLAT		4PCS						
НВ	224601Q(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	FB	224601Q(B2) FROM BOX 2 FOOTBOARD COMPLETE		1PC		

PAGE 2 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\mathbb{A}

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224601Q(B1)

1	BOLT (Ø5/16" x 45MM- BLK)	8PCS	2	LOCK WASHER (Ø5/6" - BLK)	8PCS
3	FLAT WASHER (Ø5/16" - BLK)	8PCS	4	ALLEN WRENCH (4MM - BLK)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224601Q(B2)

5	BOLT (Ø5/16" x 45MM- BLK)	2PCS	6	LOCK WASHER (Ø5/6" - BLK)	2PCS
7	FLAT WASHER (Ø5/16" - BLK)	2PCS	8	ALLEN WRENCH (4MM - BLK)	1PC

I

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224601Q(B3)

9	THREADED BOLT (Ø5/16" x 100mm - RBLK)		8PCS	10	HEX NUT (Ø5/16" x 14mm -BLK)	8PCS
11	WRENCH (14MM - BLK)		1PC	12	HALF ROUND NUT (Ø5/16" - BLK)	8PCS
13	FLAT HEAD SCREW (Ø4 x 30mm - BLK)	Ammmm>	8PCS	14	BOLT (Ø1/4" x 30MM- BLK)	4PCS
15	ALLEN WRENCH (4MM - BLK)		1PC			


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **224601Q(B1-B3)**ASSEMBLY INSTRUCTIONS



STEP 1

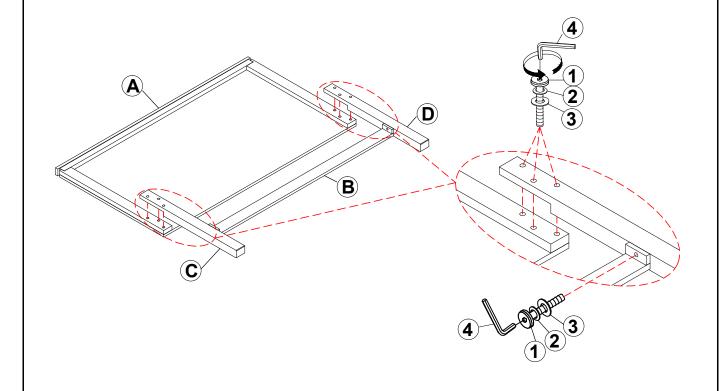

STEP 2

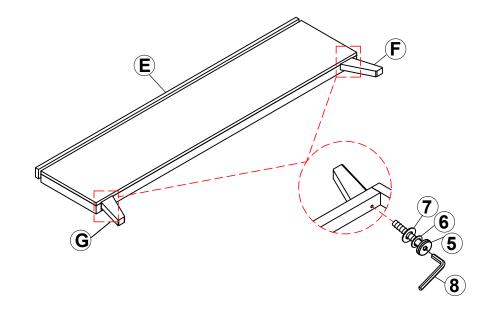



PAGE 4 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS STEP 3




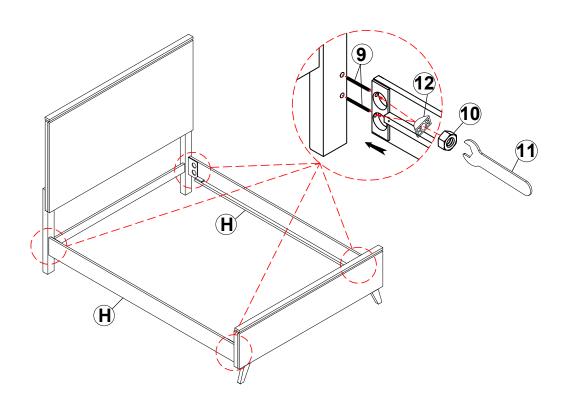

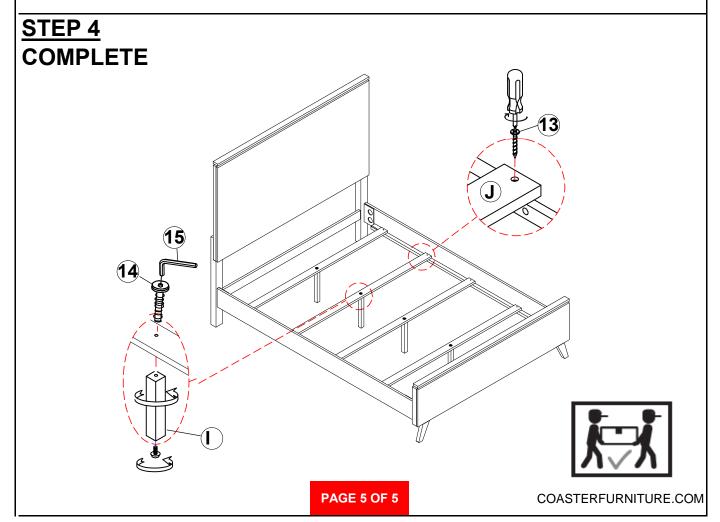



Inner Size: 61.00"W X 82.00"D

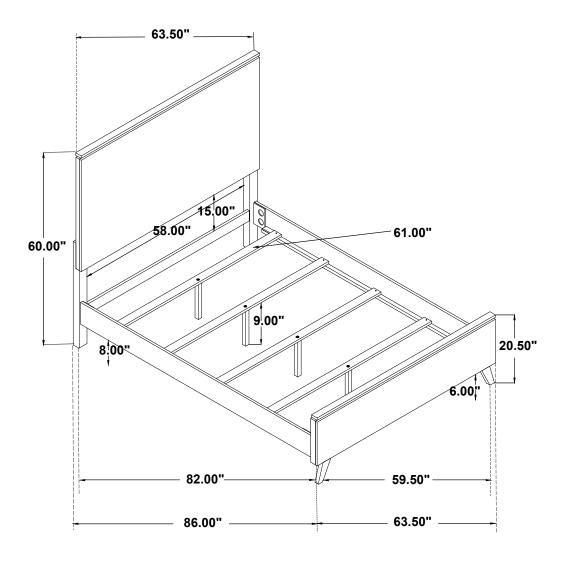

Note: Dimension tolerance ±5%