


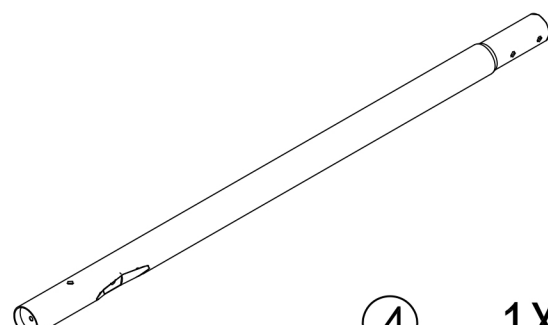
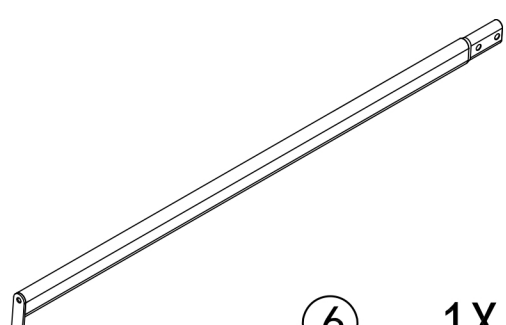
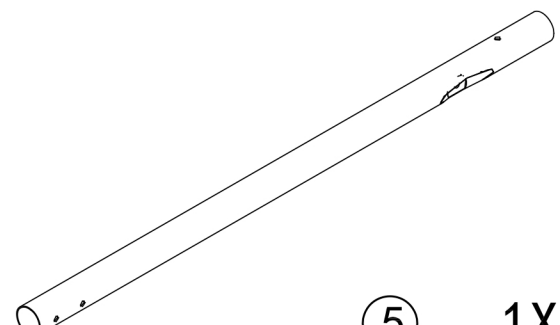
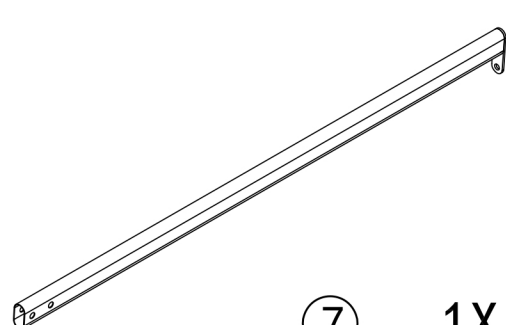
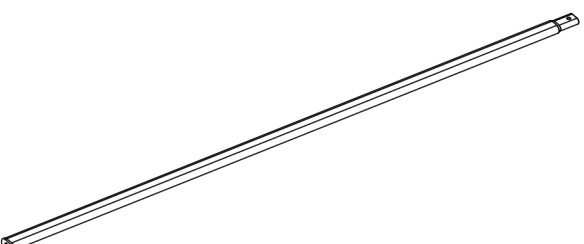
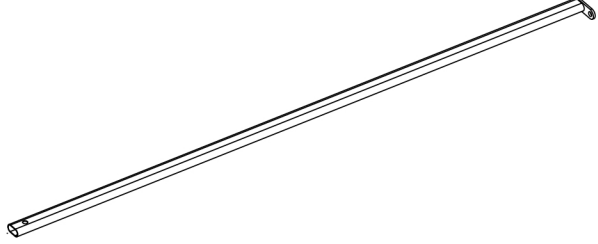
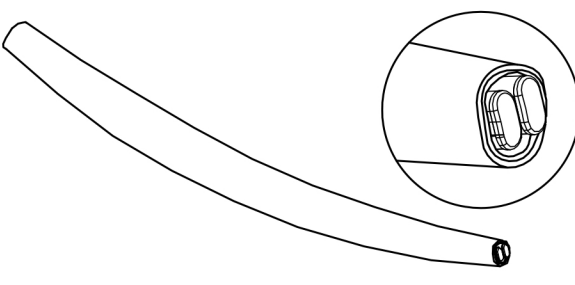
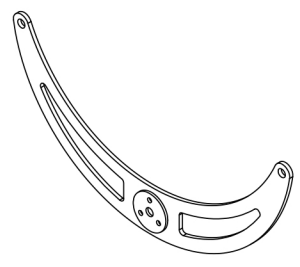
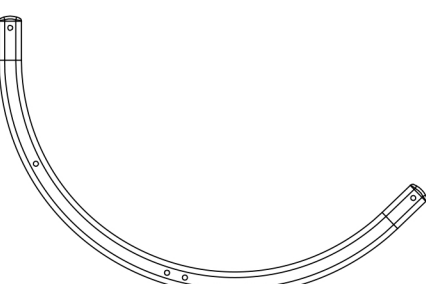
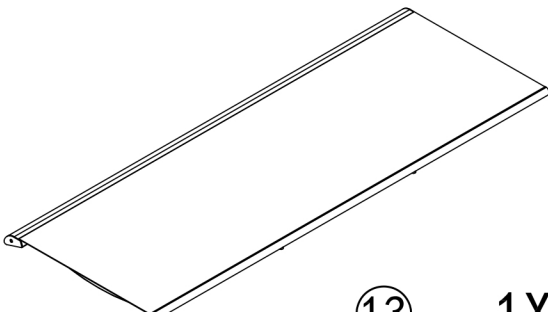
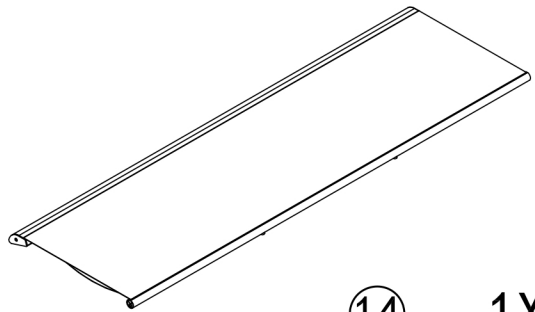
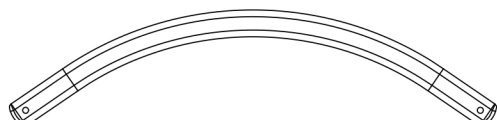
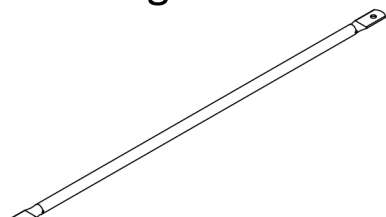
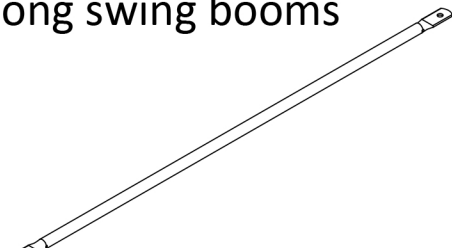
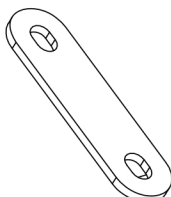


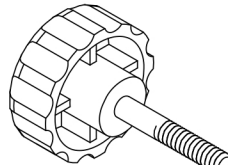
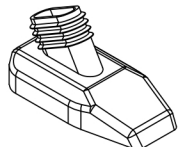
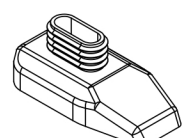
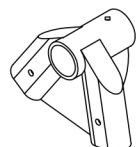
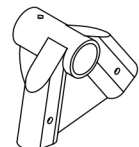






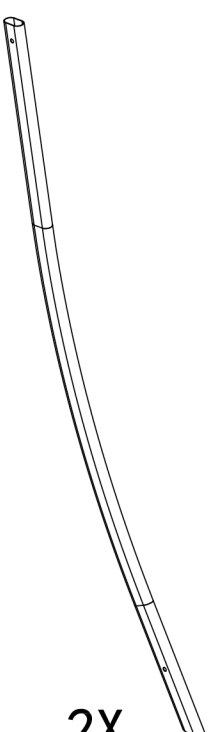

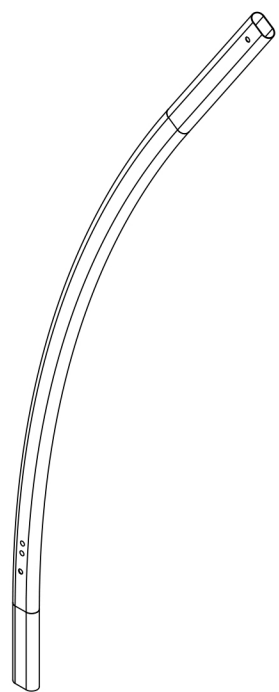
















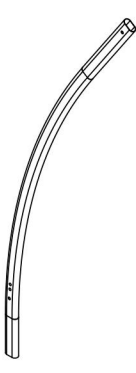
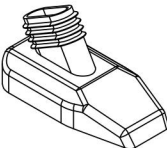
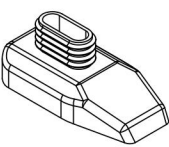
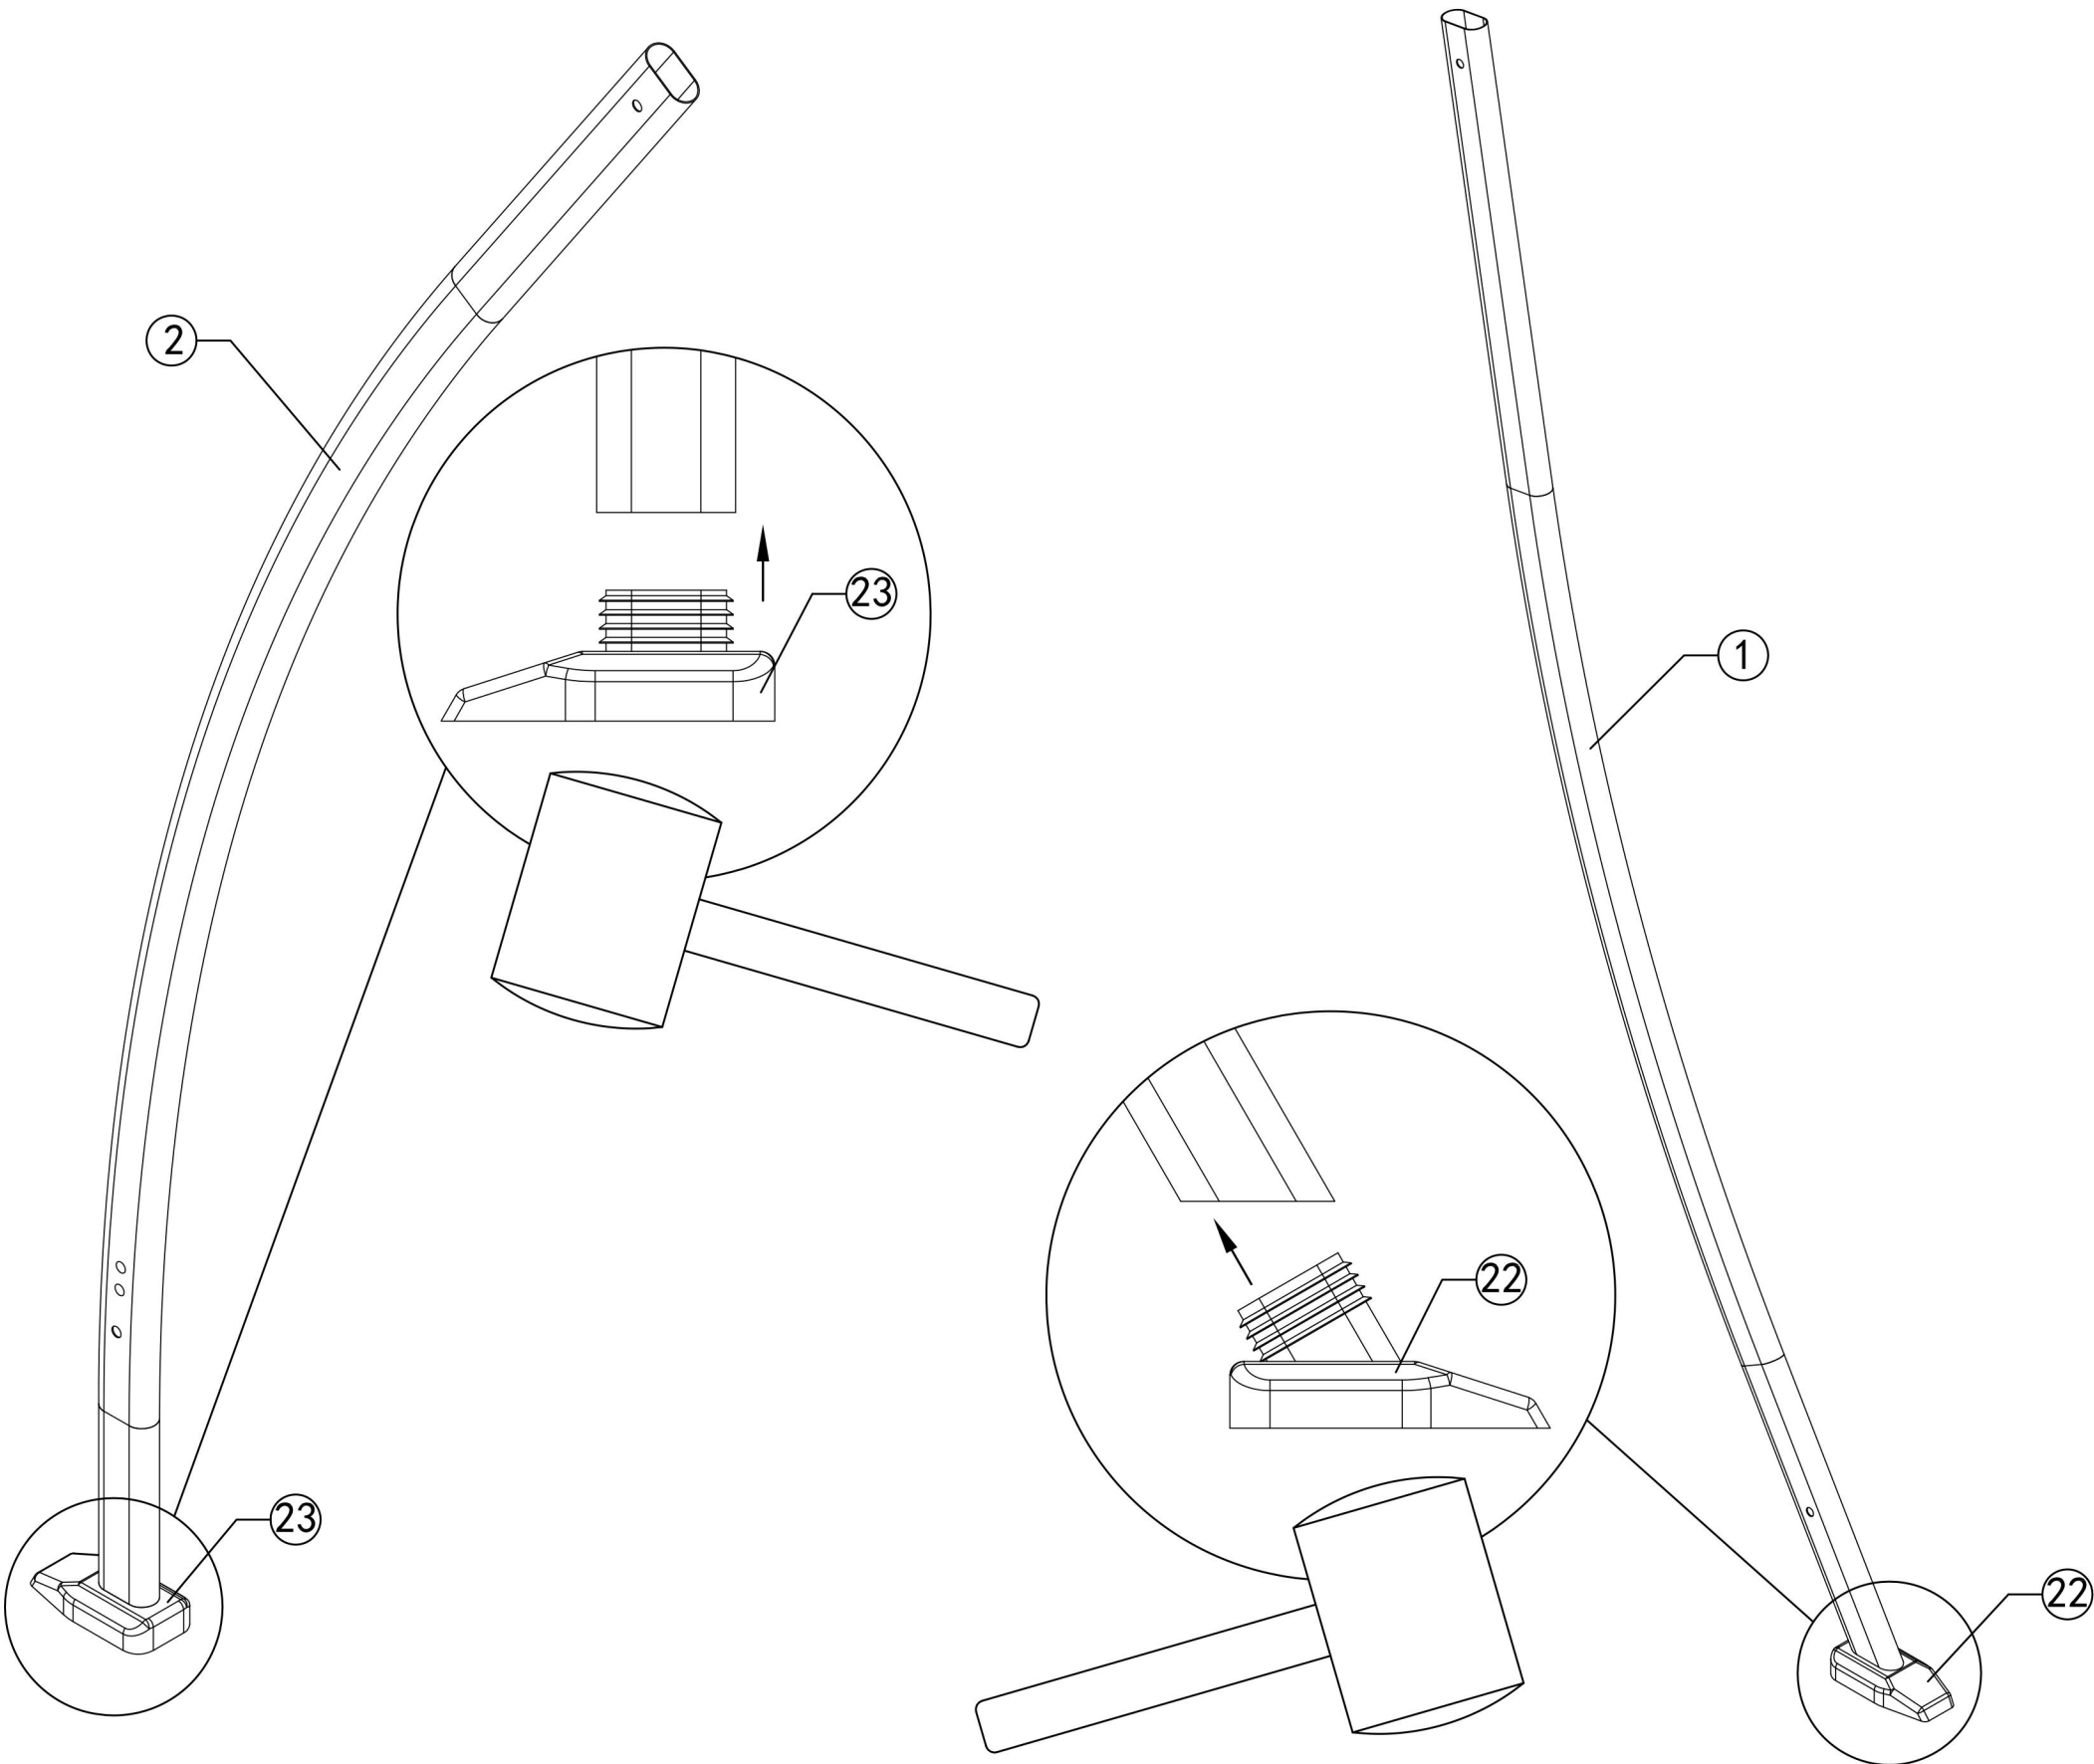
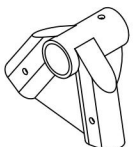
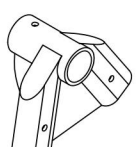







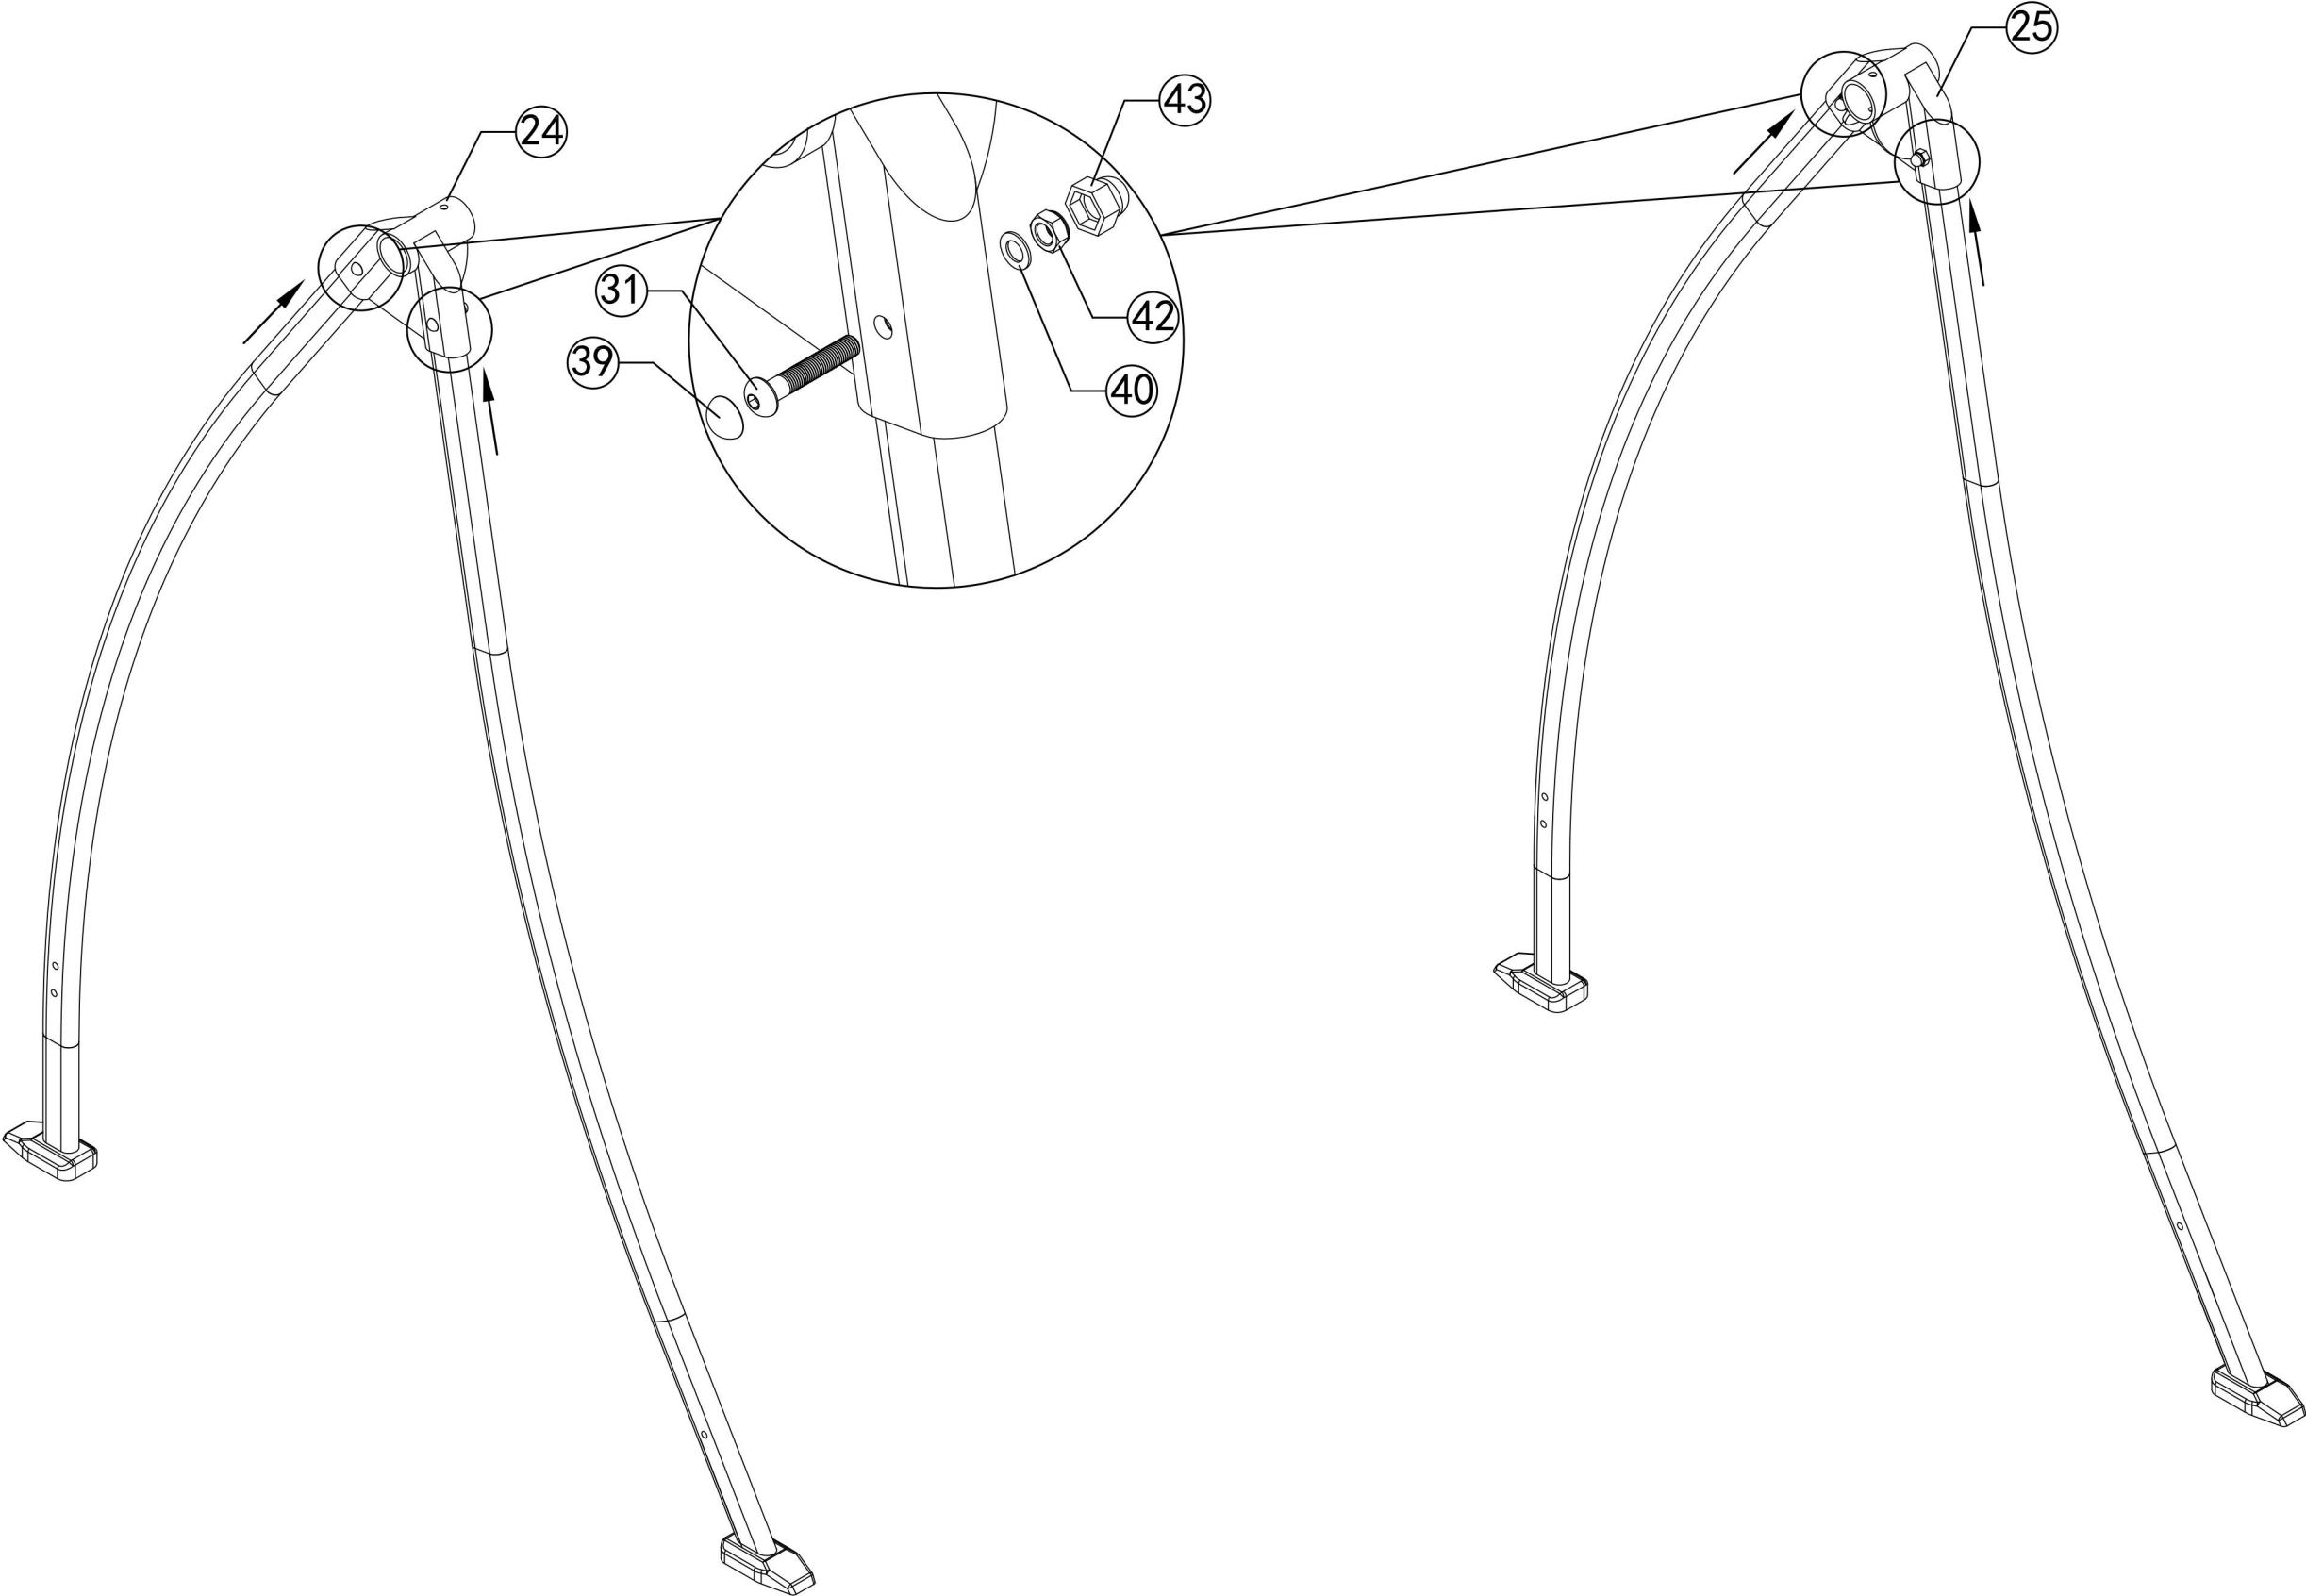
3-Person Patio Porch Swing **Assembly Instructions**








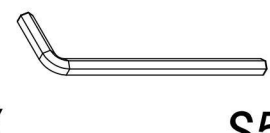






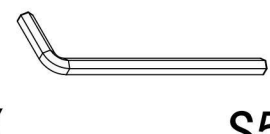



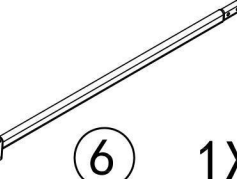
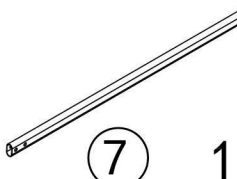






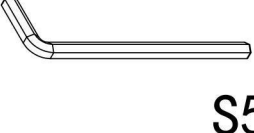

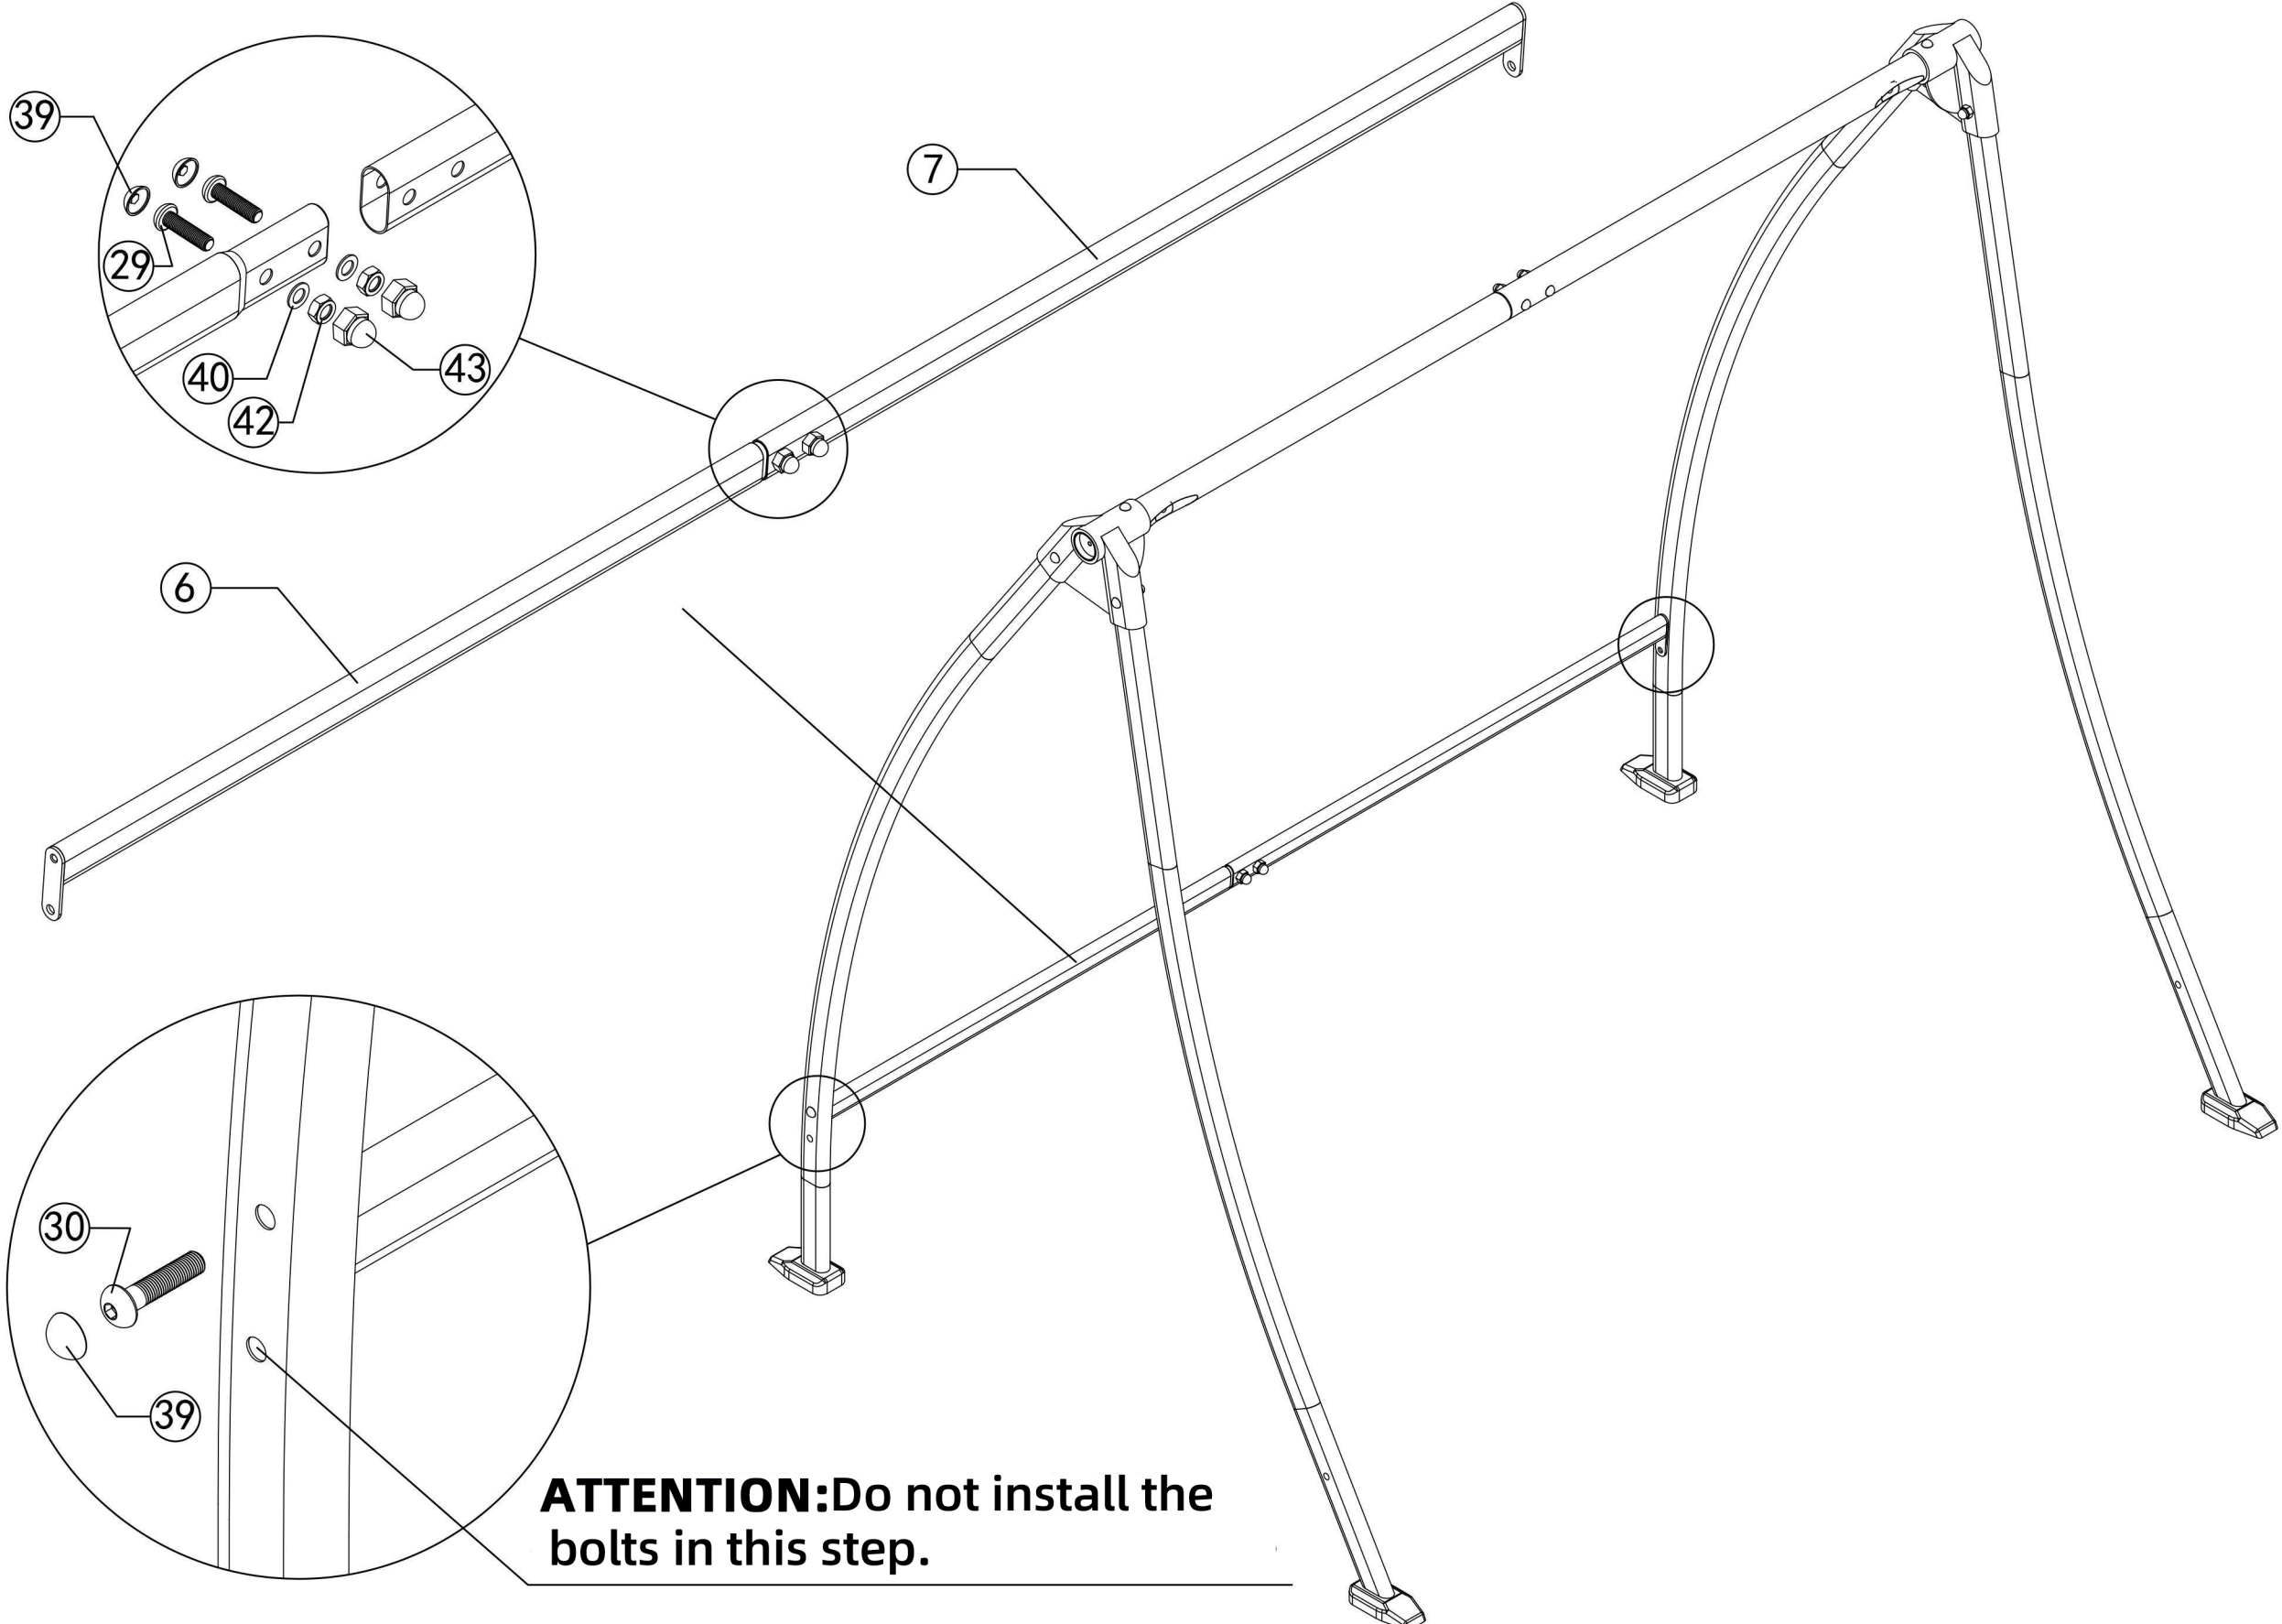










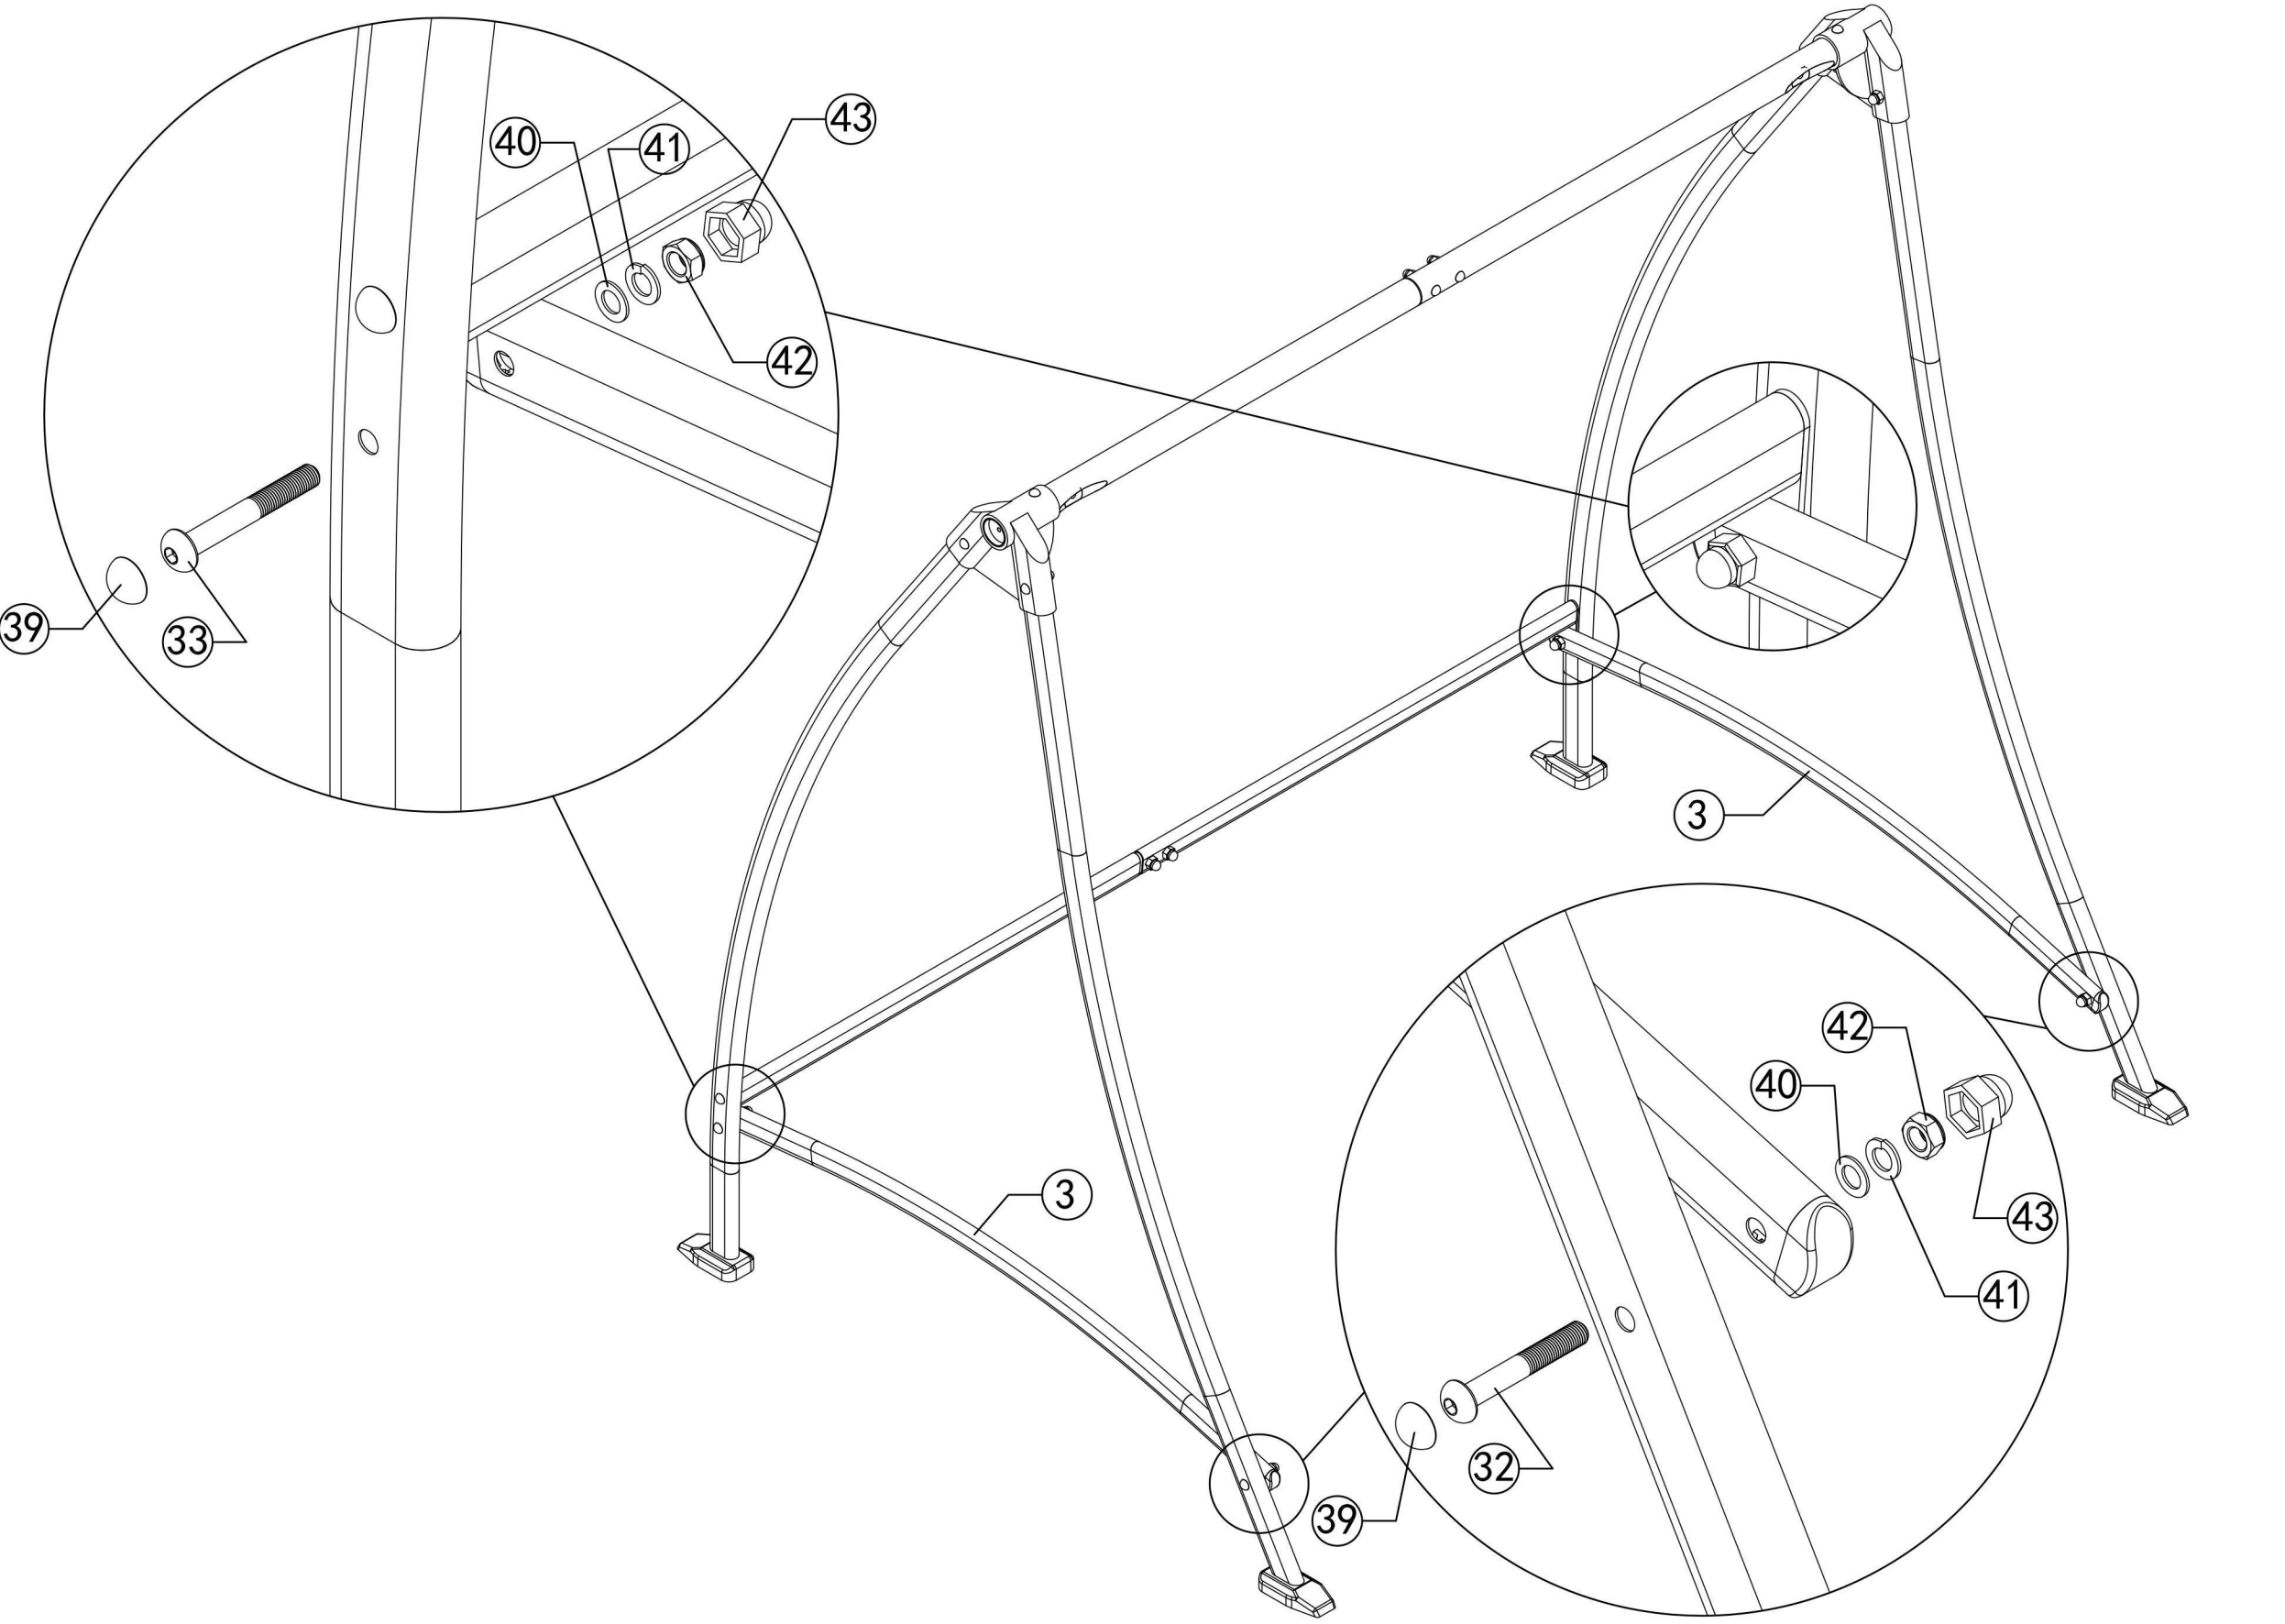
Please ensure all parts listed included before assembly and feel free to contact us if there are any problems.

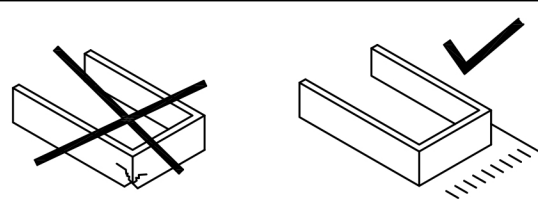
 ① 2X	 ② 2X	 ③ 2X	 ④ 1X	 ⑥ 1X
			 ⑤ 1X	 ⑦ 1X
 ⑧ 2X	 ⑨ 2X	 ⑩ 1X	 ⑪ 2X	
 ⑫ 2X	 ⑬ 1X	 ⑭ 1X	 ⑮ 2X	
short swing booms  ⑯ 2X	long swing booms  ⑰ 2X	 ⑱ 1X	 ⑲ 2X	
 ⑳ 8X	 ㉑ 2X	 ㉒ 2X	 ㉓ 2X	 ㉔ 1X
		 ㉕ 1X	 M6X8 ㉖ 2X	 M6X16 ㉗ 2X
 M6X25 ㉘ 8X	 M8X30 ㉙ 6X	 M8X35 ㉚ 8X	 M8X45 ㉛ 4X	 M8X55 ㉜ 4X
			 M8X60 ㉝ 4X	 M8X65 ㉞ 4X
				 M6 ㉟ 12X
 M6 ㊱ 4X	 M6 ㊲ 4X	 M6 ㊳ 4X	 M8 ㊴ 30X	 M8 ㊵ 20X
			 M8 ㊶ 6X	 M8 ㊷ 20X
				 M8 ㊸ 20X
 S4 ㊹ 1X	 S5 ㊺ 1X	 ㊻ 1X		










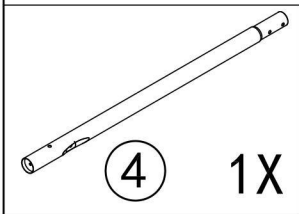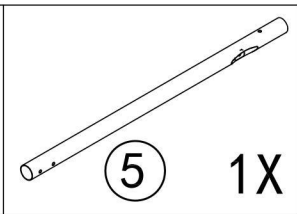
<div> <div>  <div> <div>①</div> <div>2X</div> </div> </div> <div>  <div> <div>②</div> <div>2X</div> </div> </div> </div> <div> <div>  <div> <div>②②</div> <div>2X</div> </div> </div> <div>  <div> <div>②③</div> <div>2X</div> </div> </div> </div>			
		<p>Step 1: Please find the required parts according to the instructions in the left frame, prepare a wooden hammer, and knock the plastic foot pad (Part 22) into the leg tube(Part 1) , knock Part 23 into the Part 2 as shown.</p>	
<div> <div>  <div> <div>②④</div> <div>4X</div> </div> </div> <div>  <div> <div>②⑤</div> <div>4X</div> </div> </div> </div> <div> <div>  <div> <div>③①</div> <div>4X</div> <div>M8X45</div> </div> </div> <div>  <div> <div>③⑨</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>④①</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>④②</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>④③</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>④⑤</div> <div>1X</div> <div>S5</div> </div> </div> <div>  <div> <div>④⑥</div> <div>1X</div> </div> </div> </div>			
		<p>Step 2: Put the front and rear leg tubes (Part 1 is front leg tube, Part 2 is rear leg tube) into the fixator (Part 24 and Part 25) as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p>	
2			

<div data-bbox="0 94 396 237">  <div> <div>④</div> <div>1X</div> </div> </div> <div data-bbox="199 94 396 237">  <div> <div>⑤</div> <div>1X</div> </div> </div> <div data-bbox="0 237 396 379">  <div> <div>③②</div> <div>2X</div> <div>M8X55</div> </div> </div> <div data-bbox="0 379 396 513">  <div> <div>③⑨</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 513 396 655">  <div> <div>④①</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 655 396 786">  <div> <div>④②</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 786 396 928">  <div> <div>④③</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 928 396 1062">  <div> <div>④⑤</div> <div>1X</div> <div>S5</div> </div> </div> <div data-bbox="0 1062 396 1202">  <div> <div>④⑥</div> <div>1X</div> </div> </div>	<div data-bbox="546 237 1932 1098"> </div>
	<div data-bbox="436 1329 2020 1418"> <p>Step 3: Insert the left and right beams(Part 4 and Part 5) as show, and secure with bolts and nuts as required(Afterall the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>
<div data-bbox="0 1495 396 1608">  <div> <div>③④</div> <div>2X</div> <div>M8X65</div> </div> </div> <div data-bbox="0 1608 396 1748">  <div> <div>③⑨</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 1748 396 1890">  <div> <div>④①</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 1890 396 2021">  <div> <div>④②</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 2021 396 2160">  <div> <div>④③</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="0 2160 396 2294">  <div> <div>④⑤</div> <div>1X</div> <div>S5</div> </div> </div> <div data-bbox="0 2294 396 2430">  <div> <div>④⑥</div> <div>1X</div> </div> </div>	<div data-bbox="462 1469 2016 2671"> </div>
	<div data-bbox="424 2694 2011 2819"> <p>Step 4: Put the beam(Part 4 & Part 5) assembly into the fixator according as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>
<div data-bbox="178 2849 241 2953"> <div>3</div> </div>	

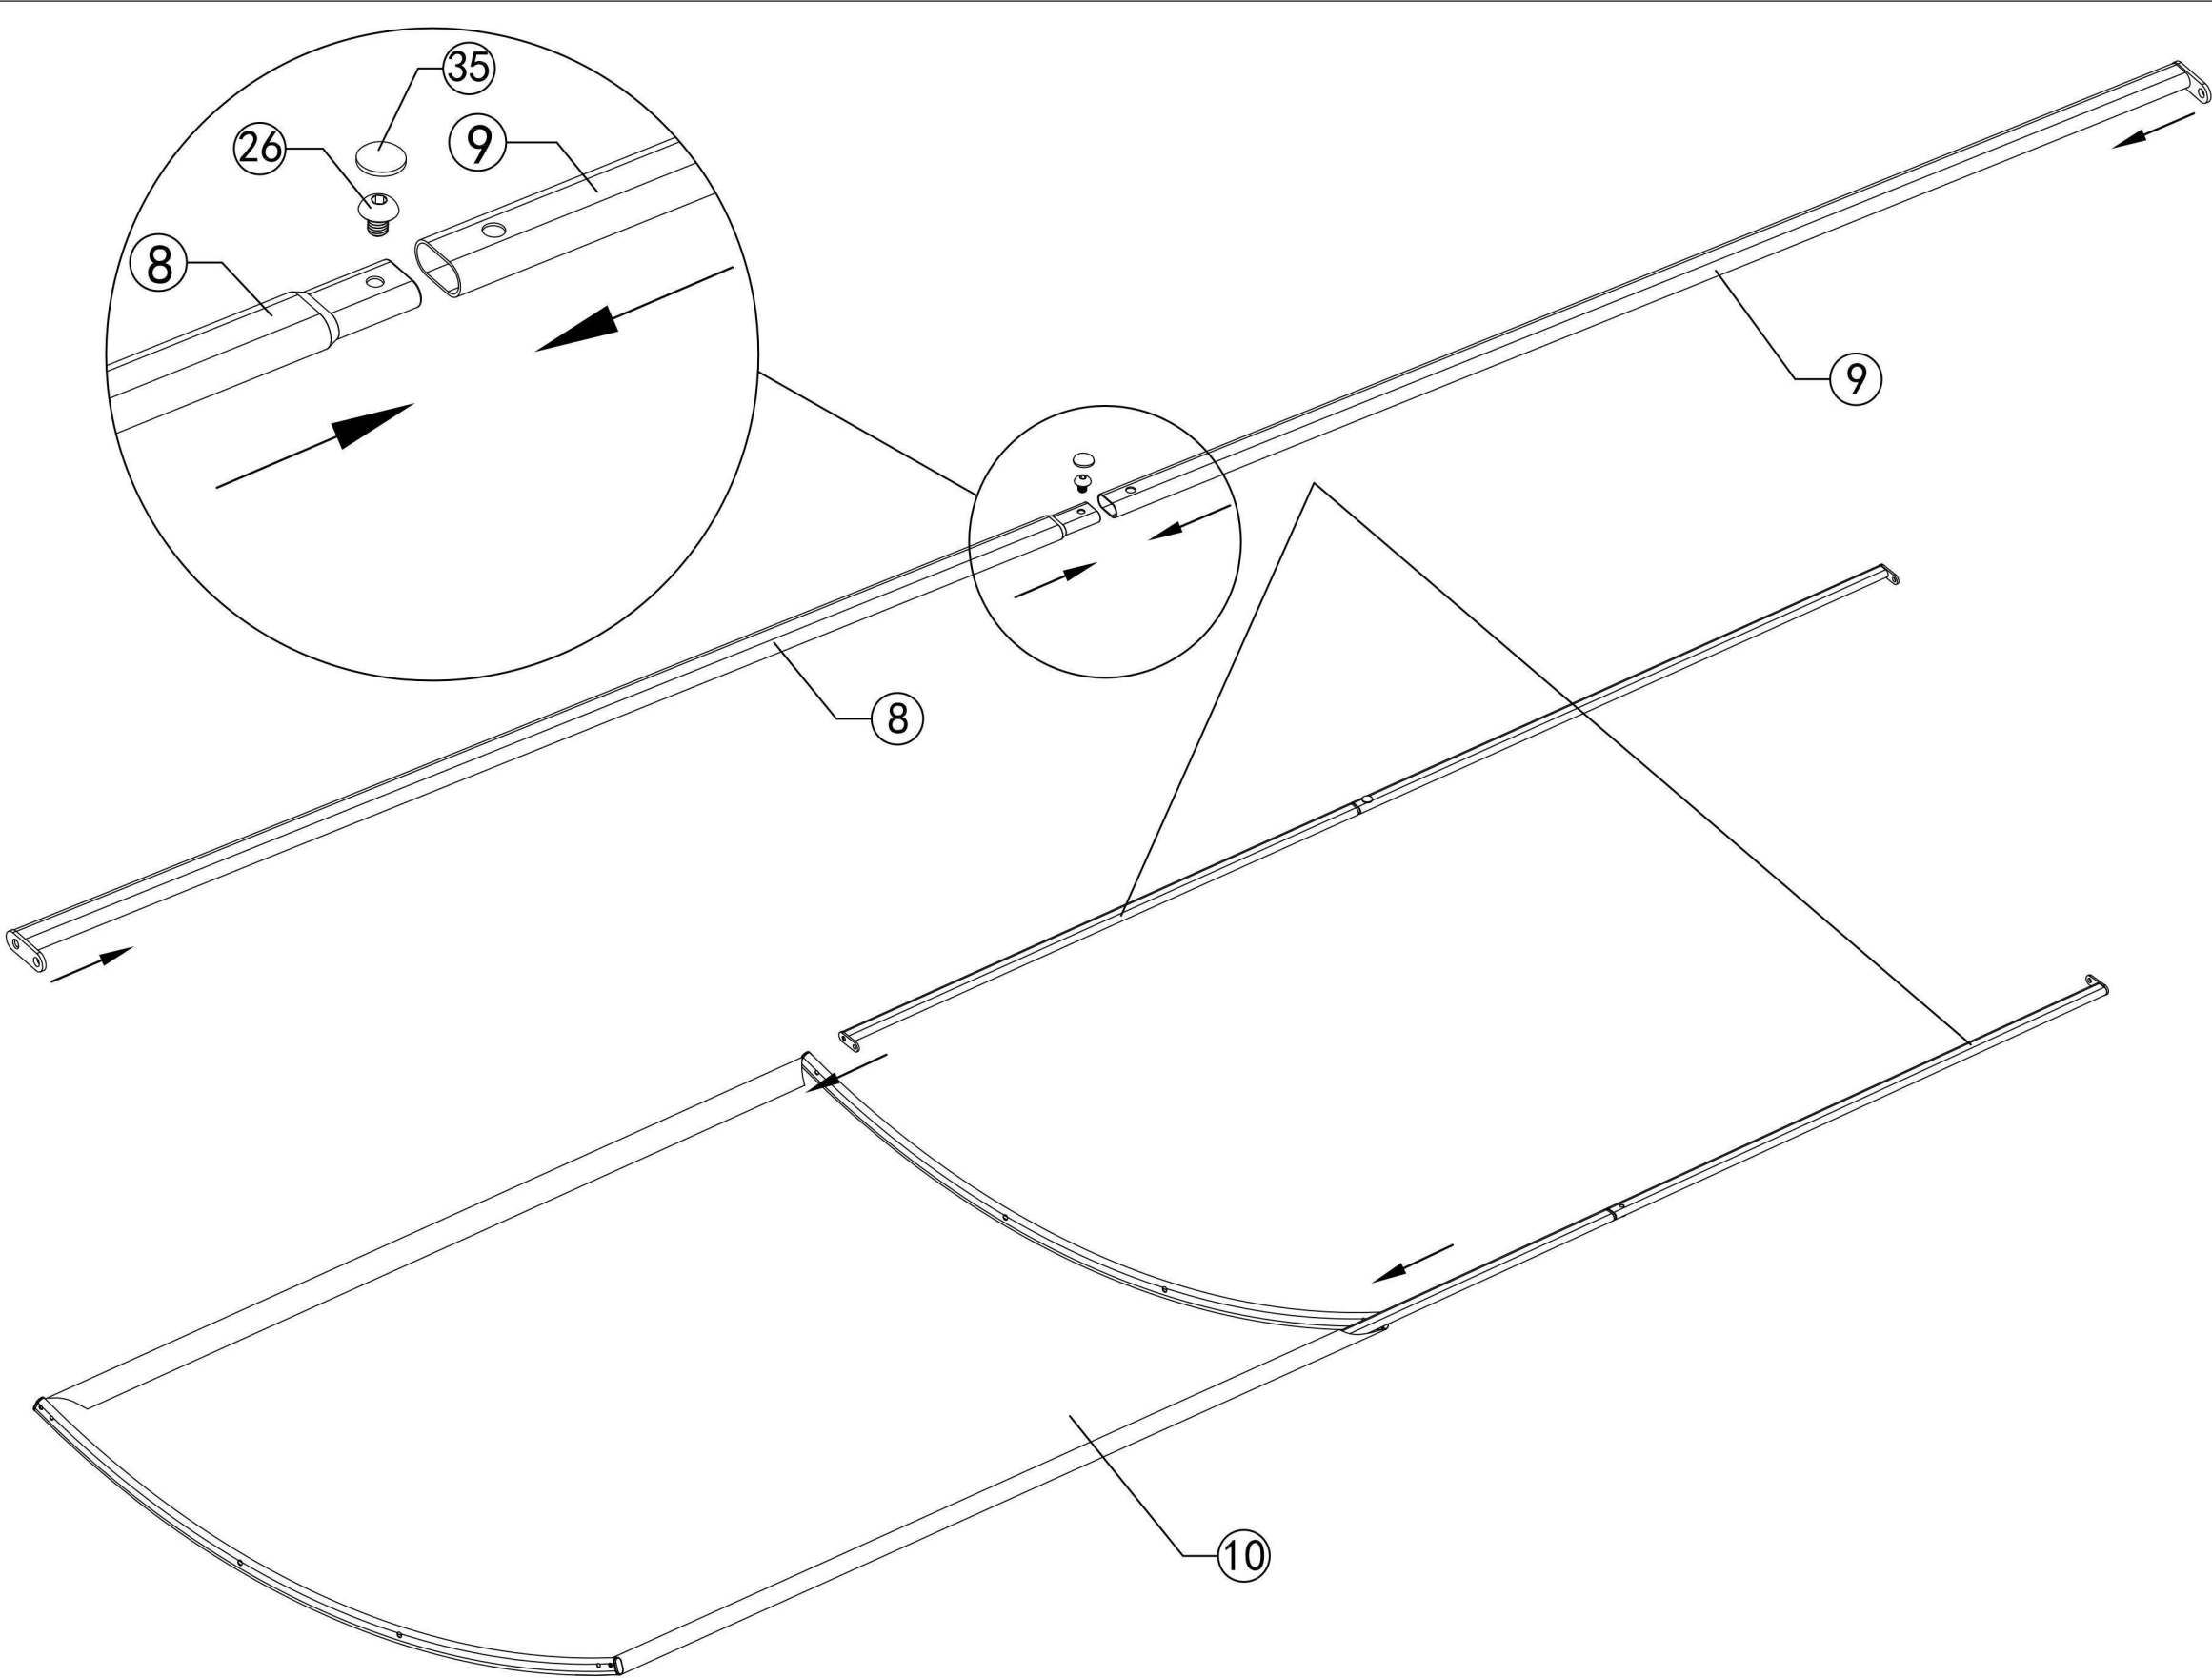







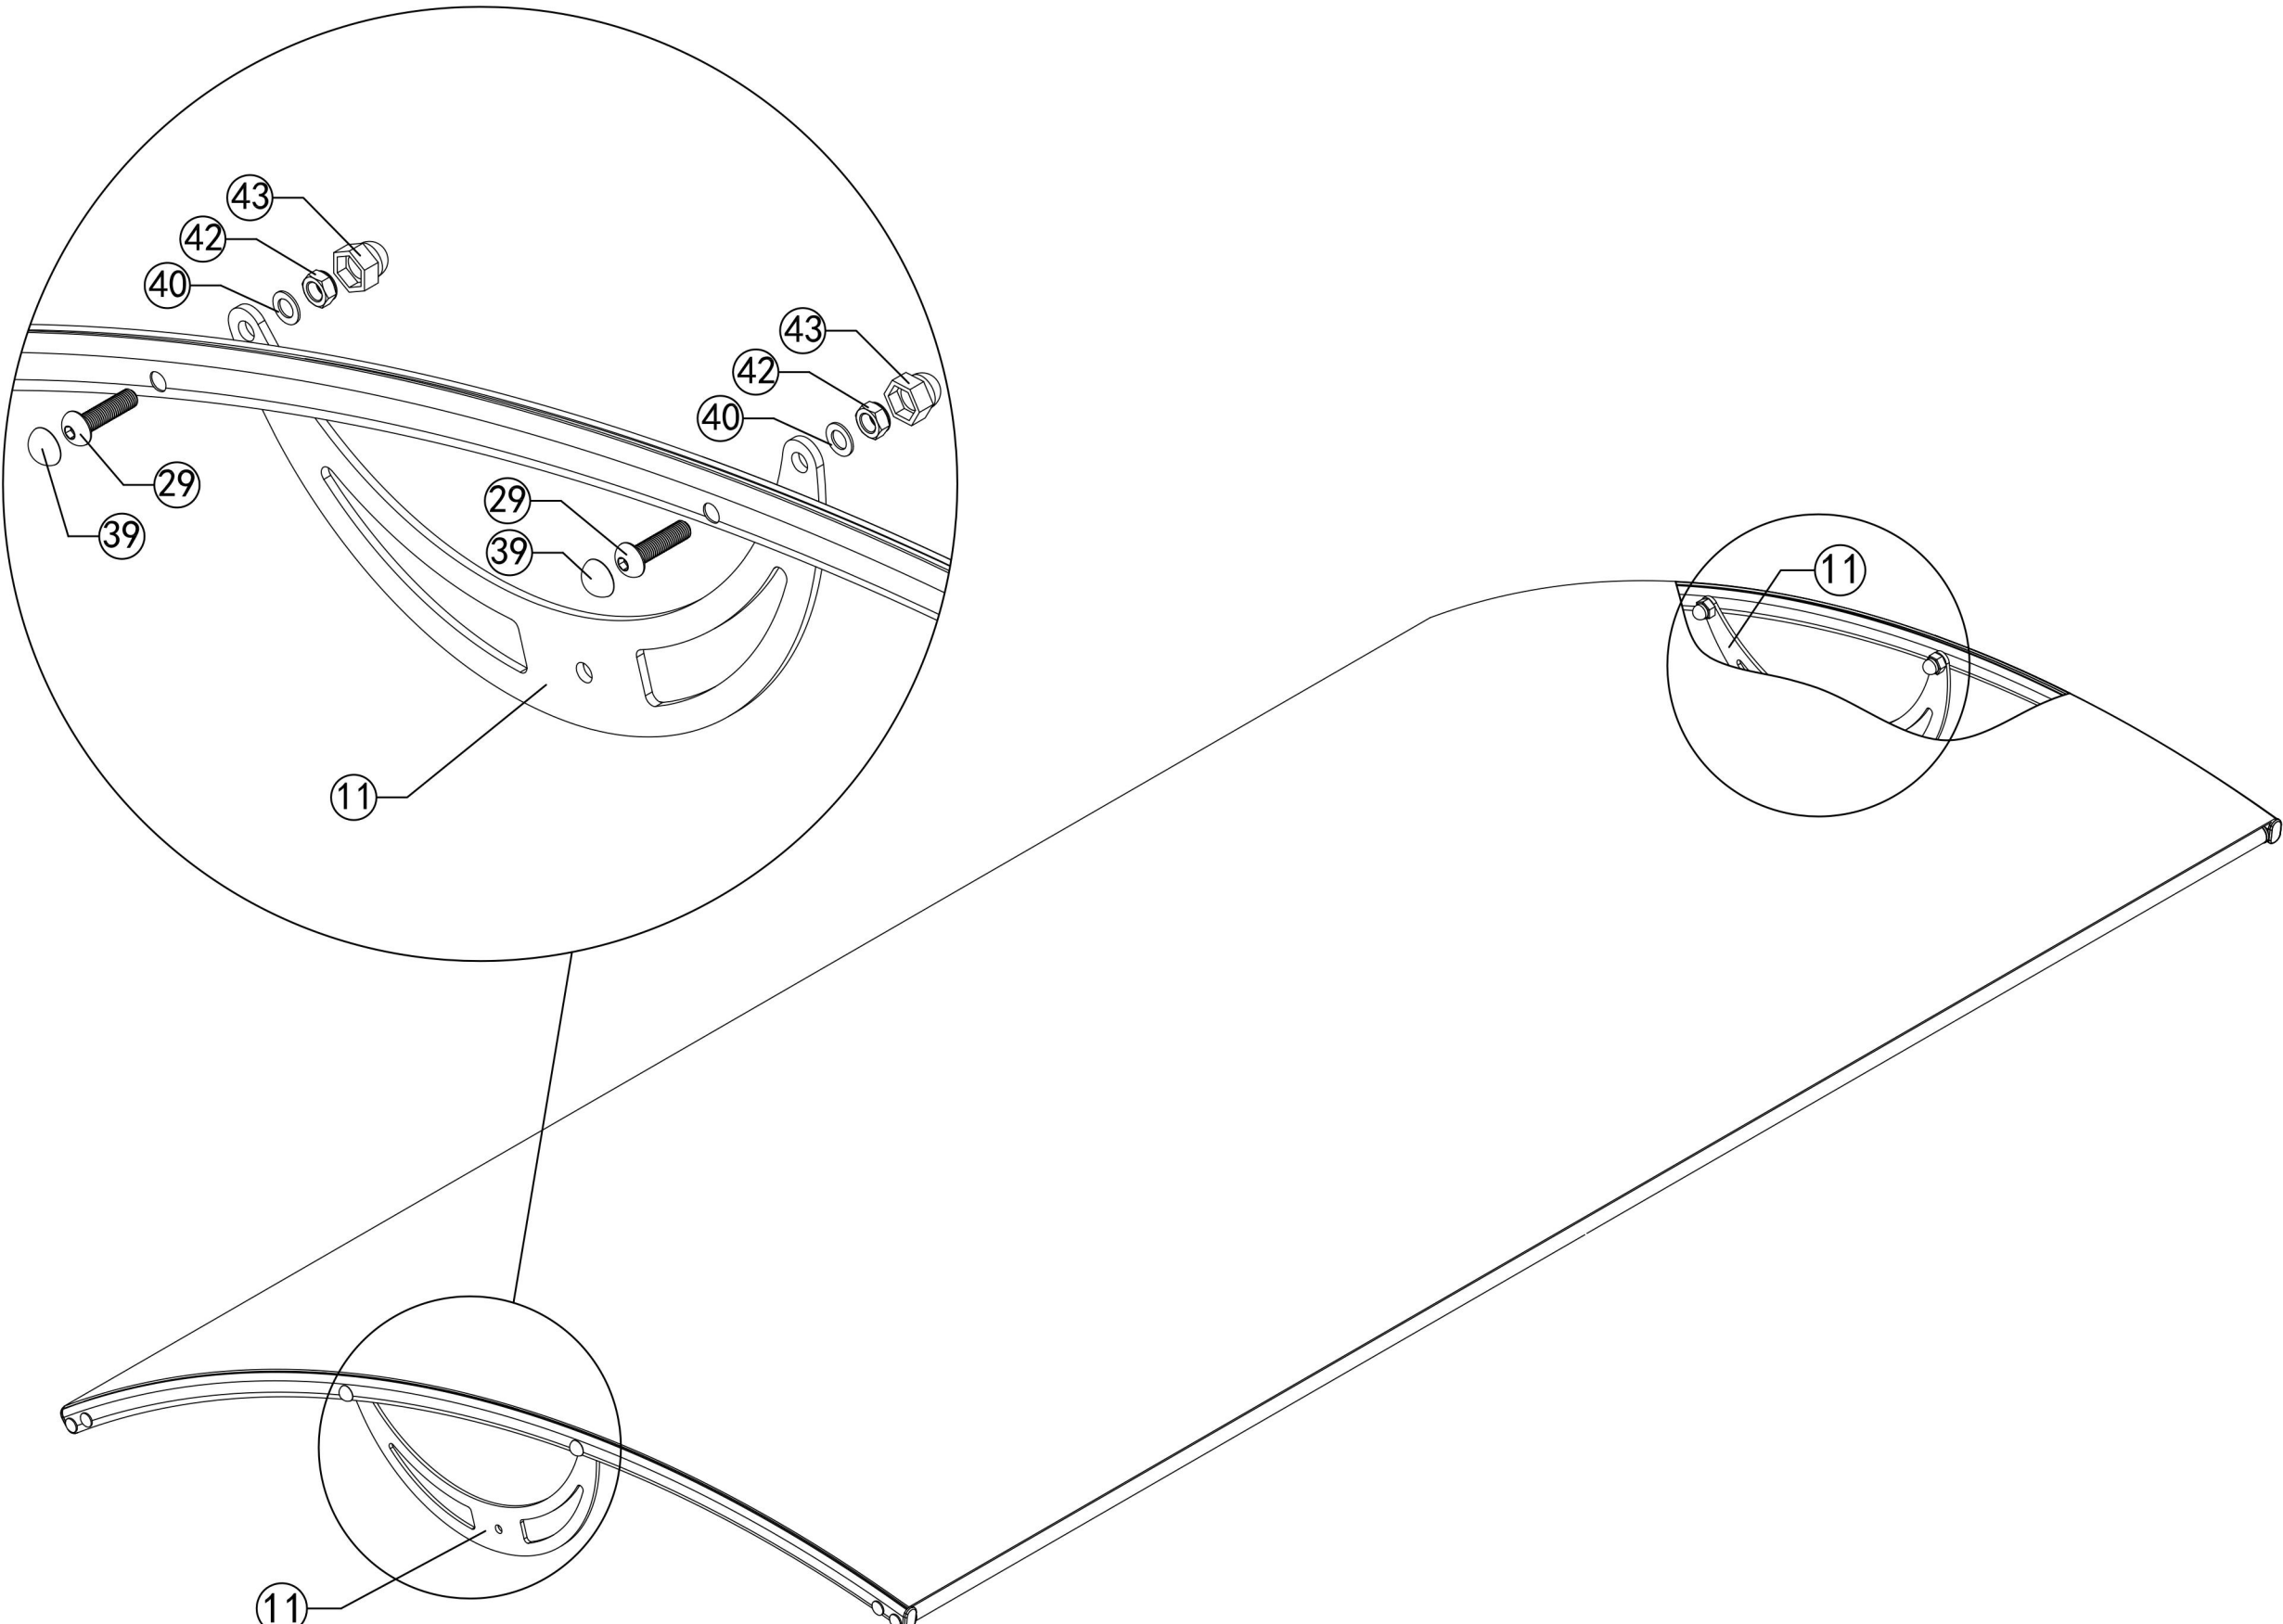
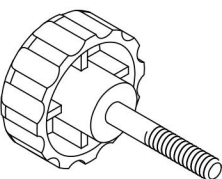
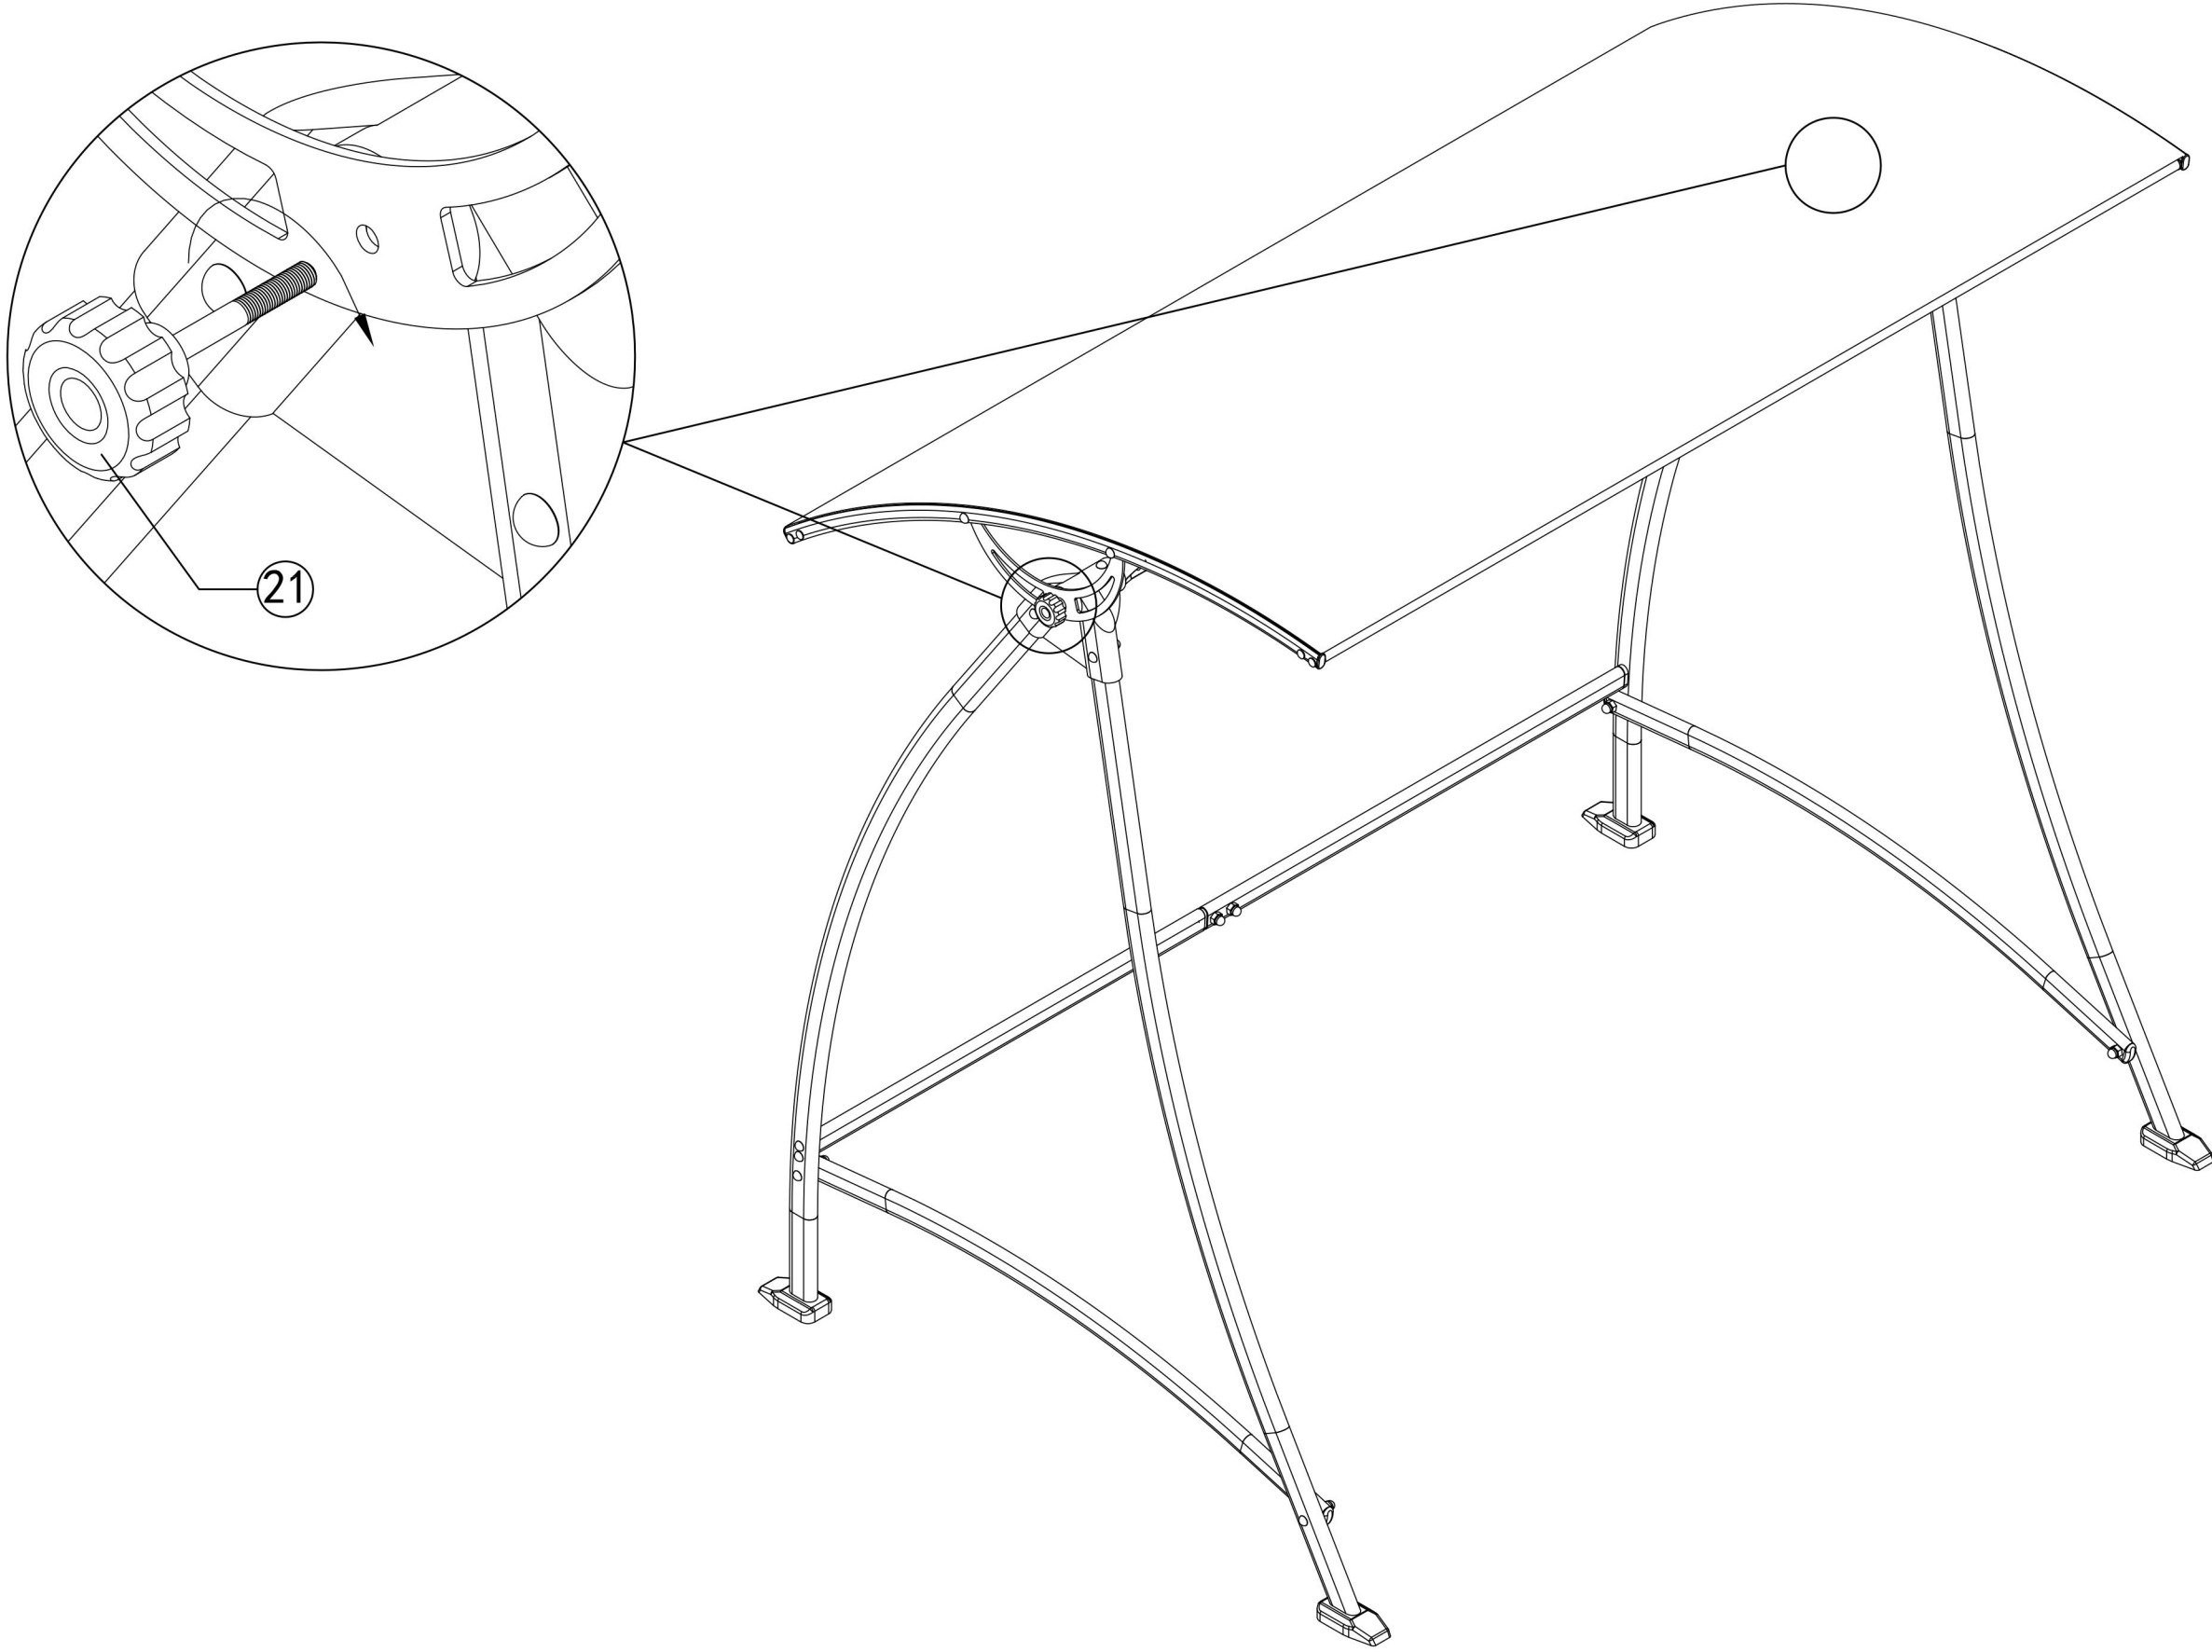
<div> <div>  <div> <div>6</div> <div>1X</div> </div> </div> <div>  <div> <div>7</div> <div>1X</div> </div> </div> </div> <div>  <div> <div>29</div> <div>2X</div> <div>M8X30</div> </div> </div> <div>  <div> <div>30</div> <div>2X</div> <div>M8X35</div> </div> </div> <div>  <div> <div>39</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>40</div> <div>2X</div> <div>M8</div> </div> </div> <div>  <div> <div>42</div> <div>2X</div> <div>M8</div> </div> </div> <div>  <div> <div>43</div> <div>2X</div> <div>M8</div> </div> </div> <div>  <div> <div>45</div> <div>1X</div> <div>S5</div> </div> </div> <div>  <div> <div>46</div> <div>1X</div> </div> </div>	<div>  <div> <div> <div>39</div> <div>29</div> <div>40</div> <div>42</div> <div>43</div> </div> <div> <div>6</div> </div> <div> <div>7</div> </div> <div> <div>30</div> <div>39</div> </div> </div> <div> ATTENTION:Do not install the bolts in this step. </div> </div>
<div>  <div> <div>3</div> <div>2X</div> </div> </div> <div>  <div> <div>32</div> <div>2X</div> <div>M8X55</div> </div> </div> <div>  <div> <div>33</div> <div>2X</div> <div>M8X60</div> </div> </div> <div>  <div> <div>39</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>40</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>41</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>42</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>43</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>45</div> <div>1X</div> <div>S5</div> </div> </div> <div>  <div> <div>46</div> <div>1X</div> </div> </div>	<div> <p>Step 5: Insert the left and right bars (Part 6 & Part 7) as shown, and secure with bolts and nuts. Then connect the bar (part 6 and Part 7) to the rear leg tubes (Align the first holes and secure the bolts). After all the bolts are assembled in place, tighten them together, finally cover the caps.</p> </div> <div>  <div> <div> <div>40</div> <div>41</div> <div>43</div> <div>42</div> </div> <div> <div>39</div> <div>33</div> </div> <div> <div>3</div> </div> <div> <div>32</div> <div>39</div> </div> <div> <div>42</div> <div>40</div> <div>43</div> <div>41</div> </div> </div> <div> <p>Step 6: Assemble the Part 3 to the front and rear leg tubes (Align the second holes and secure the bolts). Secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div> </div>
<div> <div>4</div> </div>	



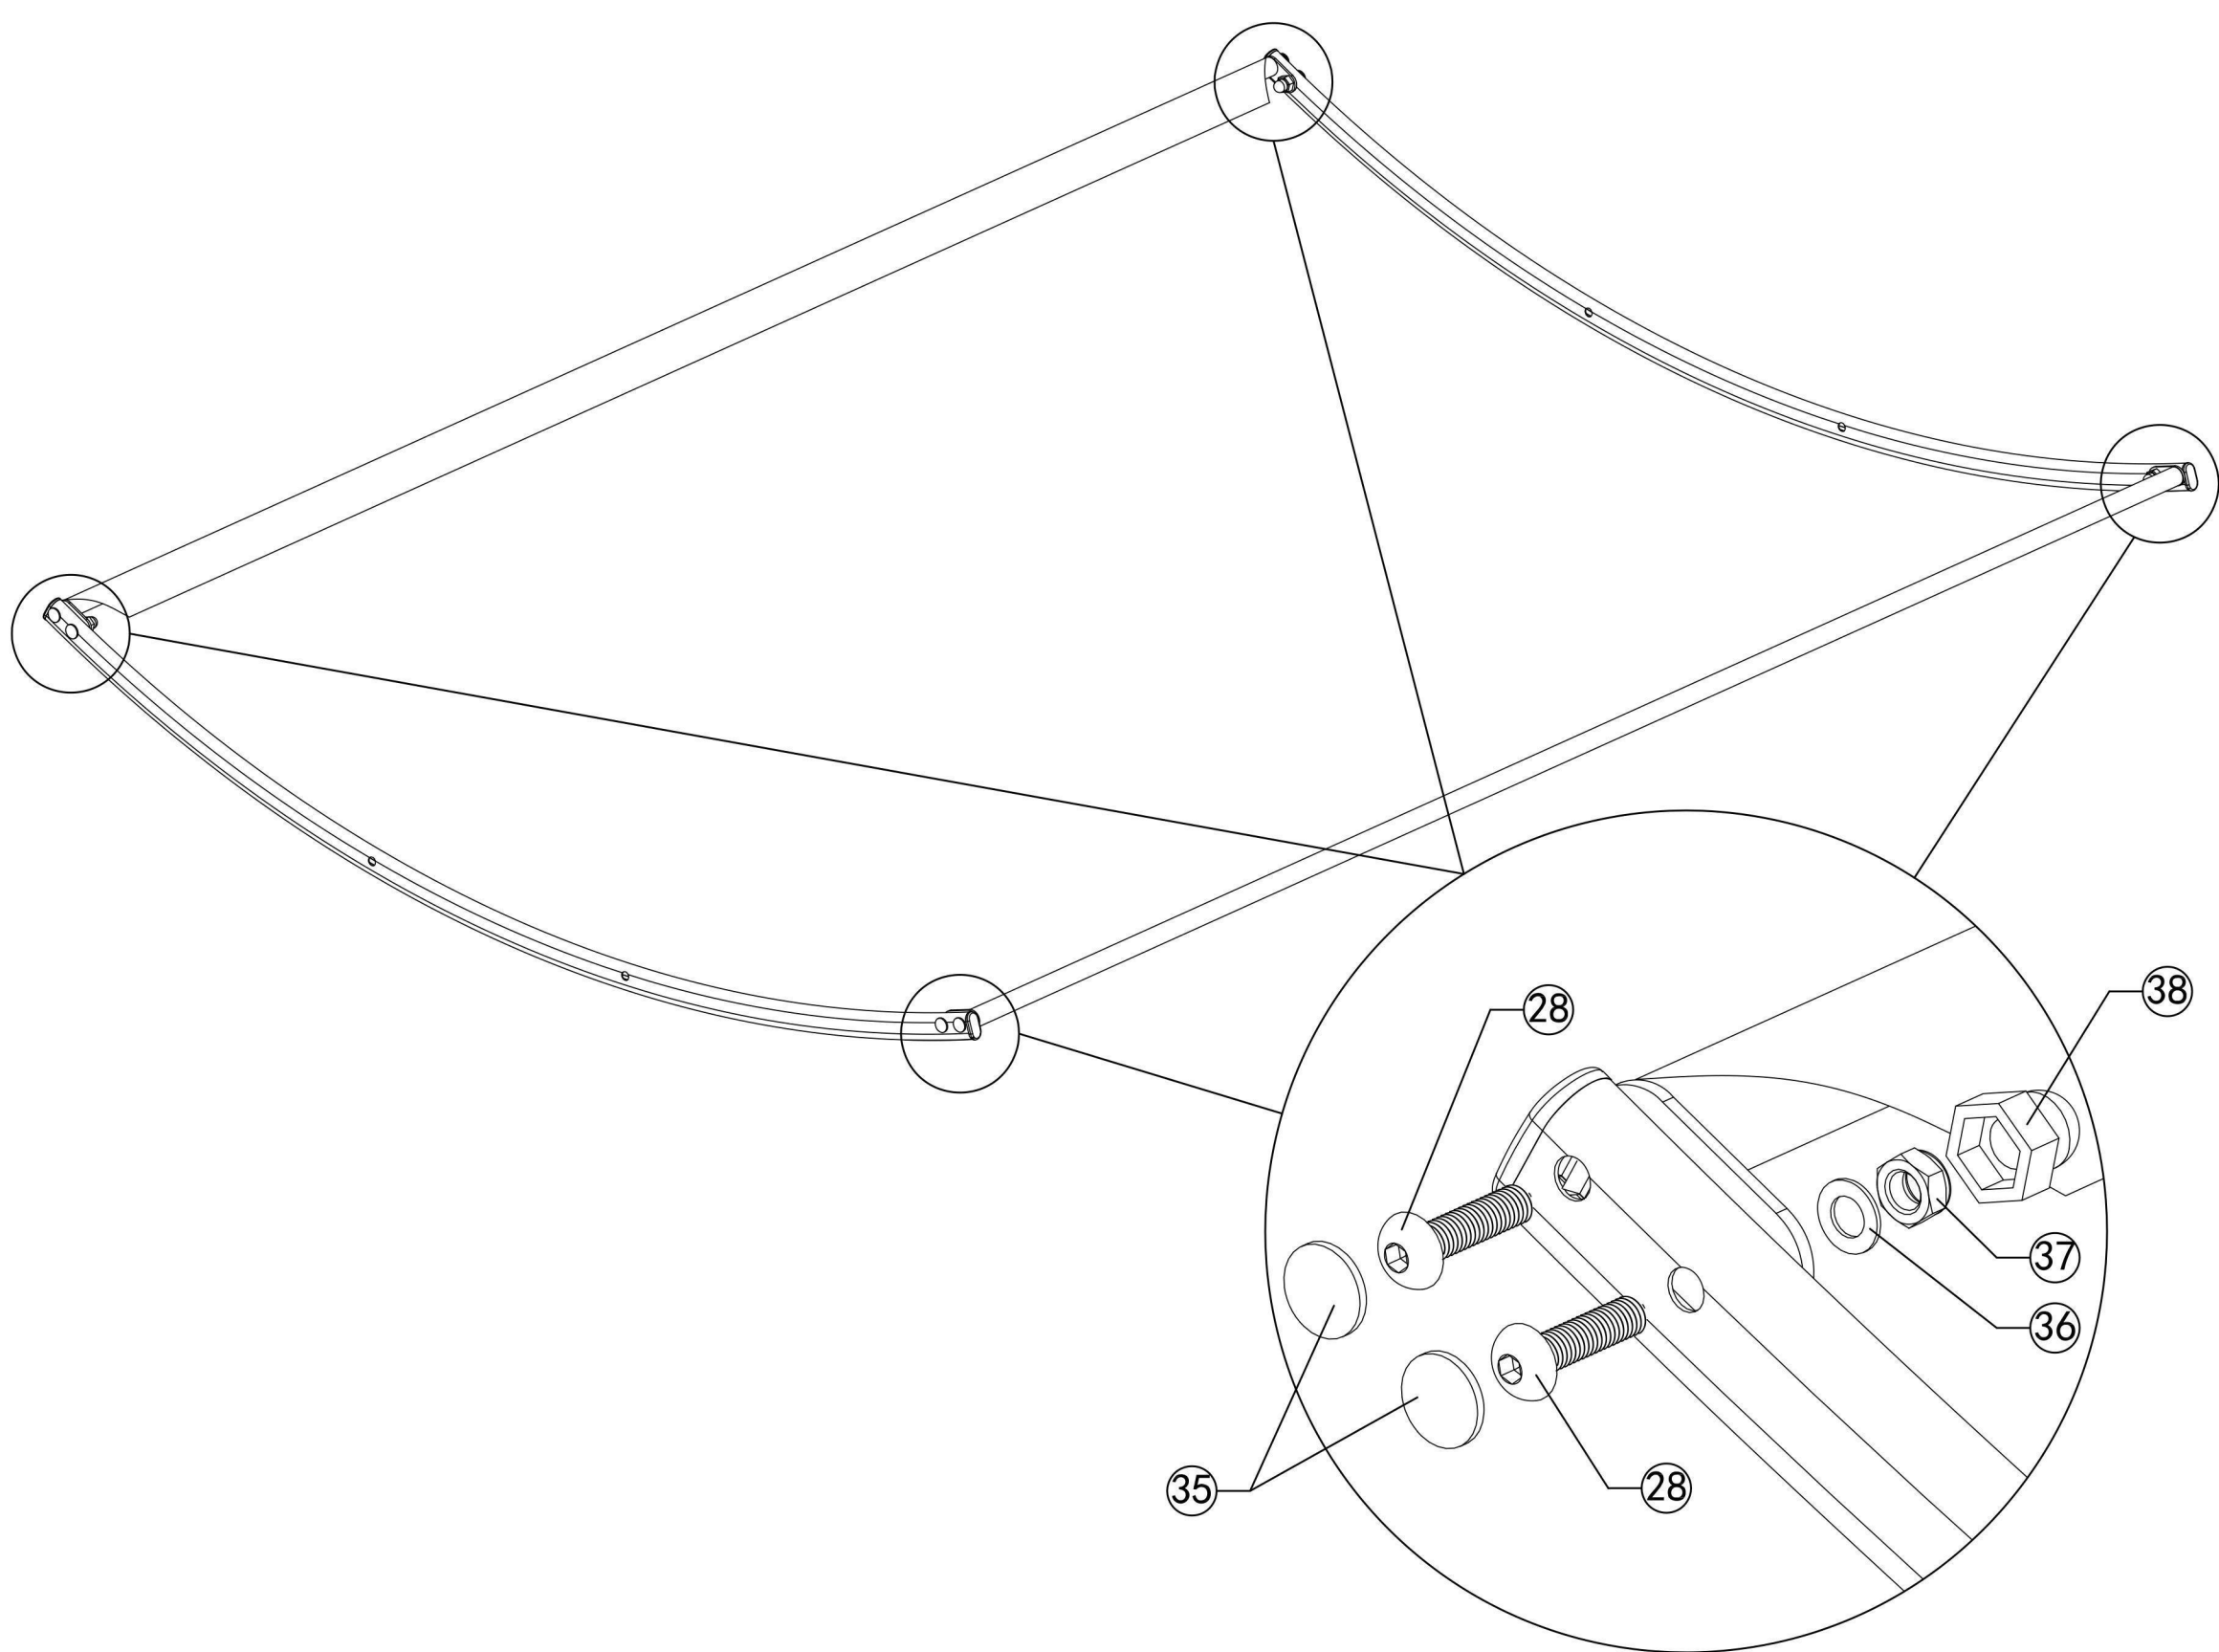


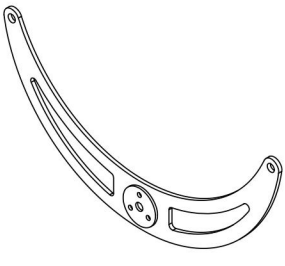


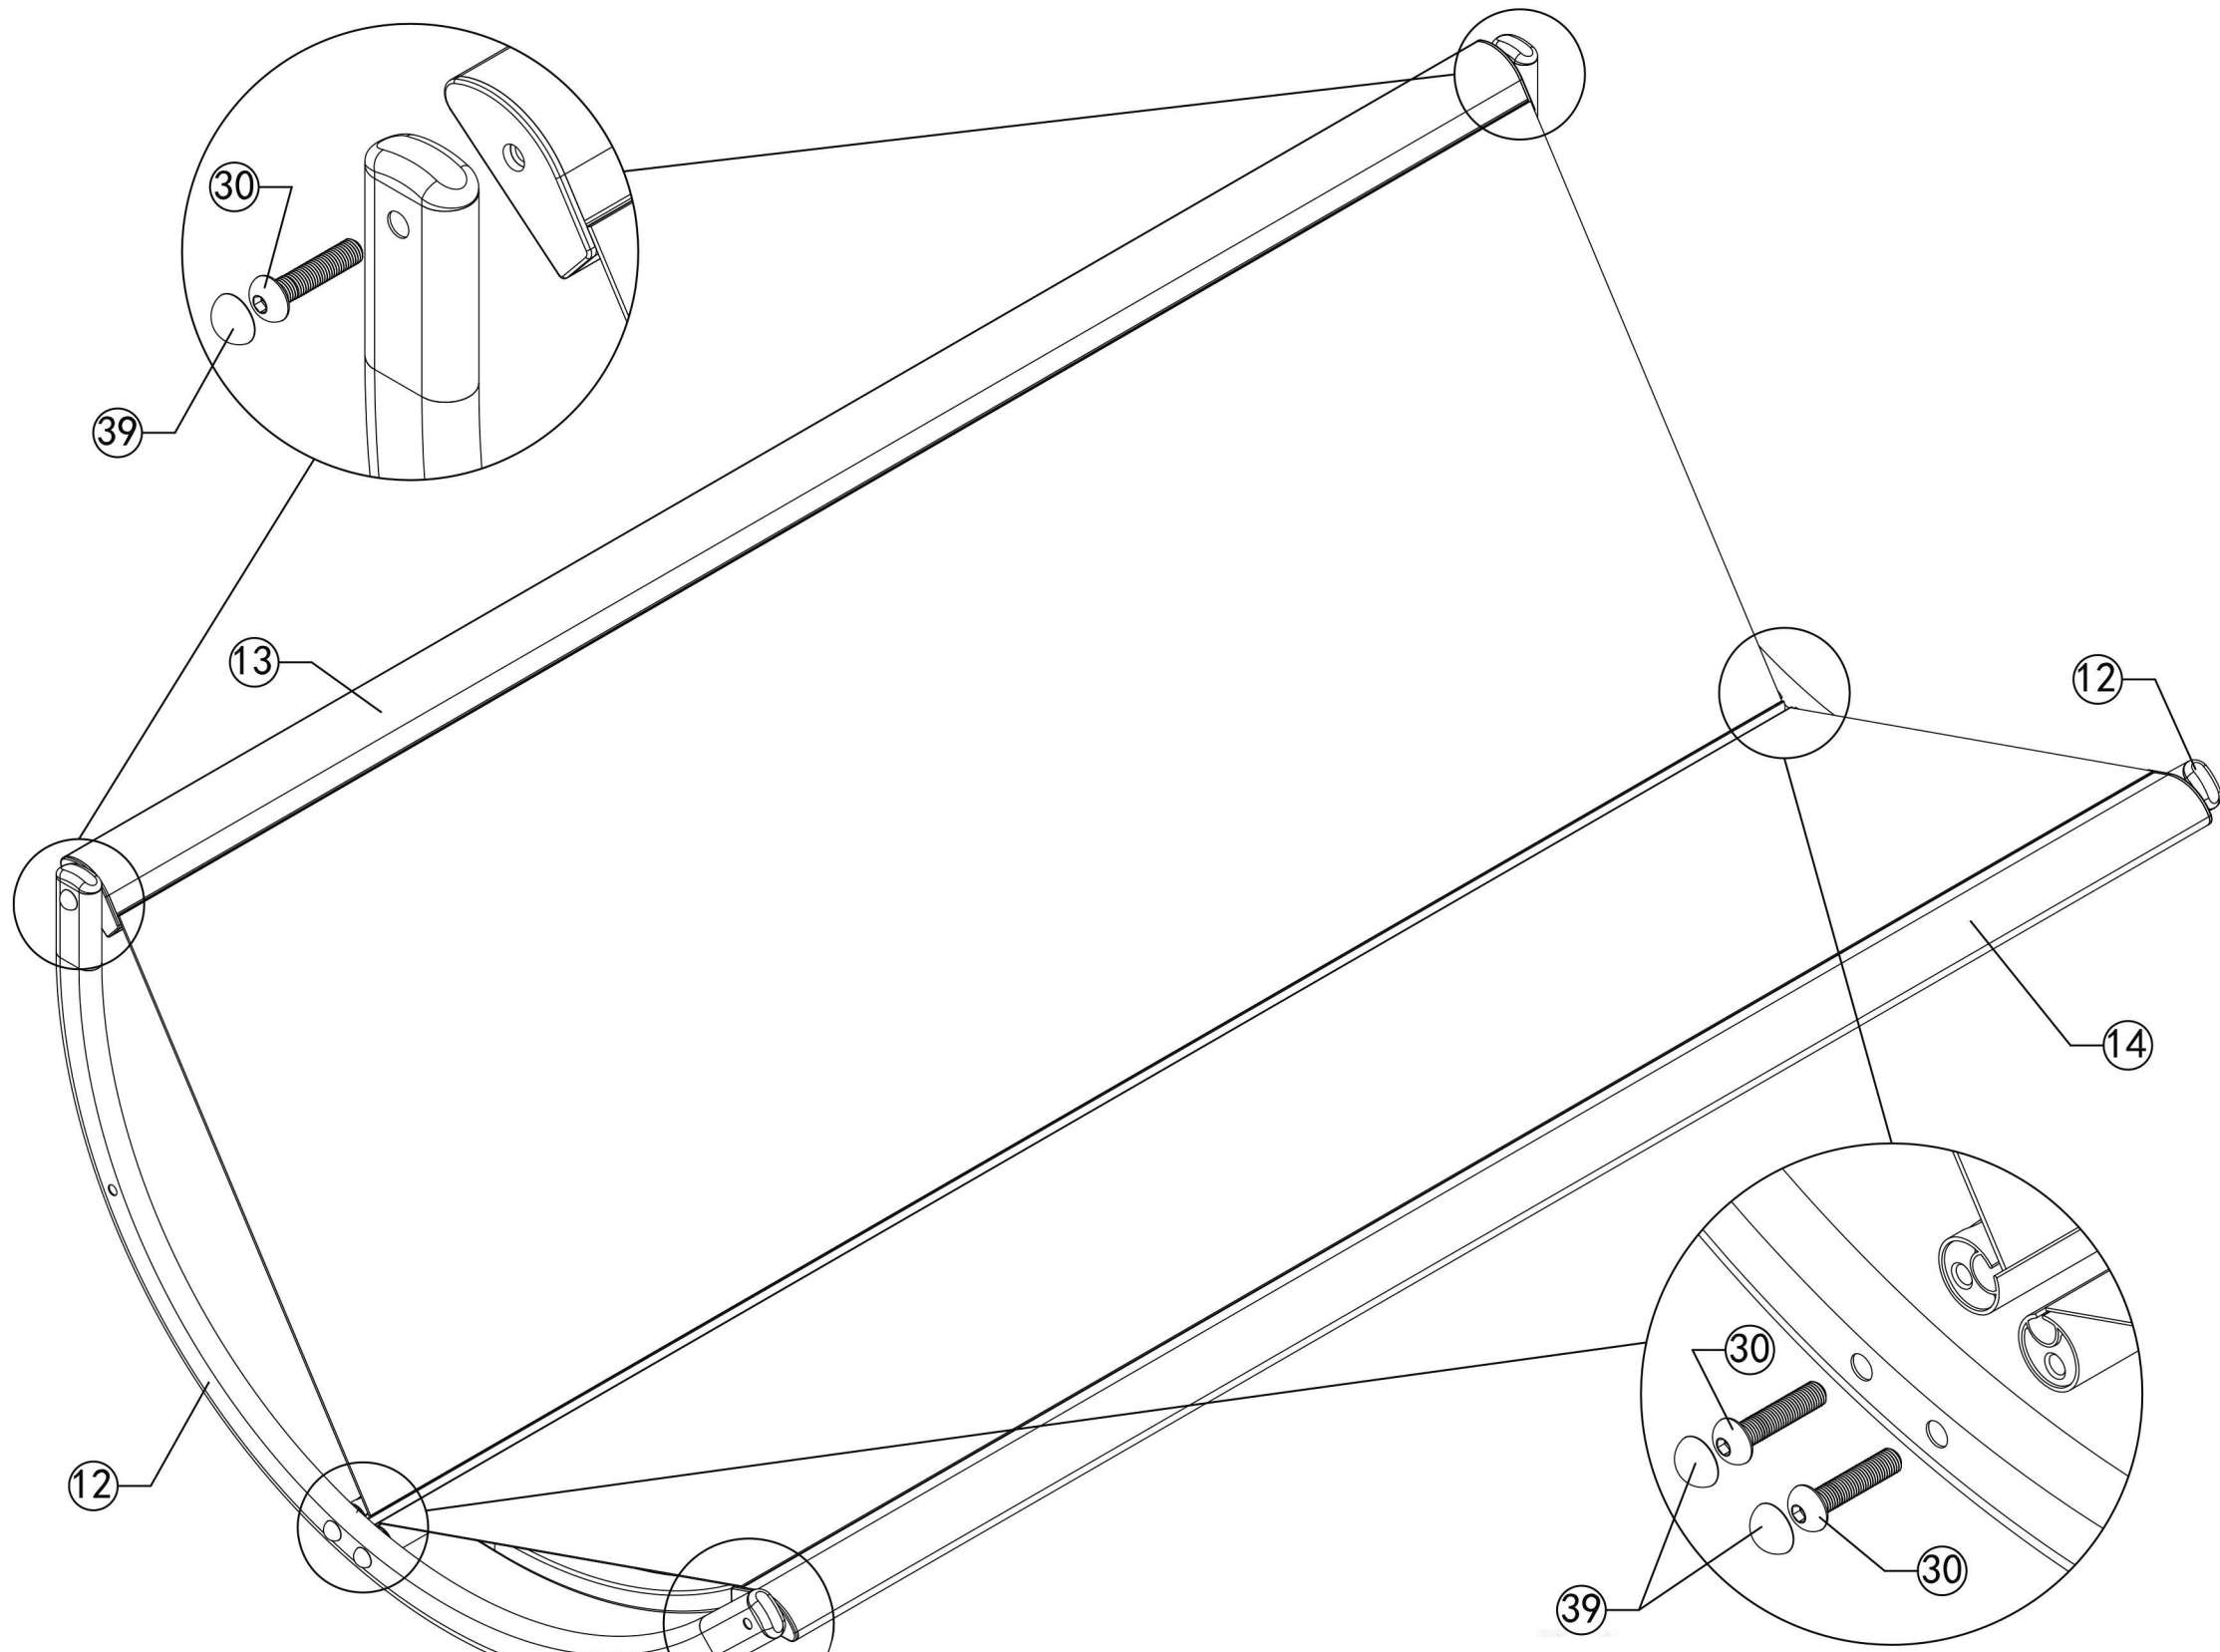
	(28)	8X	M6X25
	(35)	8X	M6
	(36)	4X	M6
	(37)	4X	M6
	(38)	4X	M6
	(44)	1X	S4
	(46)	1X	



5

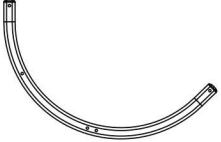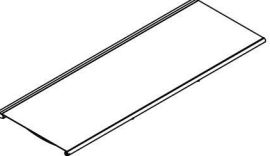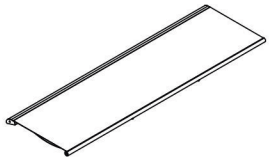












<div data-bbox="21 112 352 290">  <div> <div>11</div> <div>2X</div> </div> </div> <div data-bbox="21 320 384 424">  <div> <div>29</div> <div>4X</div> <div>M8X30</div> </div> </div> <div data-bbox="21 454 325 557">  <div> <div>39</div> <div>4X</div> <div>M8</div> </div> </div> <div data-bbox="21 587 325 691">  <div> <div>40</div> <div>4X</div> <div>M8</div> </div> </div> <div data-bbox="21 721 325 825">  <div> <div>42</div> <div>4X</div> <div>M8</div> </div> </div> <div data-bbox="21 854 325 958">  <div> <div>43</div> <div>4X</div> <div>M8</div> </div> </div> <div data-bbox="21 988 325 1092">  <div> <div>45</div> <div>1X</div> <div>S5</div> </div> </div> <div data-bbox="21 1121 315 1225">  <div> <div>46</div> <div>1X</div> </div> </div>	<div data-bbox="426 112 2064 1285">  </div>
	<div data-bbox="436 1344 1995 1424"> <p>Step 9: Install Part 11 to top canopy. Align the holes and secure with bolts and nuts as required as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>
<div data-bbox="21 1492 319 1656">  <div> <div>21</div> <div>2X</div> </div> </div>	<div data-bbox="447 1478 2026 2665">  </div> <div data-bbox="436 2706 1995 2789"> <p>Step 10: Fix the canopy on the assembled leg frame with the adjusting knob (Part 21) as shown. Attention: According to your own requirements to adjust canopy roof, then tighten the knob.</p> </div>
<div data-bbox="184 2864 241 2953"> <div>6</div> </div>	


12	2X	
13	1X	
14	1X	
39	6X	M8 
30	6X	M8X35 
45	1X	S5 










ATTENTION:
Do not install the bolts in this step.

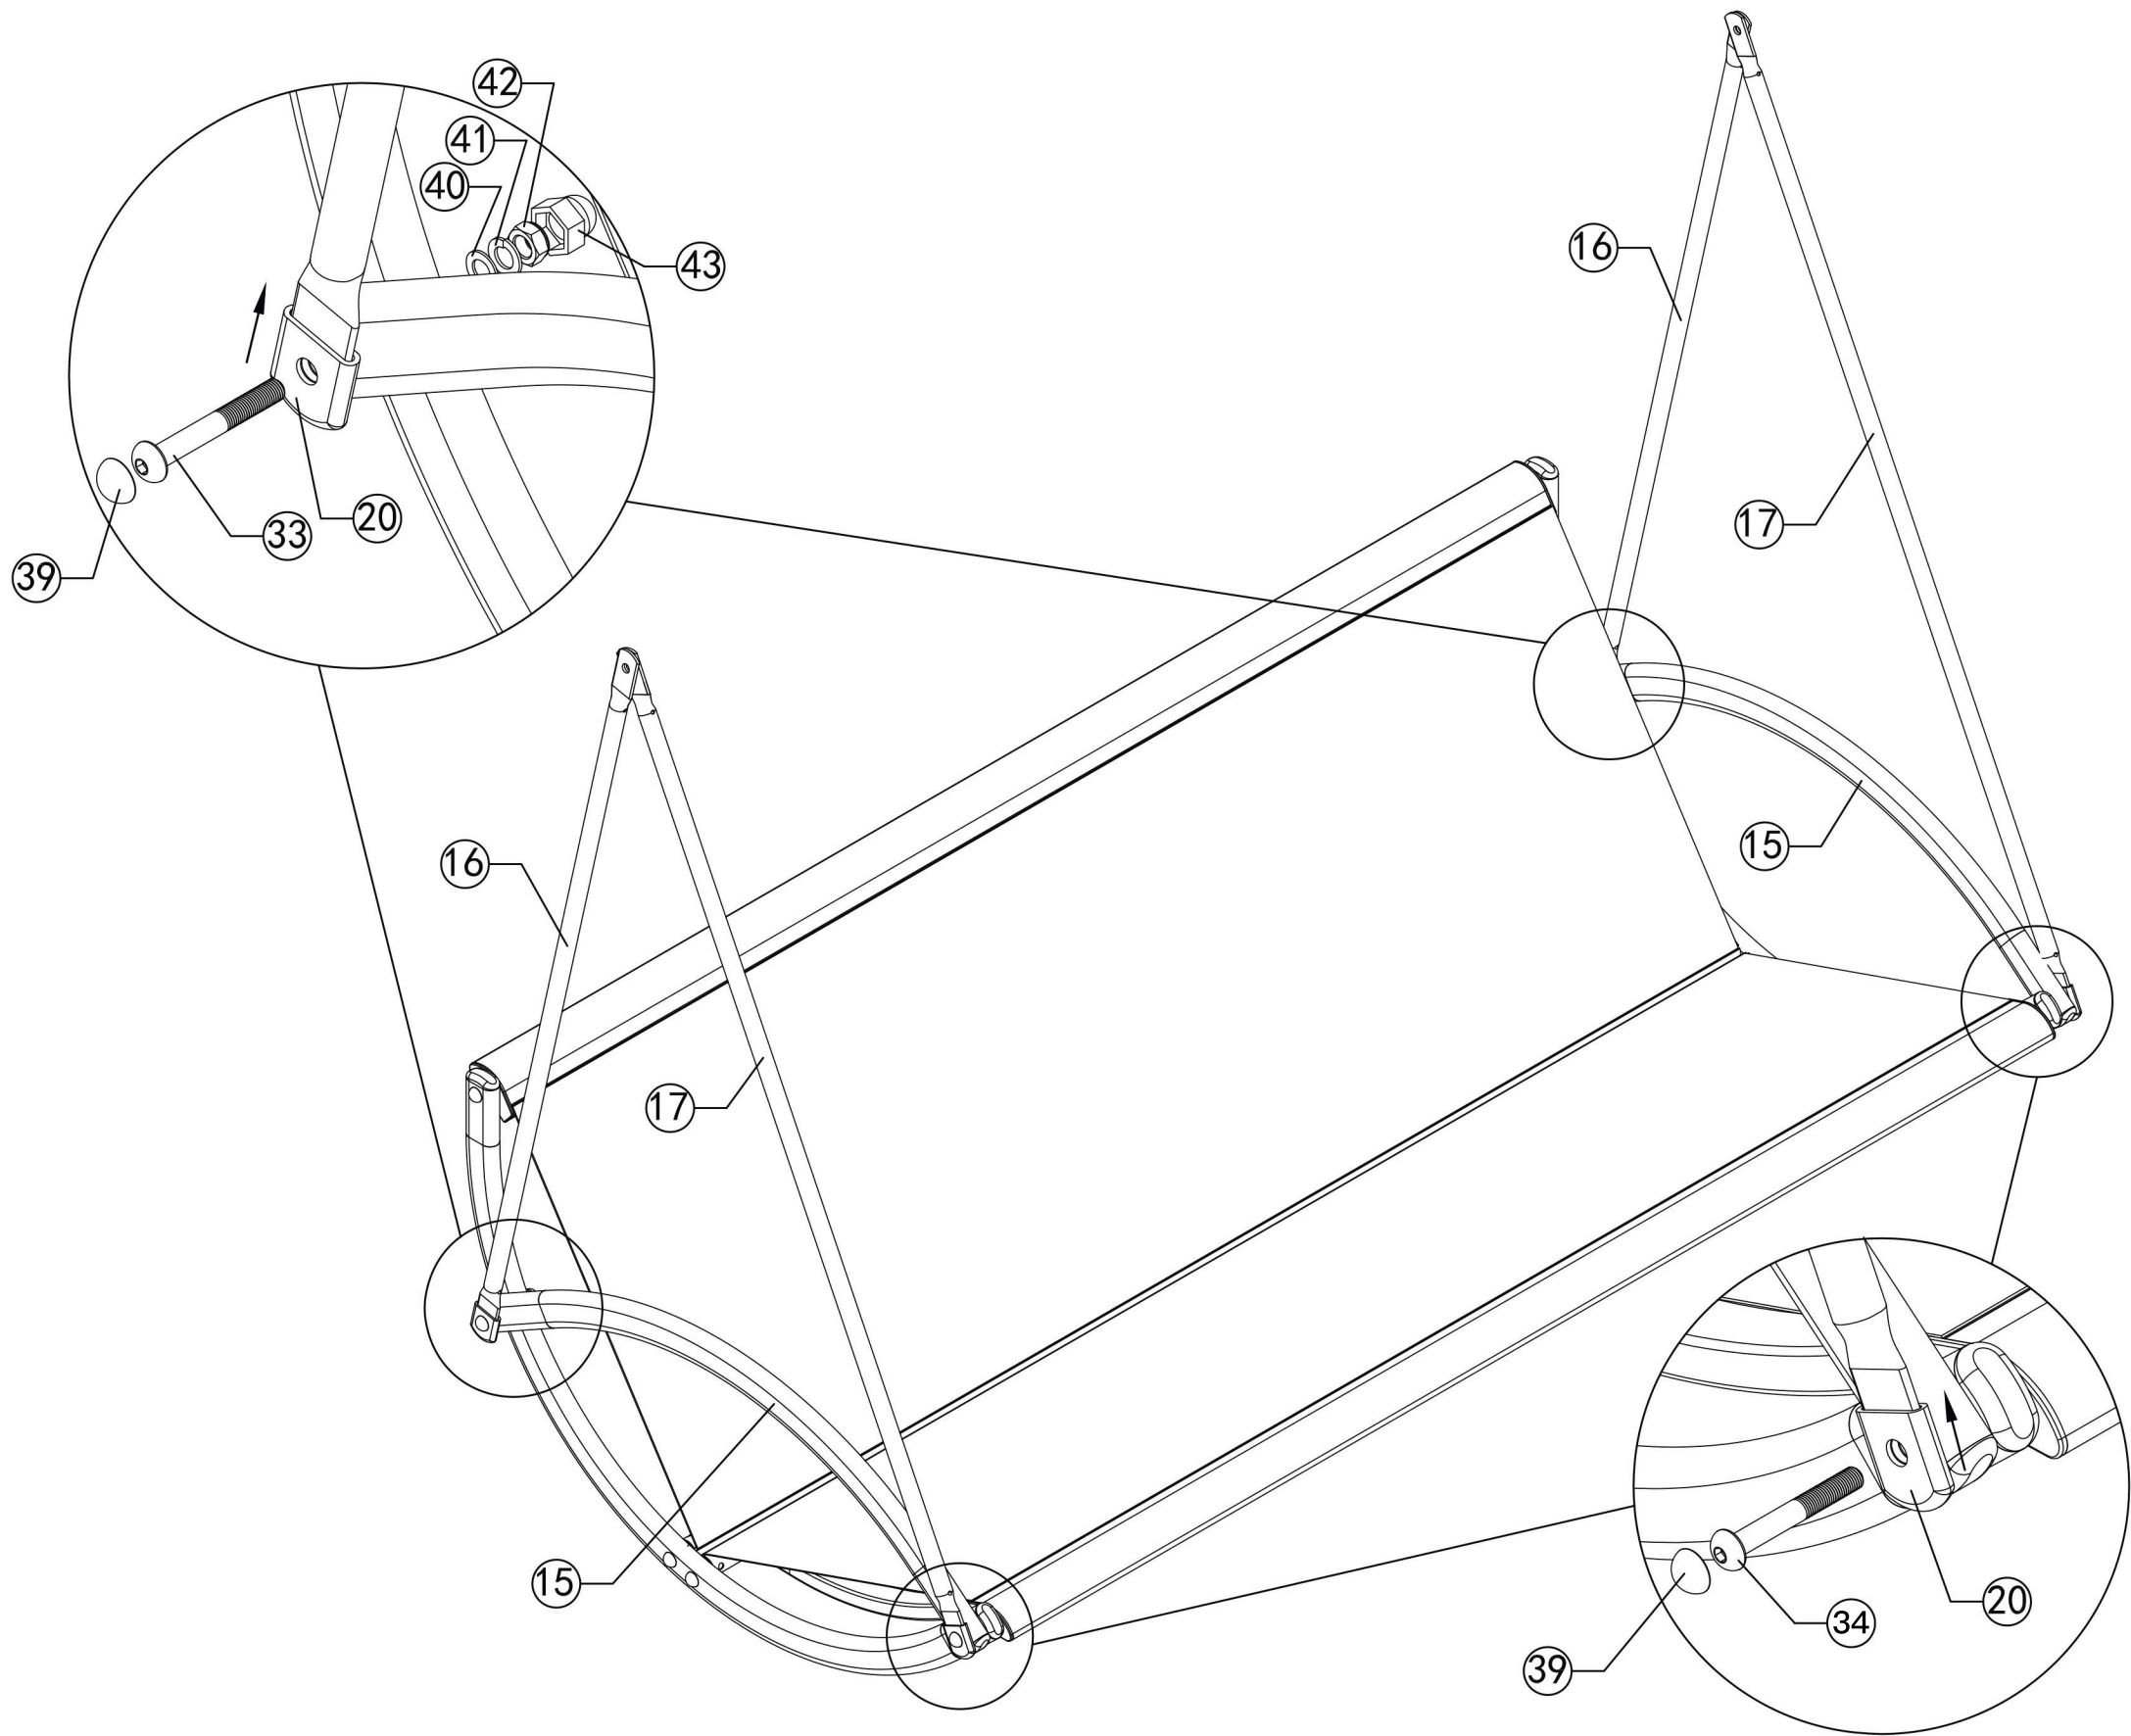Step 11: Use bolt #30 to secure fixing tube (Part 12) on back (part 13) and seat (Part 14)as shown, secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).

15	2X	
16	2X	
17	2X	
20	4X	
33	2X	M8X60 
34	2X	M8x65 
39	4X	M8 
40	2X	M8 
41	2X	M8 
42	2X	M8 
43	2X	M8 
45	1X	S5 
46	1X	

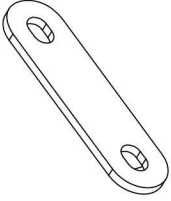

Step 12: Install swing booms and armrests. First fit part 20 on short swing booms (Part 16) and long swing booms(Part 17). Then align the holes and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).
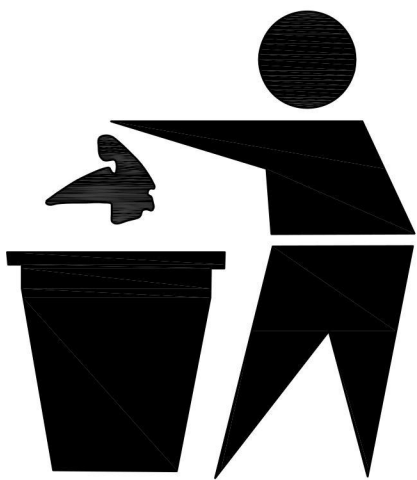
<div data-bbox="21 112 388 685"> <div> <div>18</div> <div>1X</div>  </div> <div> <div>27</div> <div>2X</div> <div>M6X16</div>  </div> <div> <div>35</div> <div>2X</div> <div>M6</div>  </div> <div> <div>44</div> <div>1X</div> <div>S4</div>  </div> </div>	<div data-bbox="438 121 2053 1240"> </div>
<div data-bbox="411 1317 2032 1442"> <p>Step 13: Use Bolt #27 to secure fixing connector (Part 18) on back and seat. Align the holes and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>	
<div data-bbox="21 1484 388 1801"> <div> <div>20</div> <div>4X</div>  </div> <div> <div>19</div> <div>2X</div>  </div> </div> <div data-bbox="54 2457 331 2778">  </div>	<div data-bbox="430 1475 2024 2614"> </div> <div data-bbox="411 2689 2032 2778"> <p>Step 14: :Insert Part 20 into the swing booms as shown, and hang it on the swing beam with hanging spring (Part 19).</p> </div>
<div data-bbox="184 2864 239 2947"> <div>8</div> </div>	