

ITEM NO.SCBSD0808

NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6.Not for commercial use, only for residential use.




EXPLOSIVE VIEW

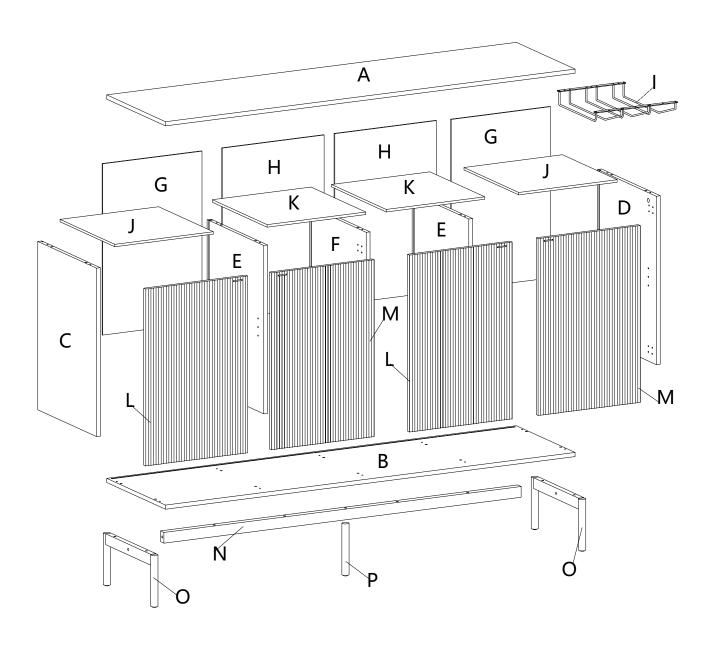



PARTS LIST

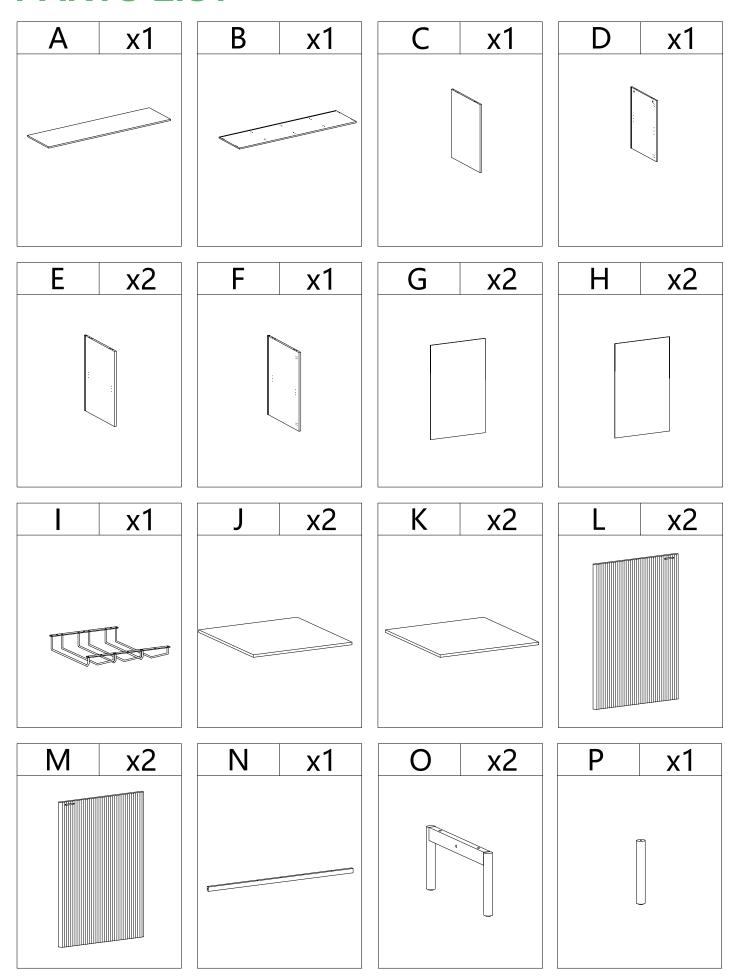

HARDWARE LIST

#1	x82	#2	x8	#3	x2	#4	x8	#5	x10
M3.5*14mm		М	6*50mm	*50mm M6				M7	*50mm
#6	x10	#7	x4	#8	x 1				
		& Managarana Anna Anna Anna Anna Anna Anna Anna		UTUTUT					
M6*35mm		М	4*35mm	M6*30mm					

HARDWARE SPARE LIST

#1	x8	#2	x1	#3	x1	#4	x1	#5	x 1	
		()—minimin		EDITION				<i></i>		
M:	3.5*14mm	М	6*50mm	М	6*40mm			M7	*50mm	
#6	x 1	#7	x 1	#8	x 1					
					uttettytä					
M	M6*35mm M4*35r		4*35mm	Me	6*30mm					


HARDWARE LIST

#9	x20	#10	x10	#11	x24	#12	x10	#13	x4
Ø8*30mm		Ø15*11mm				Ø20mm			
#14	x4	#15	x4	#16	x2	#17	x16	#18	x4
		O	DOUB						
#19	x4								


TOOL LIST


#20 x1	#21 x1
M4	

Insert wooden dowel #9 into the corresponding hole of top panel (A), screw bolt #6 into the corresponding hole of top panel (A), tighten bolt #6 with screwdriver #21.

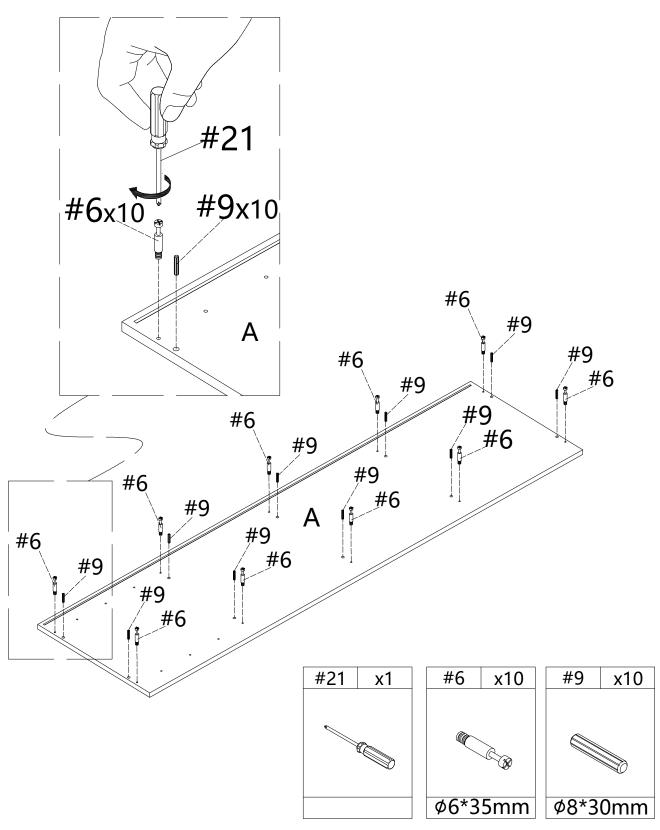


Use screw#1 to attach wine rack(I) to top panel (A),tighten screw#1 with screwdriver#21.

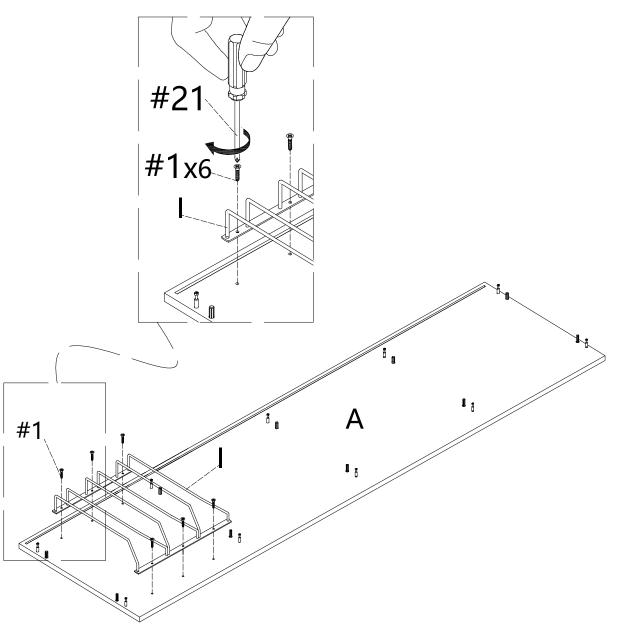

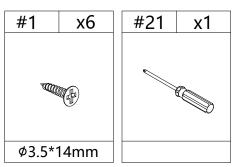

STEP-3


Insert panel (C)&(D)&(E)&(F) into top panel (A) as picture show, and then insert cam bolt #10 into the corresponding hole of panel (C)&(D)&(E)&(F), tighten cam bolt #10 with screwdriver #21, finally, stick paster #12 on the corresponding hole of panel

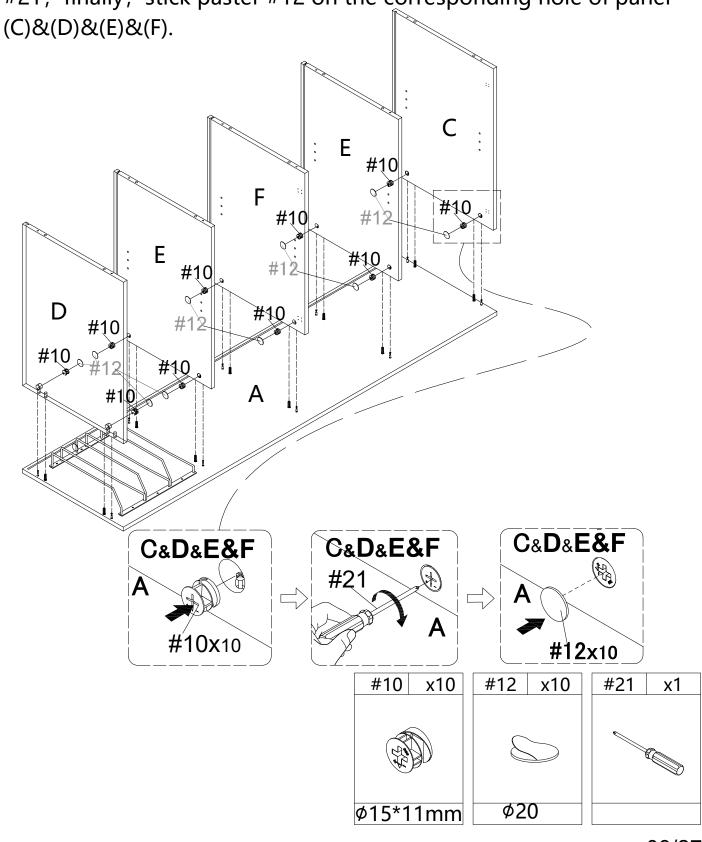


STEP-4

Carefully align and slide panel (H)&(G) into the groove along rear edge of pre-assemble unit at step 3,slide the panel (H)&(G) into the bottom, and then insert wooden dowel #9 into the corresponding hole

of panel (C)&(D)&(E)&(F).

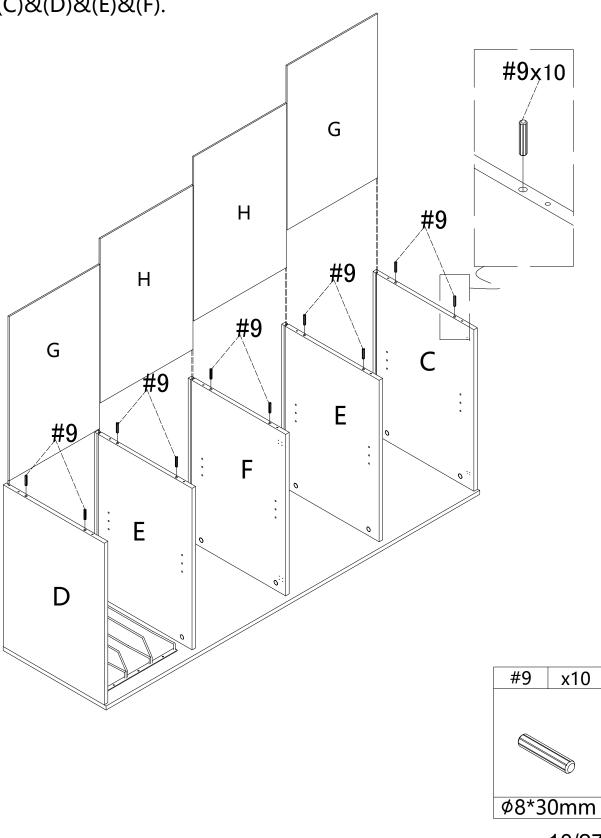


Use bolt #5 to attach bottom panel (B) to the corresponding hole of panel (C)&(D)&(E)&(F),tighten bolt #5with allen key #20.

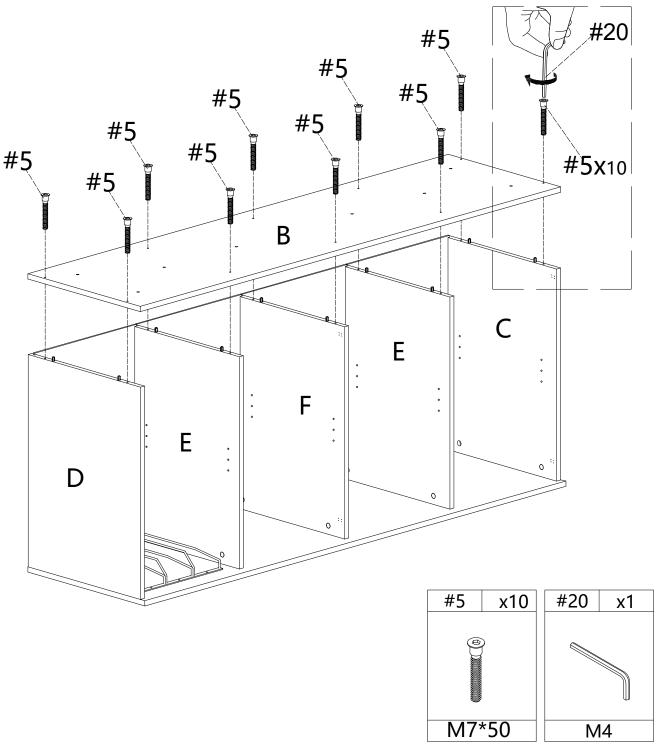


STEP-6


- 6.1 Screw bolt #8 into leg(P) as picture show,pay attention to the direction of bolt.
- 6.2 Screw preassemble leg(P) into part(N).
- 6.3 Use bolt #3 to attach leg(O) to part(N),and then use allen key#20 to tighten it.

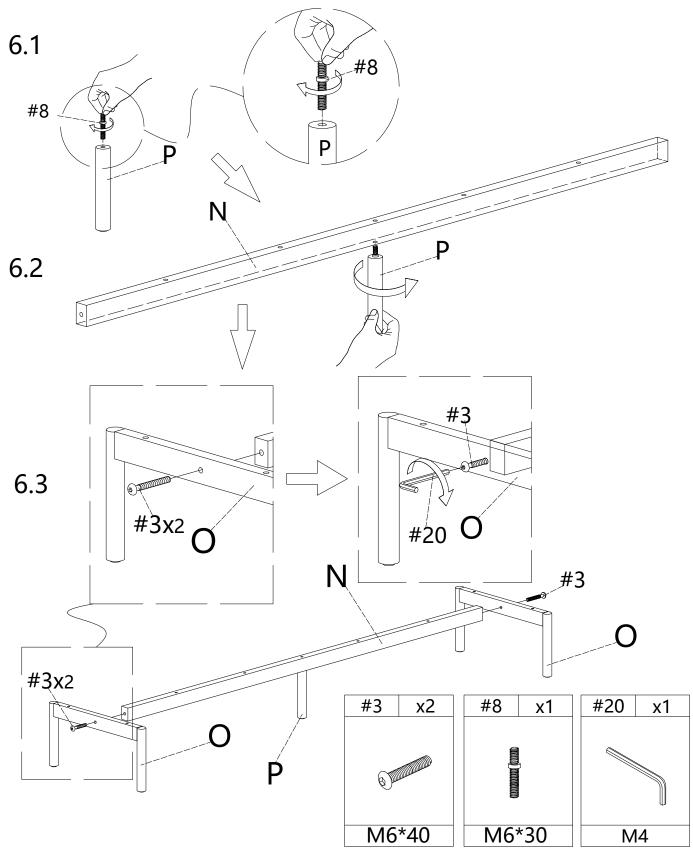


Use bolt #2 to attach preassemble leg (N)&(O) to the corresponding hole of bottom panel (B),tighten bolt #2 with allen key #20.

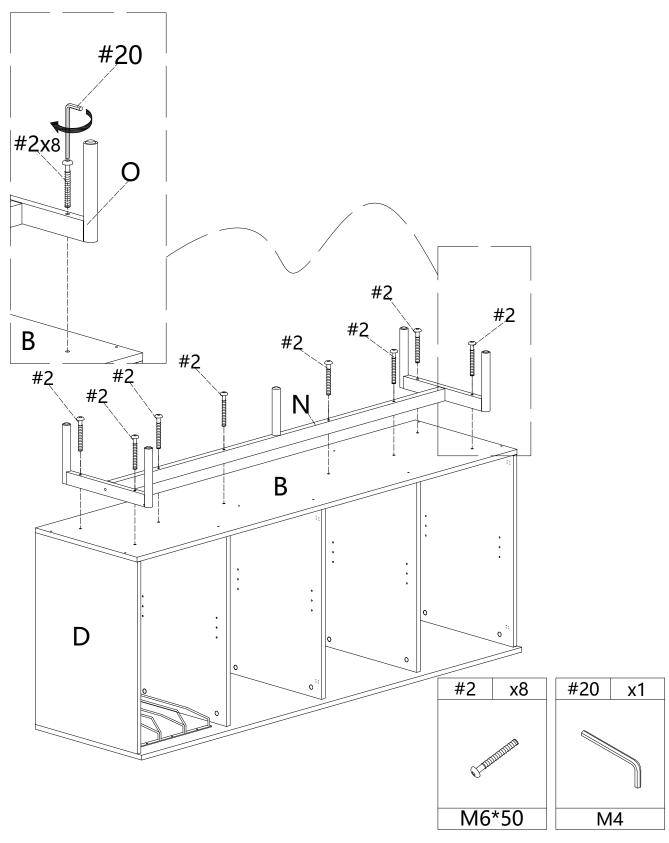


Use screw #1 to attach part #11 to panel (A)&(B)&(C)&(D)&(E)&(F),tighten screw #1with screwdriver #21.

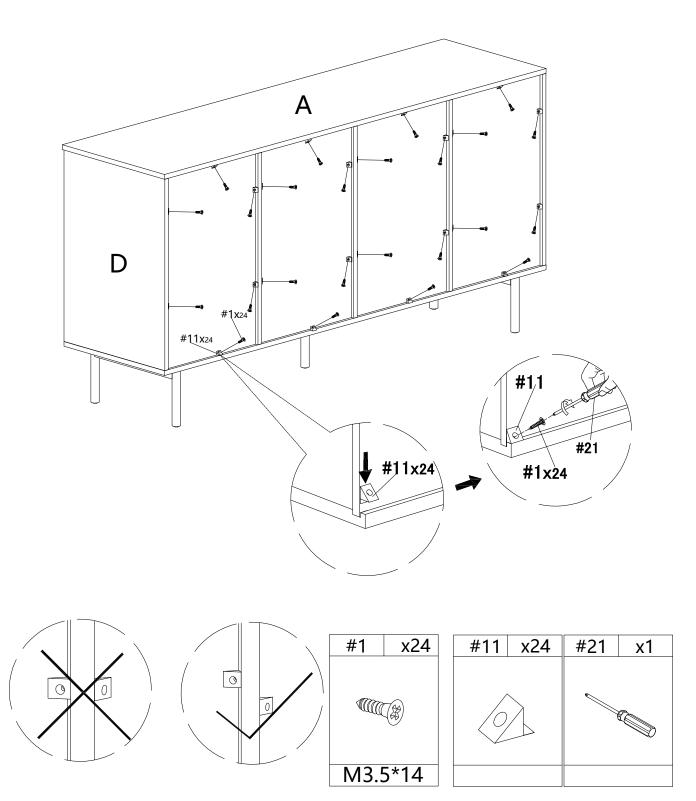


STEP-9

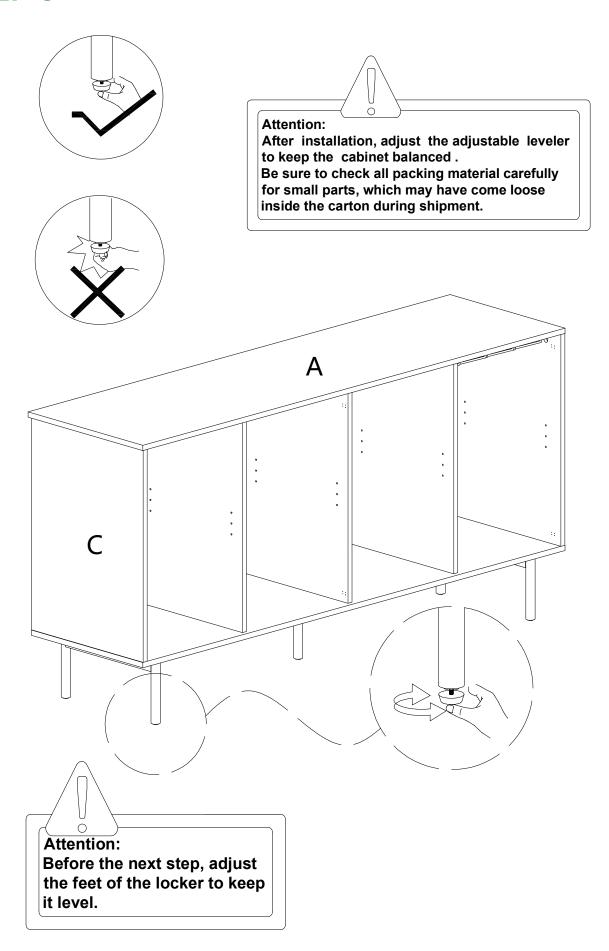


Insert shelf holder #17 into the corresponding hole of panel(C)&(D)&(E)&(F) and then attach adjustable shelf (J) &(K)to it.

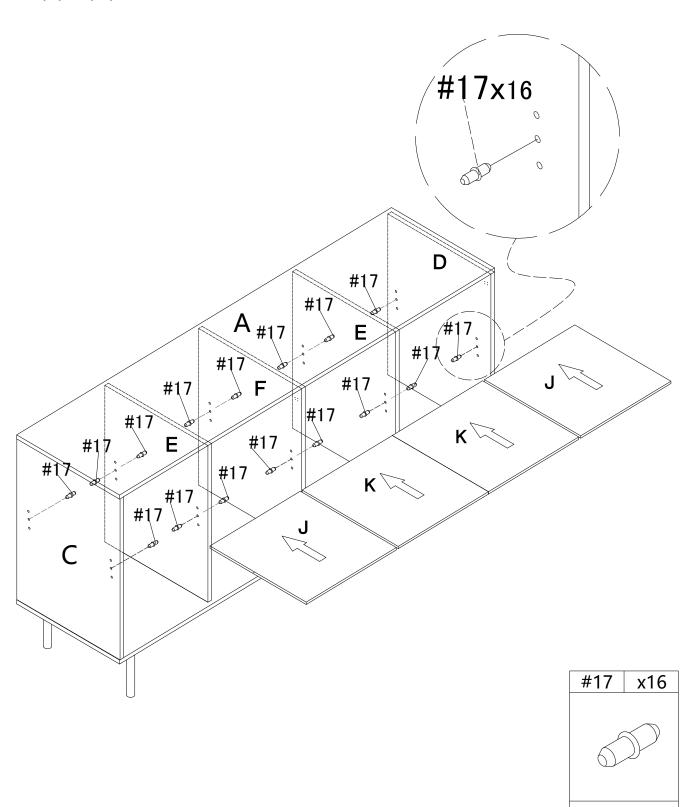


Use screw #1 to attach hinge #19 to door (L)&(M),tighten screw #1 with screwdriver #21.

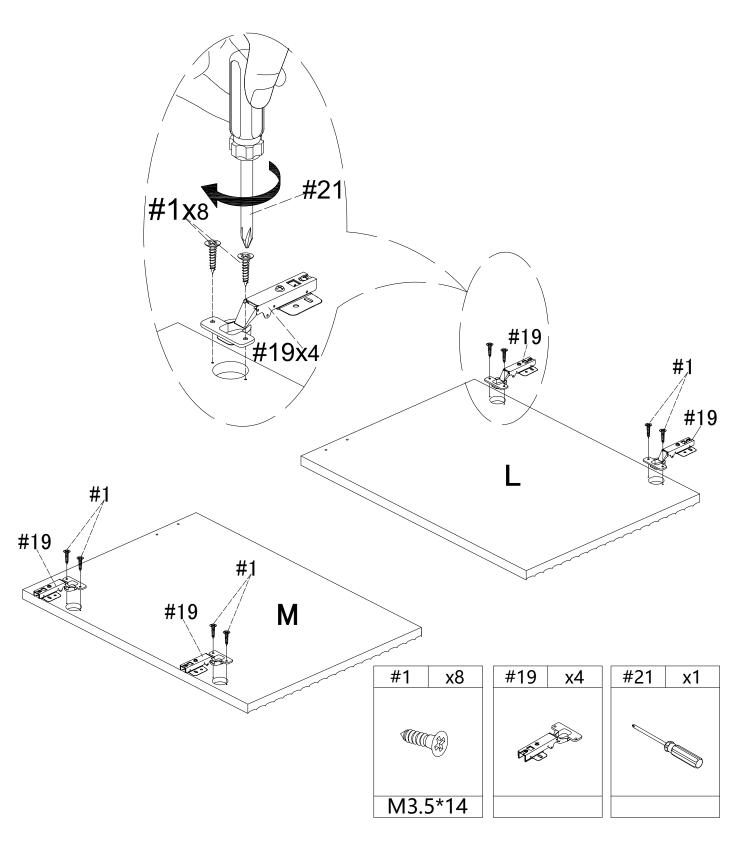


Insert part #13 into the corresponding position of door (L)&(M),and then use screw #4 to attach part #13 to door (L)&(M),make sure all holes aligned and tighten screw #4 with screwdriver #21.

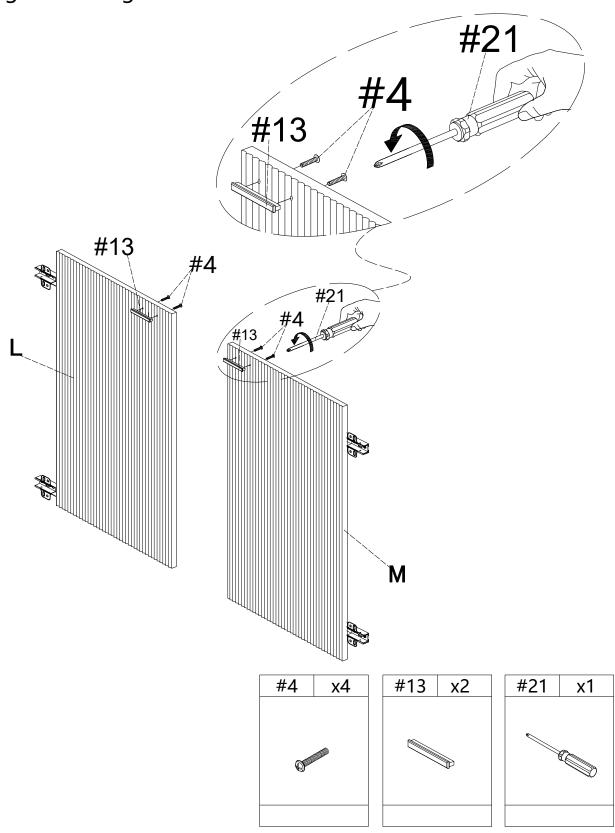


Use screw #1 to attach preassemble door(M)&(L) to panel (D)&(C),tighten screw #1 with screwdriver #21.

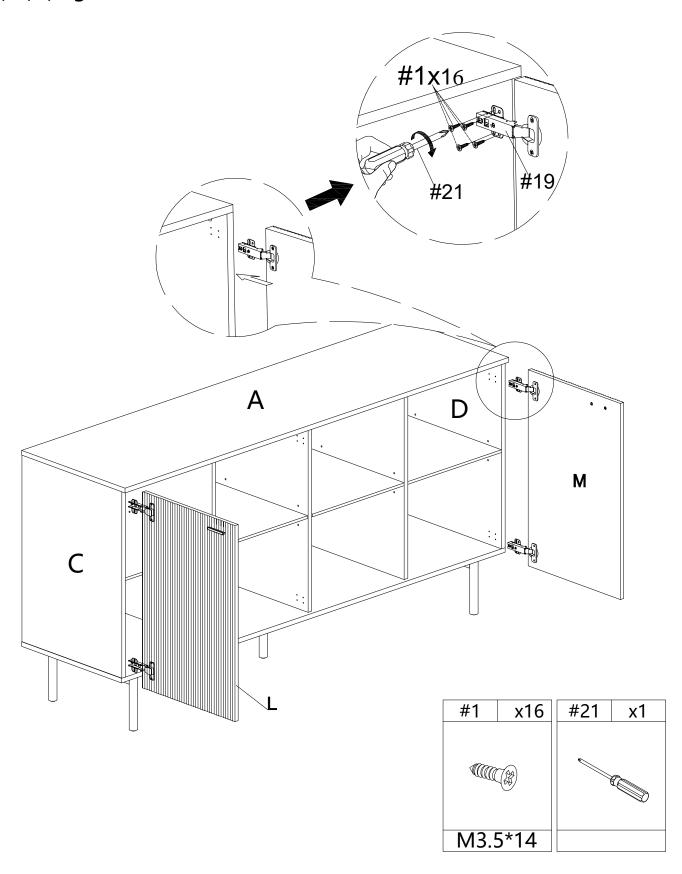


Use screw #1 to attach hinge #18 to door (L)&(M),tighten screw #1 with screwdriver #21.

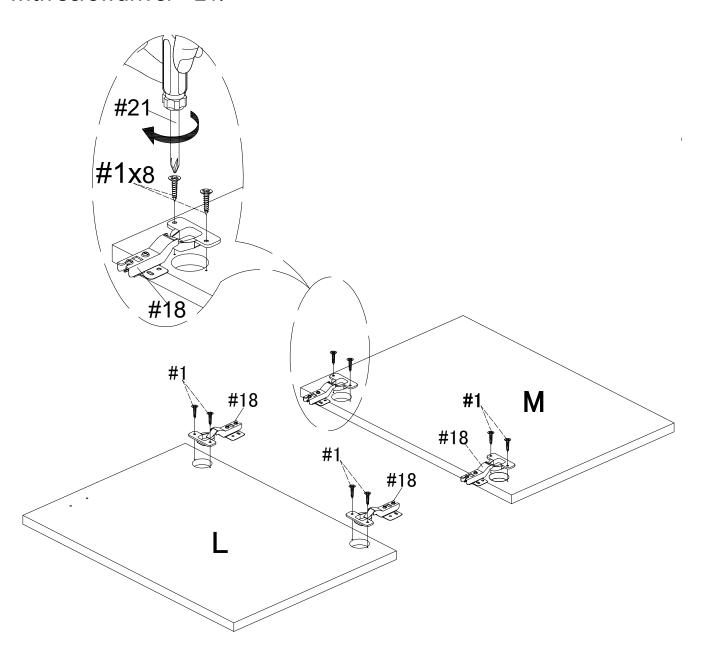

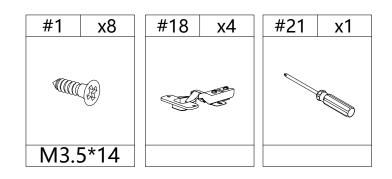


Insert part #13 into the corresponding position of door (L)&(M),and then use screw #4 to attach part #13 to door (L)&(M),make sure all holes aligned and tighten screw #4 with screwdriver #21.

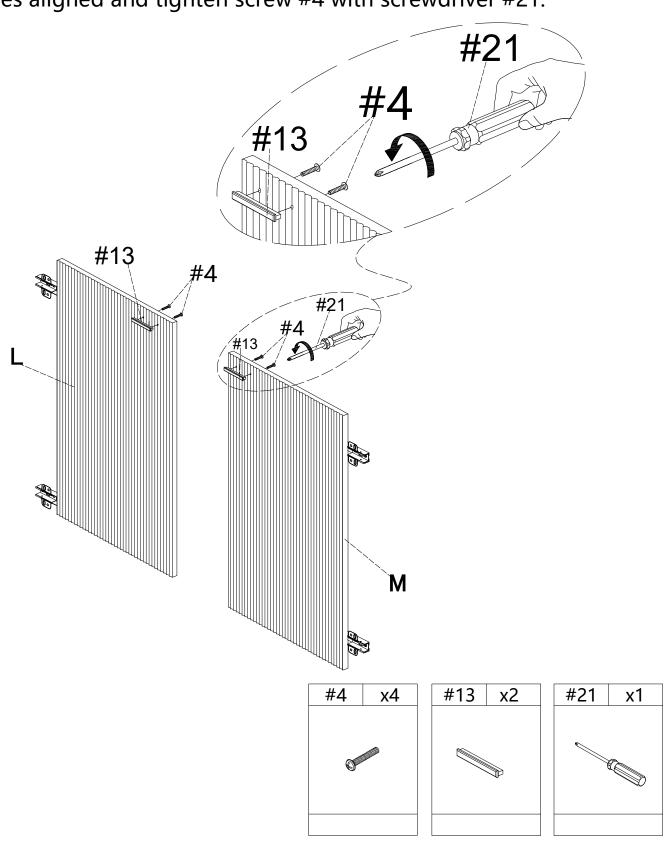


STEP-16

Use screw #1 to attach preassemble door(M) to panel (F), tighten screw #1 with screwdriver #21.

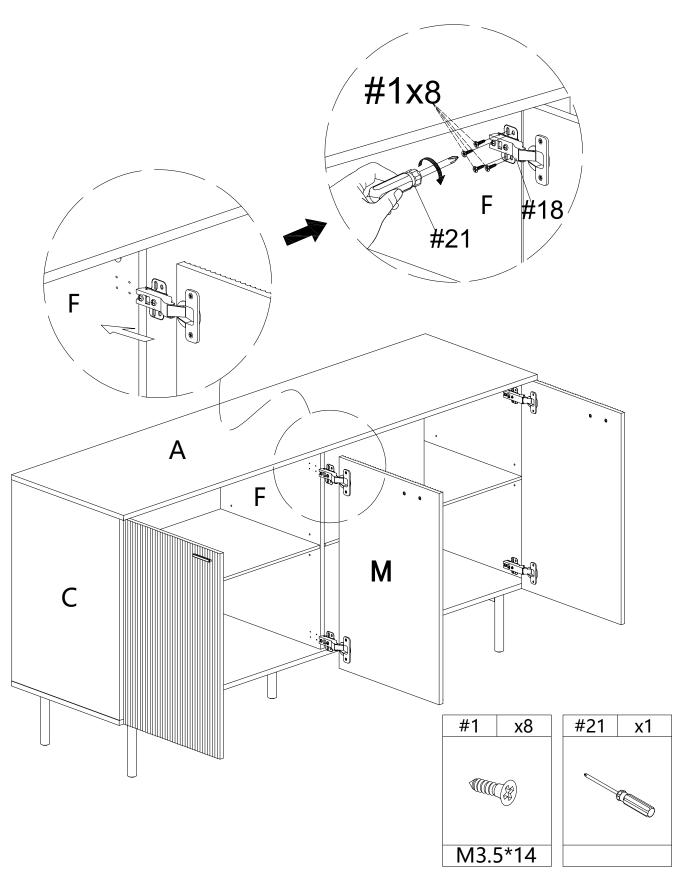


STEP-17

Use screw #1 to attach preassemble door(L) to panel (F), tighten screw #1 with screwdriver #21.

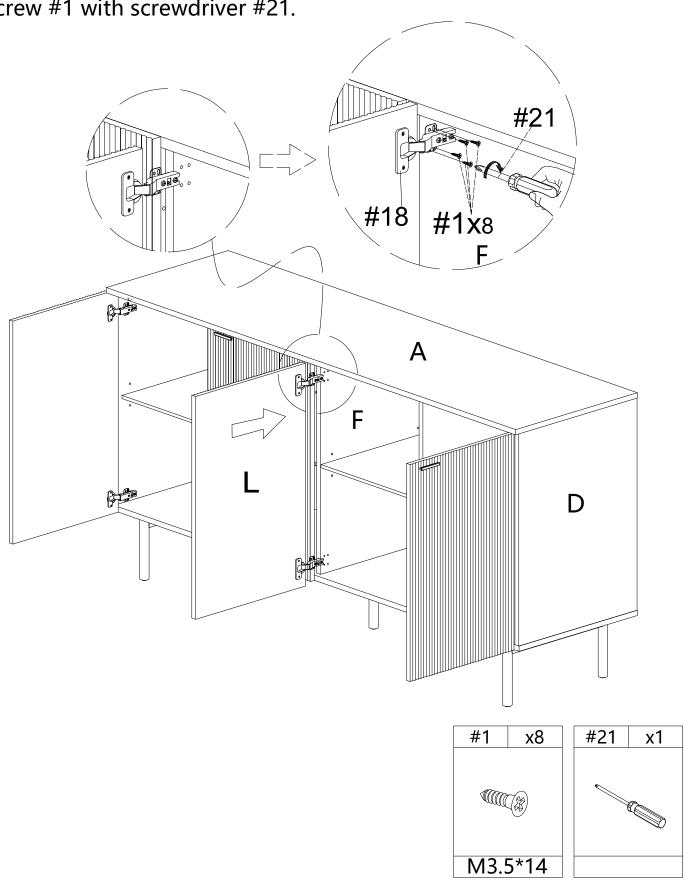


STEP-18

Use screw #1 to attach plastic bracket #14 to panel (C)&(D),tighten screw #1 with screwdriver #21.

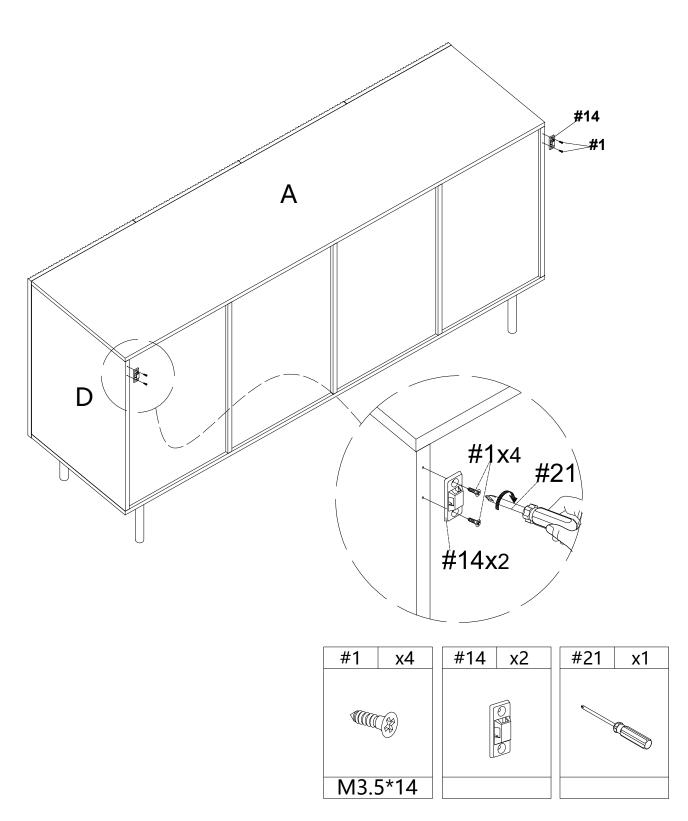


STEP-19

- 1. Mark the position on the wall, that corresponds to the location of bracket #14 on the side panel (C)&(D); Drill and insert the expandable screw #15 by hammer.
- 2. Assemble the bracket #14 to the wall. Align the hole in the bracket #14 with the expandable screw #15, use screw #7 to attach it, tighten screw #7 with screwdriver #21.

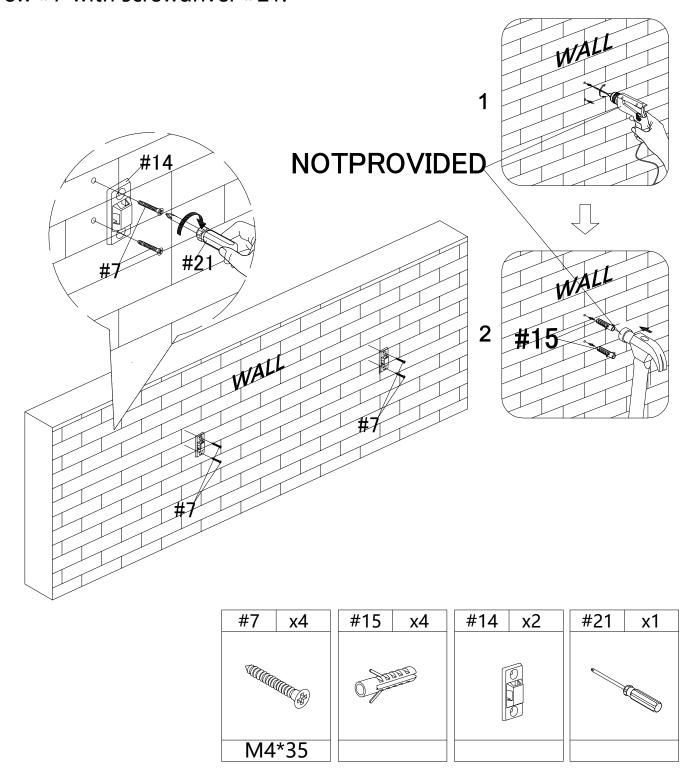

3. Let the plastic belt #16 pass through bracket #14 and pull tightly.

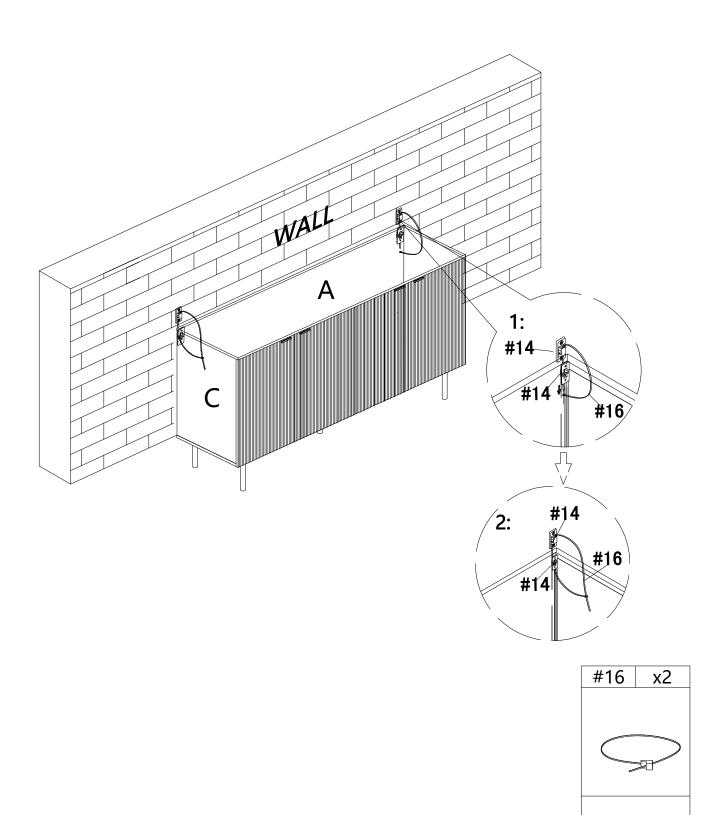

WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!