



ASSEMBLY INSTRUCTIONS CONSOLE

PARTS | Check that you've received all parts listed below.

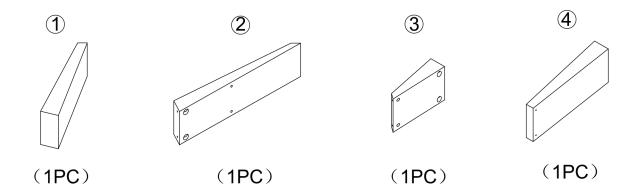

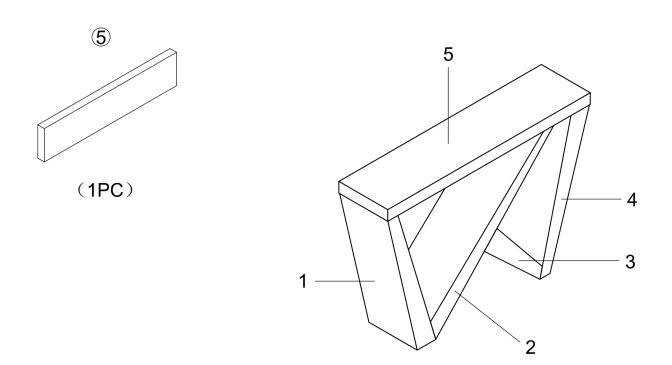

HARDWARE

Check that you've received all parts listed below.





(4PCS)





(4PCS)





(8PCS)



(2PCS)

 \bigcirc

0

(6PCS)

 \bigcirc



(4PCS)

 \bigcirc

(4PCS)

 \bigoplus

4

(4PCS)

(6PCS)

(J)



(6PCS)

 \mathbb{K}

(E)

(1PC)

(L)

00

(2PC)

 \bigcirc

(1PC)

 \bigcirc

(1PC)

0

(1PC)

P

(1PC)


 \bigcirc

passass-

(2PC)


Remove protective materials and set parts on a flat, non-abrasive surface. Identify all parts packed in the carton against the parts list. Do not attempt to assemble the table if any parts are missing or damaged.

- A. Tighten screws G into leg 1. Insert dowel into leg 1.
- B. Insert leg 1 screws into corresponding holes of leg 2.
- C. Insert half circle of lock F into leg 2, then washer E, then nut F. Tighten nut F with wrench P.

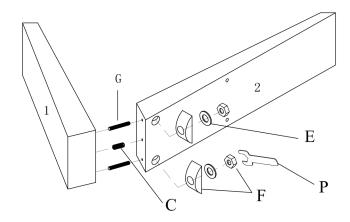


STEP 2

- A. Tighten screws G into leg panel 2. Insert dowel into leg 2.
- B. Insert leg 2 screws into corresponding holes of leg 3.
- C. Insert half circle of lock F into leg 2, then washer E, then nut F. Tighten nut F with wrench P

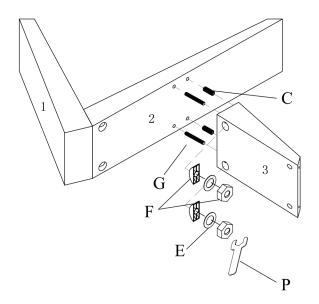


- A. Insert dowel into leg 3.
- B. Insert bolt D thru washer E and thru leg 3 to tighten into leg 4.
- C. Cover screws holes with caps J.

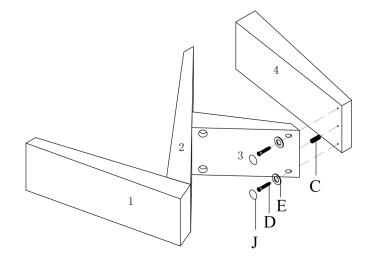


STEP 4

- A. Tighten screws A into four corners of top panel 5. Insert wood dowels C into top panel 5.
- B. Insert screws of top 5 into corresponding holes of legs 1, 2, and 4.
- C. Insert camlocks B into legs 1 and 4. Turn camlocks B clockwise to lock. Cover screws with caps I.
- D. Insert screws Q thru leg 2 and tighten into top 5. Cover screws with caps I.

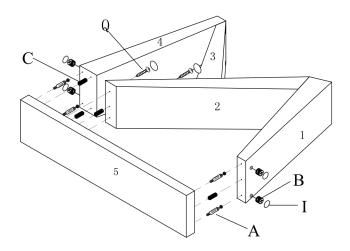


A. Push foot pads H into legs 1 and 4, or tap in lightly with a soft mallet.

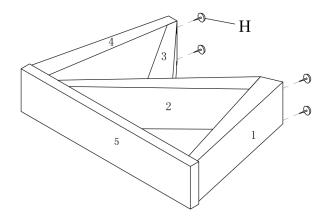


STEP 6

A. Cover screw holes on legs 2 and 3 with caps J.

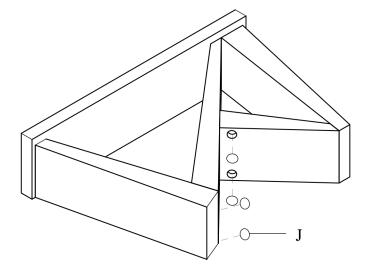


- A. Find a spot on a wall 1" below the top of the item.
- B. Using a drill bit slightly thinner than anchor N, drill a hole into the drywall.

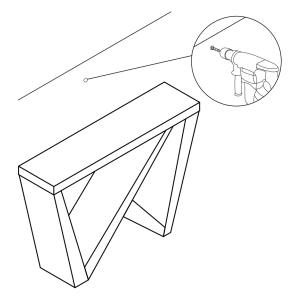


STEP 8

- A. Use a light hammer to tap anchor N into the hole.
- B. Anchor N should fit snugly. If the hole is too small, drill again to increase the hole size on the wall. Do not force anchor N into the wall.

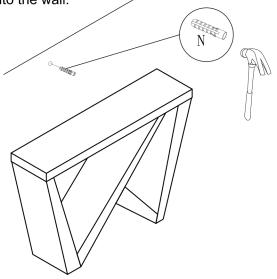


STEP 9

- A. Insert drywall screw M into bracket L, then into anchor N and tighten.
- B. Insert screw K into bracket L then tighten to back of top panel 5.

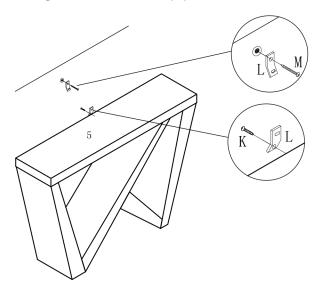

STEP 10

- A. Insert the end of strap O through bracket L attached to the wall, then through bracket L attached to the item and back through the head of strap O.
- B. Pull lightly on strap O until the strap stops. Your console is now ready to use.

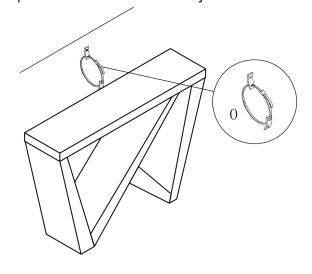

Need some help?



We recommend the following care for the best results:

- - Avoid dragging along floors. Always lift when moving
- - Clean spills immediately by blotting with a clean sponge or towel
- - Dust or wipe with a soft, dry cloth.
- - Avoid harsh chemicals or excessive moisture.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.