



ASSEMBLY INSTRUCTIONS













YDMY-V1






FTLFCT-6013
FTLFCT-6014

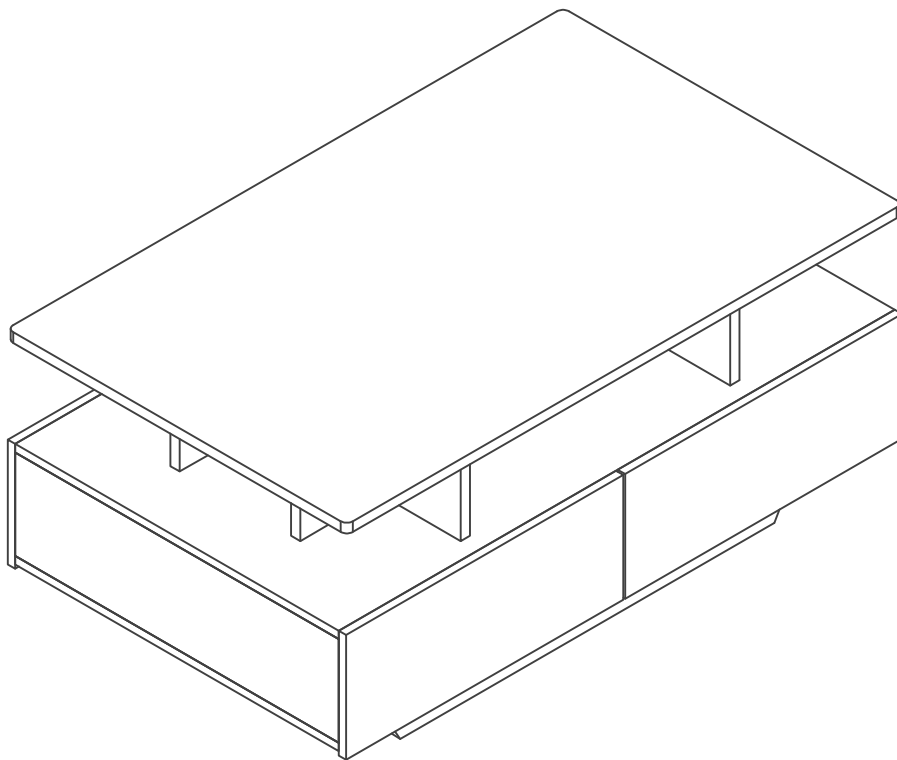


COFFEE TABLE

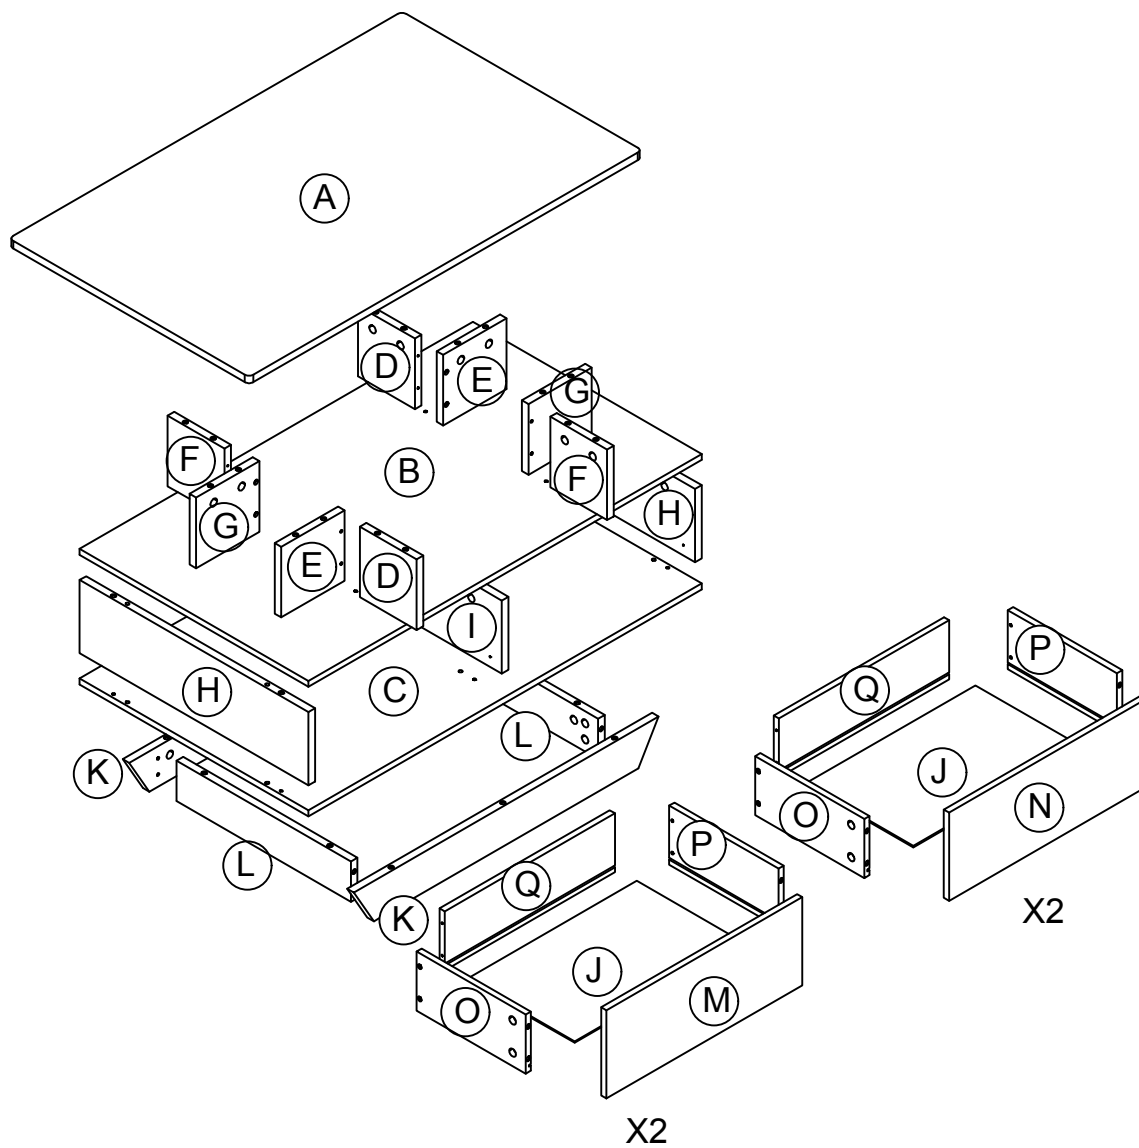

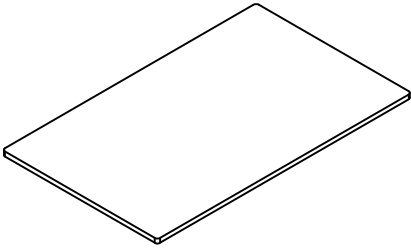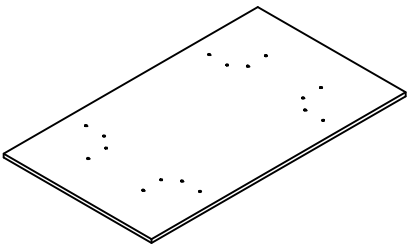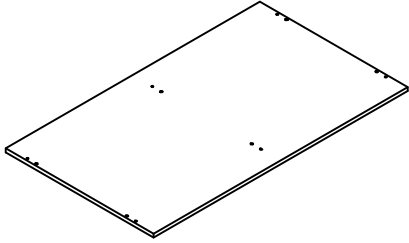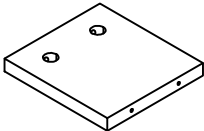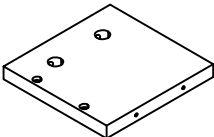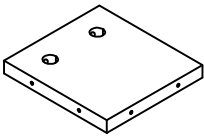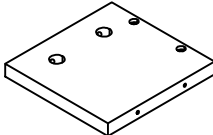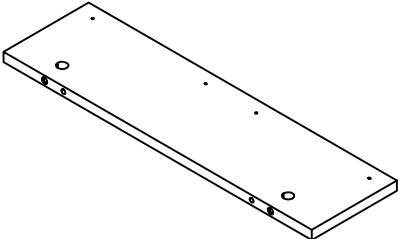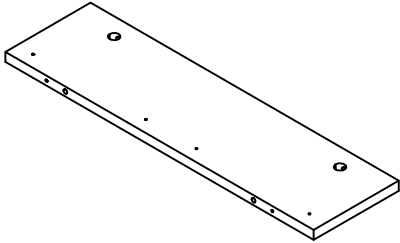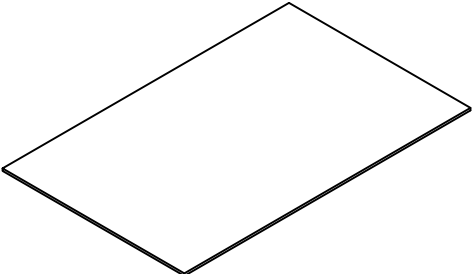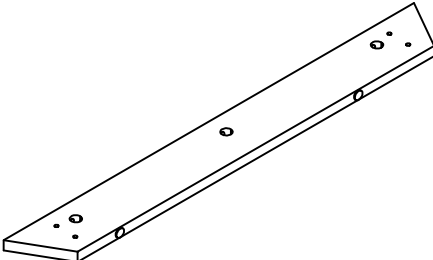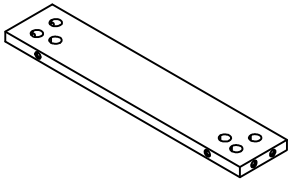
<div>A</div> <div>x1</div> 	<div>B</div> <div>x1</div> 	<div>C</div> <div>x1</div> 
<div>D</div> <div>x2</div> 	<div>E</div> <div>x2</div> 	<div>F</div> <div>x2</div> 
<div>G</div> <div>x2</div> 	<div>H</div> <div>x2</div> 	<div>I</div> <div>x1</div> 
<div>J</div> <div>x4</div> 	<div>K</div> <div>x2</div> 	<div>L</div> <div>x2</div> 

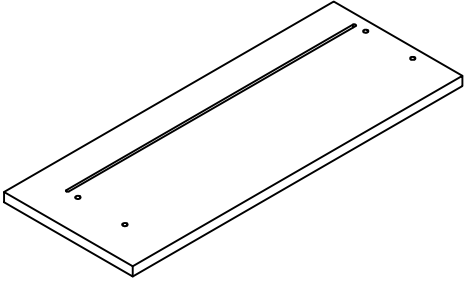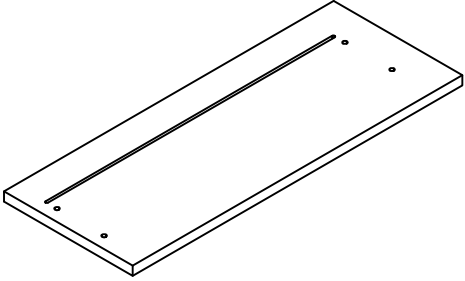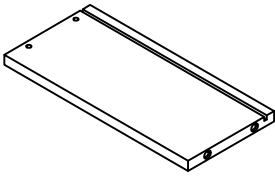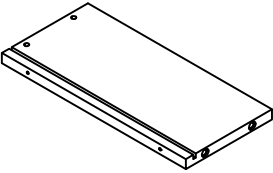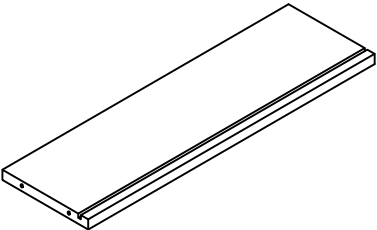



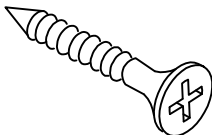
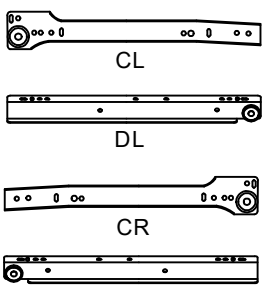

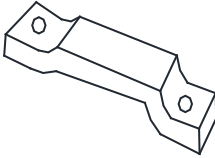

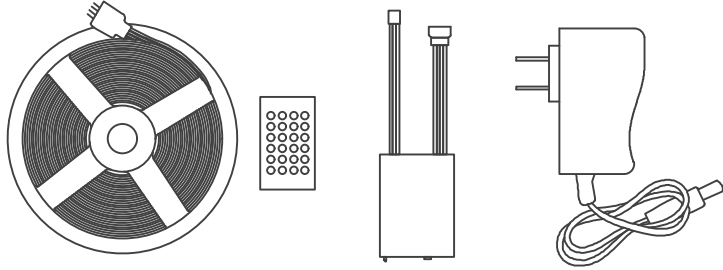
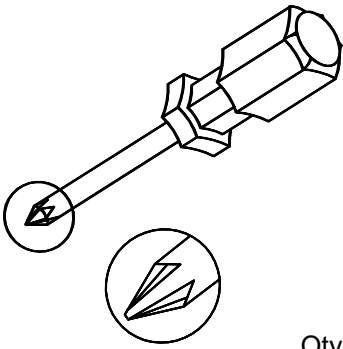
<p>M x2</p> 	<p>N x2</p> 	<p>O x4</p> 
<p>P x4</p> 	<p>Q x4</p> 	

Make sure the pins are installed correctly as shown with the "check mark" below

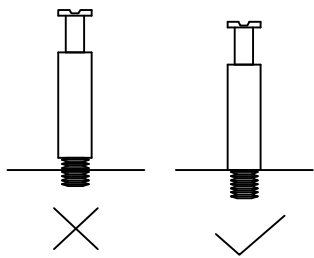


Below shows how the pins are used to assemble the panels together.

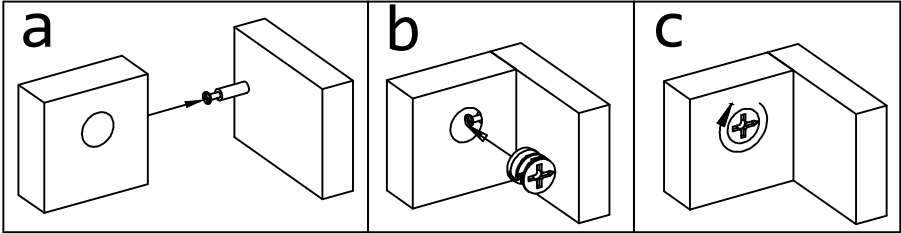


<div>1</div>  <div>Qty:56</div>	<div>2</div>  <div>Qty:56</div>	<div>3</div>  <div>Qty:12</div>
<div>4</div>  <div>Qty:32</div>	<div>5</div>  <div>Qty:46</div>	<div>6</div>  <div>Qty:4</div>
<div>7</div>  <div>Qty:16</div>	<div>8</div>  <div>Qty:4</div>	<div>9</div>  <div>Qty:8</div>
		 <div>Qty:1</div>
<div>-4-</div>		


1

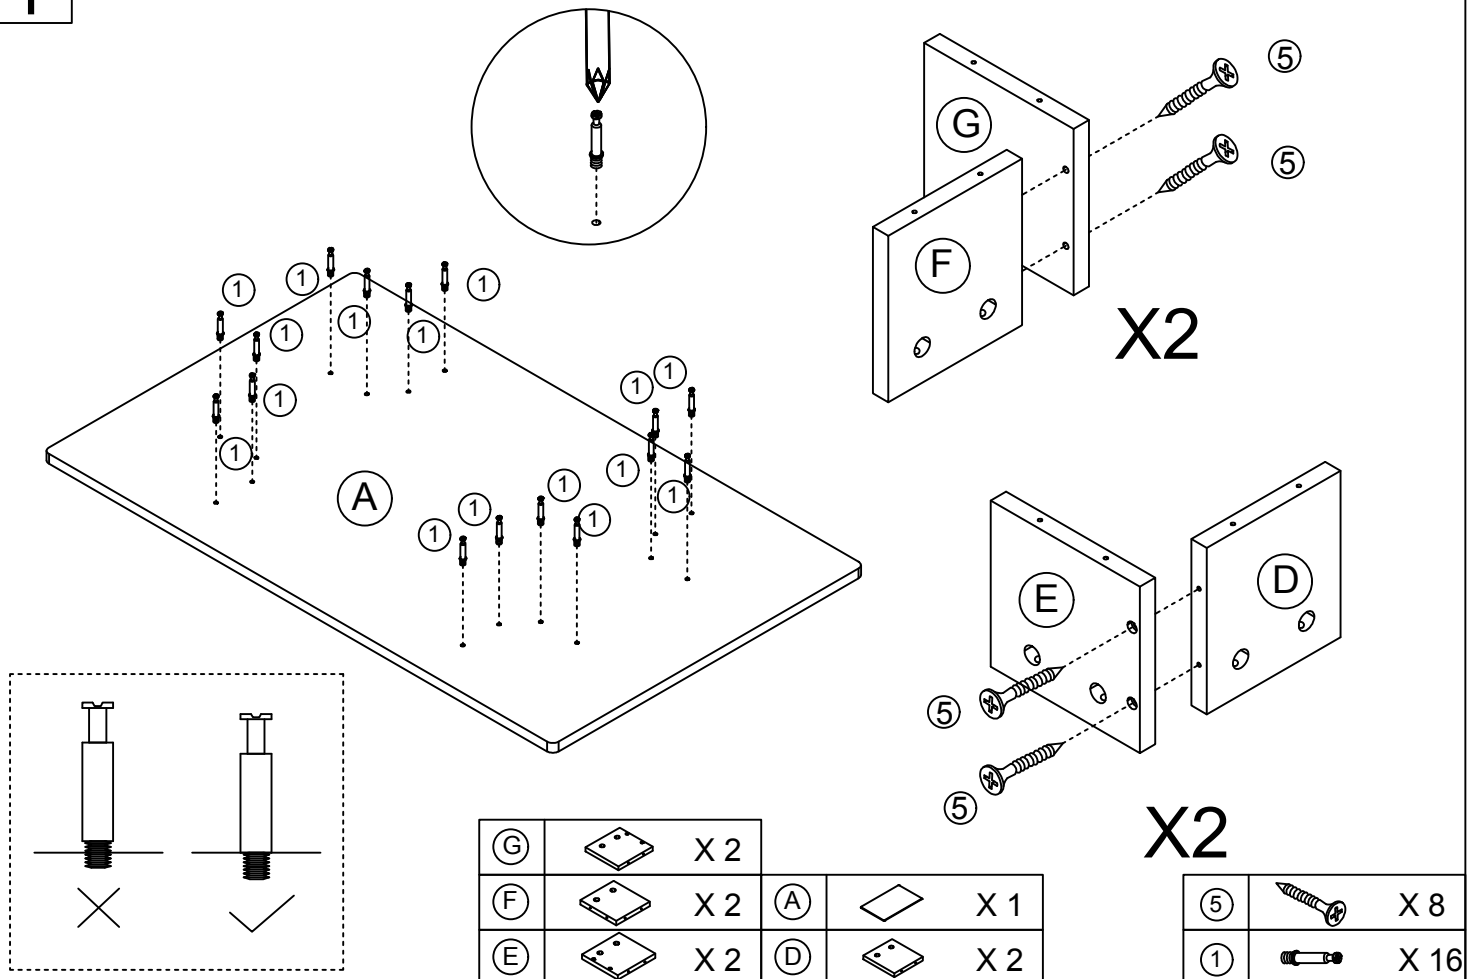

2

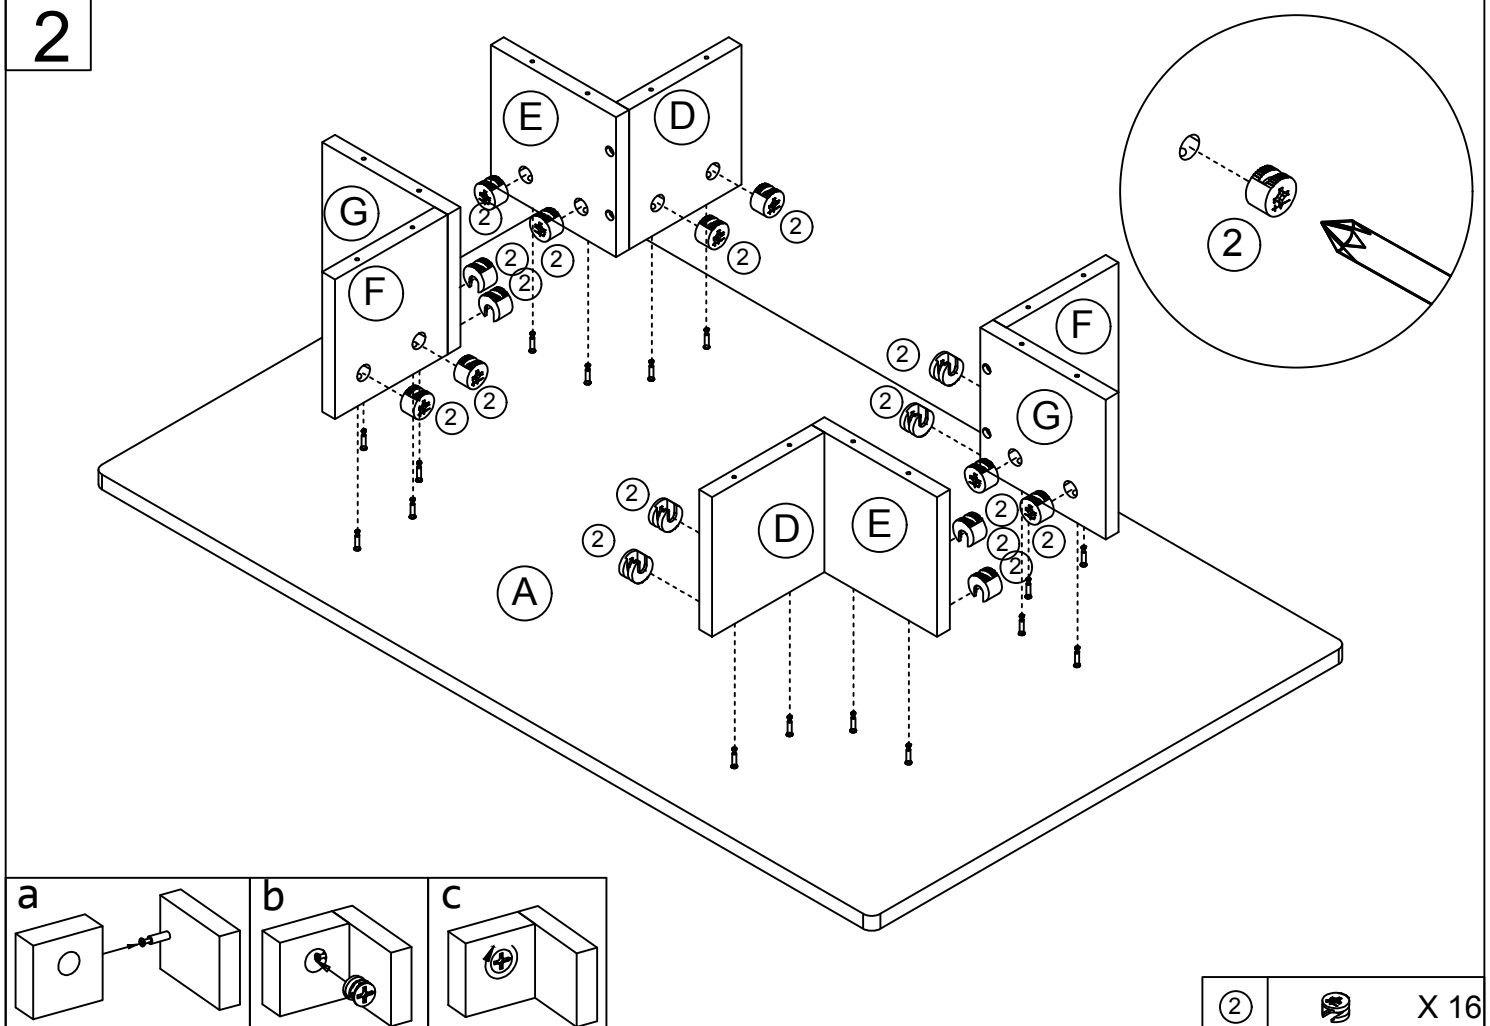


3

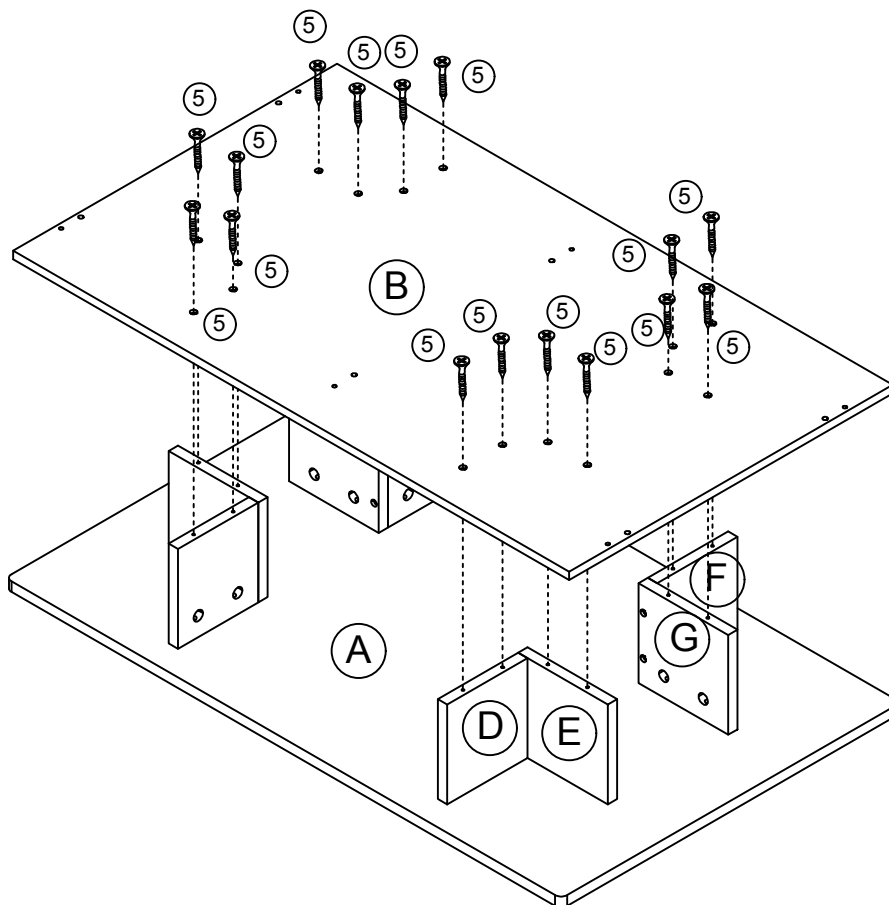

(B) X 1



(5) X 16

4

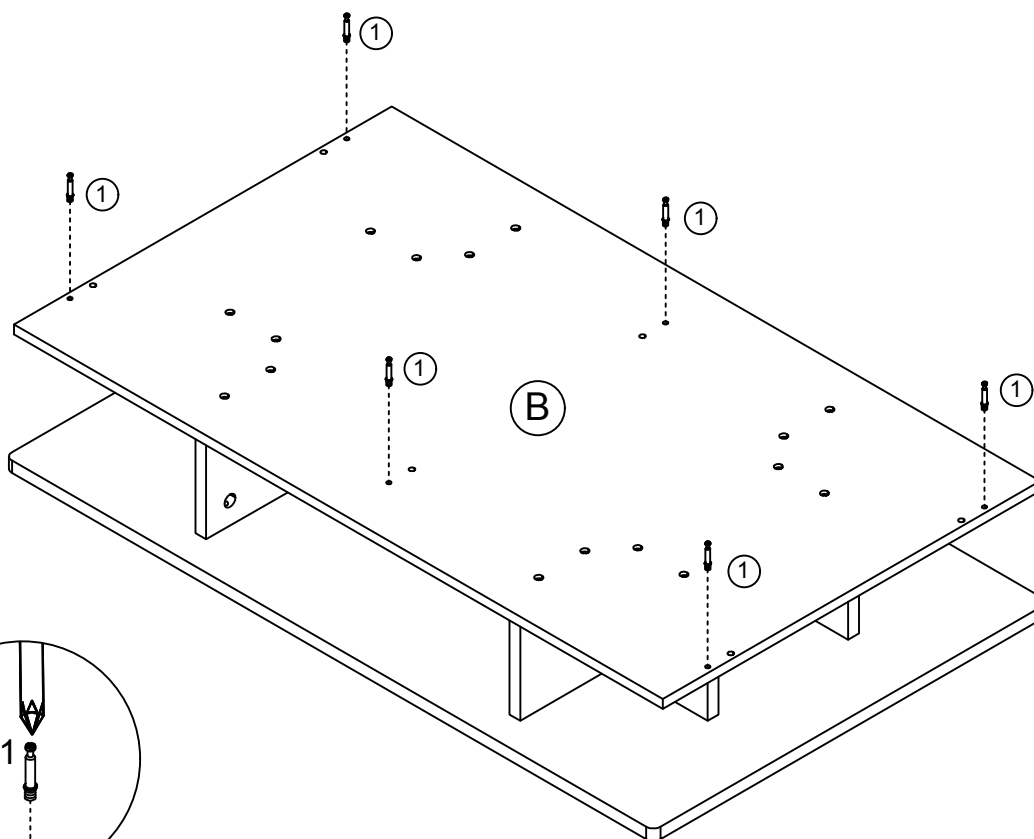

(1) X 6



5

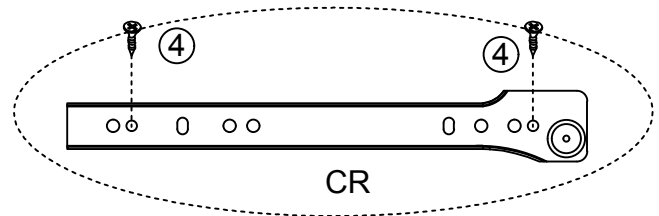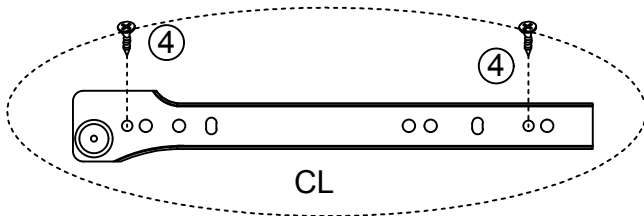

CL




CR

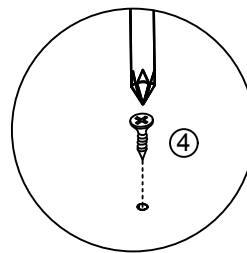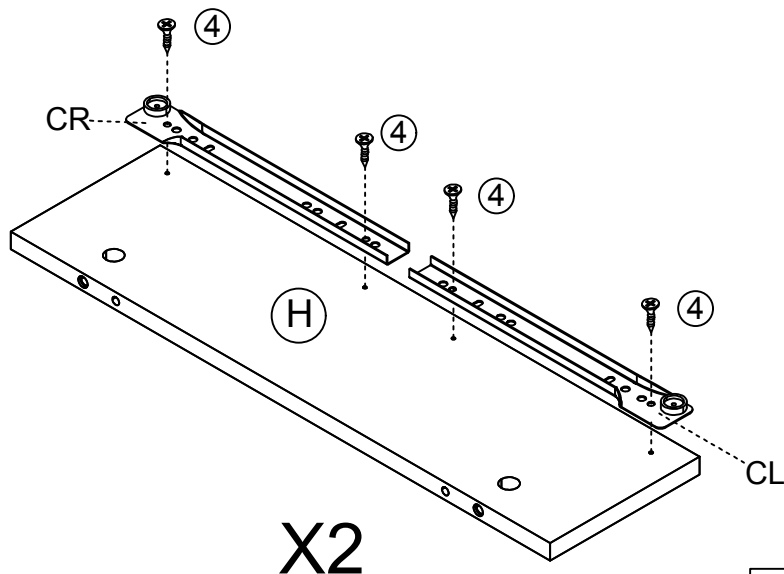Screws and rails should be driven down straight.
Any deviation may result in uneven drawer installation.





X2



CR		X 2
CL		X 2
(4)		X 8


6

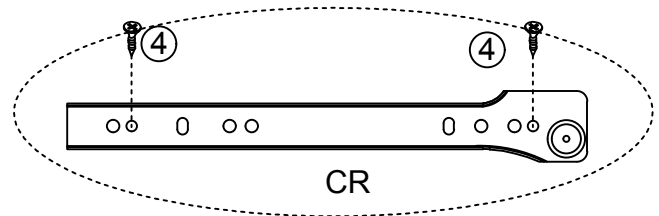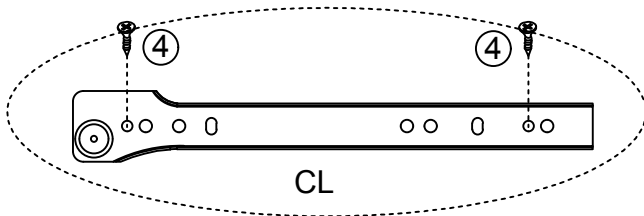




CL


CR

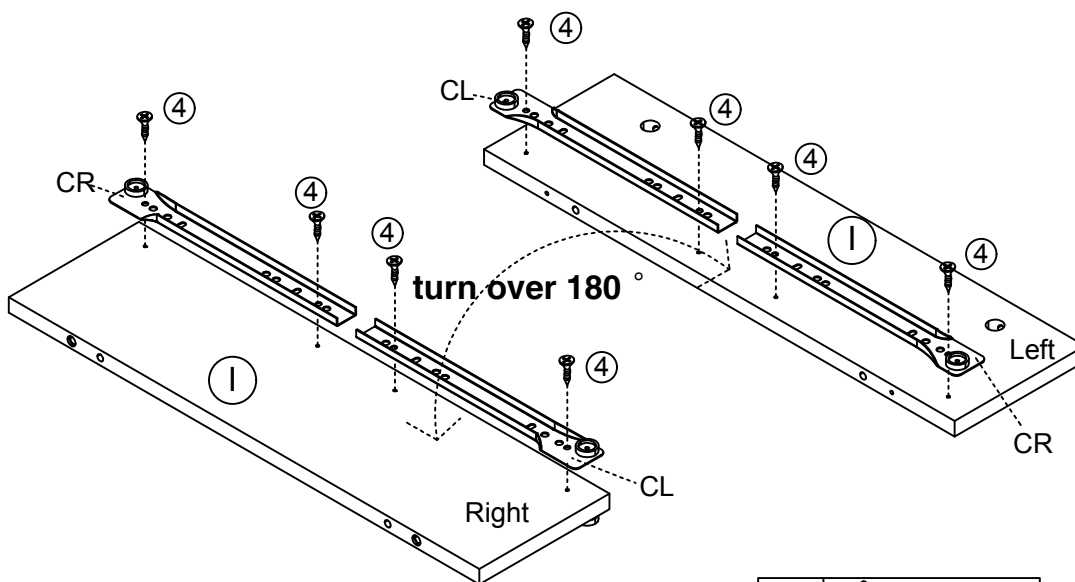Screws and rails should be driven down straight.
Any deviation may result in uneven drawer installation.




CR		X 2
CL		X 2
(4)		X 8

7

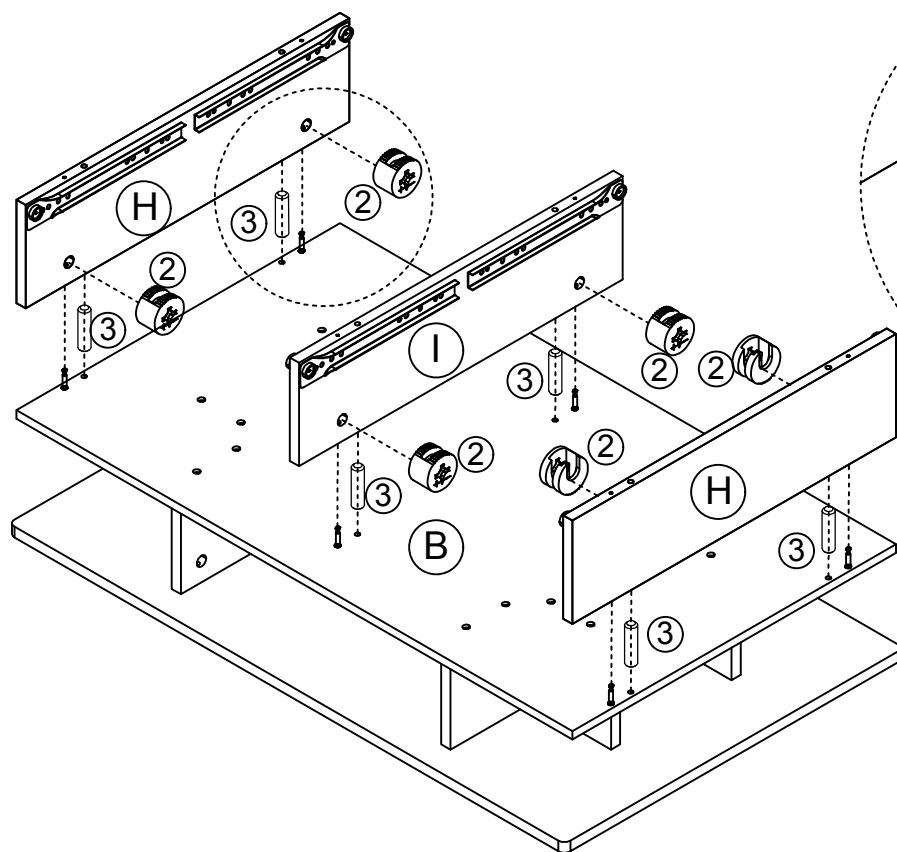

②		X 6
③		X 6


8

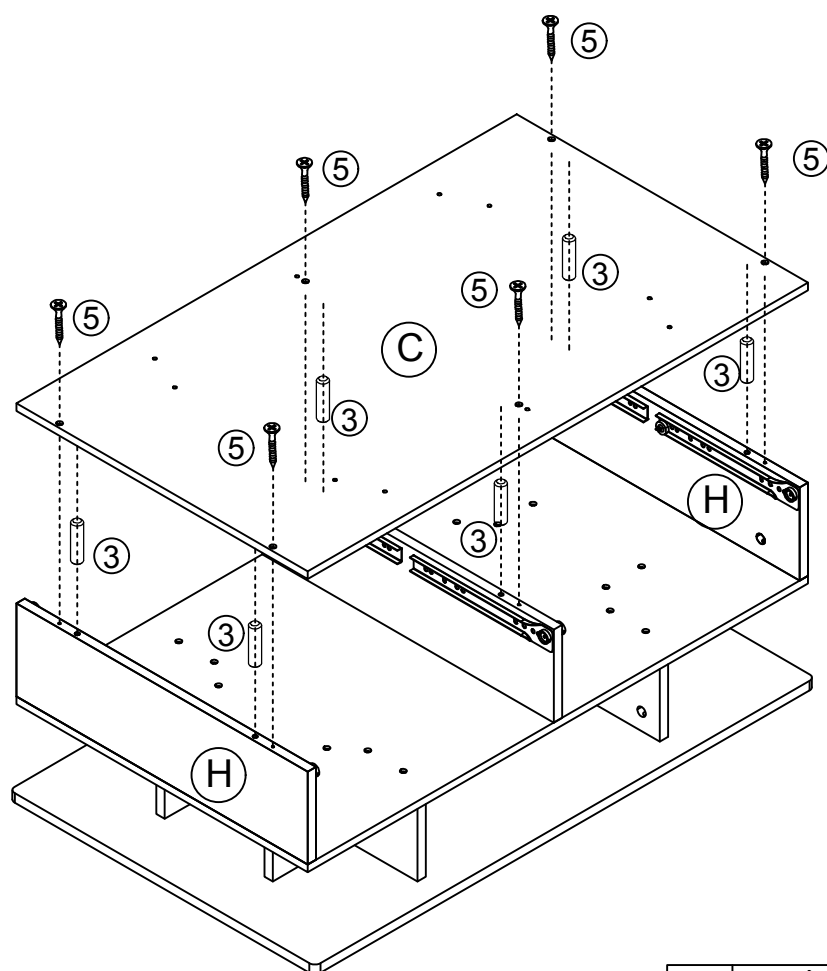

③		X 6
⑤		X 6

③		X 6
⑤		X 6


9

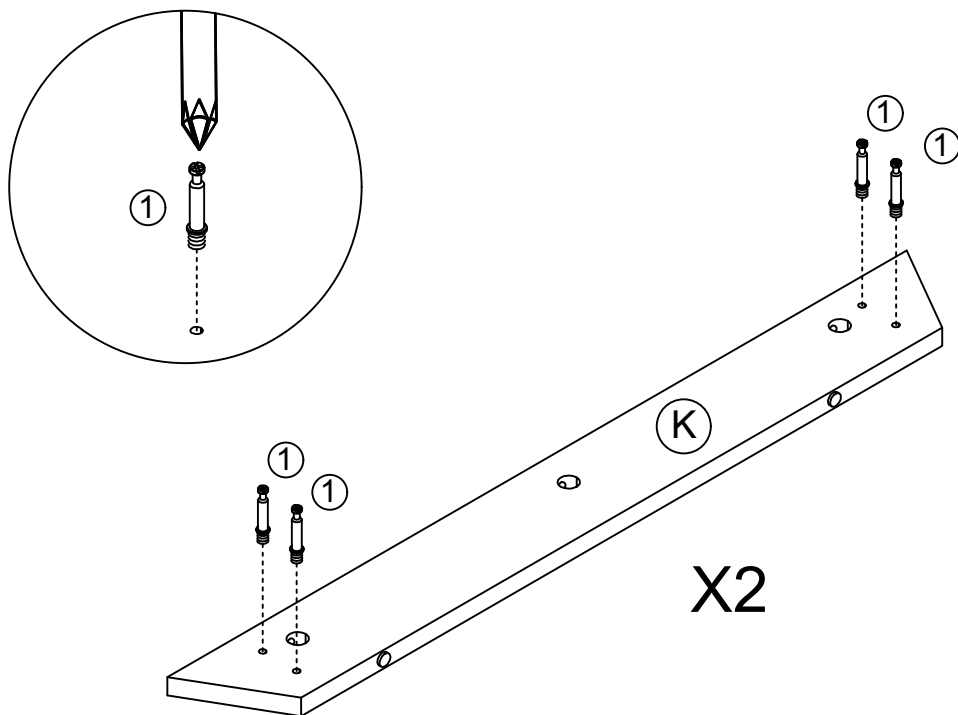

(K) X 2

(1) X 8


10

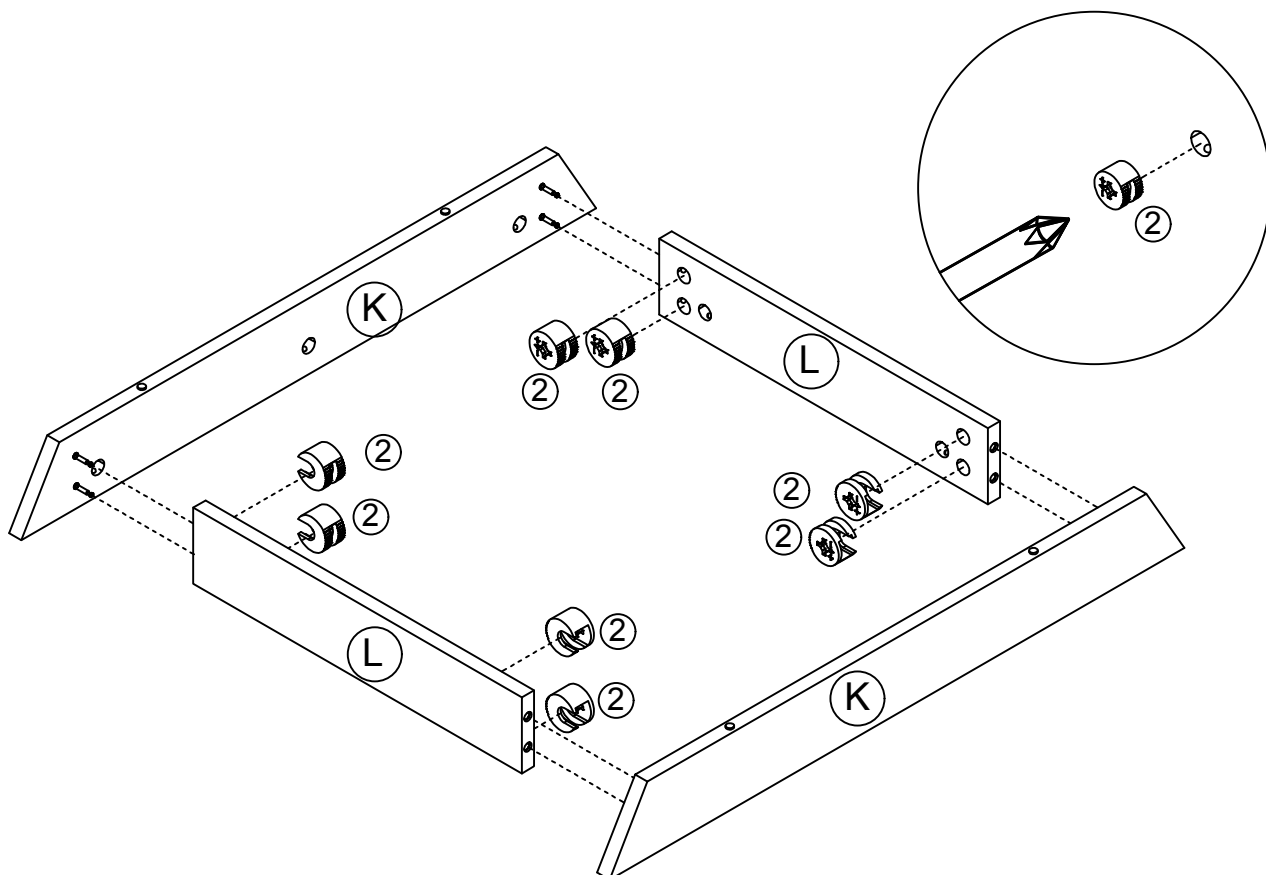

(L) X 2

(2) X 8

11

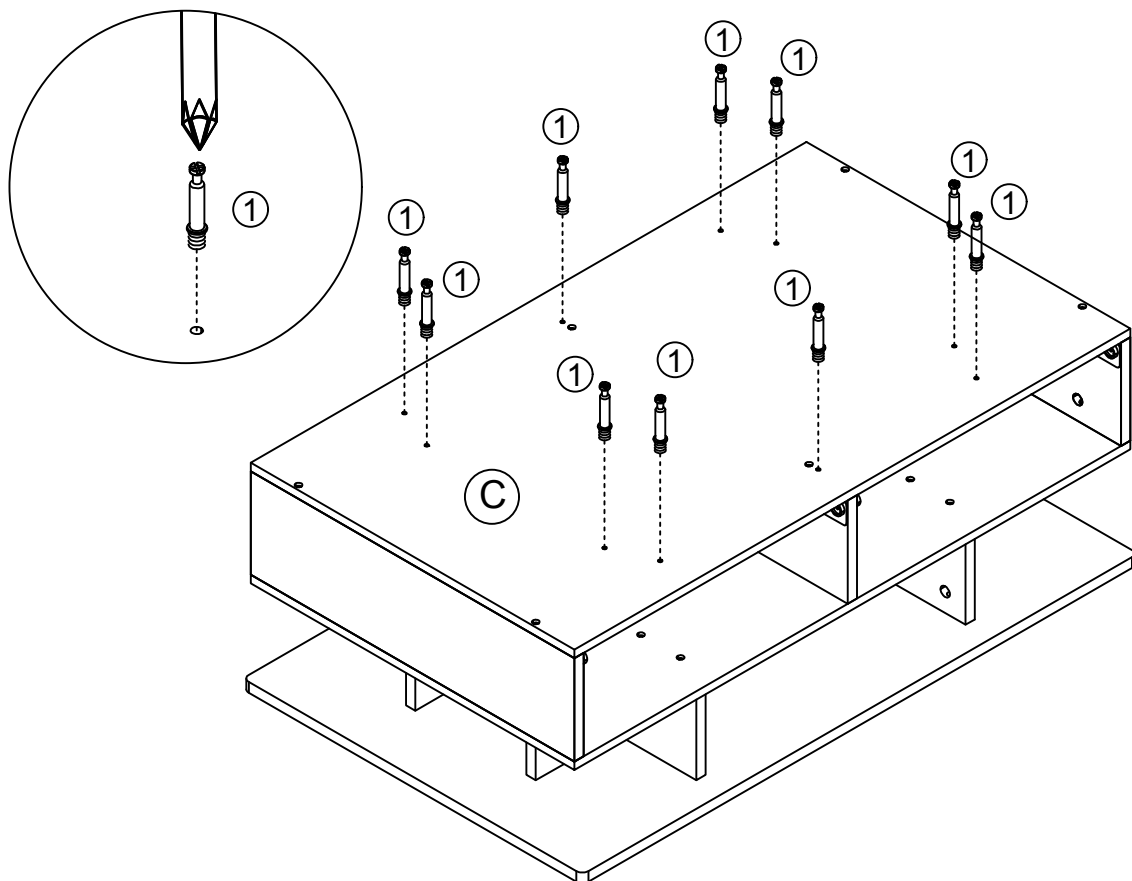


①



X 10

12

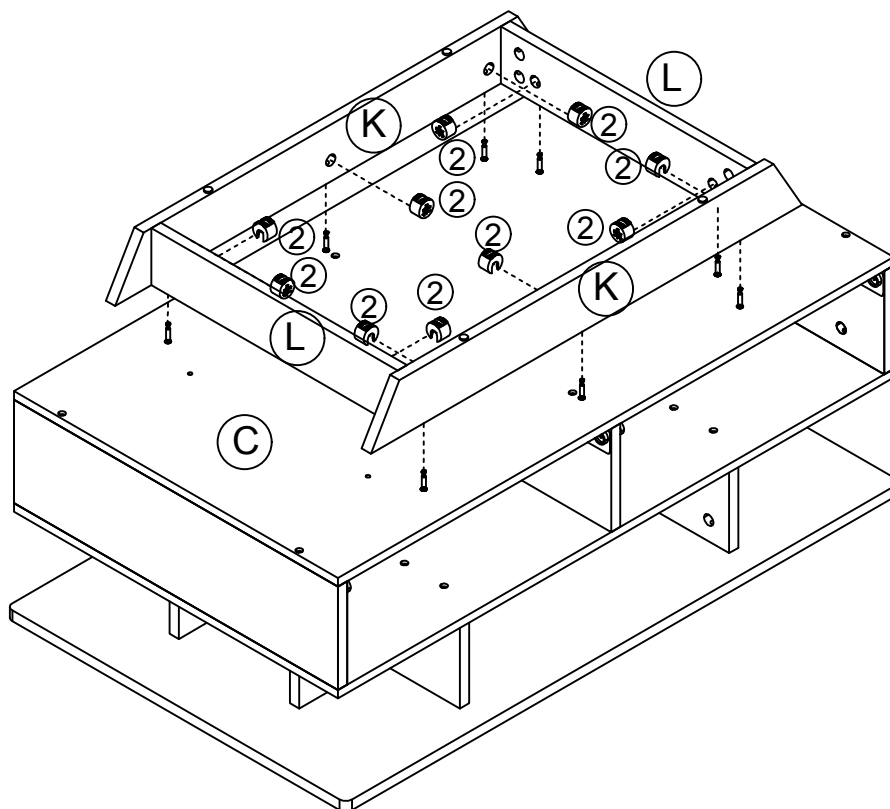


②



X 10


13

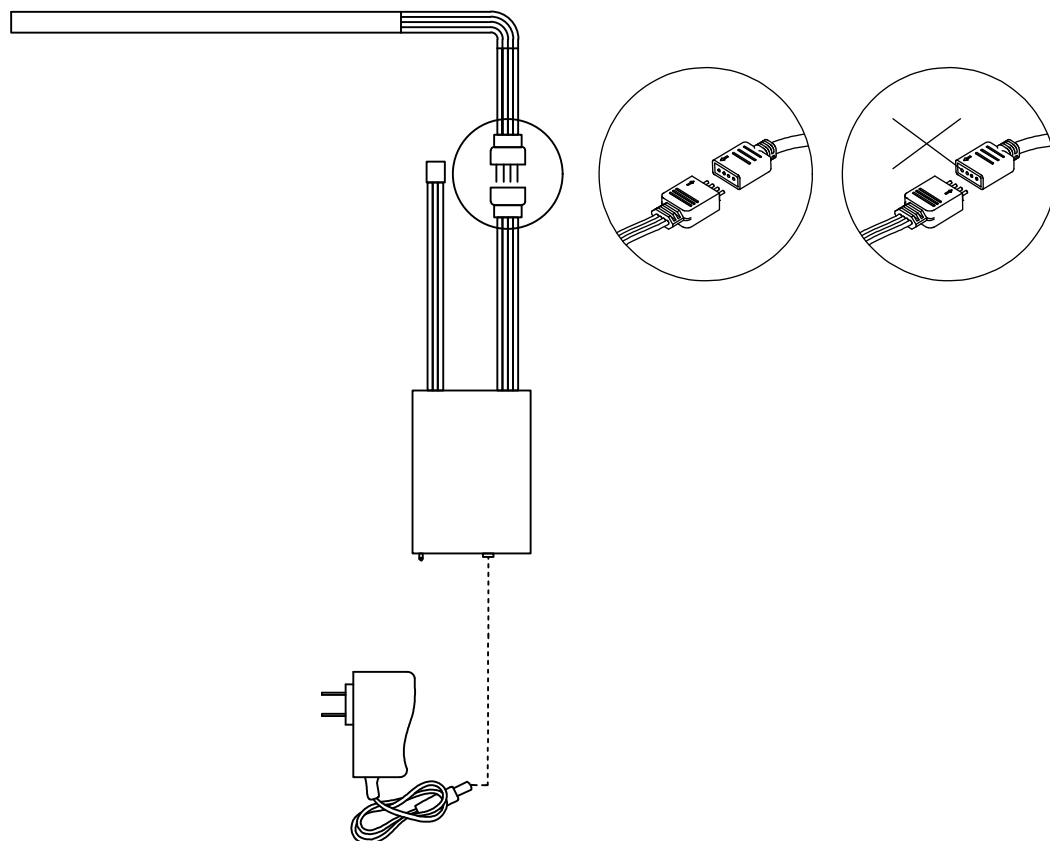



for American Standard


14

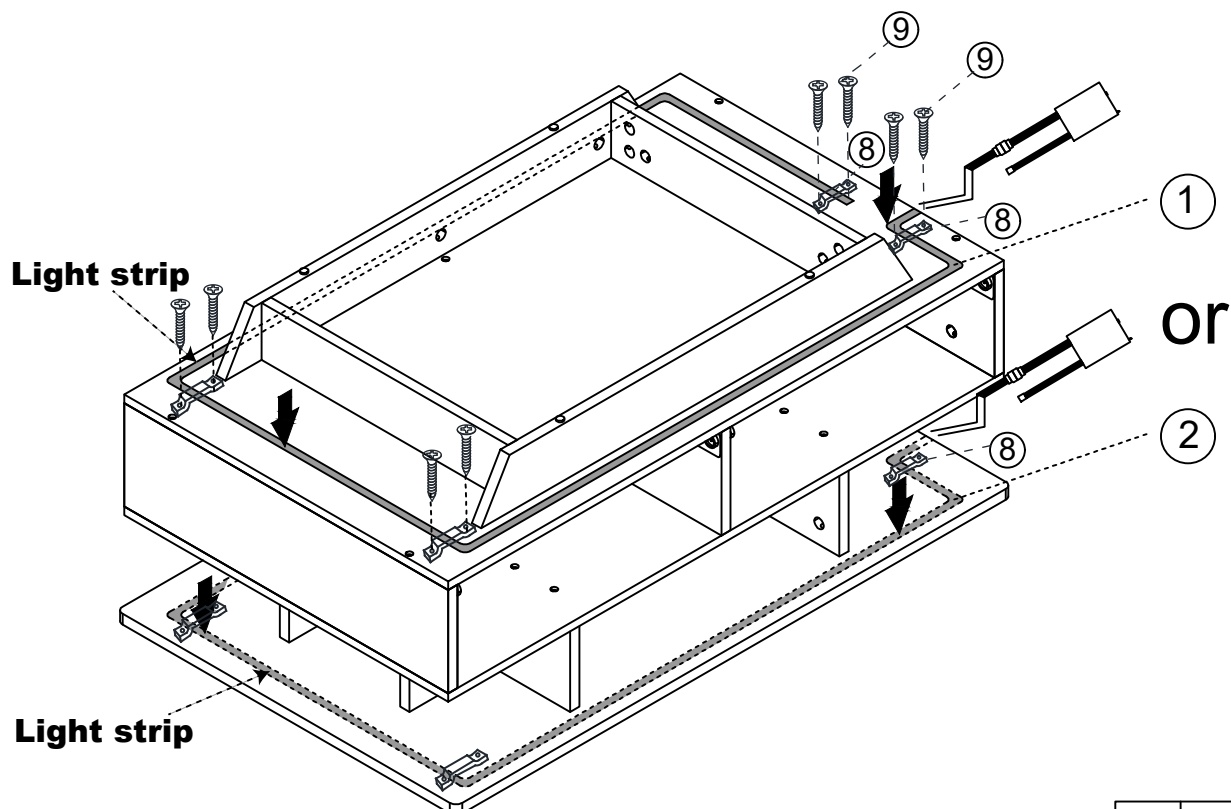The part ⑧ can be adjusted to the desired fixation position.







⑧		X 4
⑨		X 8

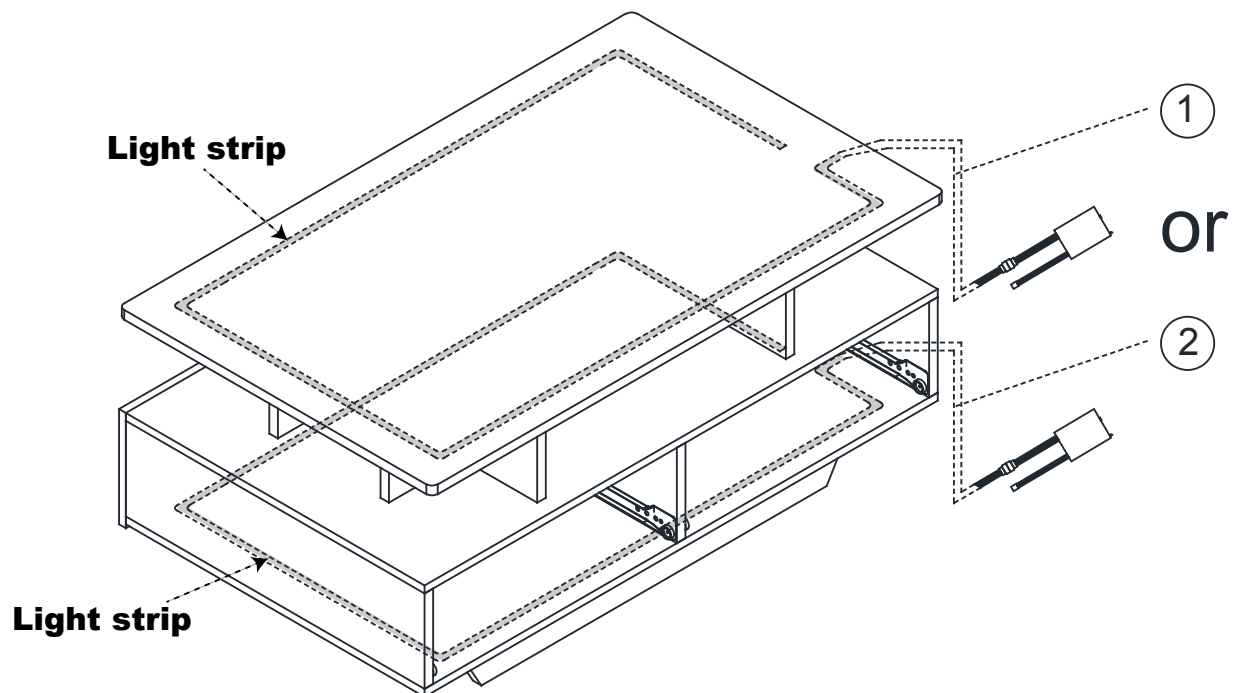15

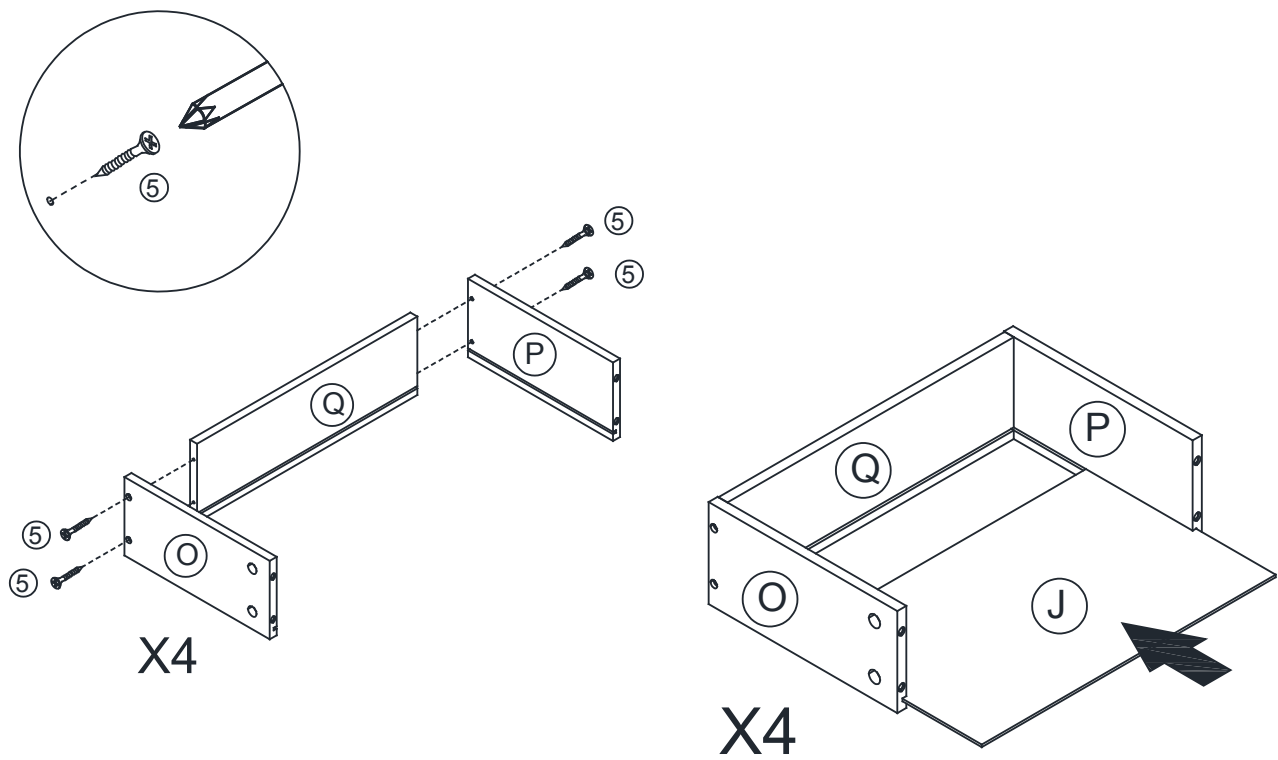


16



⊙		X 4	⊙		X 4
⊙		X 4	⊙		X 4


5		X 16
---	---	------

17

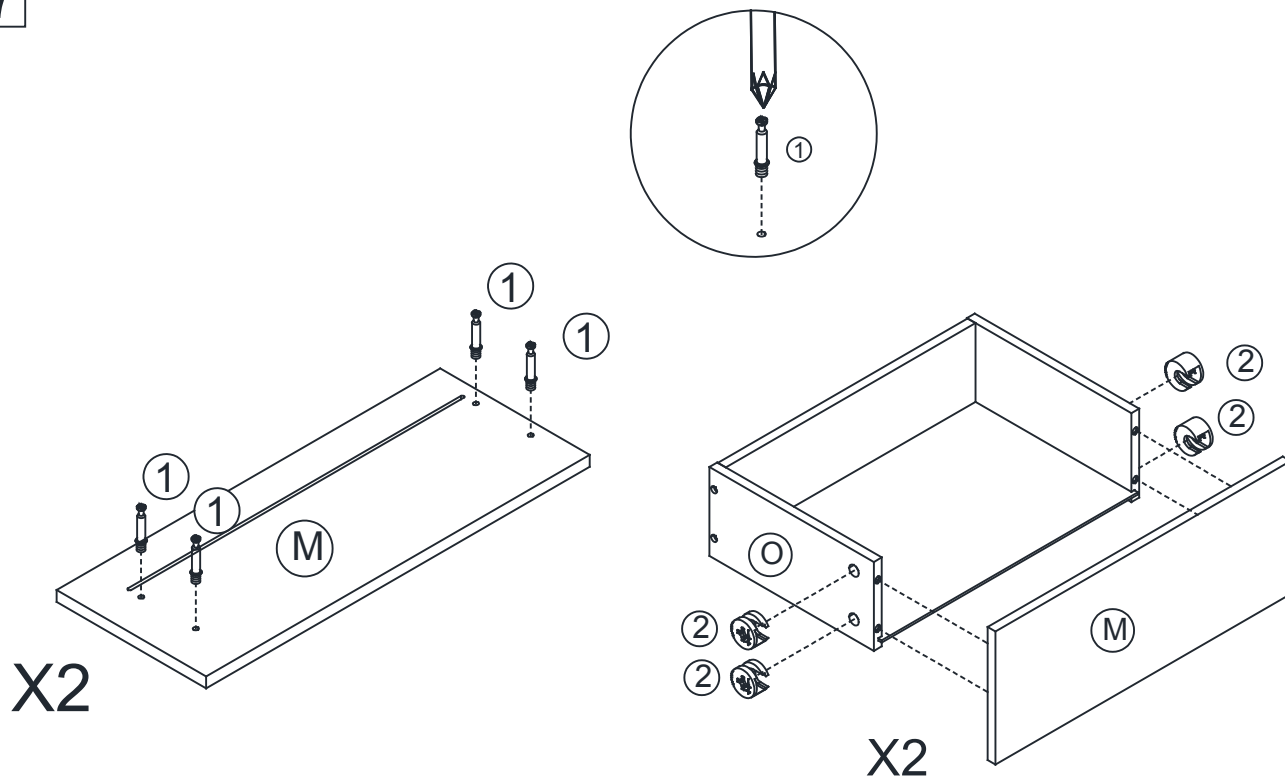


(M)		X 2
(2)		X 8
(1)		X 8

18

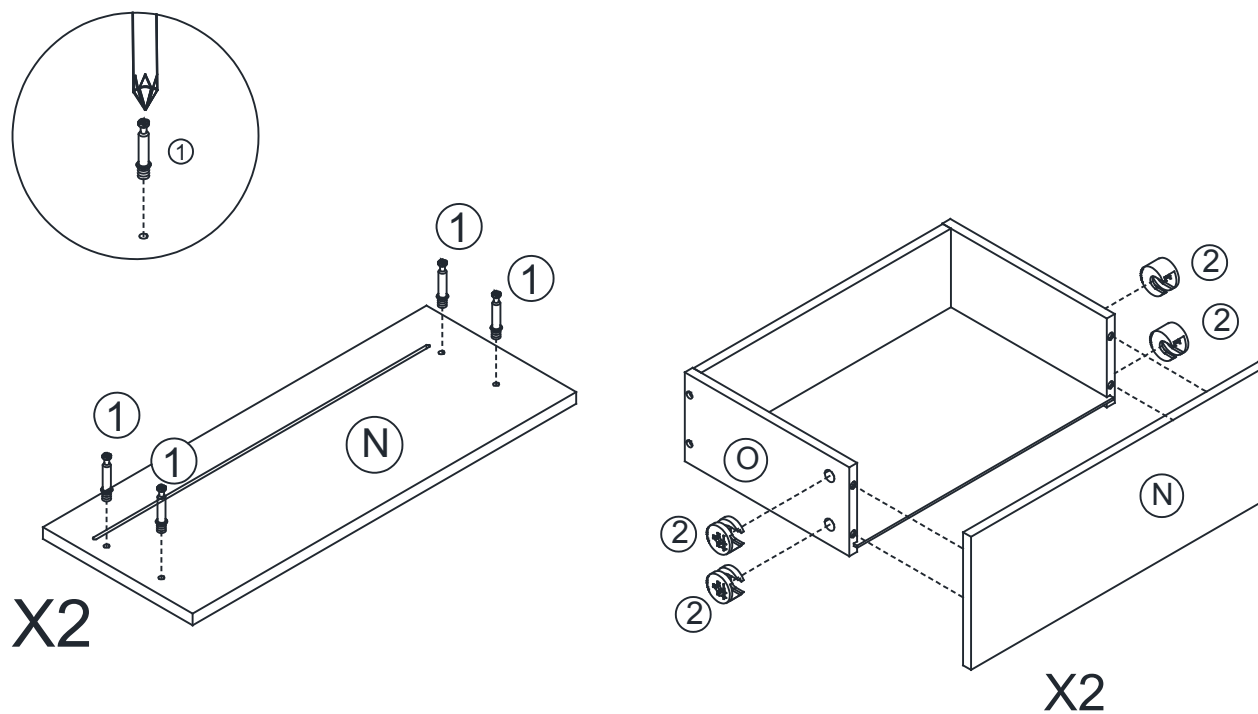


(N)		X 2
(2)		X 8
(1)		X 8



19

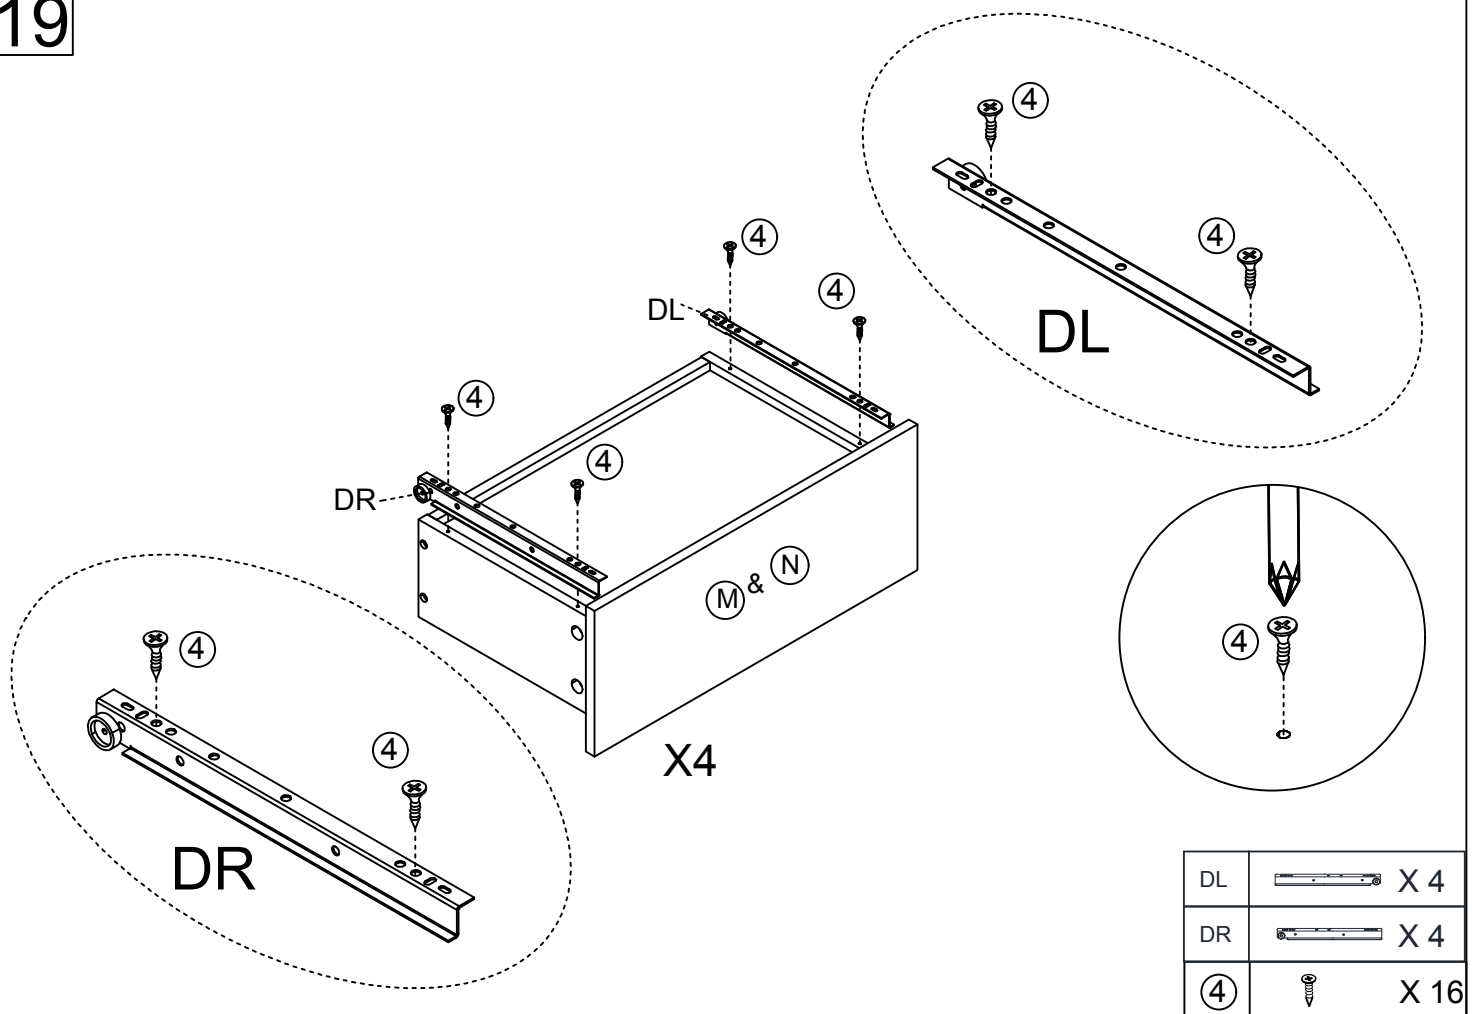

20

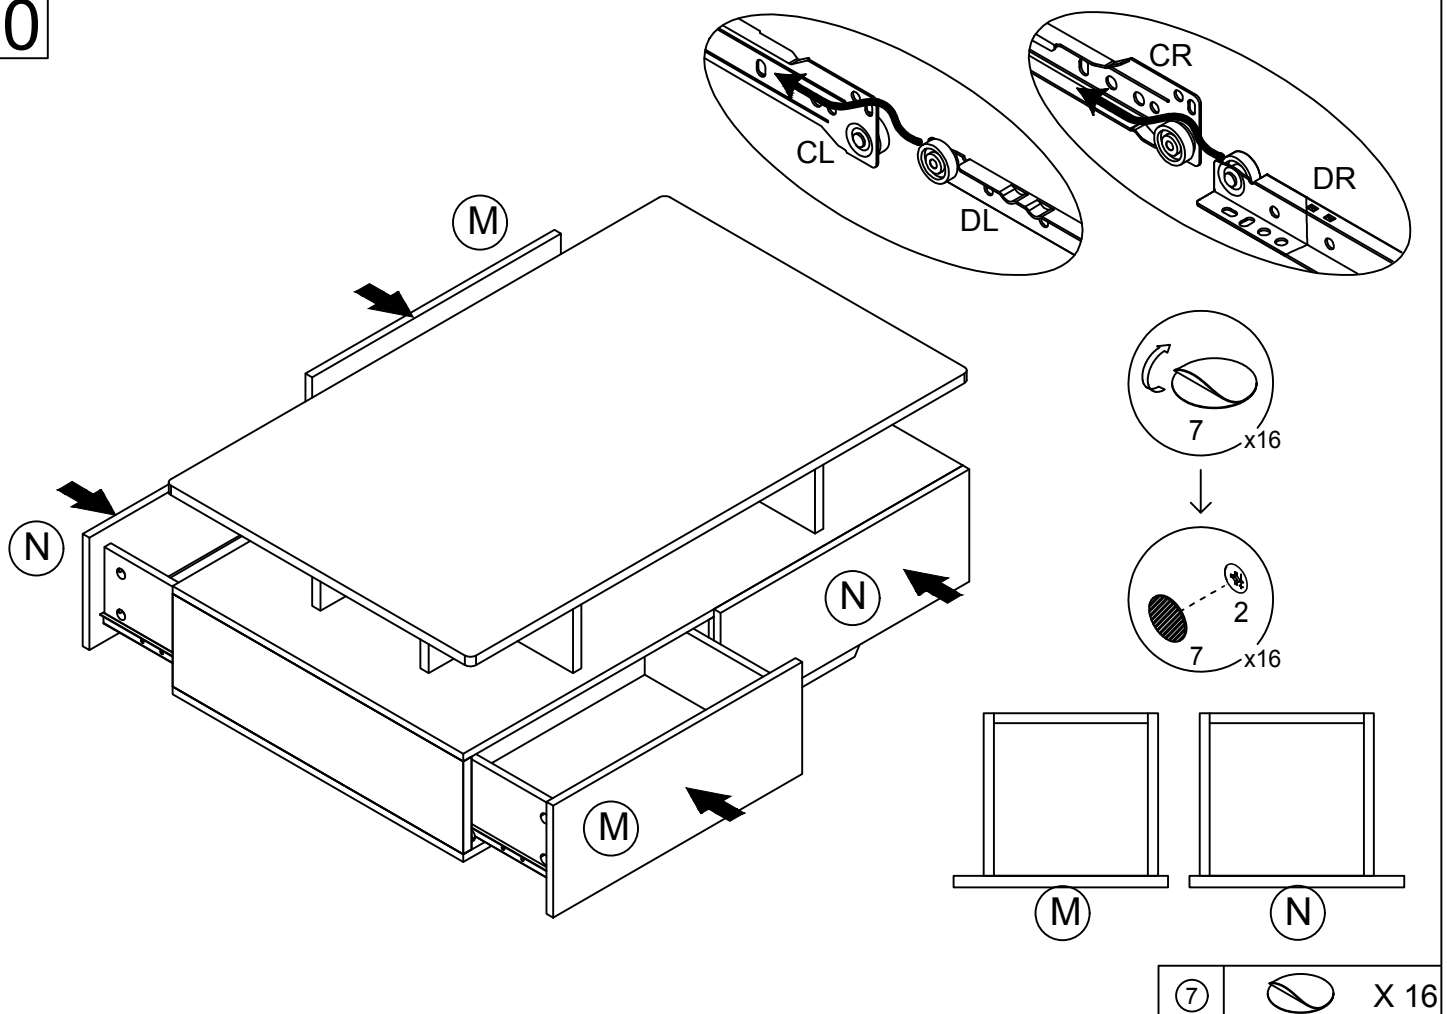


21

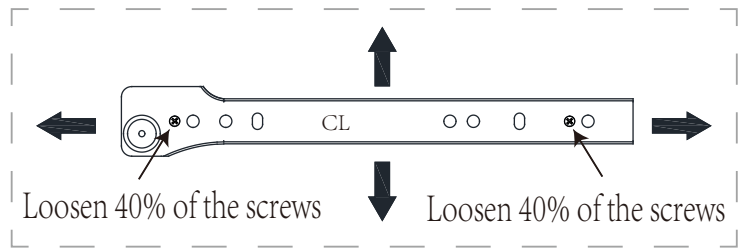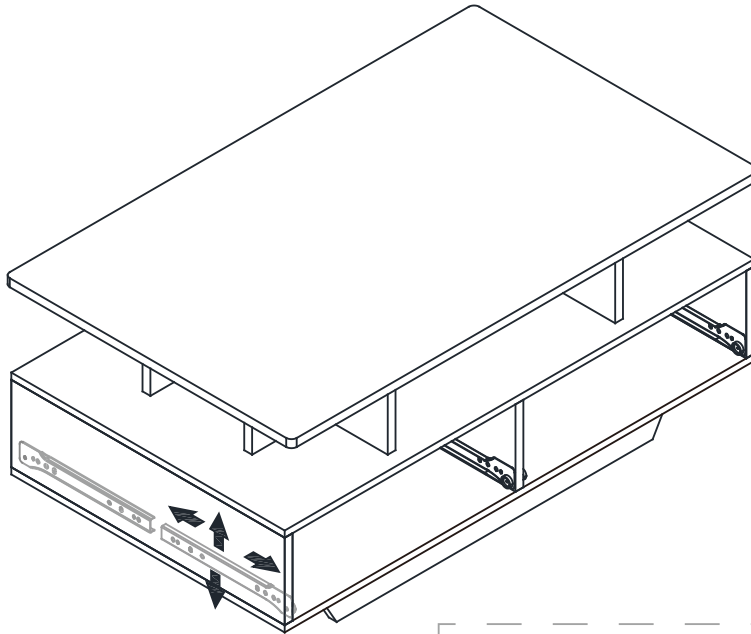

For uneven drawers: Remove uneven drawers and loosen screws on CL/CR rails.
Adjust CL/CR rails slightly up, down, forward, or backward. Then tighten the screws to level the drawer.

22

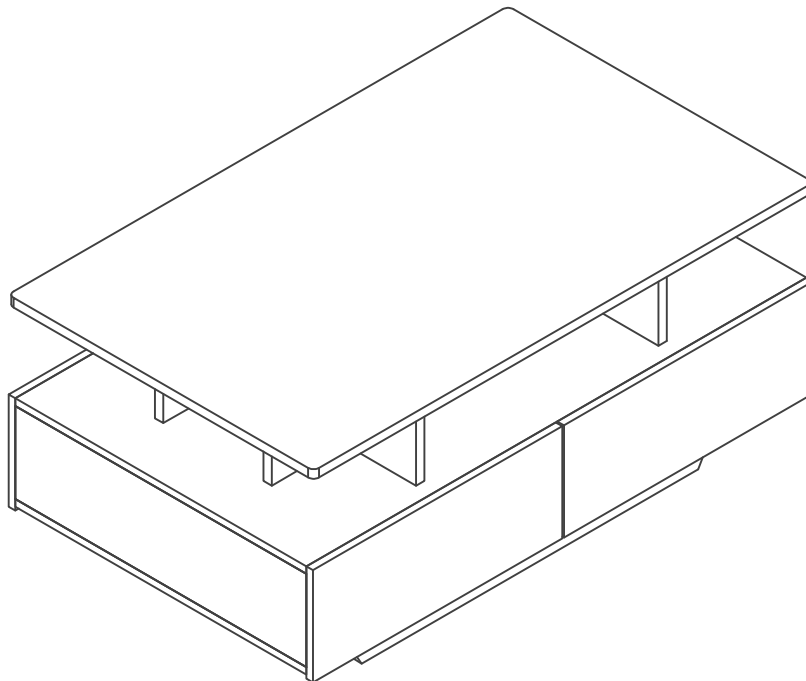

Installation Completed