



ASSEMBLY INSTRUCTIONS



ITEM CODE: WF306262 / WF306263

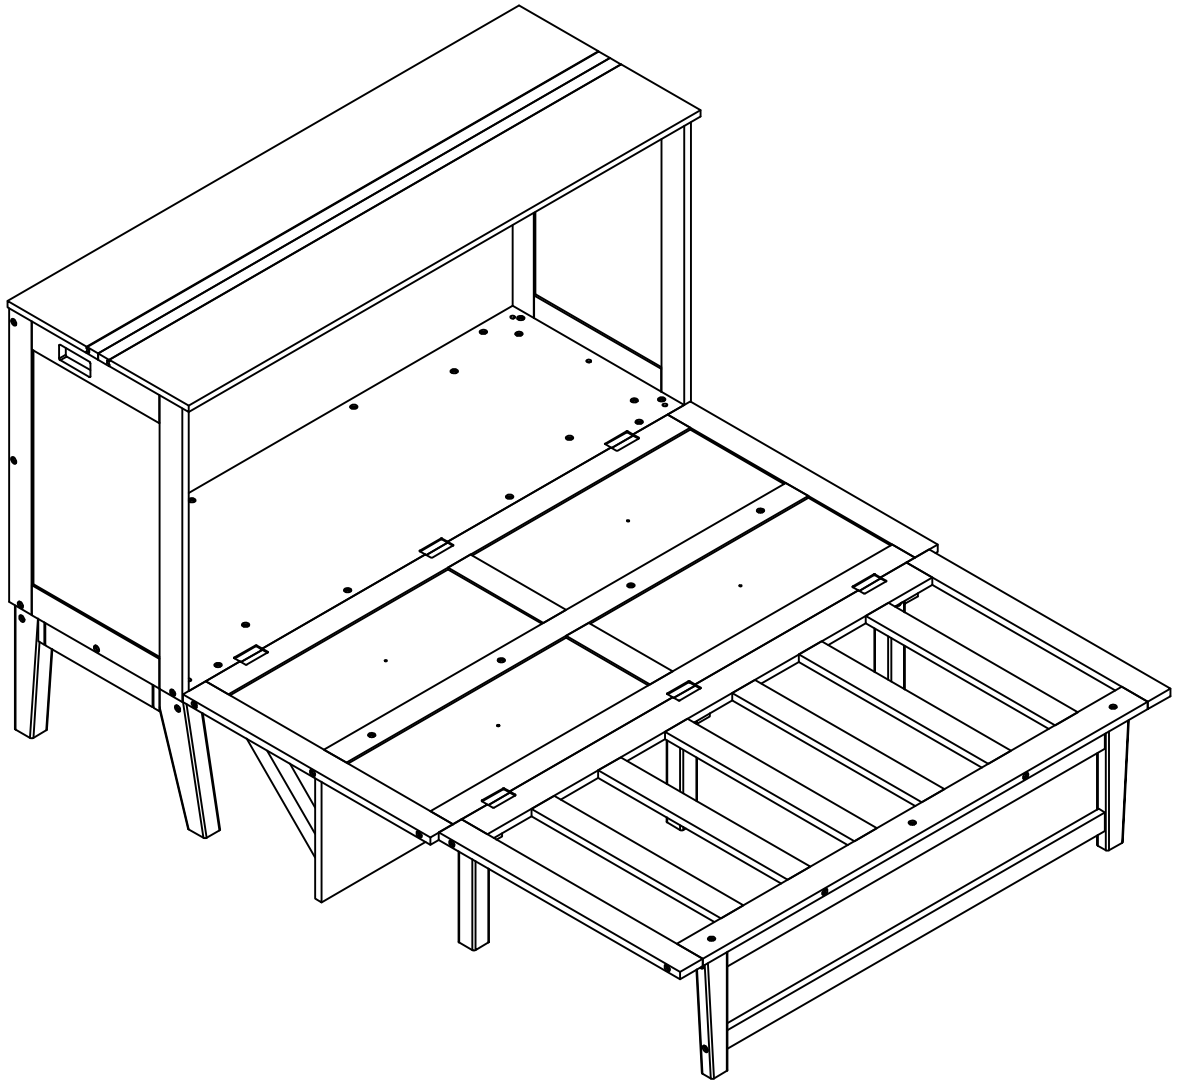

DETAIL VIEW

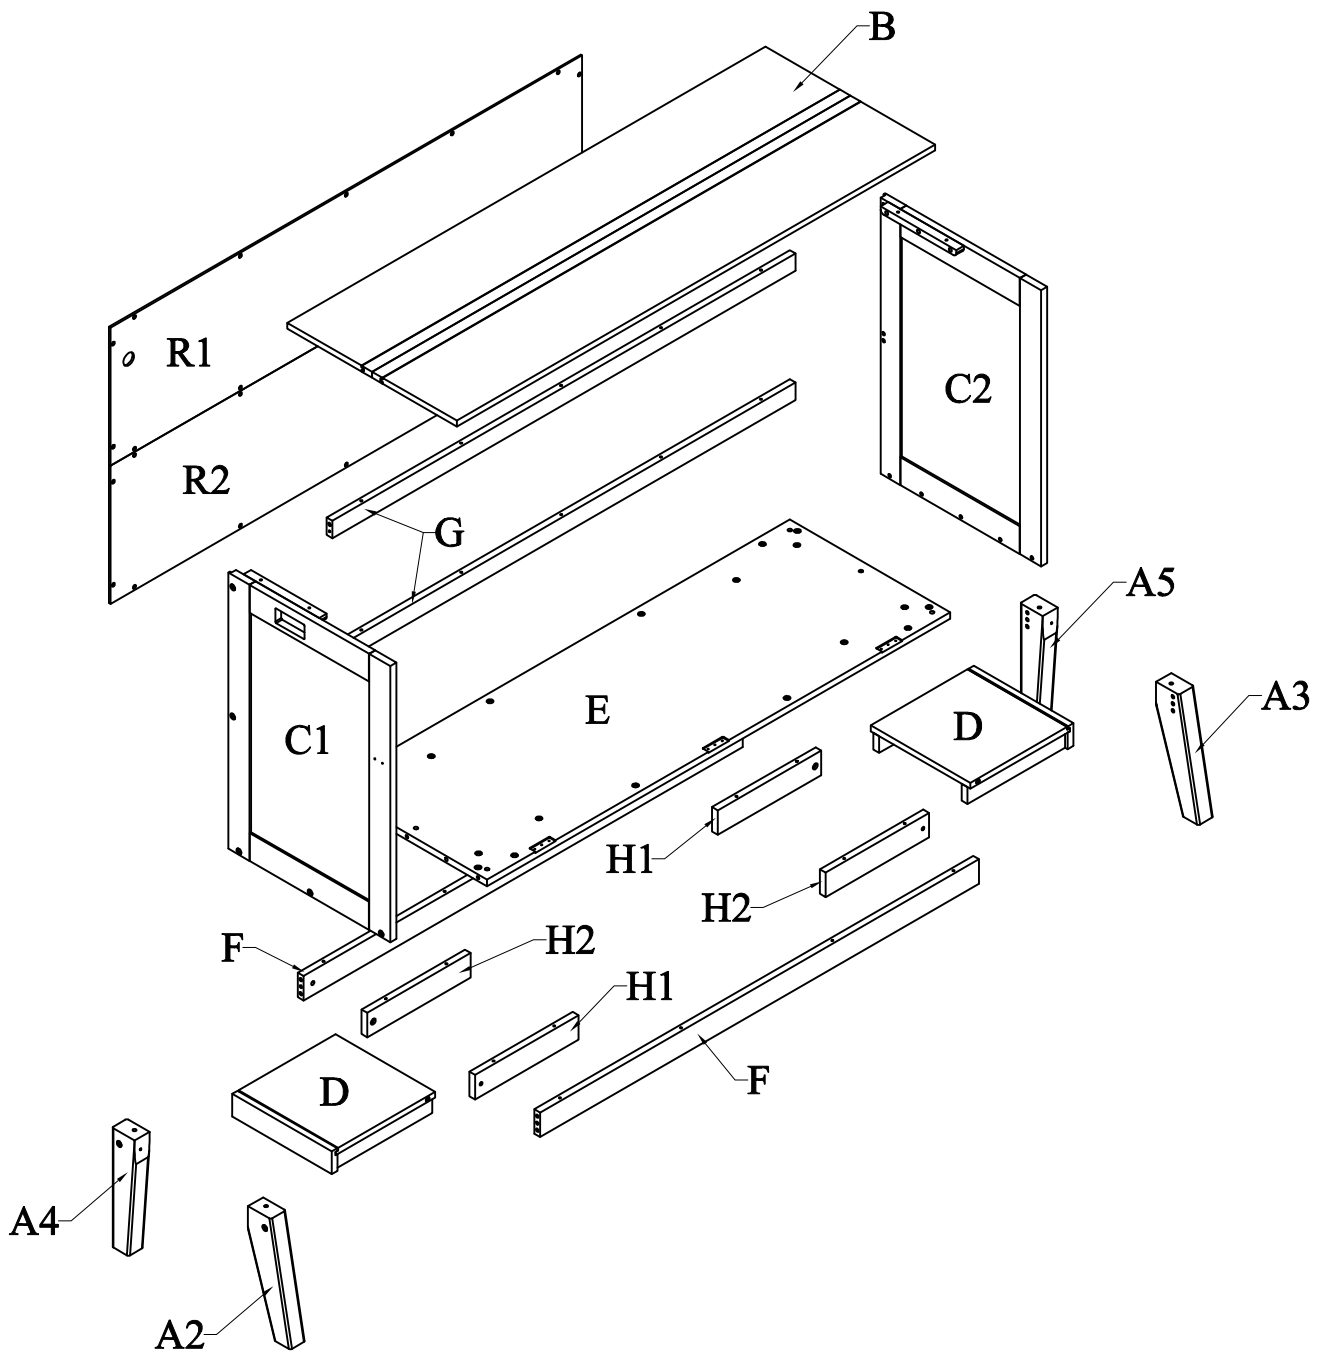


DETAIL VIEW

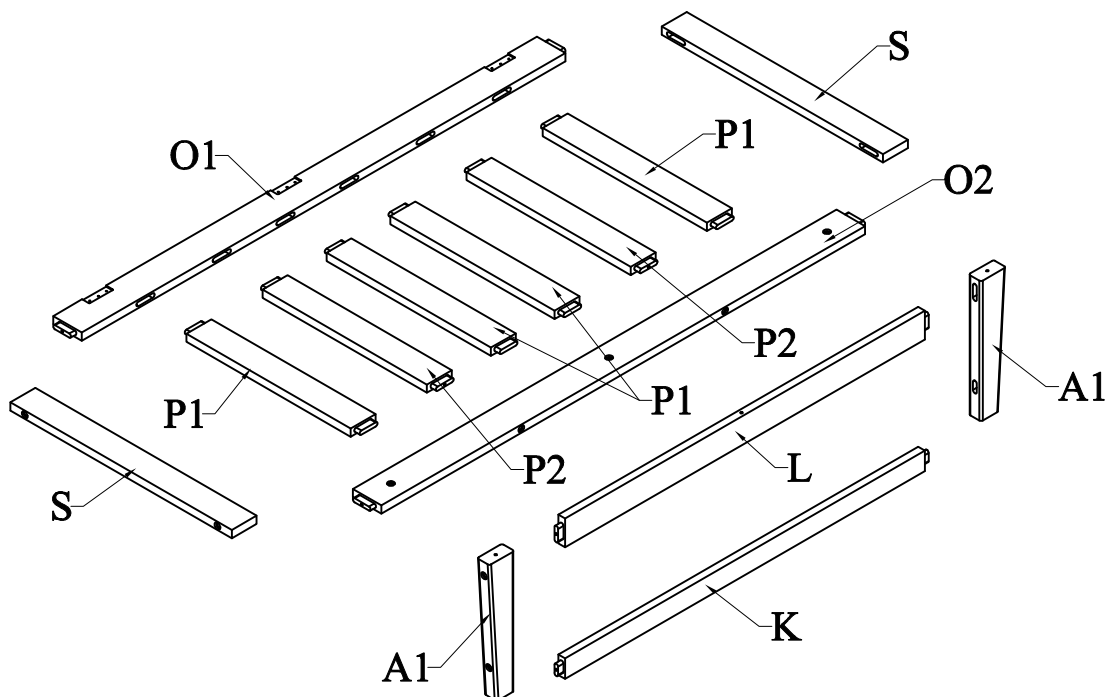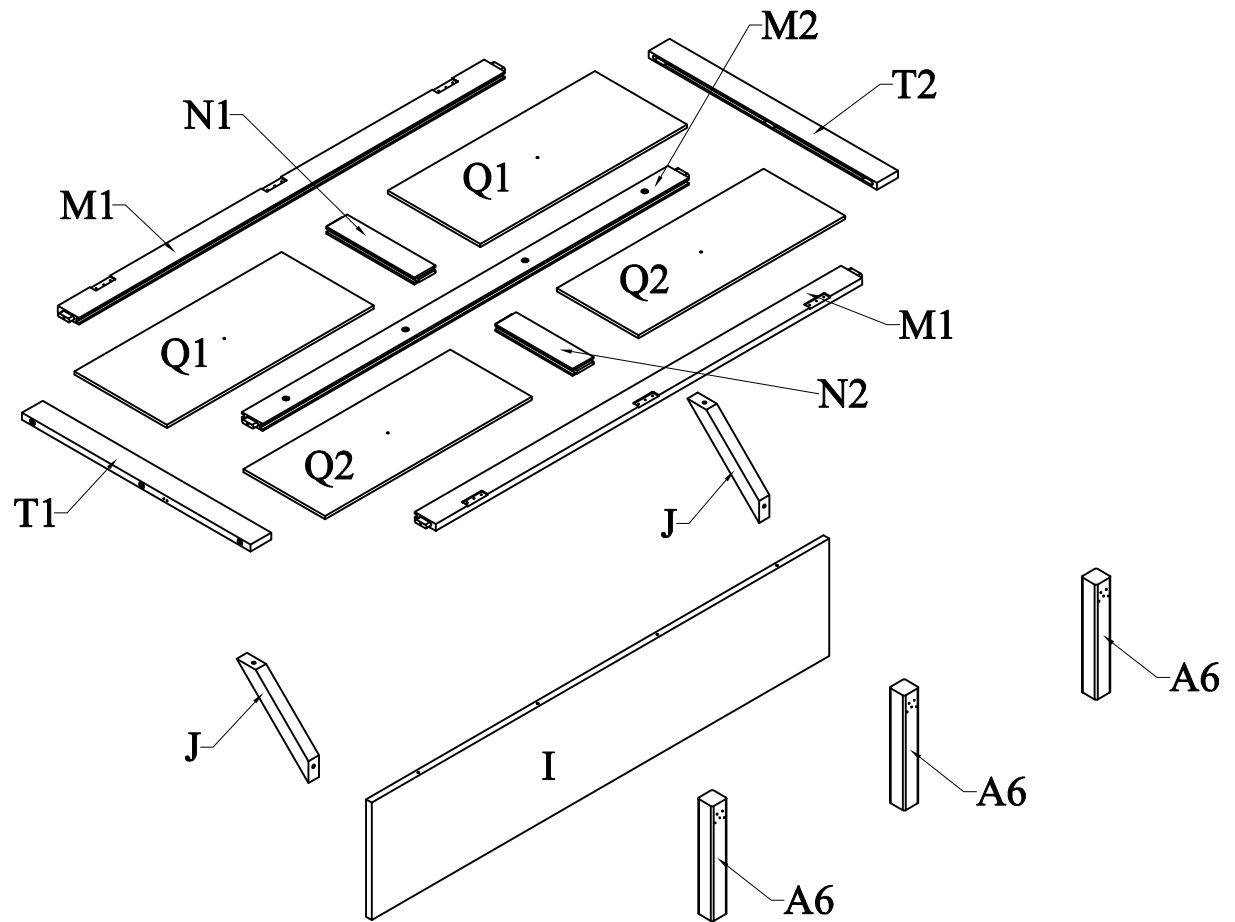


BOX: WF306262

B

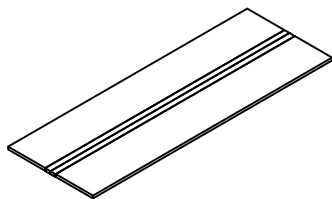


Top panel (1sets)

E

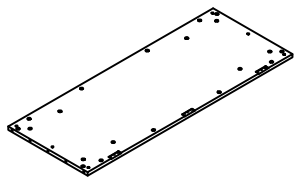


Bottom panel (1pc)

F

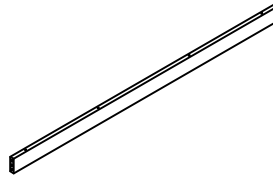


Support - bottom (2pcs)

G

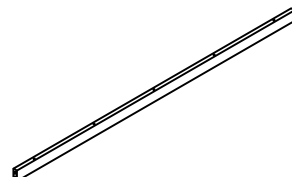


Back rail (2pcs)

I

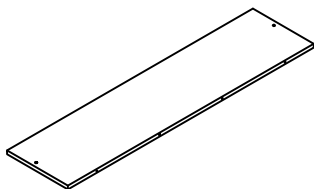


Top -table (1pc)

K

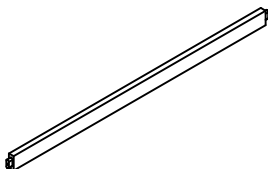


Support leg - bottom (1pc)

L

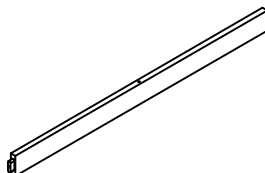


Support leg - top (1pc)

M1

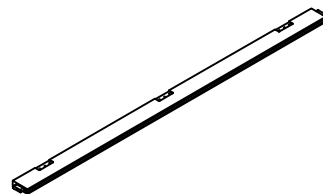


Horizontal rail 1 (2pcs)

M2

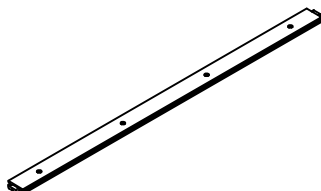


Horizontal rail 2 (1pc)

O1

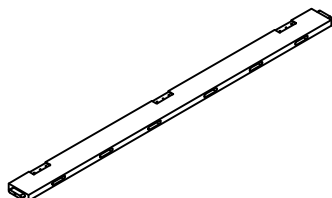


Horizontal rail 3 (1pc)

O2

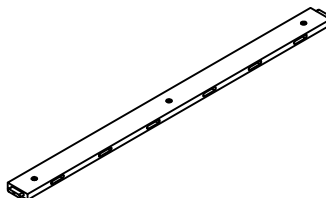


Horizontal rail 4 (1pc)

R1

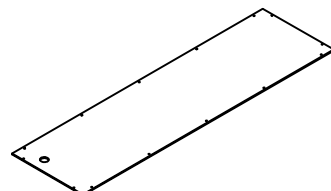

Back panel - top (1pc)


R2

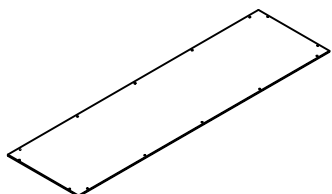

Back panel - bottom (1pc)

BOX: WF306263

A1

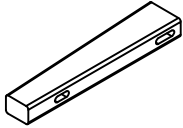


Front leg (2pcs)

A2




Middle leg - left (1pc)

A3




Middle leg - right (1pc)

A4

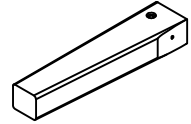


Back leg - left (1pc)

A5

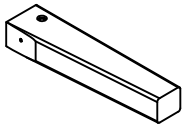


Back leg - right (1pc)

A6

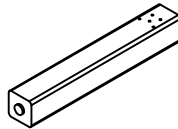


Extra leg (3pcs)

C1

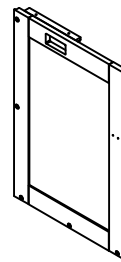

Side frame - left (1pc)

C2

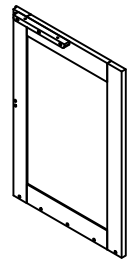

Side frame - right (1pc)

D


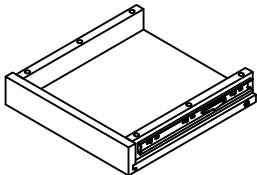



Table frame - top (2pcs)

H1

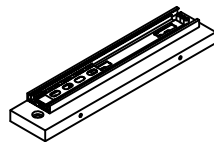


Support bar - left (2pcs)

H2

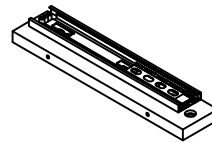










Support bar - right (2pcs)

J

















Support bar - table (2pcs)


BOX: WF306263

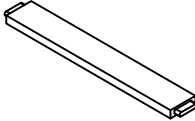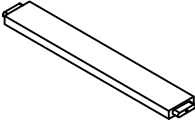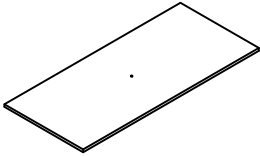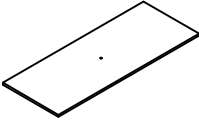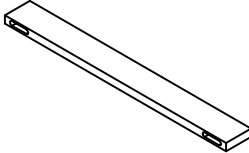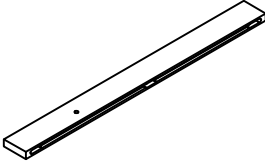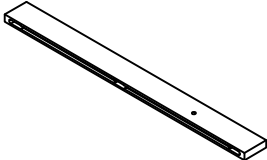N1  Vertical rail - long (1pc)	N2  Vertical rail - short (1pc)	P1  Vertical bar 1 (4pcs)	P2  Vertical bar 2 (2pcs)
Q1  Front panel - large (2pcs)	Q2  Front panel - small (2pcs)	S  Vertical side rail 2 (2pcs)	T1  Vertical side rail 1 - left (1pc)
T2  Vertical side rail 1 - left (1pc)			

HARDWARE LIST: WF306263

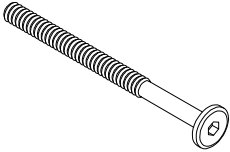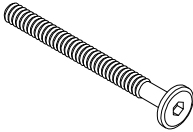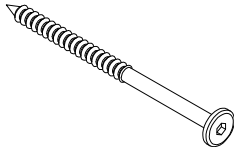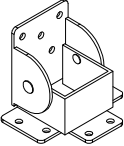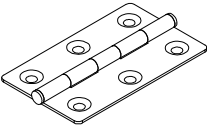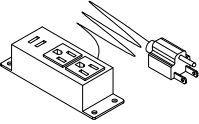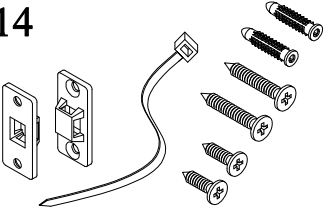1  Hex - Head bolts Ø1/4" * 90 - 4pcs	2  Hex - Head bolts Ø1/4" * 60 - 6pcs	3  Hex - Head bolts Ø1/4" * 35 - 8pcs	4  Hexagonal bolts catch wood Ø6 * 100 - 16pcs
5  Hexagonal bolts catch wood Ø6 * 80 - 2pcs	6  Hexagonal bolts catch wood Ø6 * 50 - 24pcs	7  Hexagonal bolts catch wood Ø6 * 40 - 7pcs	8  Horizontal - Hold bolts Ø1/4" - 10pcs
9  Folded patt - 3pcs	10  Hinge - 6pcs	11  Duckbill lock A - 2pcs	12  Duckbill lock B - 2pcs
13  Power outlet - 1pc	14  Anti-tip Kit - 2sets	15  Handle - 4pcs	16  Round crews Ø5/32" * 15 - 4pcs
17  Wood dowel Ø8 * 30 - 16pcs	18  Allen key K4 - 1pc	19  Wood crews M4 * 45 - 4pcs	20  Wood crews M4 * 30 - 4pcs
21  Wood crews M3.5 * 15 - 44pcs	22  Round wood crews M3.5 * 15 - 65pcs	 Assembly Tools Required (Not Included)	


STEP 1

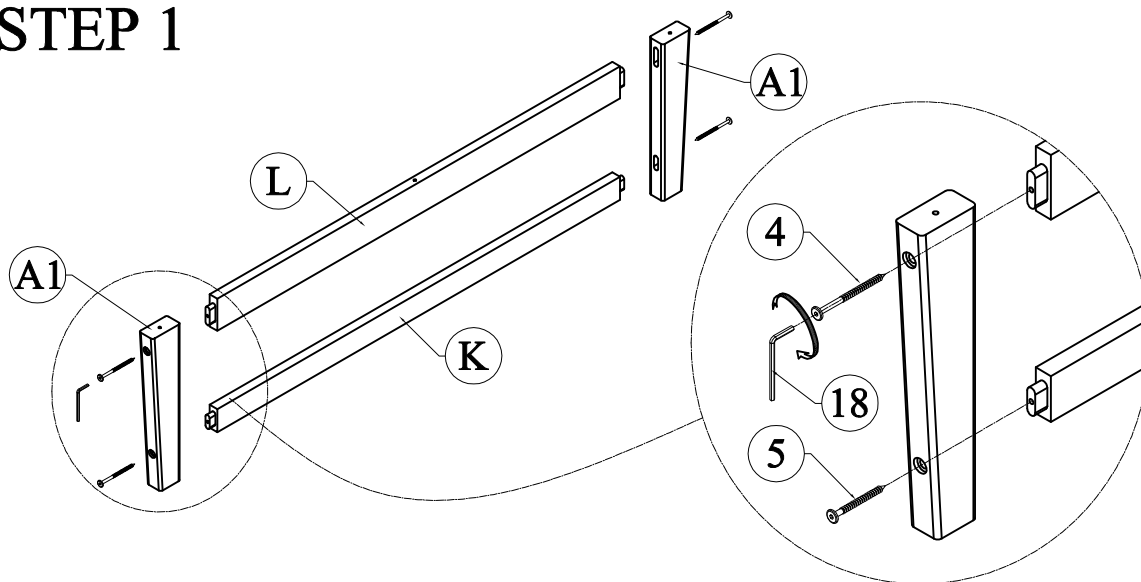

4
Hexagonal bolts catch wood
Ø6 * 100 - 2pcs


5
Hexagonal bolts catch wood
Ø6 * 80 - 2pcs

STEP 2

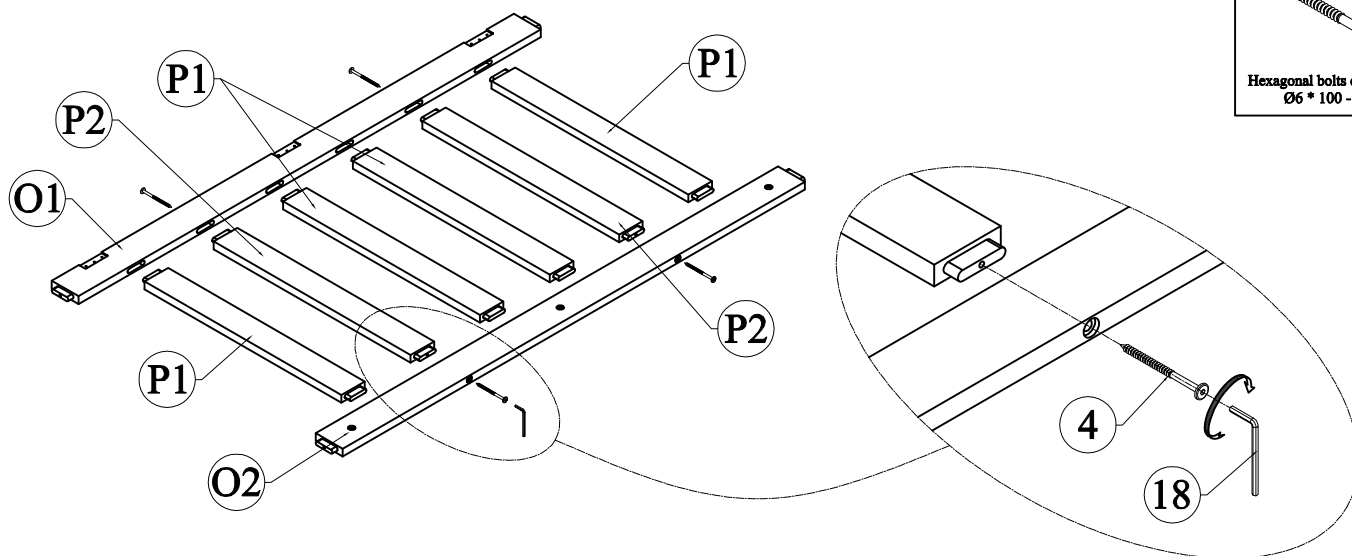



4
Hexagonal bolts catch wood
Ø6 * 100 - 4pcs

STEP 3


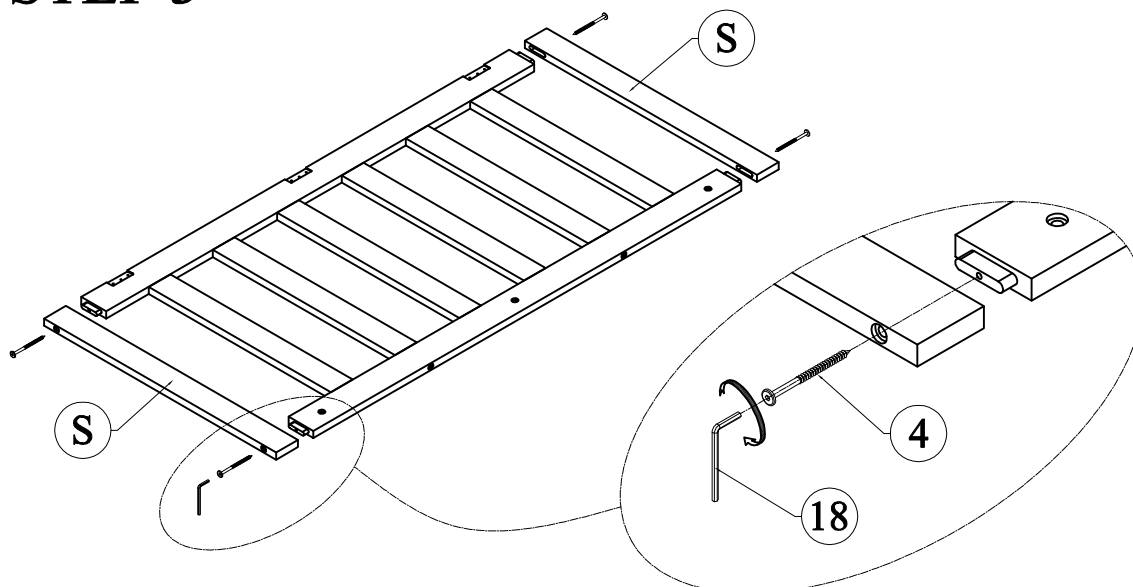


4
Hexagonal bolts catch wood
Ø6 * 100 - 4pcs



STEP 4

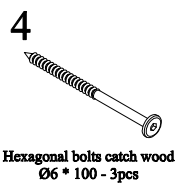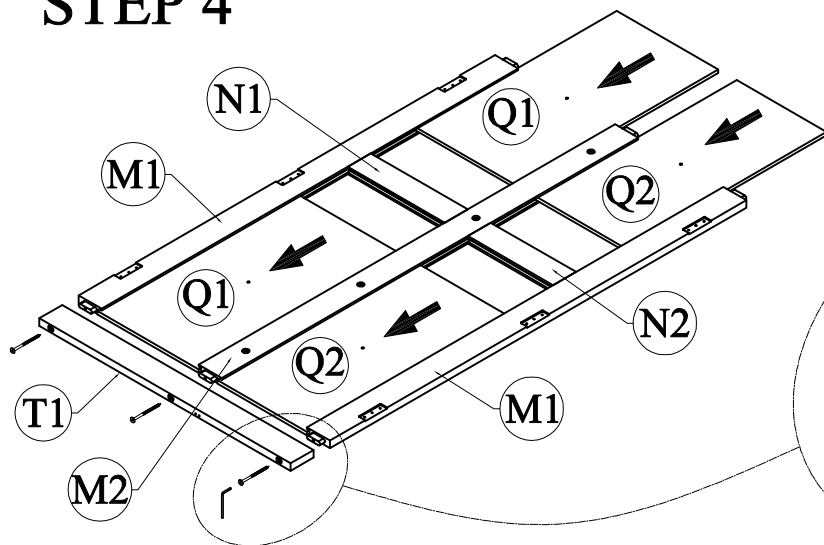


STEP 5

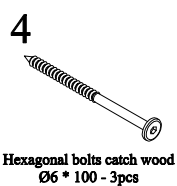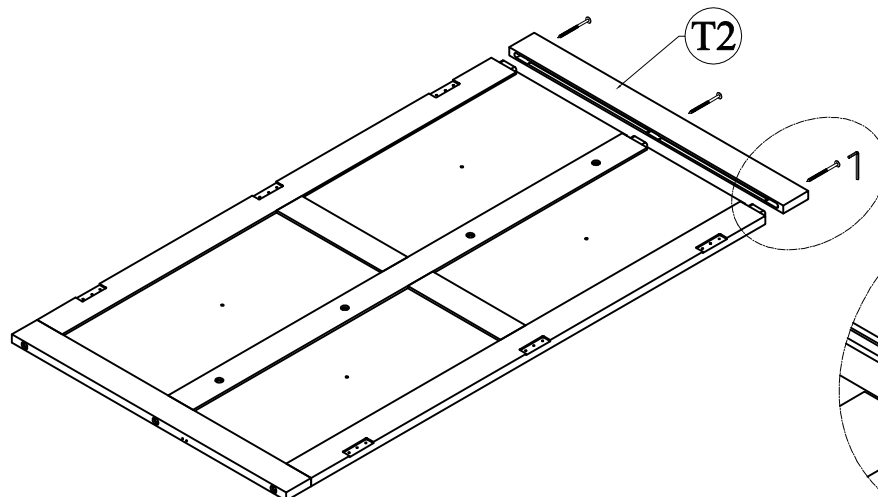

STEP 6

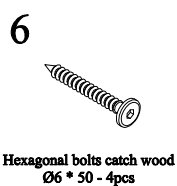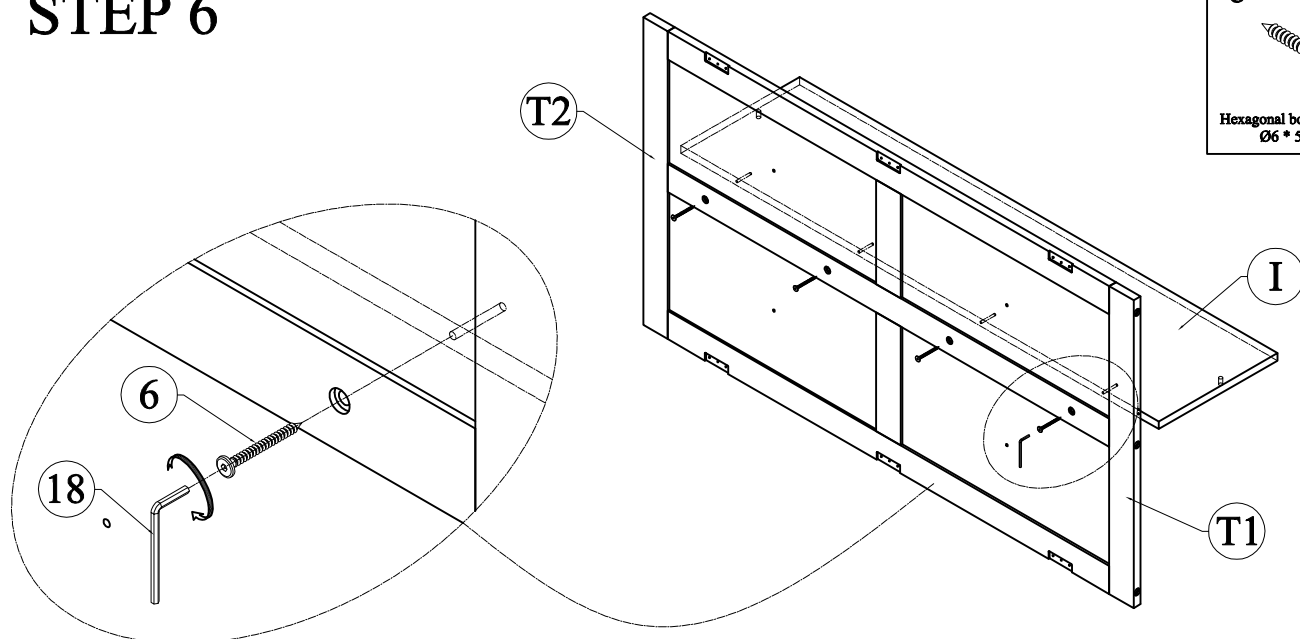

STEP 7

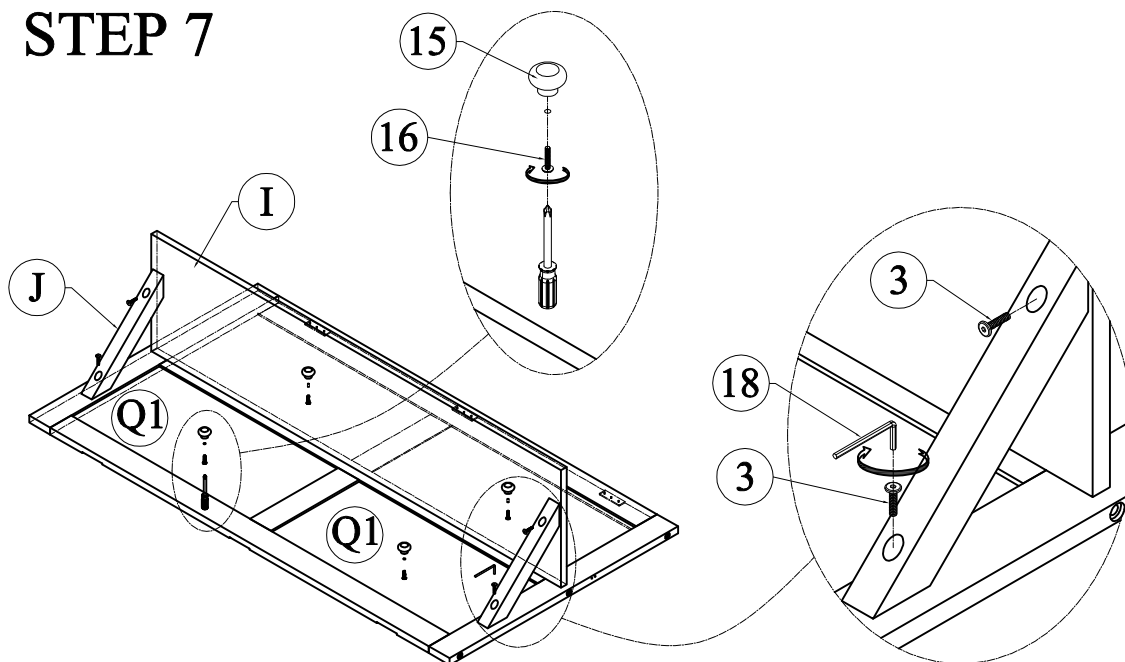

3



Hex - Head bolts
Ø1/4" * 35 - 4pcs

15



Handle - 4pcs

16




Round crews
Ø5/32" * 15 - 4pcs


STEP 8

X3

A6

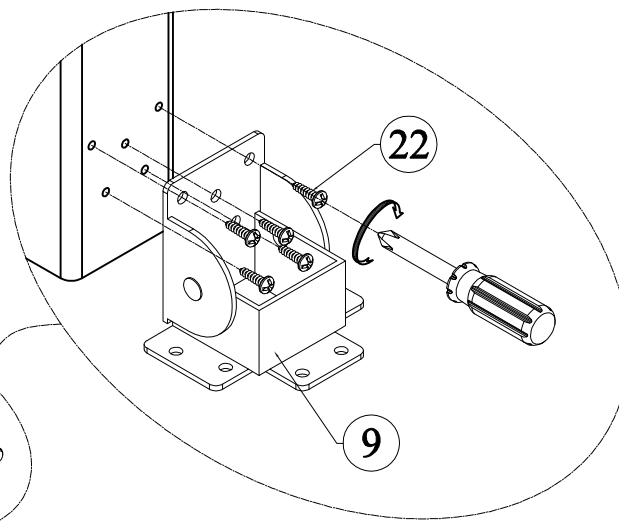

9




Folded patt - 3pcs

22



Round wood crews
M3.5 * 15 - 15pcs

STEP 9

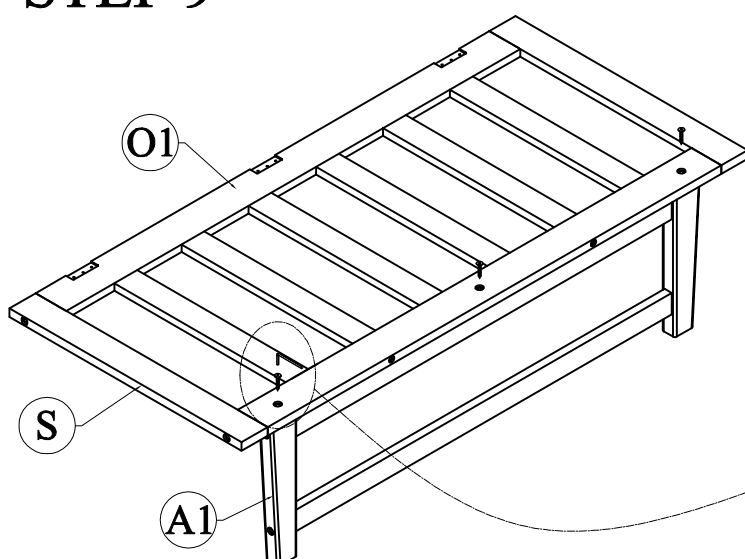


7



Hexagonal bolts catch wood
Ø6 * 40 - 3pcs


STEP 10

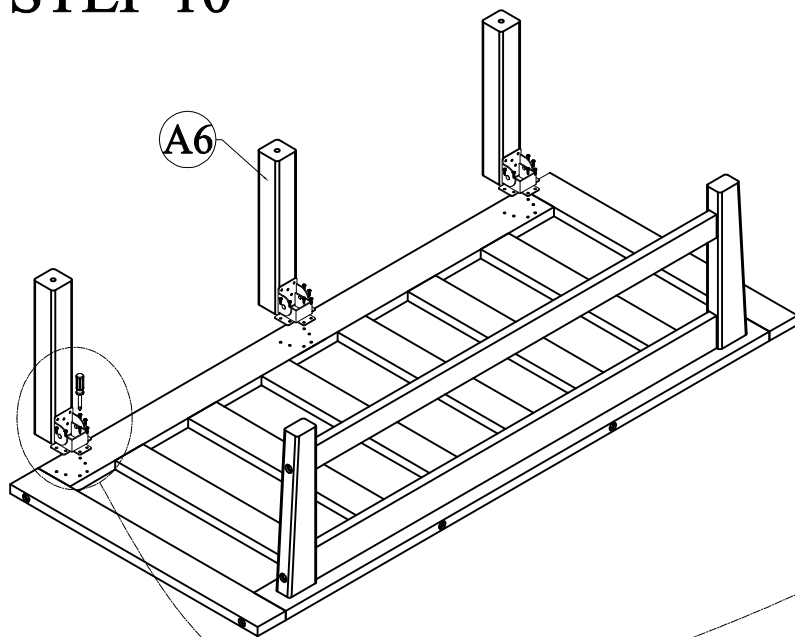


22



Round wood crews
M3.5 * 15 - 18pcs

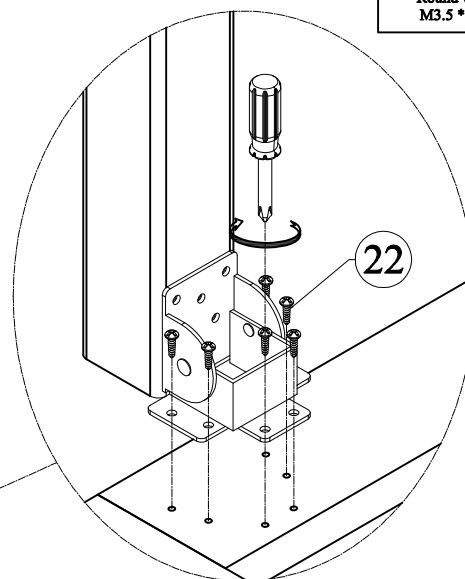

STEP 11

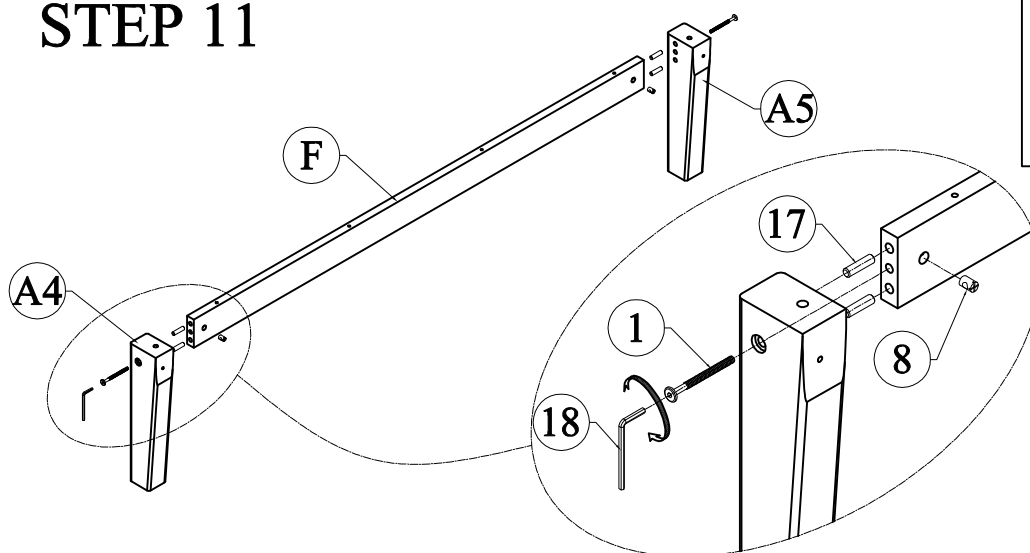

1

Hex - Head bolts
Ø1/4" * 90 - 2pcs

8




Horizontal - Hold bolts
Ø1/4" - 2pcs

17



Wood dowel
Ø8 * 30 - 4pcs

STEP 12

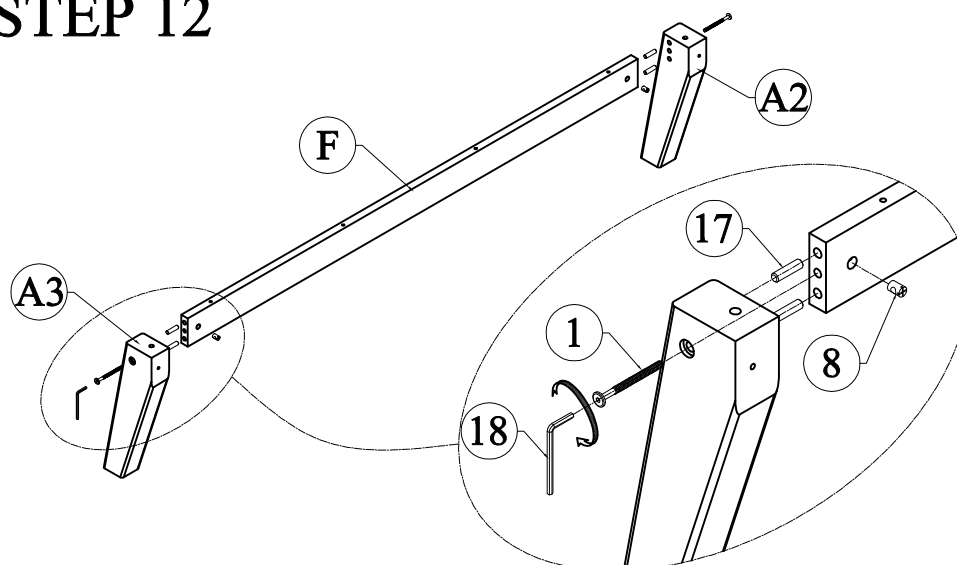

1

Hex - Head bolts
Ø1/4" * 90 - 2pcs

8




Horizontal - Hold bolts
Ø1/4" - 2pcs

17



Wood dowel
Ø8 * 30 - 4pcs

STEP 13

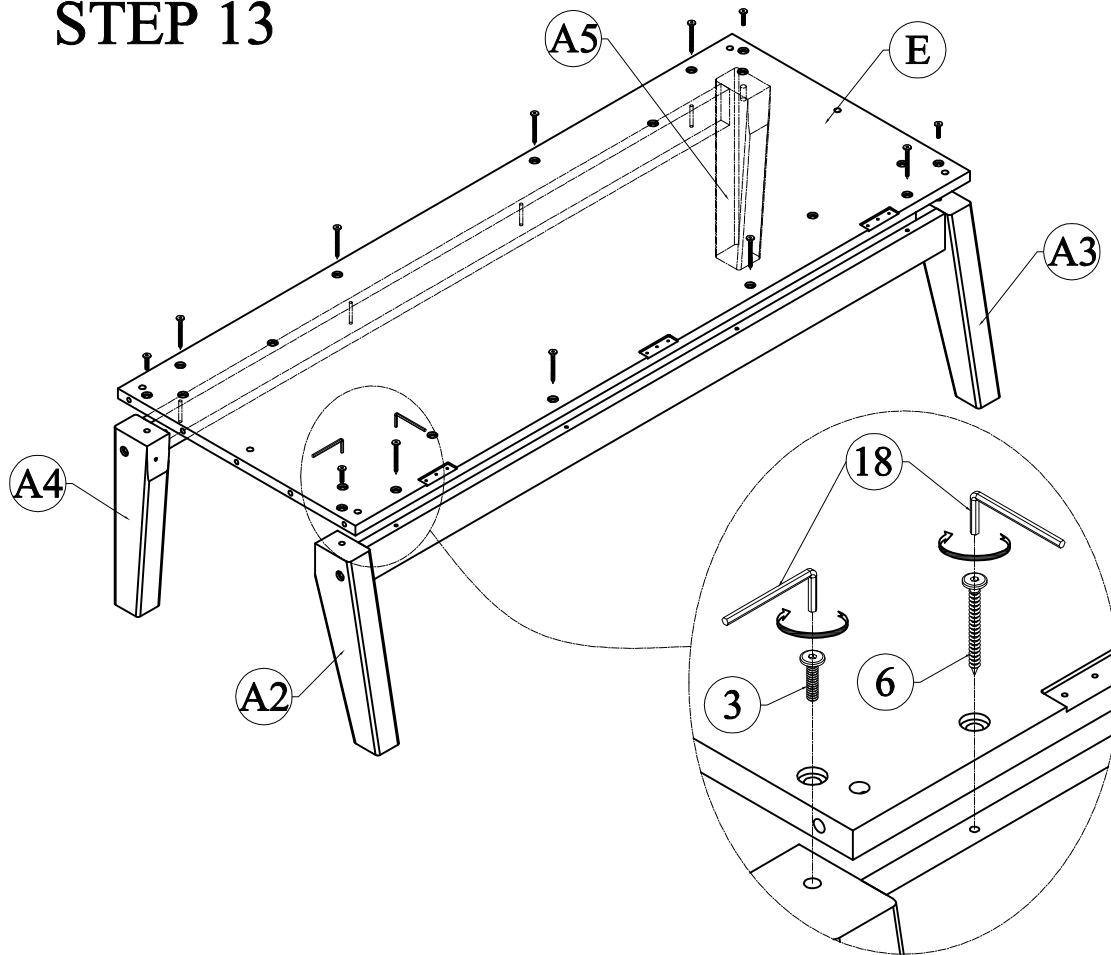

3




Hex - Head bolts
Ø1/4" * 35 - 4pcs

6



Hexagonal bolts catch wood
Ø6 * 50 - 8pcs

STEP 14

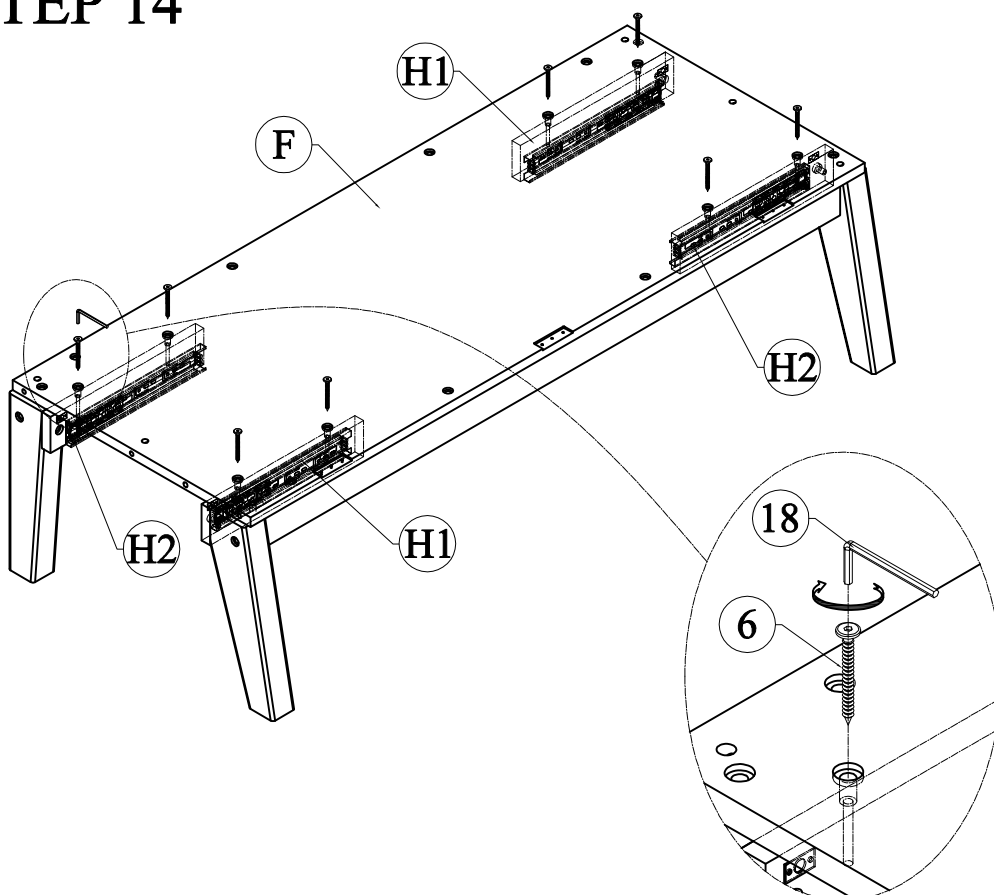


6



Hexagonal bolts catch wood
Ø6 * 50 - 8pcs

STEP 15

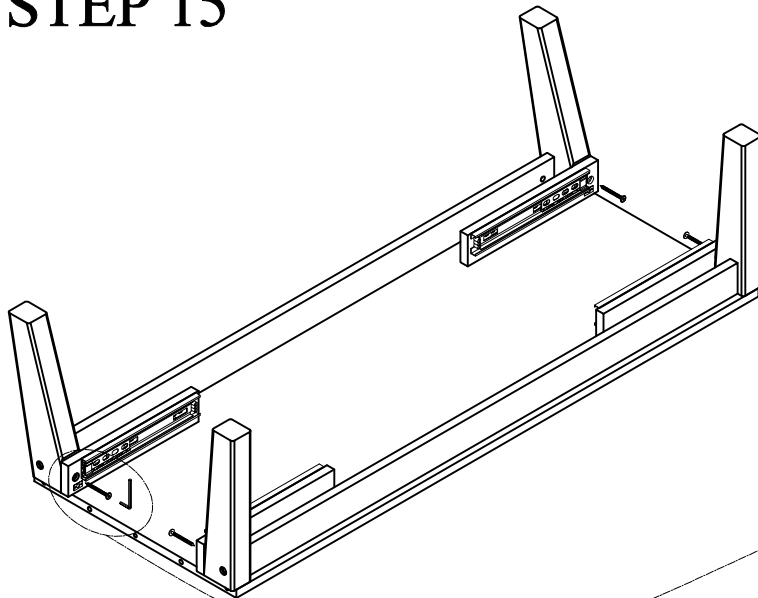


7

Hexagonal bolts catch wood
Ø6 * 40 - 8pcs

7

18

STEP 16

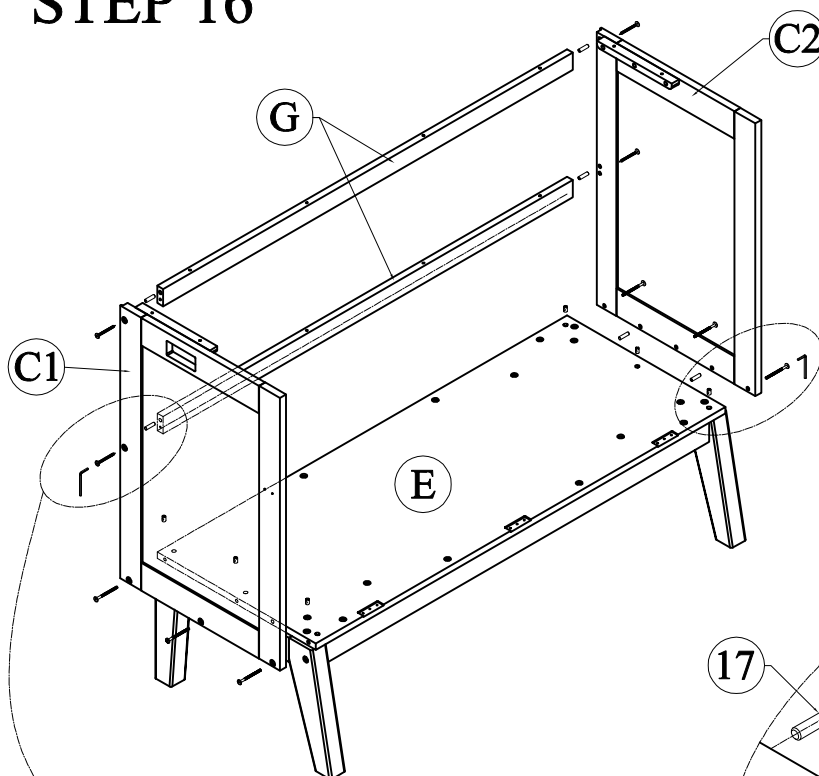

2

Hex - Head bolts
Ø1/4" * 60 - 6pcs

6

Hexagonal bolts catch wood
Ø6 * 50 - 4pcs

8



Horizontal - Hold bolts
Ø1/4" - 6pcs

17



Wood dowel
Ø8 * 30 - 8pcs

17

2

8

18

6

17

STEP 17

19




Wood crews
M4 * 45 - 4pcs

20



Wood crews
M4 * 30 - 4pcs

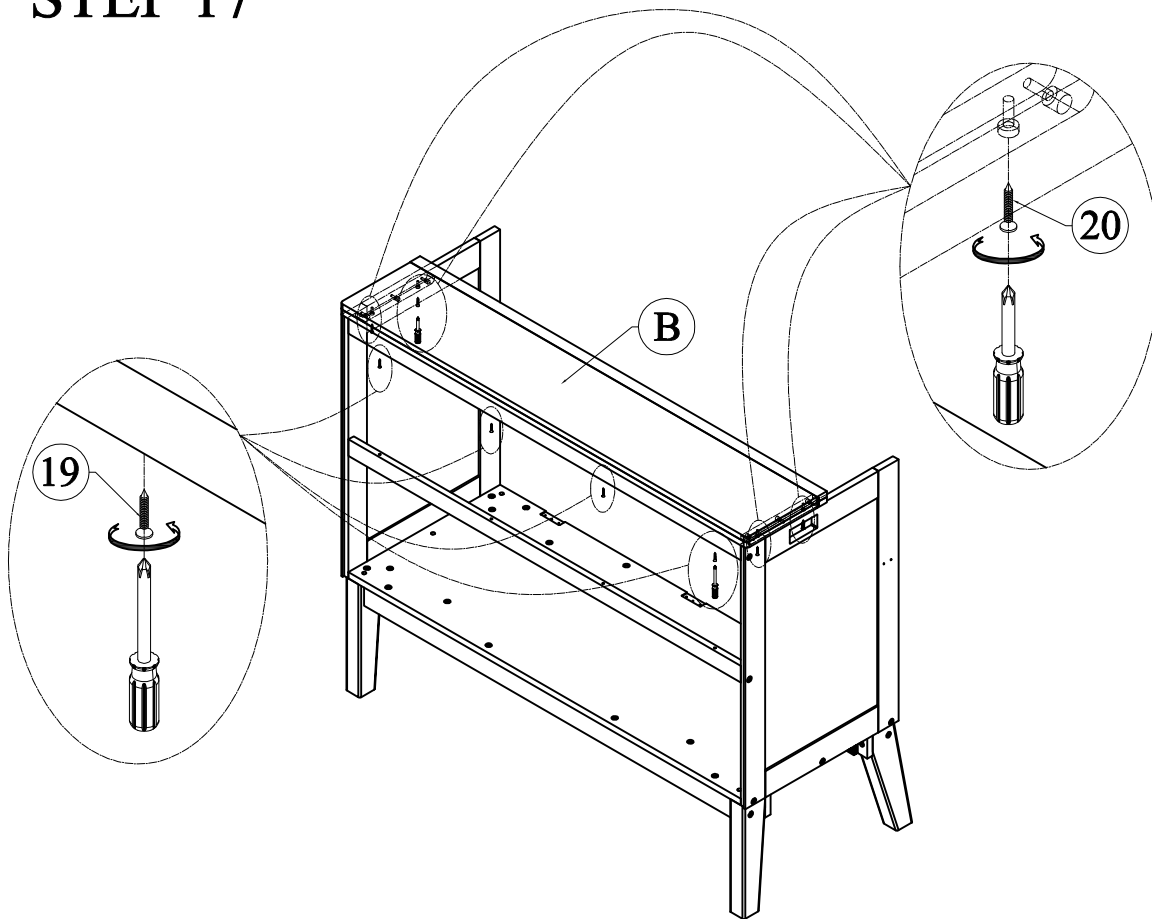


STEP 18

22




Round wood crews
M3.5 * 15 - 28pcs

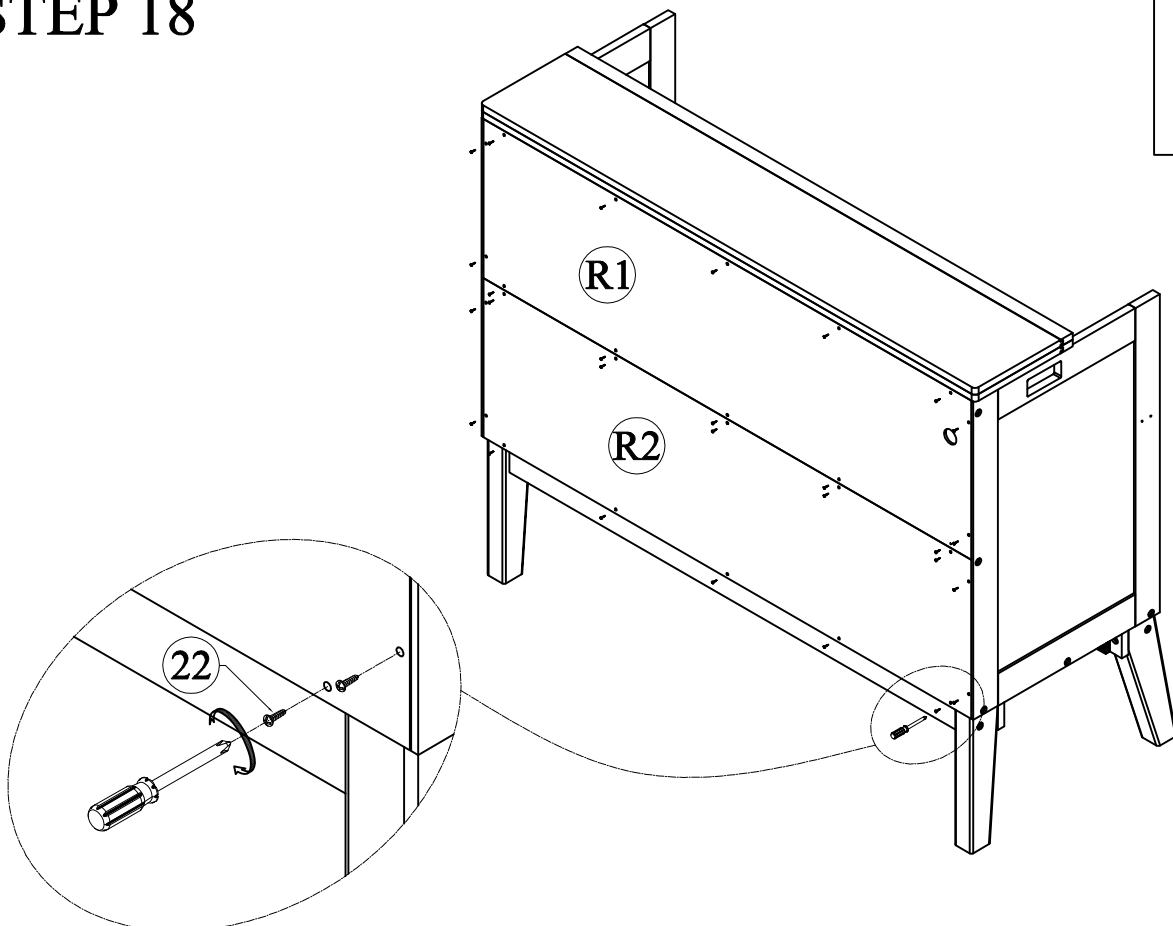

STEP 19

10





Hinge - 6pcs

21




Wood crews
M3.5 * 15 - 36pcs

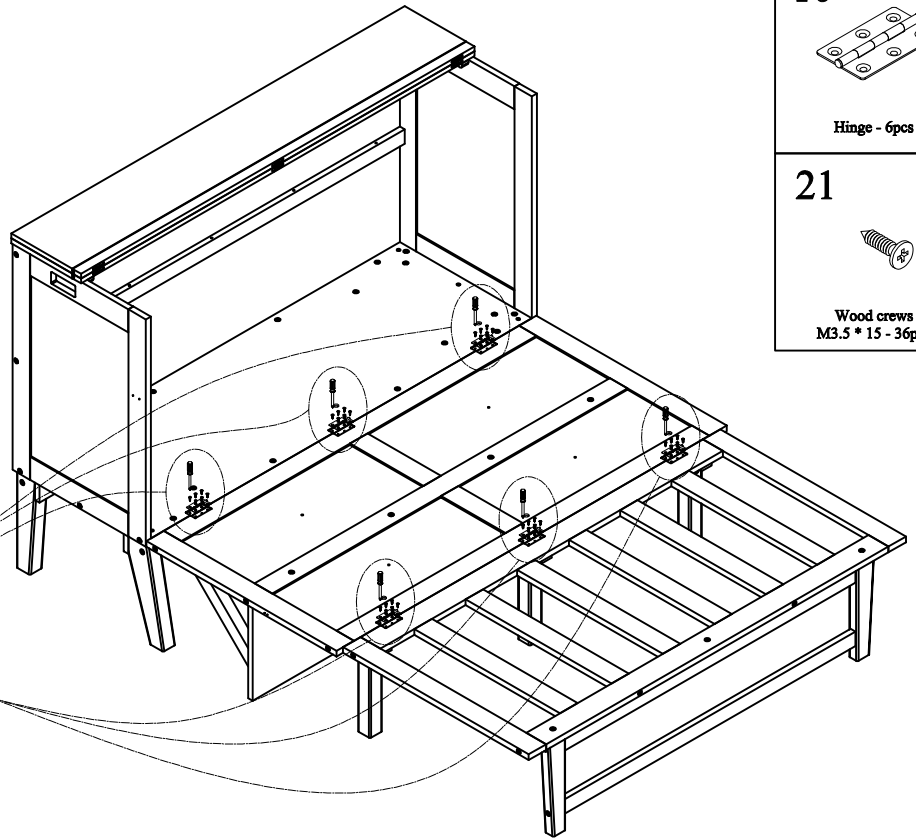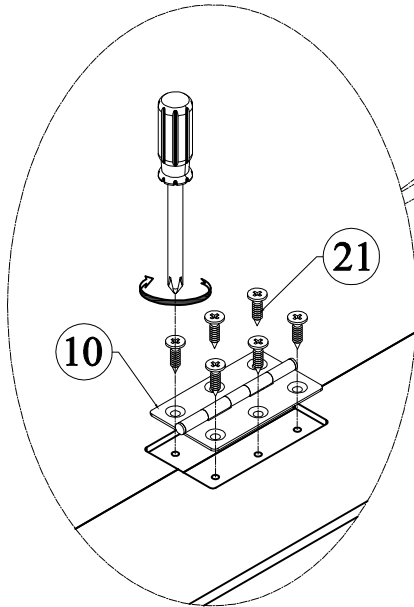

STEP 20

111



Duckbill lock A - 2pcs

12






Duckbill lock B - 2pcs



21




Wood crews
M3.5 * 15 - 8pcs

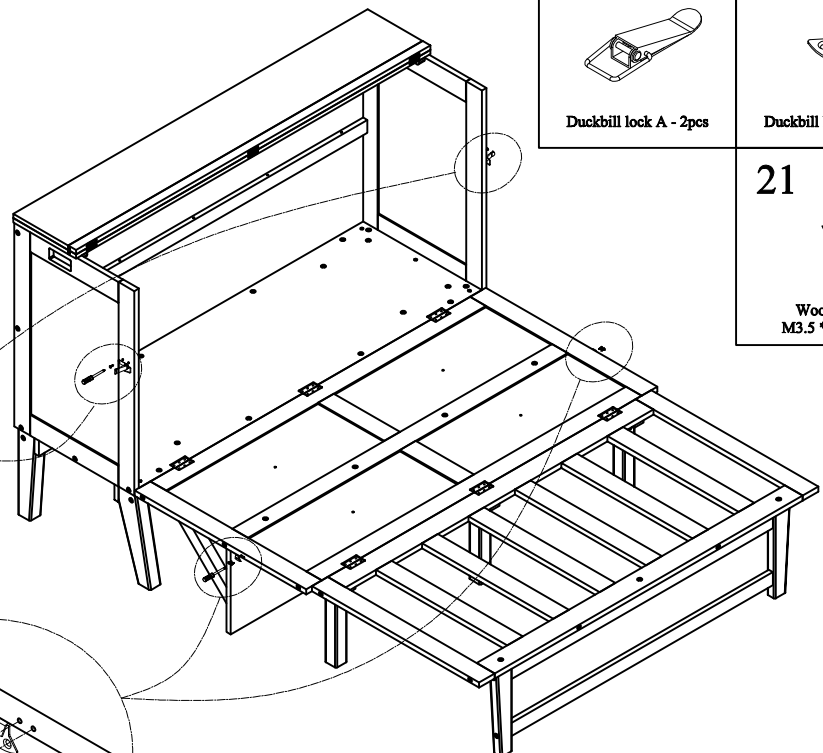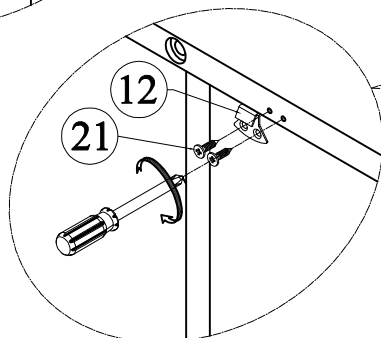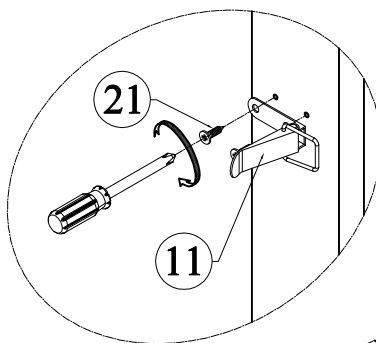

STEP 21

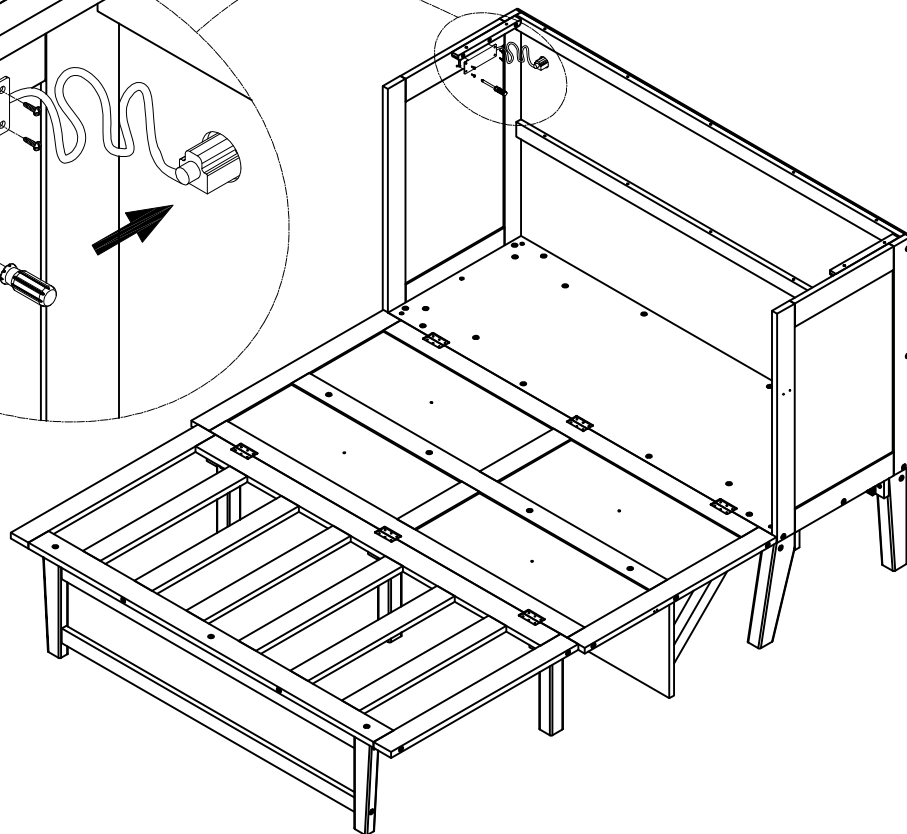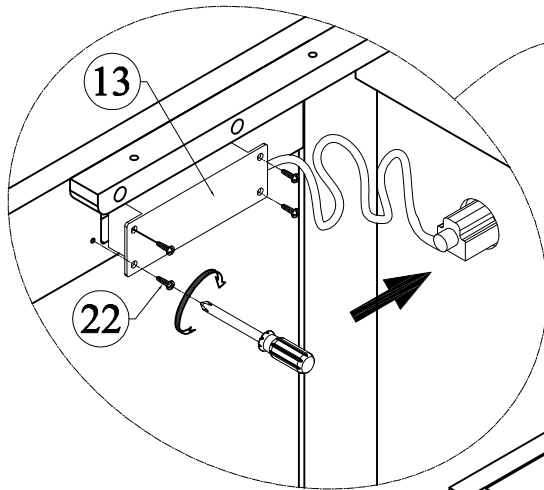

13





Power outlet - 1pc

22



Round wood crews
M3.5 * 15 - 4pcs


STEP 22

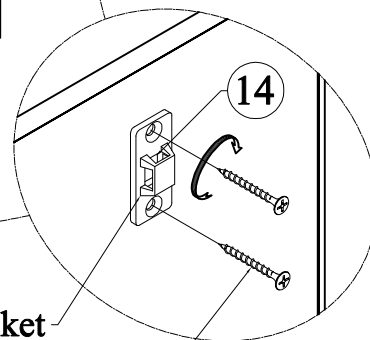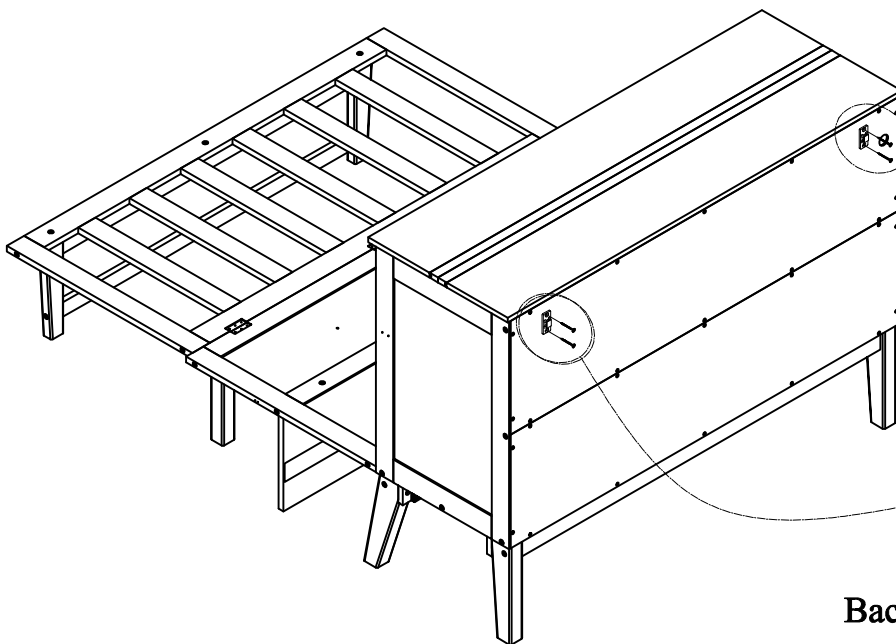

Bucket


Wood crews M4x20

14

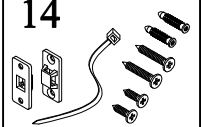


Anti-tip Kit - 2sets


STEP 23

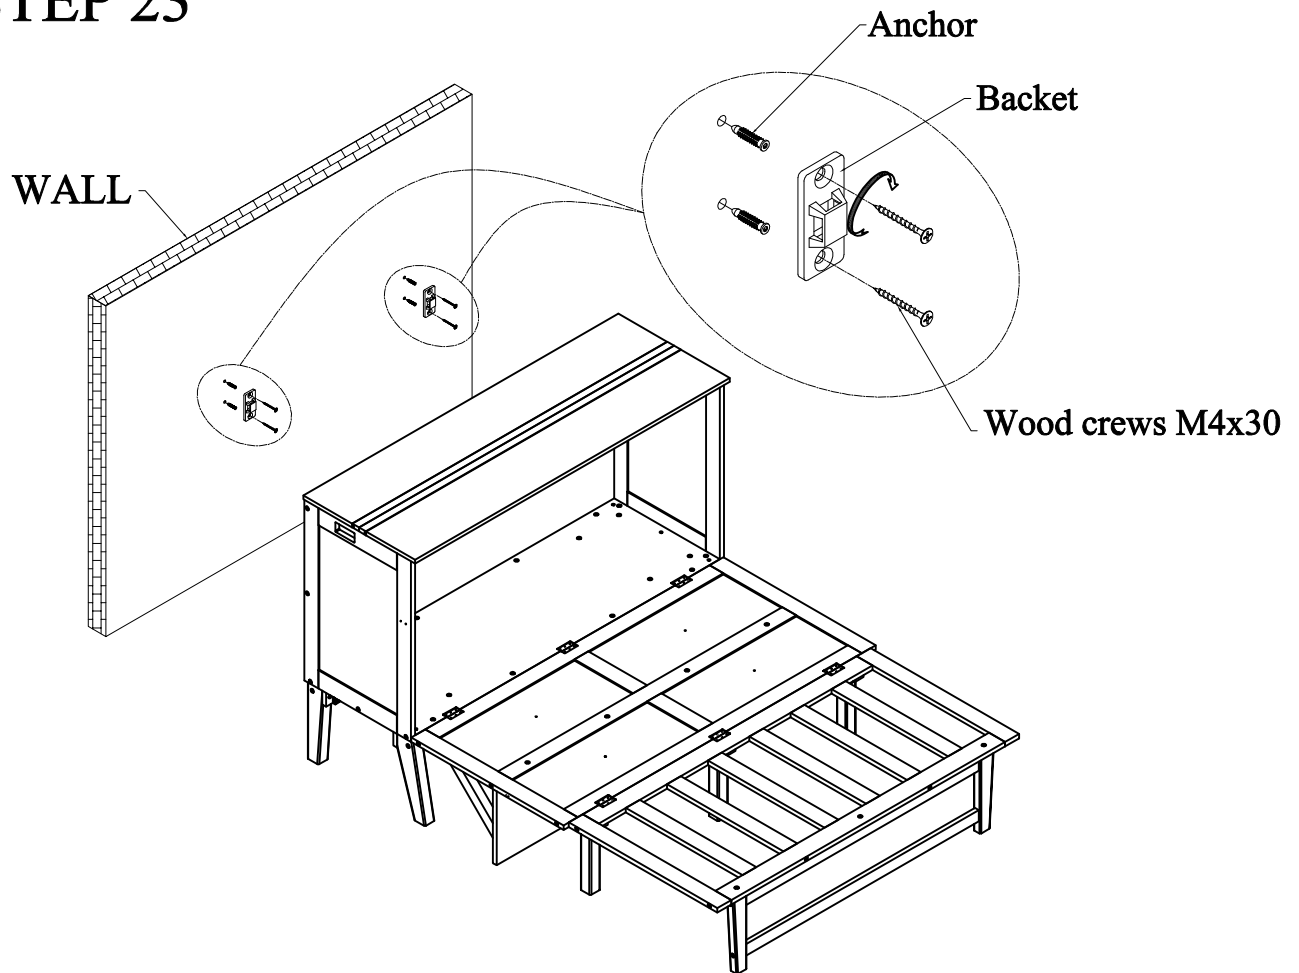

STEP 24

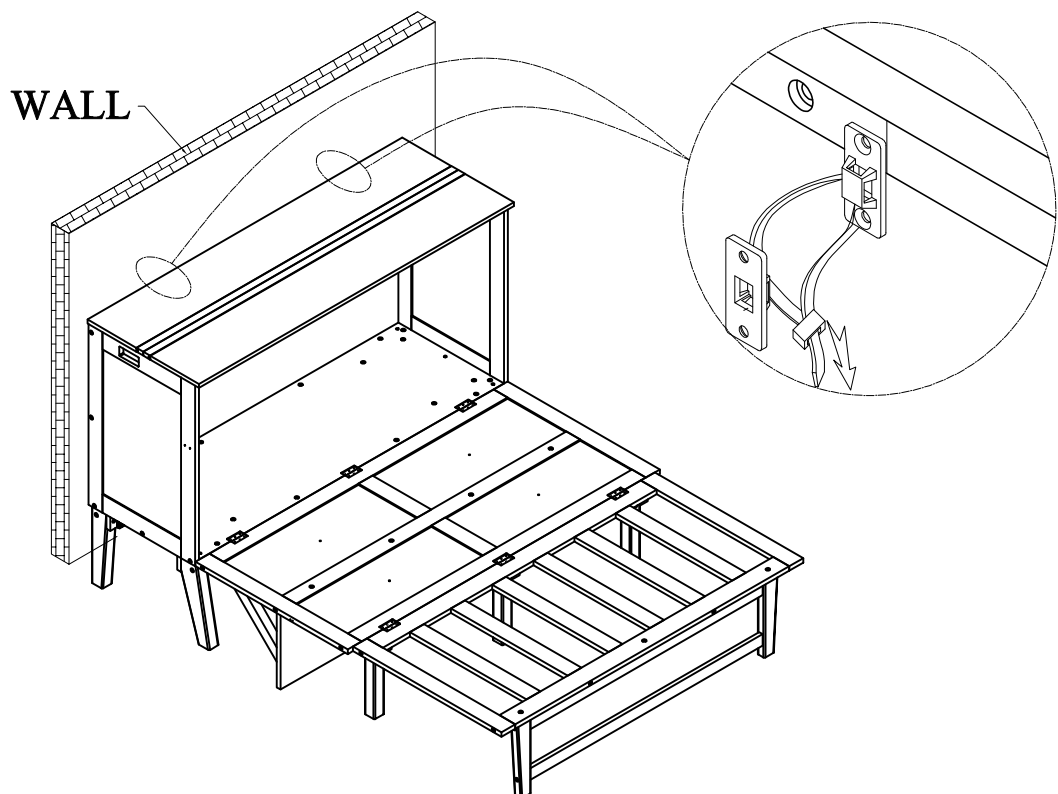


STEP 25

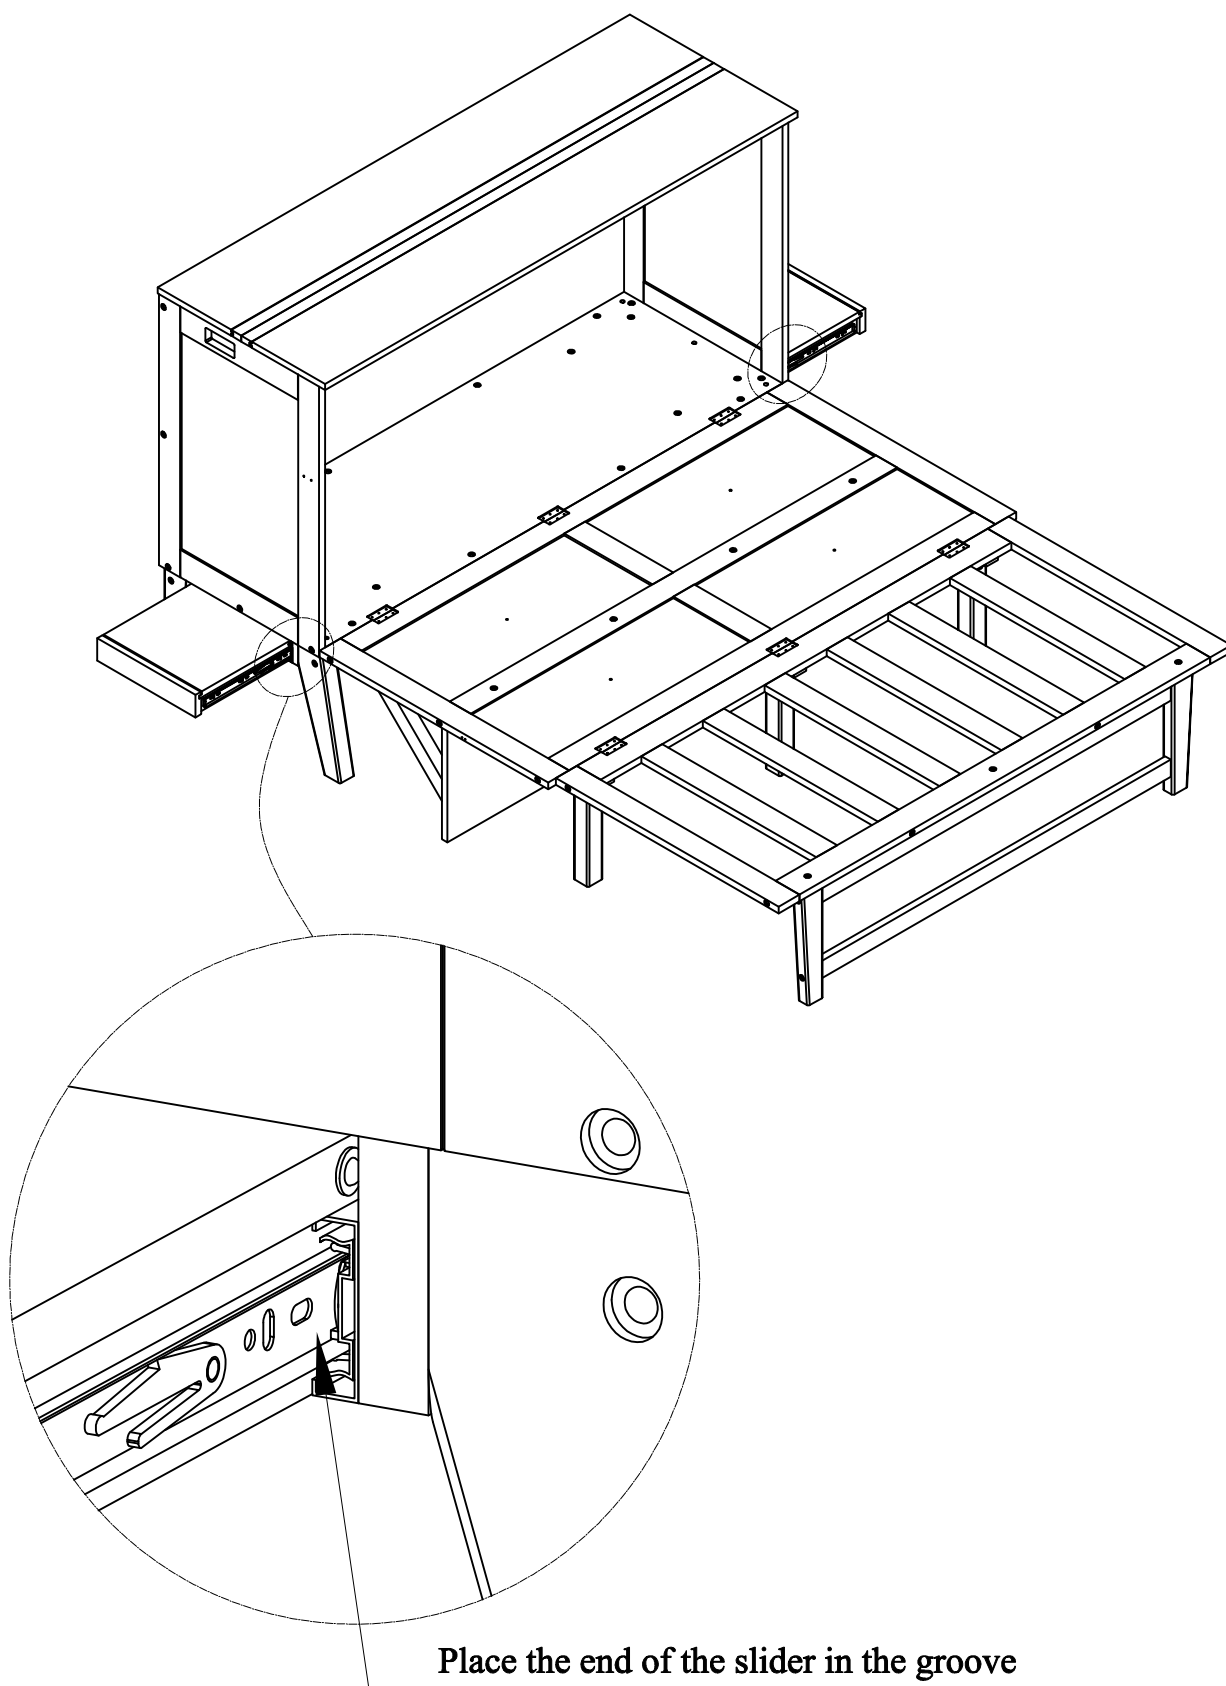


Place the end of the slider in the groove
before pushing it in

STEP 26

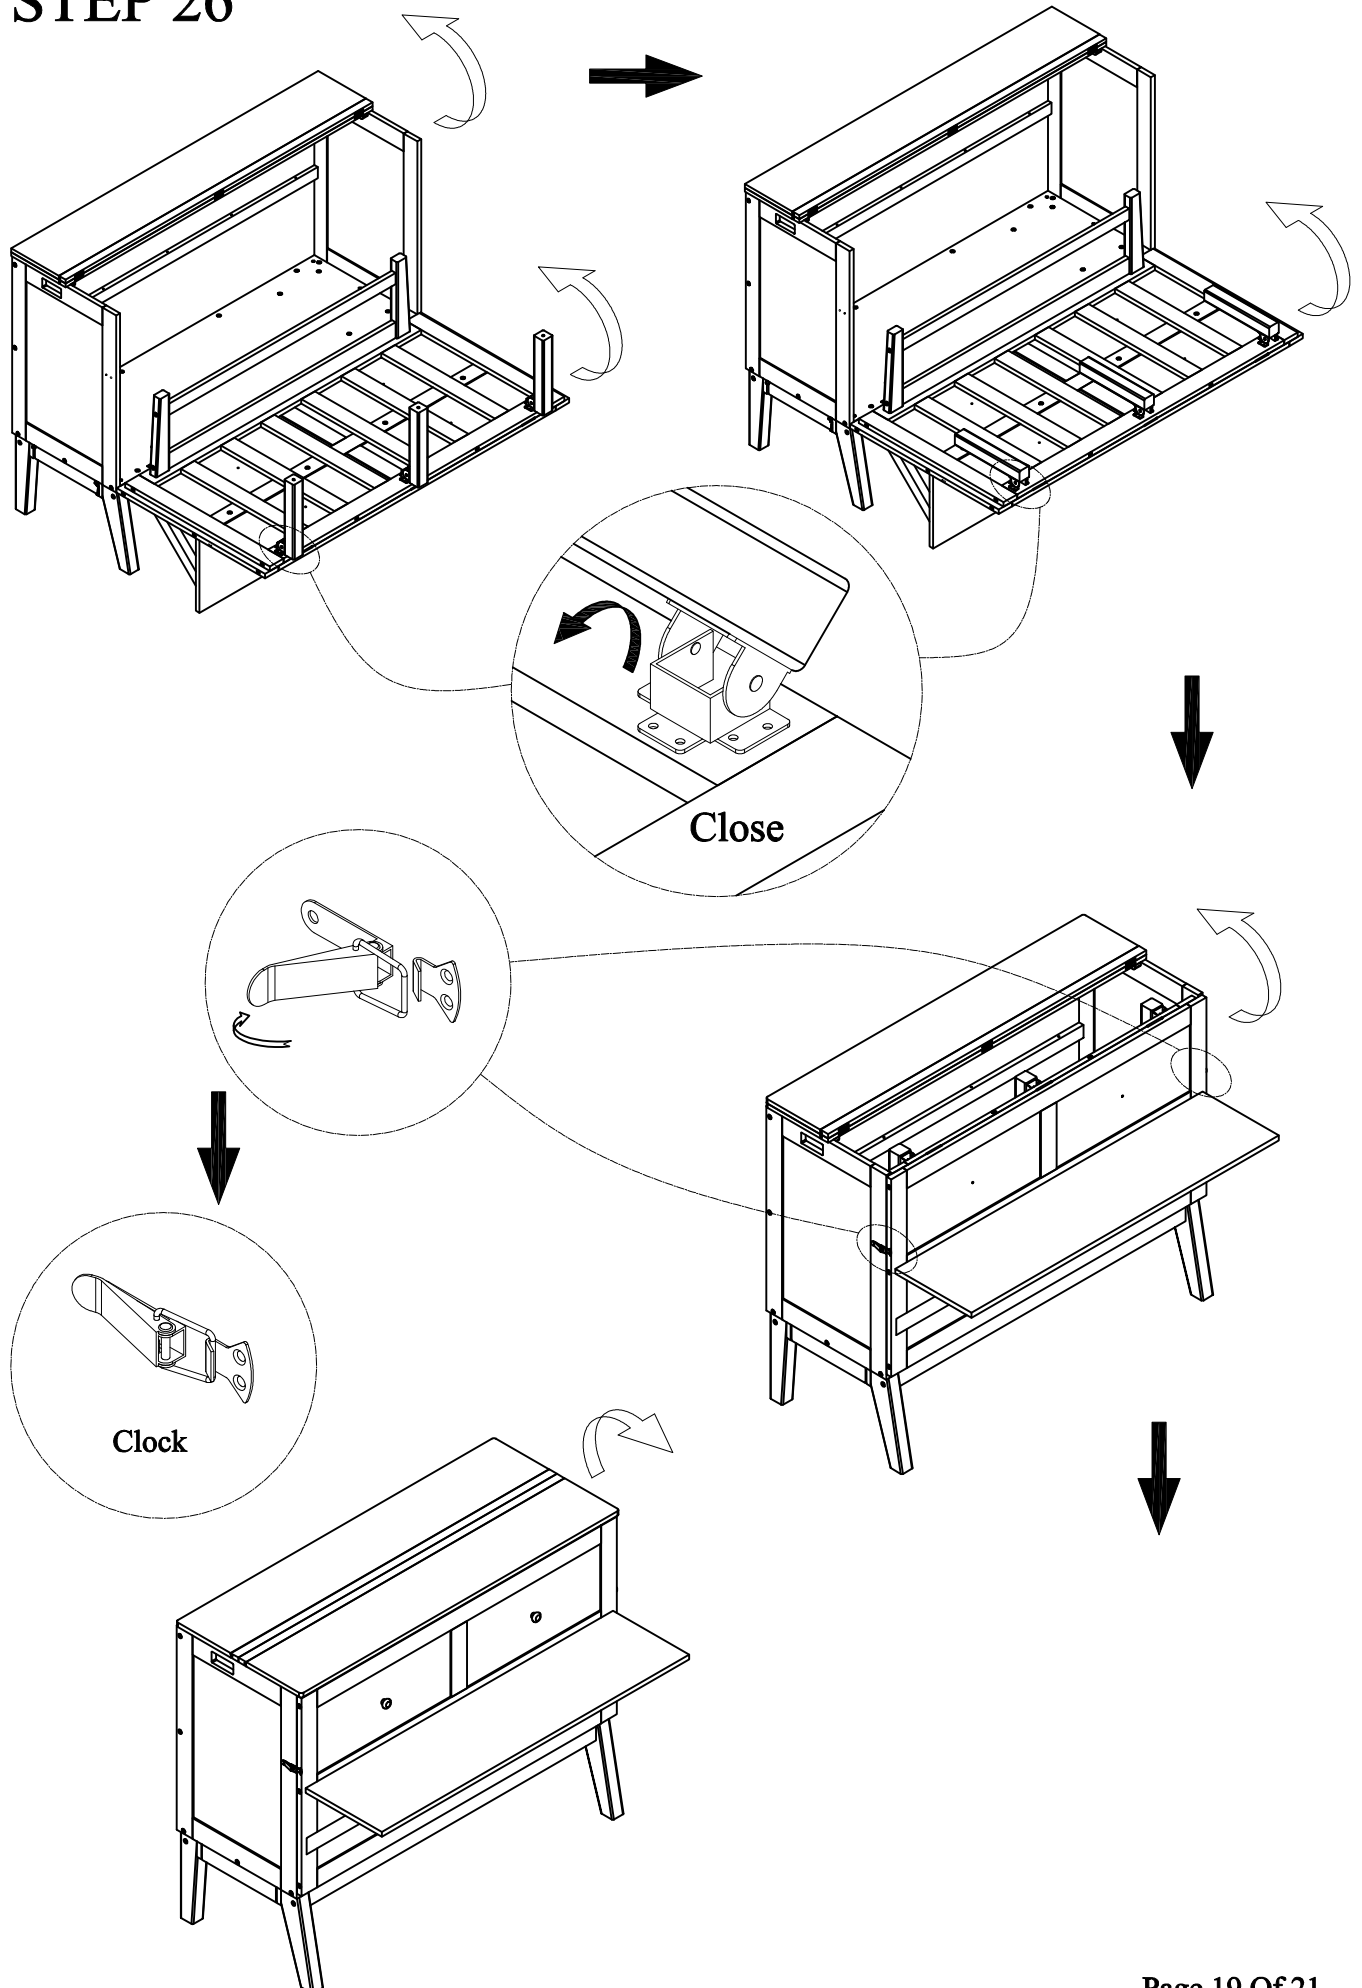

STEP 27

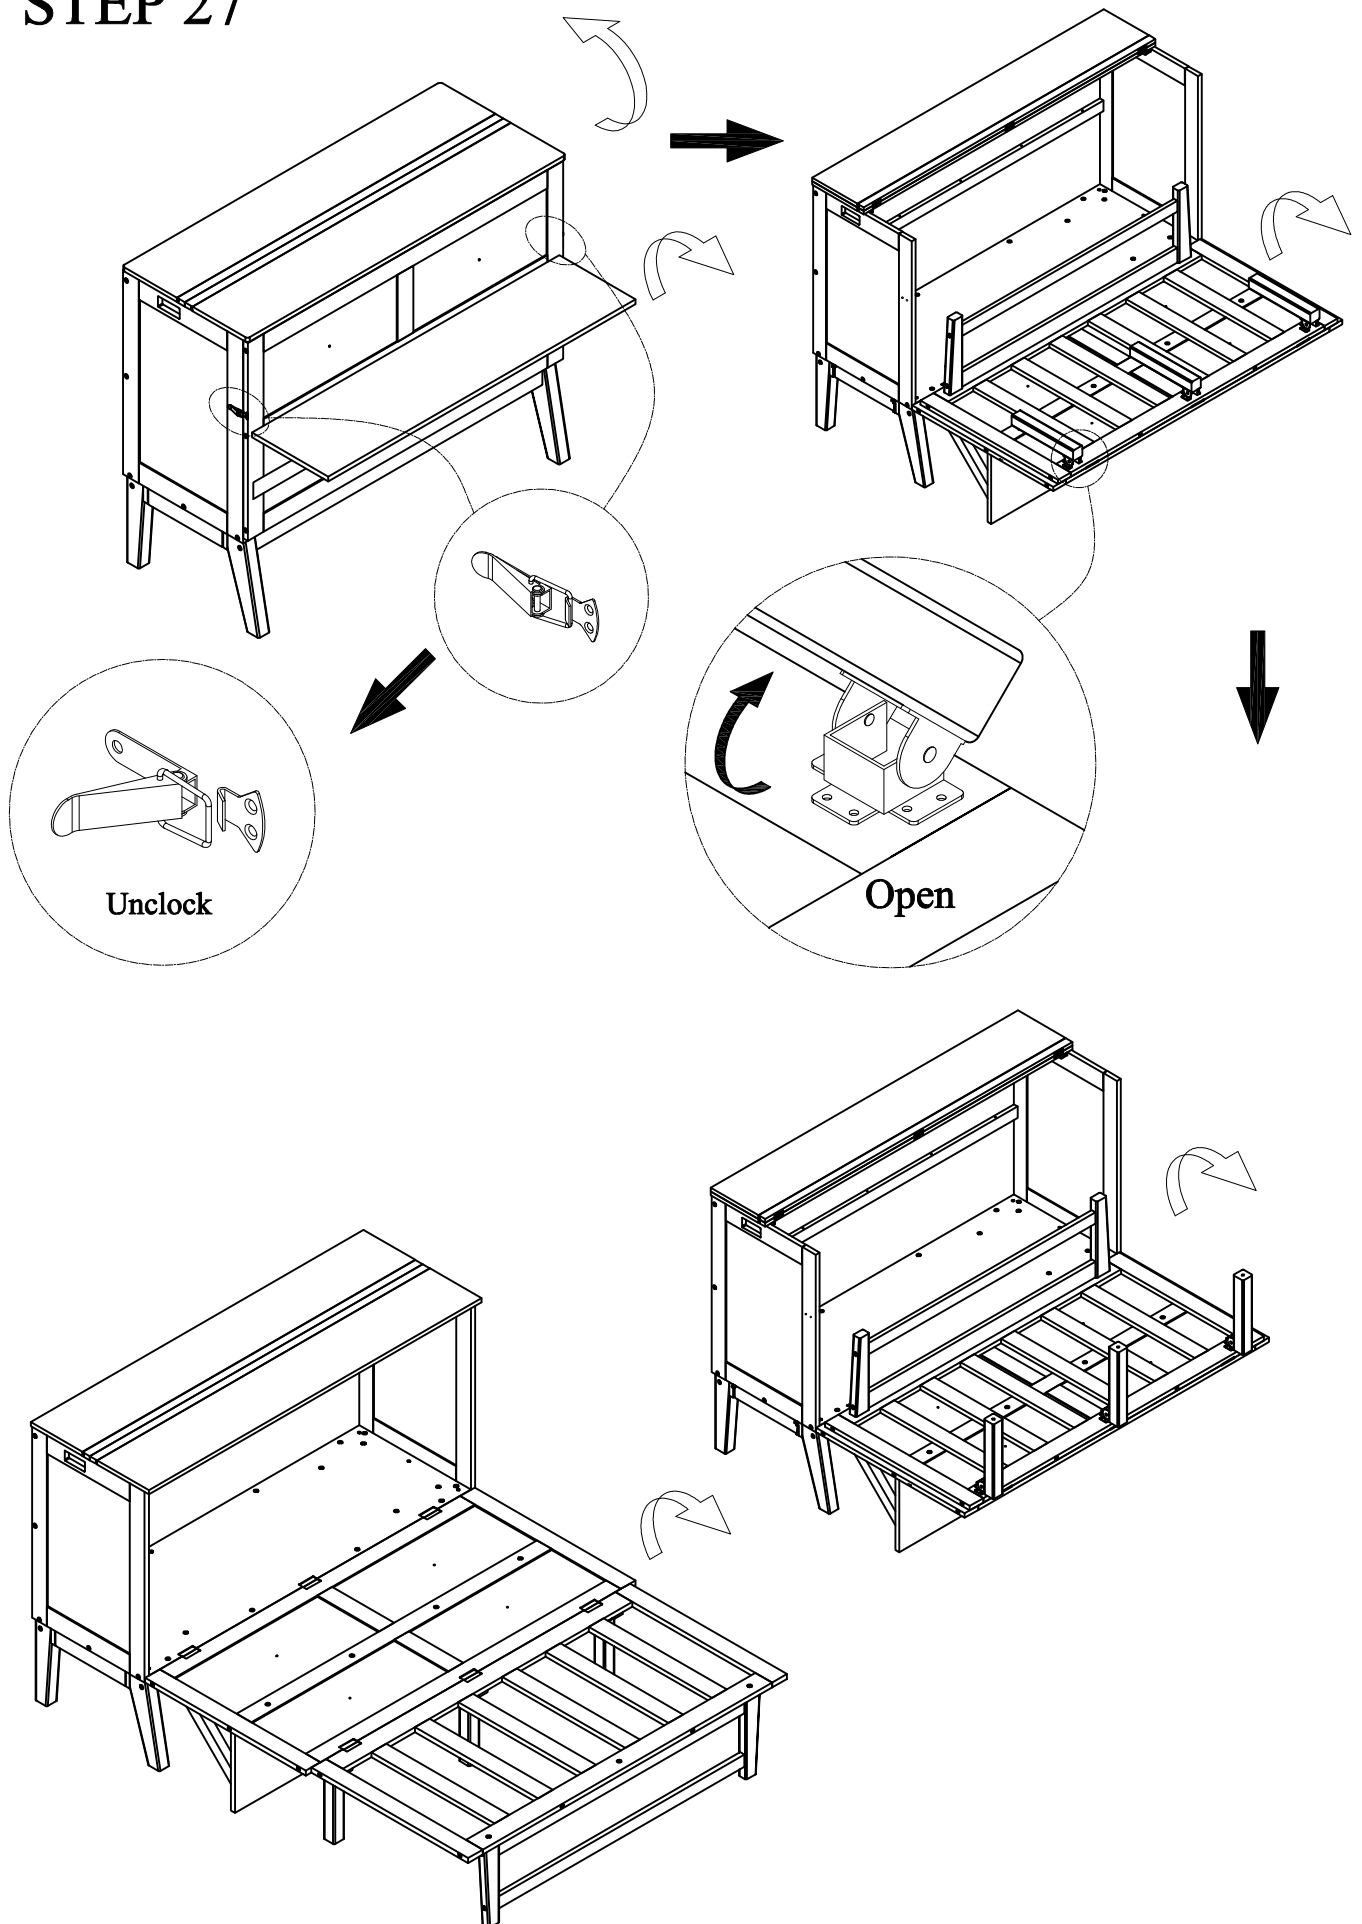

COMPLETED

