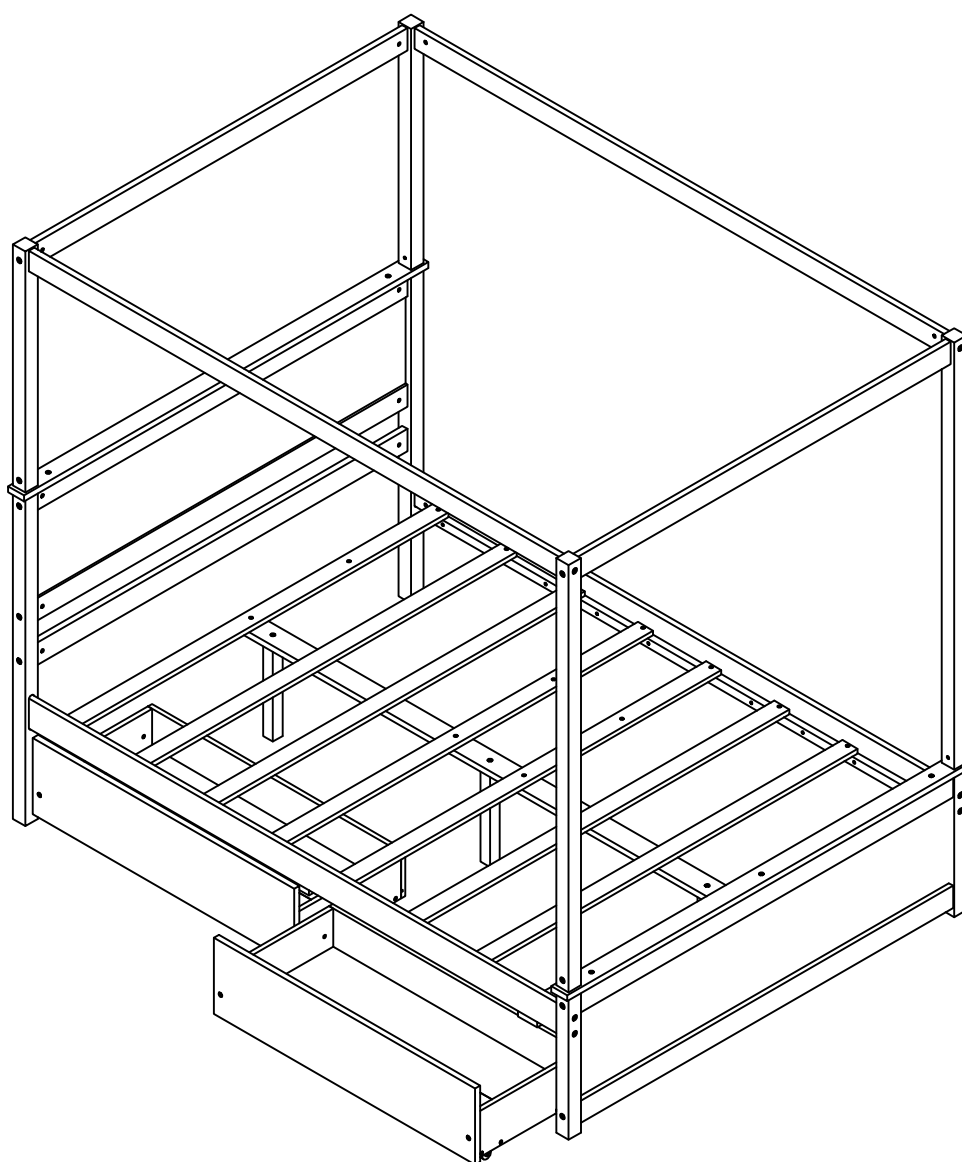



ASSEMBLY INSTRUCTIONS

FULL BED WITH 2 DRAWERS
























WF303304

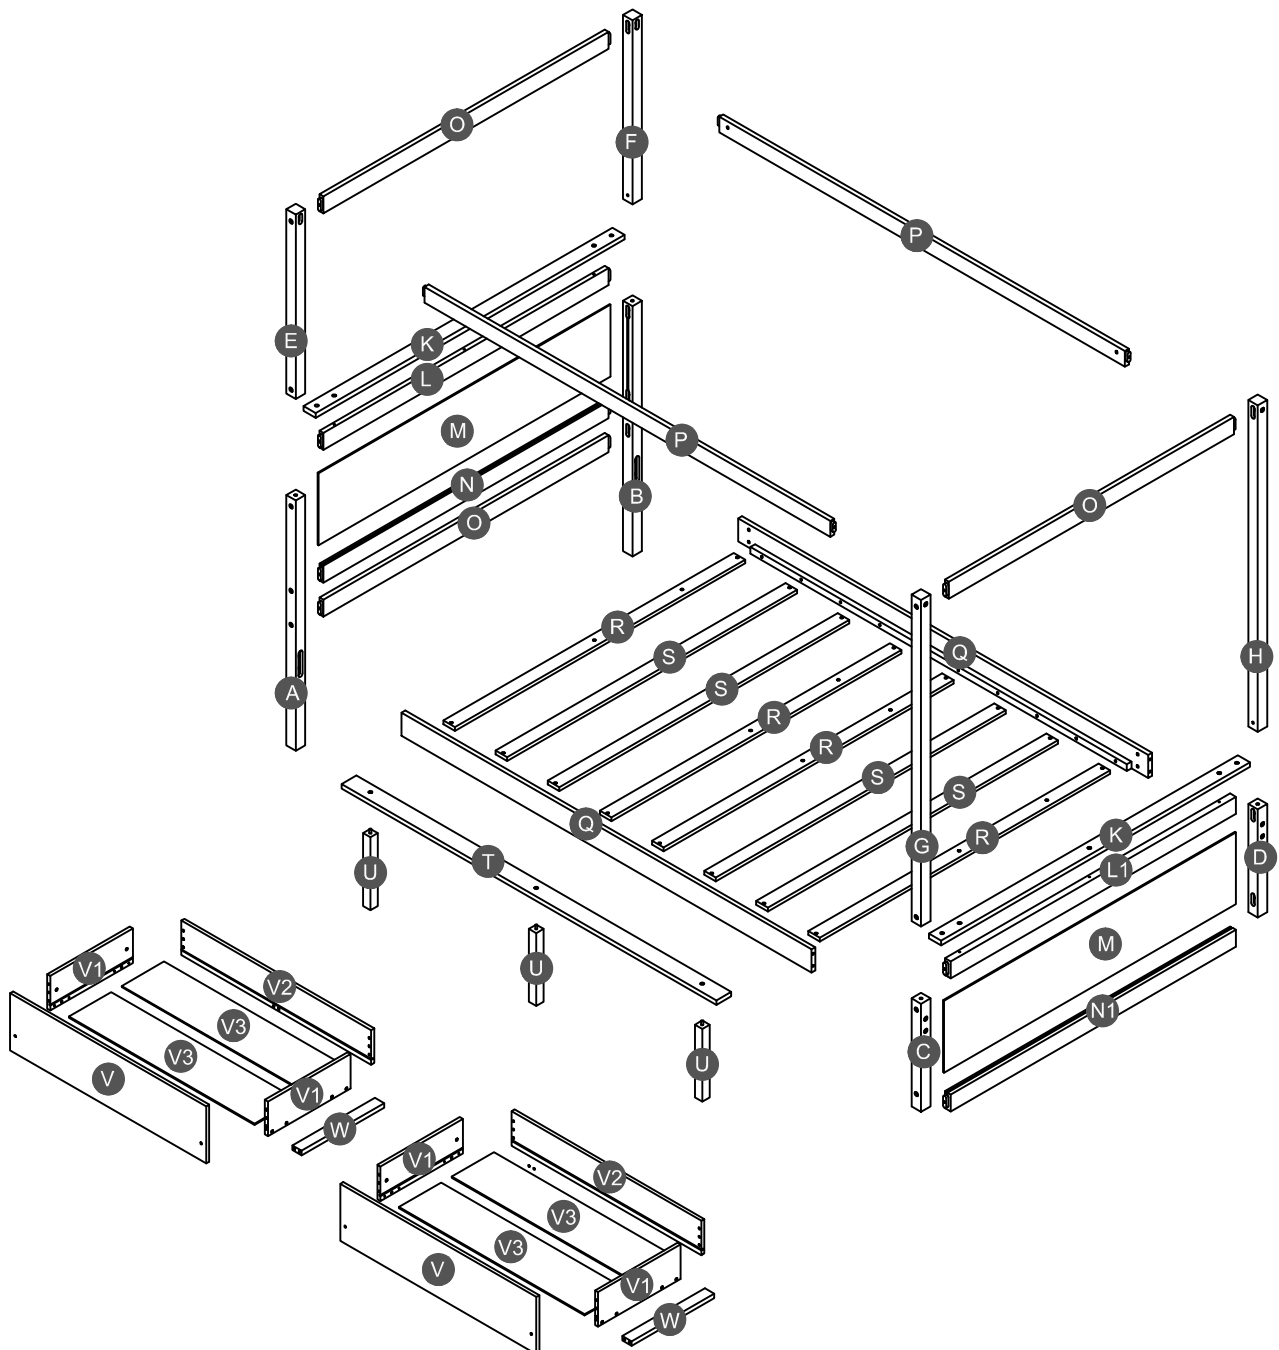Detail View










Part List


WF303304

A  Lower leg left front - 1pc	B  Lower leg left back - 1pc	C  Lower leg right front - 1pc
D  Lower leg right back - 1pc	E  Upper leg left front - 1pc	F  Upper leg left back - 1pc
G  Upper leg right front - 1pc	H  Upper leg right back - 1pc	K  Cap for lower HB&FB - 2pcs
L  Horizontal bar HB - 1pc	L1  Horizontal bar FB - 1pc	M  Lower side panel HB-FB - 2pcs
N  Horizontal bar HB- 1pc	N1  Horizontal bar FB- 1pc	O  Horizontal bar - 3pcs
P  Upper horizontal bar - 2pcs	Q  Side rail - 2pcs	R  Slats - 4pcs
S  Slats - 4pcs	T  Lower support slat - 1pc	U  Leg support - 3pcs
V  Front drawer panel - 2pcs	V1  Left / right drawer panel - 4pcs	V2  Back drawer panel - 2pcs
V3  Drawer bottom - 4pcs	W  Support drawer - 2pcs	

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (4pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)
7  (Ø10)1/4*95mm Connecting bar (4pcs)	8  Ø4*30mm Wood screws (42pcs)	9  (1/4")4.5*58mm Allen key (1pc)
10  100*20*54mm Wheels (8pcs)	11  70*35*19 mm Drawer stopper (3pcs)	12  Ø8*30mm Wood dowel (24pcs)
13  Ø10*20mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

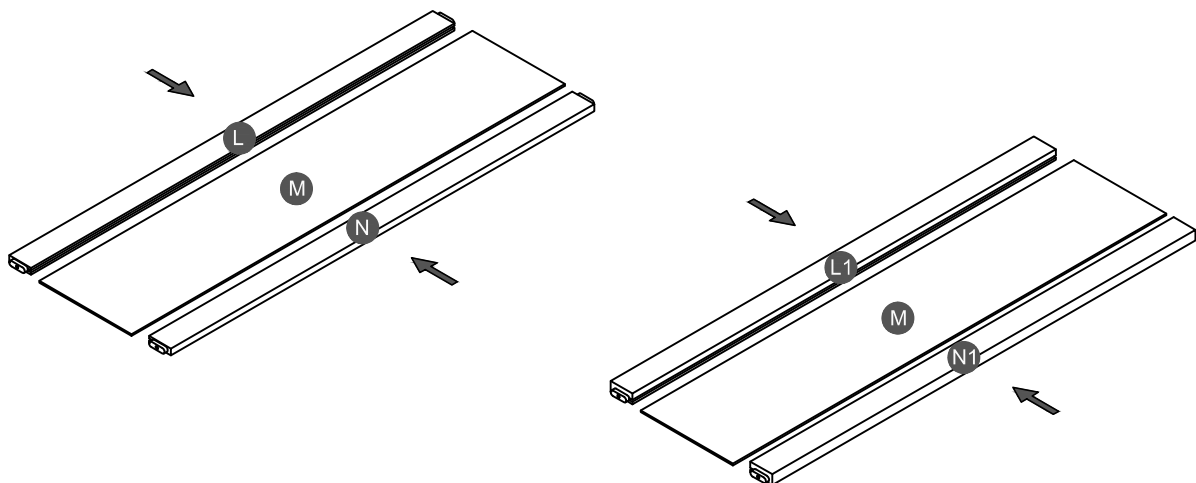STEP 1:




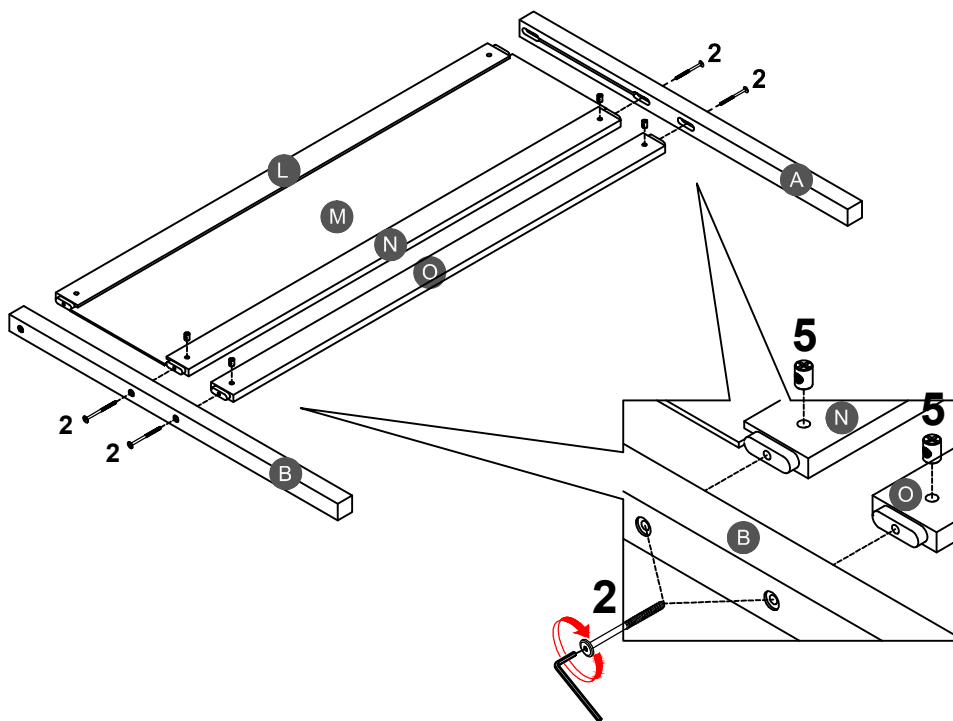STEP 2:




2		5	
4PCS		4PCS	

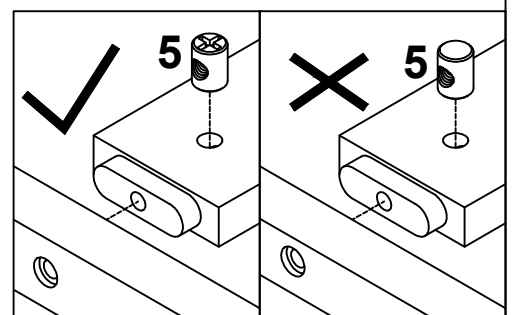Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened




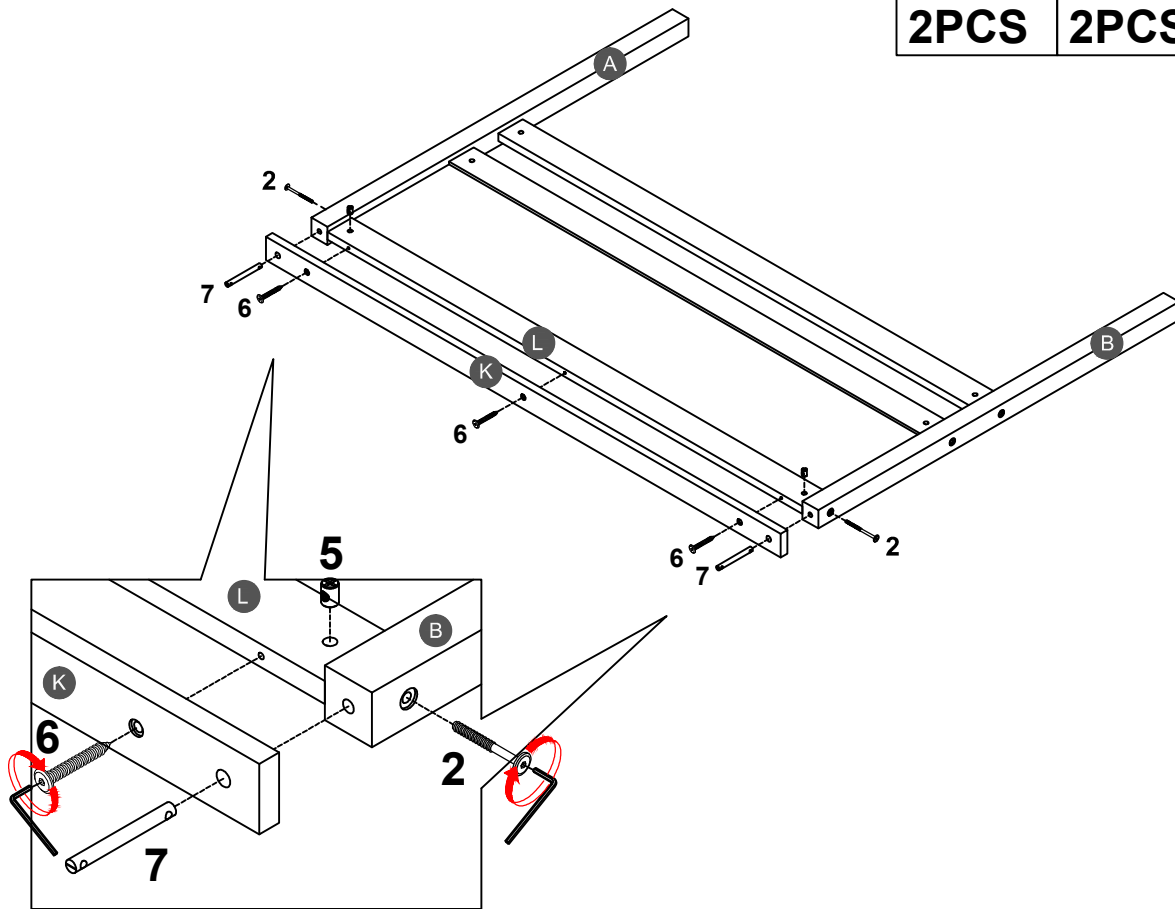STEP 3:




2		5		6	
2PCS		2PCS		3PCS	
				7	
				2PCS	

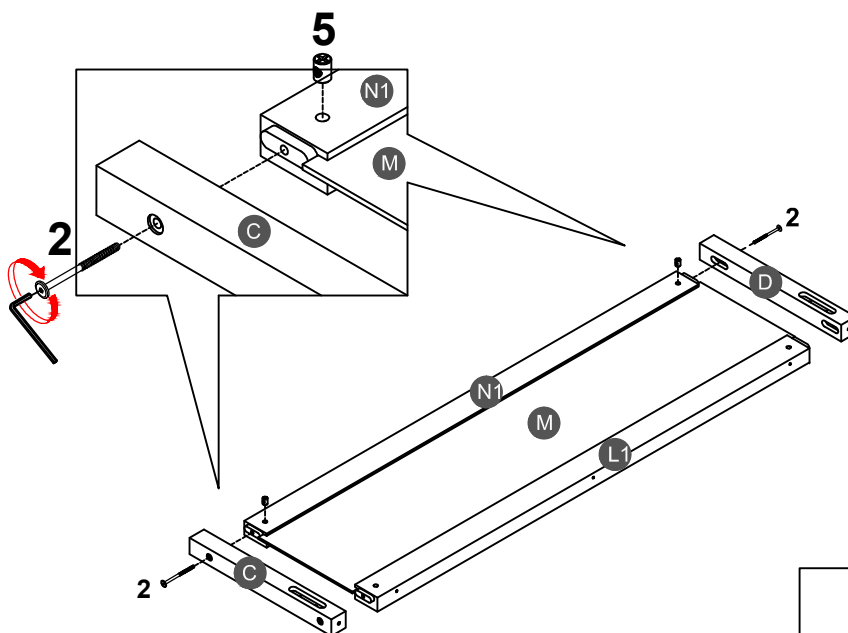STEP 4:





2		5	
2PCS		2PCS	

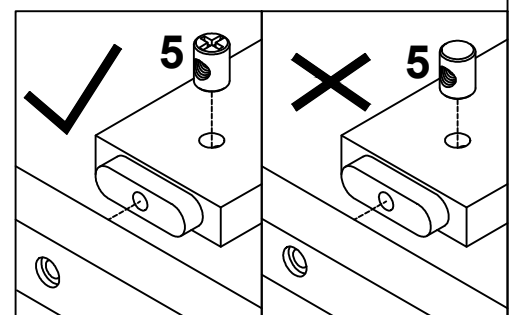Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened




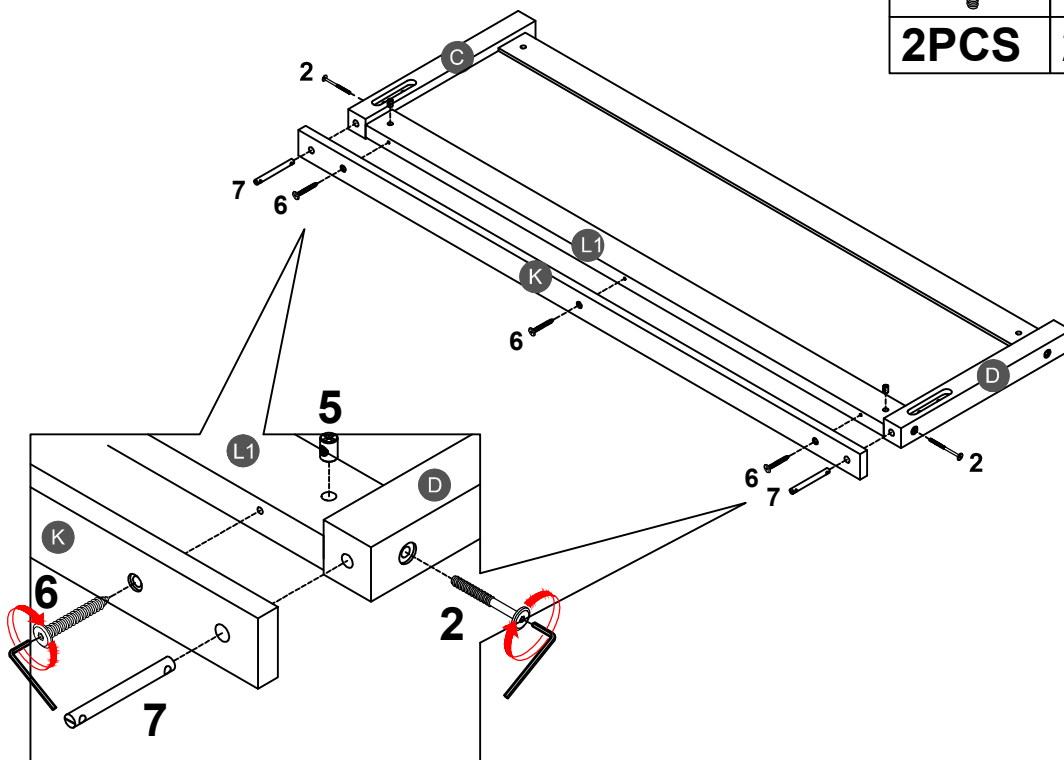STEP 5:



2		5		6	
2PCS		2PCS		3PCS	
			7		
			2PCS		

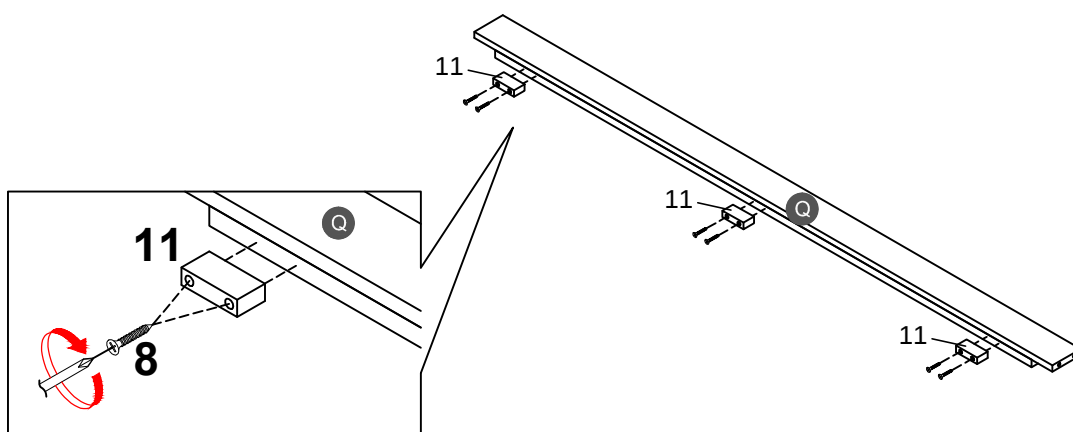STEP 6:




8		11	
6PCS		3PCS	

Drawer stopper (11) with lower side rail front (Q) by using screw (8).


STEP 7:

1		5	
8PCS		8PCS	

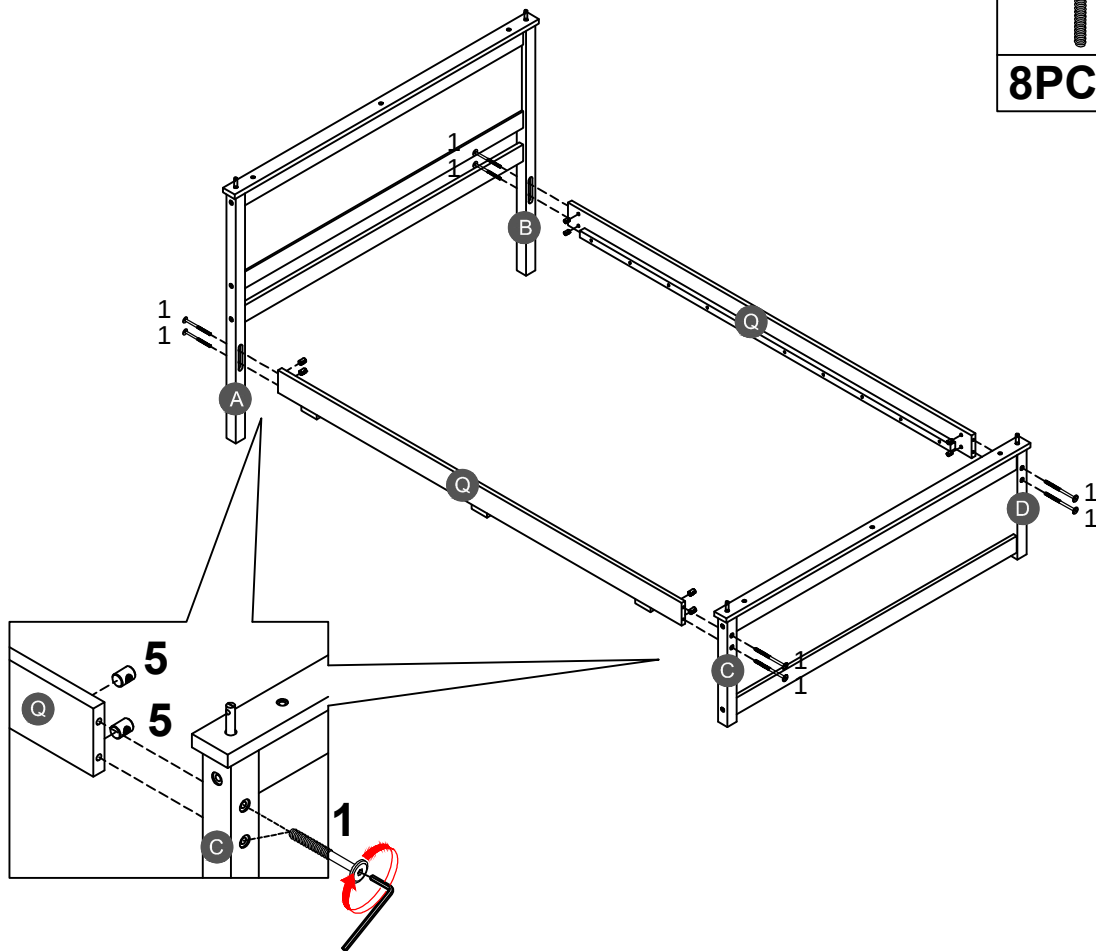


STEP 8:

2		5	
2PCS		2PCS	

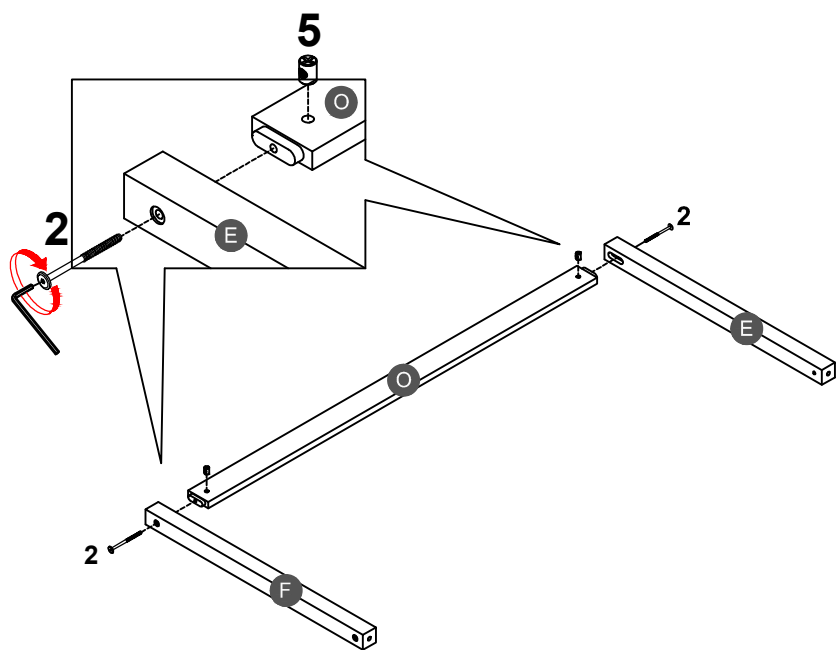


STEP 9:

2		5	
2PCS		2PCS	

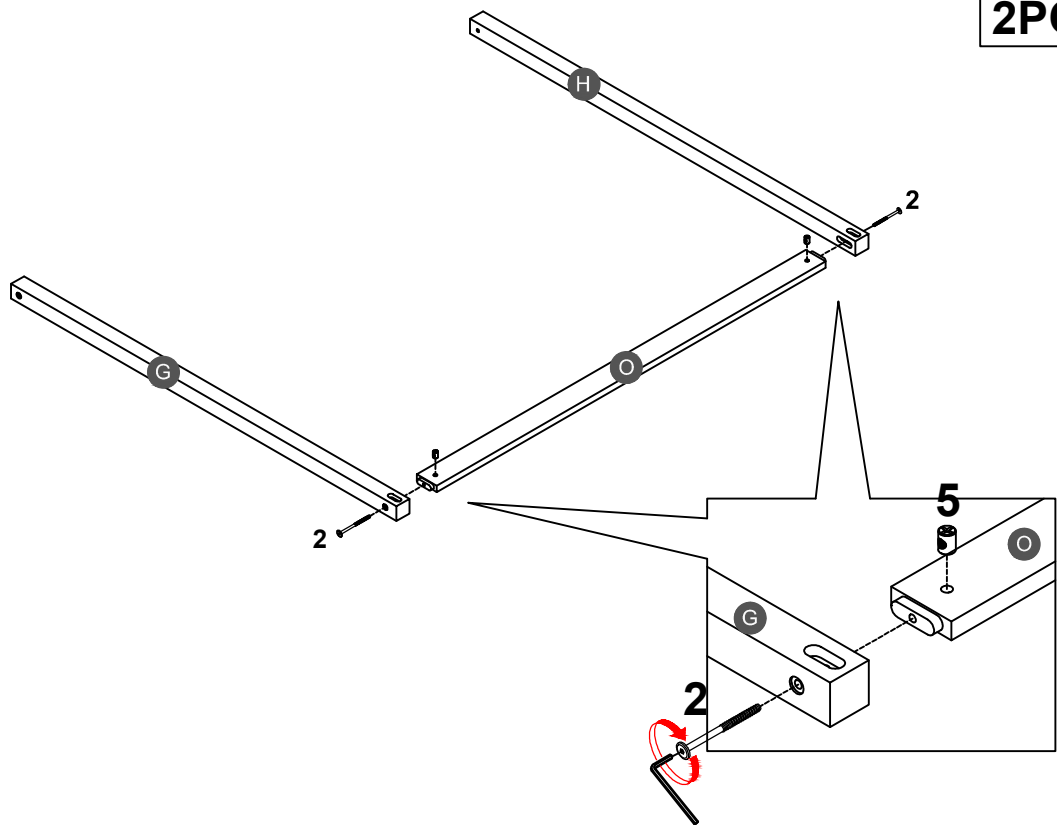

STEP 10:

1		5	
4PCS		4PCS	

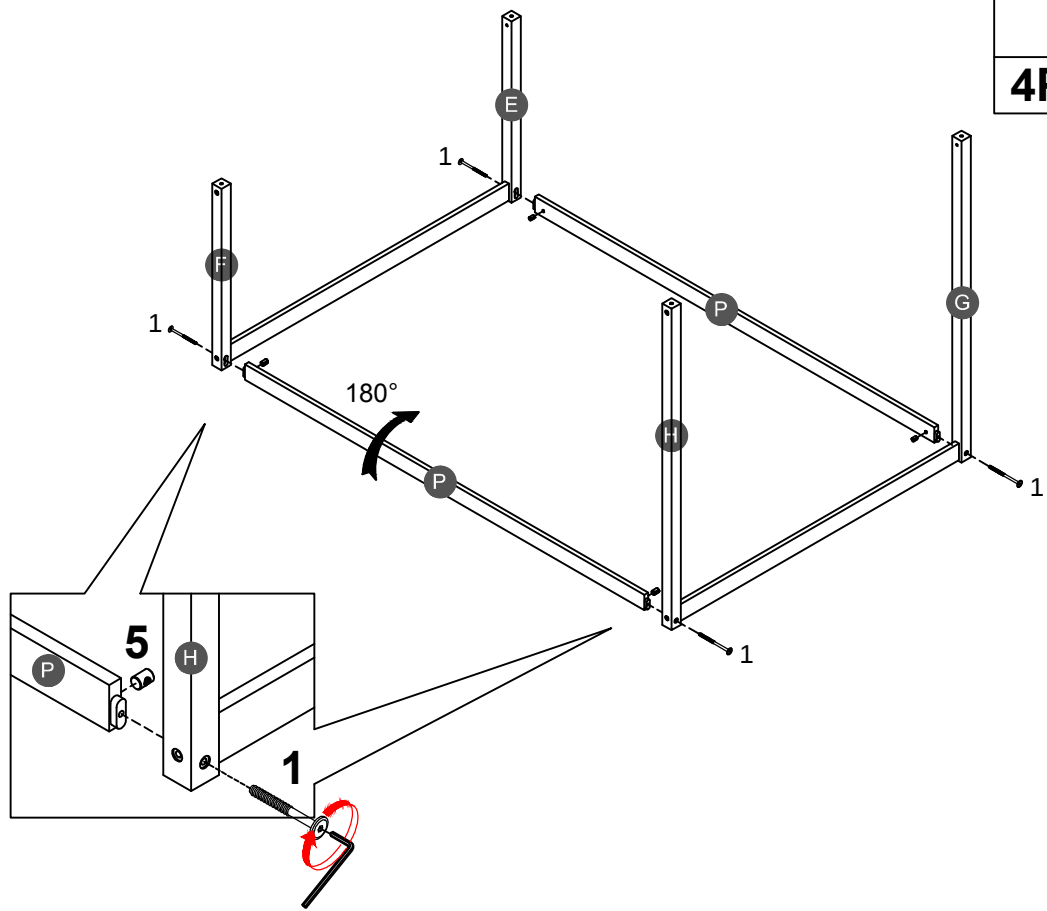


STEP 11:


4



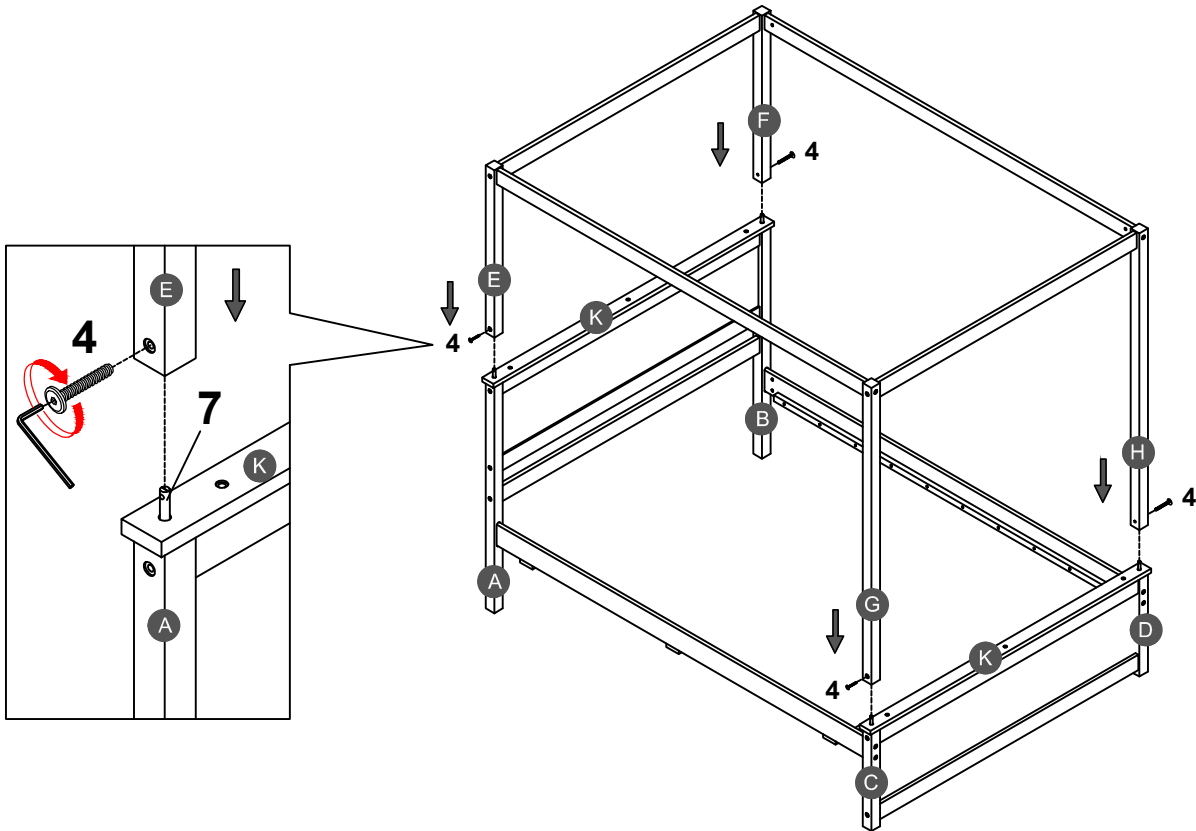4PCS



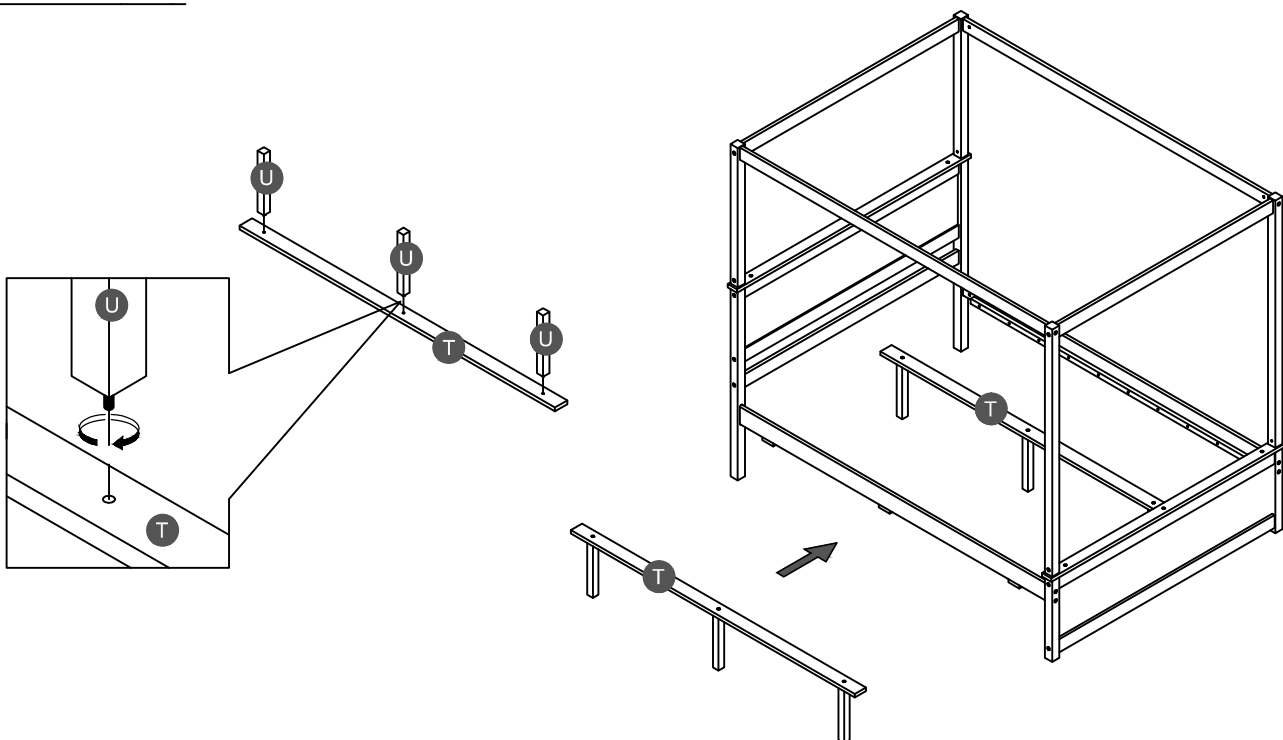STEP 12:




Assembling leg support (U) with lower support slat (T) later rotate, Move support slat inside Full bunkbed.

STEP 13:

8



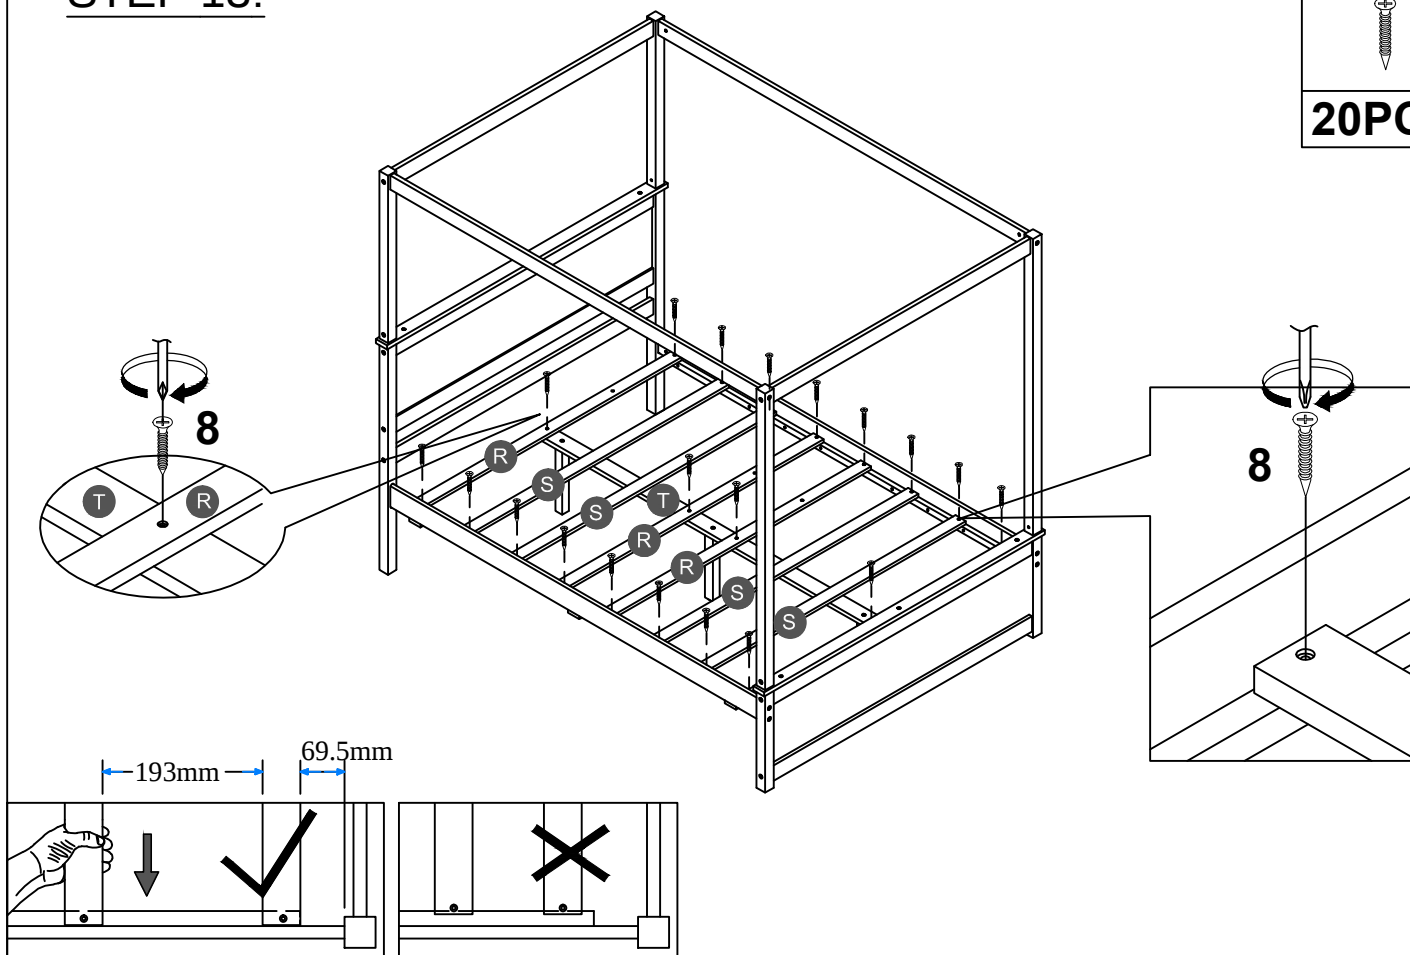
20PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 14:

3



4PCS

5

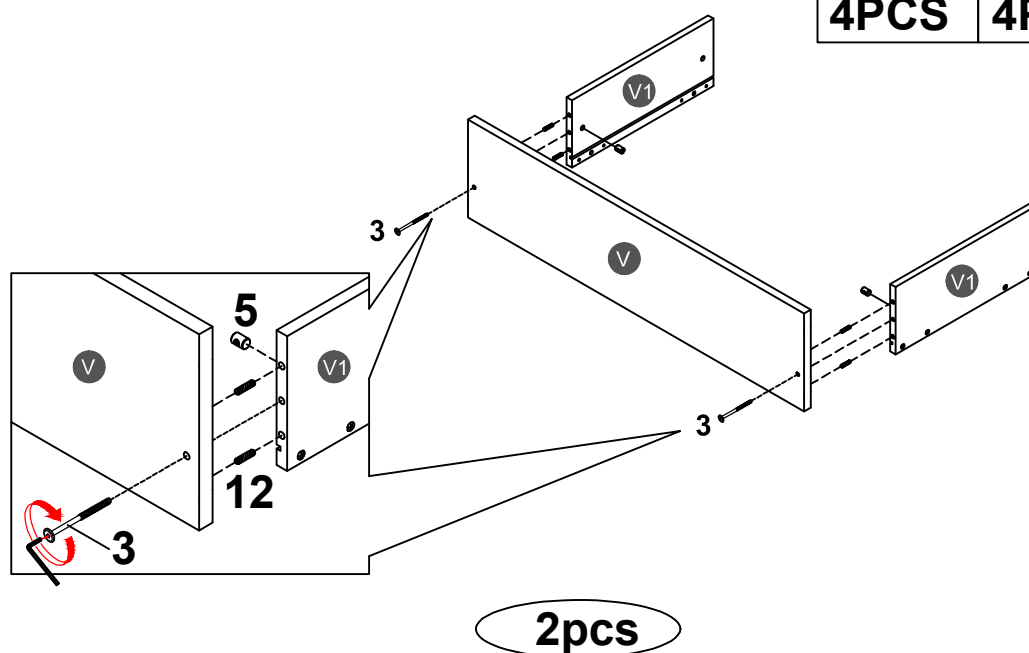


4PCS

12




8PCS



2pcs

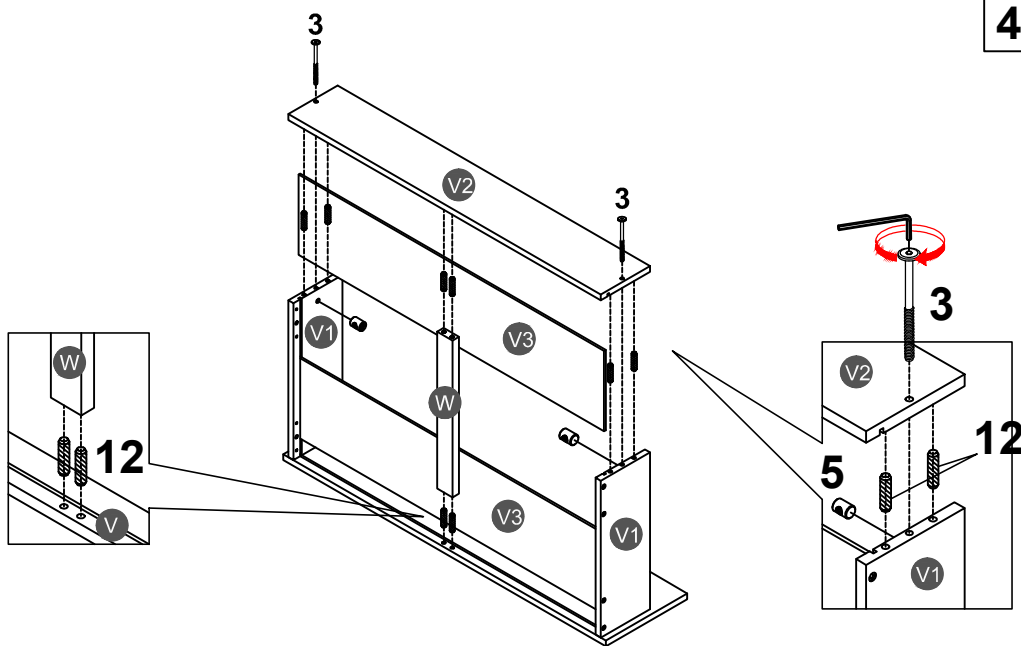
STEP 15:




2pcs

3		5	
4PCS		4PCS	
		12	
		16PCS	

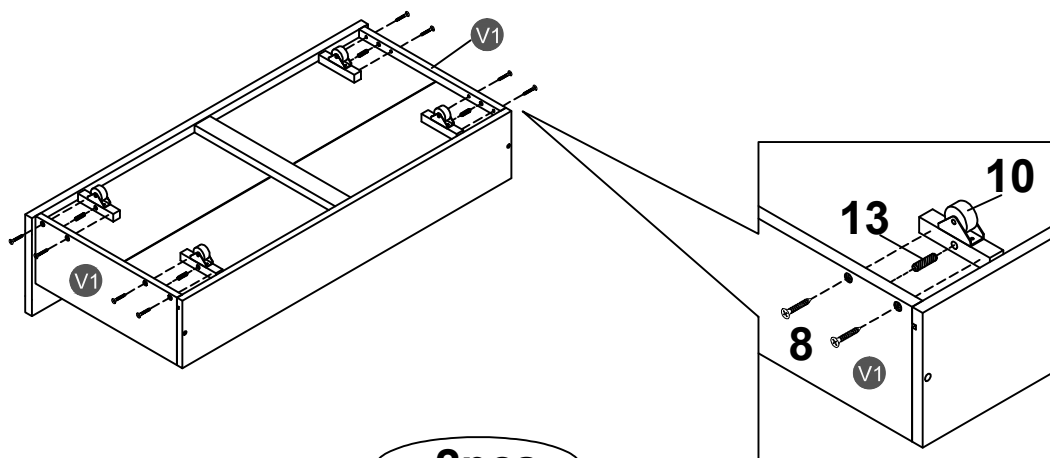
STEP 16:



2pcs

8		10		13	
16PCS		8PCS		8PCS	

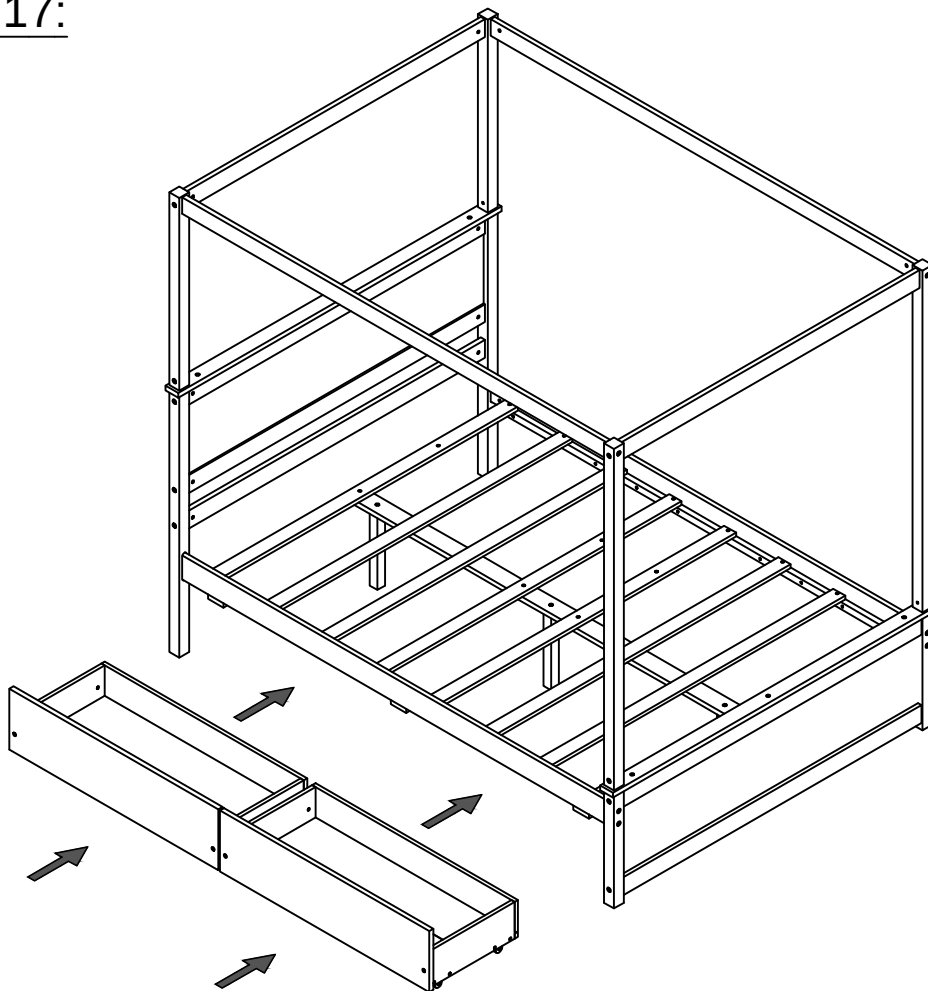STEP 17:



Push Drawer under the bottom of Bunkbed.

