



ASSEMBLY INSTRUCTIONS

TWIN BED WITH BOOKCASE (PB) & TRUNDLE









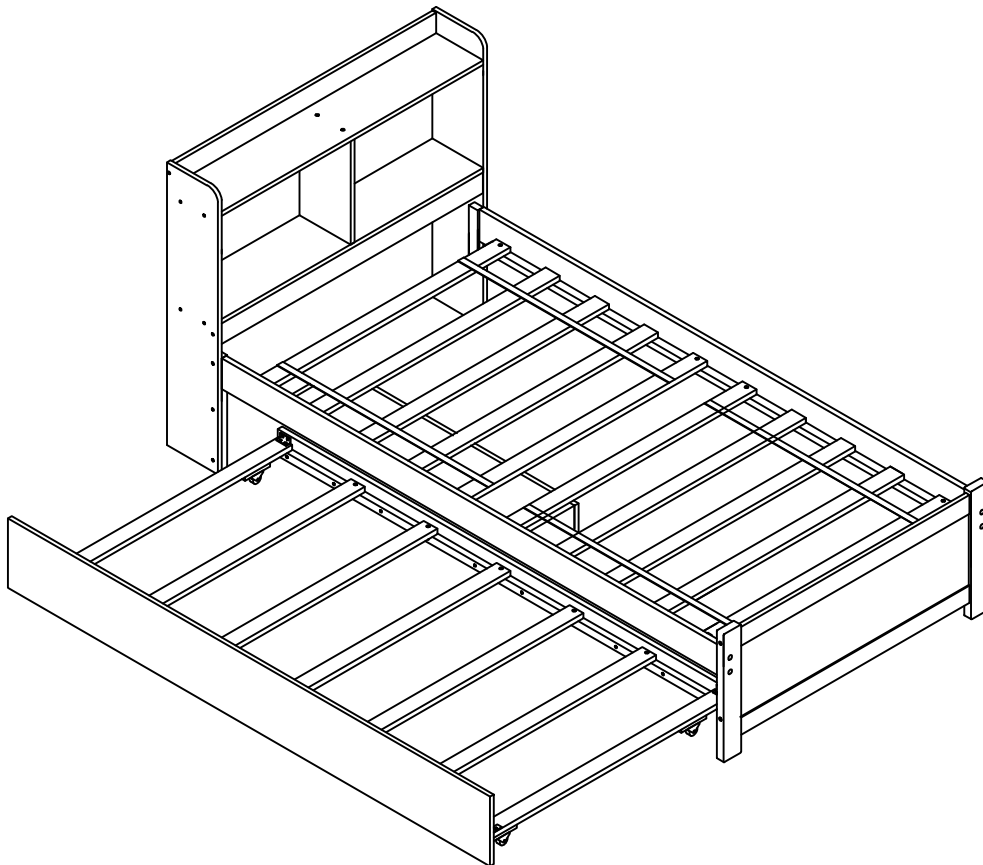


DN11723




Detail View

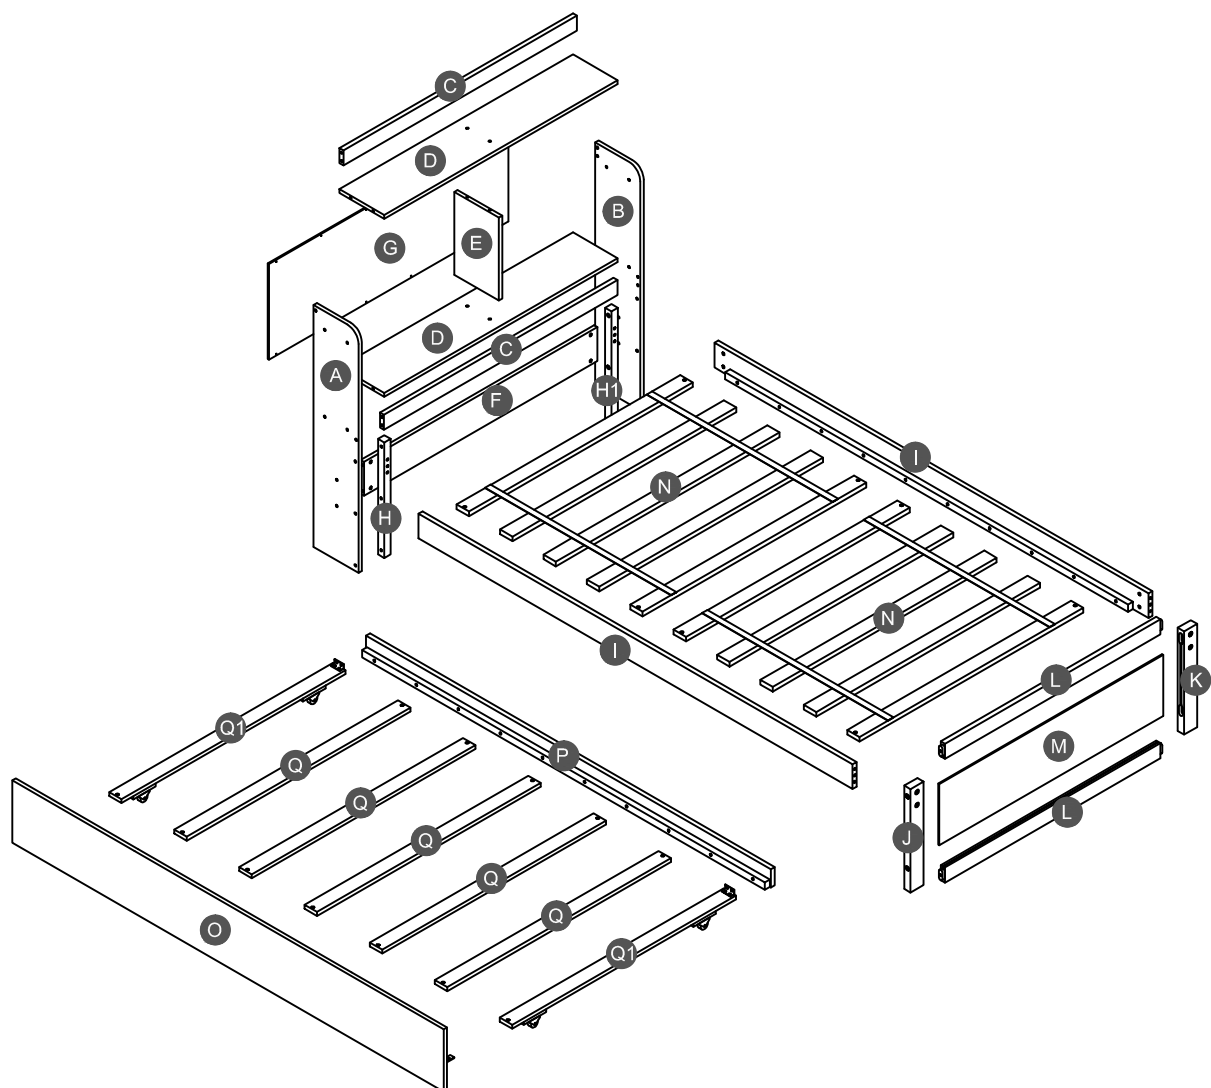


Part List

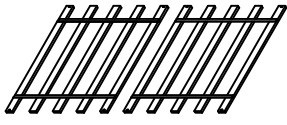A  Panel (left) - 1pc	B  Panel (right) - 1pc	C  HB horizontal - 2pcs
D  Top - Shelf panel - 2pcs	E  Middle panel- 1pc	F  Crossbar-1pc
G  Back panel - 1pc	H  Leg HB (left) - 1pc	H1  Leg HB (right) - 1pc
I  Side rail - 2pcs	J  Leg FB (left) - 1pc	K  Leg FB (right) - 1pc
L  FB horizontal bar - 2pcs	M  Side panel FB - 1pc	N  Slats - (10pcs)
O  Front panel of Trundle - 1pc	P  Back panel side rail of Trundle -1pc	Q  Slats - 5pcs
Q1  Slats - 2pcs		

Hardware List

1	 Ø8*30mm Wood dowel (8pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (4pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (8pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (20pcs)	5	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	6	 1/4"*15 (9.5mm) Horizontal-Hole bolts (32pcs)
7	 (1/4")4.5*58mm Allen key (1pc)	8	 Ø4*30mm Wood screws (30pcs)	9	 100*63*20mm Wheels (4pcs)
10	 Ø3.5*15mm Wood screws (12pcs)	11	 Ø3.5*15mm Wood screws (16pcs)	12	 95*95*18*3mm Metal bracket (2pcs)
13	 40*18*18*2mm Metal bracket (2pcs)				

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

5



6PCS

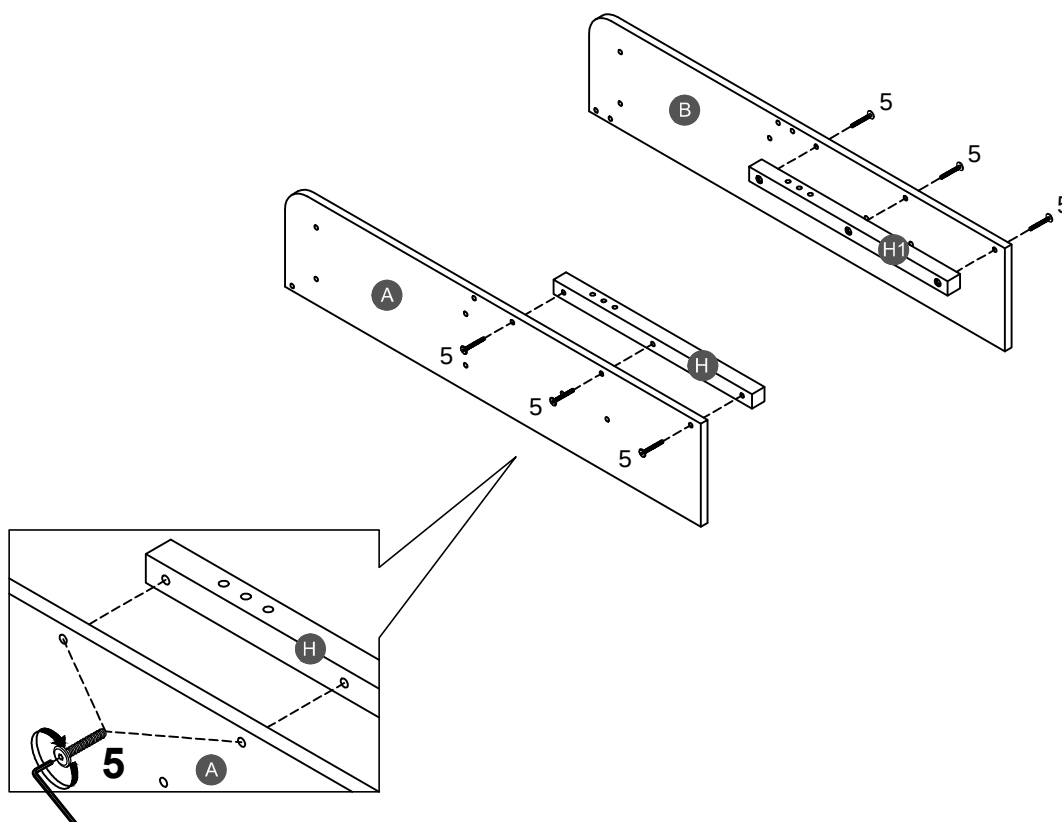

STEP 2:

4




4PCS


6






4PCS

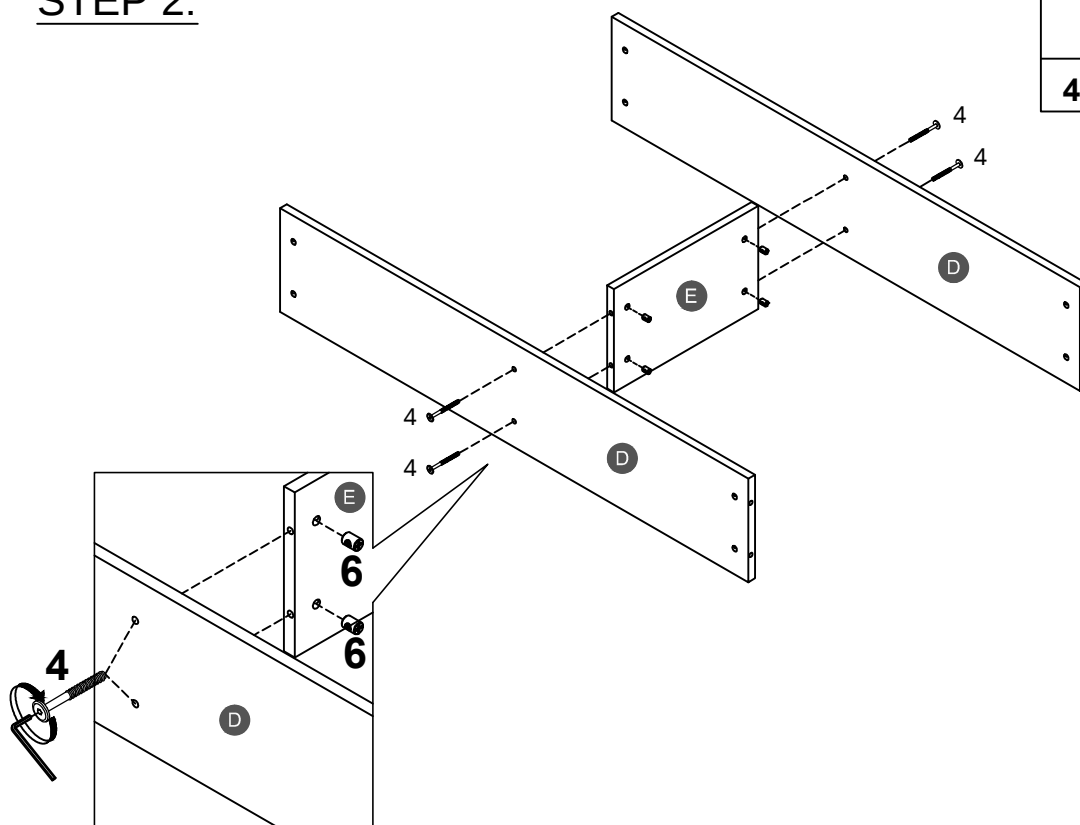


STEP 3:

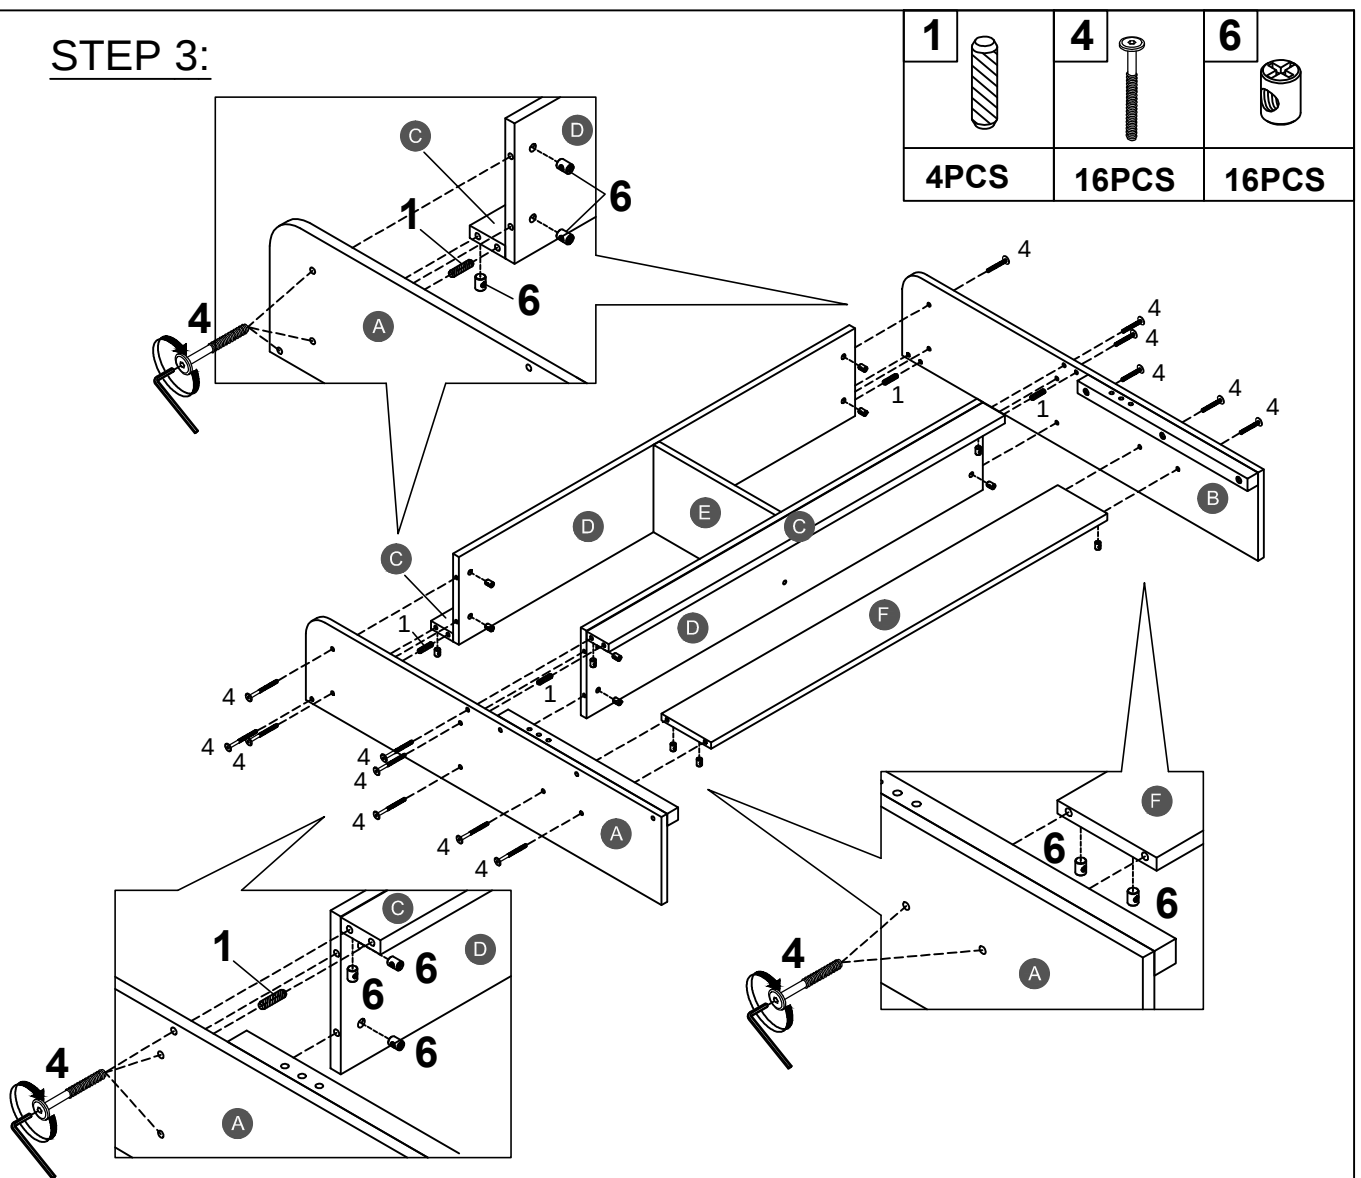

STEP 4:

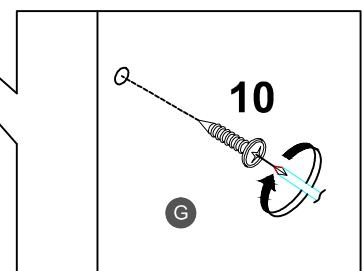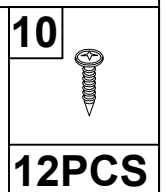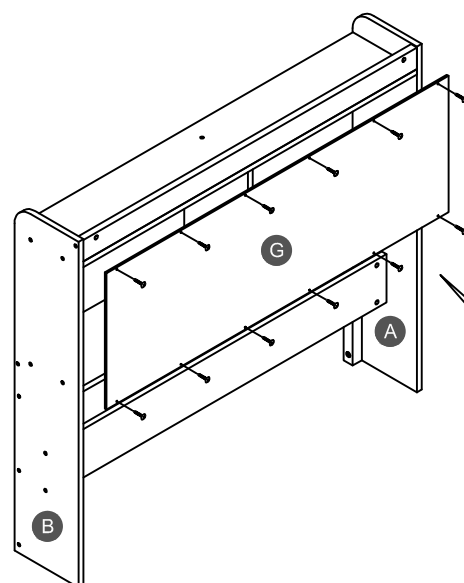


STEP 5:

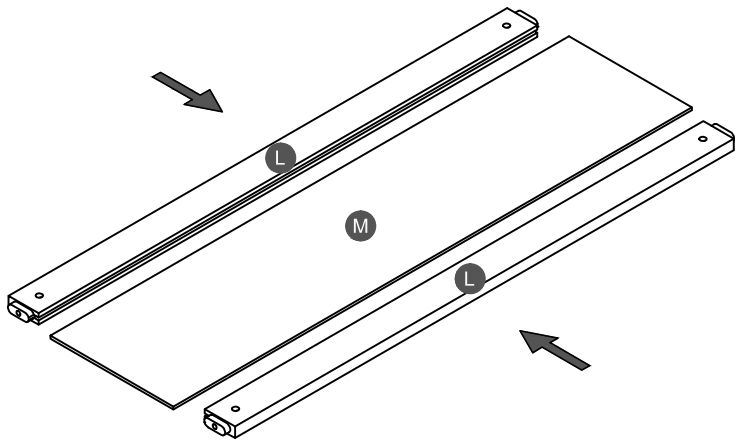


STEP 6:

2		6	
4PCS		4PCS	

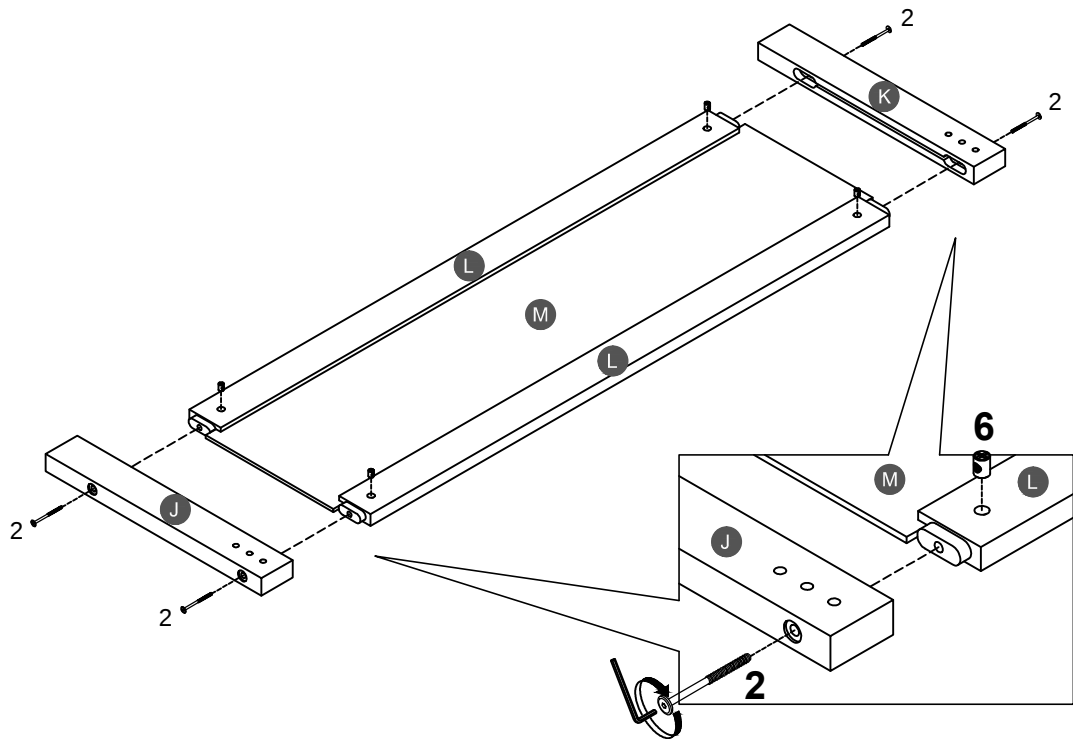


STEP 7:

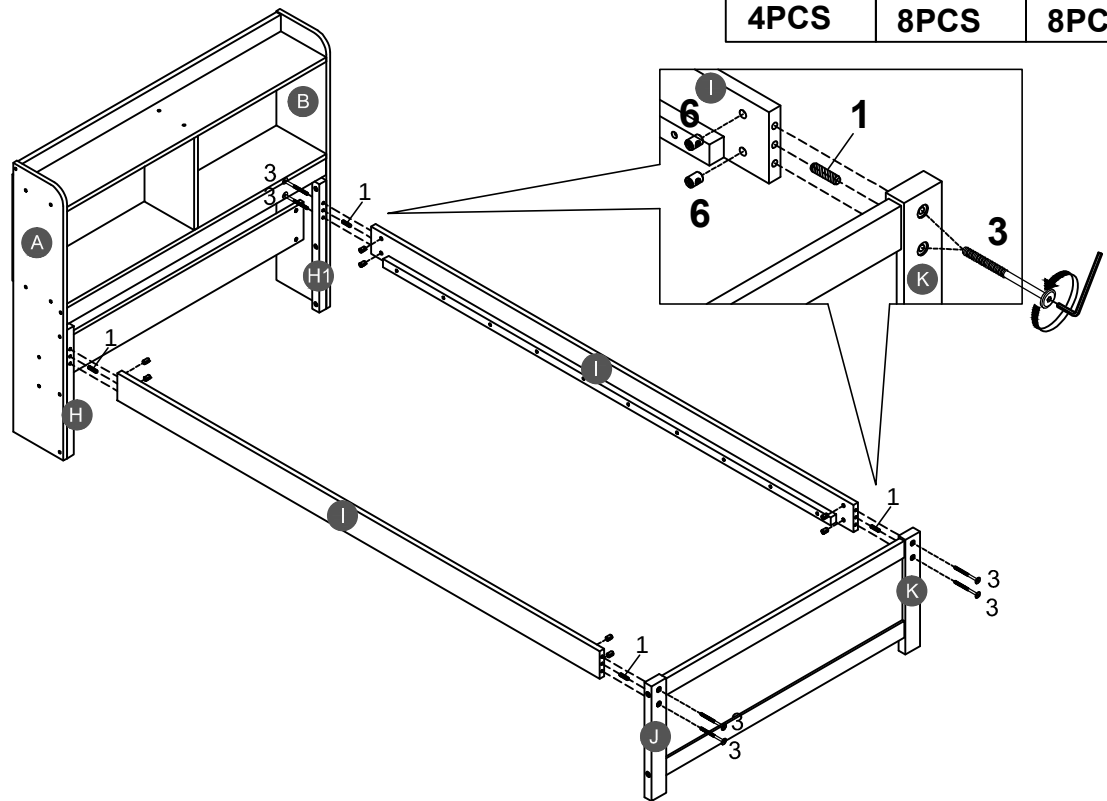

1	3	6
		
4PCS	8PCS	8PCS

STEP 8:

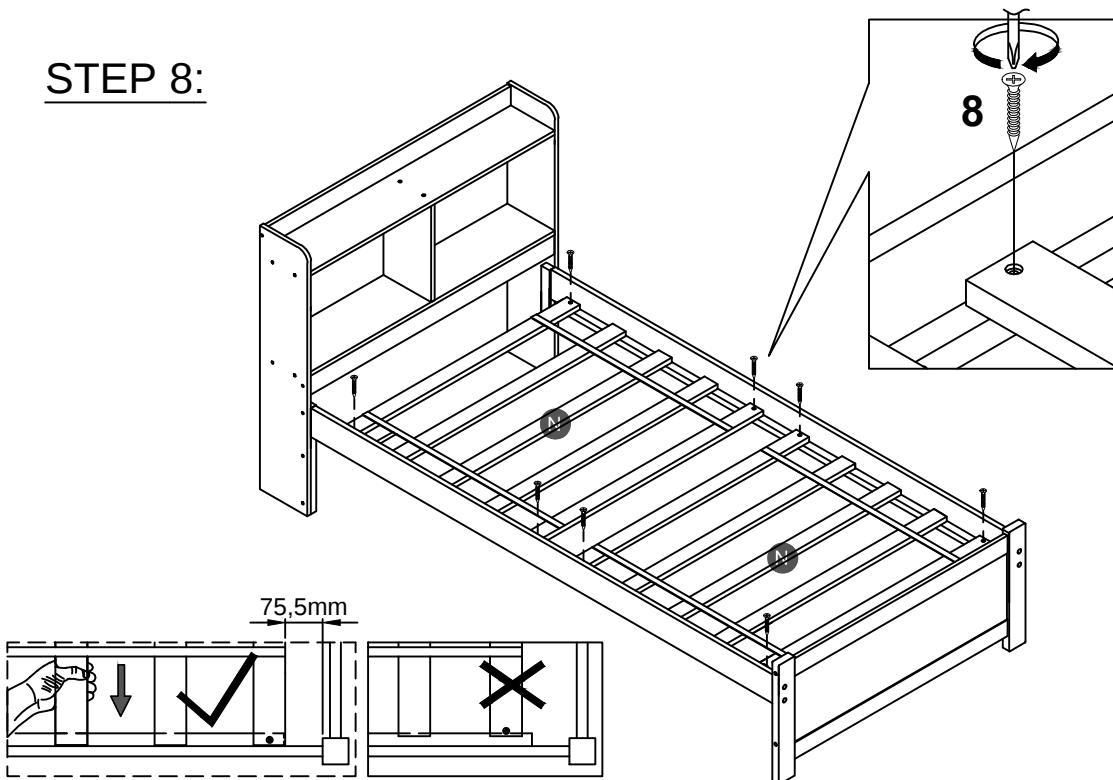


8

8PCS

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 9:

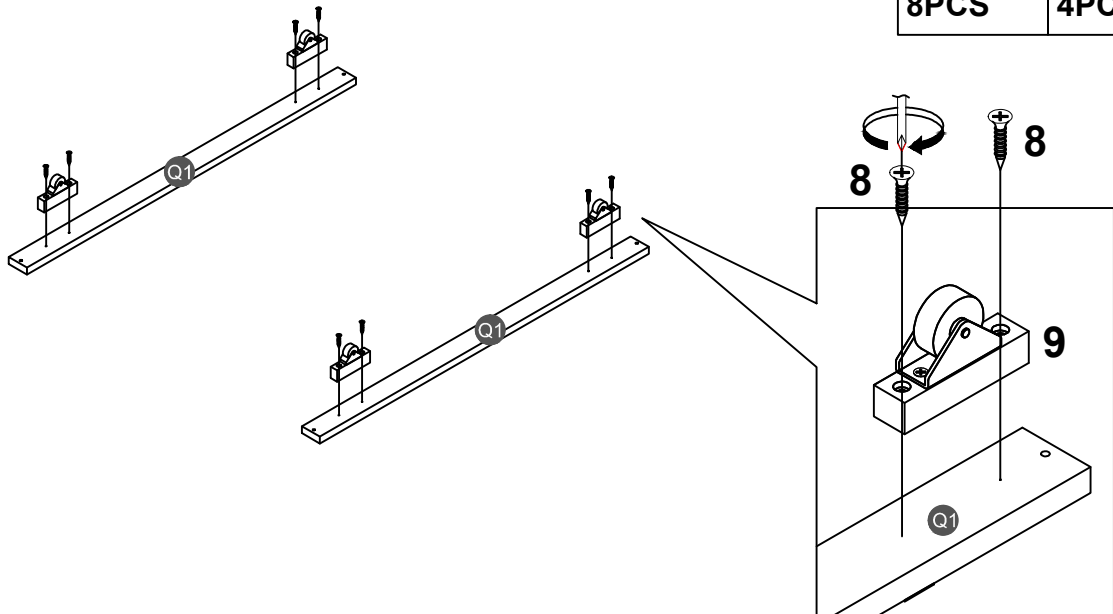

8




8PCS

9



4PCS



STEP 10:

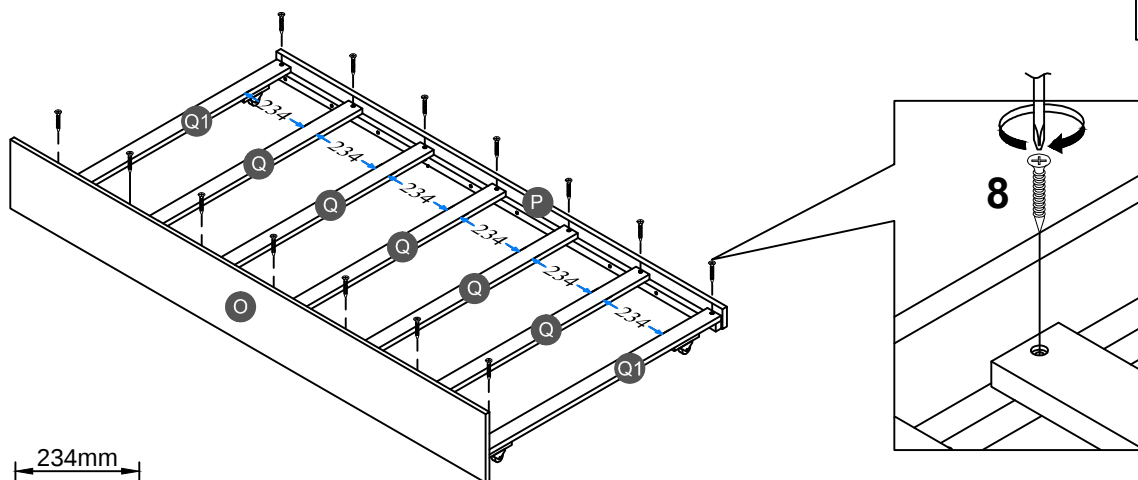

8





14PCS

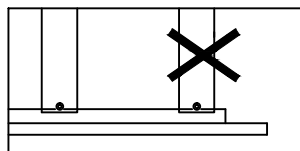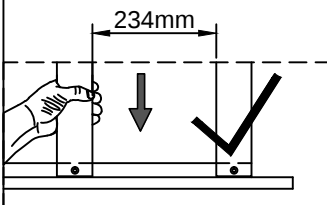

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 11:

11		12	
8PCS		2PCS	

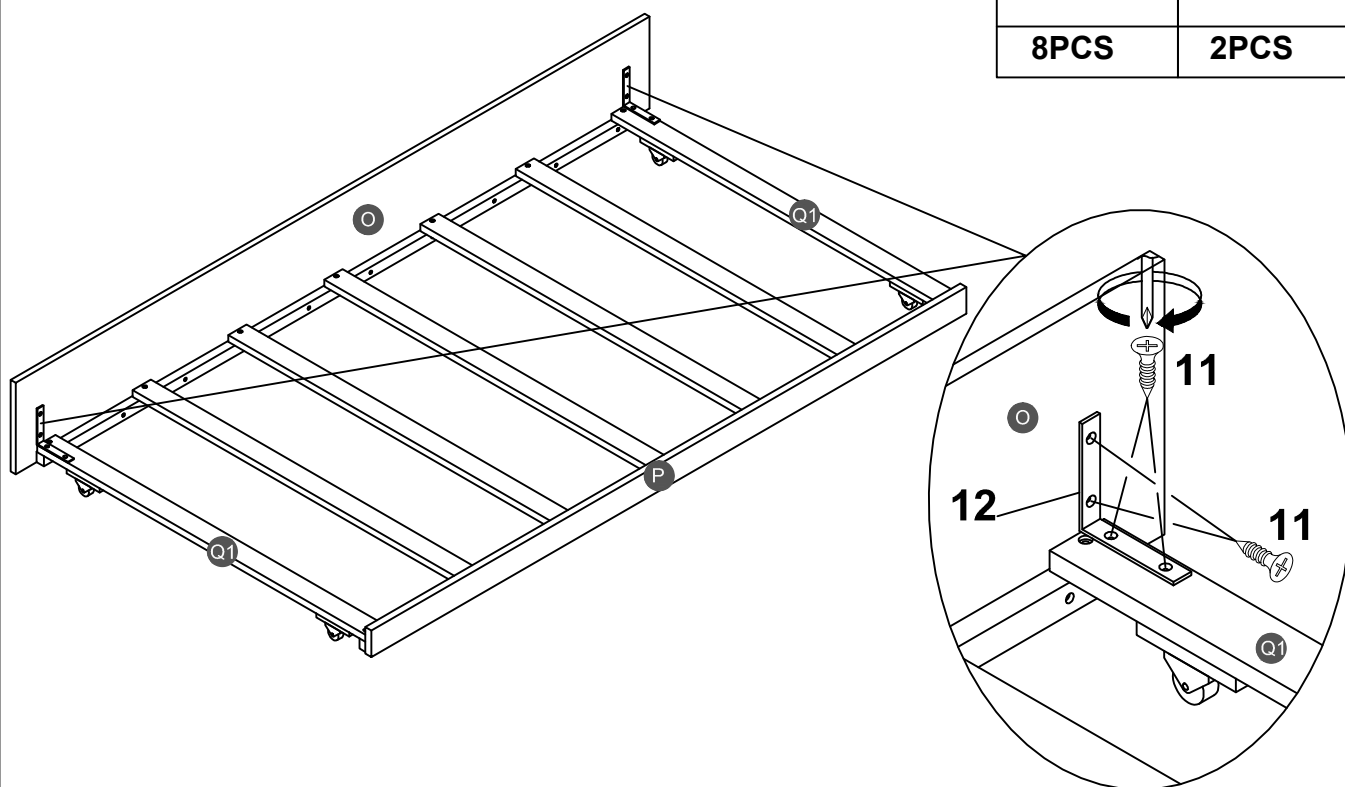


STEP 12:

11		13	
8PCS		2PCS	

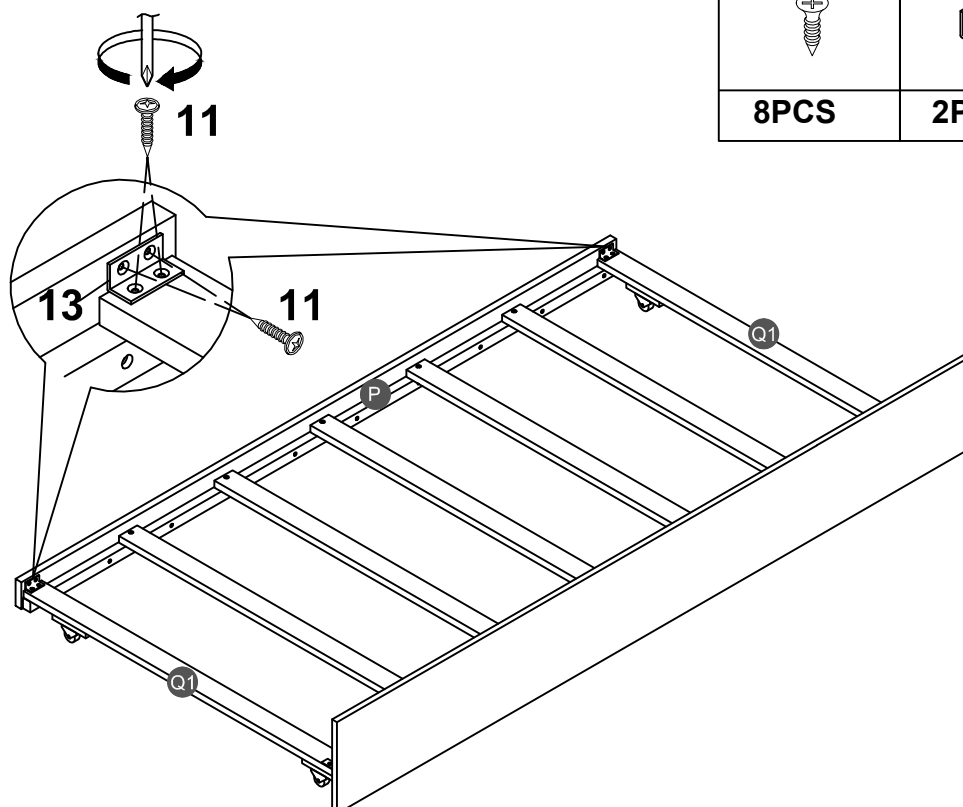

STEP 13:

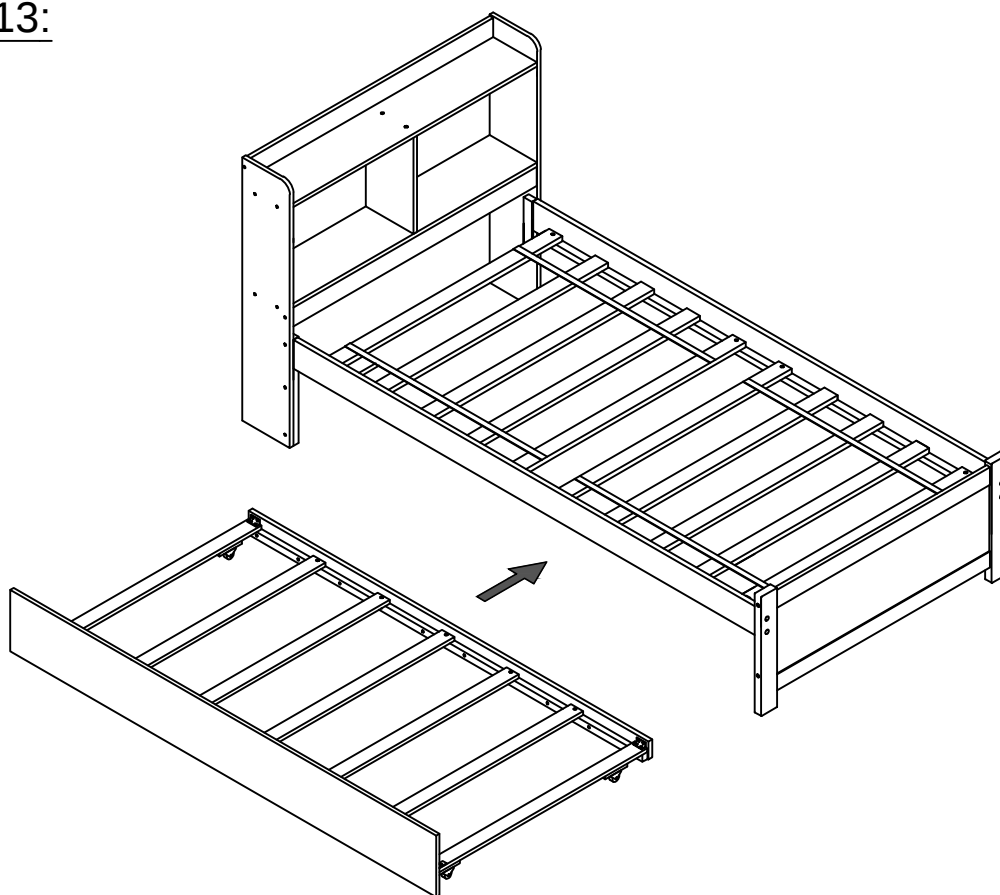

Push Trundle and Drawer under the bottom of Bunkbed.

