


<b>Product Name:</b>	Modern White Upholstered Headboard and Wood Frame Set, King
<b>SKU #:</b>	WHIF 1887

Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTION CAREFULLY BEFORE ASSEMBLY:**

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Place all wooden furniture part on a clean and fat soft surface to prevent scratches. Place all wodnen Furniture parts on a clean ,flat, soft surface to prevent scratches. Refer to the steps provided below for assembly.

Do not attempt to assemble or use the product if any parts are missing or damaged.

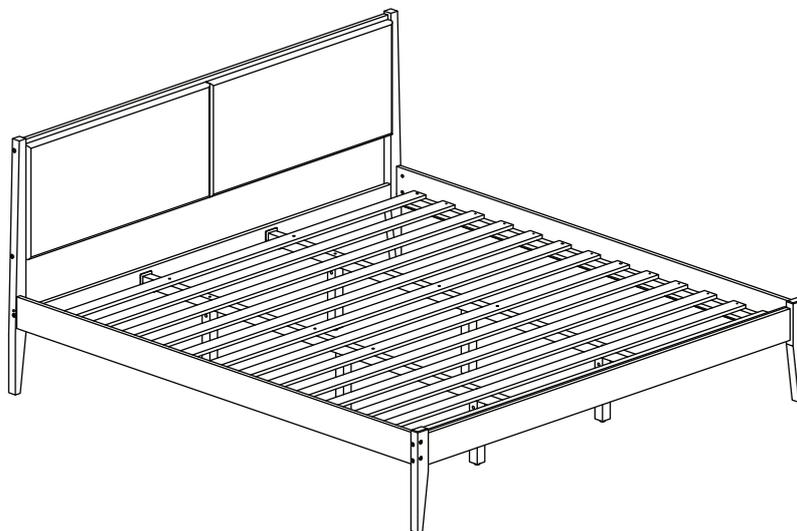

**CARTON CONTENTS:**



Hardware:

 <b>1</b> M4 Allen Key x 1	 <b>2</b> Center Rail Bracket x 4	 <b>3</b> Adjustable Foot x 6	 <b>4</b> Wood Screw (M4 x 32mm) x 18
 <b>5</b> Wood Dowel (10 x 40mm) x 12	 <b>6</b> Barrel Nut x 24	 <b>7</b> M6 x 15mm JCB x 8	 <b>8</b> M6 x 40mm JCB x 16
 <b>9</b> M6 x 90mm JCB x 6	 <b>10</b> M6 x 100mm JCB x 18		



<b>Product Name:</b>	Modern White Upholstered Headboard and Wood Frame Set, King
<b>SKU #:</b>	WHIF 1887

Parts List:

### Parts in Box A

 <p><b>A</b> Headboard Panel <b>x 1</b></p>	 <p><b>C</b> Headboard Post (Left) <b>x 1</b></p>	 <p><b>D</b> Headboard Post (Right) <b>x 1</b></p>	 <p><b>E</b> Footboard Post (Left) <b>x 1</b></p>
 <p><b>B</b> Headboard Support <b>x 1</b></p>			 <p><b>F</b> Footboard Post (Right) <b>x 1</b></p>


### Parts in Box B

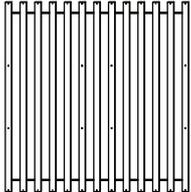 <p><b>G</b> Footboard Panel <b>x 1</b></p>	 <p><b>H</b> Side Rail <b>x 2</b></p>	 <p><b>J</b> Long Support <b>x 2</b></p>
 <p><b>K</b> Support Leg <b>x 6</b></p>	 <p><b>L</b> Set of Bed Slat <b>x 1</b></p>	

Assembly:


**Step 1:** Assemble the Support Leg (K) to the Long Support (J).

**x2**

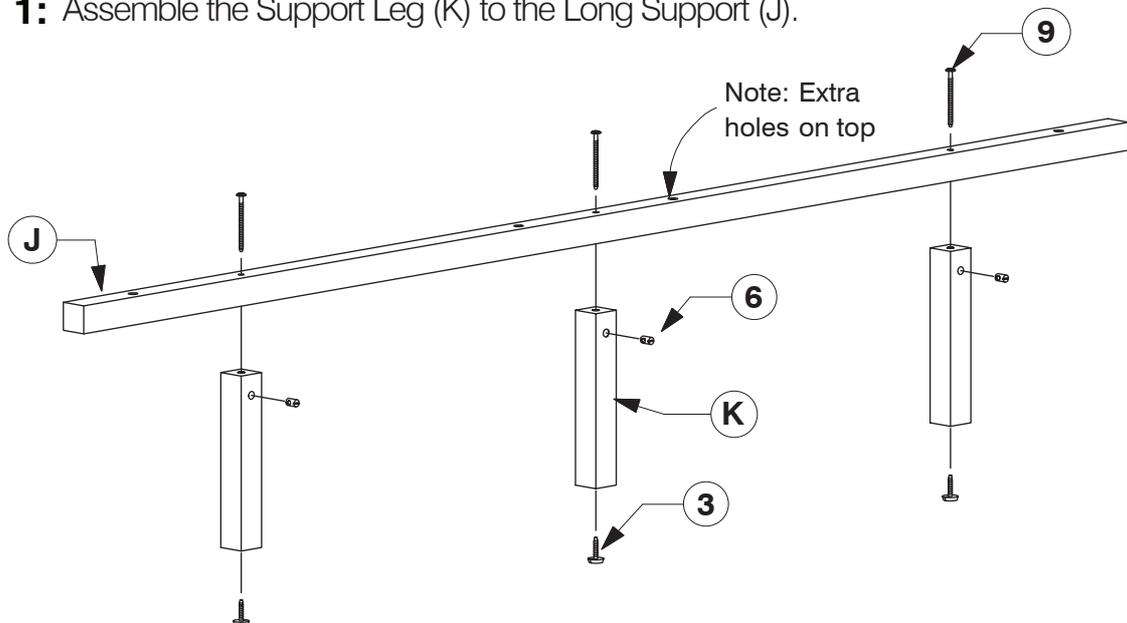


<b>Product Name:</b>	Modern White Upholstered Headboard and Wood Frame Set, King
<b>SKU #:</b>	WHIF 1887

**Step 2:** Fit the Center Rail Bracket (2) to the Footboard Panel (G).  
Assemble Footboard Post (E & F) to the Footboard Panel (G).

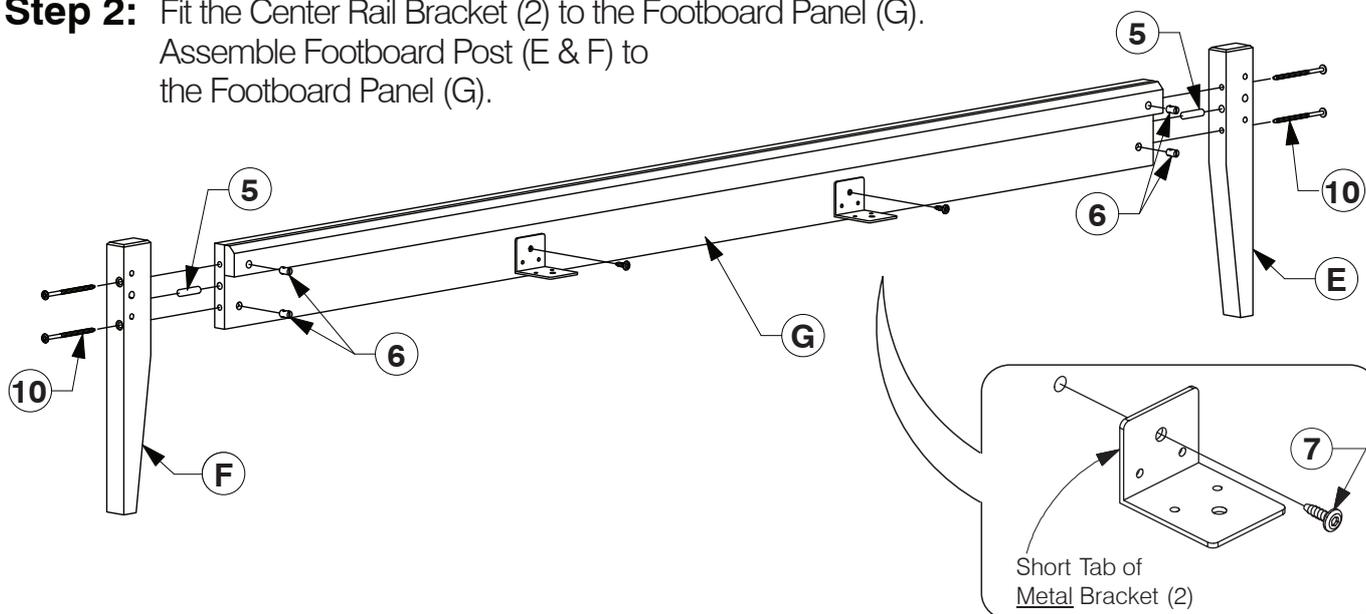


**Step 3:** Fit the Center Rail Bracket (2) to the Headboard Support (B).  
Assemble the Headboard Post (C & D) to the Headboard Panel & Support (A & B).

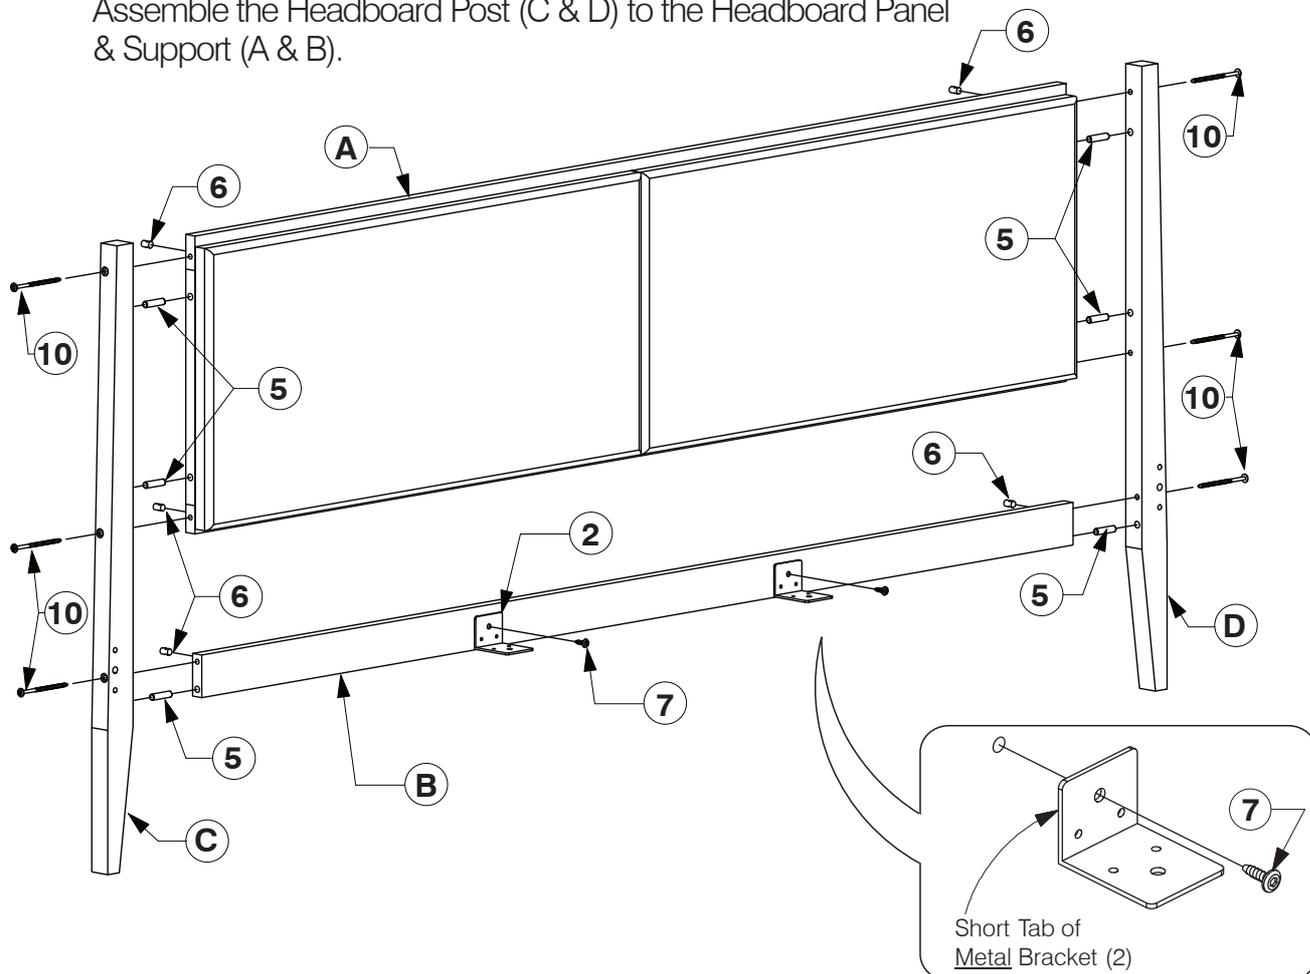


<b>Product Name:</b>	Modern White Upholstered Headboard and Wood Frame Set, King
<b>SKU #:</b>	WHIF 1887

**Step 4:** Assemble the Side Rail (H) to the assembled Headboard & Footboard (A & G).

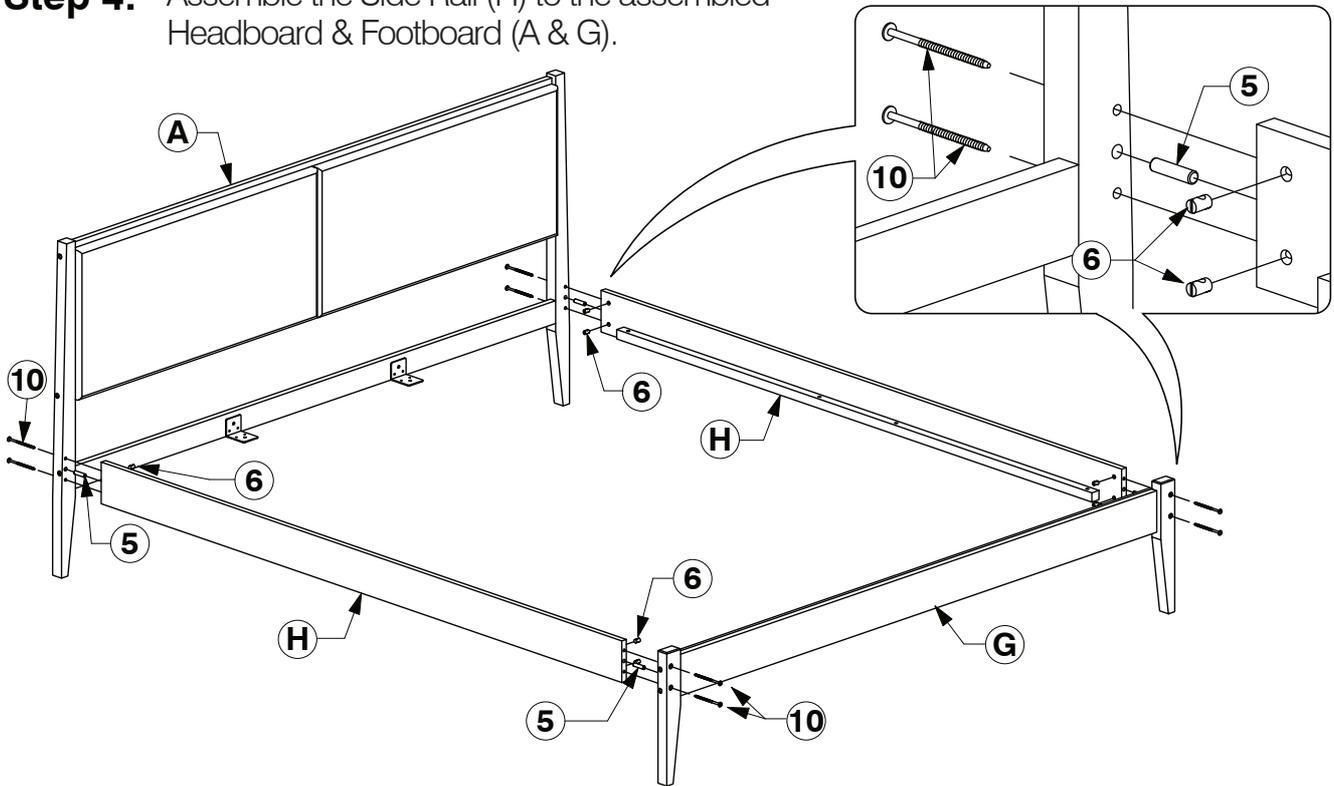


**Step 5:** Bolt the Long Support (J) to the Center Rail Brackets (2) on the Headboard & Footboard (A & G)

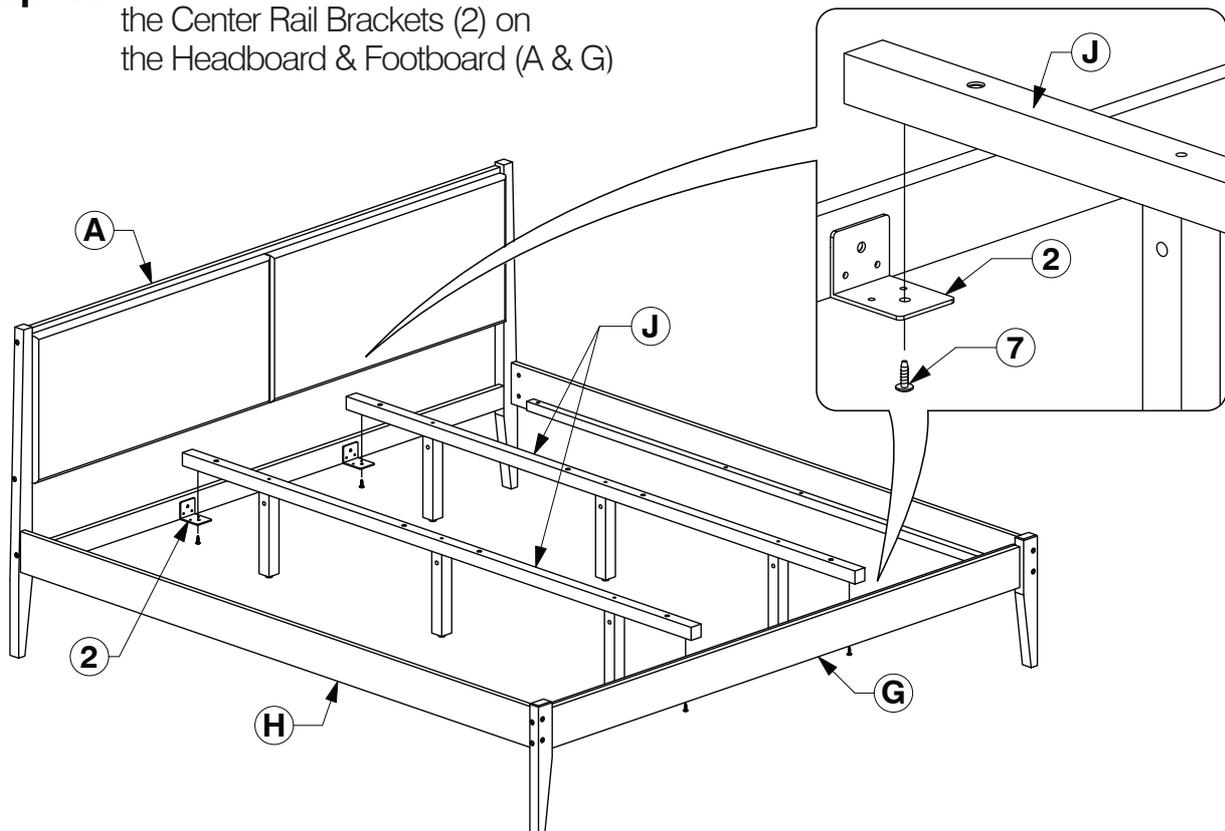

<b>Product Name:</b>	Modern White Upholstered Headboard and Wood Frame Set, King
<b>SKU #:</b>	WHIF 1887

**Step 6:** Bolt the Bed Slats (L) to the Side Rail (H).

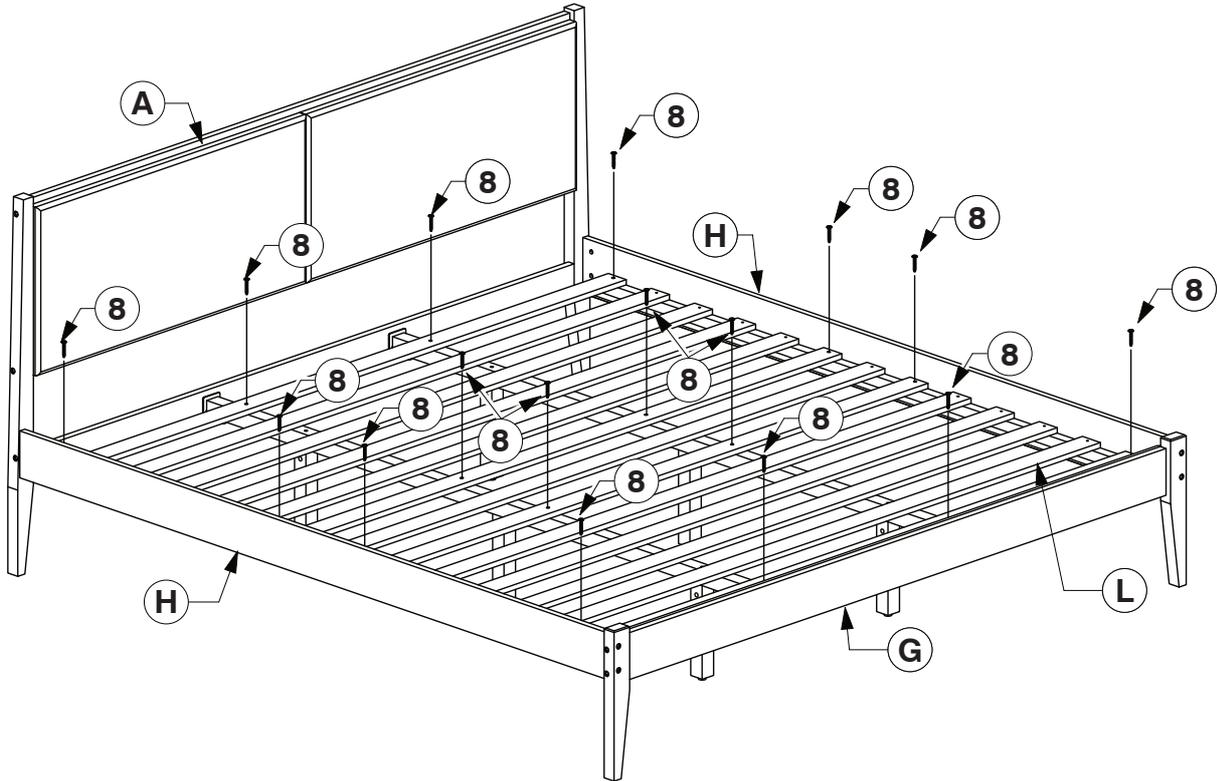

**Step 7:** Screw the Bed Slats (L) to the Side Rail (H).

