
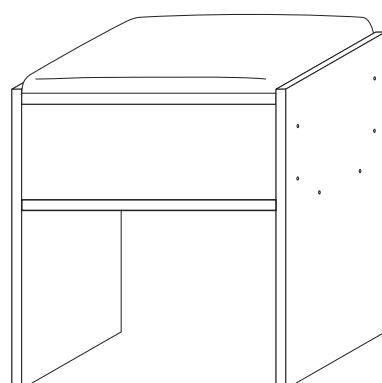


H03BN005


H03WN007

H03GN006

H03LN008

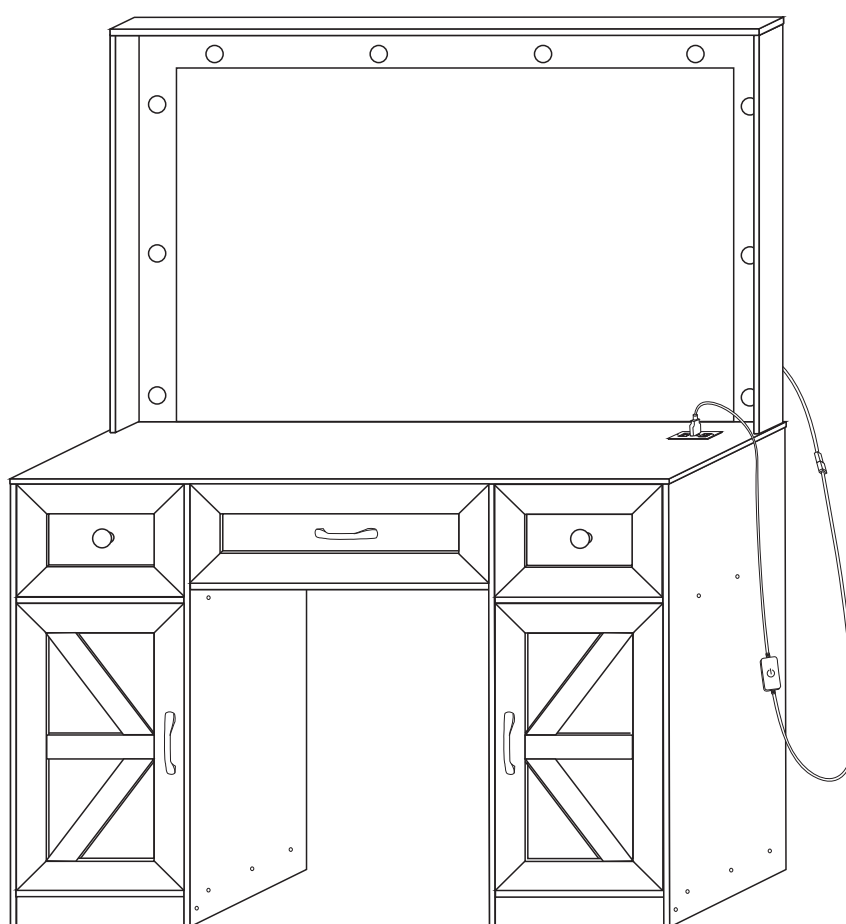

Tools Required:

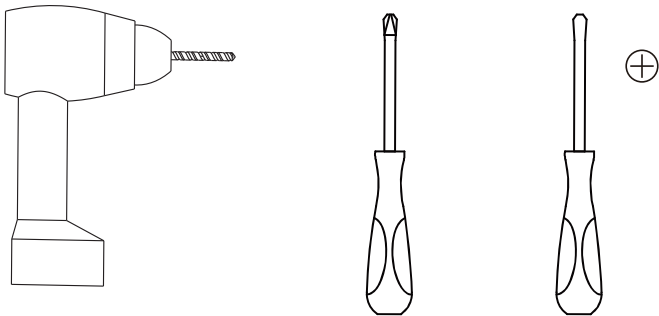



Bolt

Bolzen

Boulon

Bullone

Perno




Connecting piece

Verbindungsbeschlag

Pièce de raccord

Pezzo di bloccaggio

Pieza de sujeci ó n

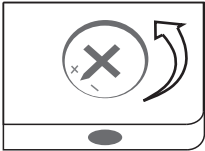

X


Adjust connecting piece direction until it is properly lined up with the hole.

Stellen Sie den Verbindungsbeschlag so ein, dass er wie im Bild gezeigt ausgerichtet ist

Ajustez l' é crou selon le sch é ma

Regolare la direzione di pezzo di collegamento come la condizione illustrata

Ajustar la pieza de sujeci ó n seg ú n la direcci ó n ilustrada

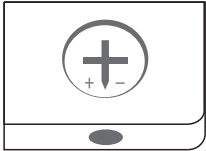

✓

Insert bolt when connecting piece direction is properly lined up.












Setzen Sie erst dann den Bolzen ein










Ins é rez le boulon quand la pièce de raccord est dans telle condition


















Inserire il bullone quando il pezzo di collegamento è in tale condizione

Insertar el perno cuando se encuentre as í la pieza de sujeci ó n


2

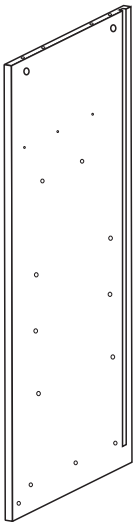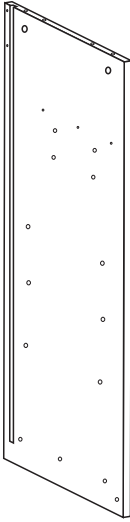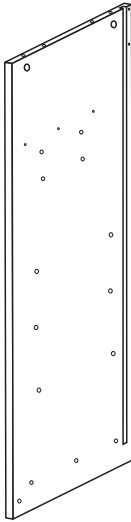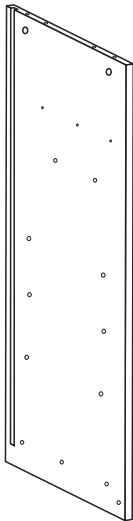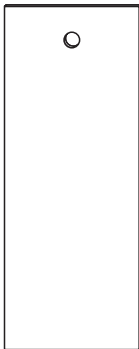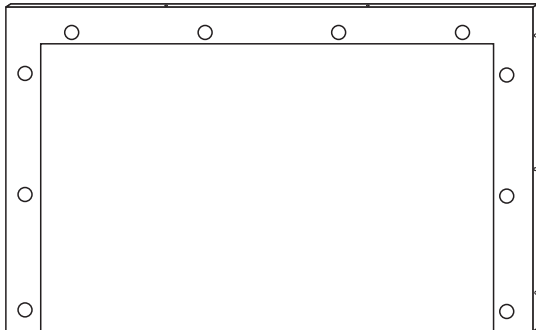①  x1	②  x1	③  x1	④  x1
⑤  x1	⑥  x1		
⑦  x1	⑧  x2	⑨  x1	
⑩  x1	⑪  x1	⑫  x1	
⑬  x1	⑭  x1	⑮  x1	

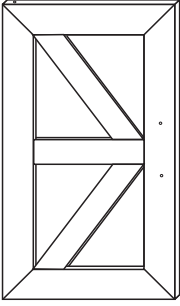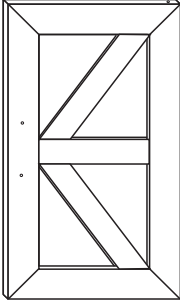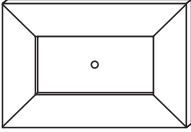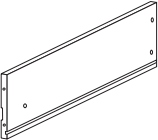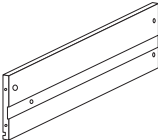
16 x1 	17 x1 	18 x1 	19 x1 
20 x1 	21 x2 	22 x2 	
23 x1 	24 x3 	25 x3 	26 x2  245x285mm
27 x1  480x285mm	28 x2 	29 x1 	30 x1 
31 x1 	32 x1 	33 x1 	34 x1 
35 x1 	36 x1 	37 x1 	

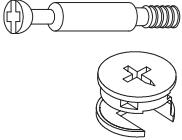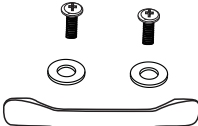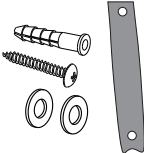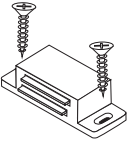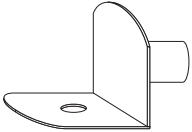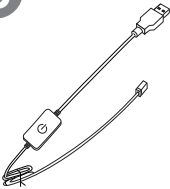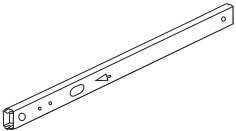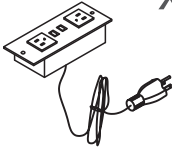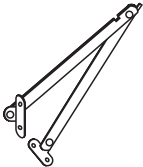A x 21 	B x 18  $\phi 6$	C x 12  M4x35mm	D x 1 
E x 33  M3.5x12mm	F x 2  M4X16mm	G x 1  M4X 8 mm	H x 54  M5x40mm
I x 2  M4X 14 mm	J x 6  M4X 12 mm	K x 2  18mm	L x 1 
M x 2  M3X14mm	N x 14 	O x 12  M3X14mm	P x 2 
Q x 8 	R x 4 	S x 38  12mm	T x 4  M3X10mm
U x 1 	V x 10 	W x 2 	X x 6 
Y x 1 	Z x 1 		



STEP1

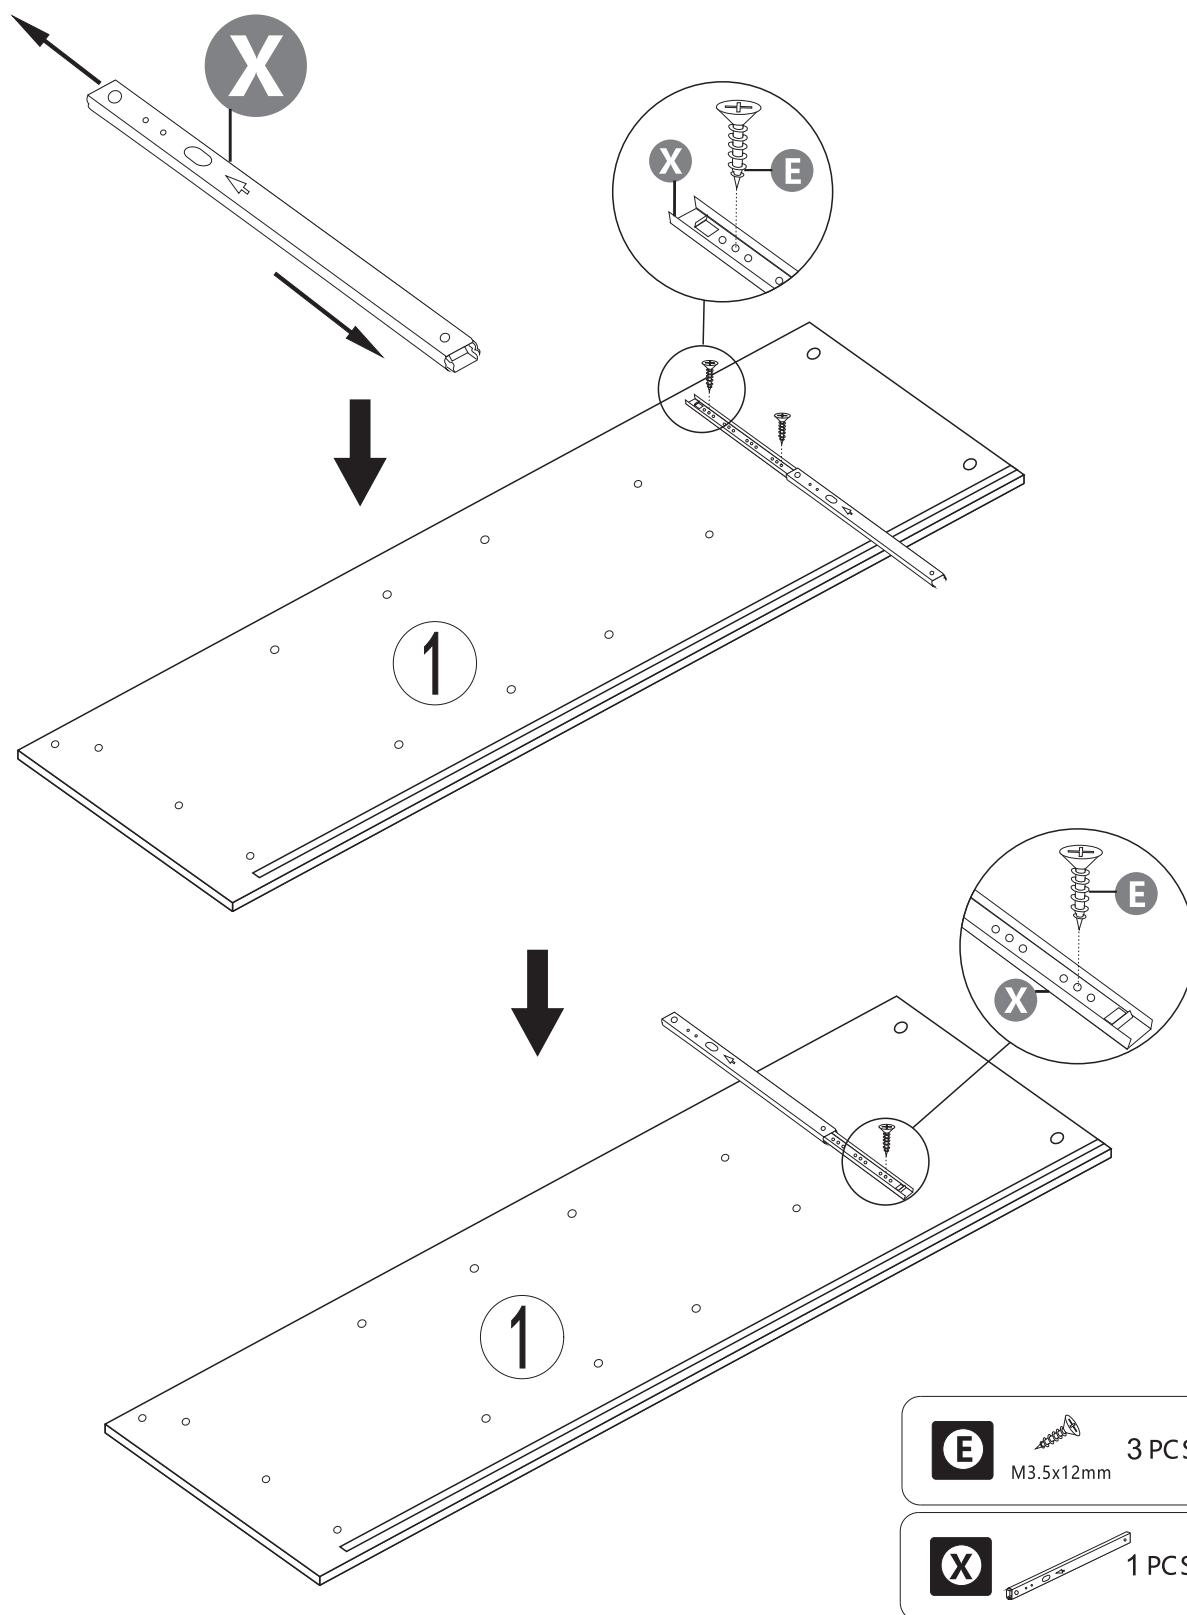

STEP 2

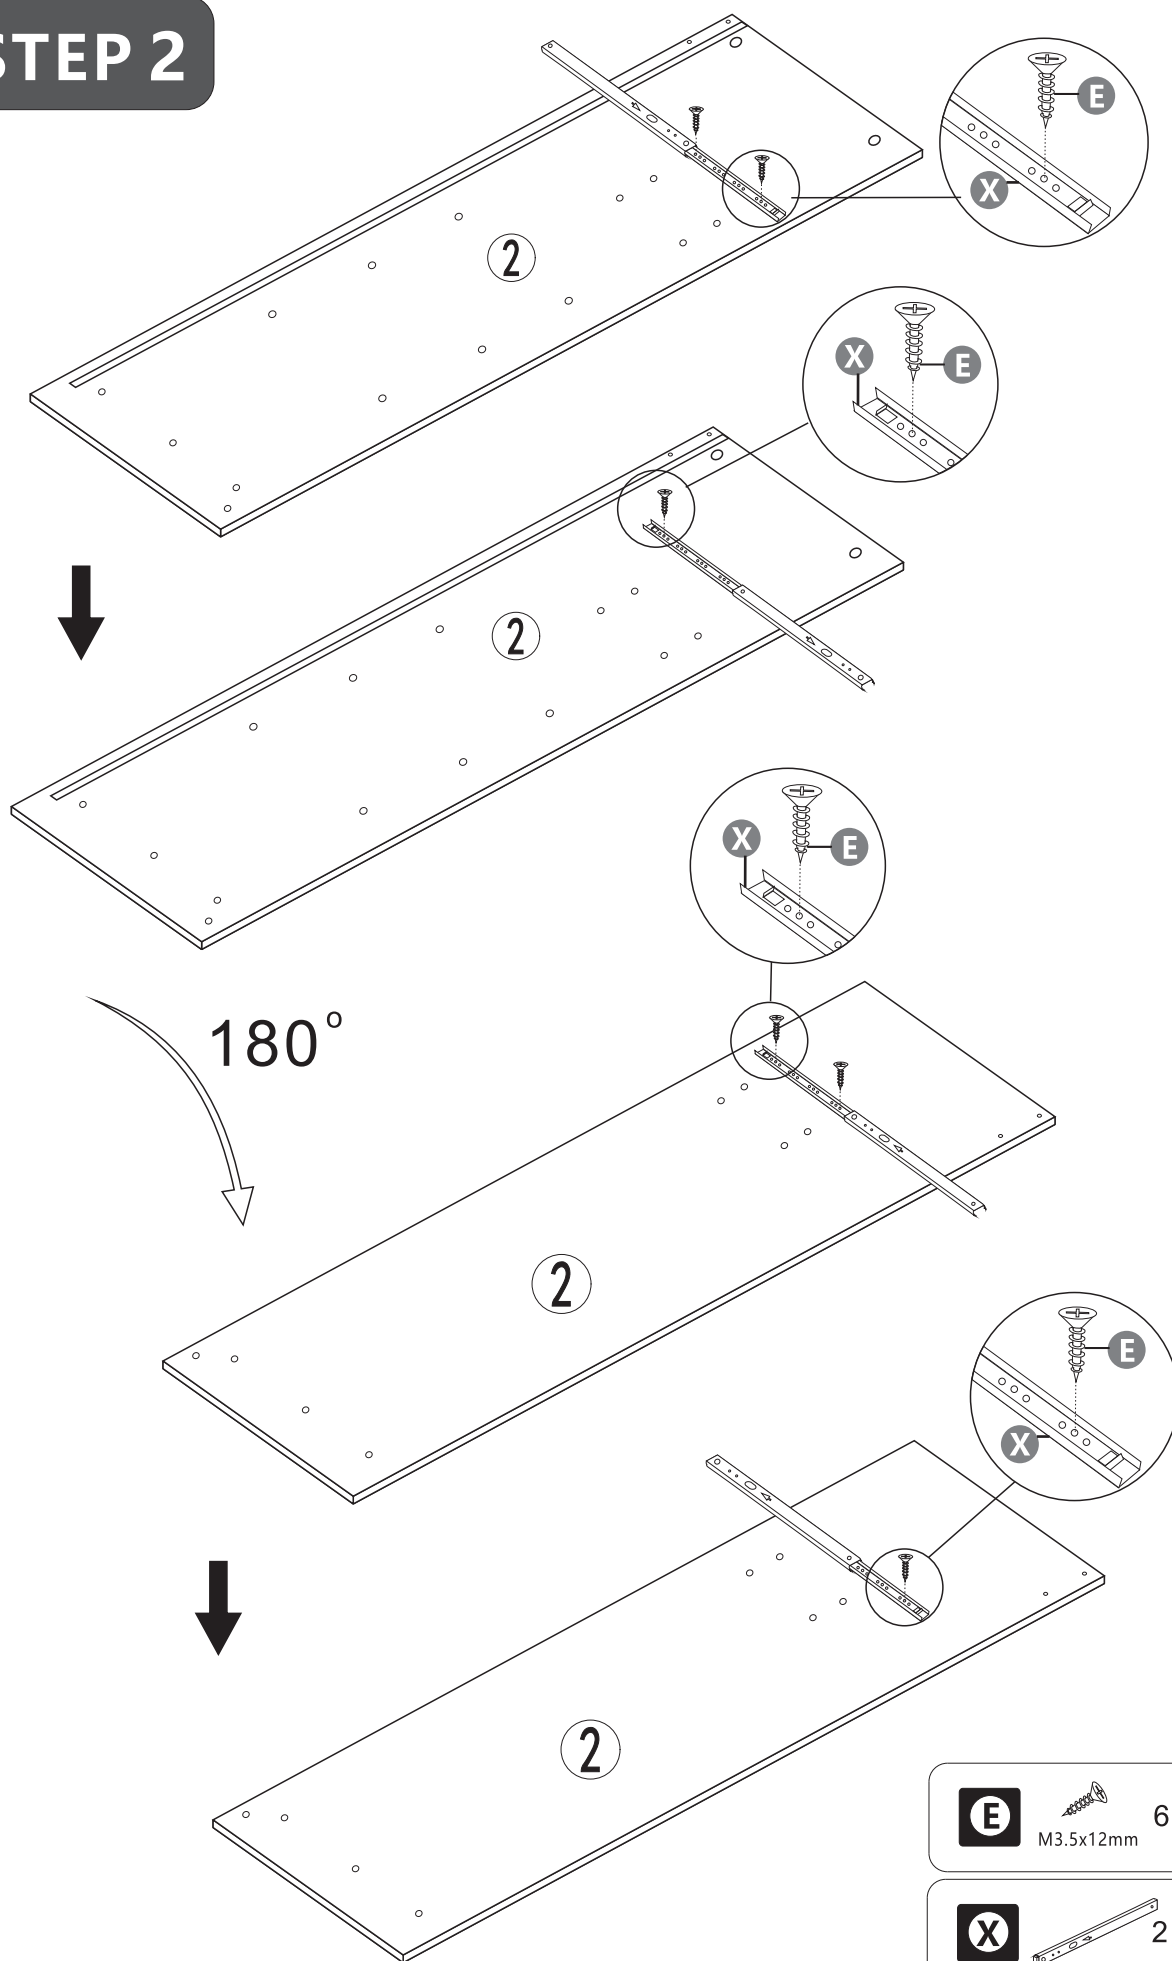


STEP 3

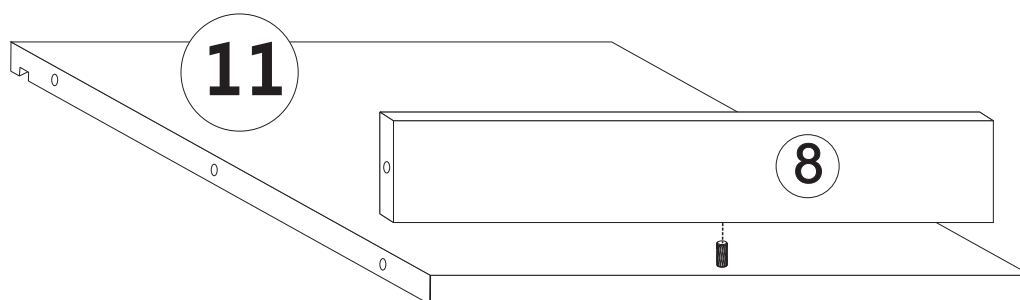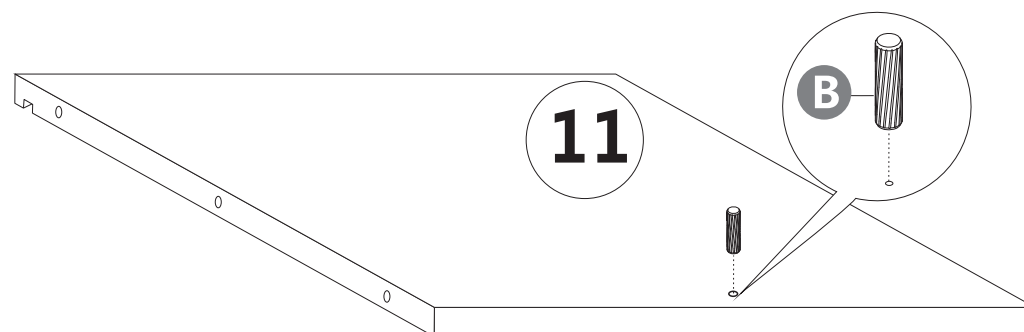


1 PCS

STEP 4

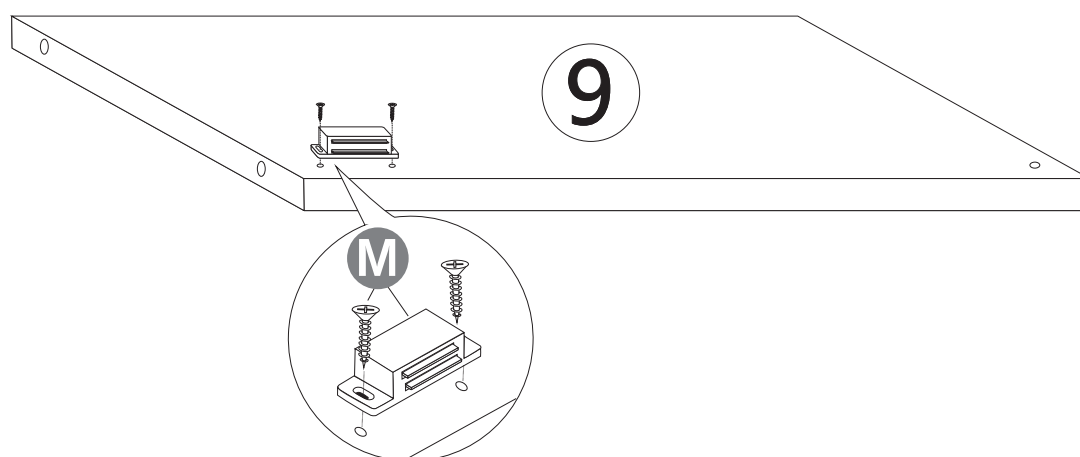

1 PCS
M3X14mm

STEP 5

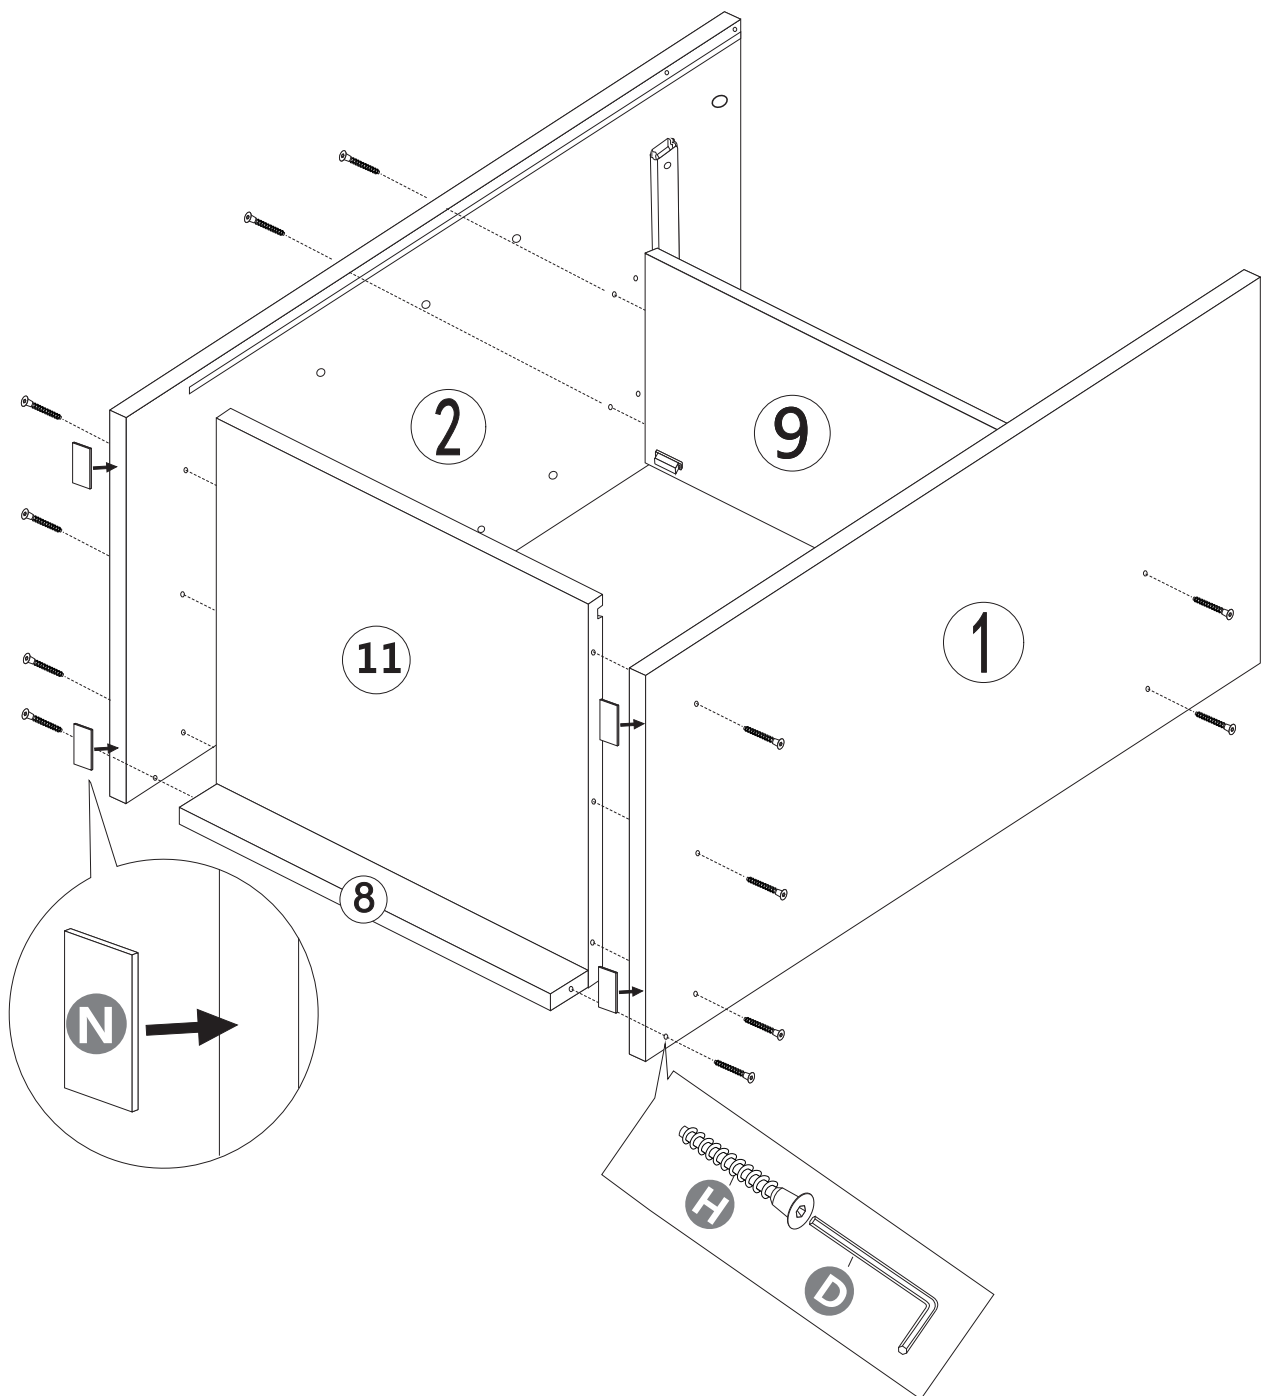


(N)  4 PCS


(D) 

(H)  12 PCS
M5x40 mm

STEP 6

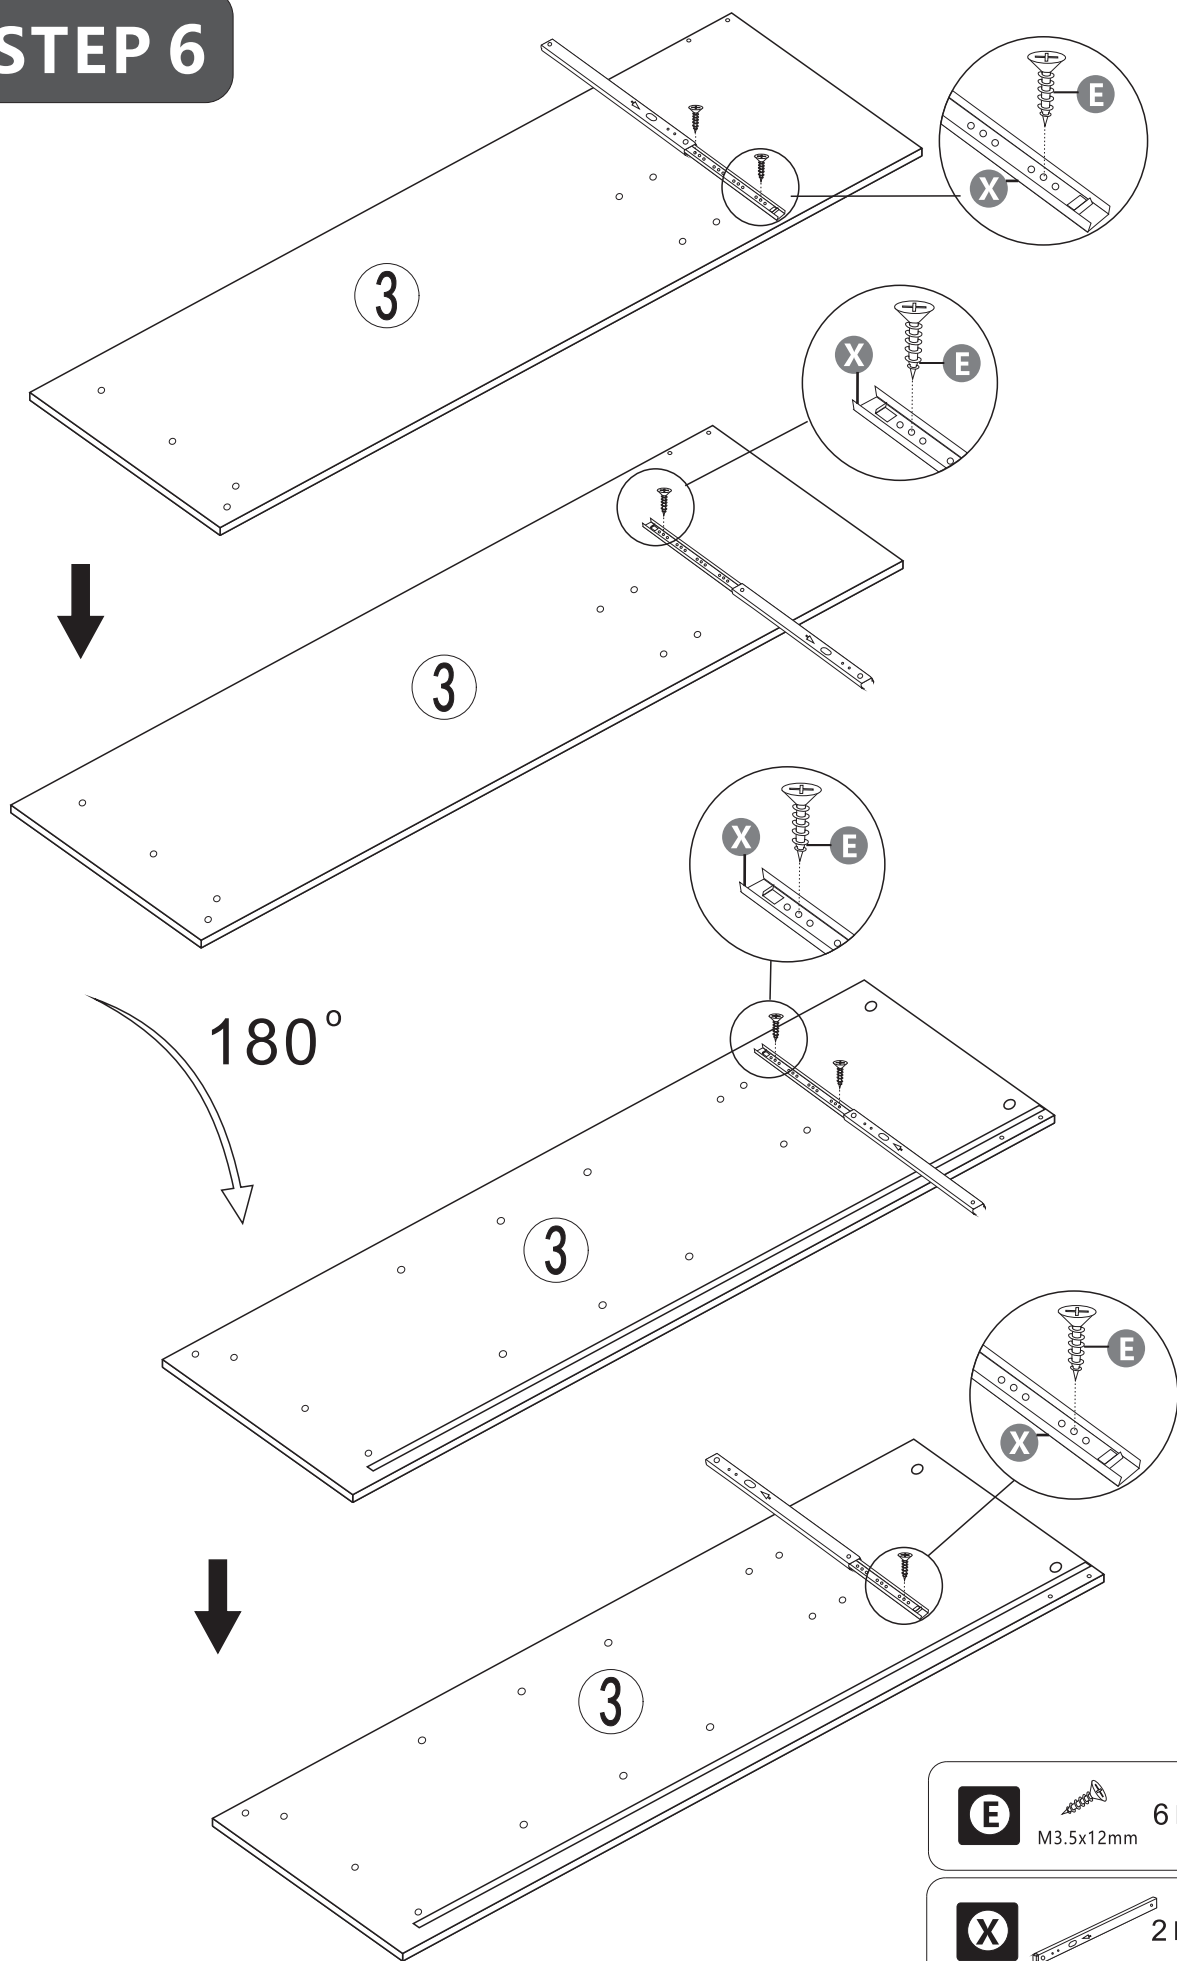

STEP 7

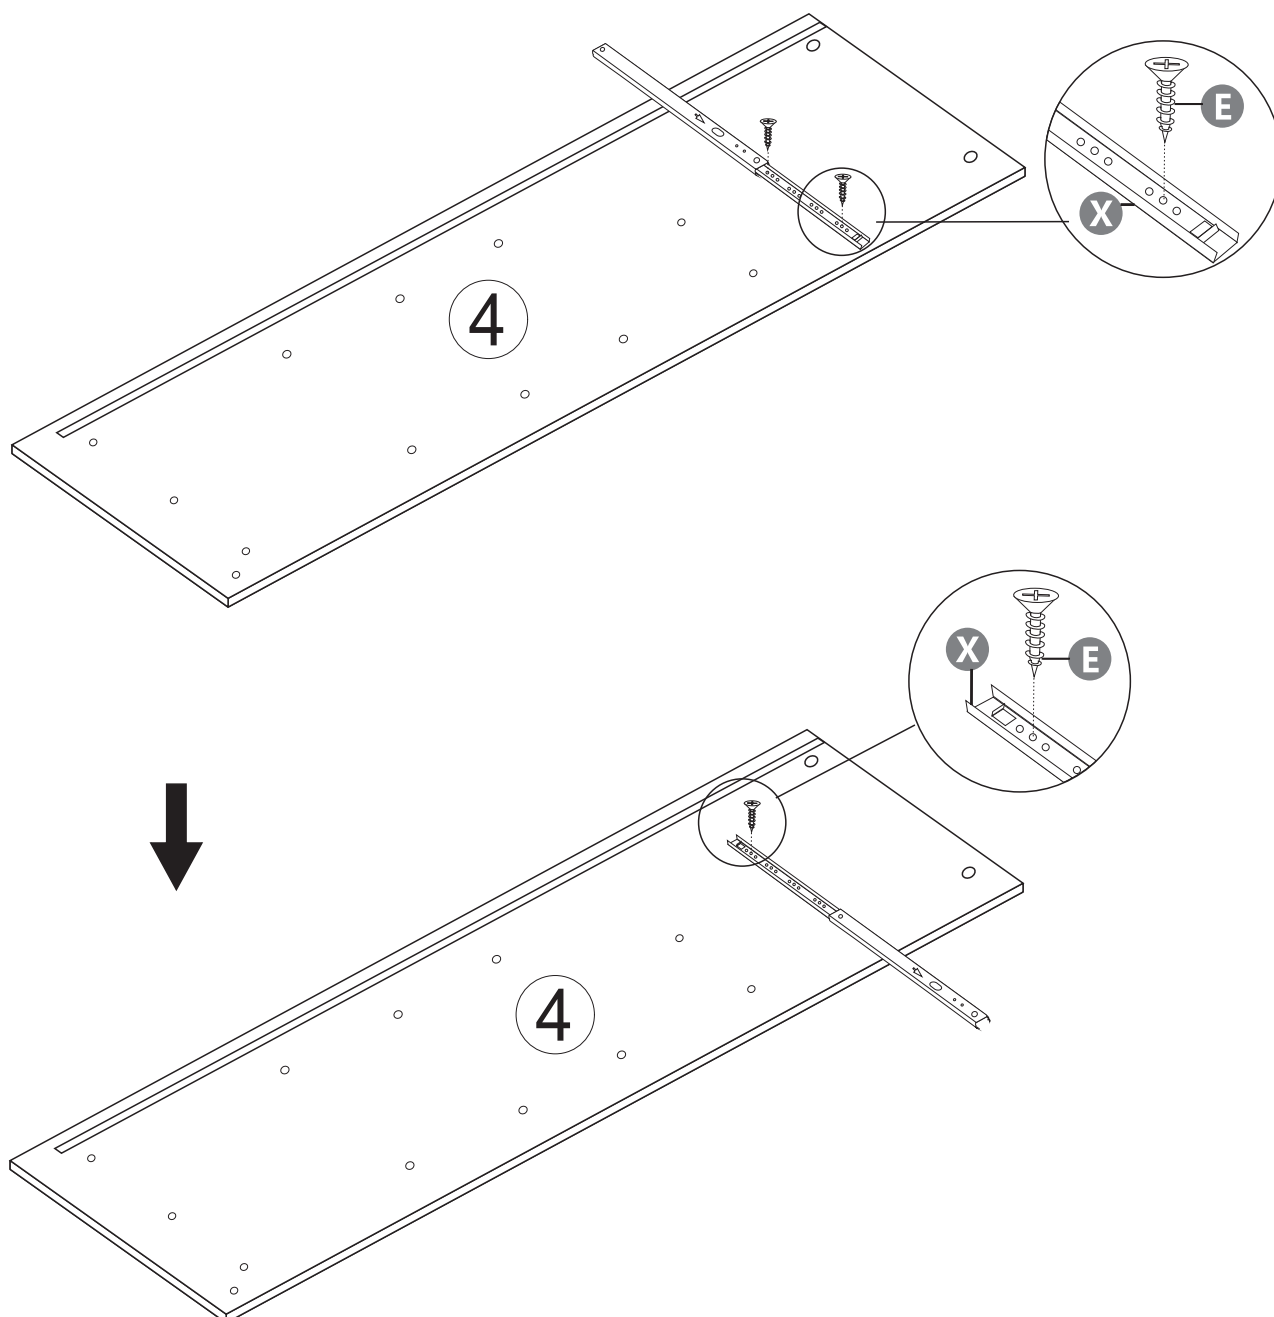


E


M3.5x12mm



3 PCS

X



1 PCS

STEP 8

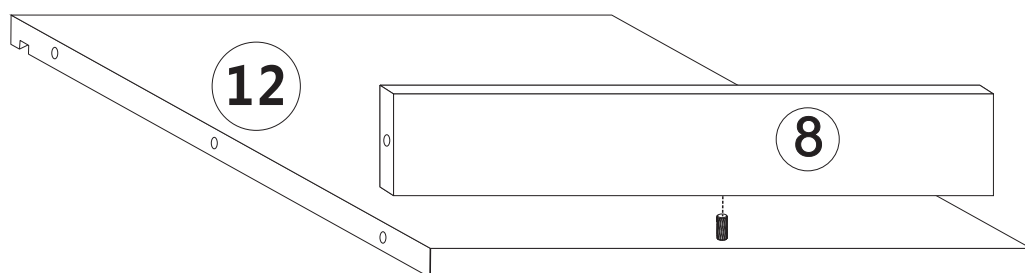
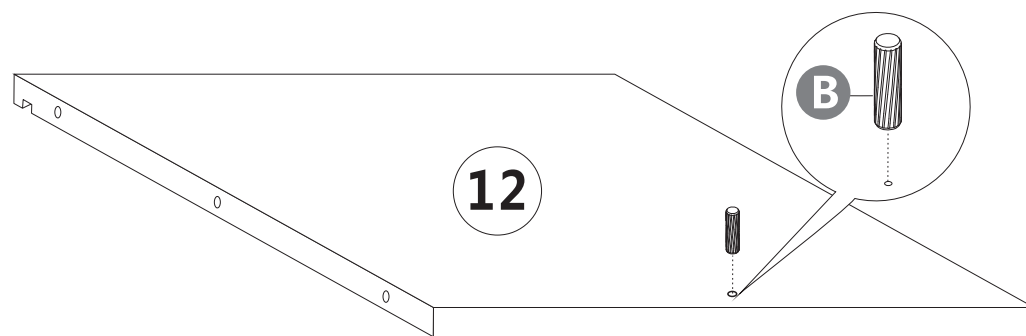


B



1 PCS

STEP 9

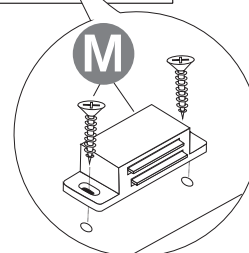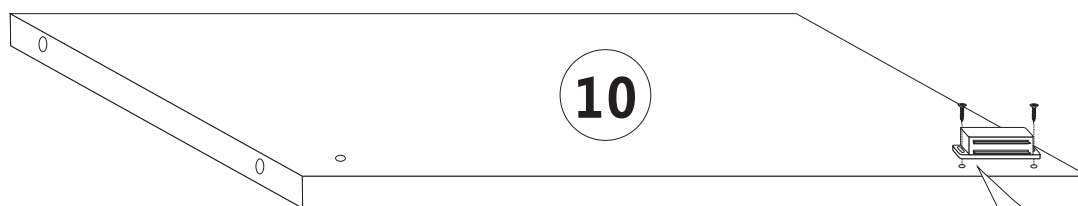


M



1 PCS


M3X14mm

STEP 10

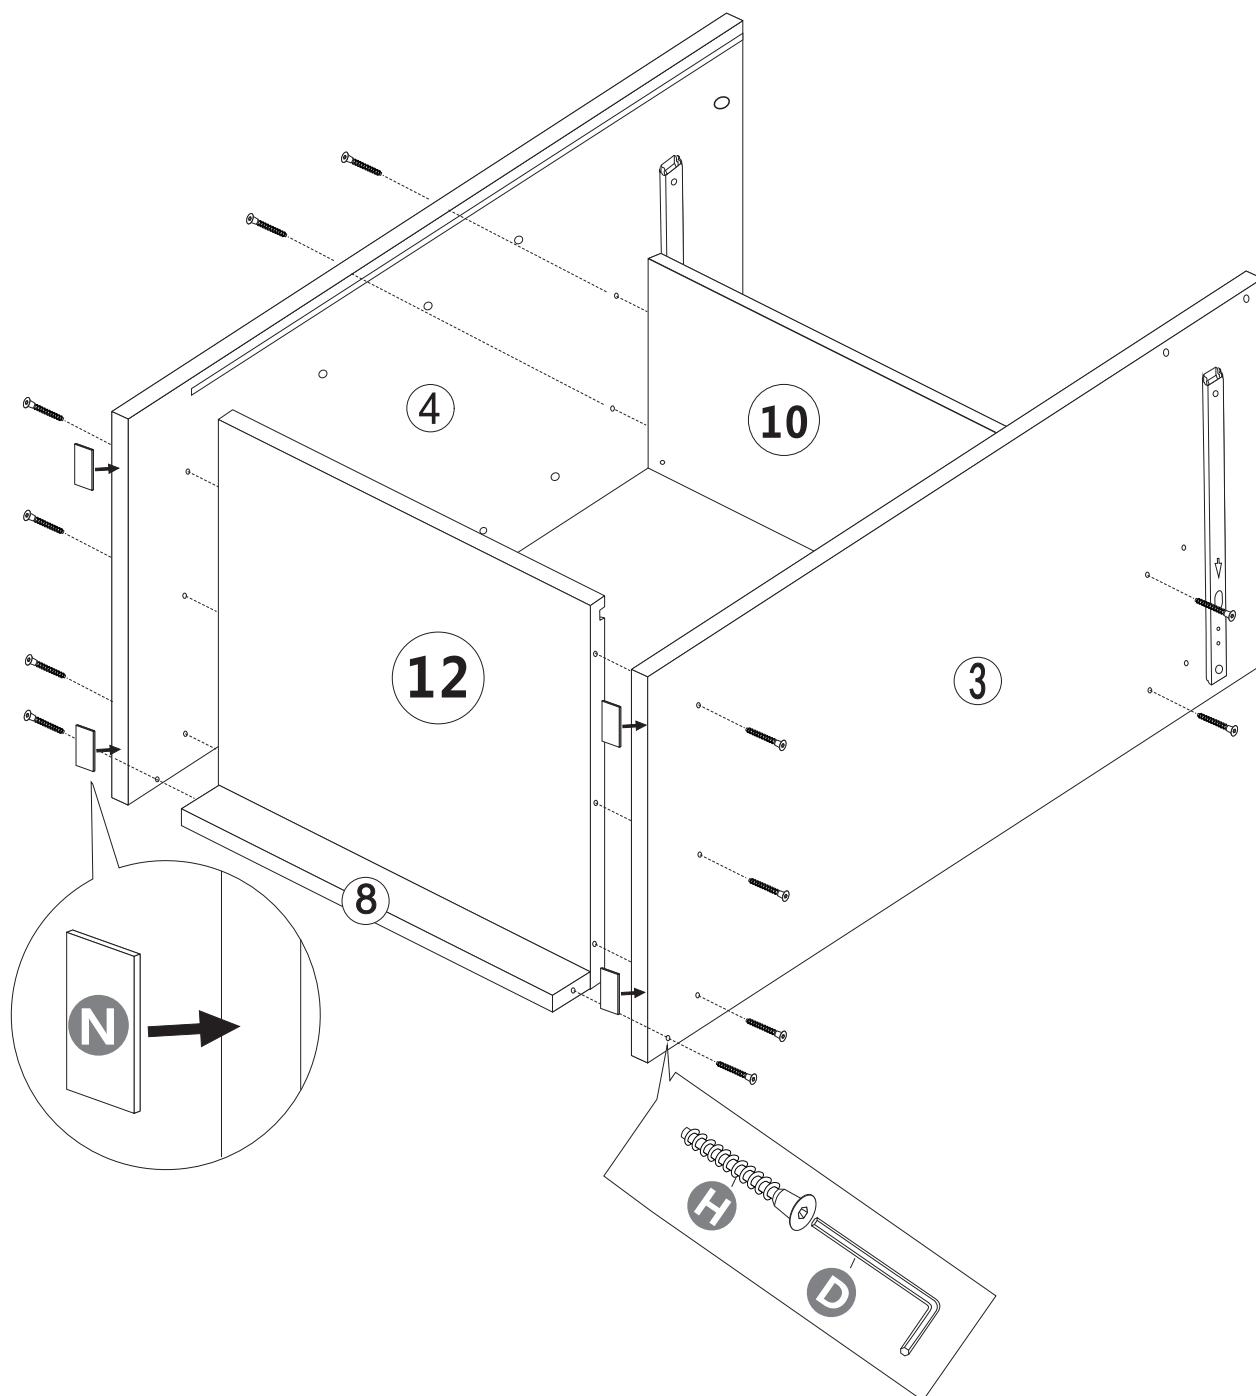


N		4 PCS
D		
H		12 PCS M5x40mm


STEP 11

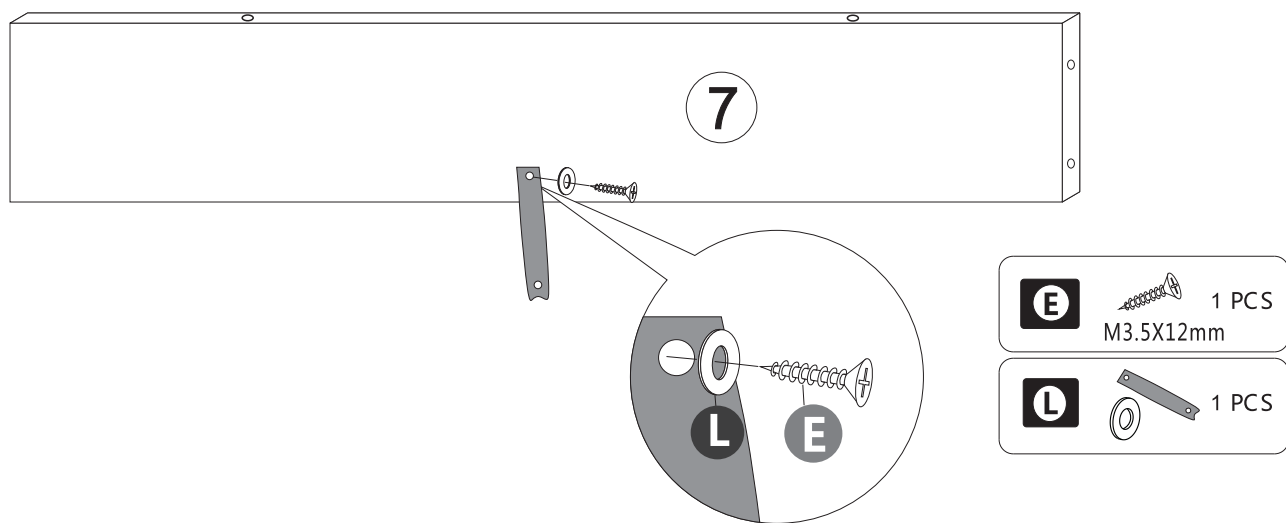

STEP 12

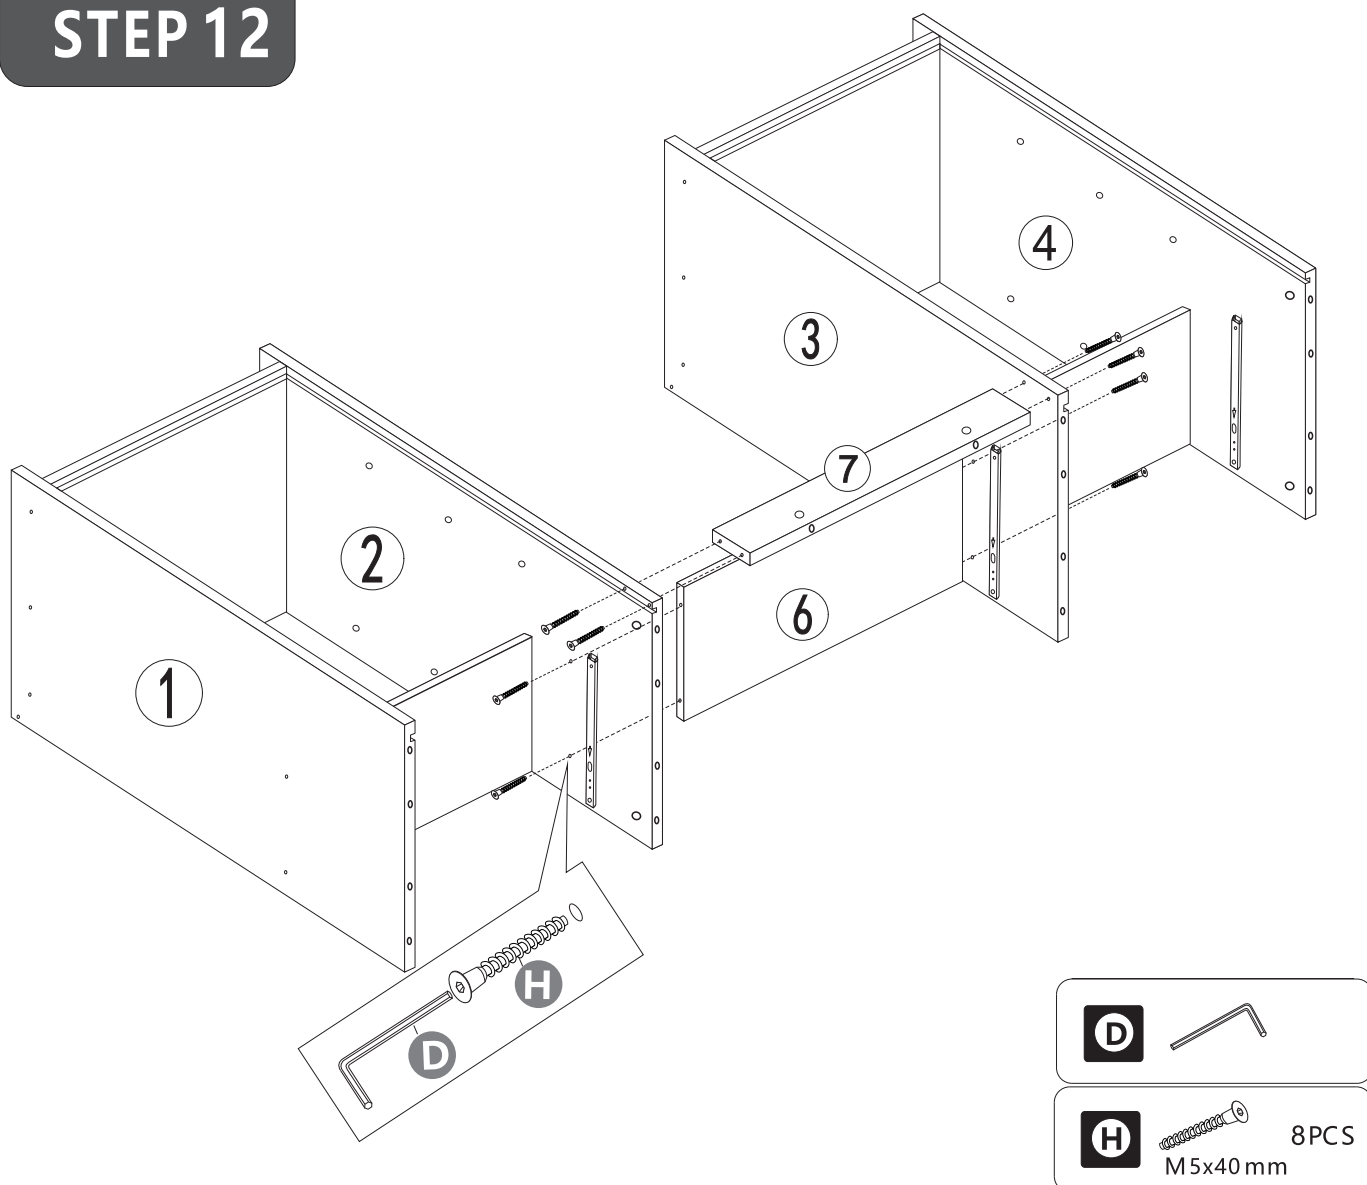

STEP 13

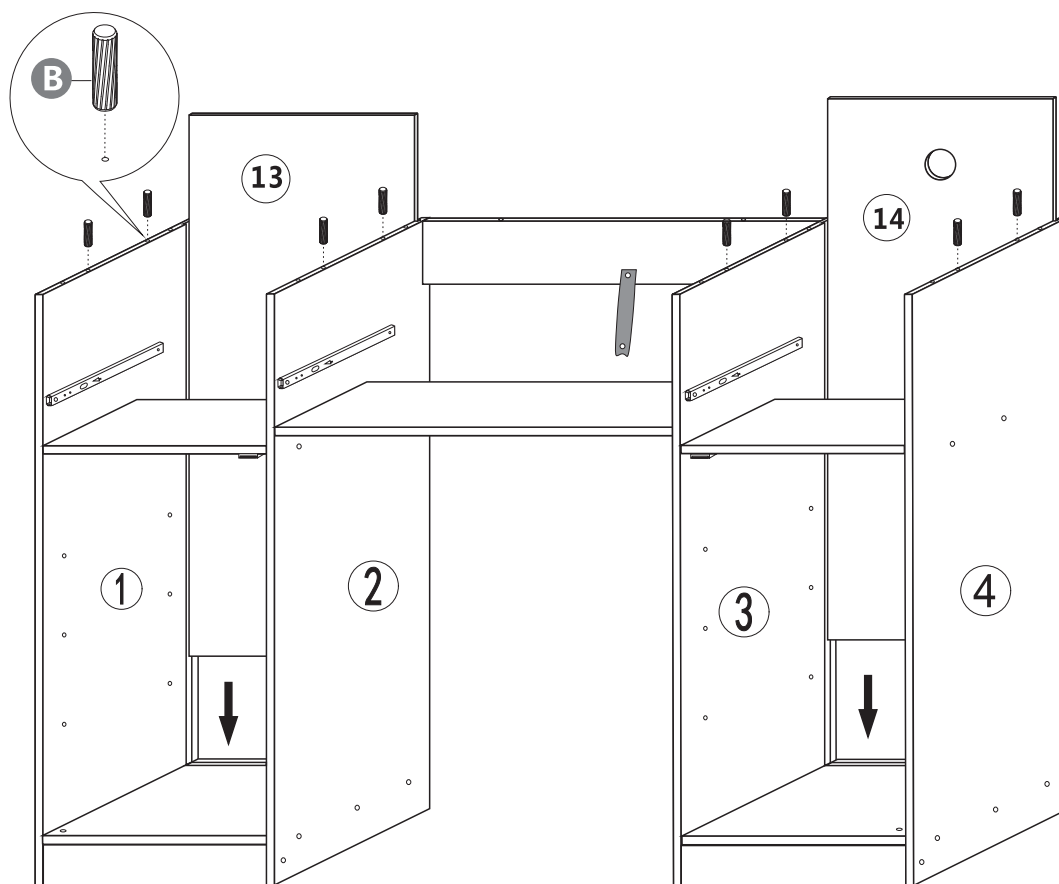


B




8 PCS

STEP 14

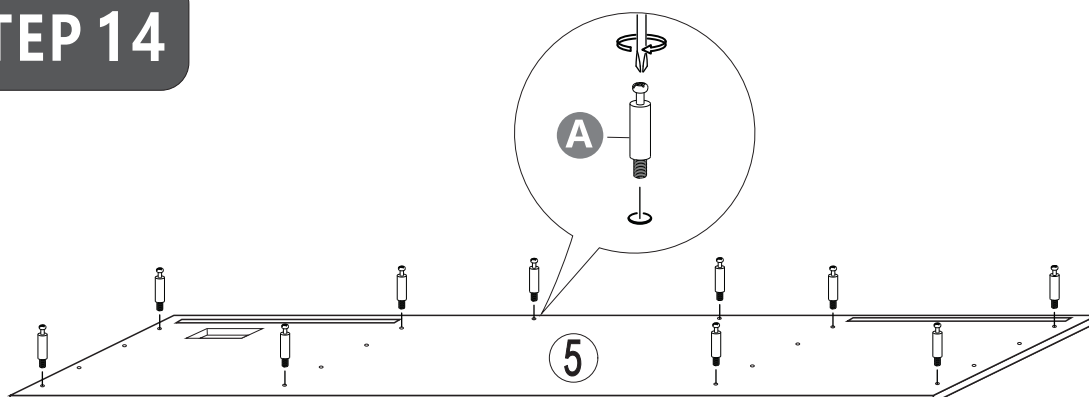


A



10PCS

STEP 15

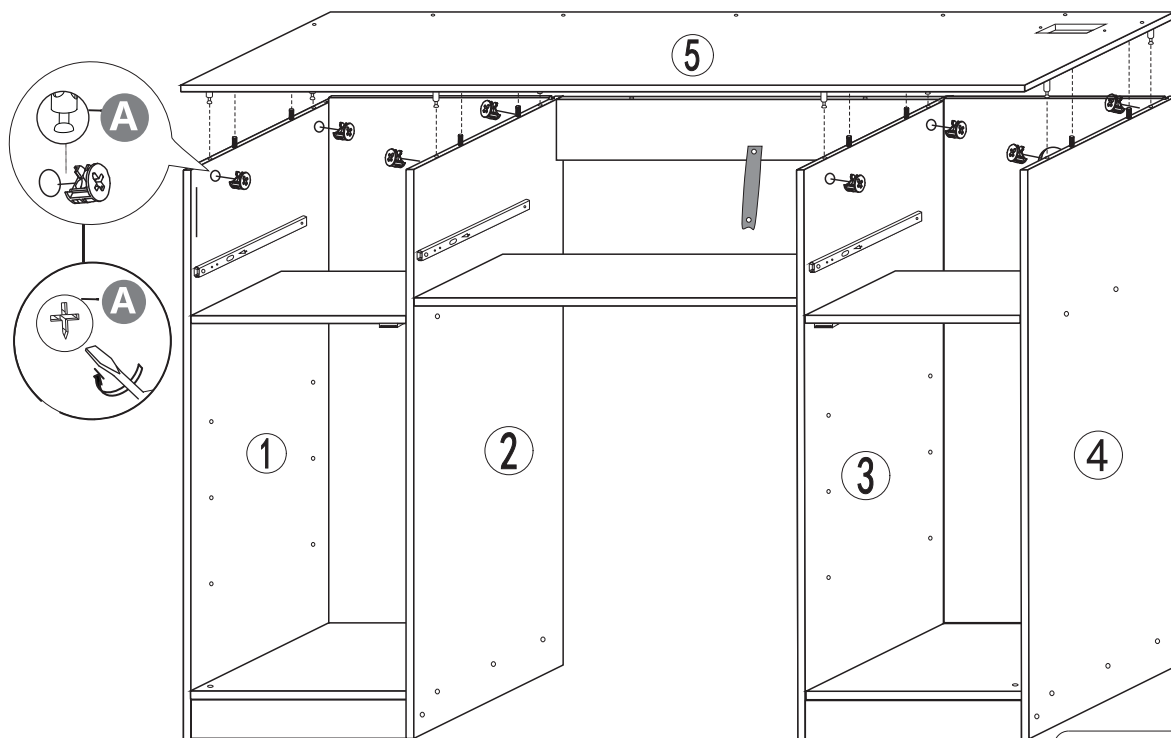


A




8 PCS

STEP 16

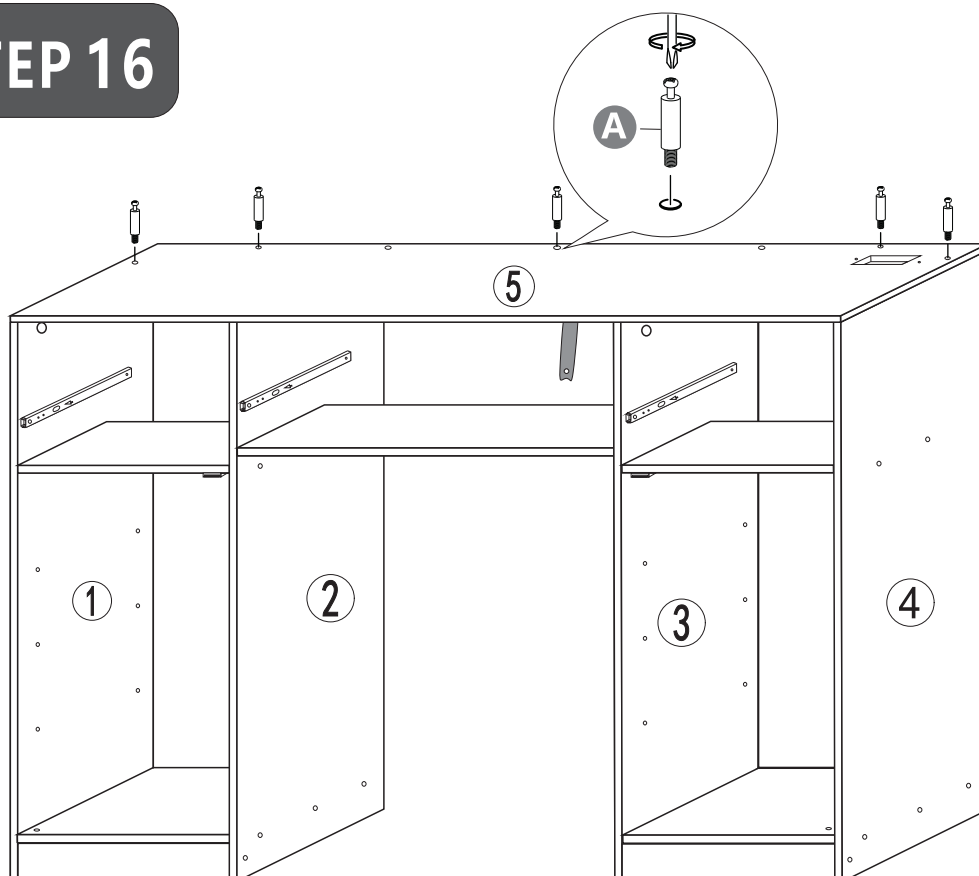


A



5 PCS

STEP 17

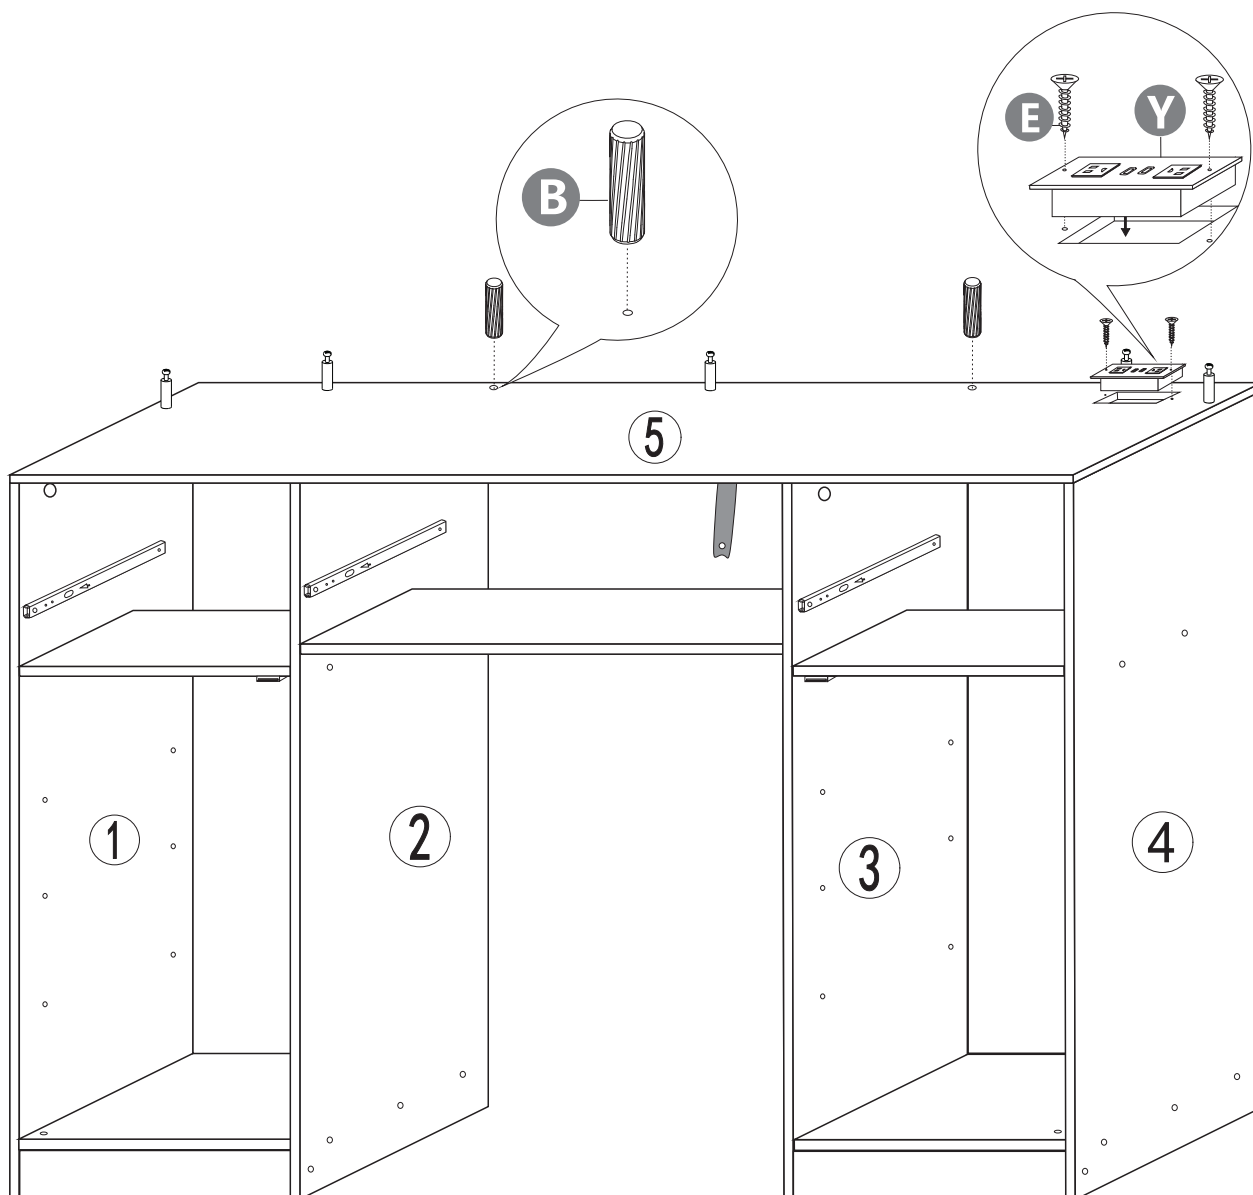


B 2 PCS

Y 1 PCS

E 2 PCS
M3.5X12mm

STEP 18

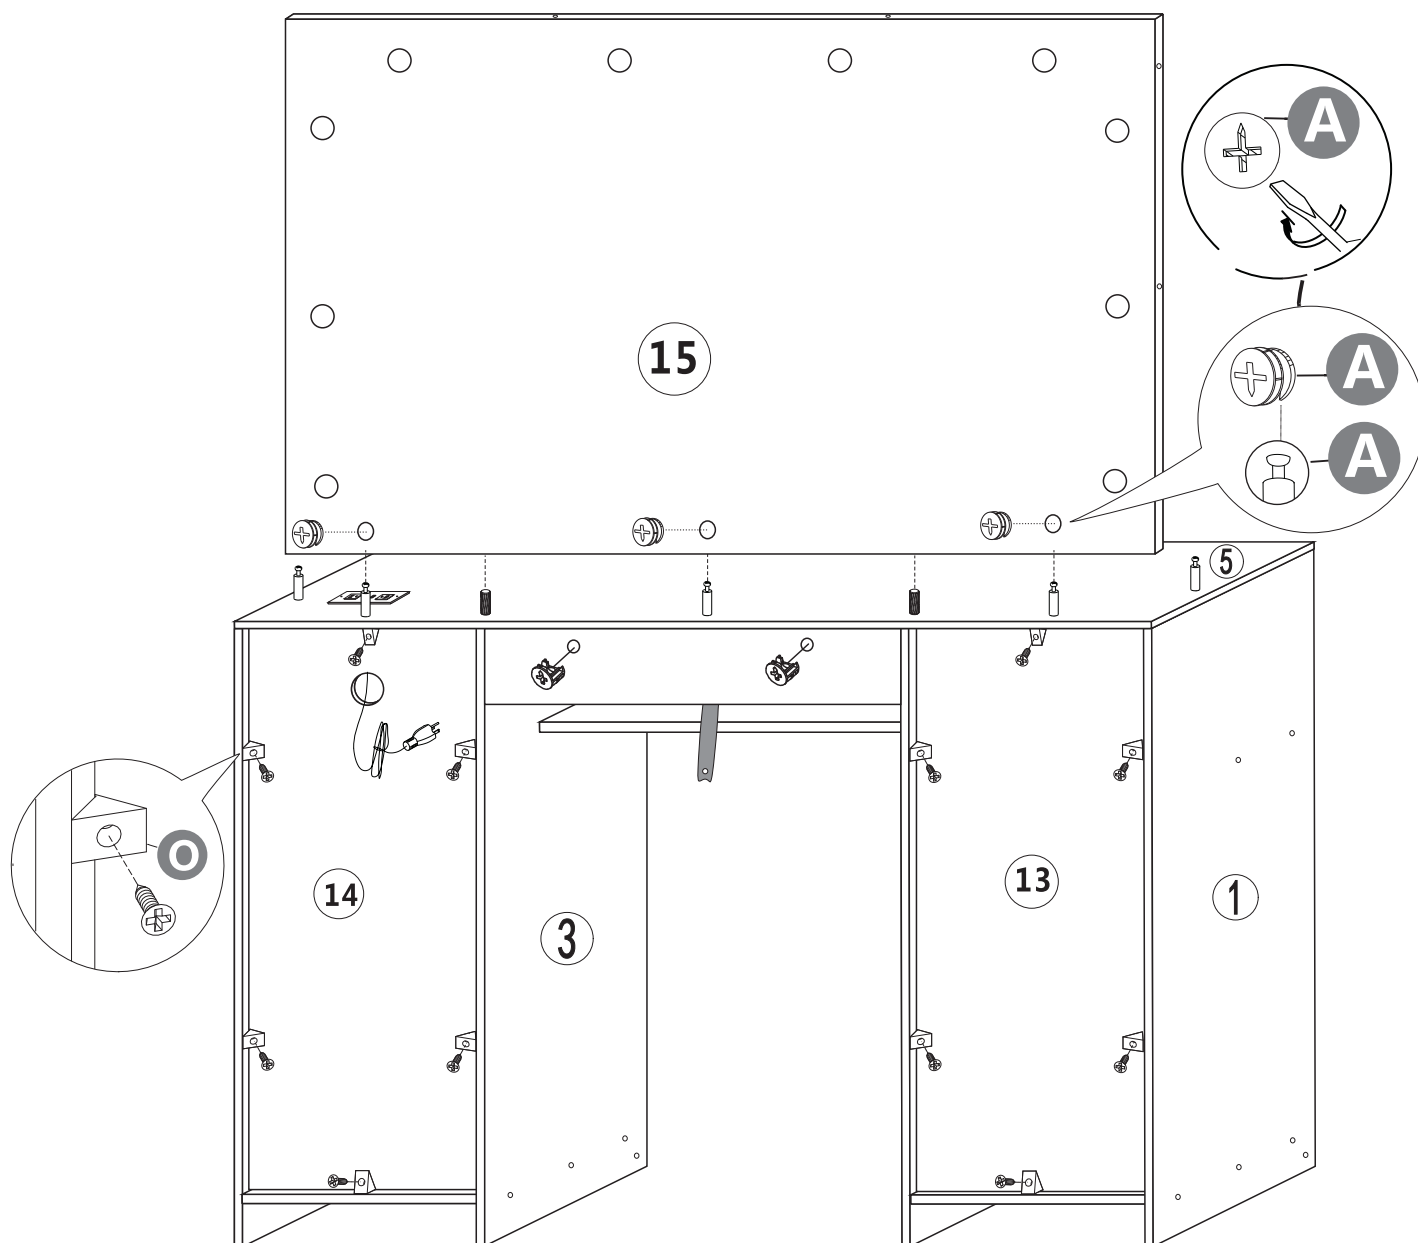

A



5 PCS


B



12PCS

M3X14mm


STEP 19

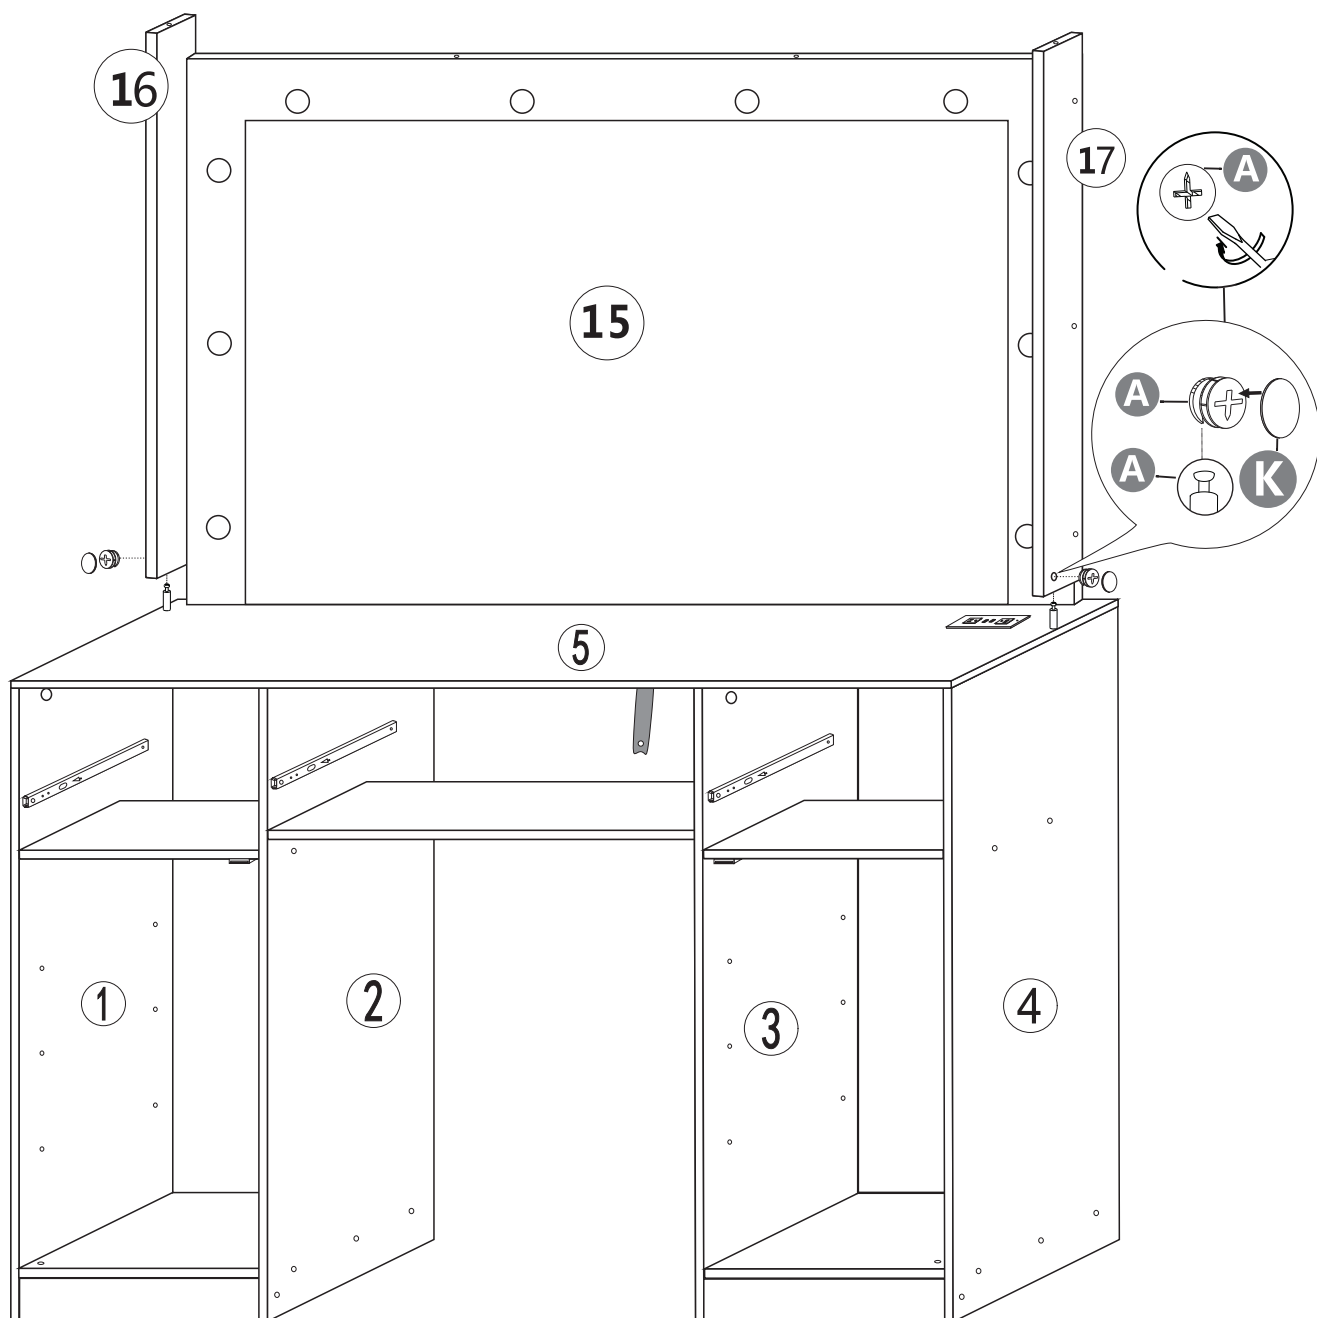

A  2 PCS

K  2 PCS
18mm

STEP 20

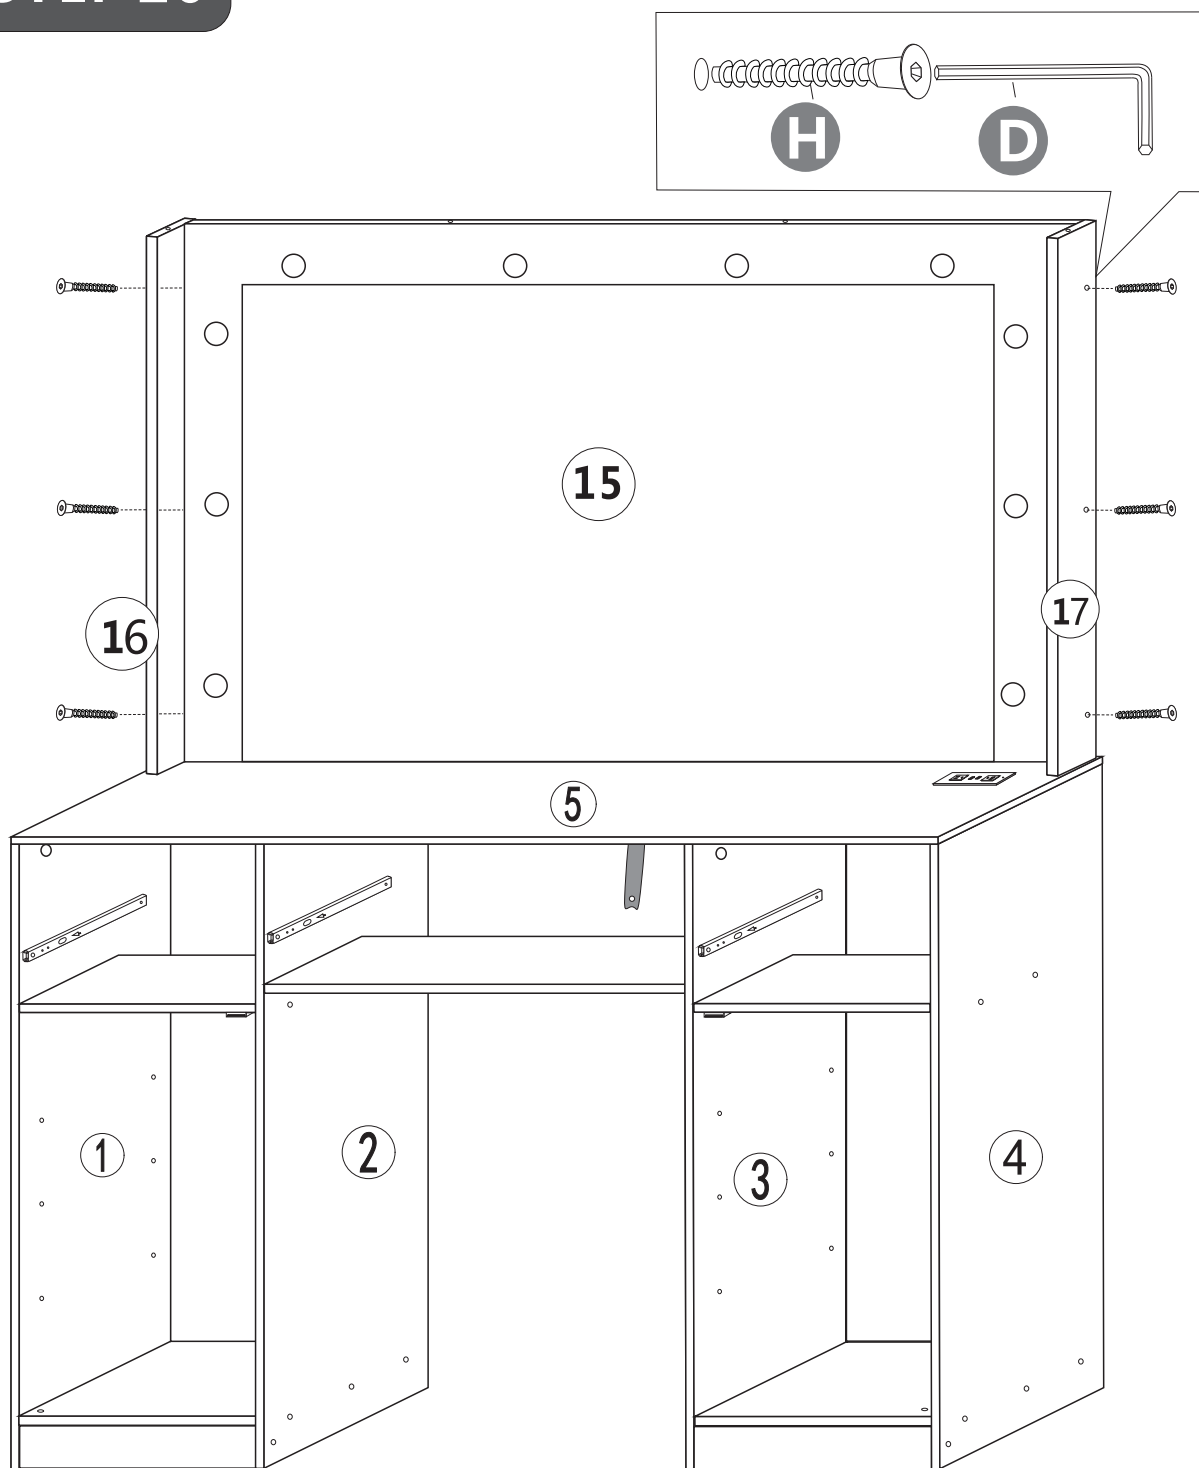

D




H



6PCS
M5x40mm

STEP 21

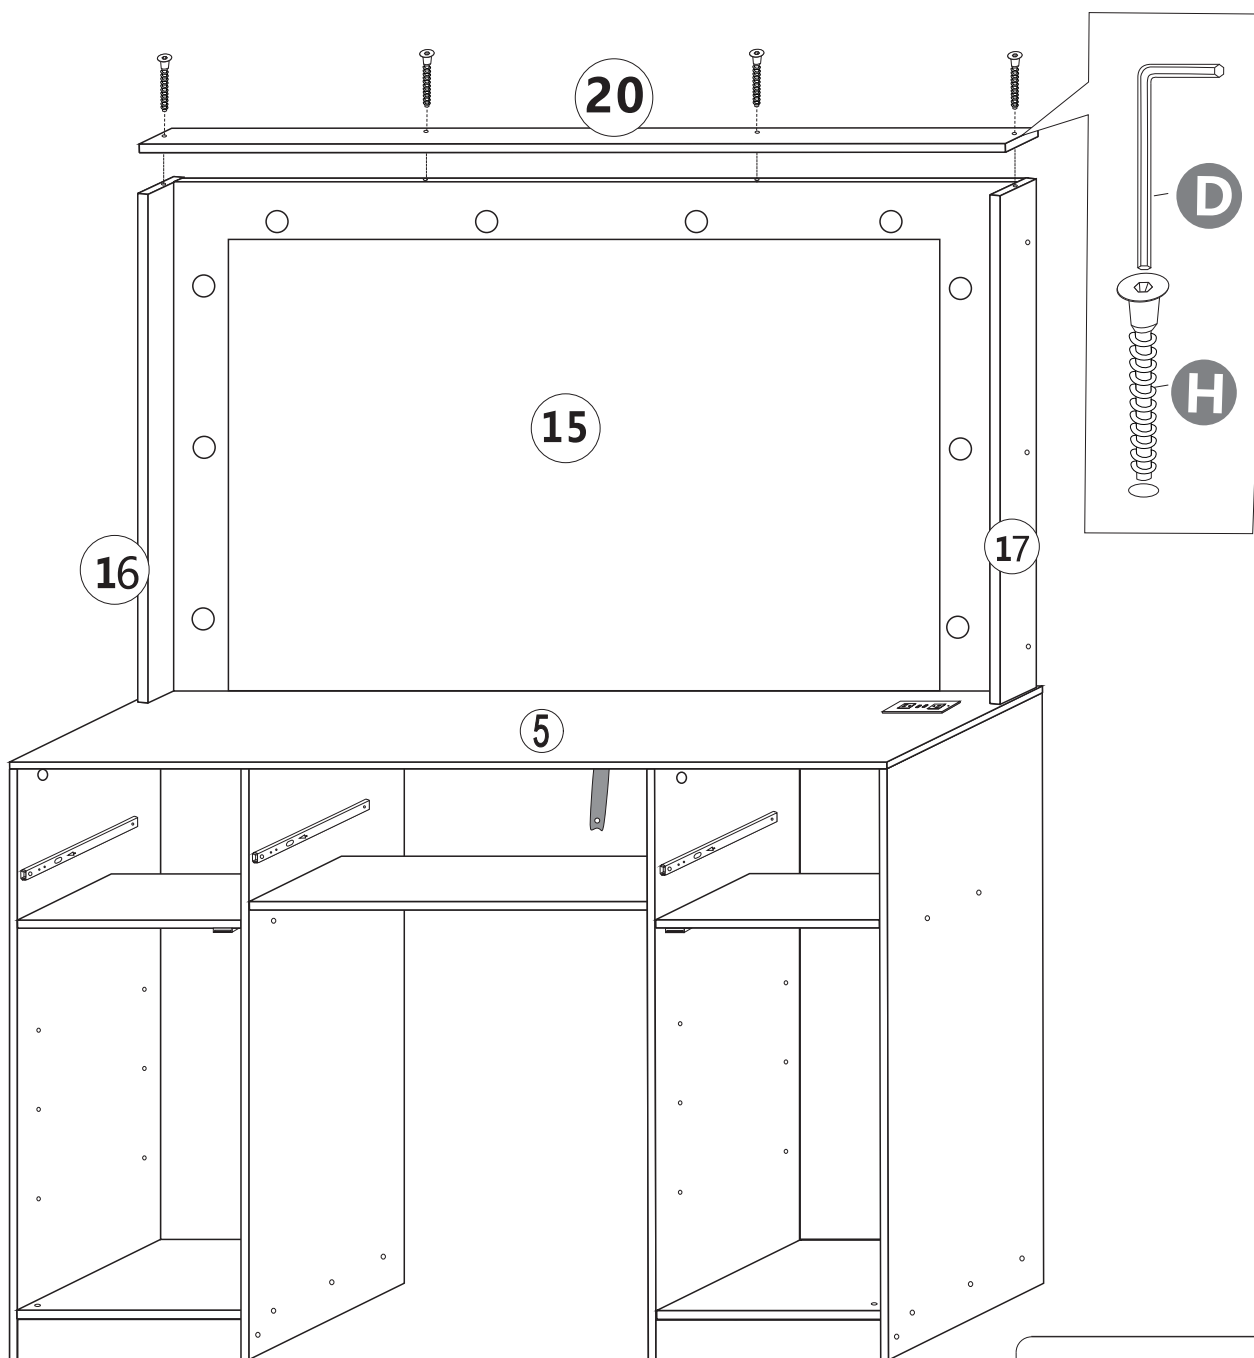


4PCS

M5x40 mm


STEP 22

How to assemble to LED Light


1. Please tear off the sticker
2. Put the bulb in the mirror hole
3. Connect the wires of two adjacent lights
(note: the same colors of the wires should be in same side)
4. Connect power plug, done

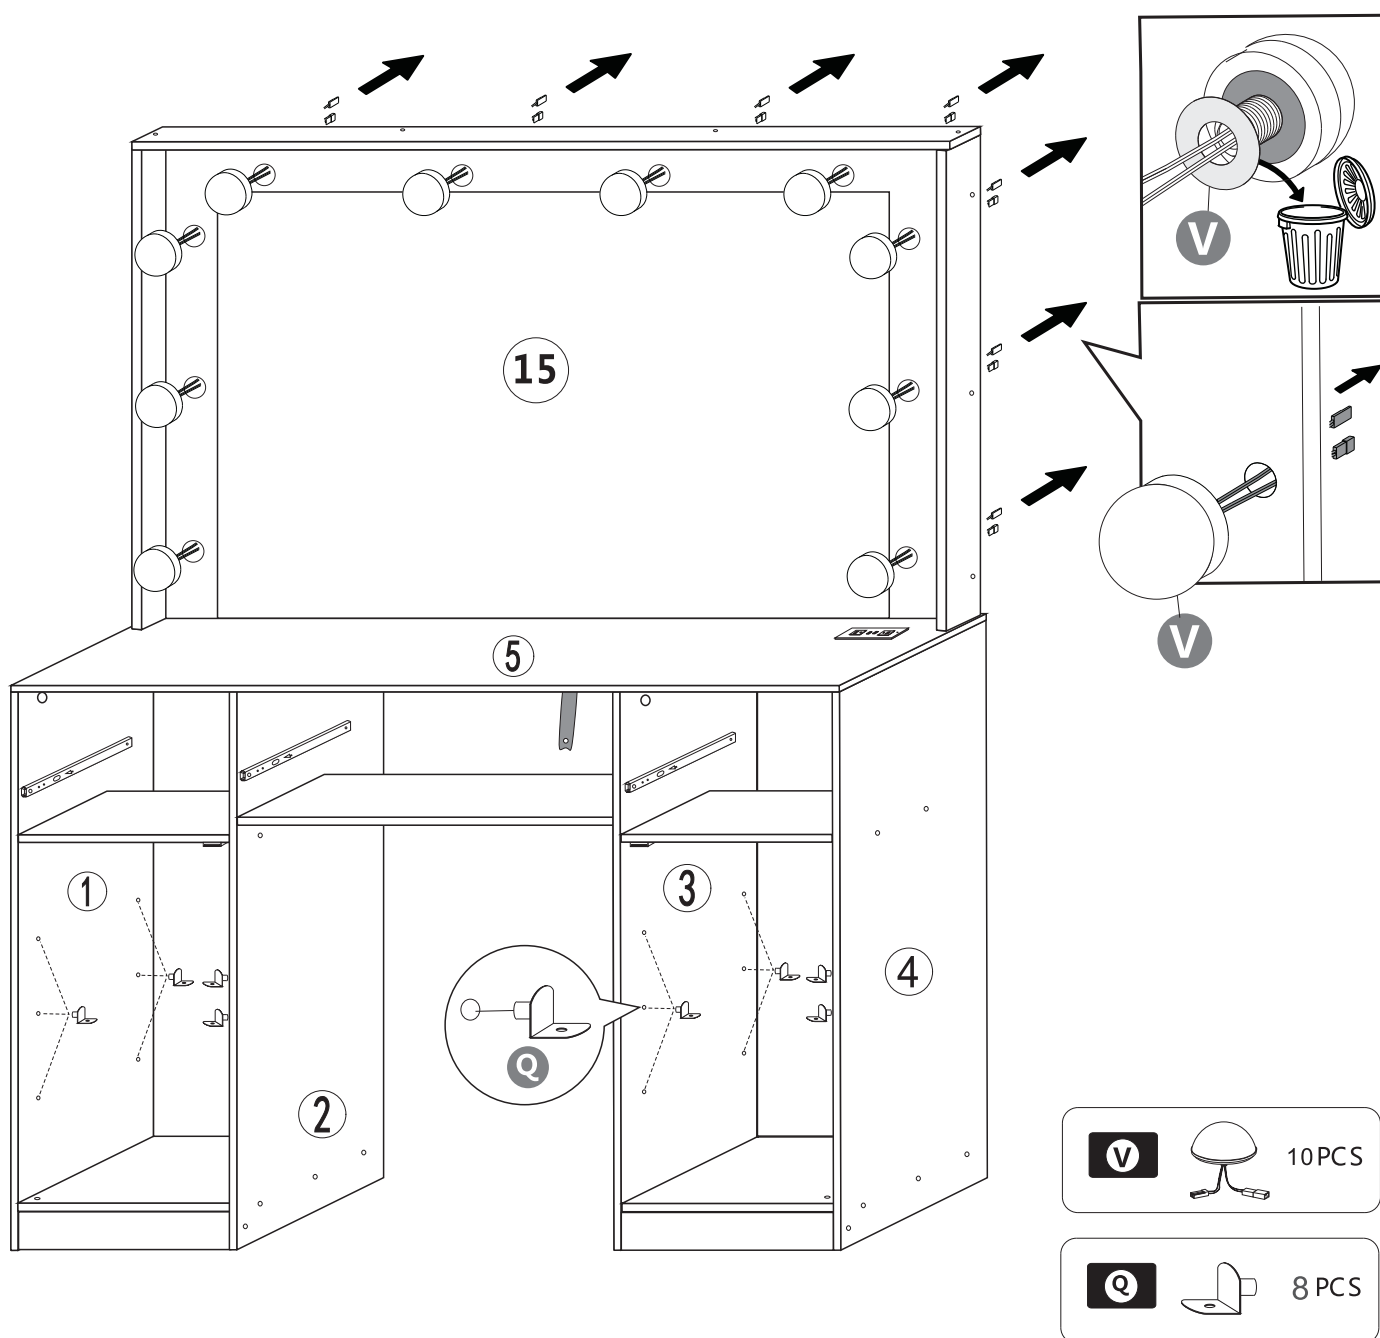

STEP 23

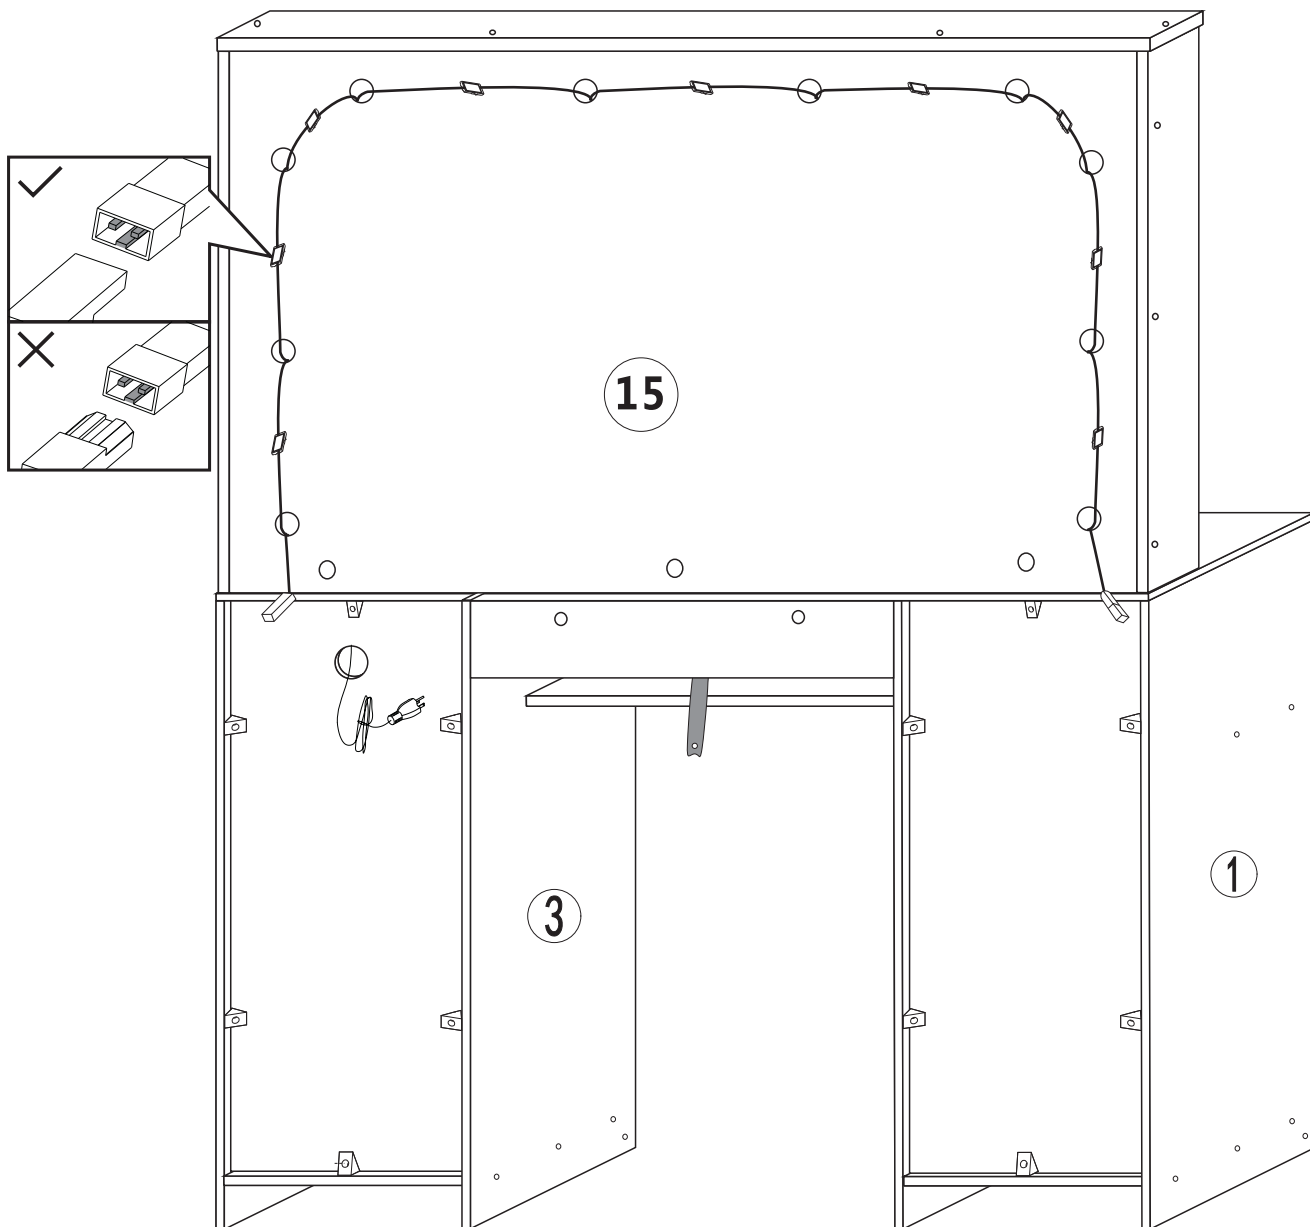


STEP 24

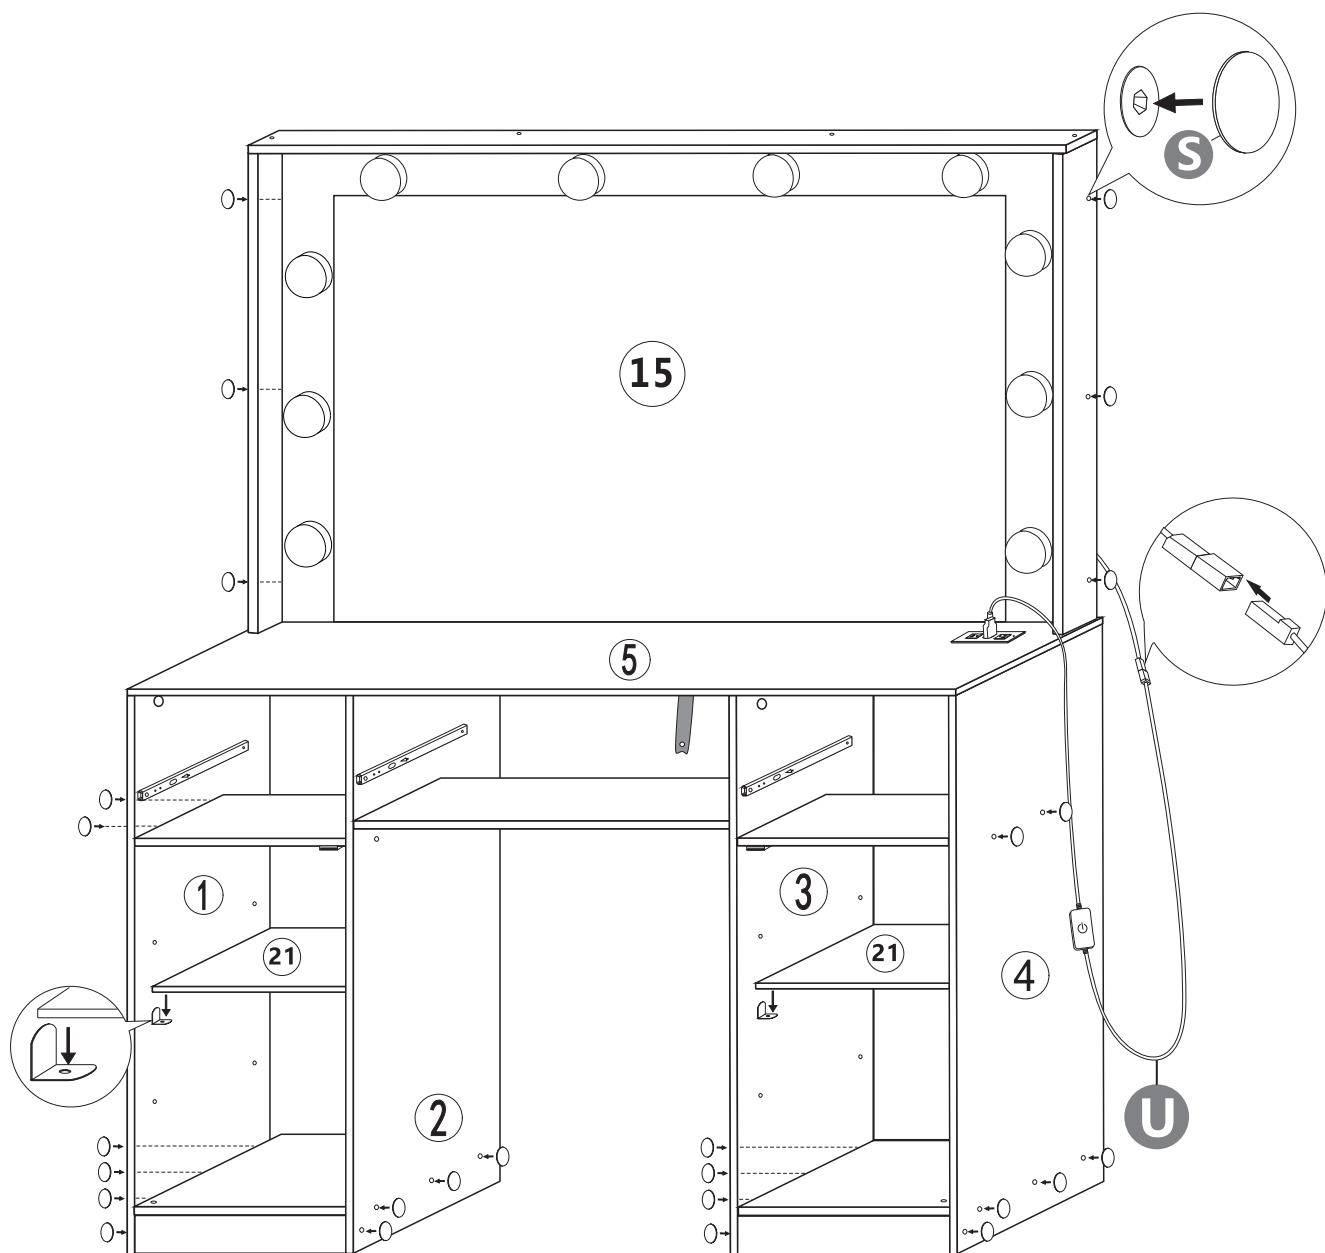

S  26 PCS
 $\phi 12$

U  1 PCS

STEP 25

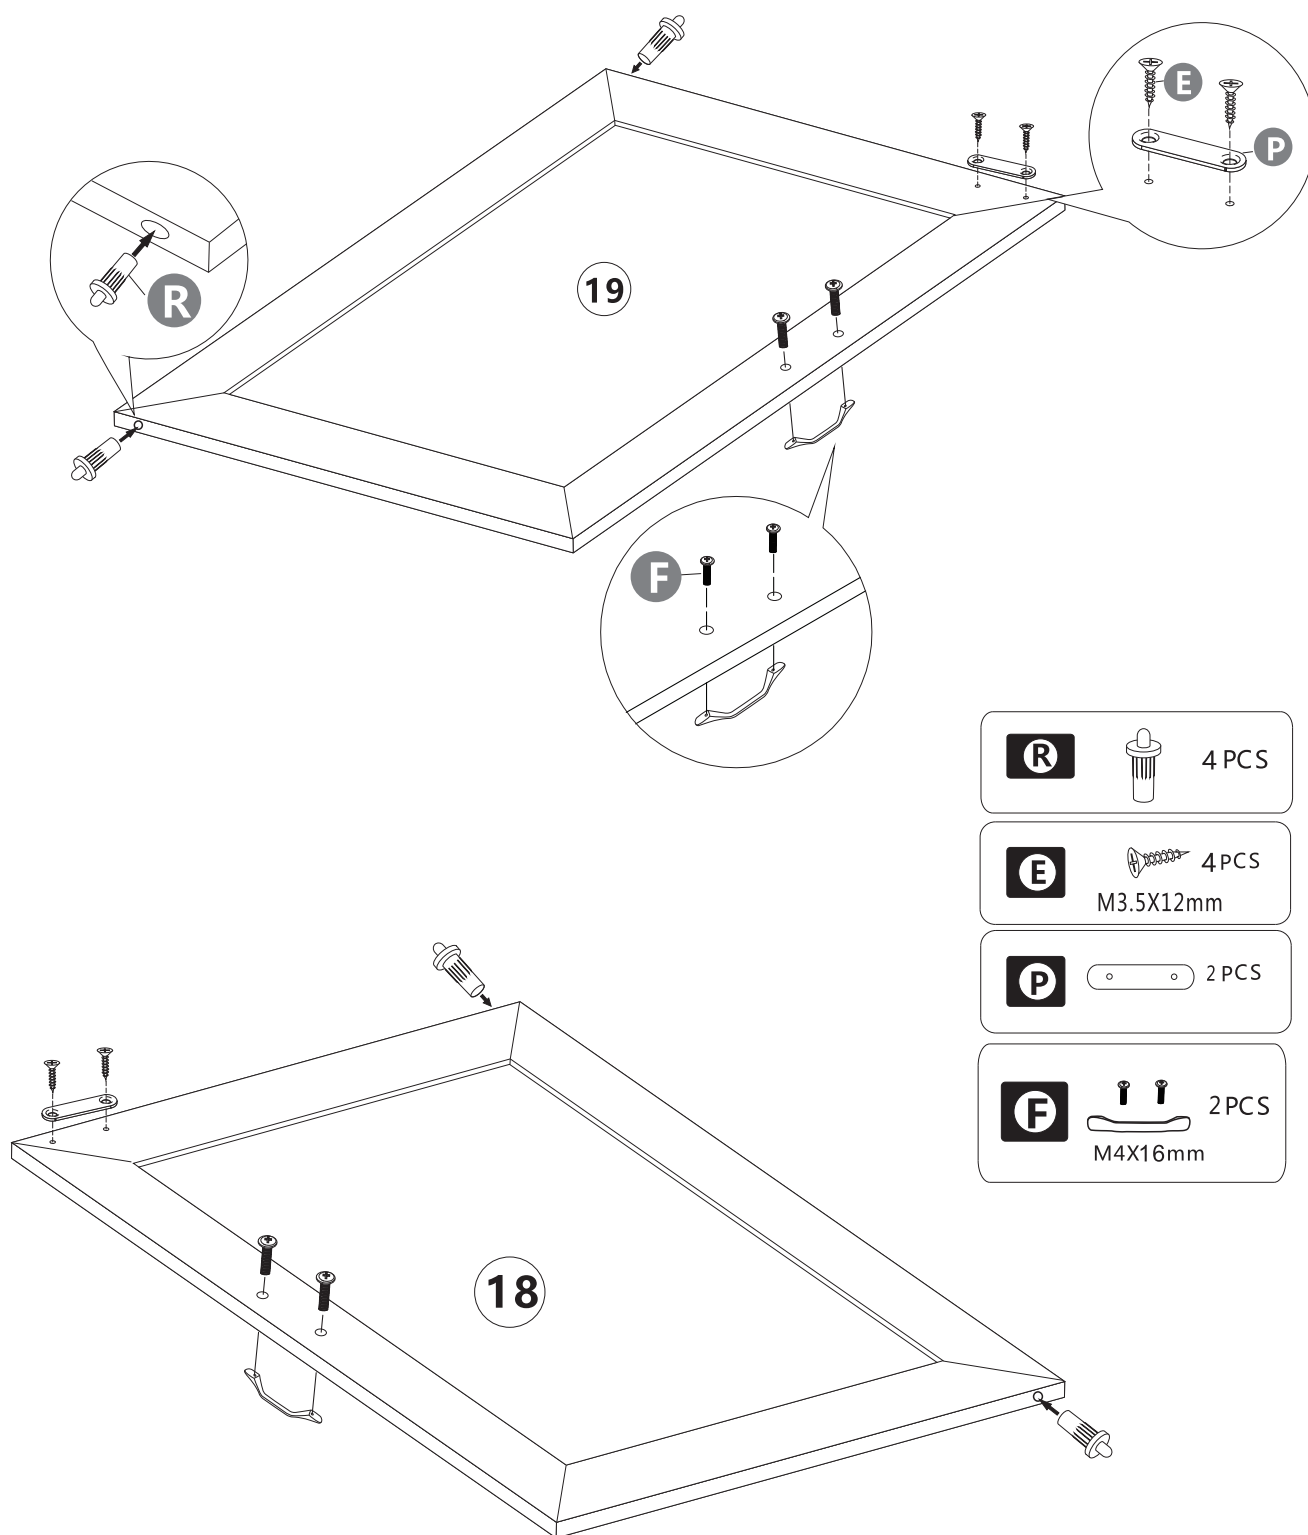

R



4 PCS

E



4 PCS
M3.5X12mm

P




2 PCS

F






2 PCS
M4X16mm





STEP 26

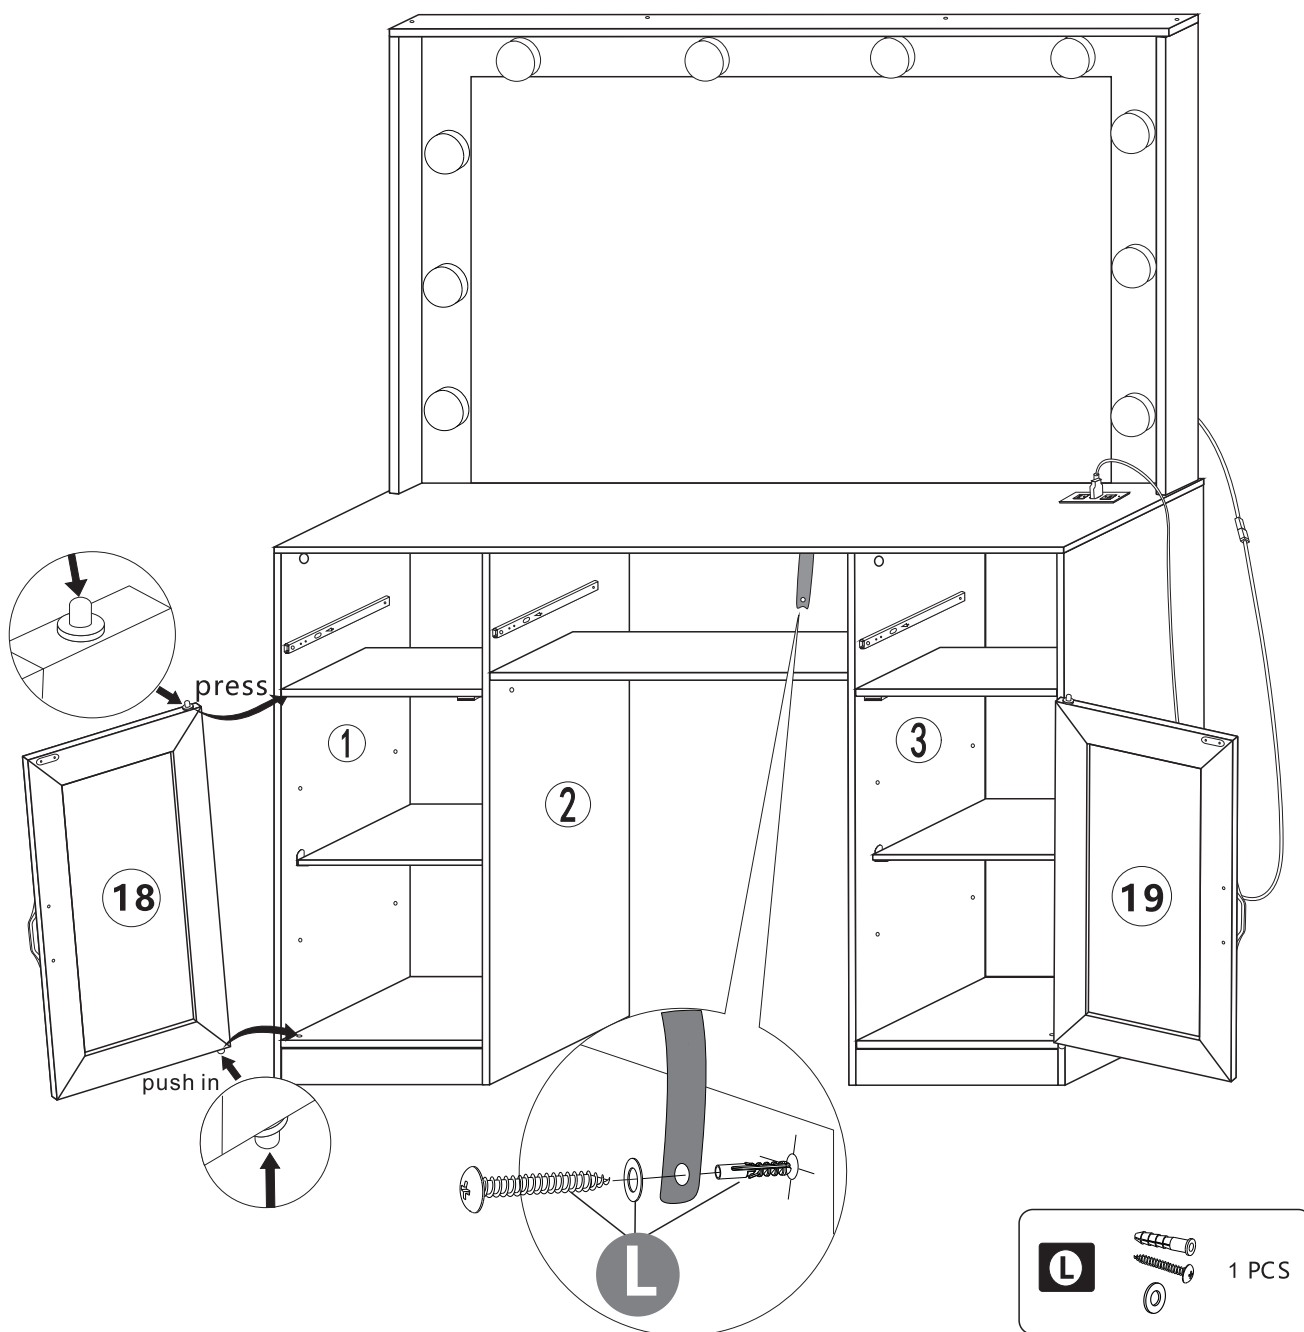



STEP 27

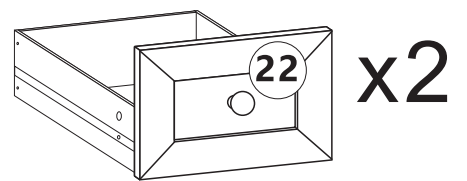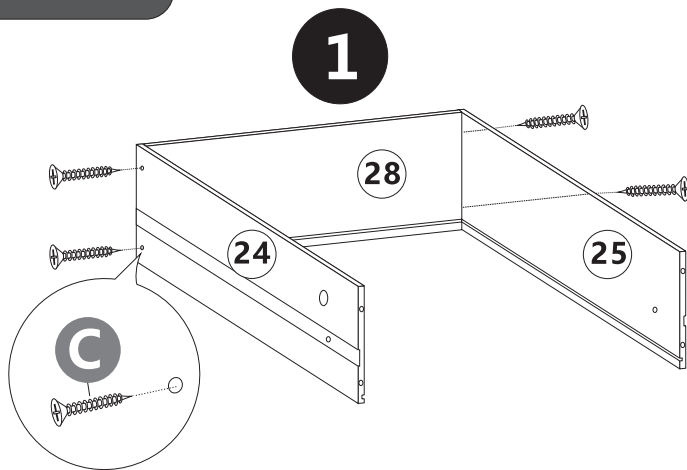

2

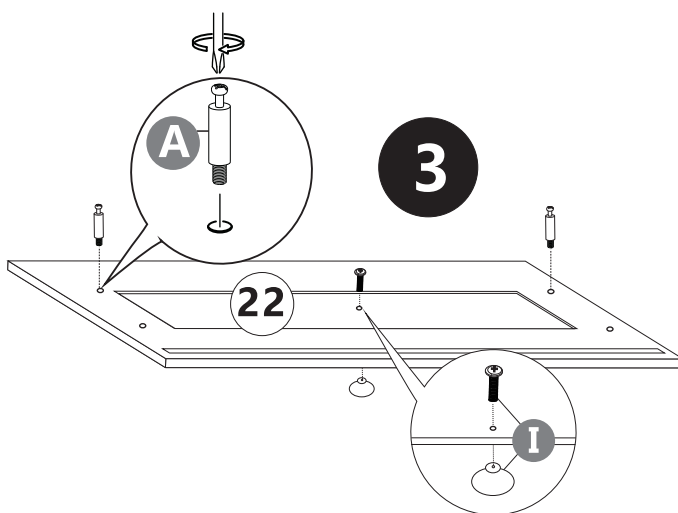
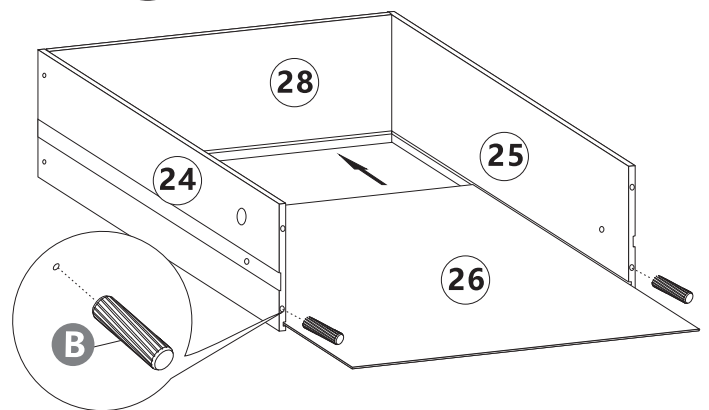


4

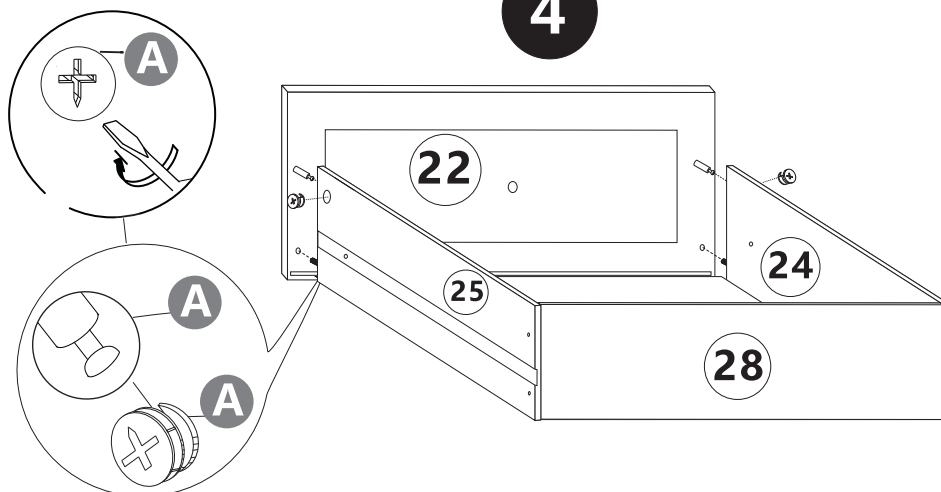

STEP 28

1

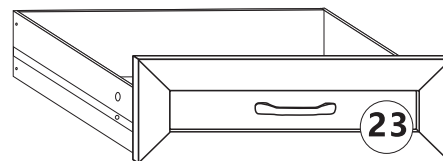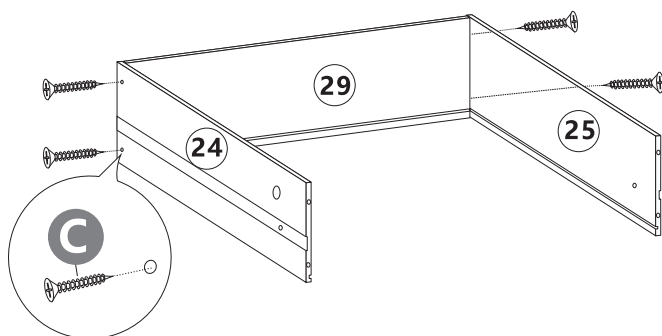


C




4 PCS

M4x35mm


2

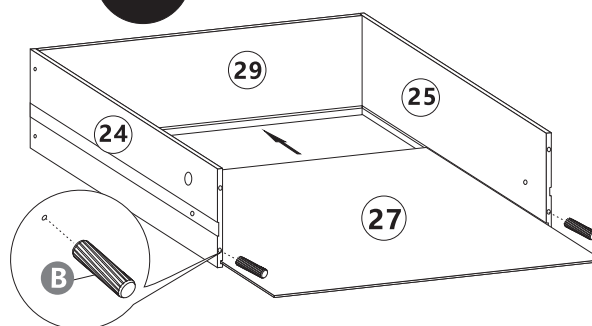


3

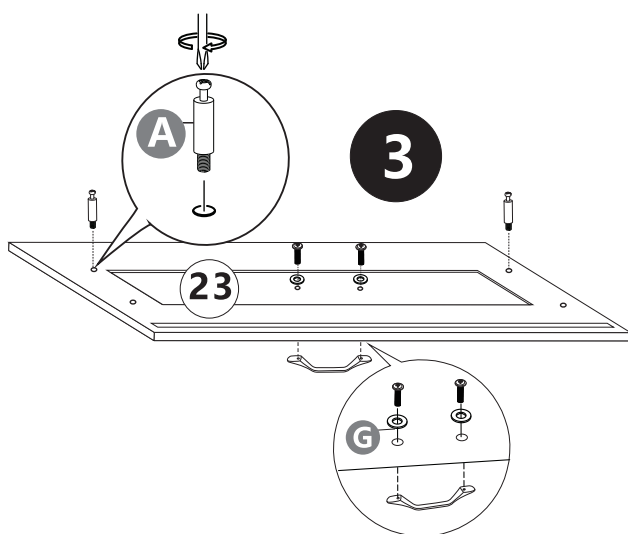

4

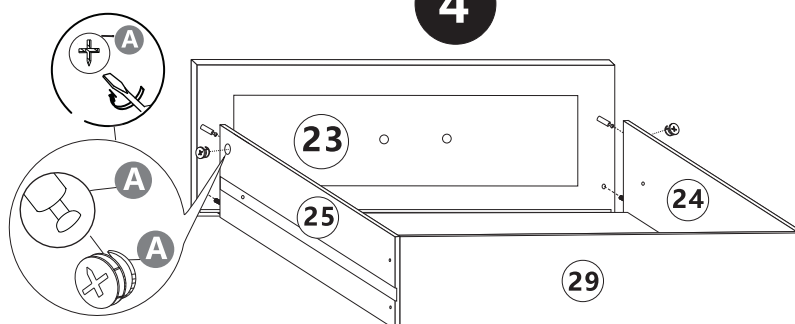

5

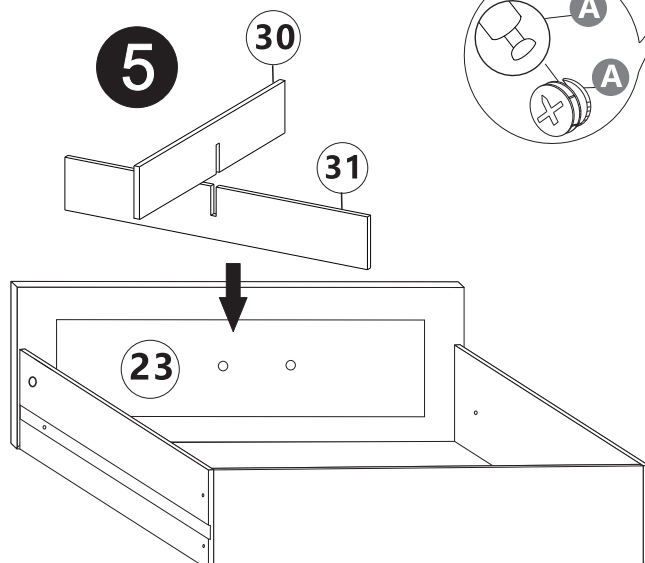

A



2 PCS

G



1 PCS

M4X 8 mm

B





2 PCS

A



2 PCS

STEP 29

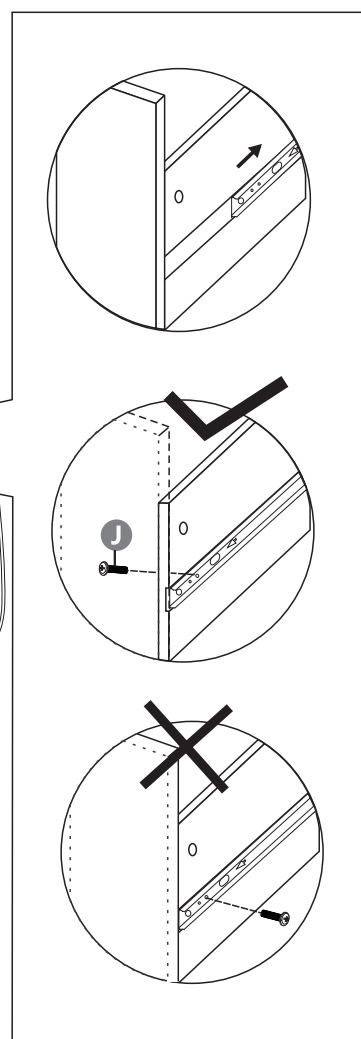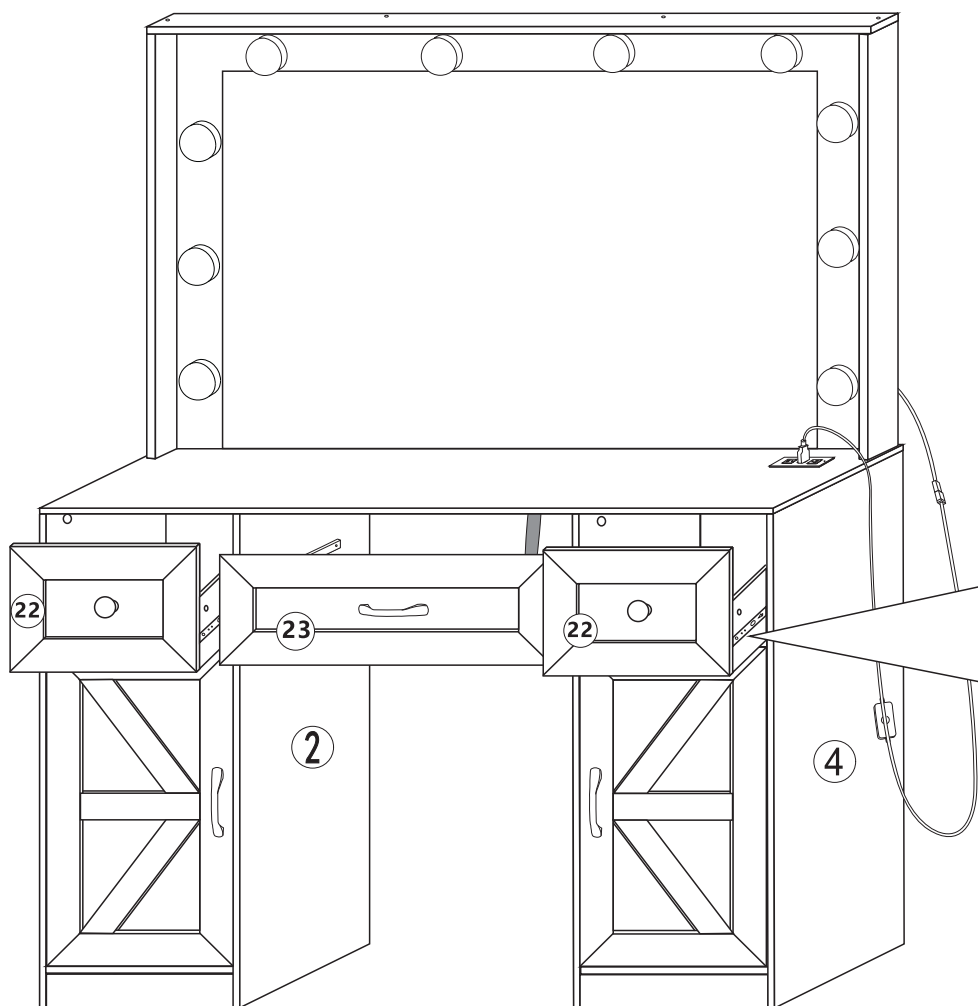


Tips: The screws connecting the guide rail are screwed from the inside to the outside.




6PCS

M4X 12mm


STEP 30

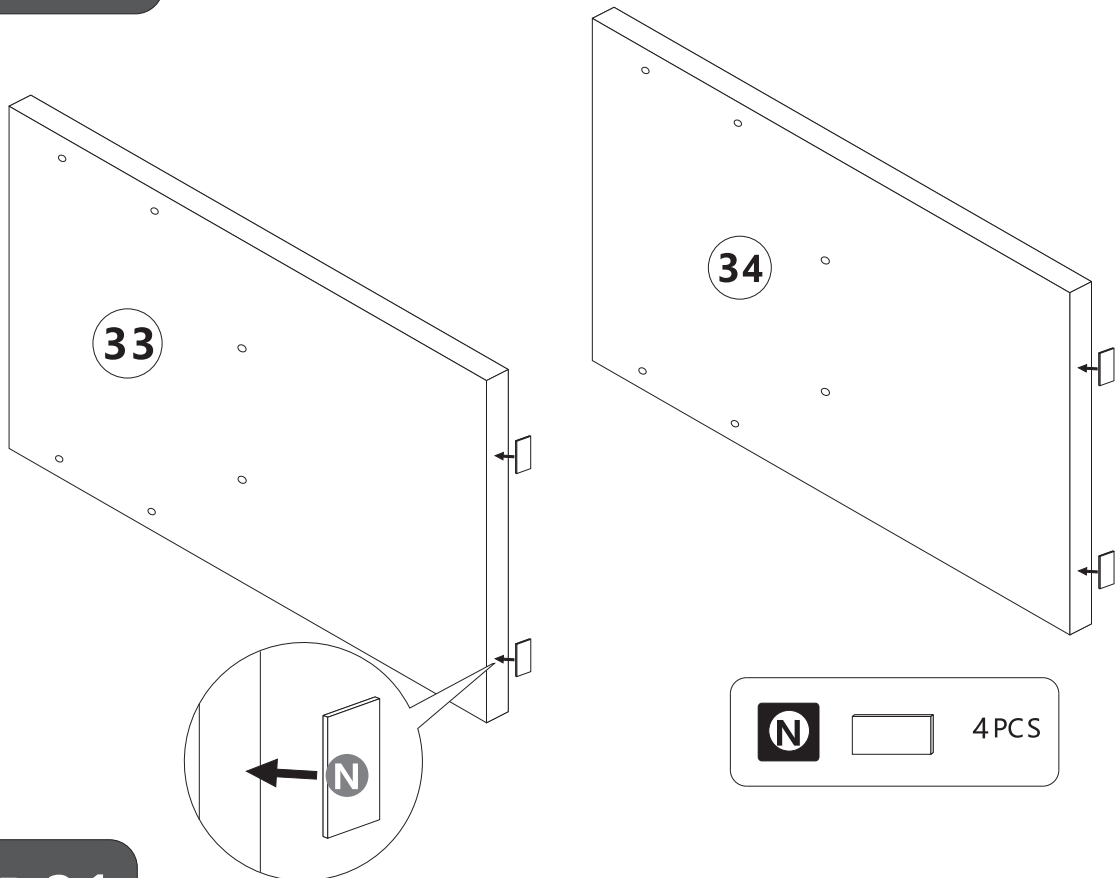

STEP 31

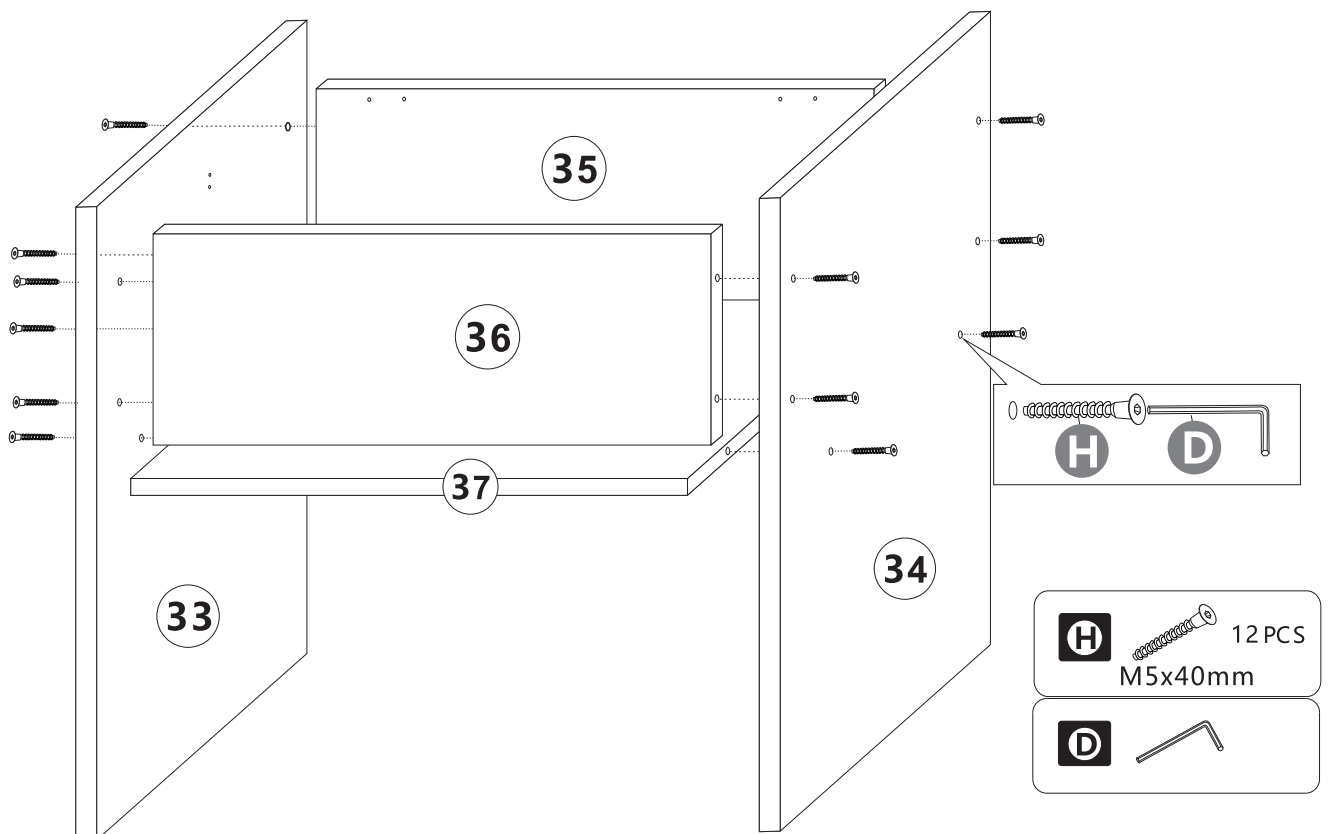

STEP 32

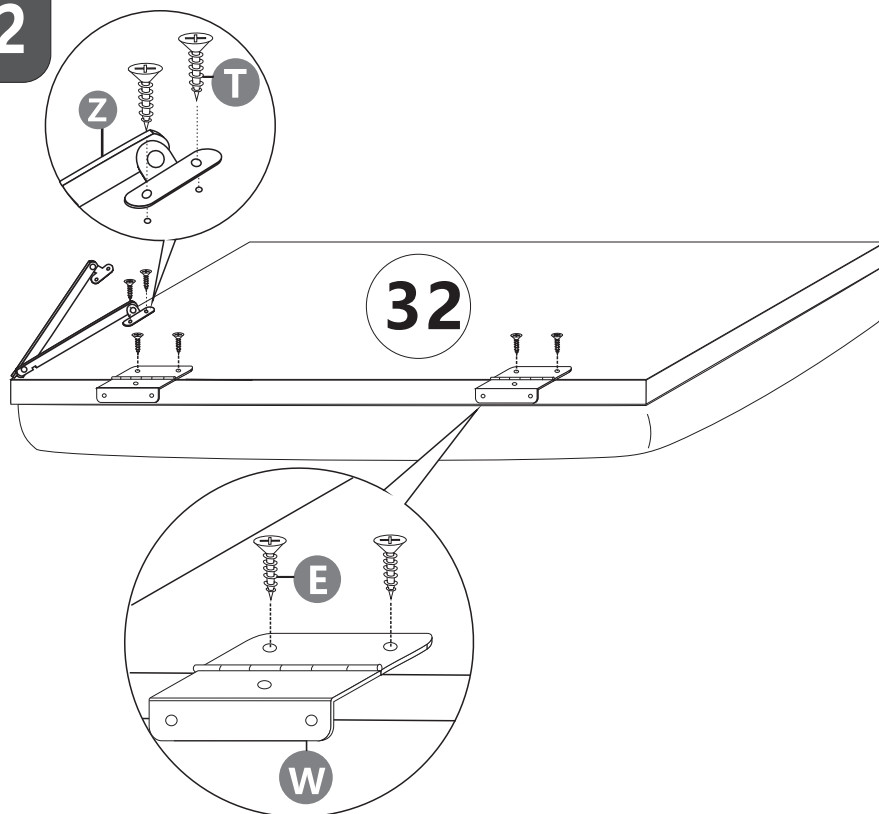


E  4 PCS
M3.5x12mm

W  2 PCS

T  2 PCS
M3X10mm

Z  1 PCS


STEP 33

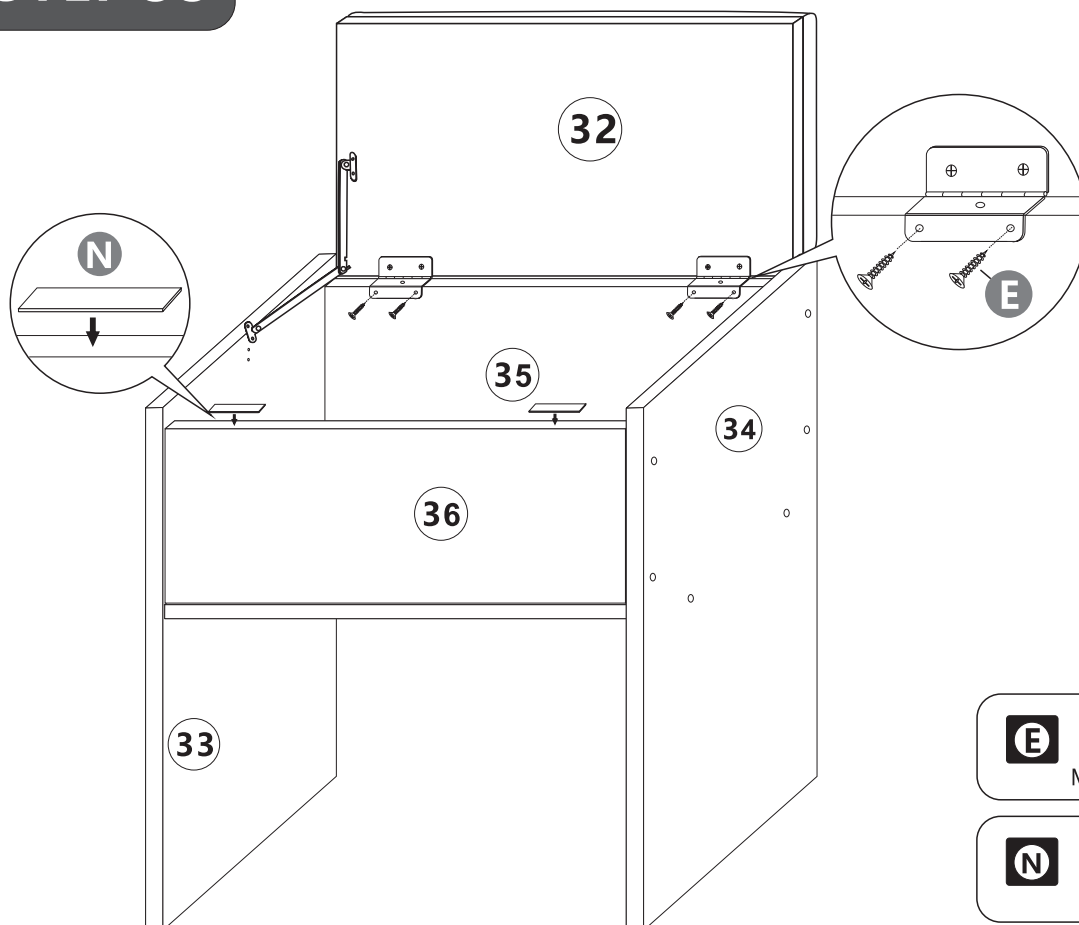

E  4 PCS
M3.5x12mm

N  2 PCS

STEP 34

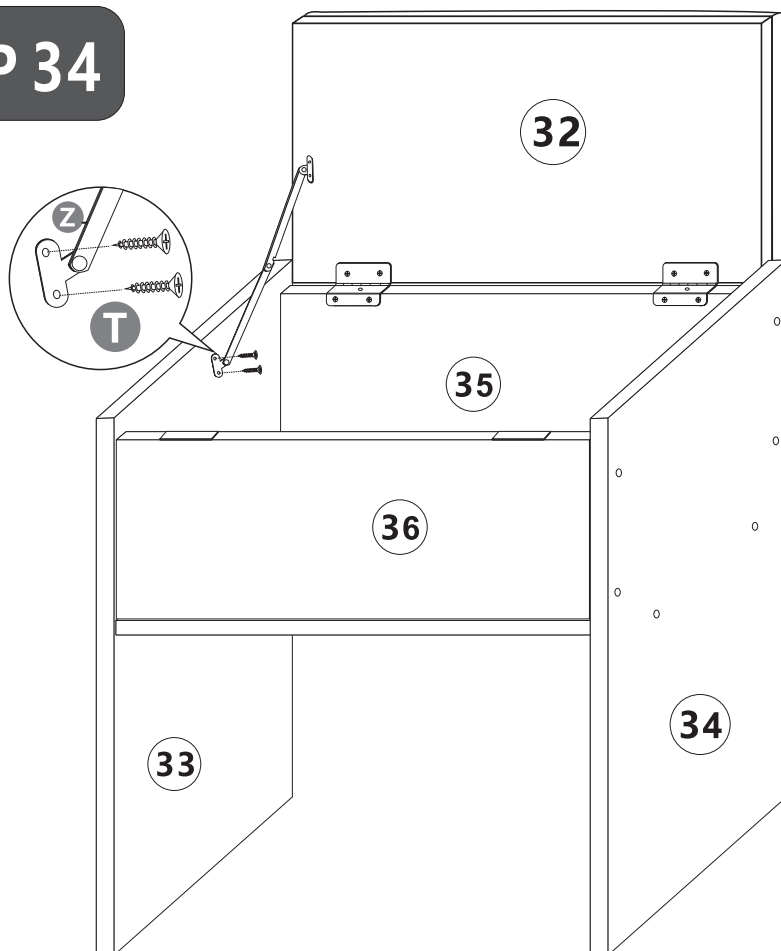


T



2 PCS

M3.5x10mm

STEP 35

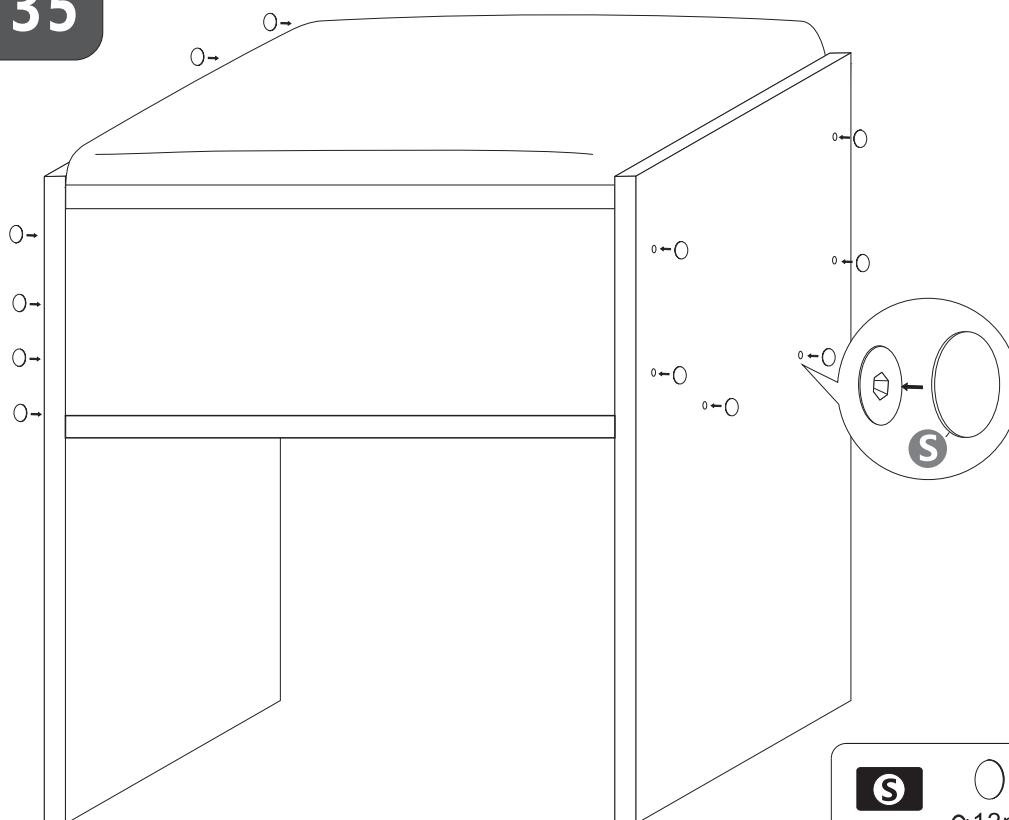

S



12PCS

Ø12mm