



Instruction Manual

Please save this manual for future reference.

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840


Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×8	②×8	③×1	④×2	⑤×2	⑥×18
				 M4*18	 M3*12
⑦×4	⑧×2	⑨×1	⑩×6	⑪×2	⑫×4
	 M4*35		 M3*20		
⑬×6	⑭×4	⑮×2	⑯×2		
 M3*14					

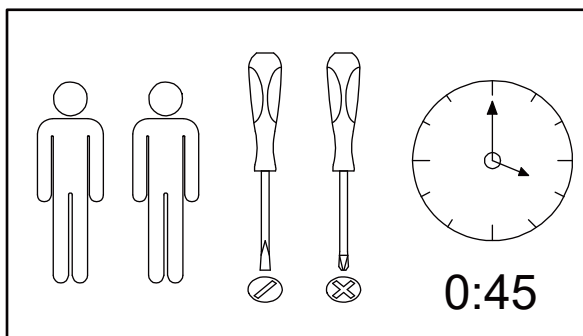

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840

Panels:

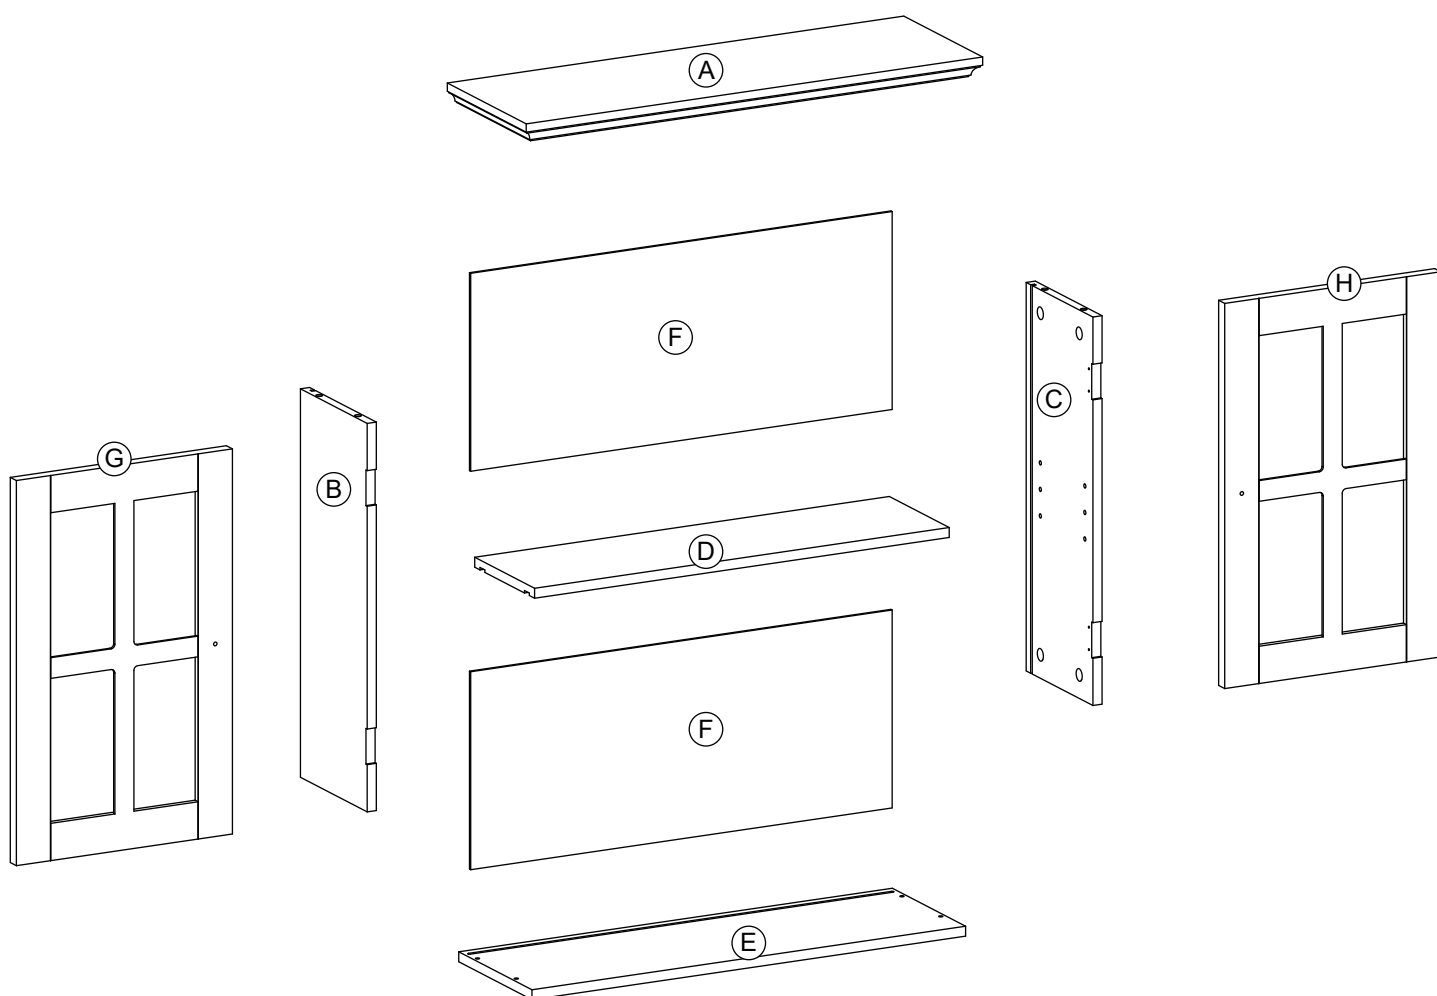

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840

Make sure the pins are installed correctly as shown with the “check mark” below:

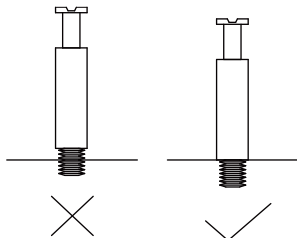

Below shows how the pins are used to assemble the panels together.




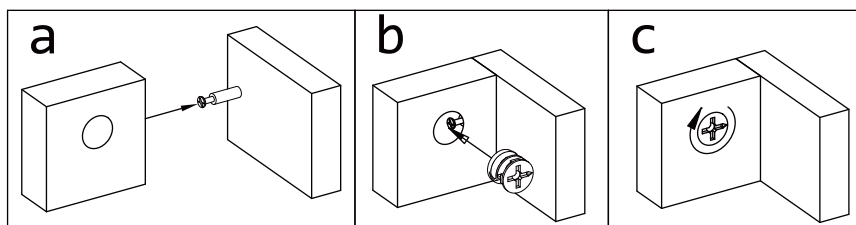


FIGURE A

Step 1

Screw cam bolts (1) to bottom panel E as shown

Fix E to side panel B & C, then Insert cam locks (2) and tighten

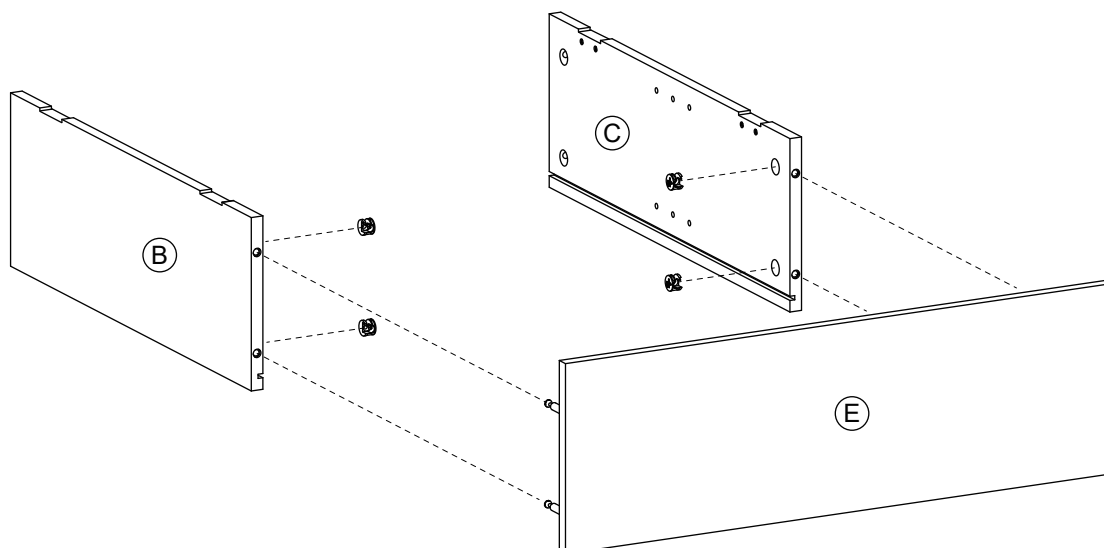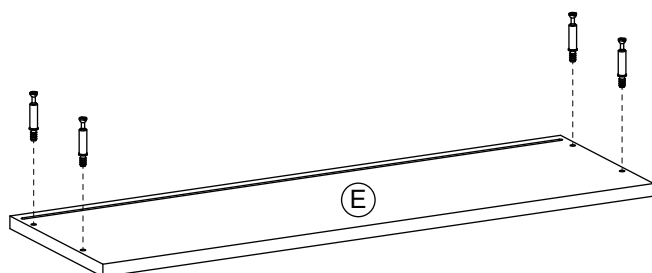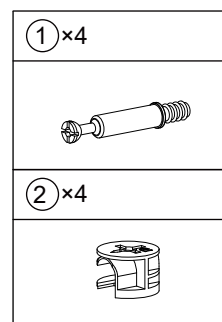





Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840

Step 2

Insert back panels F align with groove. Use H-joint (3) to combine two back panels F together.

Fix Magnet catch (9) to top panel A with screws (13).

Screw cam bolts (1) to A, Assemble A to unit, then Insert cam locks (2) and tighten.

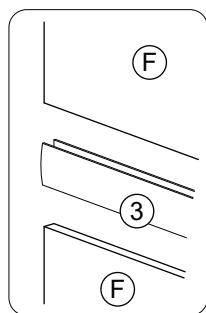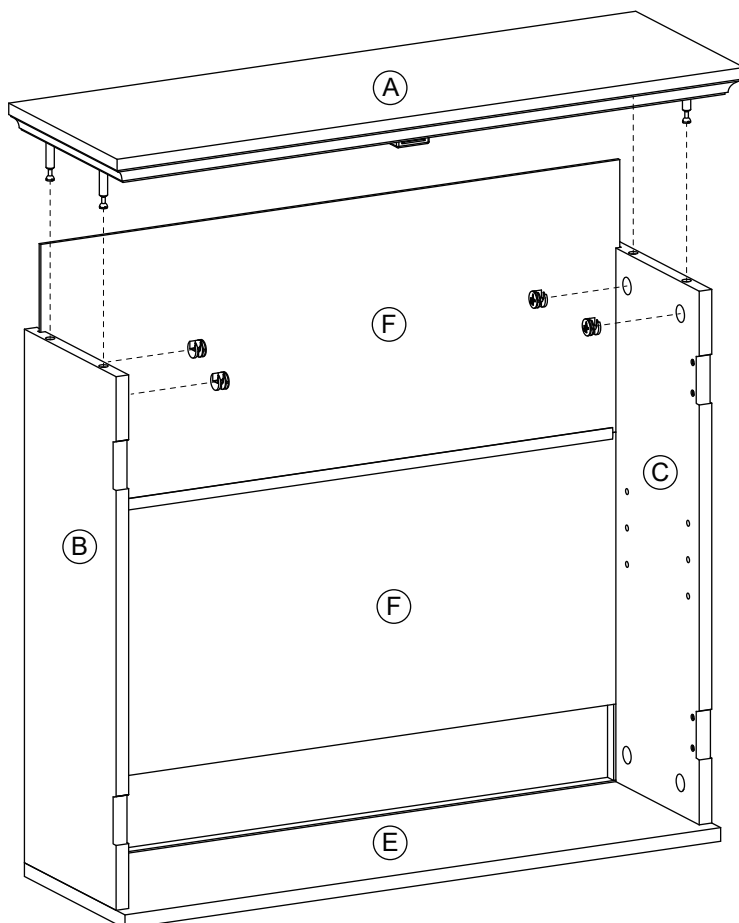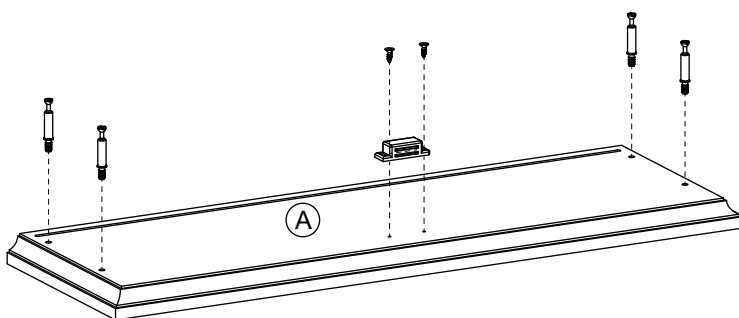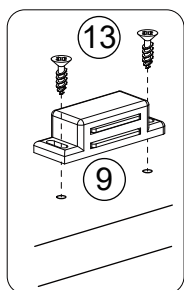

①×4
②×4
③×1
⑨×4
⑬×2

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840


Step 3

Insert Layer supports (12) into the side panel B&C. Put adjustable shelf D into place.

Fix handle (4) to Door G & H with bolt (5).

Fix magnet plate (15) to G & H with screw (6).




Assemble the hinges (7) to door G & H with screws (6),

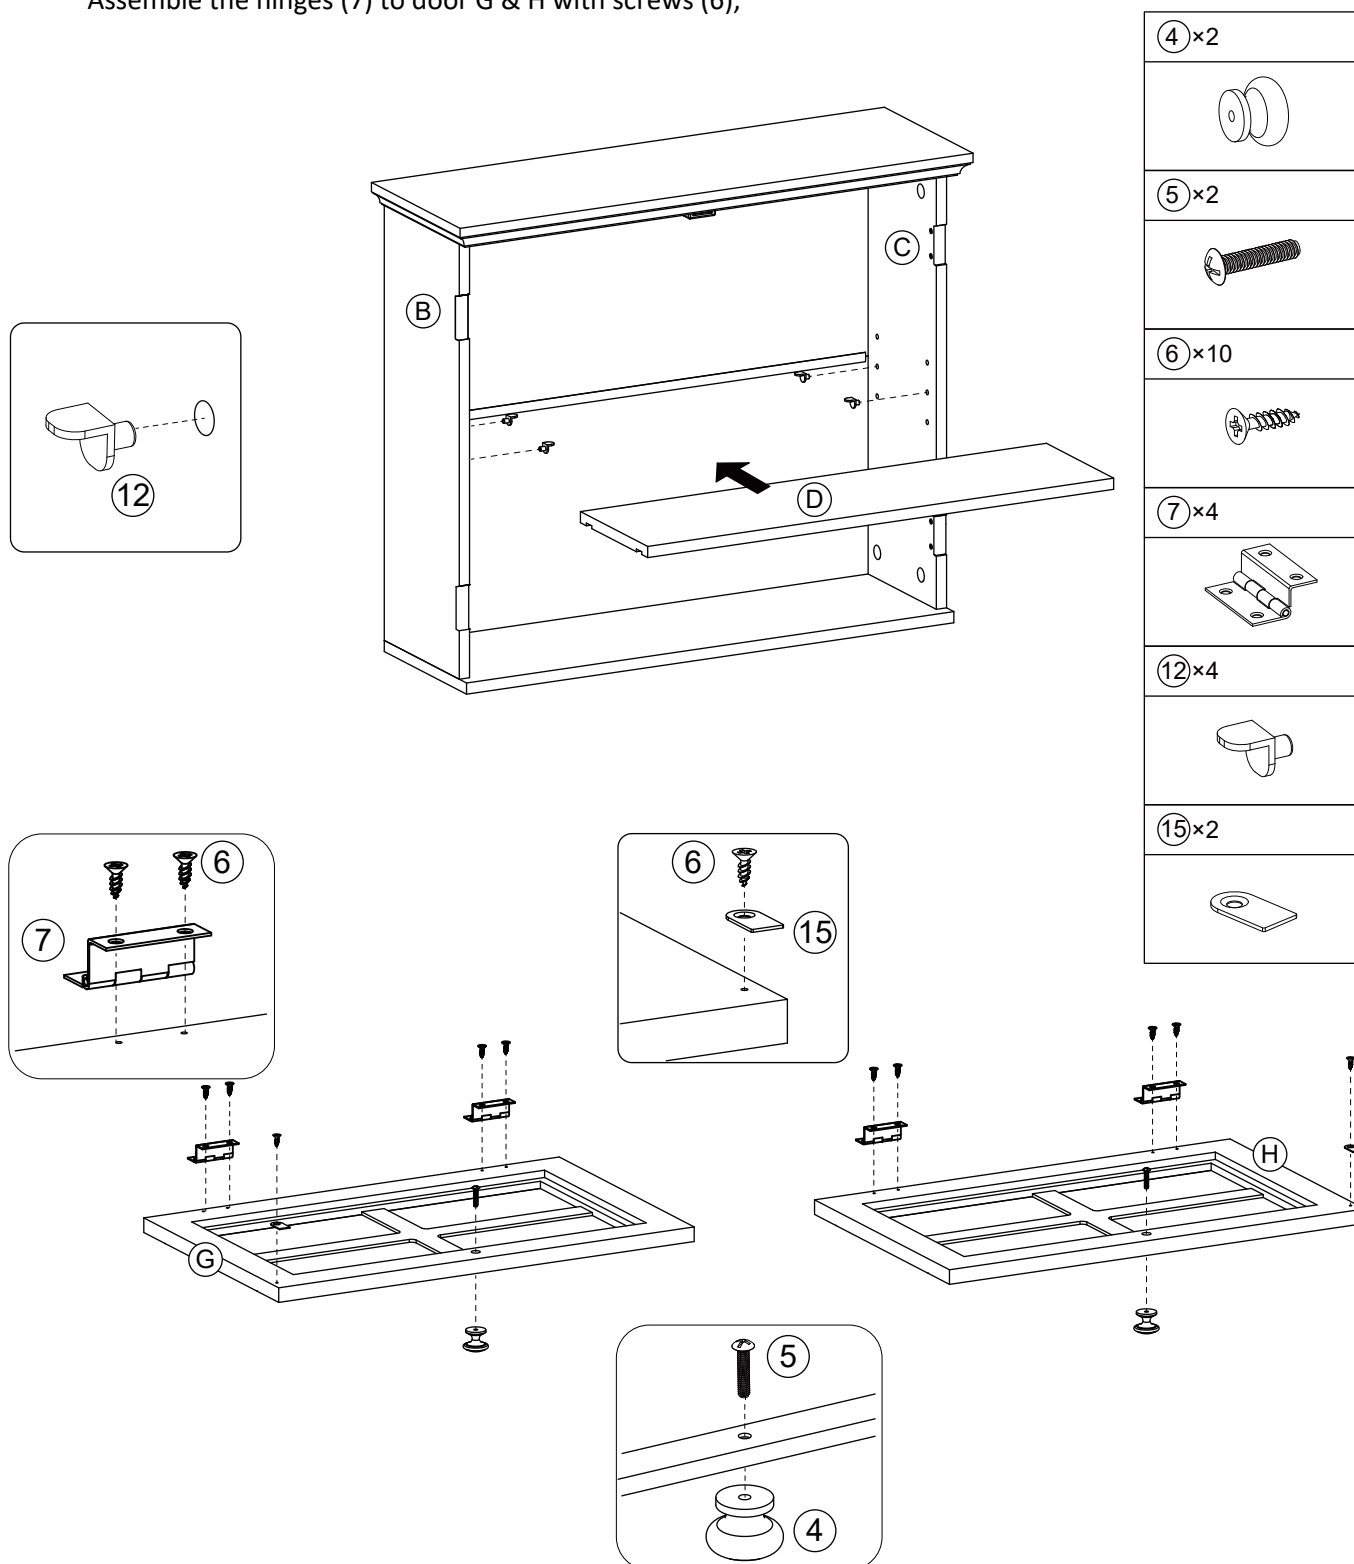

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840

Step 4

Assemble the door G to B and H to C with screws (6).

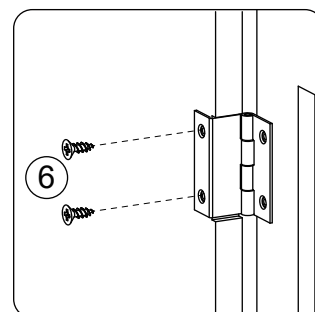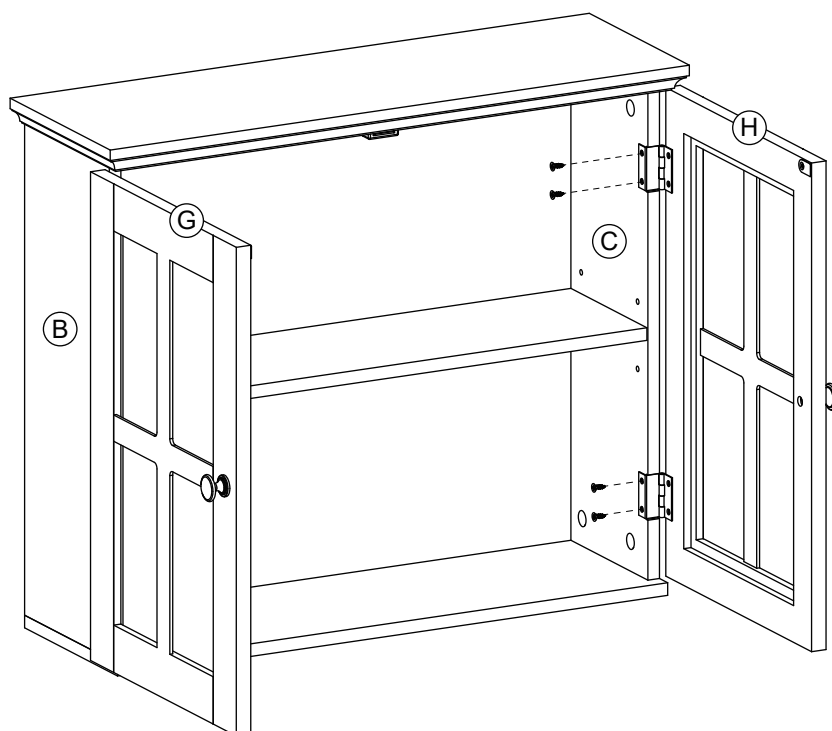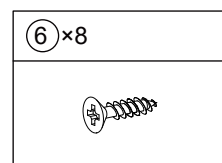


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840


Step 5

Fix Hanger brackets (11) onto unit with screws (10).

Insert back panel buttons (14) to unit with screws (13) as shown.

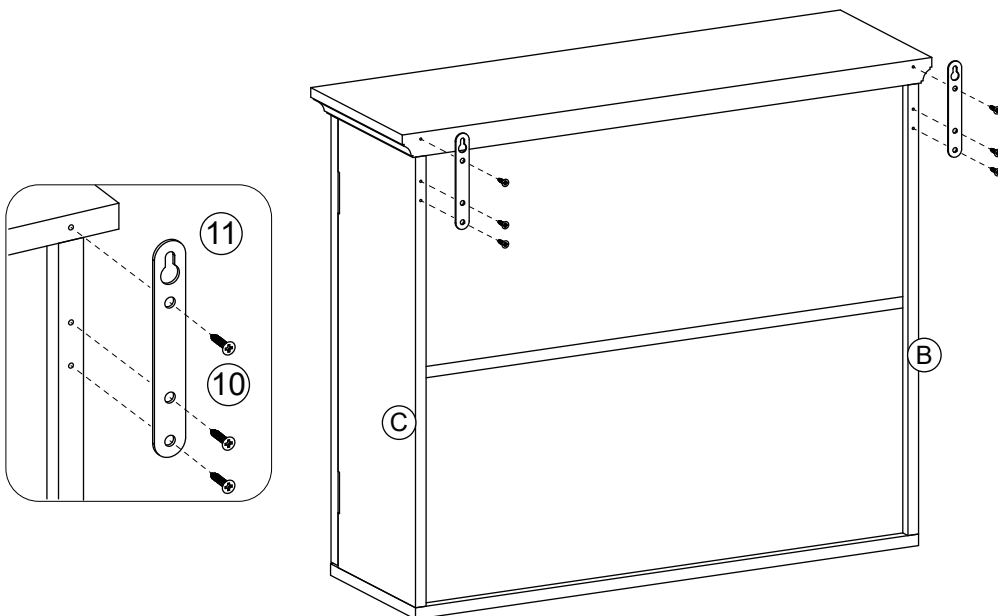

⑩×6
⑪×2
⑬×4
⑭×4

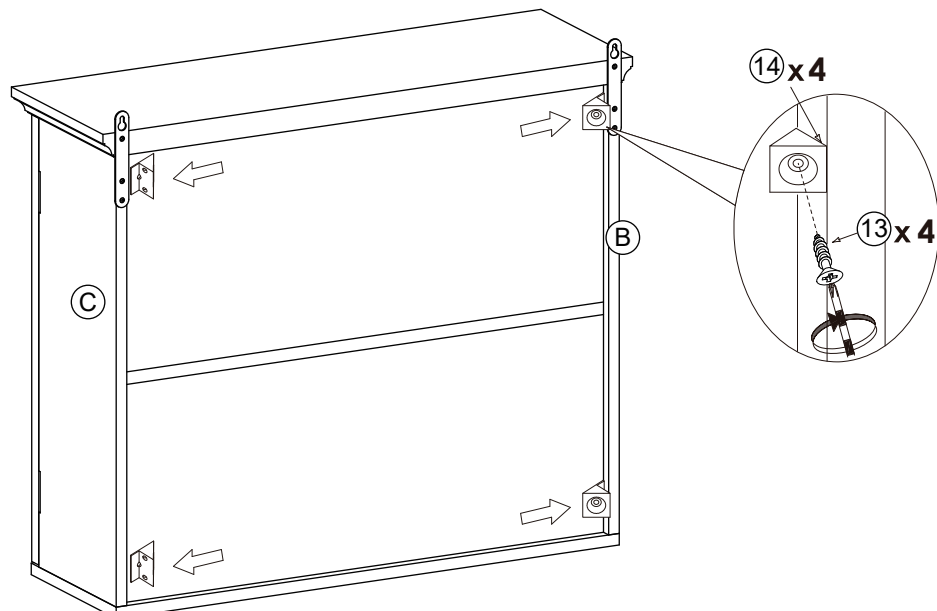

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1840

Step 6

Draw a location hole on Wall. Drill a hole on the wall to input wall plug (16) , Fix the cabinet to wall with screws (8) as shown.

