



Instruction Manual

Please save this manual for future reference.

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841


Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×12	②×12	③×12	④×2	⑤×2	⑥×24
				 M4*18	 M4*12
⑦×4	⑧×6	⑨×8	⑩×6	⑪×2	⑫×4
	 M4*35	 M4*25	 M3*20		
⑬×2	⑭×4	⑮×4			
	 M3*14				

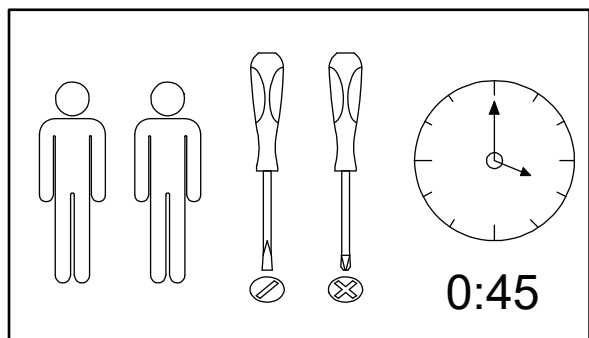

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Panels:

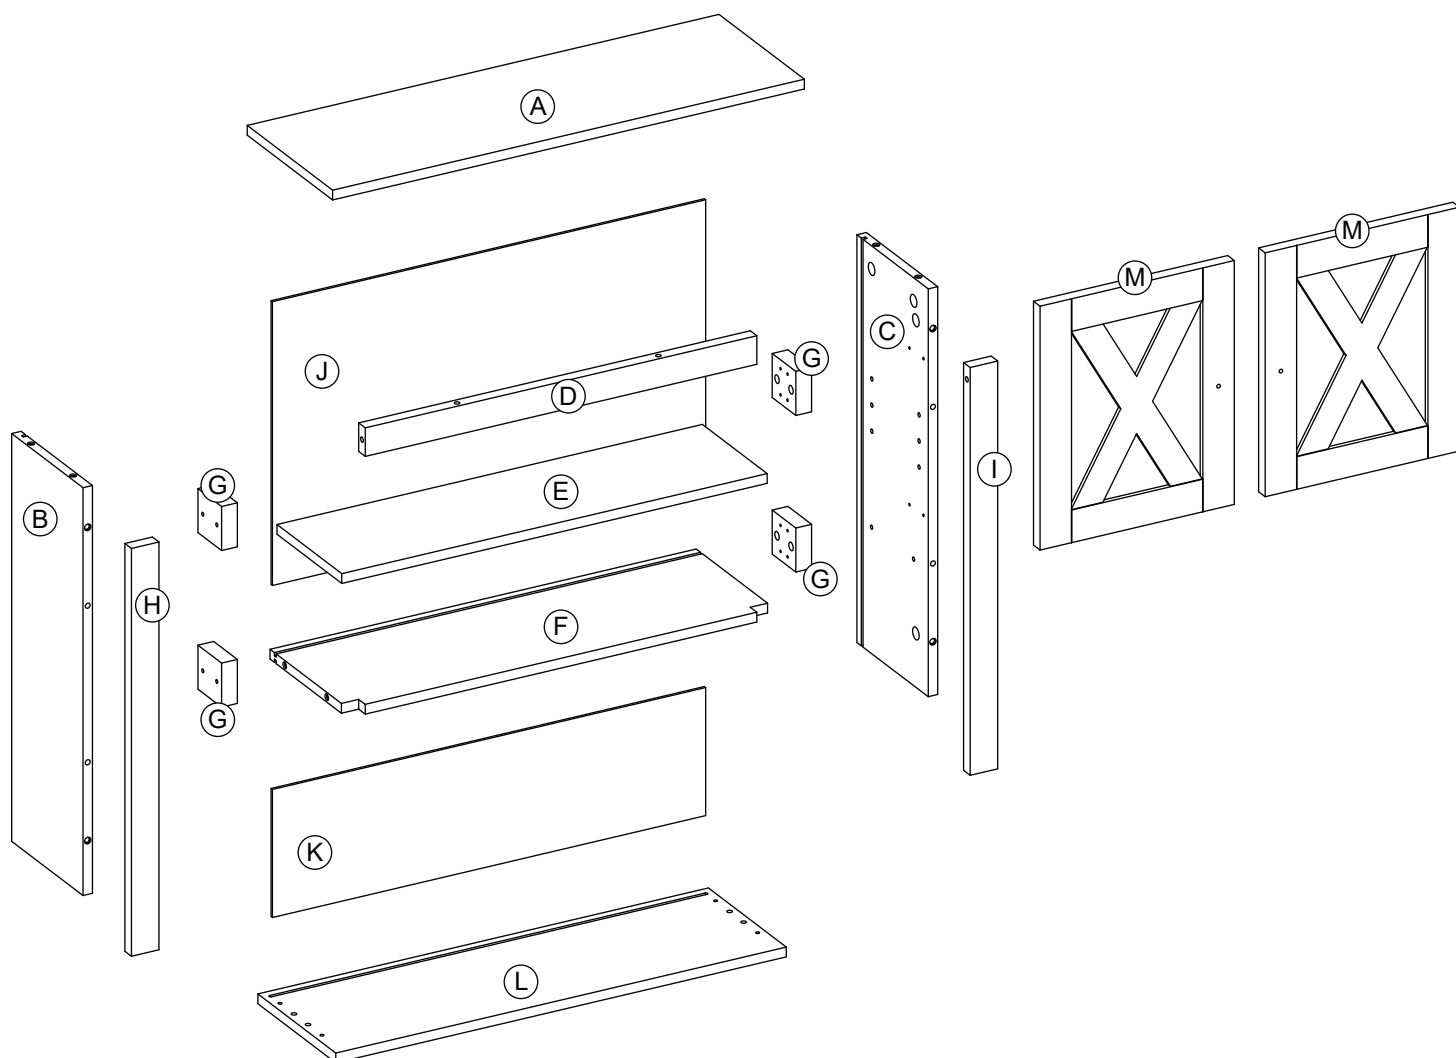

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Make sure the pins are installed correctly as shown with the “check mark” below:

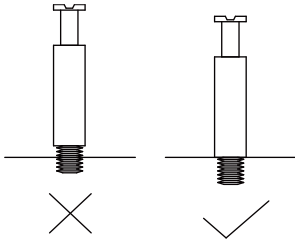

Below shows how the pins are used to assemble the panels together.



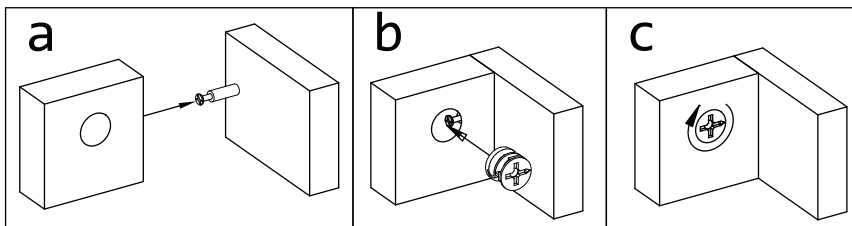


FIGURE A

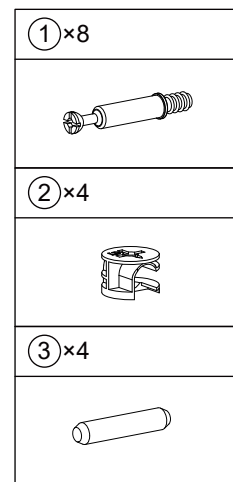

Step 1

Screw cam bolts (1) to Front bar H & I ,
Insert wood plugs (3) to H & I, and assemble to side panel B & C, then Insert cam locks (2) and tighten.
Screw cam bolts (1) to B & C.

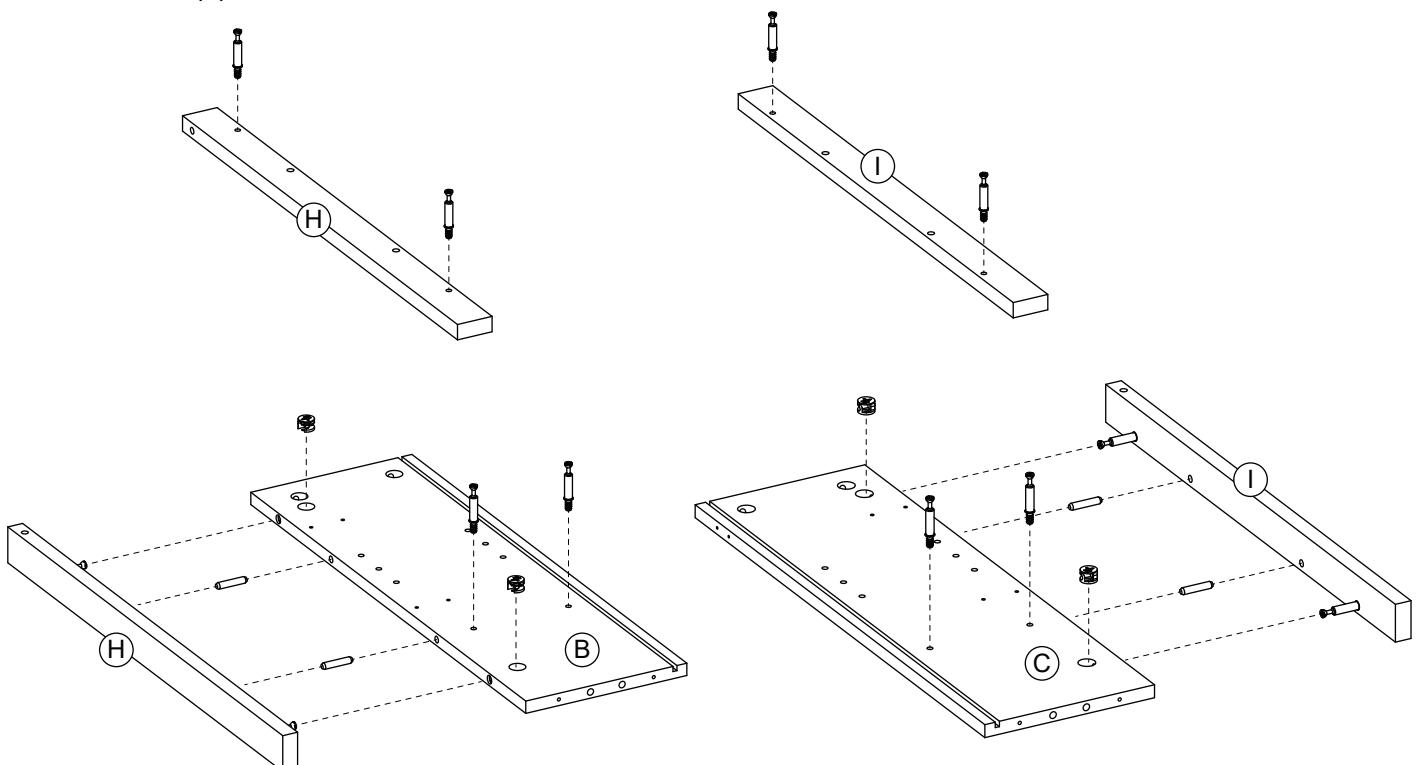


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 2

Fix G to side panel B & C with screws (9).

Insert wood plugs (3) to D, D & F assemble to side panel B & C. then Insert cam locks (2) and tighten.

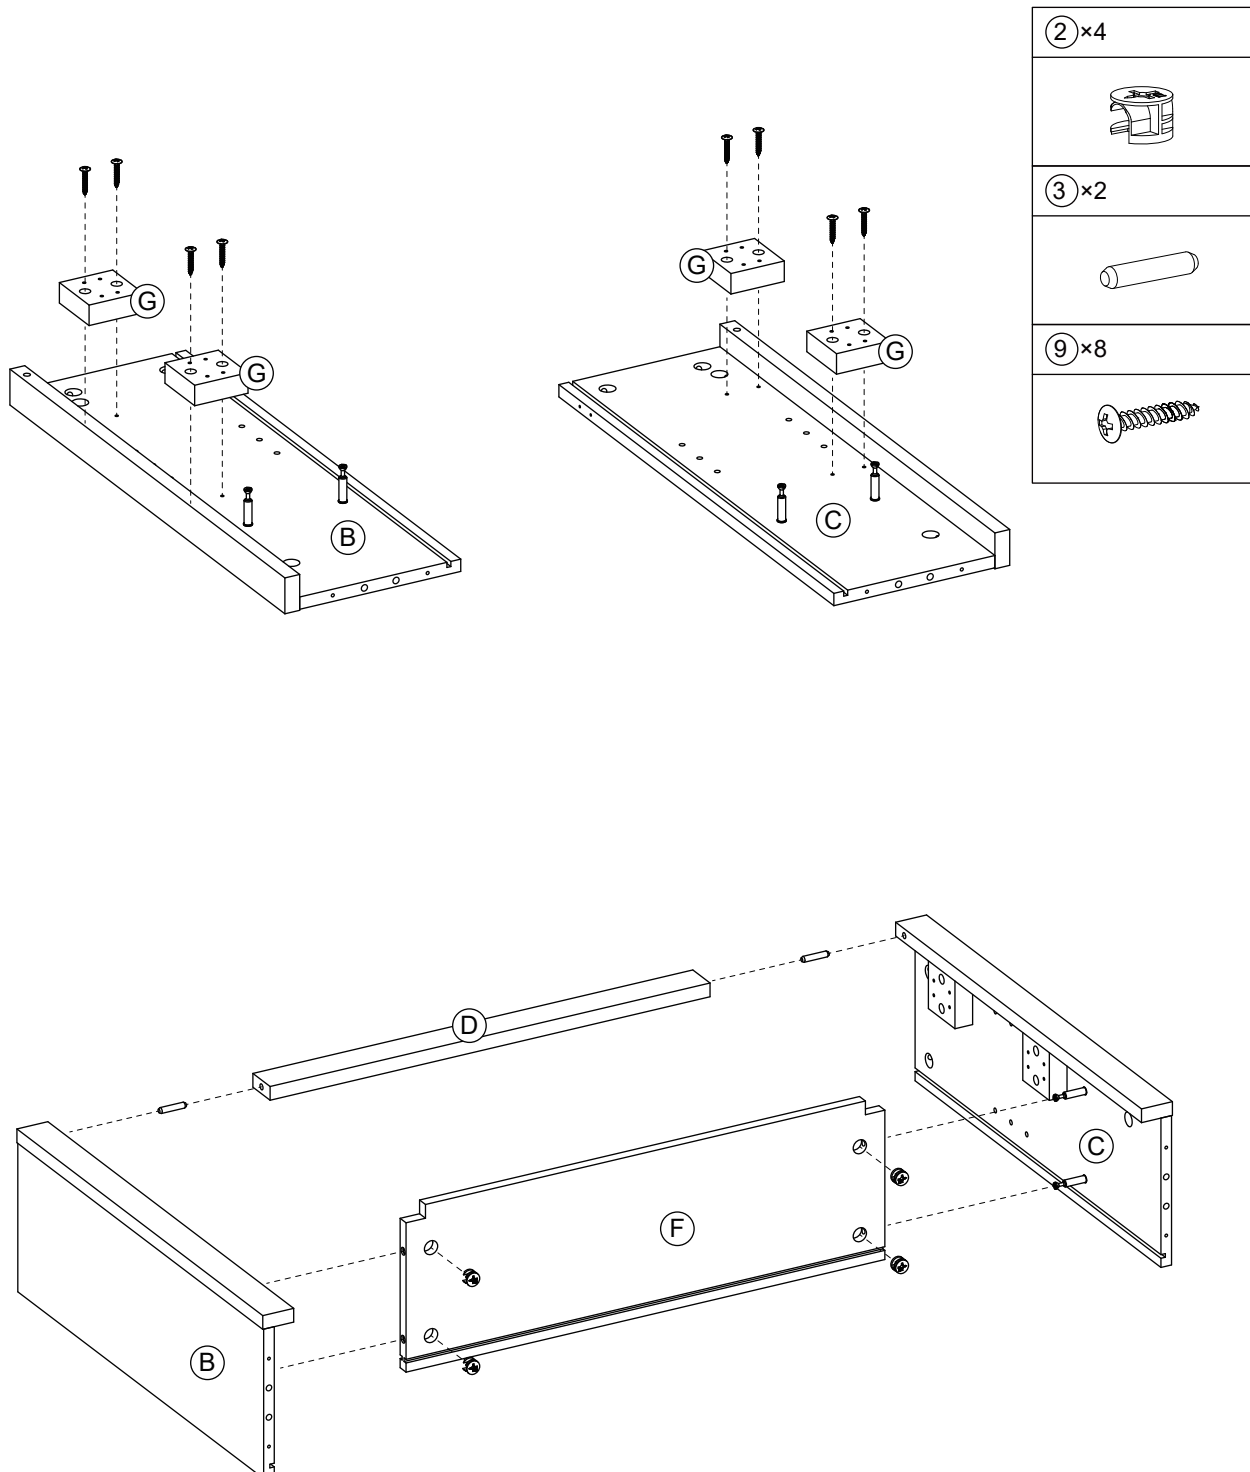




Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 3

Insert back panel K align with groove.

Insert wood plugs (3) to side panels B & C, Fix bottom panel L to unit with screws (8)




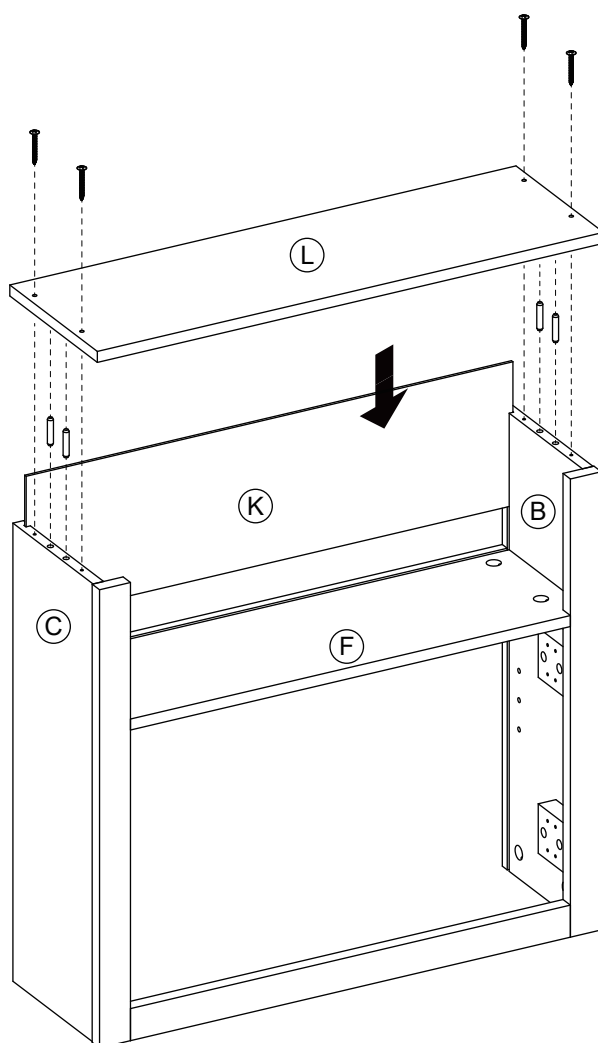


③×4

⑧×4


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 4

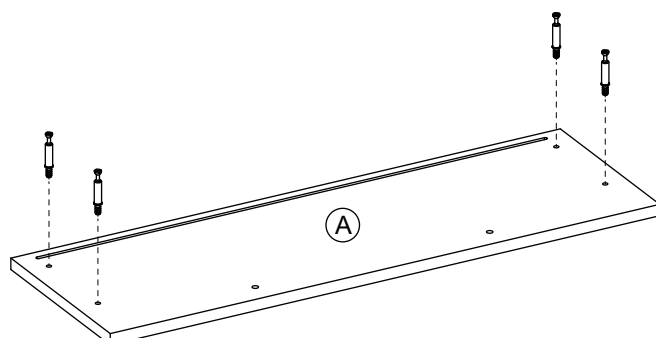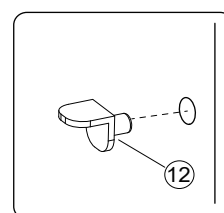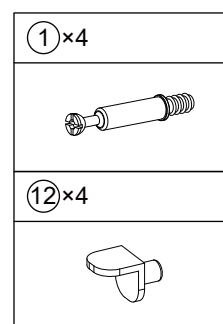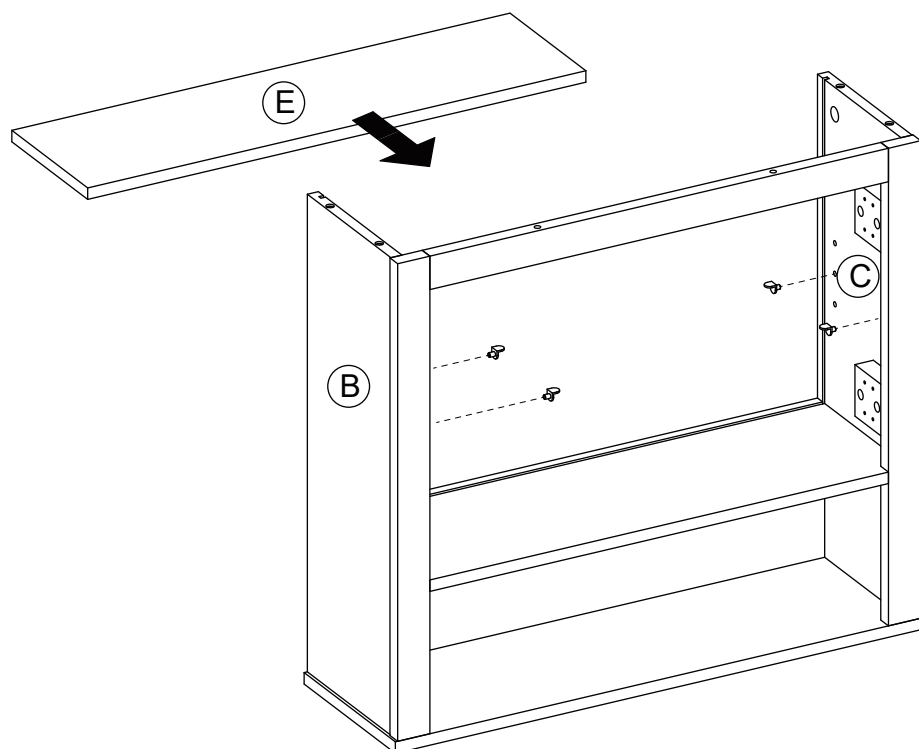Insert Layer supports (12) into the side panel B&C. Put adjustable shelf E into place. Screw cam bolts (1) to top panel A.




Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 5




Insert back panels J align with groove.

Assemble the hinges (7) to door M with screws (6), Fix handle (4) to M with bolt (5).

Insert wood plugs (3) to D, Assemble A to unit, then Insert cam locks (2) and tighten.

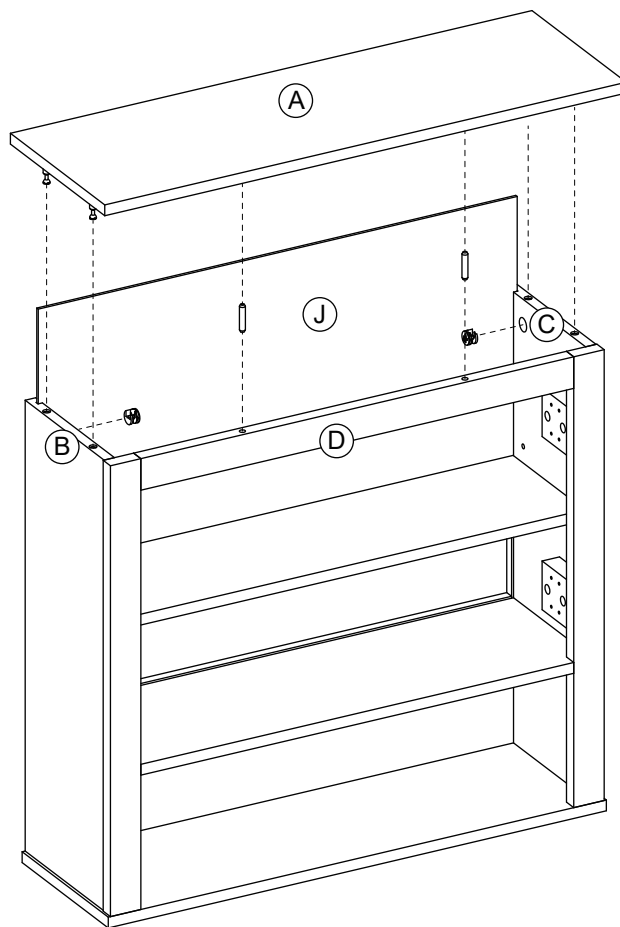

② × 4
③ × 2
④ × 2
⑤ × 2
⑥ × 8
⑦ × 4



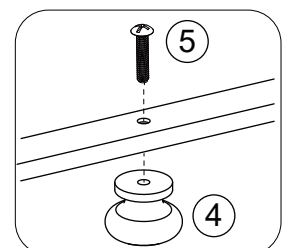
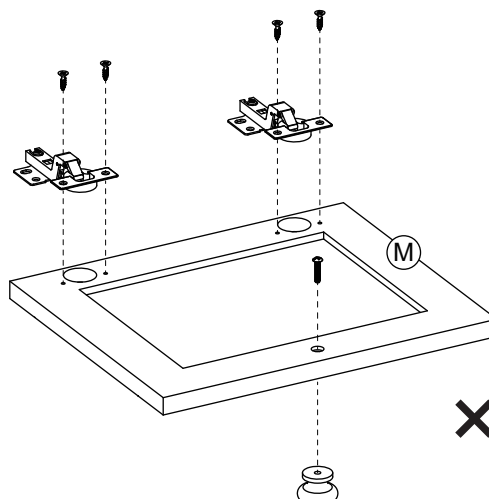
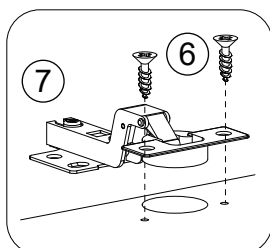


× 2

Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 6

Assemble the door M to the unit with screws (6).
Fix Hanger brackets (11) onto unit with screws (10).

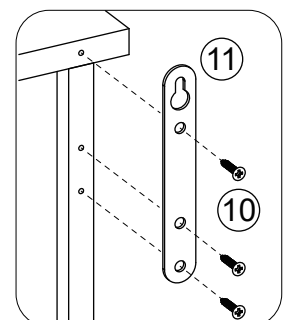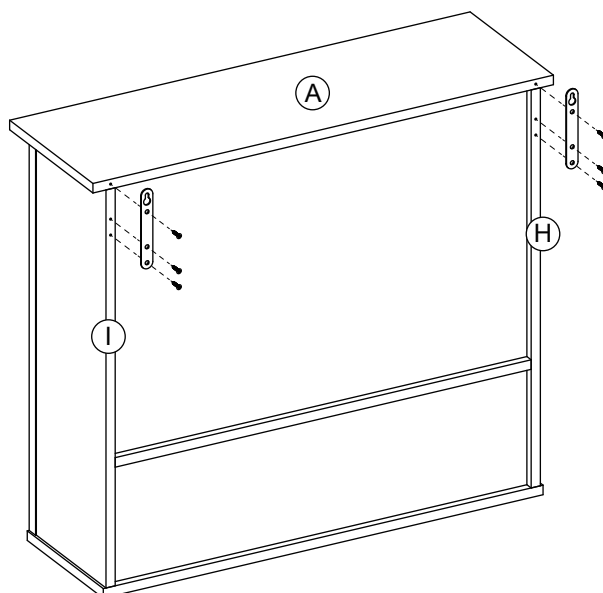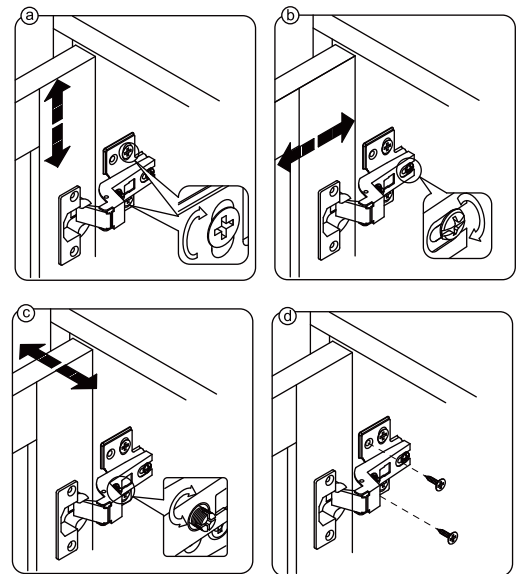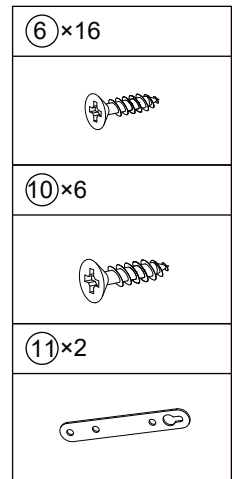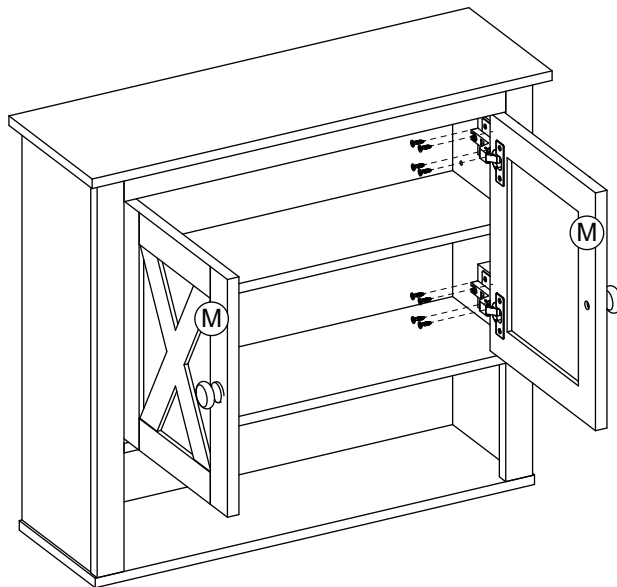


Product Name:	White MDF Wood Farmhouse 2-Door Bathroom Wall Cabinet
SKU #:	WHIF1841

Step 7

Insert back panel buttons (15) to unit with screws (14) as shown.

Draw a location hole on Wall. Drill a hole on the wall to input wall plugs (13) ,
Fix the cabinet to wall with screws (8) as shown.

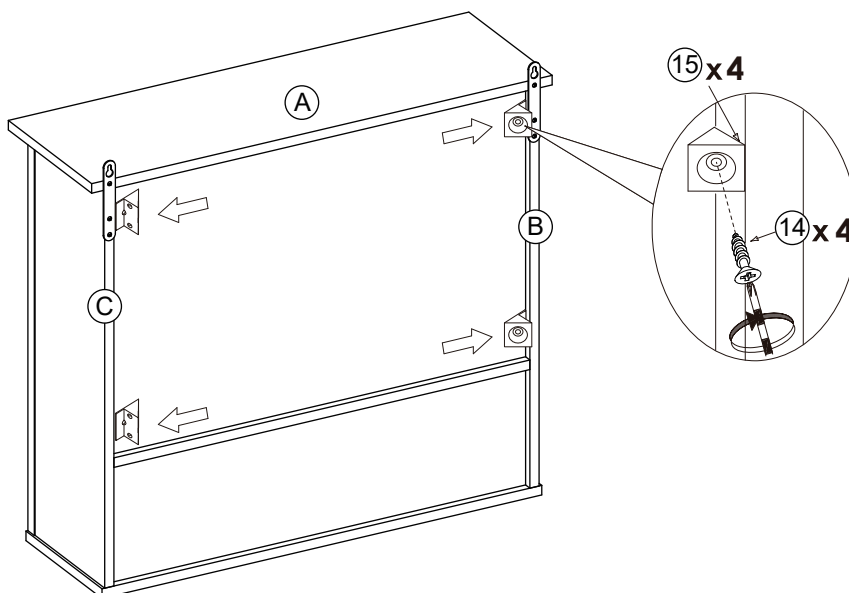

⑧×2
⑬×2
⑭×4
⑮×4

