

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224331Q (B1-B3) Queen Bed

REVISION 0 : 10/25/2022 PAGE 1 OF 6 COASTERFURNITURE.COM

COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

25 MINUTES

PART IDENTIFICATION

| B1 (BOX 1) | | | | | |
|--------------|-----------------------------------------------|--|------|--|--|
| Α | HEADBOARD PANEL | | 1PC | | |
| В | LEFT HEADBOARD LEG | | 1PC | | |
| С | RIGHT HEADBOARD LEG | | 1PC | | |
| D | HEADBOARD BOTTOM RAIL | | 1PC | | |
| B2 (BOX 2) | | | | | |
| E | FOOTBOARD | | 1PC | | |
| B3 (BOX 3) | | | | | |
| F | BED RAIL | | 2PCS | | |
| G | BED SLAT | | 4PCS | | |
| н | BED SLAT SUPPORT WITH LEVELER | | 4PCS | | |
| НВ | 224331Q(B1) *FROM BOX 1 HEADBOARD COMPLETE | | 1PC | | |
| E | 224331Q(B2) *FROM BOX 2 FOOTBOARD | | 1PC | | |

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224331Q (B1)

| 1 | BOLT (5/16" x 45mm - BLK) | 8PCS |
|---|-----------------------------------|------|
| 2 | LOCK WASHER (1.6 x 14mm - BLK) | 8PCS |
| 3 | FLAT WASHER (1 x 18mm - BLK) | 8PCS |
| 4 | ALLEN WRENCH (M5 x 65mm - BLK) | 1PC |
| 5 | WOOD DOWEL (10 x 30mm - BRW) | 4PCS |

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224331Q (B3)

| 6 | FLAT HEAD SCREW (8 x 38mm - BLK) | ************************ | 8PCS |
|----|------------------------------------------|---------------------------------|------|
| 7 | THREADED BOLT (5/16" x 80mm - WHT) | | 8PCS |
| 8 | HEX NUT (5/16" x 100mm - WHT) | | 8PCS |
| 9 | HALF ROUND NUT (22 x 17 x 10mm - WHT) | | 8PCS |
| 10 | WRENCH (13mm - WHT) | | 1PC |


NOTE:

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS





STEP 1

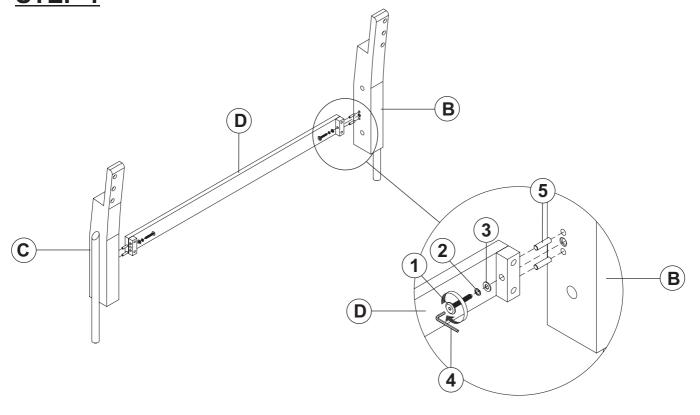

STEP 2

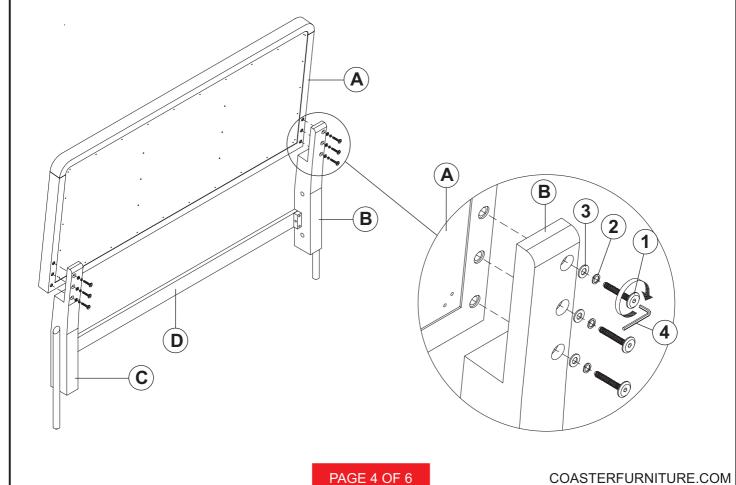

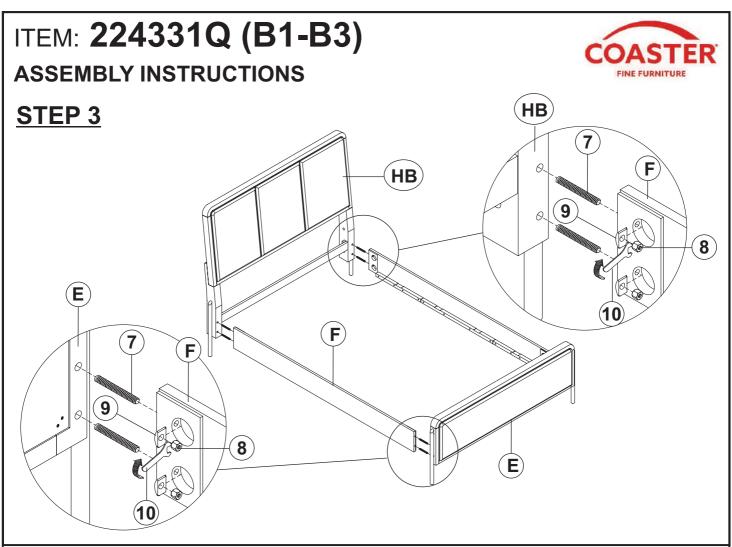


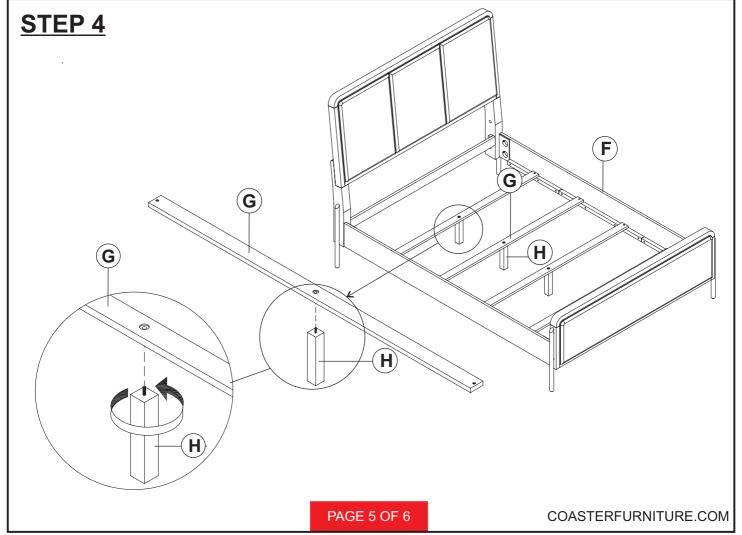



ASSEMBLY INSTRUCTIONS

STEP 5

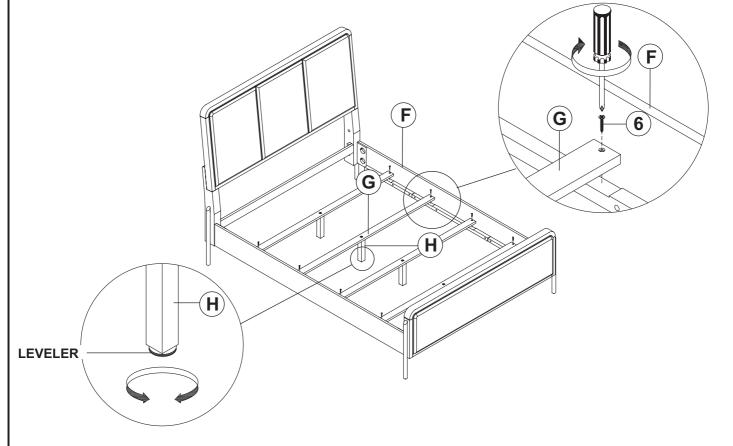

STEP 6 COMPLETE




PAGE 6 OF 6





Inner Size: 61.00"W x 82.00"D

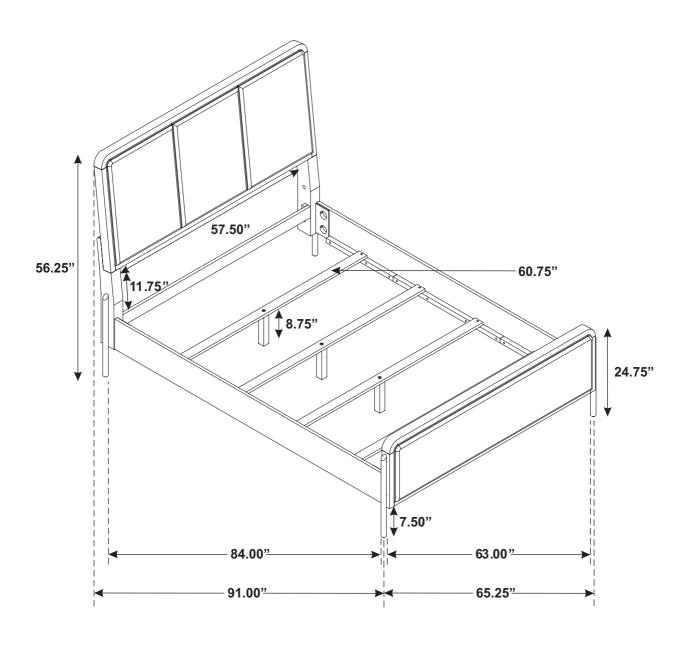

Note: Dimension tolerance ±5%