



THKFBV037BK0A2 THKFBV037WH0A2 INSTALLATION INSTRUCTIONS

Unit: inch

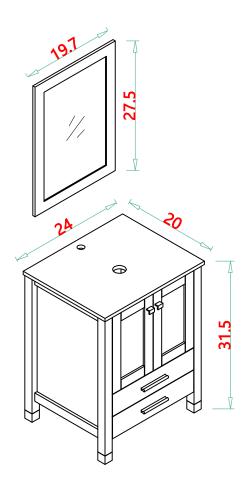

ASSEMBLY DIAGRAM

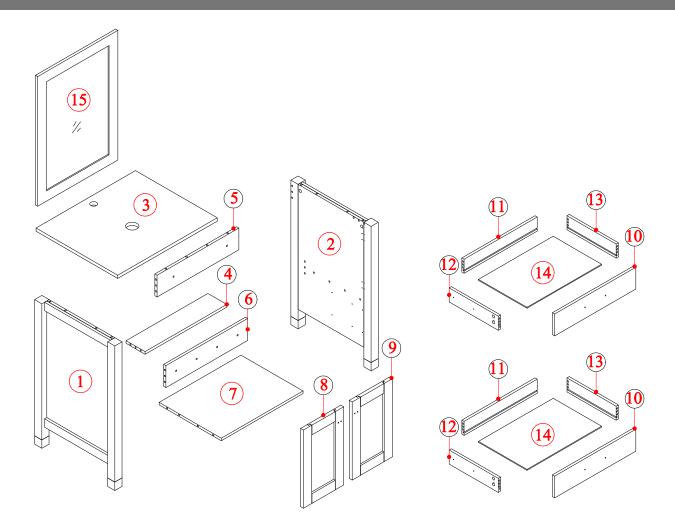


PARTS LIST


	PARTS LIST	
No.	Description	QTY
1		1
2		1
3		1
4		1
5		1
6		1
7	\bigcirc	1
8		1
9		1
10		2
11		2
12		2
13		2
14		2
15		1

	HARDWARE LIST					
No.	Description		QTY			
Α		Three-in-one Connector	40			
В		Handle	2			
В	()	Handle Screws M4x15	4			
С		Handle	2			
С	()	Handle Screws M4x20	4			
D	- F	Hinges	4			
E	BILITY	Screws M3.5x15	24			
F	X	Slider	4			
G	BILITY	Screws M3x12	26			
Н		Wood Plug	28			
I		Screws For Fix On The Wall	4			
I	Attitute.	Screws For Fix On The Wall	4			
I	0	Screws For Fix On The Wall	2			


YOU MAY NEED (NOT SUPPLIED)

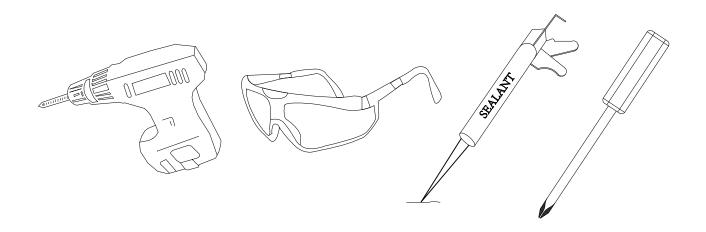


INSTALLATIONS

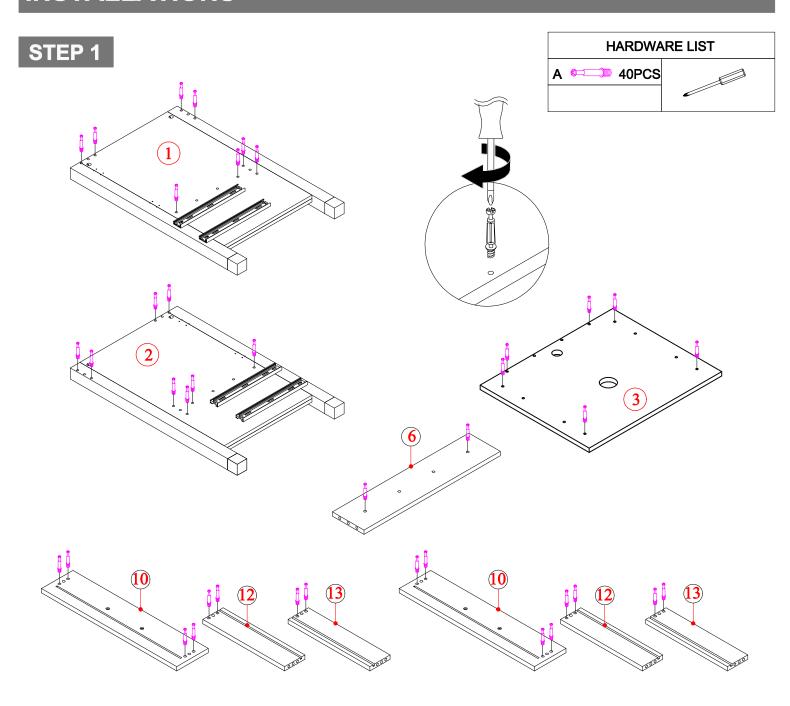




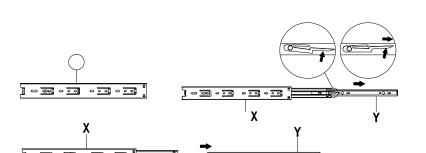





Keep pressing here, then pull out to devide the slide.

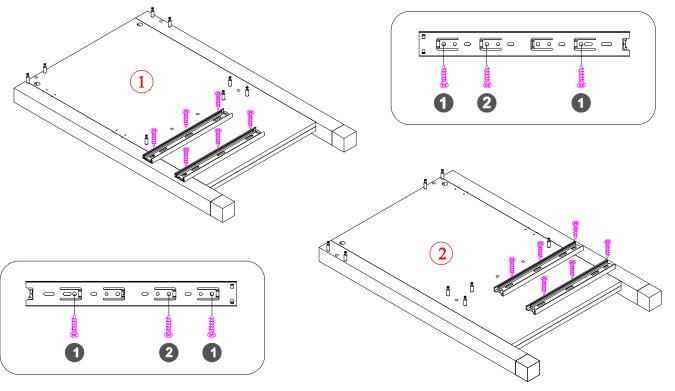



• Refer to the illustration to fix the Slide rails to theboard #1 and #2 with screws.

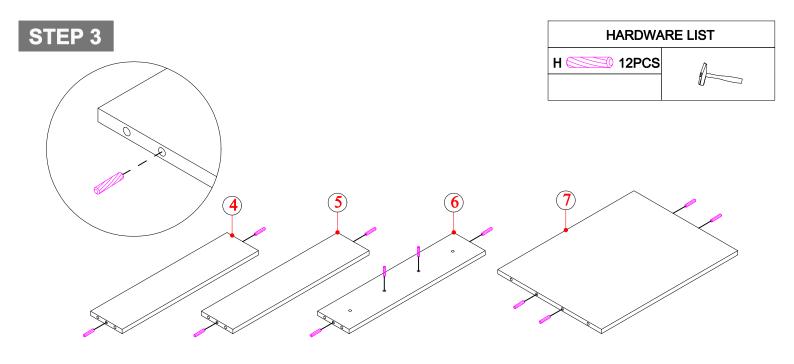







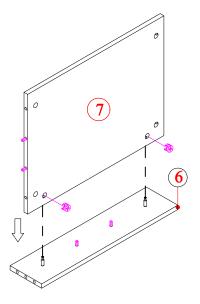


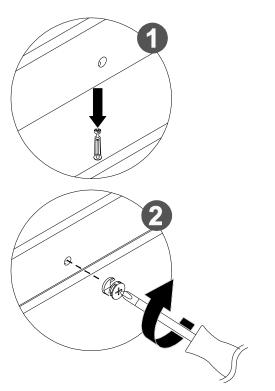



• Insert panel #6 and #7 to their corresponding positions. Then tighten the cam lock.

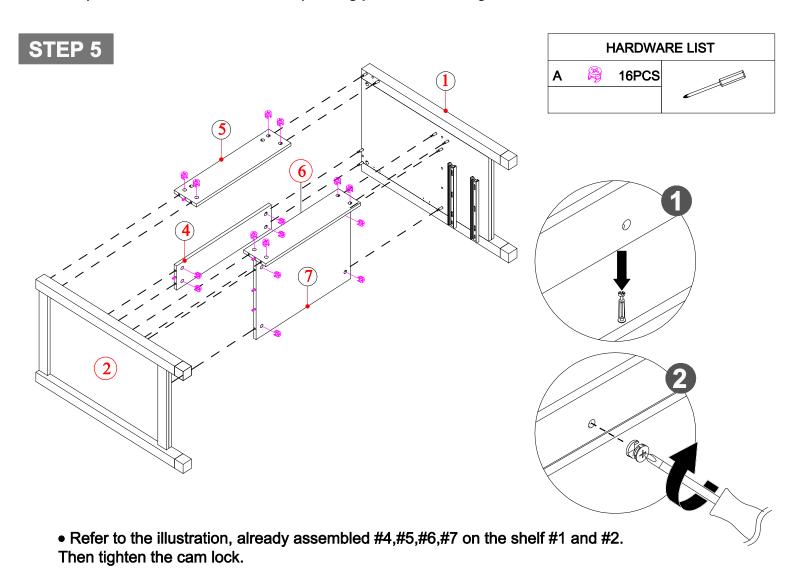

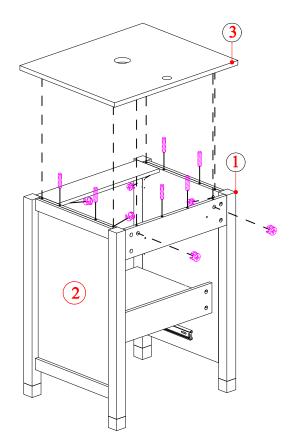




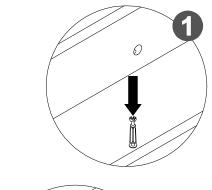

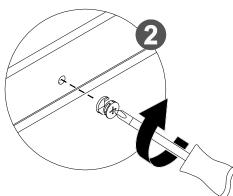



- Insnert the wooden dowel pins into the panel #1 and #2
- Insert panel #3 to their corresponding positions. Then tighten the cam lock.

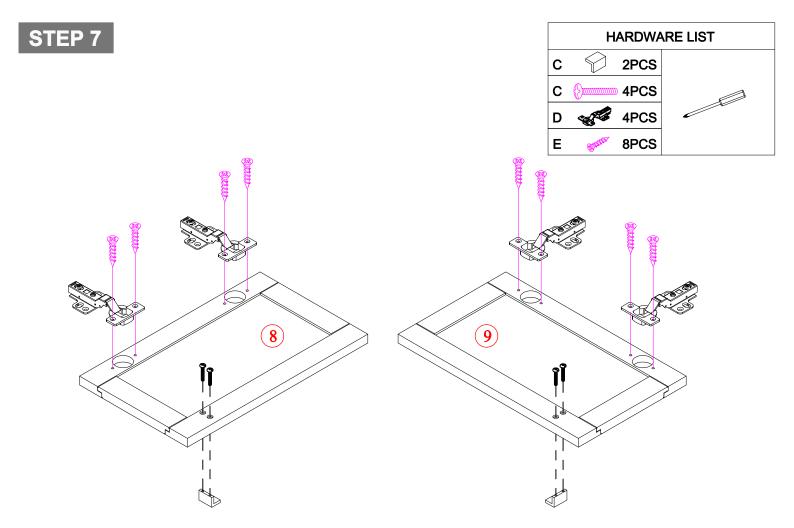



• Use Screws to install the handle and apply Screws to fix the hinge on the shelf #8 and #9.







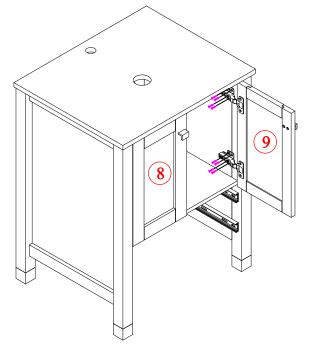



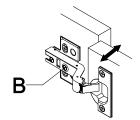


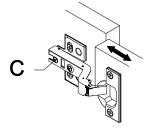


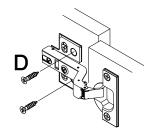

- A. Height adjustment
- C. Depth adjustment
- B. Side to side adjustment
- D. After adjustment A/B/C, tighten screws
- To ensure proper cabinet alignment, refer to the above illustrations for instructions about adjusting the cabinet height, depth and lateral movement.


HARDWARE LIST			
Α		8PCS	
H 6		4PCS	

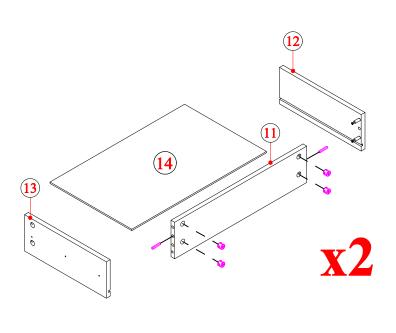


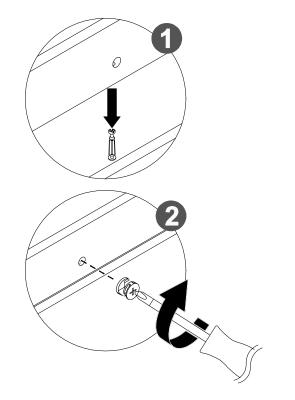


- Insnert the wooden dowel pins into the panel #11
- Insert shelves #11,#12, #13 and #14 to their corresponding positions. Then tighten the cam lock.







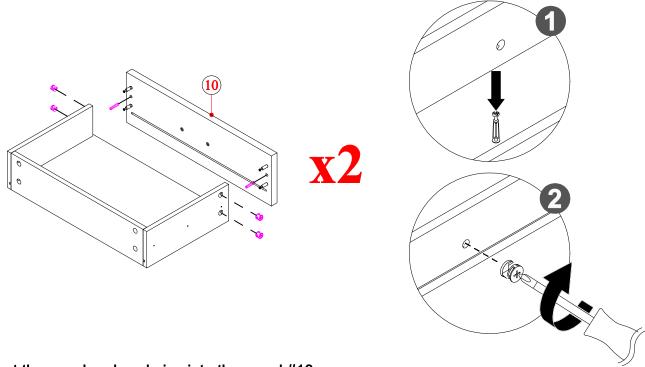


- Insnert the wooden dowel pins into the panel #10
- Insert drawer panel to their corresponding positions. Then tighten the cam lock.

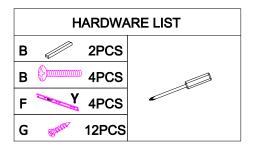

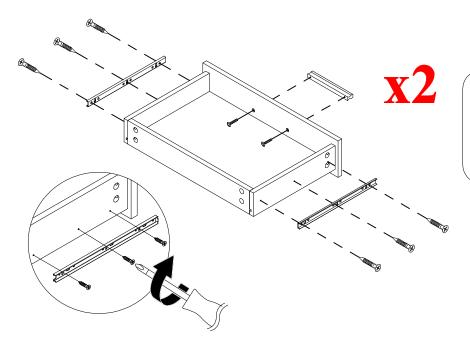




- Refer to the illustration, Apply Screws to fix the Slides on the panel #12, #13.
- Use Screws to install the handle

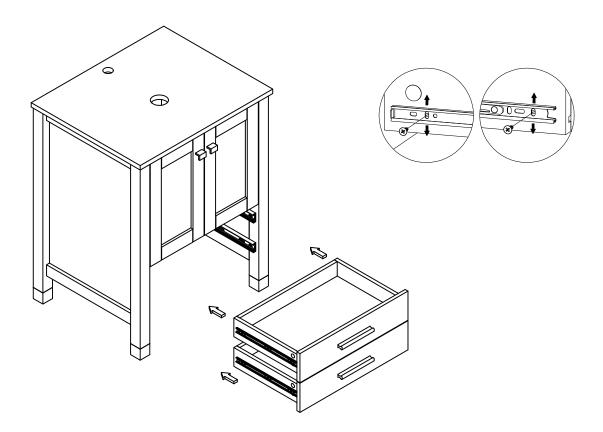


- If the drawers are not in the same level, please adjust the screws in the drawer box.
- Assembled drawers are loaded onto cabinets.


STEP 13

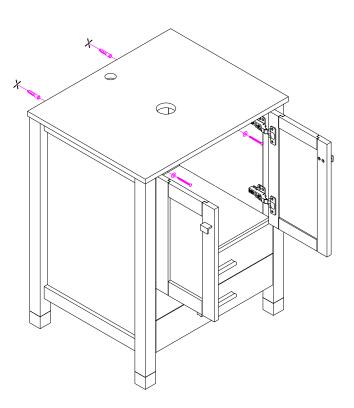

	HARDWARE LIST				
I	The state of the s	2PCS			
I	Name of Street, or other Persons of Street, or other Persons or other Persons of Street, or other Persons of Stree	2PCS			
I	0	2PCS			

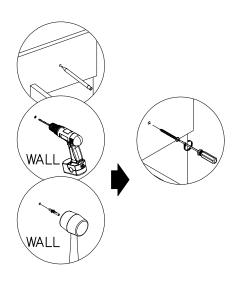

• Refer to the illustration, Draw the spacing between the walls on the cabinet, punch holes in the wall, and fix the cabinet to the wall with screws.

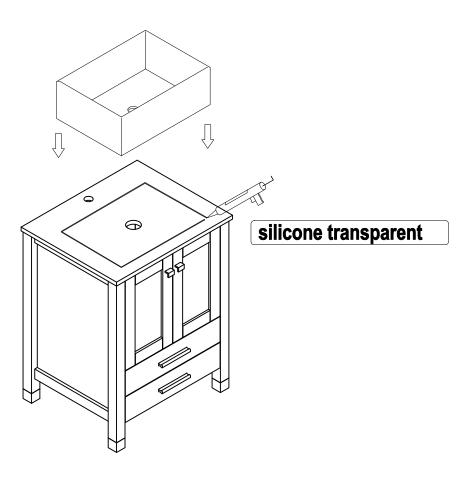


HARDWARE LIST

2PCS


Ι


STEP 15

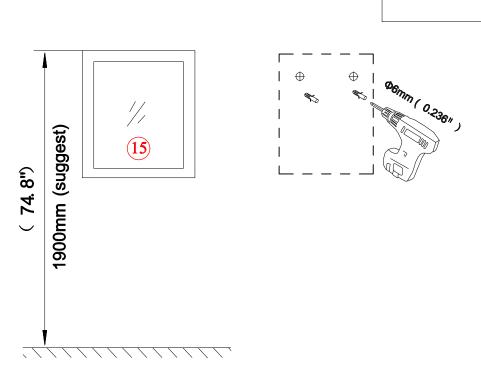

• Measure the distance of hole on the back of mirror and insert the expansion anchor into the wall. **Note:** Appropriate distance from the top of mirror to the ground is 74.8".






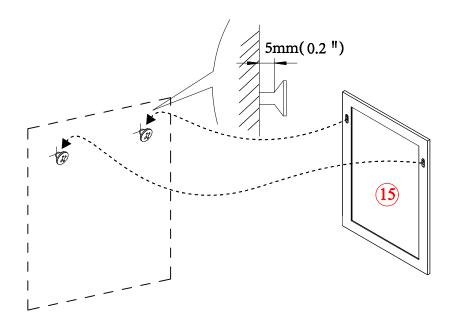

• Insert the expansion into the anchor .Leave about 5mm(0.2") clerrance for the mirror.Then connect the mirror.


STEP 17

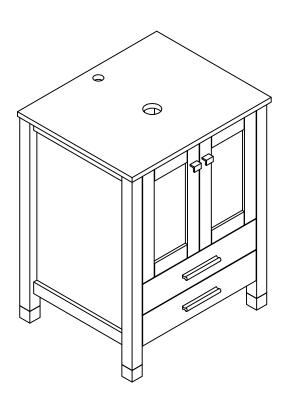

• To help prevent mildew,apply sealant to the space between the wall and the edge of the cabinet.

CARE AND CLEANING

- 1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
- 2. Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
- 3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathrom humidity by opening windows and doors and using the exhaust fan (if available).
- 4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. eep away from res and high temperatures.
- 5. Please do not sit, lean or step on the basin cabinet.

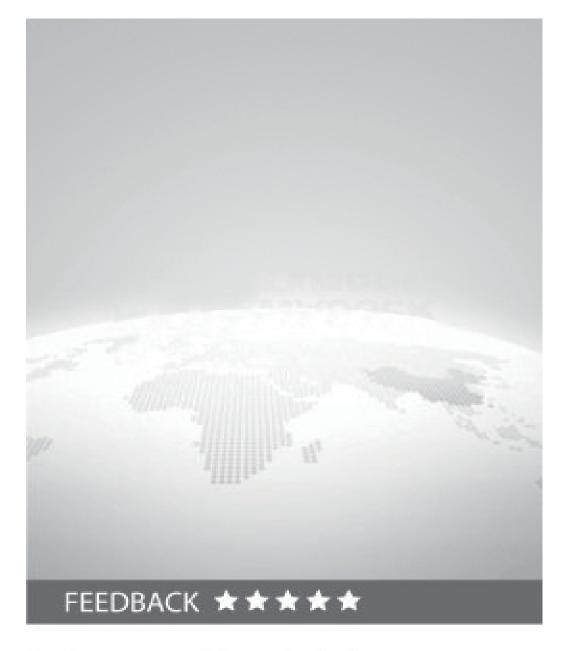

Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satis ed with our products and leave us FIVE STARS and POSITIVE feedback/ review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Many thanks and welcome to our shop again!

Contact number: (323)-393-8260 E-mail: service@eclifeusa.com