




Scan the QR code

To watch our installation instruction video



PLEASE READ BEFORE INSTALLATION

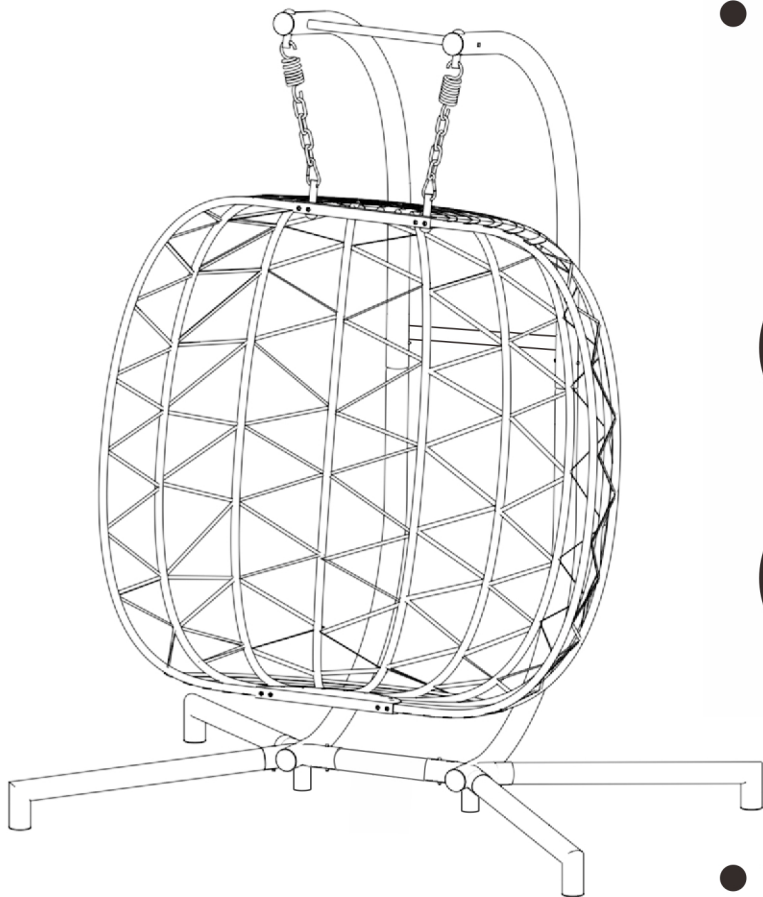

- If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time.



Our after-sales team will reply to you with in 24 hours.



After-Sales Support Email:

jm@nicesoulfurniture.com

- Two people are needed for assembly.
- Use an electric drill in slow mode. Our Allen wrench is recommended.
- DO NOT tighten the screws completely until all the screws are aligned with the holes.

Back Cushion Note

- Rub and flap the cushion to restore it to its original thickness before use.

1

M 4



X1

2

M 6



X1

3

X1

4


M 8 X 50MM



X4

5

M 8 X 20MM



X6

6

X4

7

X2

8

X2

9

X2

10

M 6 X 40MM



X8

11

M 6 X 35MM




X16

12


X24

13

X24

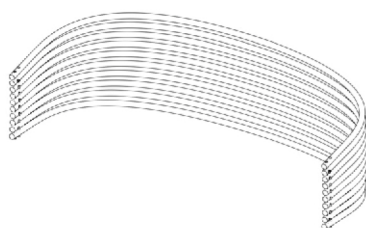A

X1

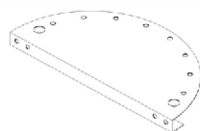B

X2

AA


X1

C

X1

D

X1

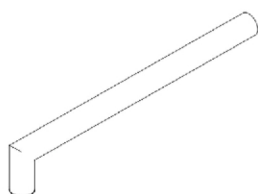E

X4

F

X1



H

X2

I

X2



1

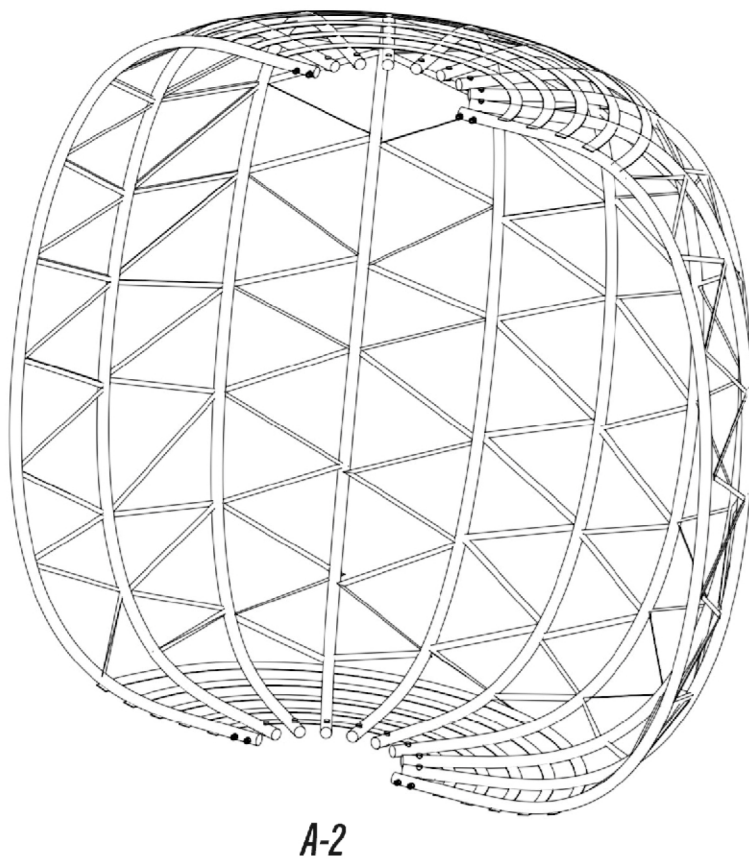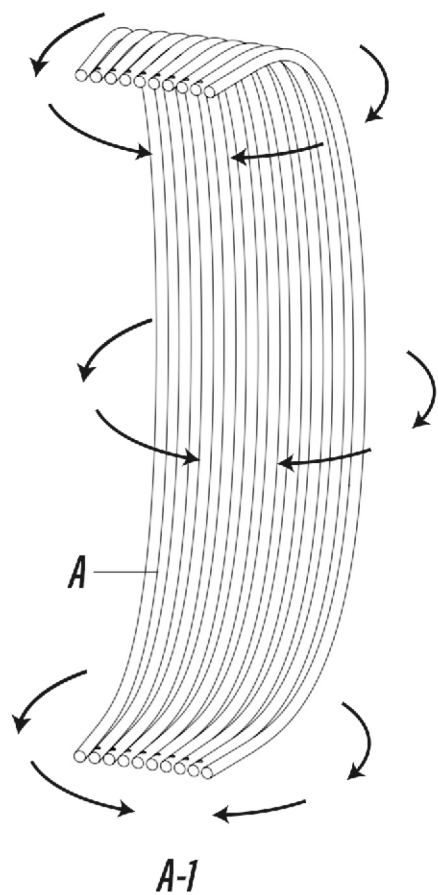




2

TOP SIDE



BOTTOM SIDE

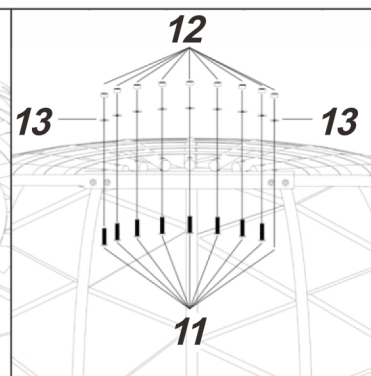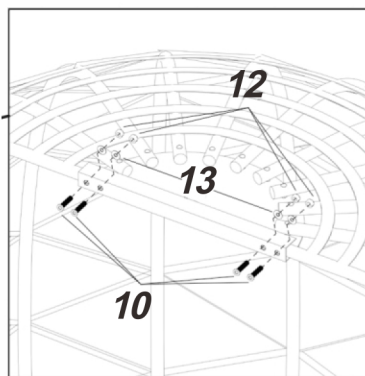


FINISH THE #10 SCREWS FIRST
WILL HELP YOU TO INSTALL #11 SCREWS BETTER

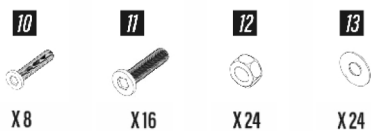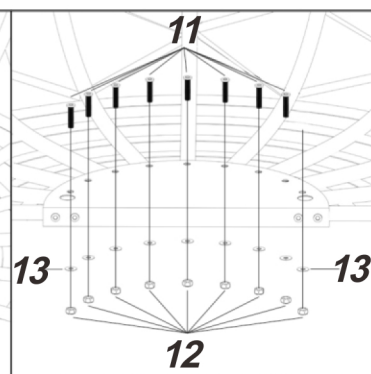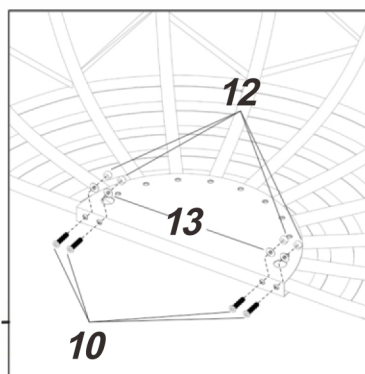


3

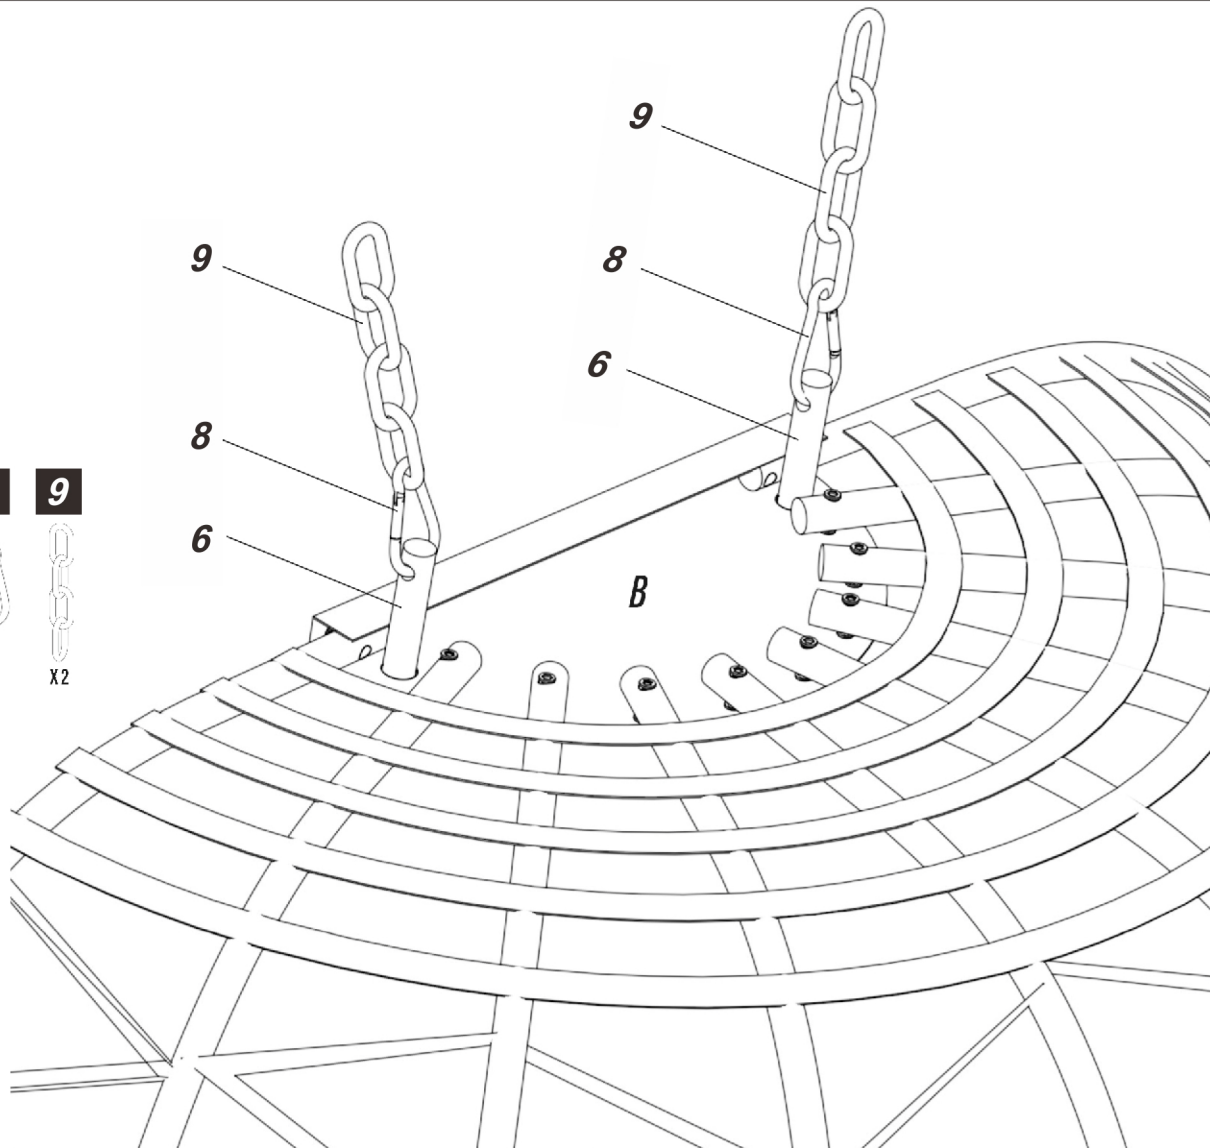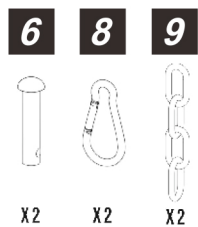


4

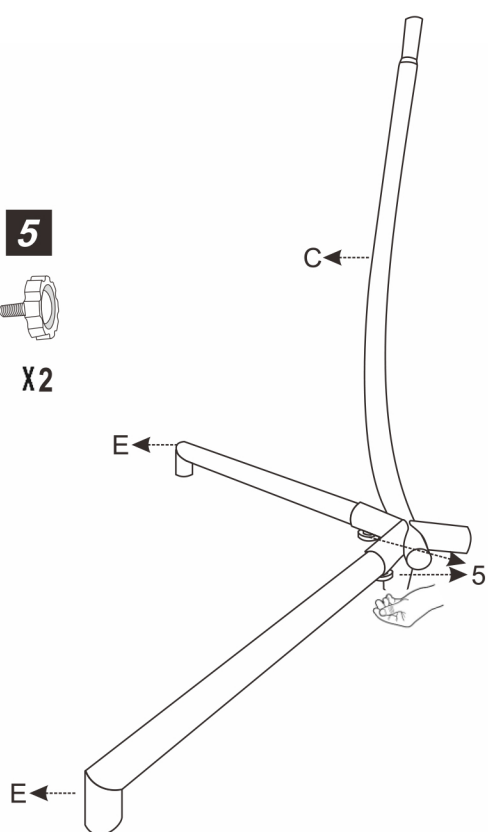

5

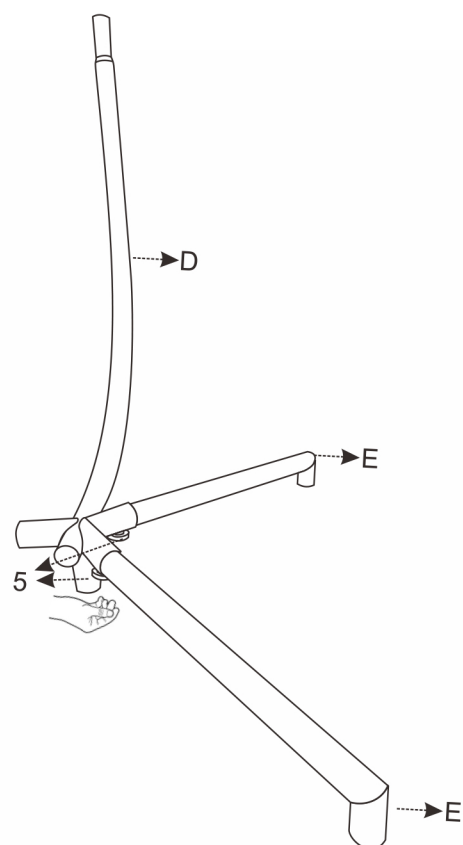

6

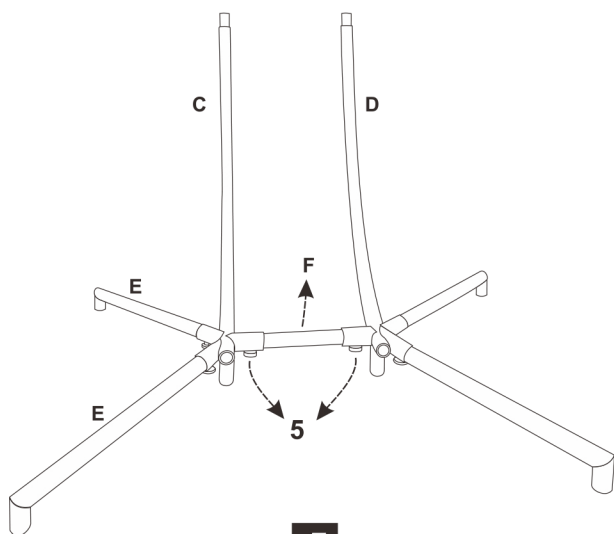


5




X2

7

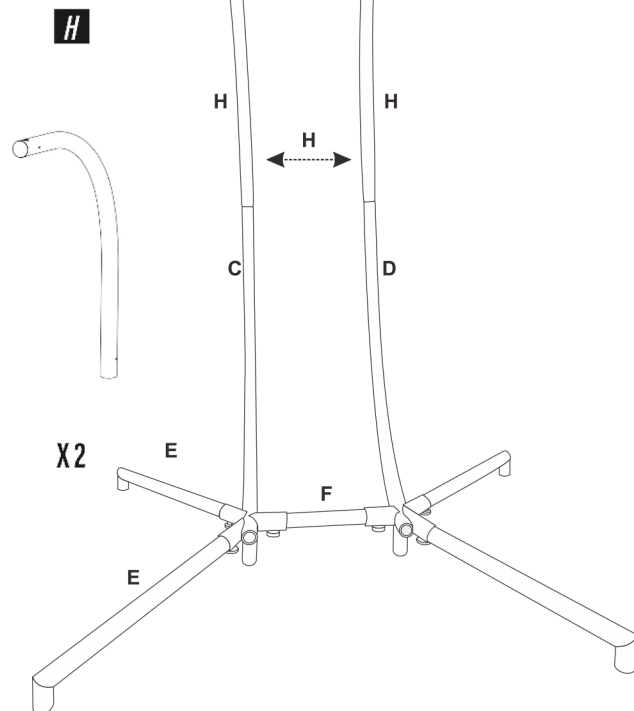

X2

8

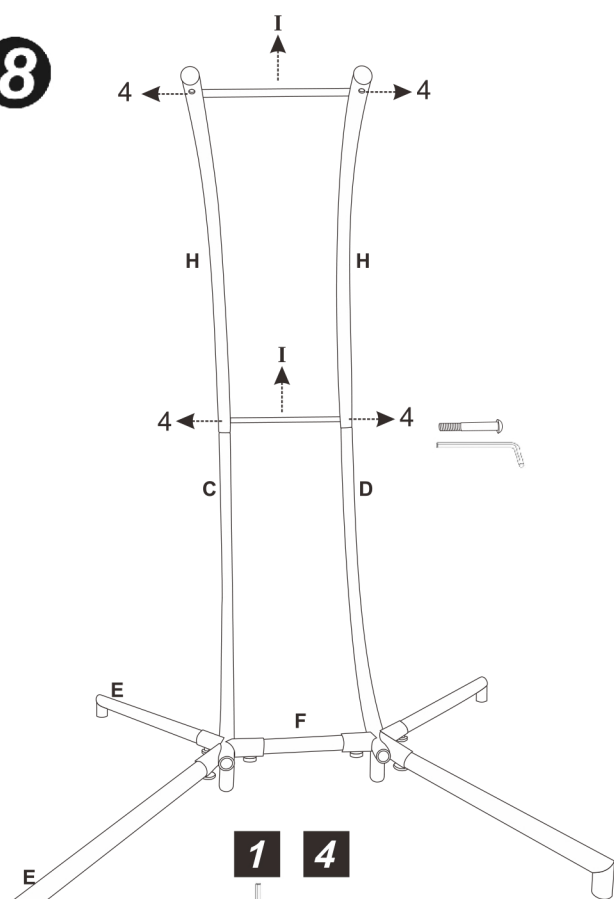

1


4



X1

X4

9

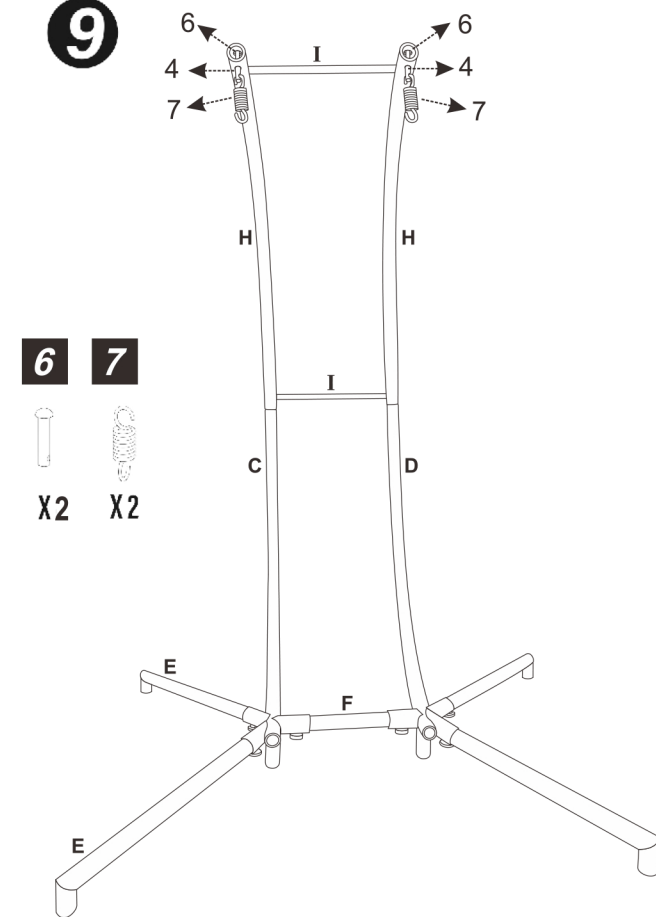

6

7




X2



X2

10

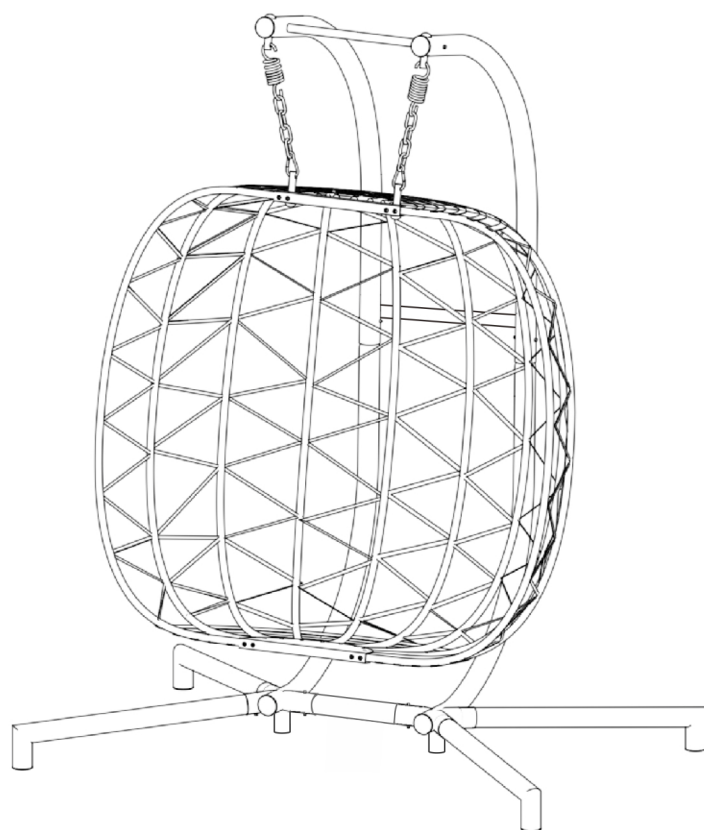

11

