
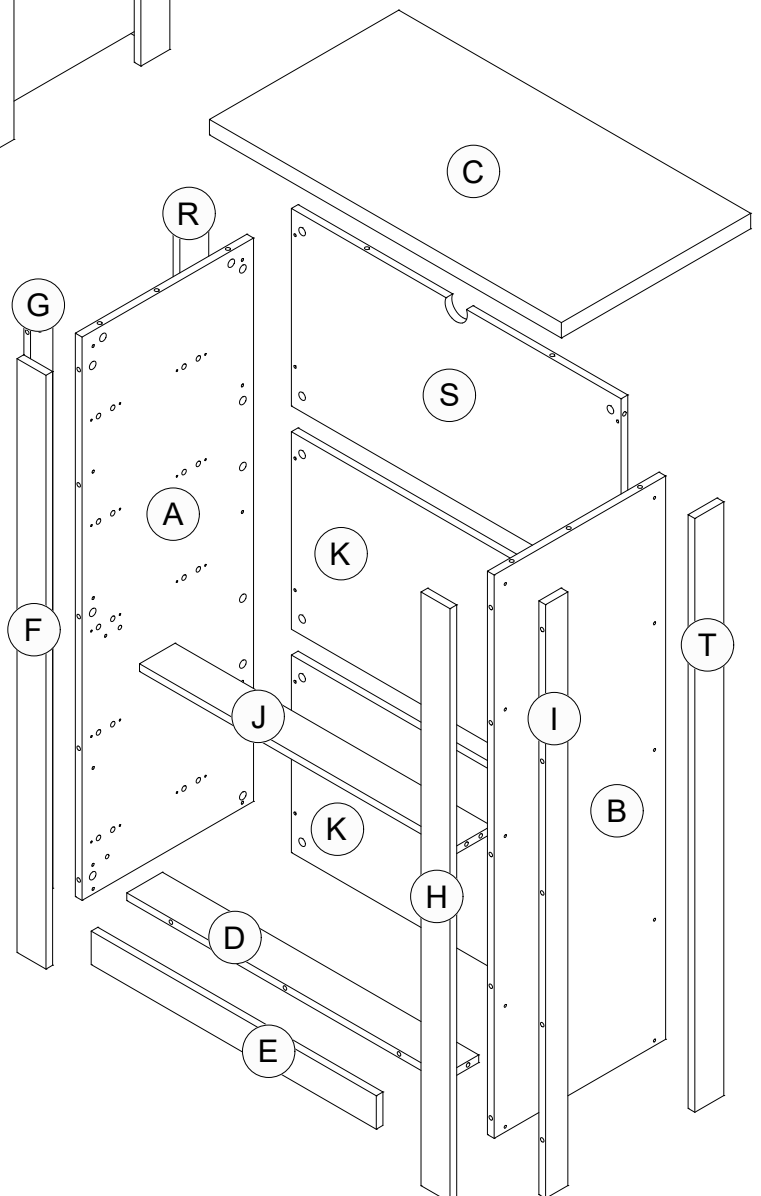
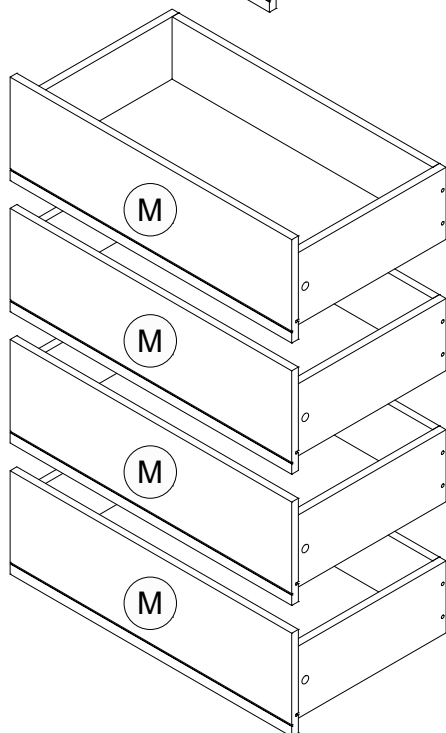



ASSEMBLY INSTRUCTIONS - BM302229

PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	2
L	1
M	4
N	5
O	5
P	5
Q	5
R	1
S	1
T	1
U	5

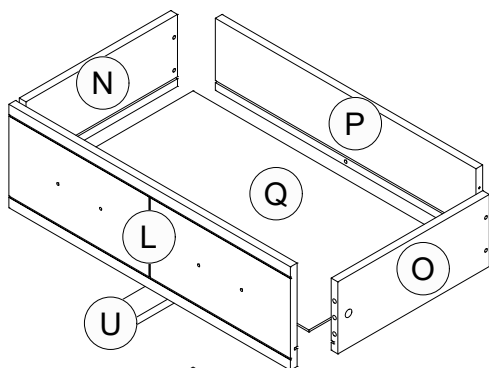

NOTES ON ASSEMBLY

- To ensure ease of assembly read all instructions before assembly and follow step by step illustrations.
 - Keep instructions for future use.
 - Adult assembly required. 
 - Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete.
-

MAINTENANCE TIPS

- Never let liquids or damp cloths sit on this furniture.
 - Never use chemical cleaning products. They can damage the finish. For cleaning, use only a slightly damp cloth and wipe dry.
 - To avoid dulling of the finish, do not place furniture in direct sunlight.
 - Do not put plastic or rubber rings under appliances. Use cloth or felt protectors.
 - To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth.
-













WARNING **AVERTISSEMENT**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:



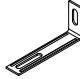


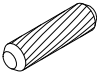
- It is important to place the safety bracket included.
- Place heaviest items in the lowest storage space.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- If a heavy object is placed on top or inside the furniture, consider this risk.

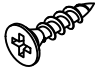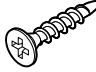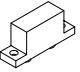Use of tip-over restraints reduce, but does not eliminate, the risk of tip-over.

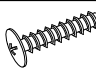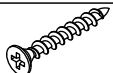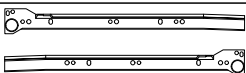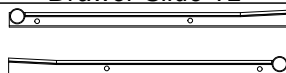
HARDWARE QUINCAILLERIE

(1)	Wood Dowel $\phi 8 \times 30 \text{mm}$	(2)	Minifix Bolt	(3)	Minifix Cam
					
	43 pcs		61 pcs		61 pcs
(4)	Screw $\phi 3.5 \times 15 \text{mm}$	(5)	Screw $\phi 4 \times 20 \text{mm}$	(6)	PVC Block - 35mm
					
	50 pcs		40 pcs		20 pcs
(7)	Screw $\phi 4 \times 38 \text{mm}$	(8)	Handle - 96mm	(9)	Handle Screw $\phi 4 \times 19 \text{mm}$
					
	25 pcs		6 pcs		12 pcs
(10)	Screw $\phi 4 \times 28 \text{mm}$	(11)	Drawer Slide 12"	(12)	Drawer Slide 12"
					
	20 pcs		5 sets		5 sets

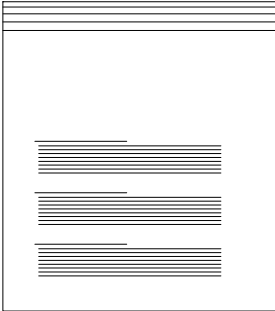
FURNITURE TIPPING RESTRAINT

 x 1		(13)	Mounting L-Bracket	(14)	Flat Washer $\phi 6 \times 16 \text{mm}$
					
			1 pc		1 pc
		(15)	Screw #10x16mm	(16)	Screw $\phi 4 \times 38 \text{mm}$
					
			1 pc		1 pc


TOOLS NOT INCLUDED

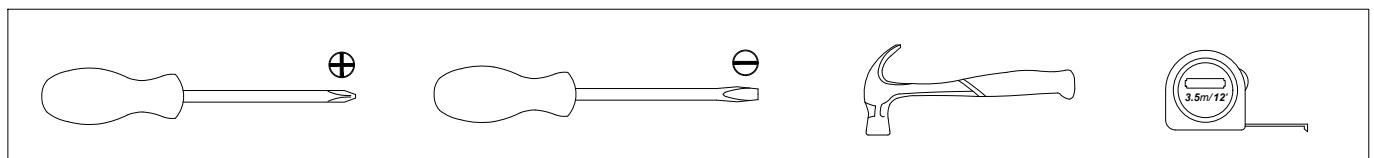

STEP 1

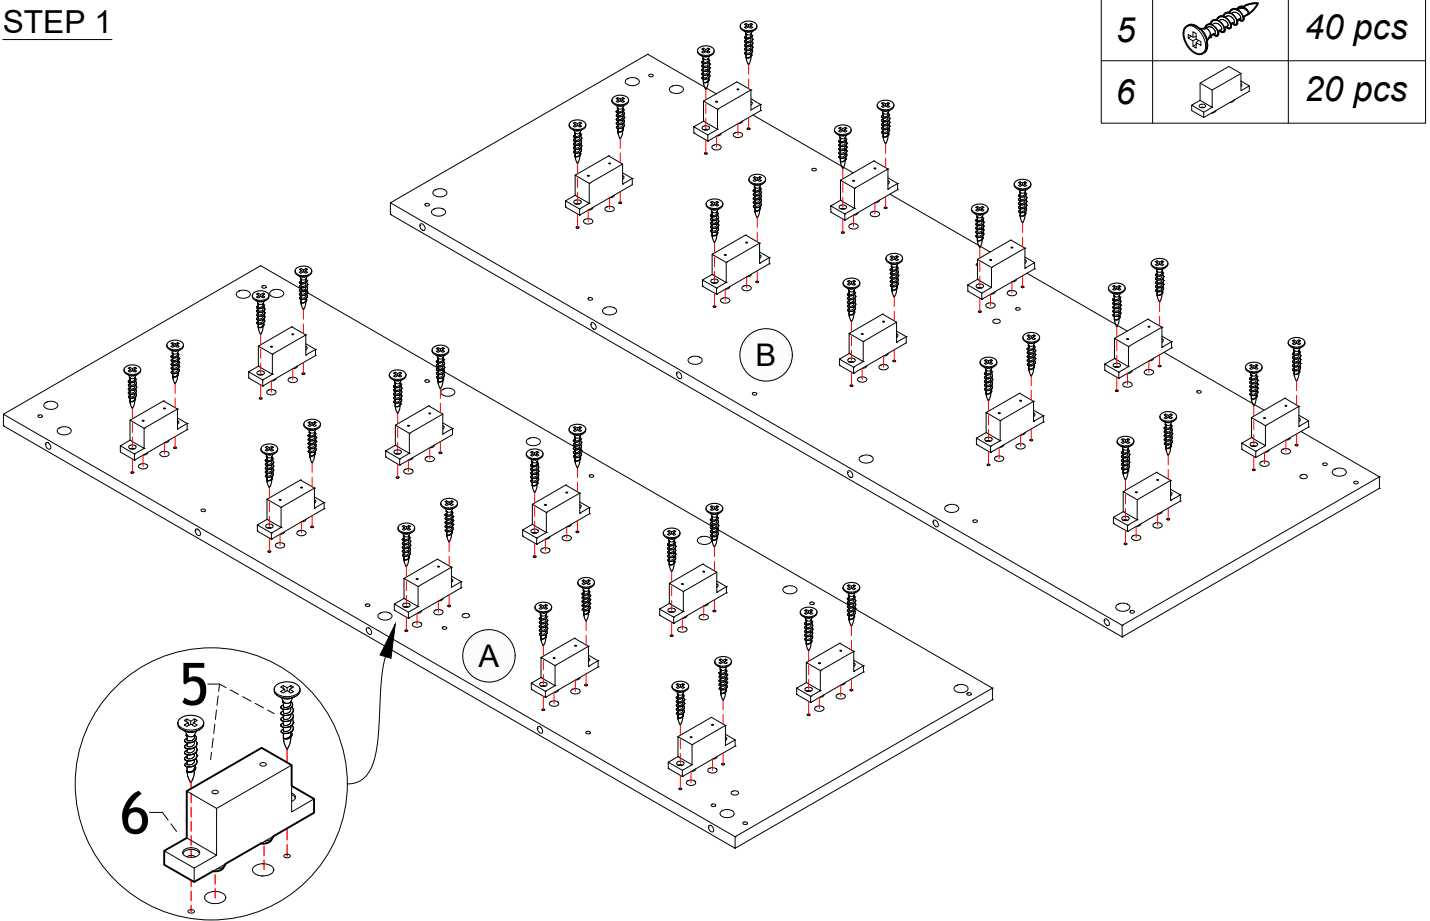


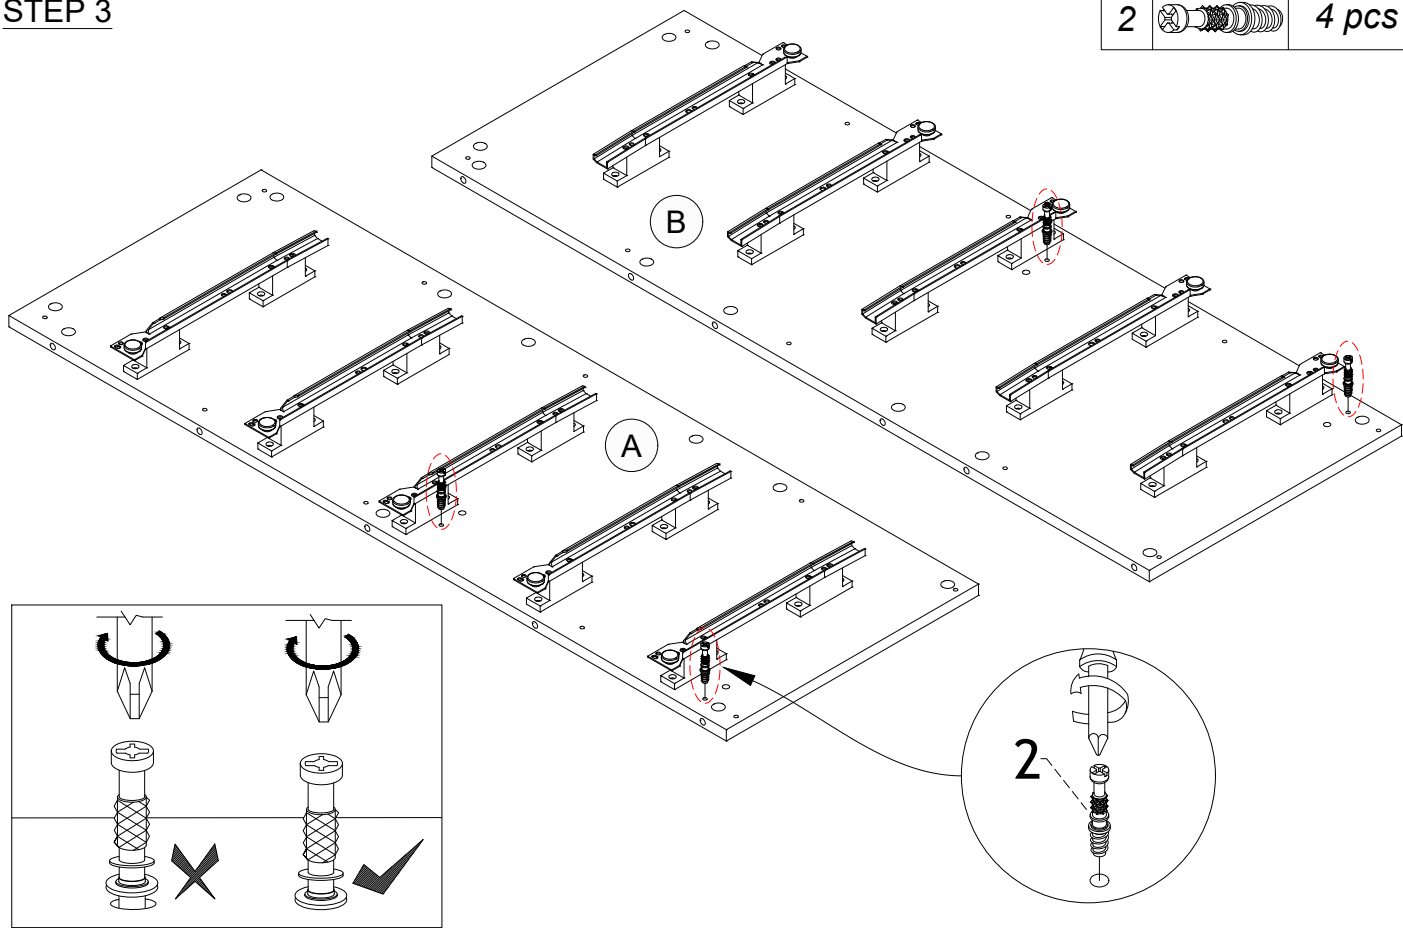
STEP 2

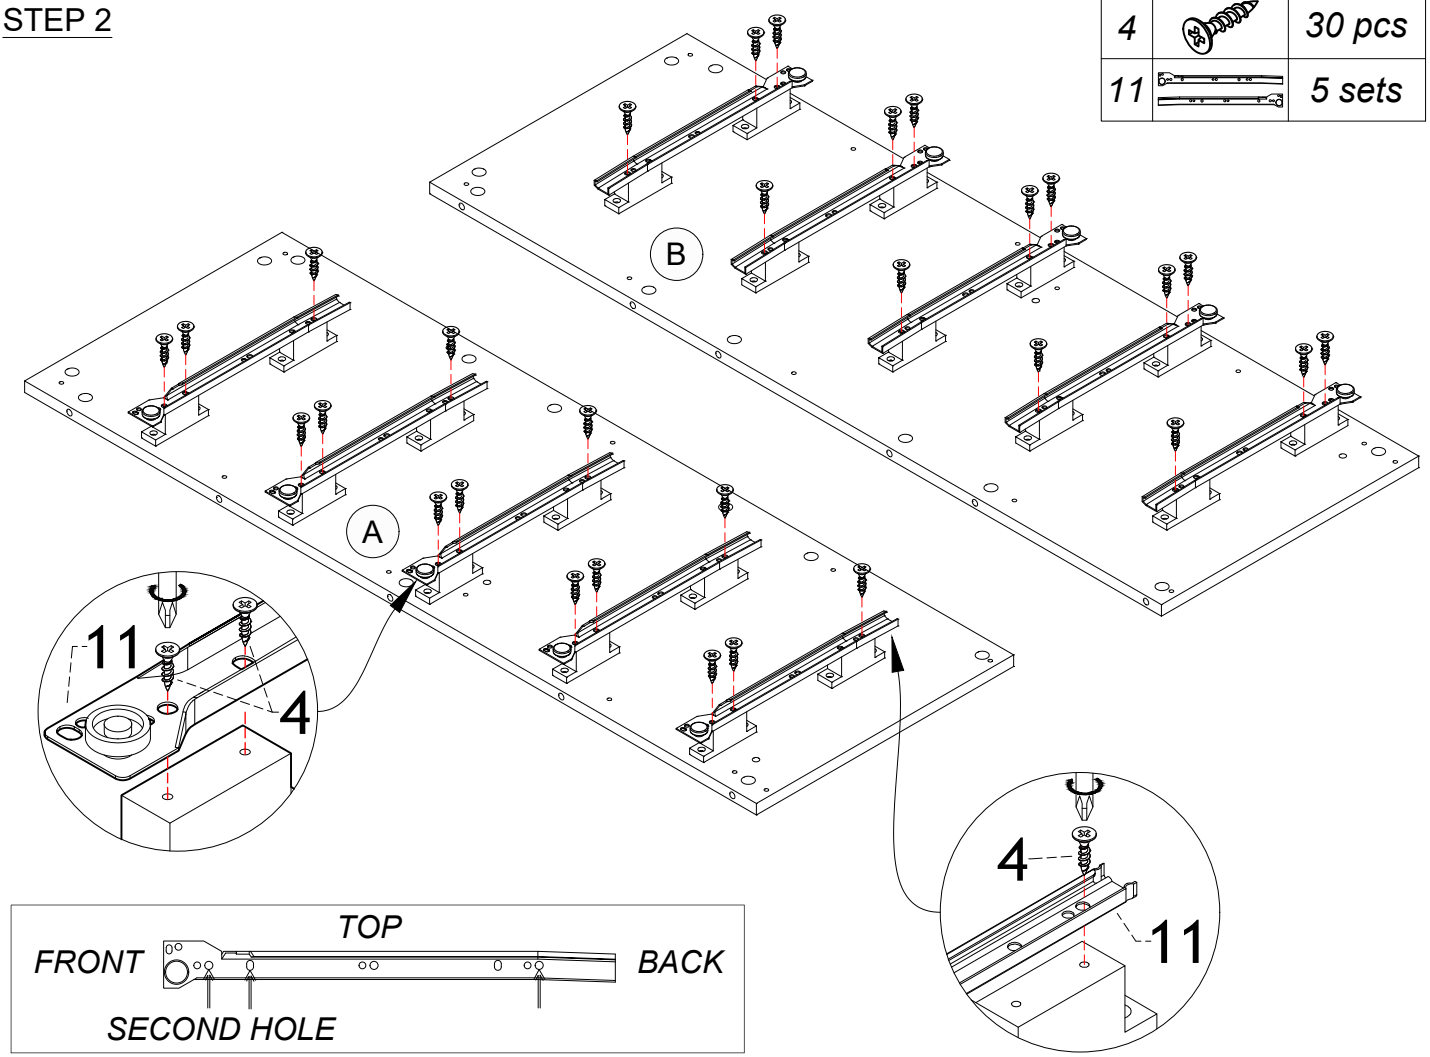

PLEASE ENSURE TO FIX THE SCREWS AS PER ABOVE POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS


STEP 3

2		4 pcs
---	--	-------




STEP 4

1		4 pcs
---	---	-------

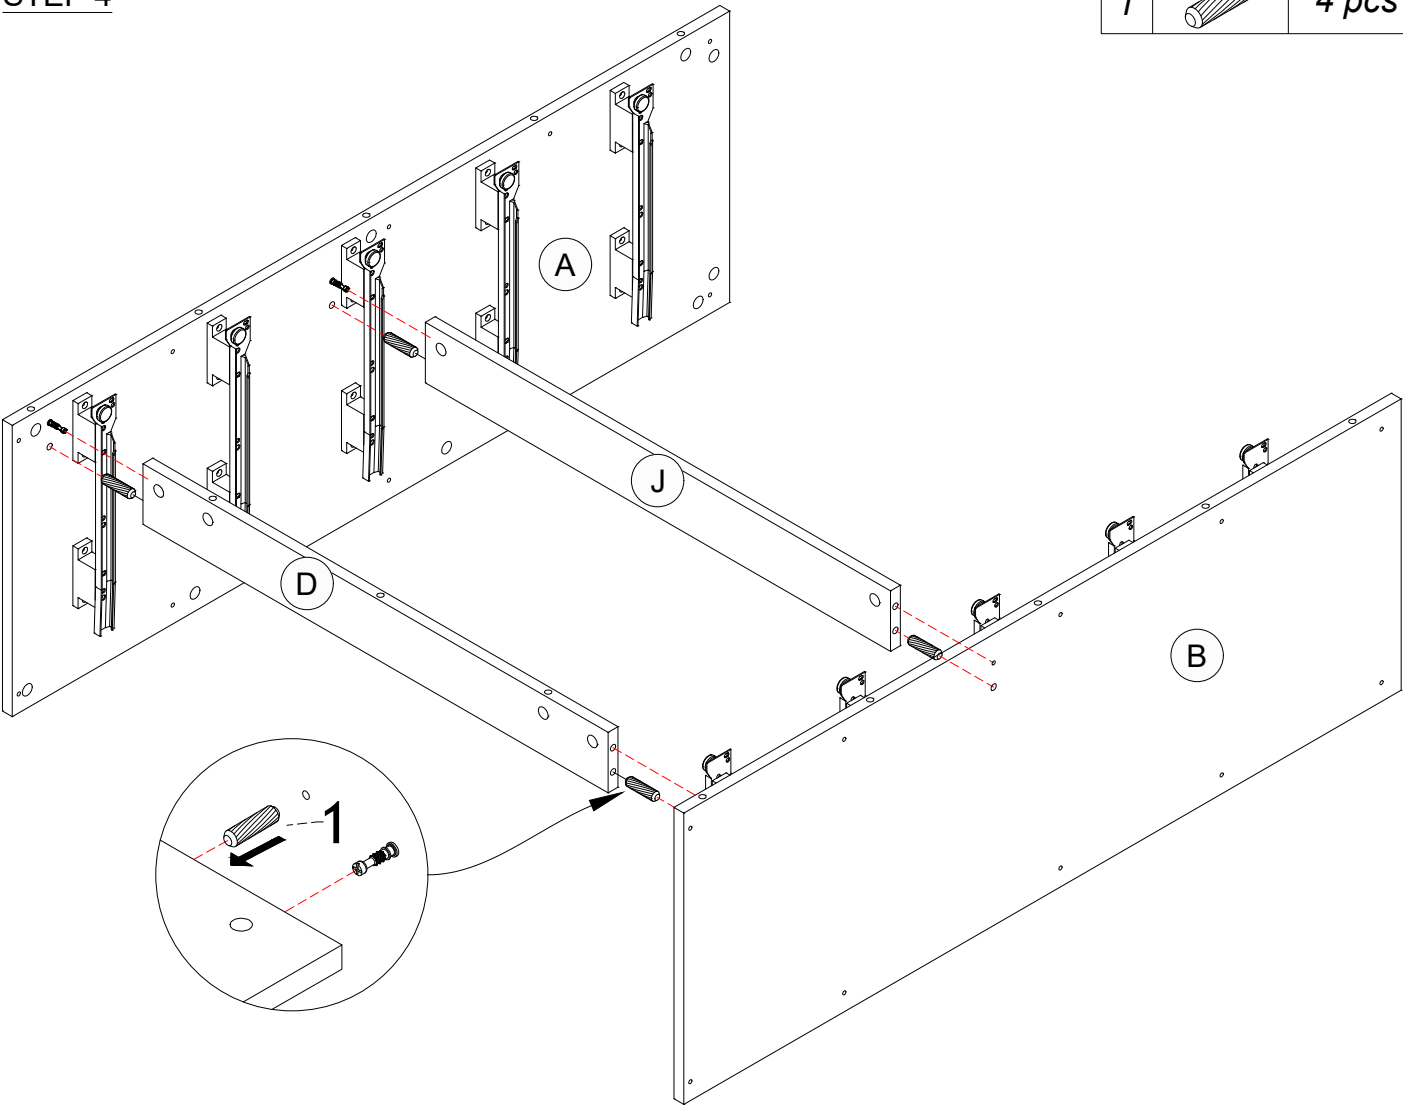




STEP 5

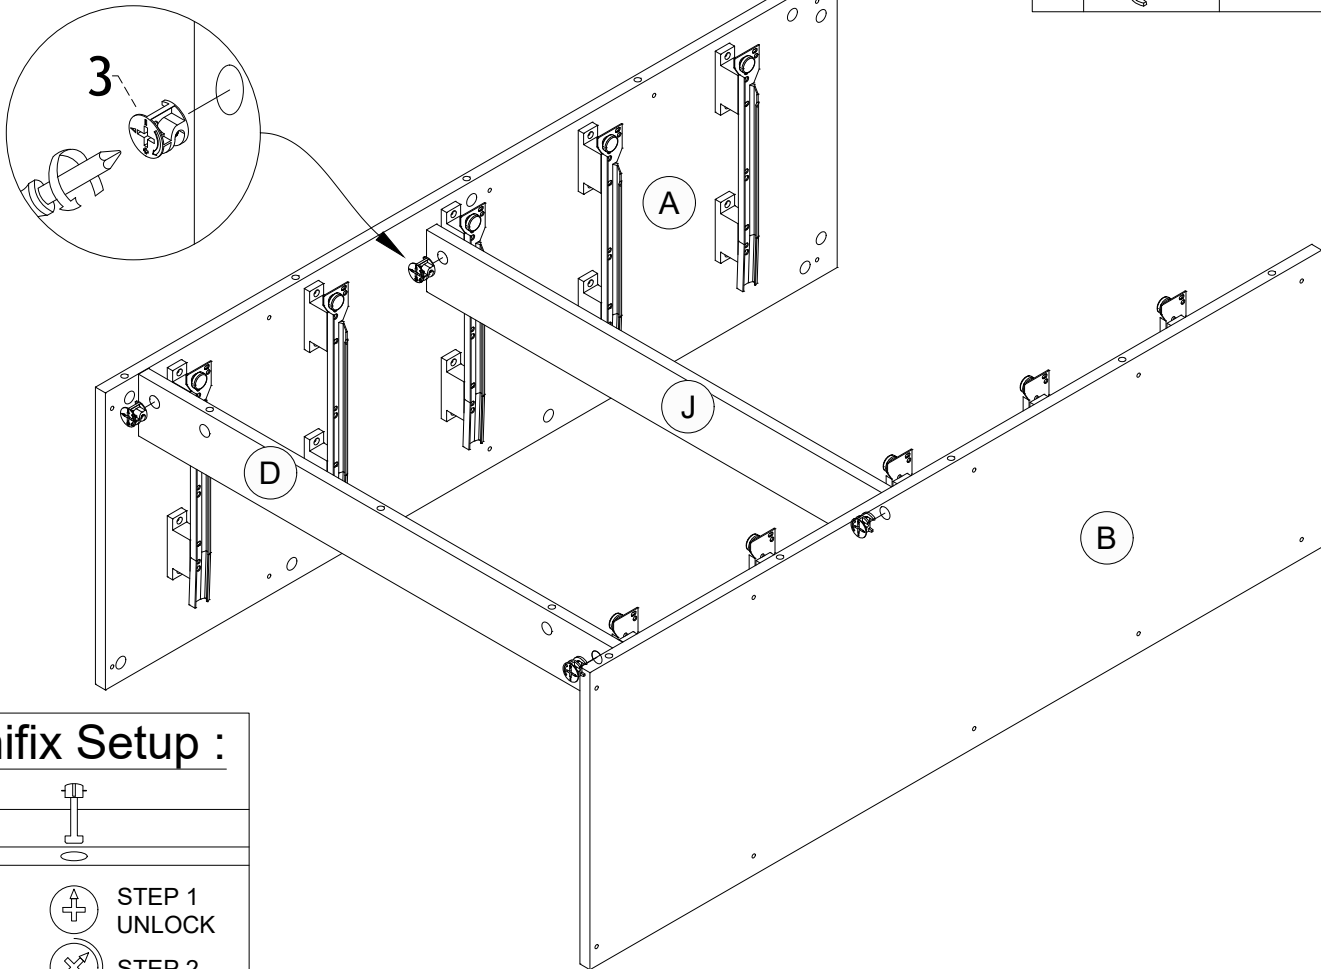3		4 pcs
---	--	-------




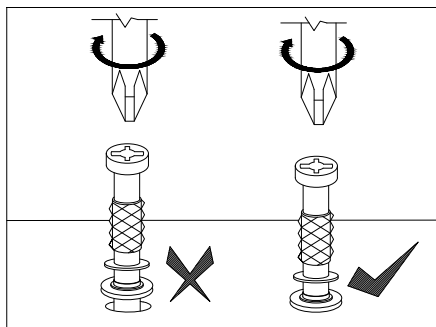
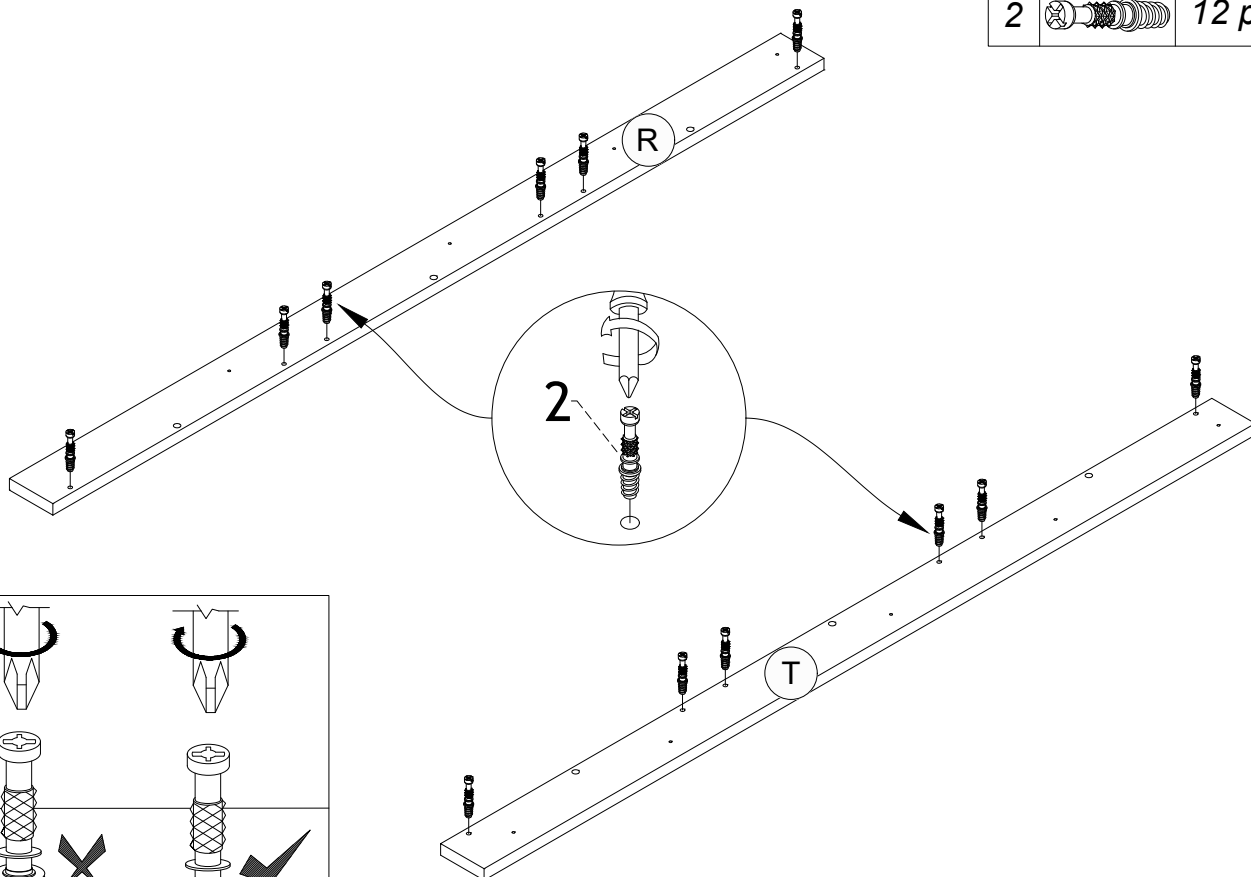
Minifix Setup :




-  STEP 1
UNLOCK
-  STEP 2
-  STEP 3
LOCK


STEP 6

2		12 pcs
---	---	--------




STEP 7



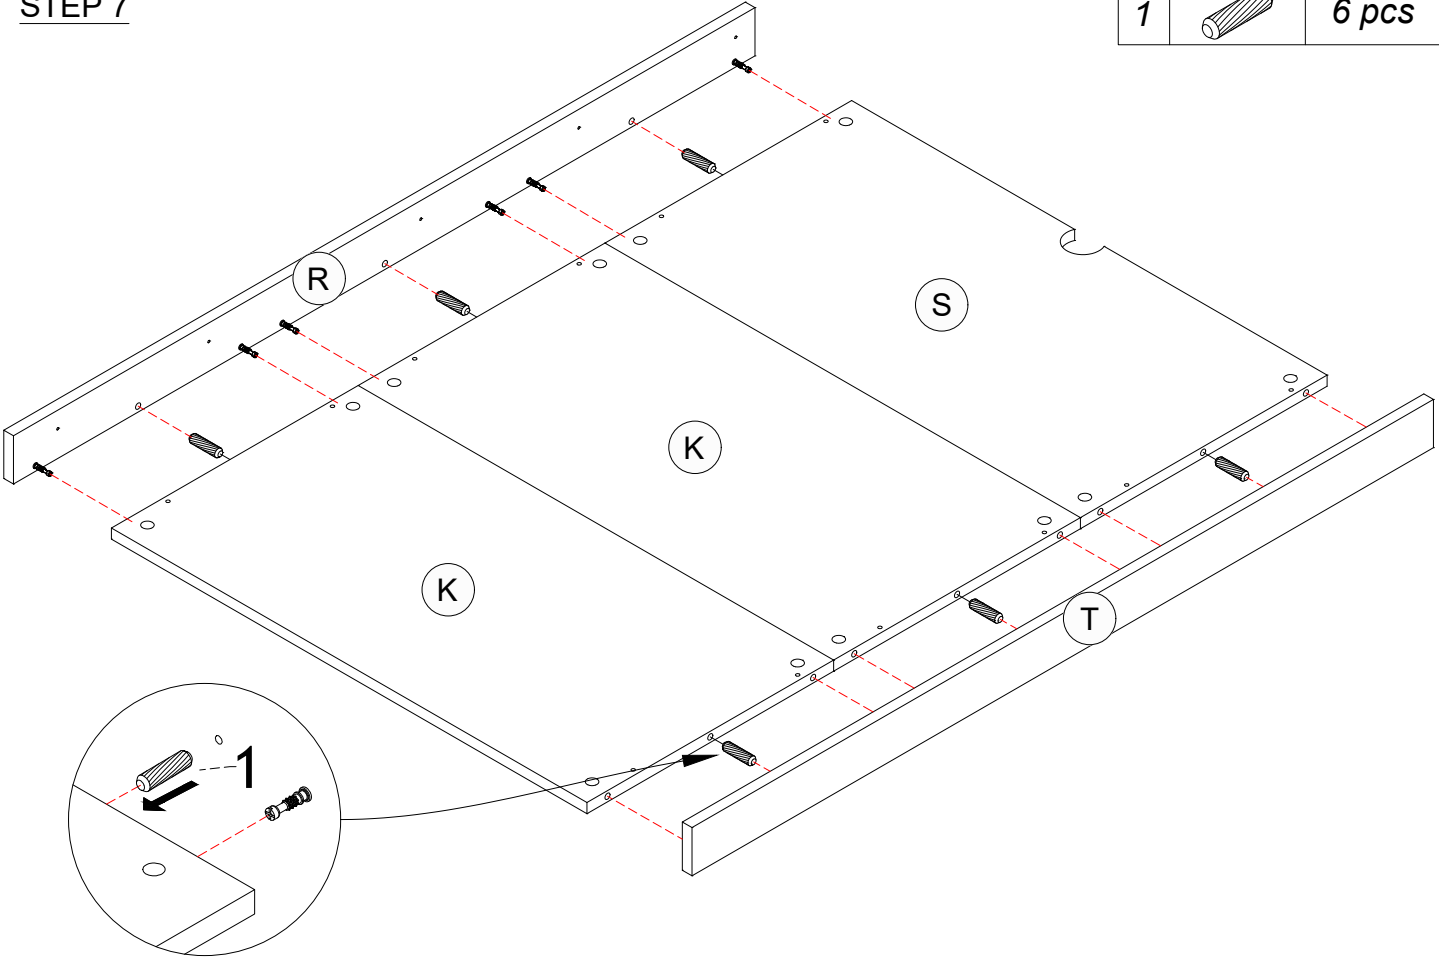
1		6 pcs
---	--	-------




STEP 8

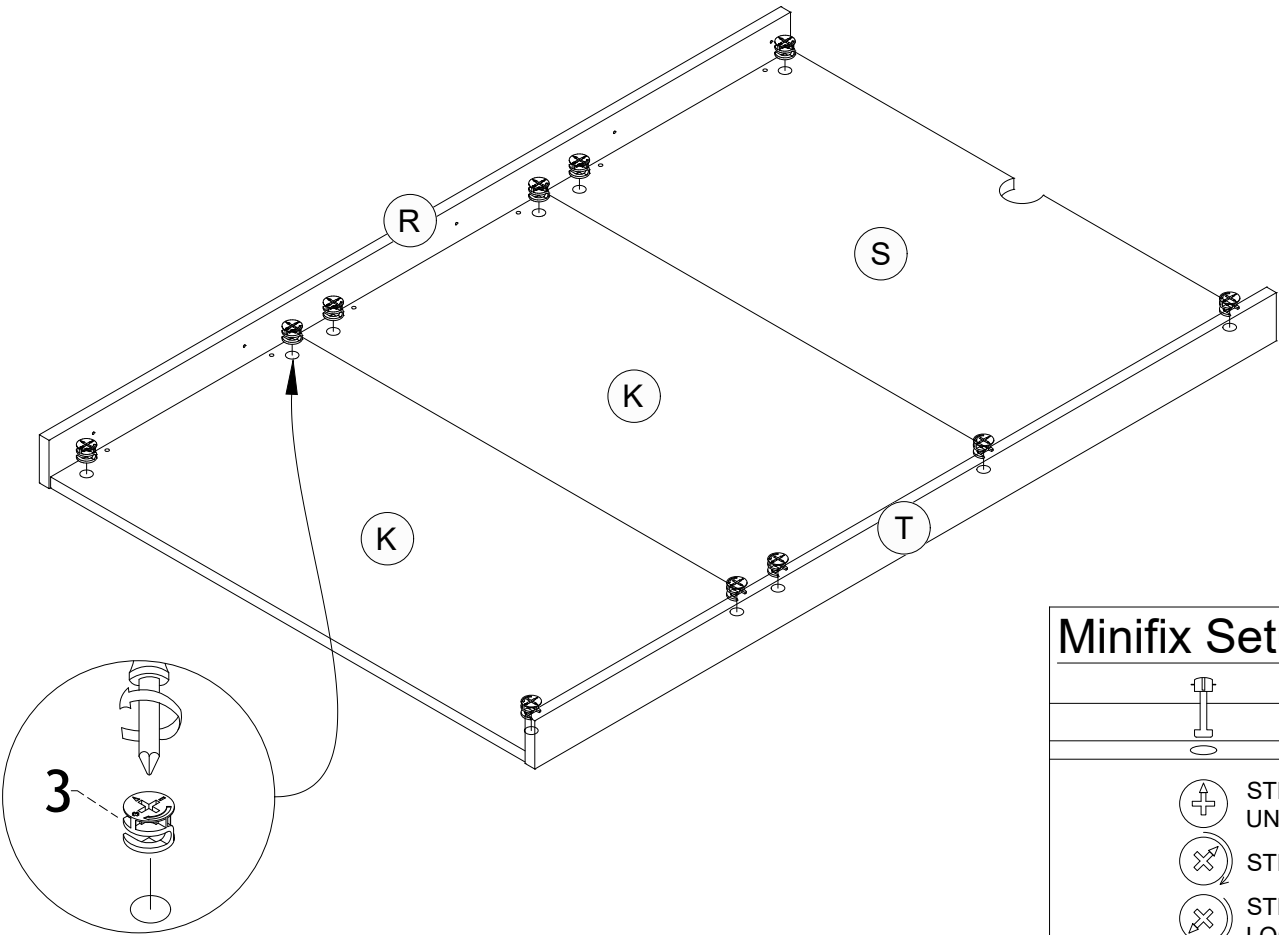3		12 pcs
---	---	--------




Minifix Setup :	
	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK

STEP 9

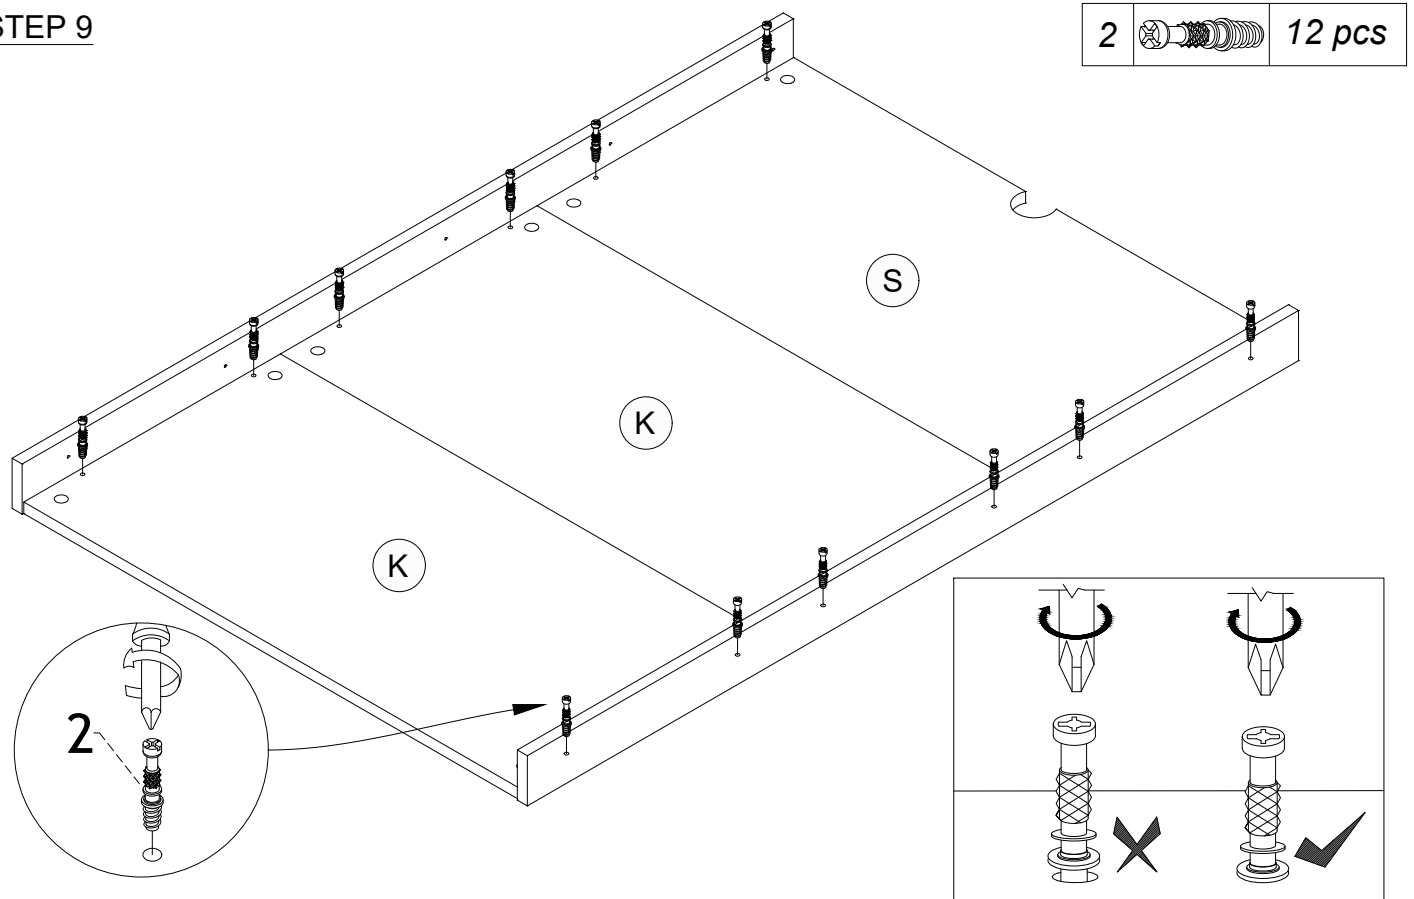




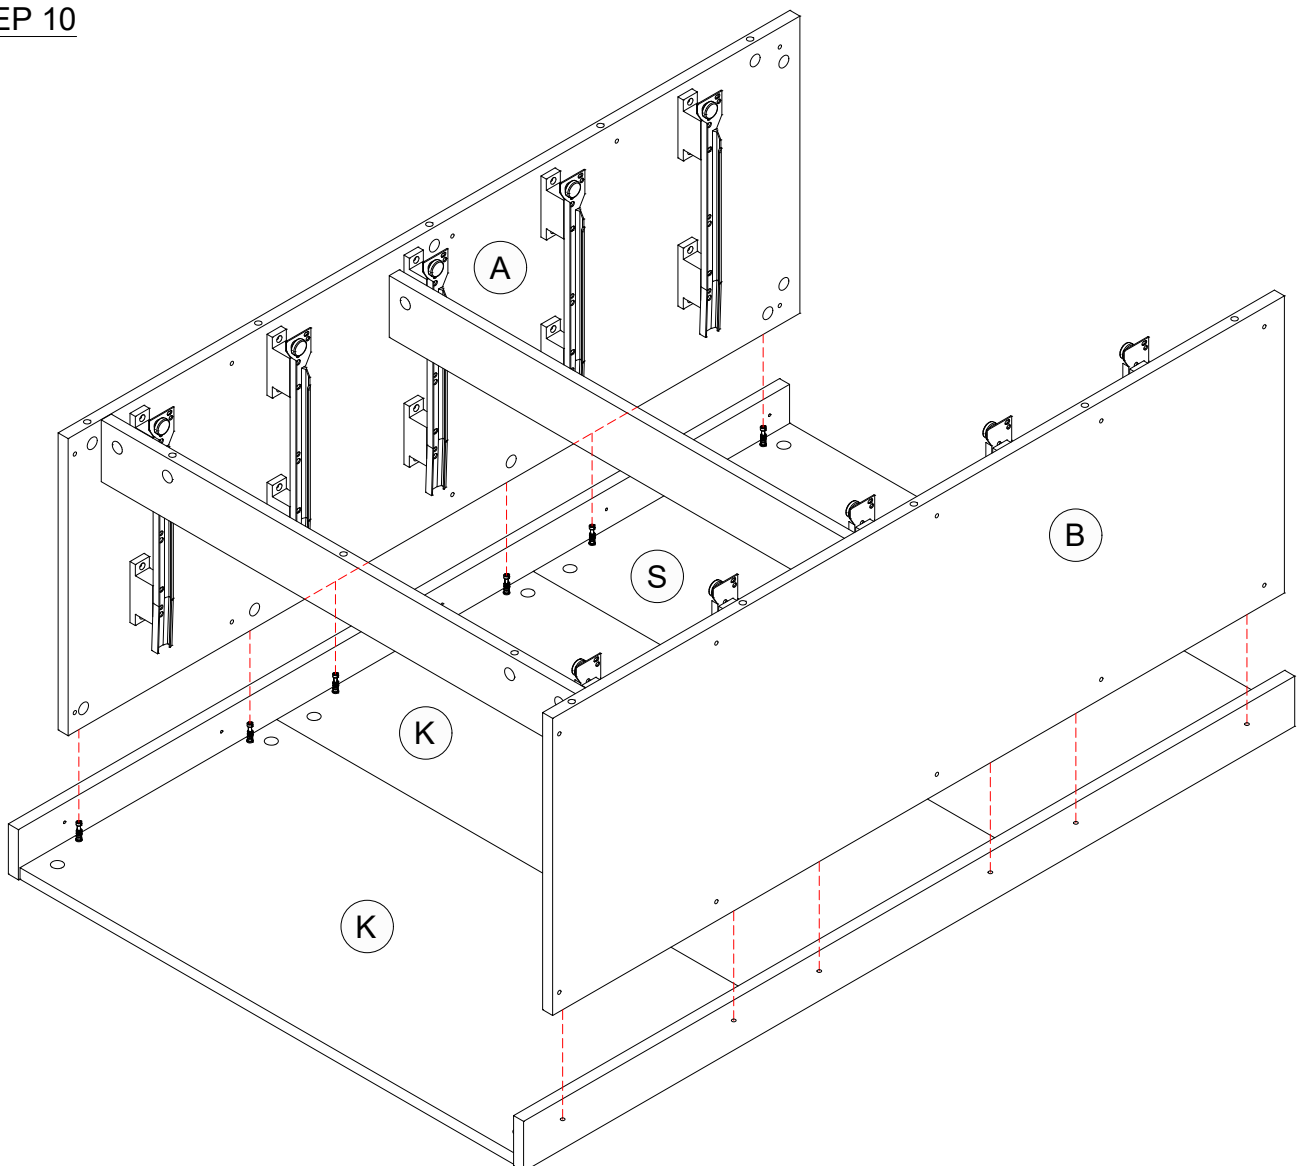

STEP 10

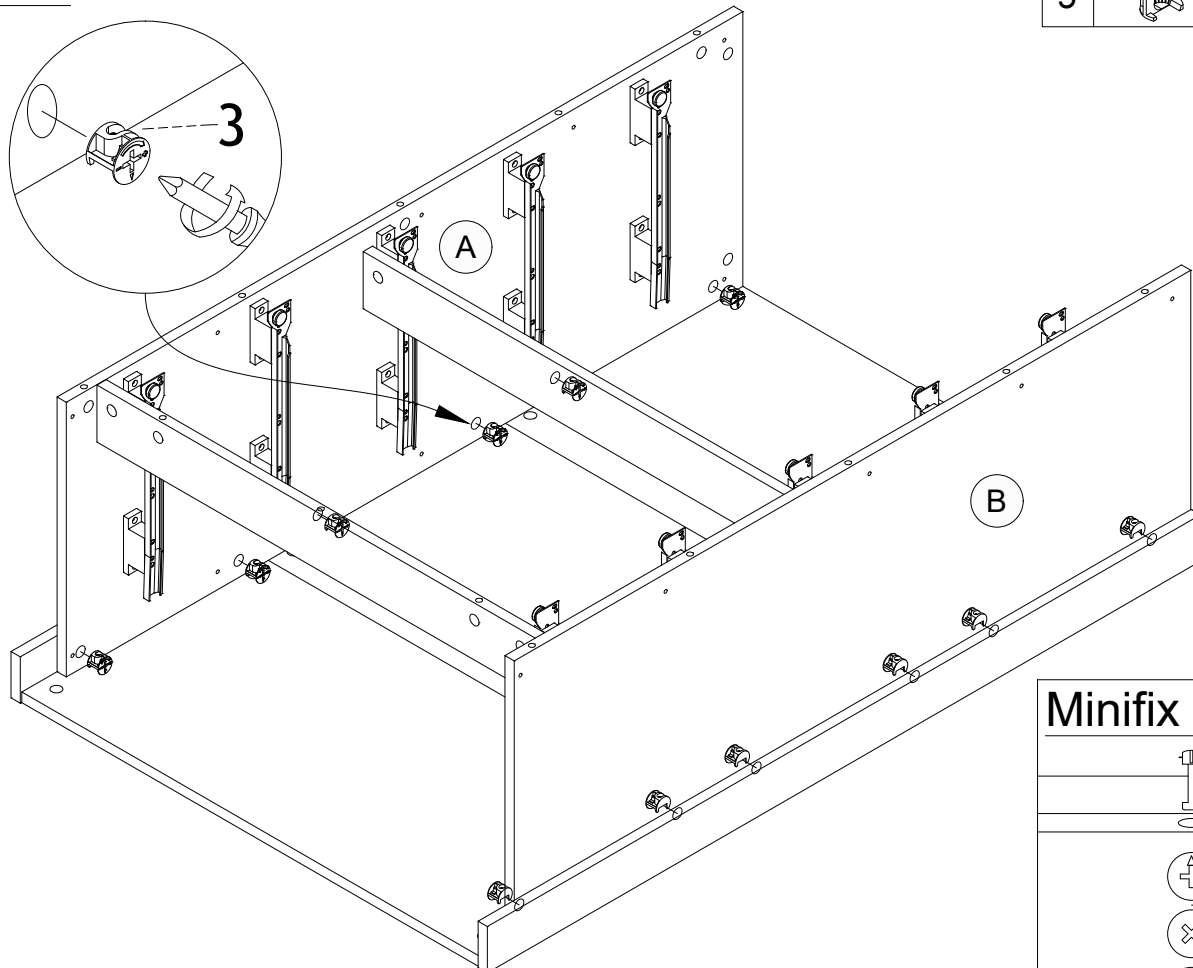


STEP 11


3		12 pcs
---	--	--------




Minifix Setup :	
	
	STEP 1 UNLOCK
	STEP 2 LOCK
	STEP 3 LOCK

STEP 12


10		10 pcs
----	---	--------

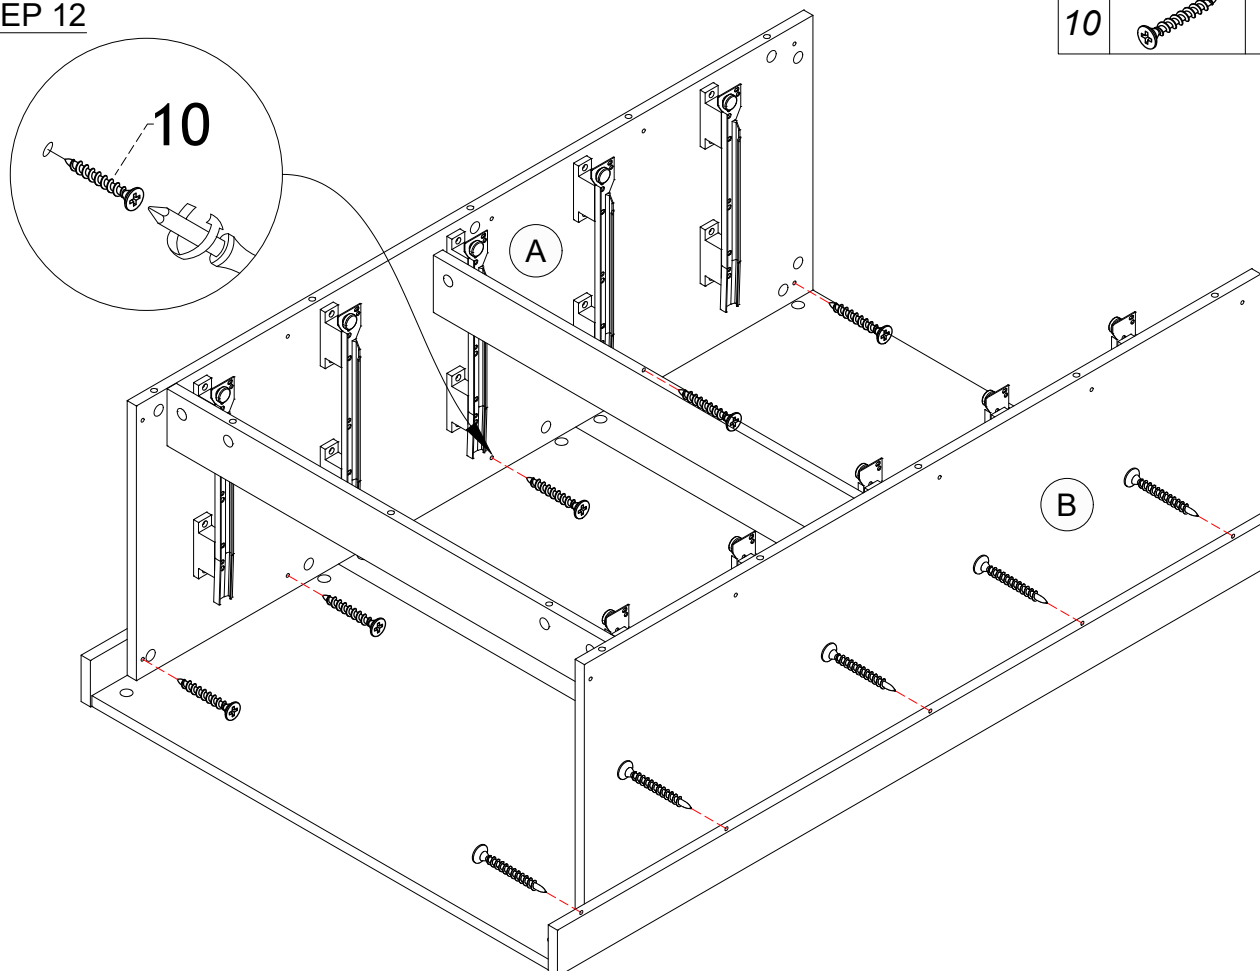


STEP 13

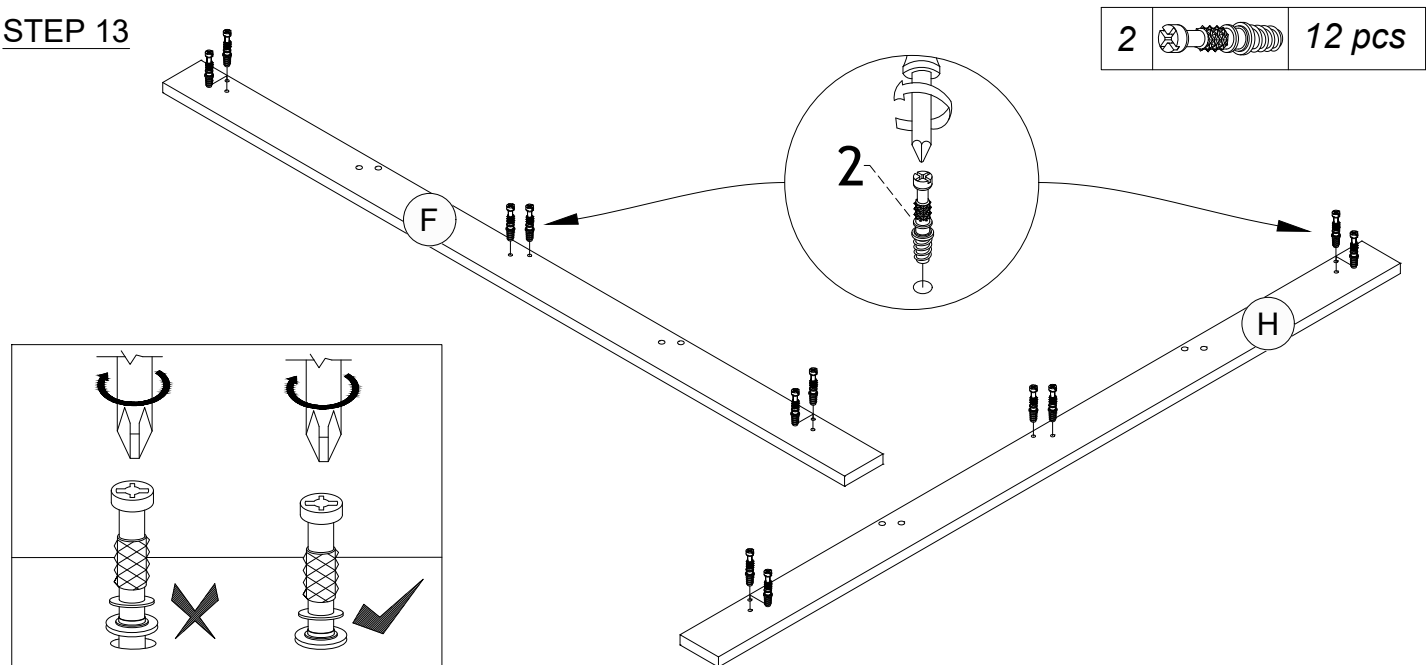


STEP 14

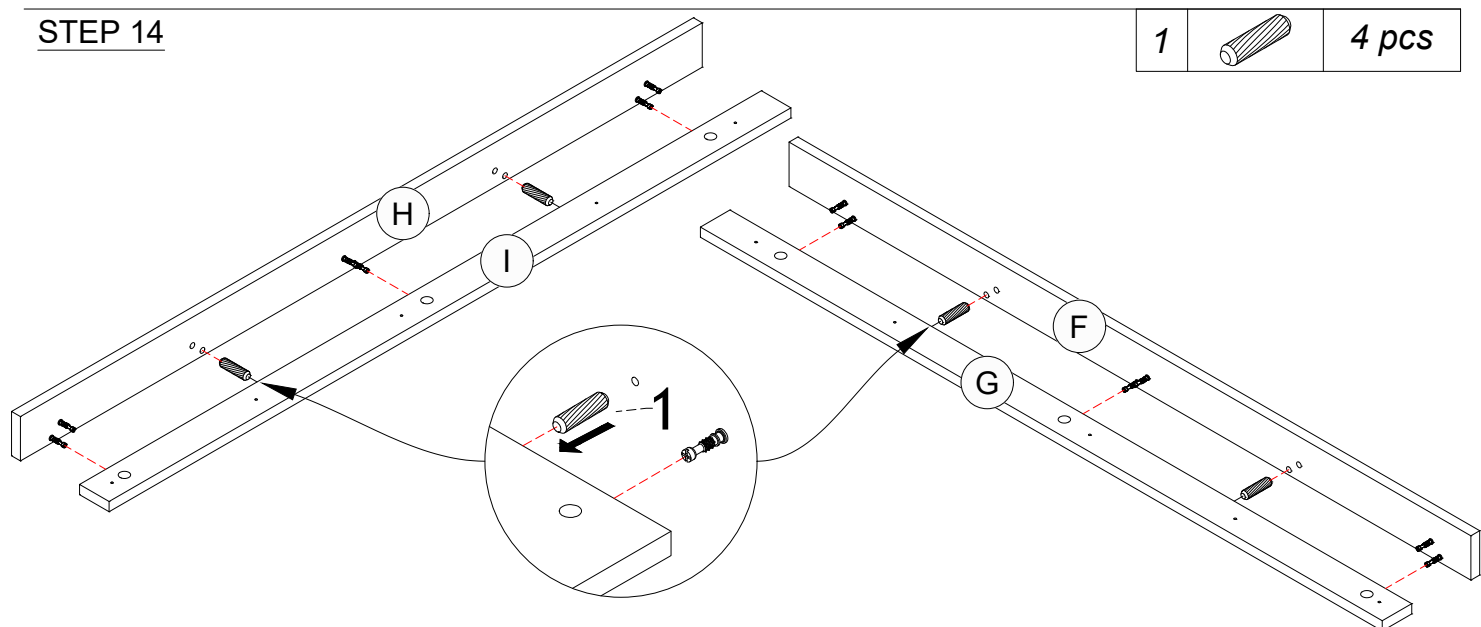


STEP 15

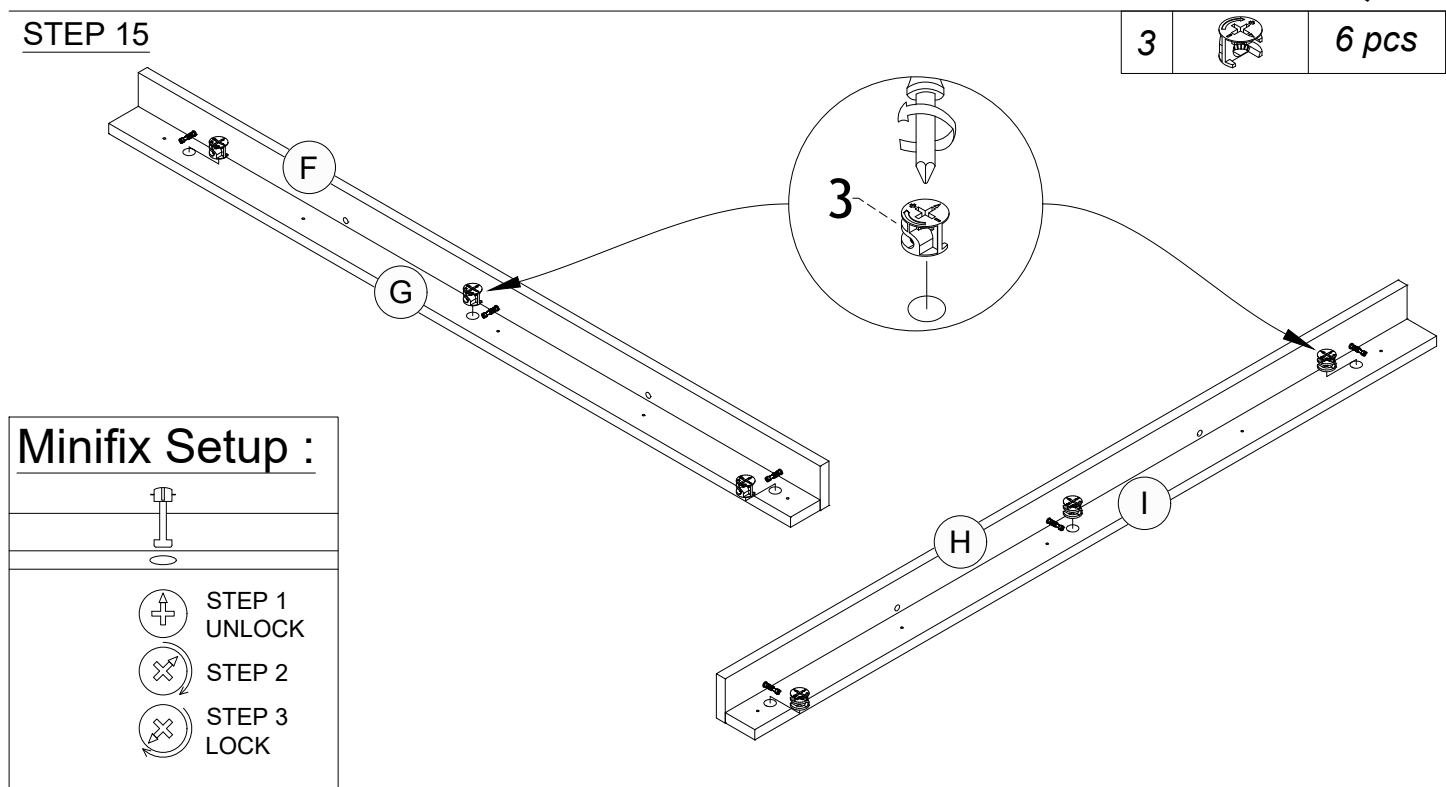


STEP 16

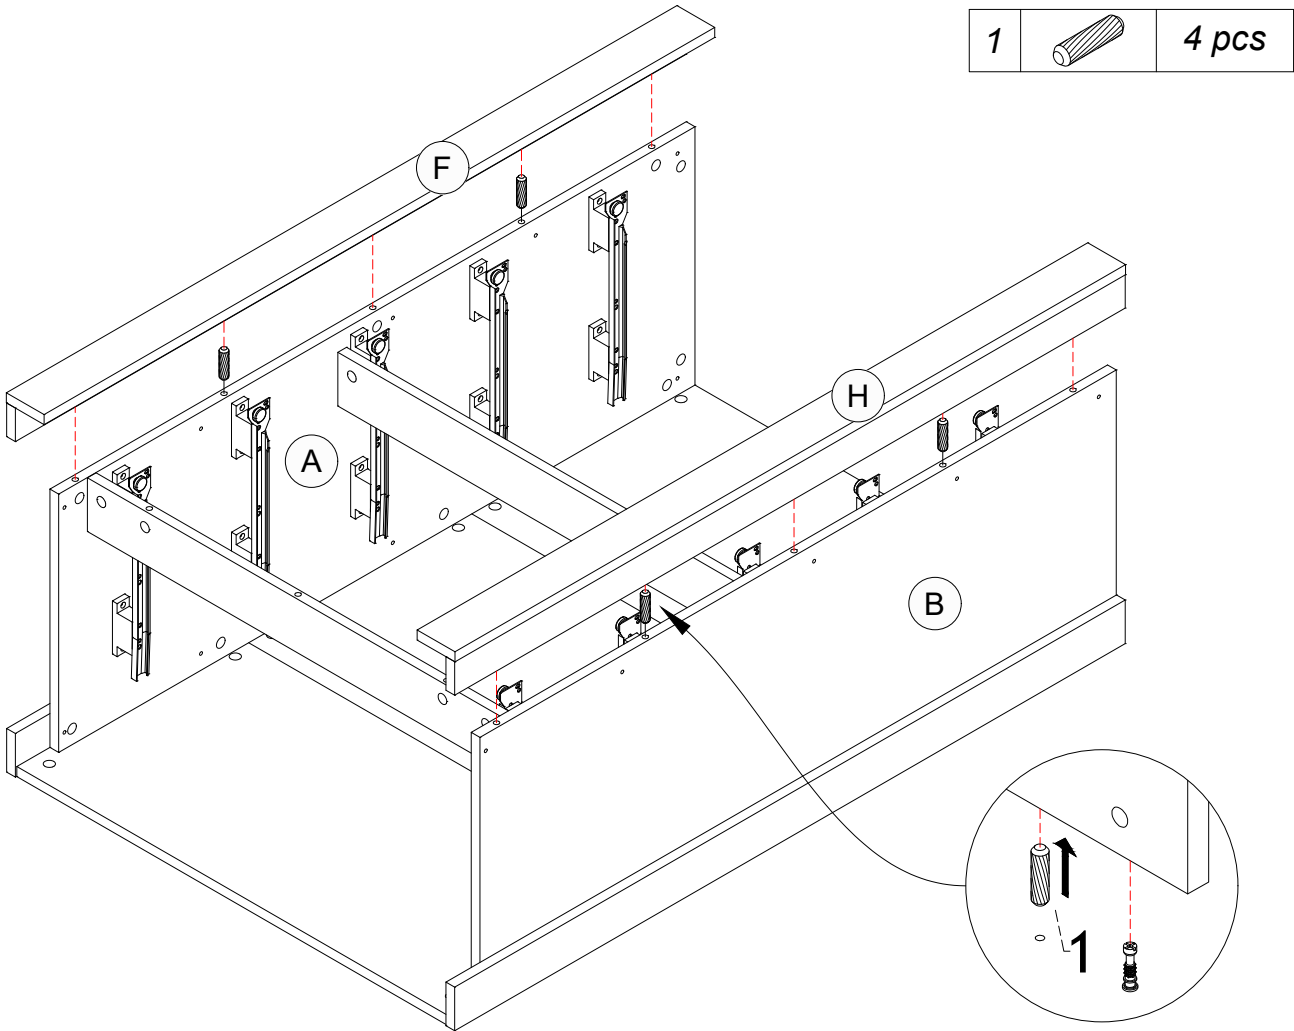


STEP 17

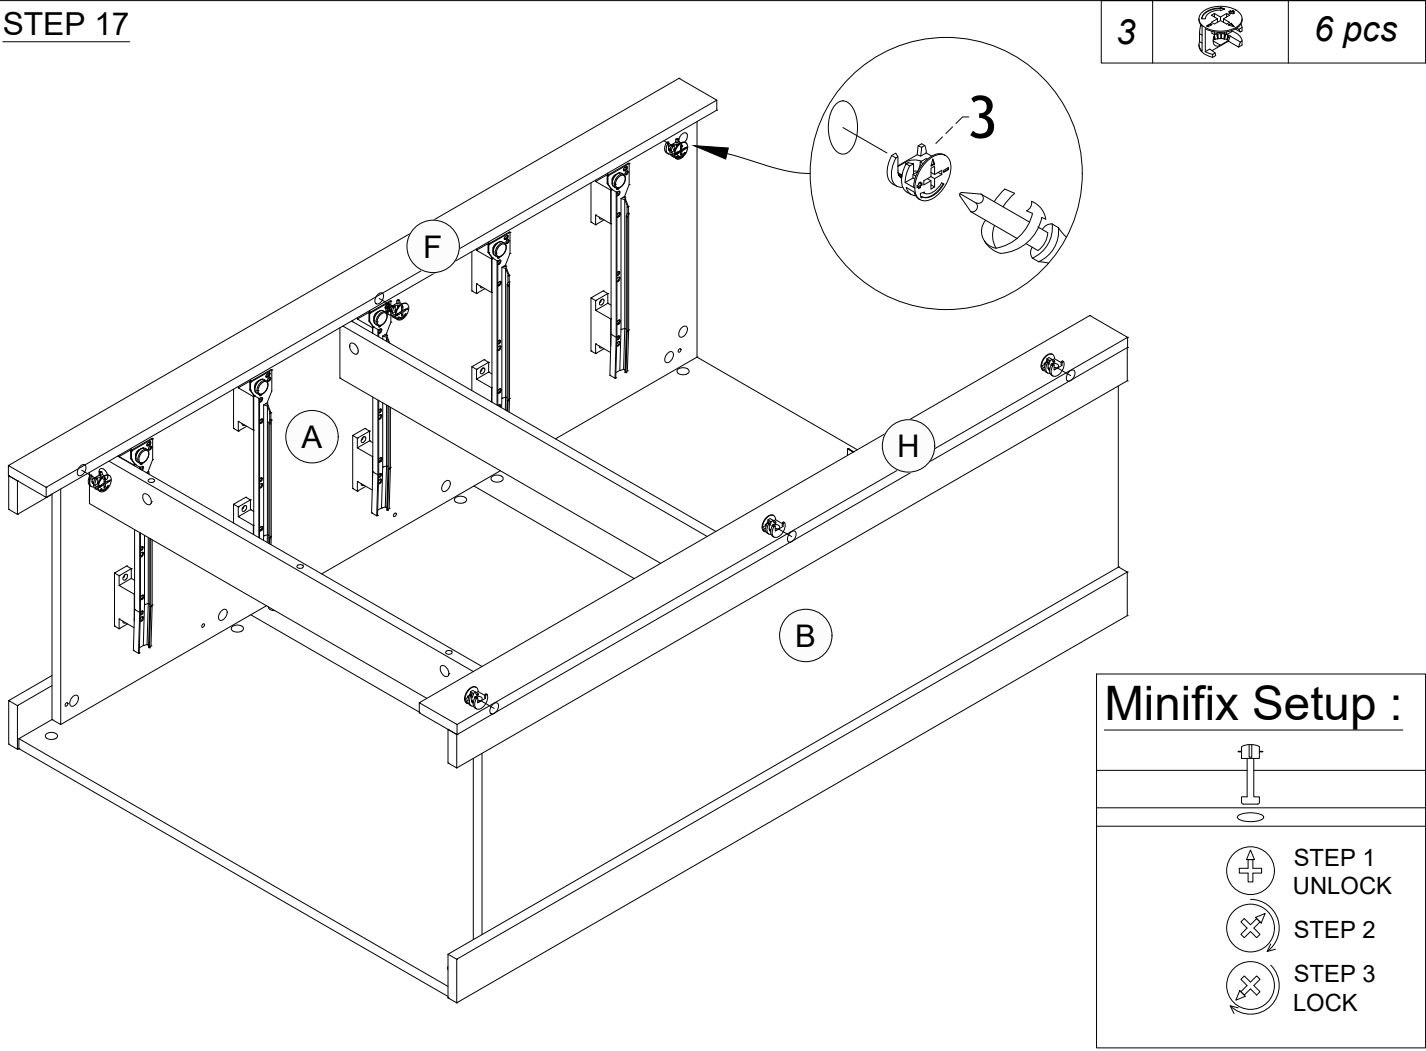


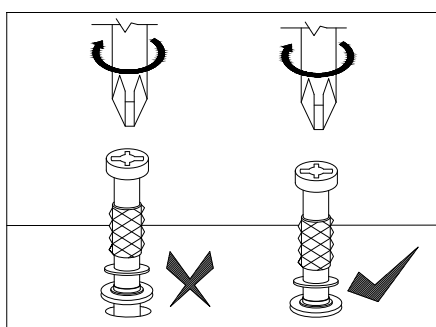
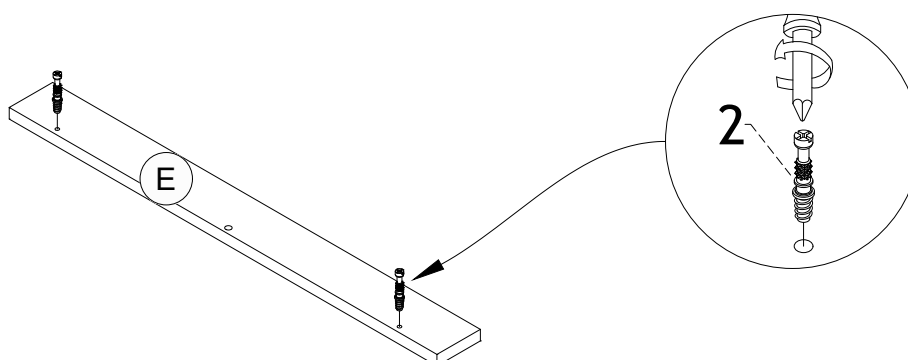
STEP 18

10		10 pcs
----	--	--------

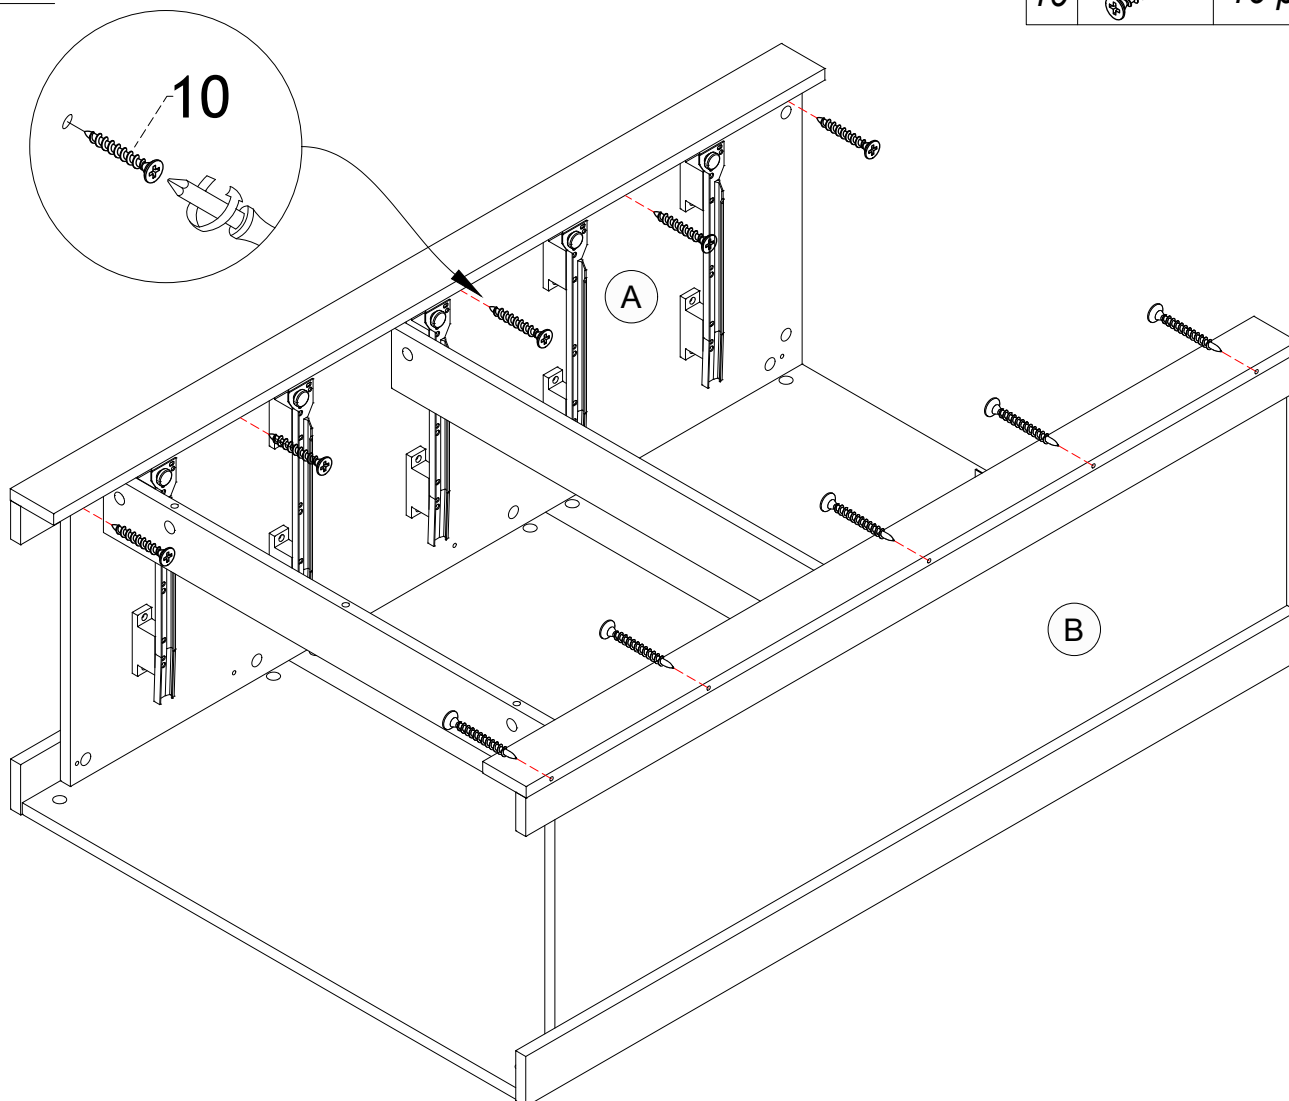



STEP 19

2		2 pcs
---	---	-------




STEP 20

1		1 pc
---	--	------

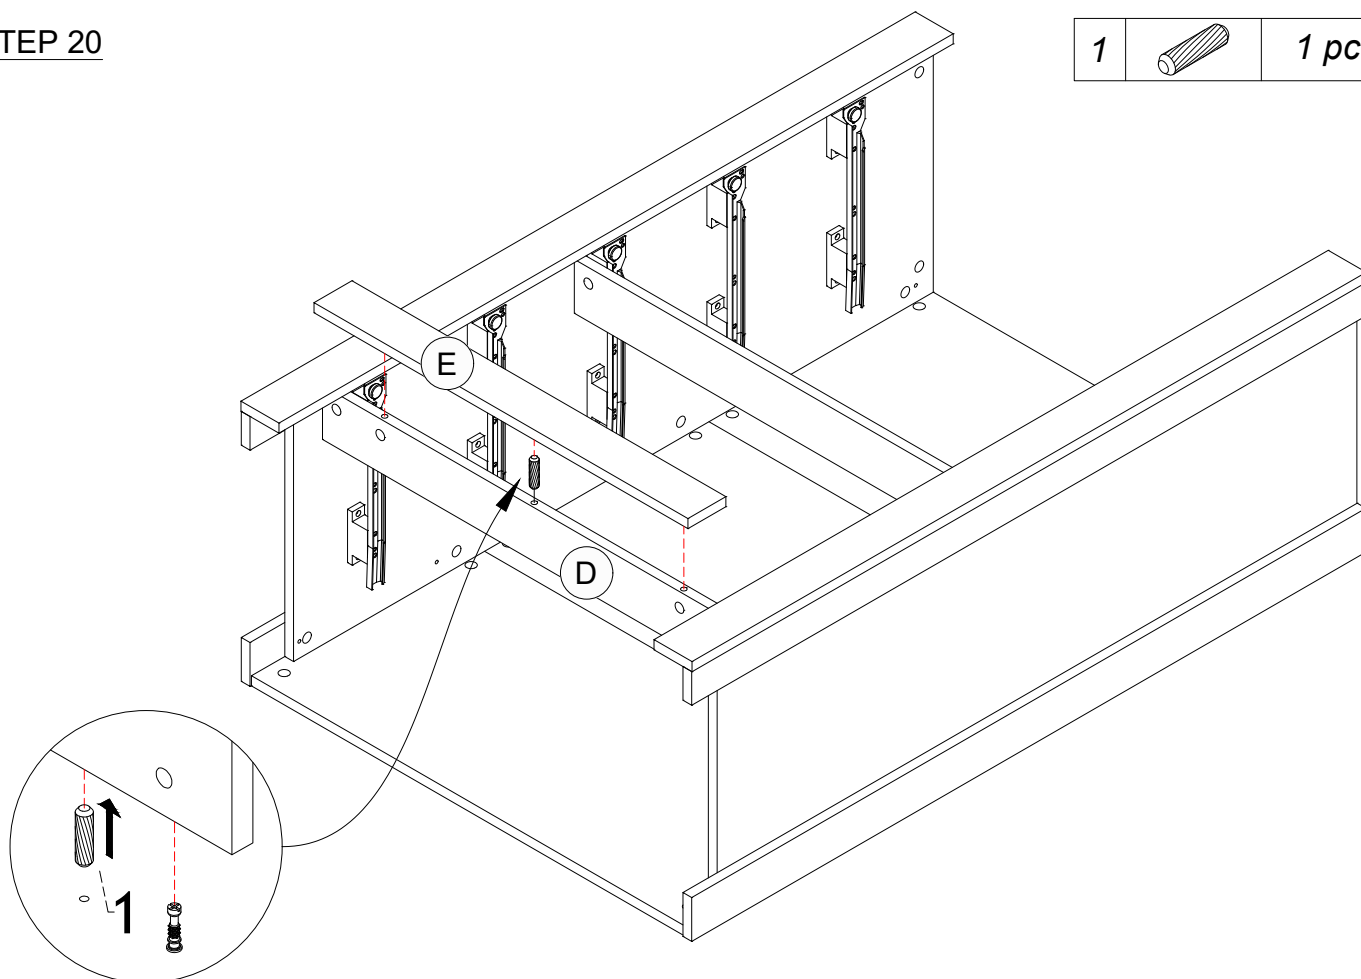

STEP 21

3		2 pcs
---	---	-------

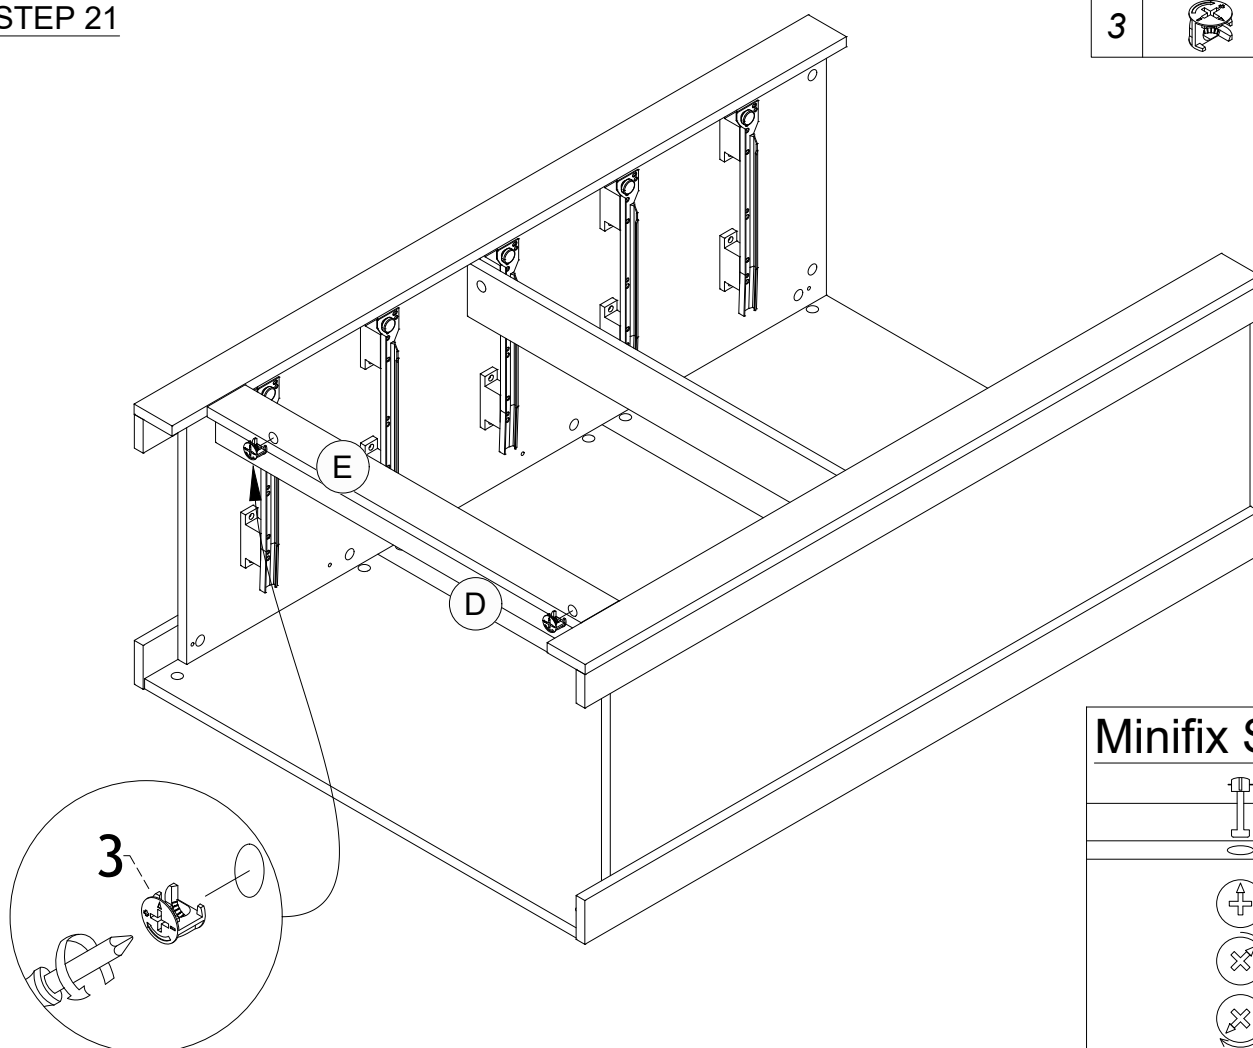

Minifix Setup :



STEP 1
UNLOCK






STEP 2




STEP 3
LOCK

STEP 22

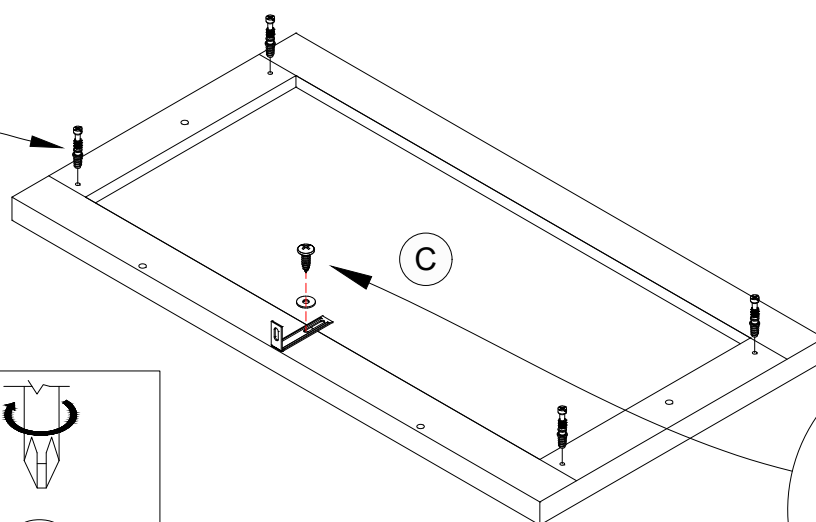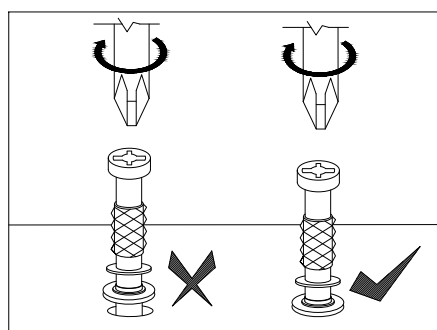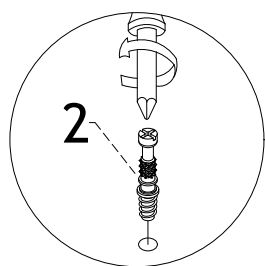


2		4 pcs
13		1 pc
14		1 pc
15		1 pc

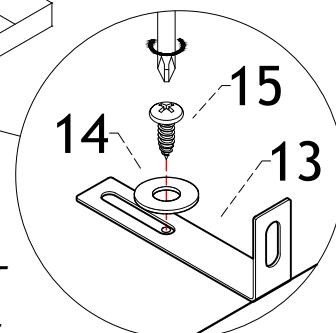


DO NOT FIT
TOO TIGHT.

STEP 23

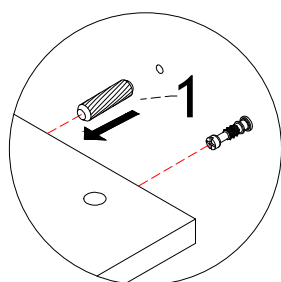




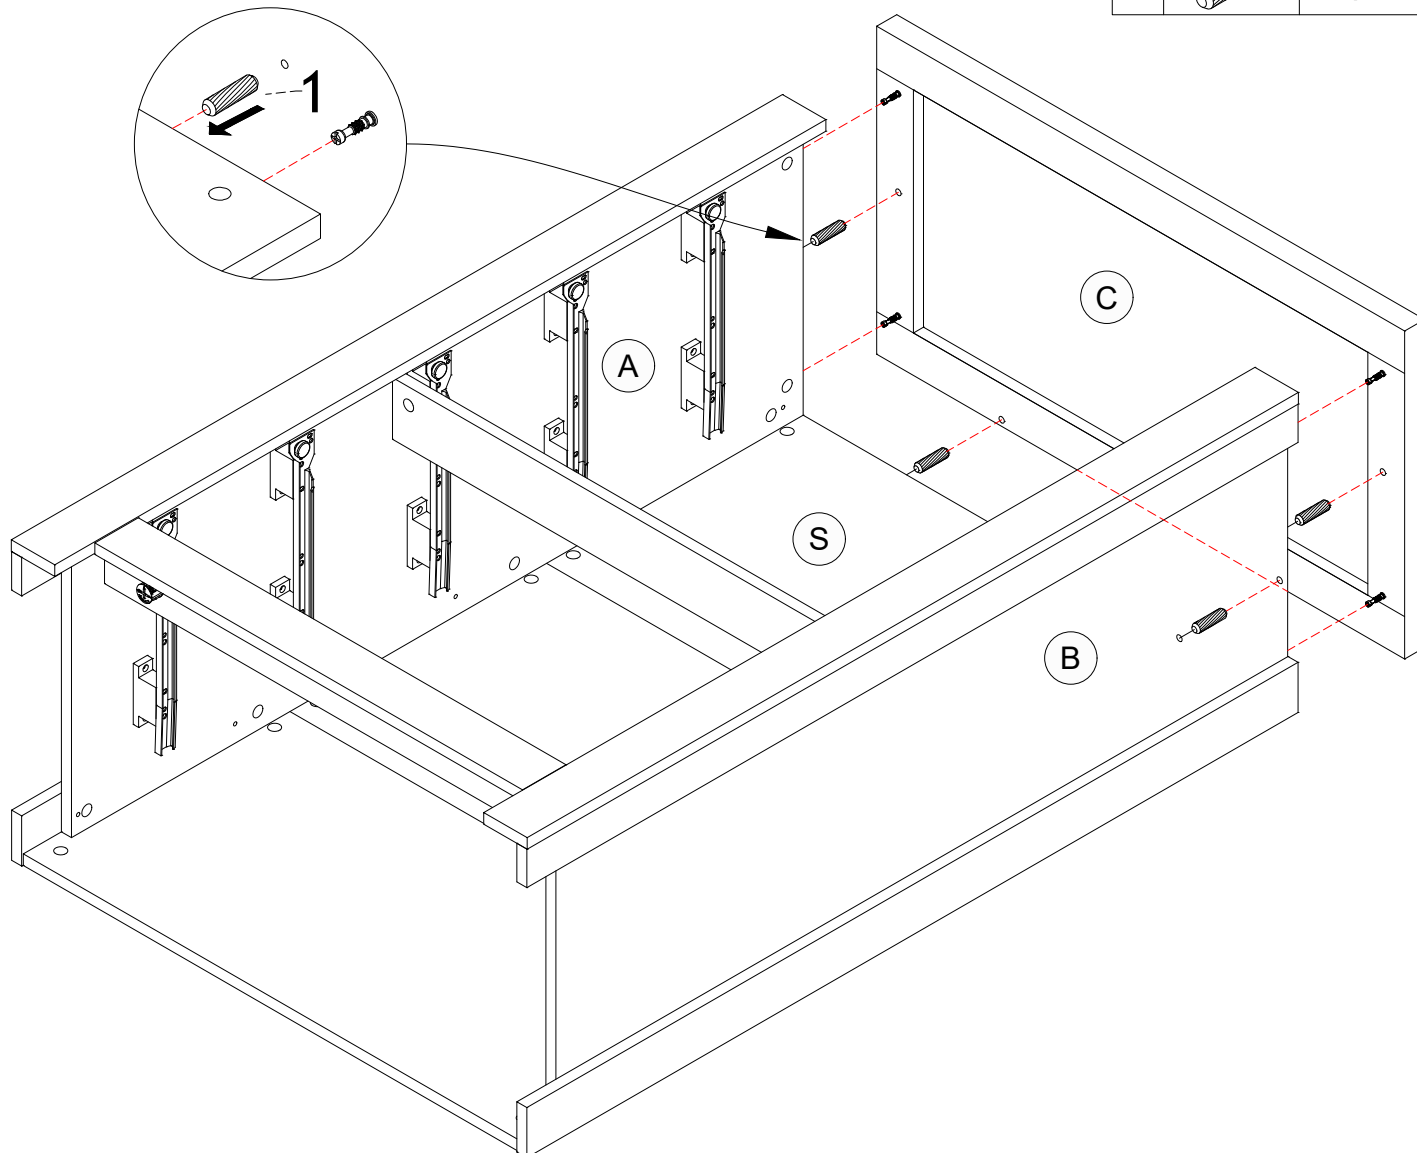

1		4 pcs
---	--	-------

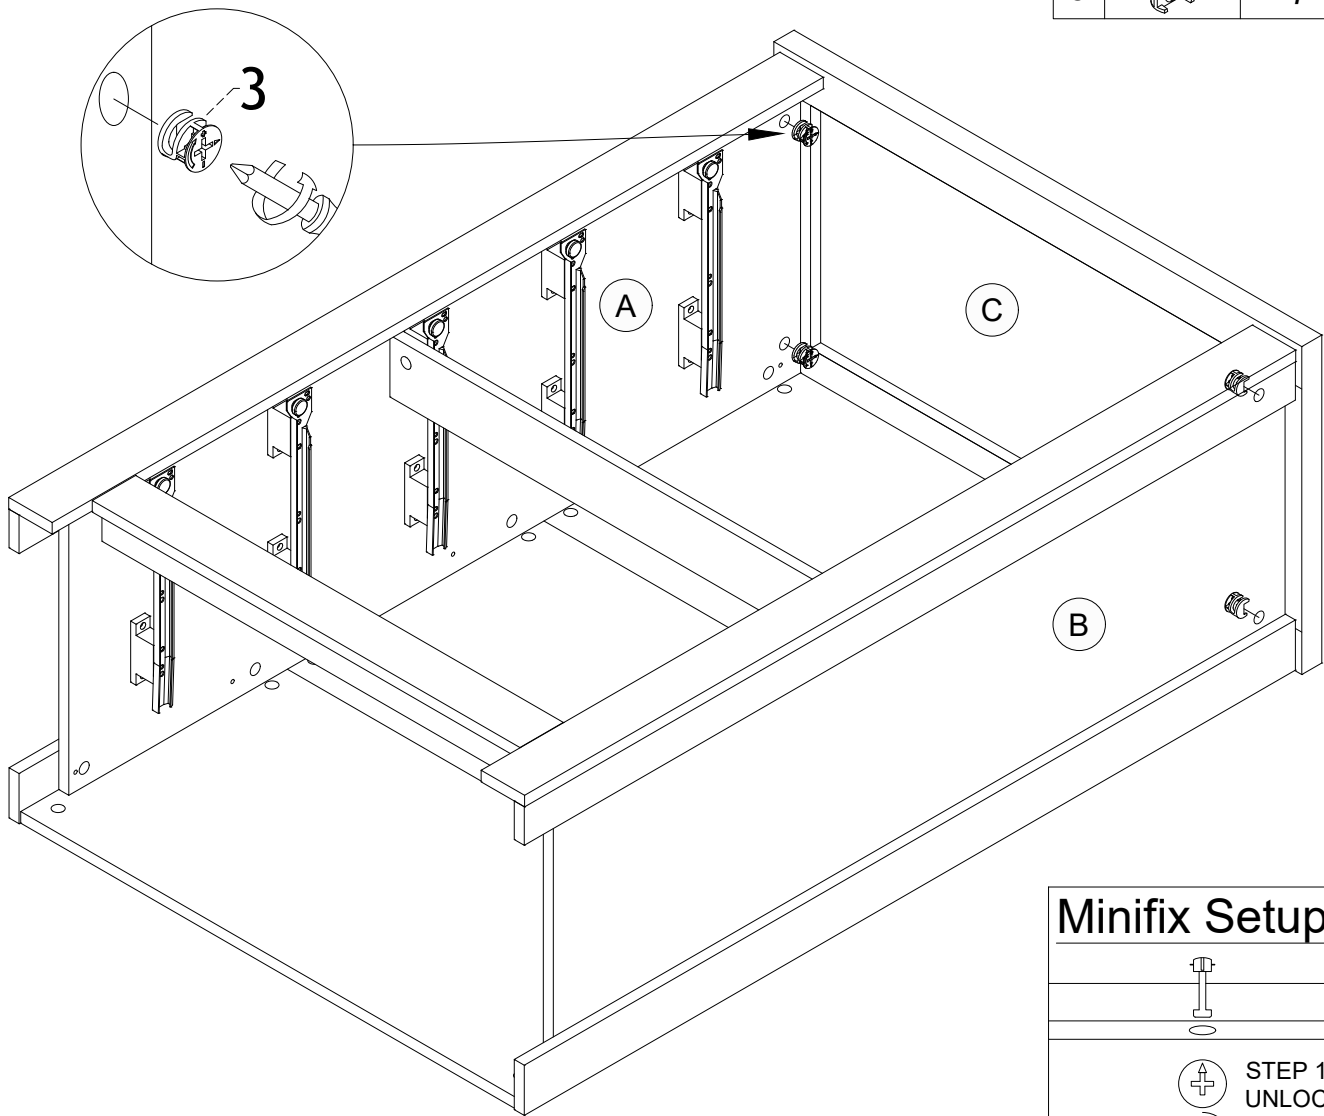


STEP 24


3		4 pcs
---	--	-------



Minifix Setup :	
	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK

STEP 25


2		15 pcs
---	---	--------

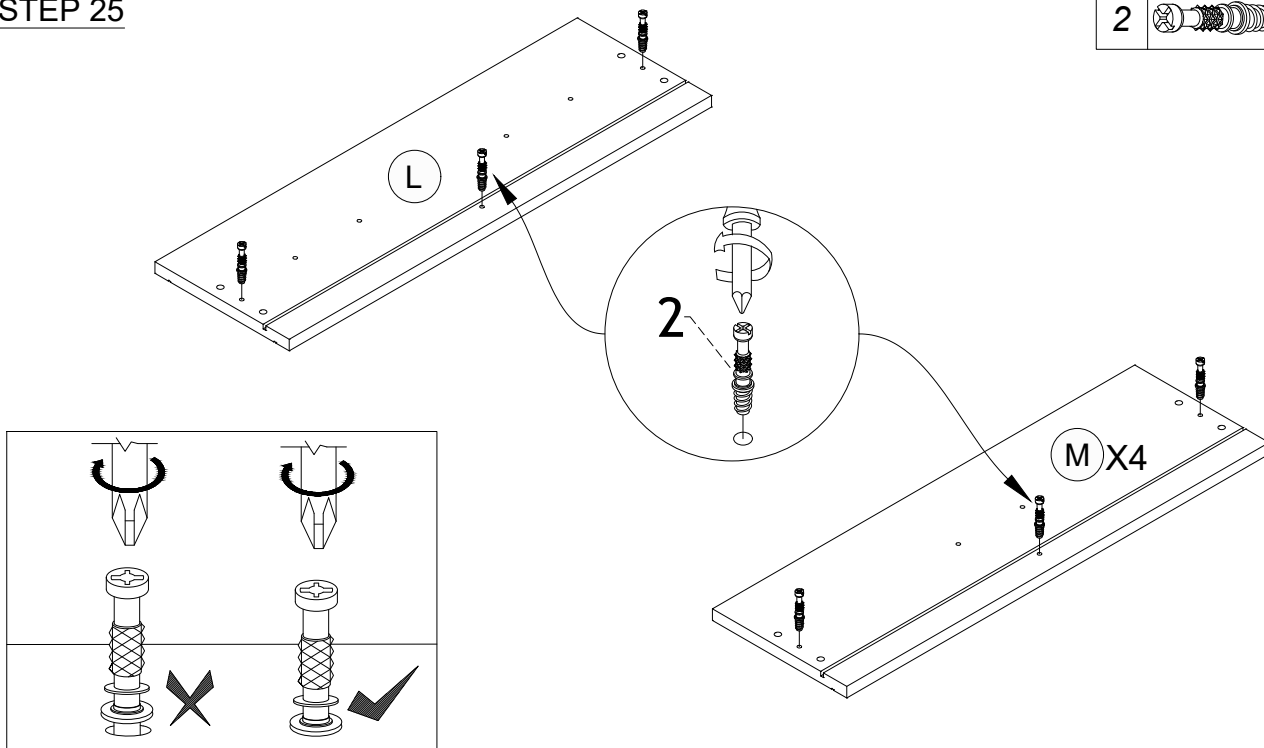

(5x)

STEP 26


1		20 pcs
---	--	--------

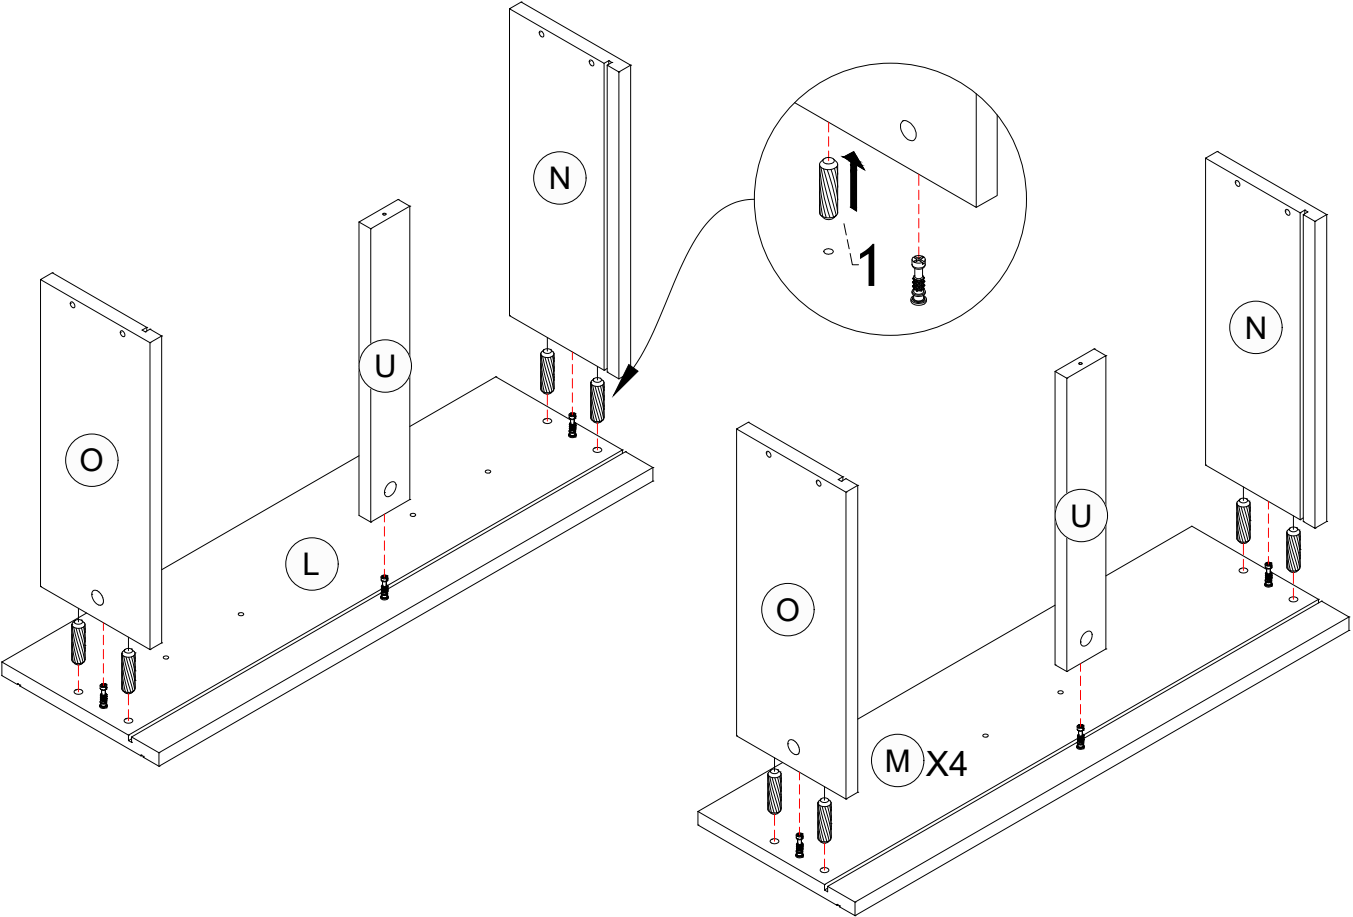

(5x)

STEP 27

3		15 pcs
---	---	--------

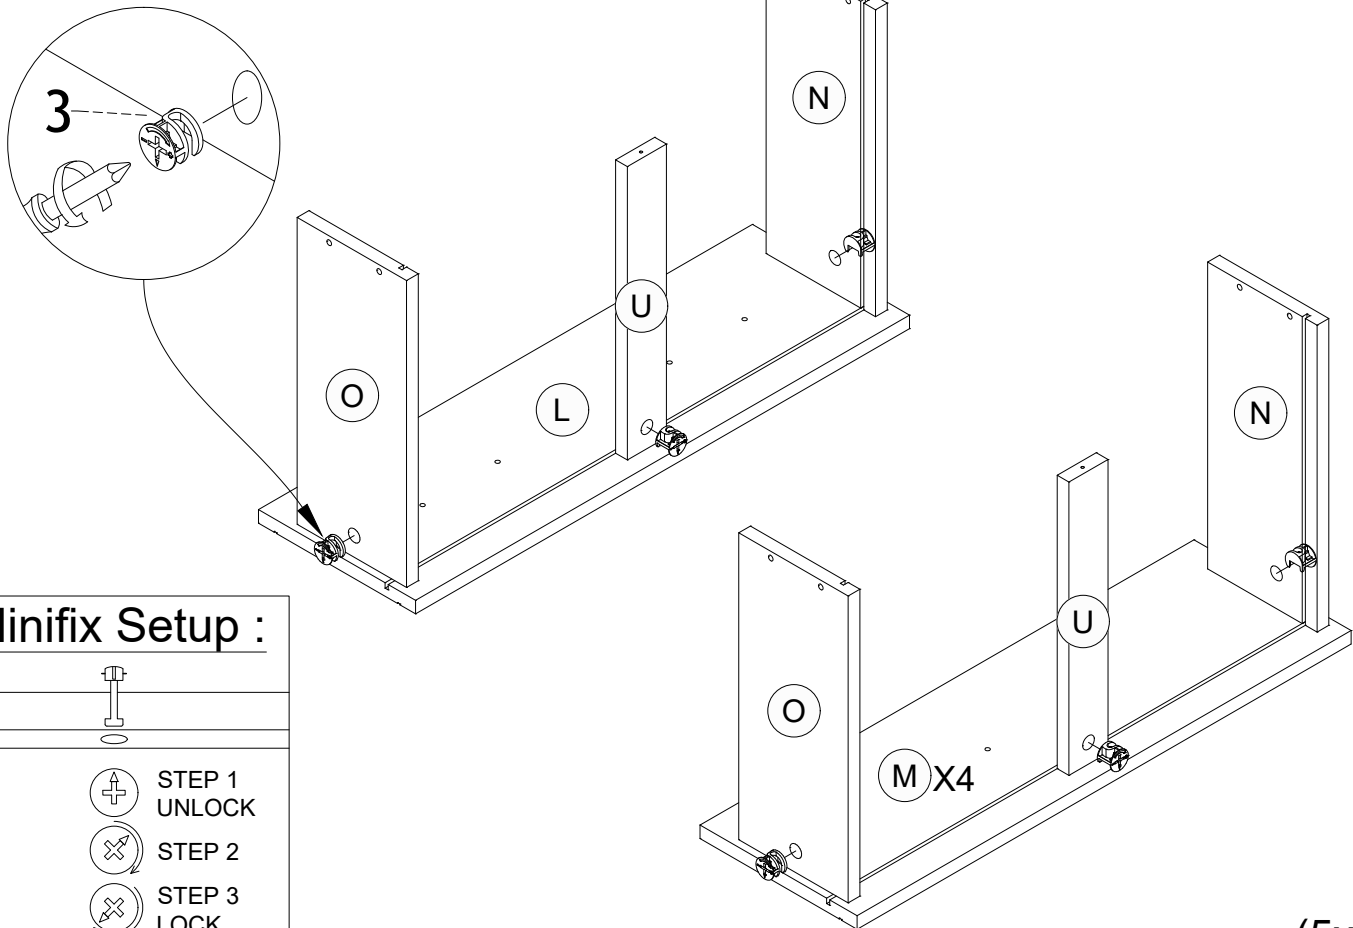

(5x)

Minifix Setup :



STEP 1
UNLOCK




STEP 2




STEP 3
LOCK

STEP 28

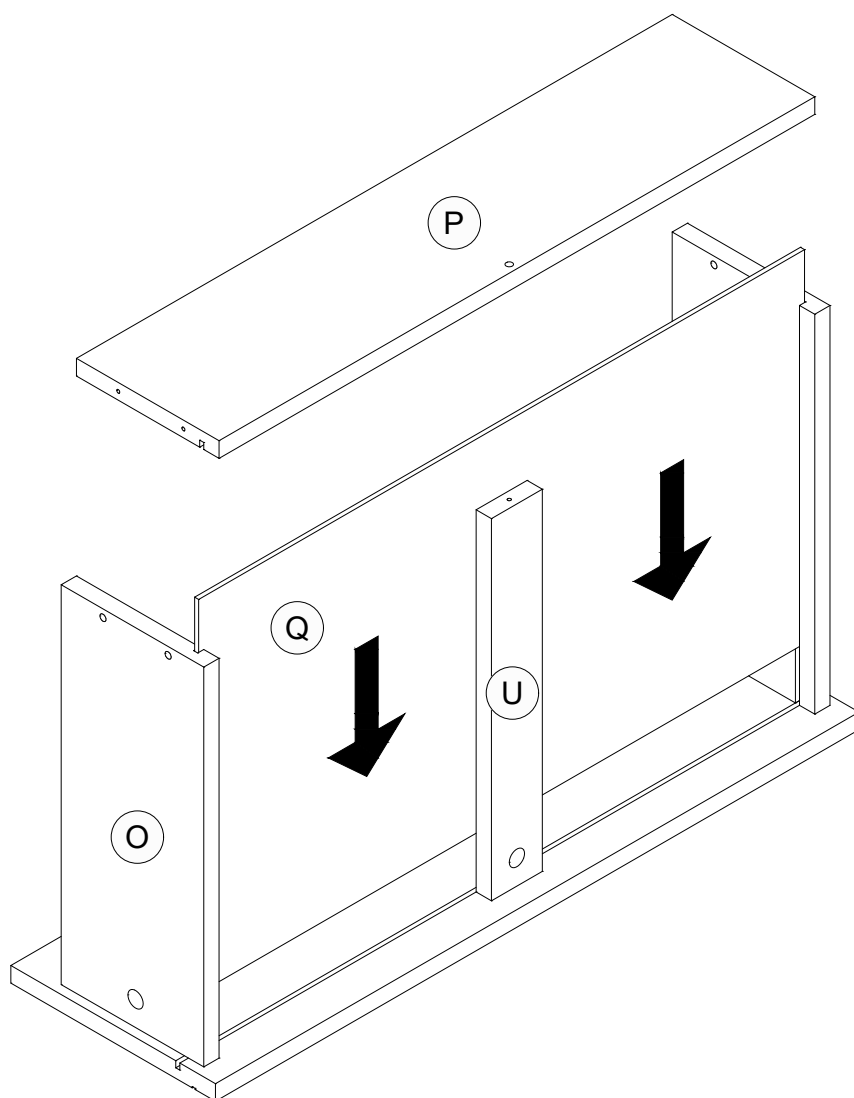


(5x)

STEP 29

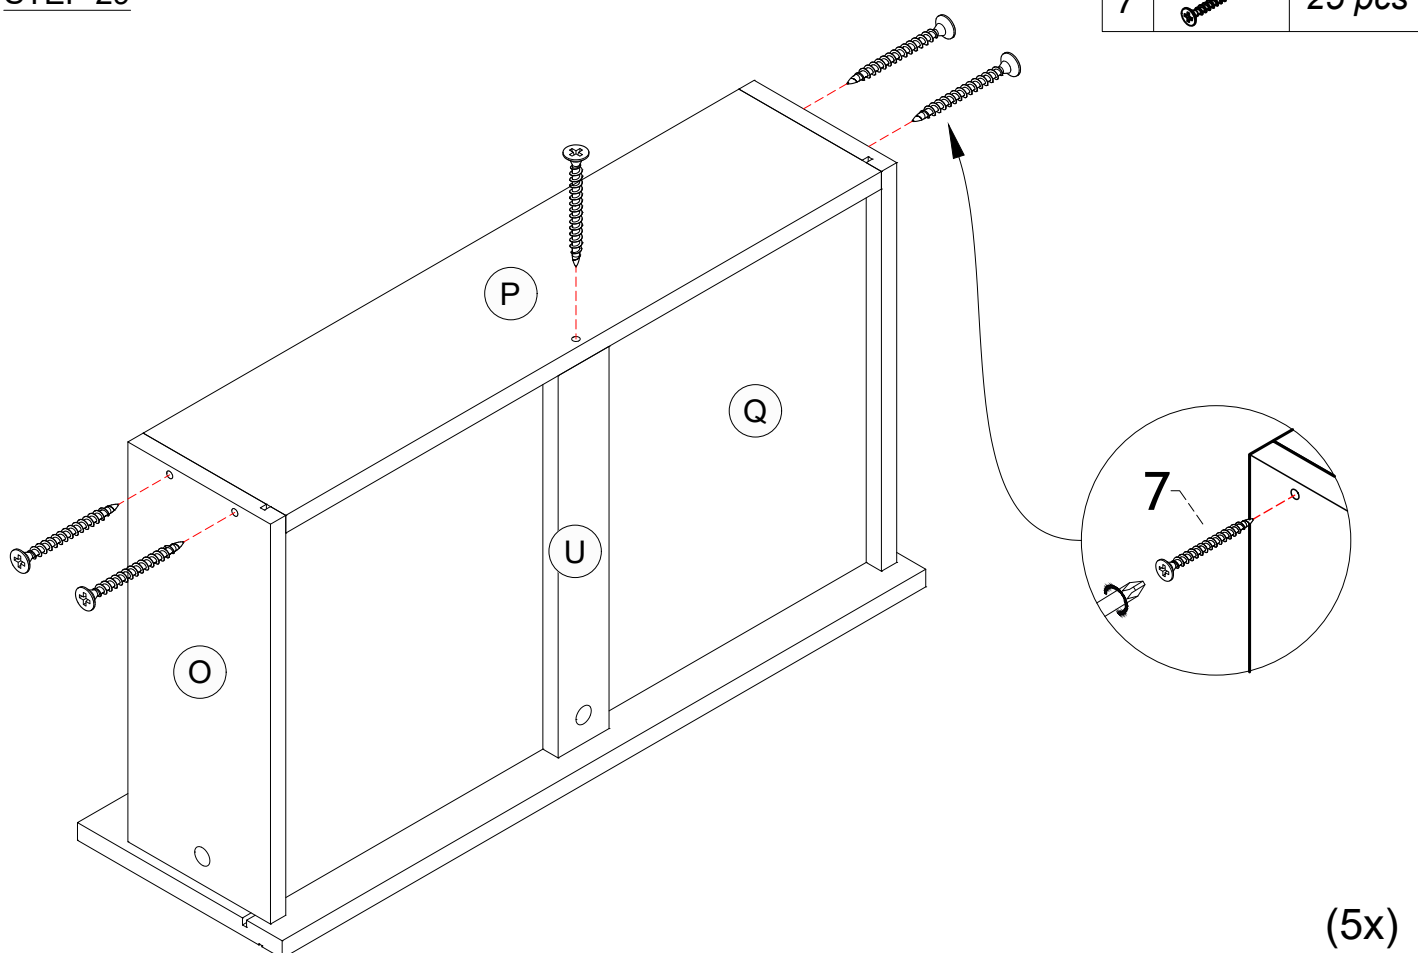



(5x)

STEP 30

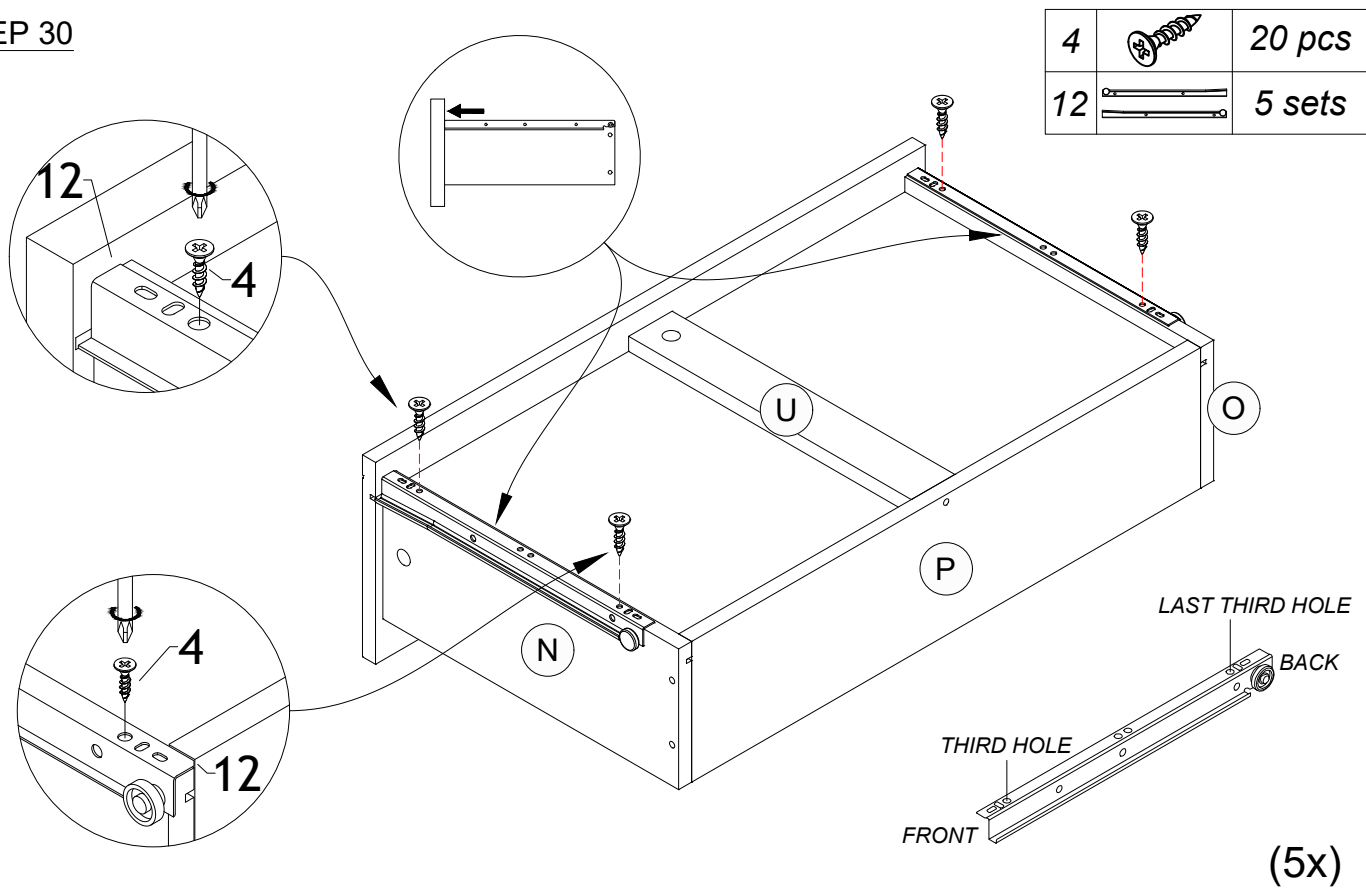

STEP 31

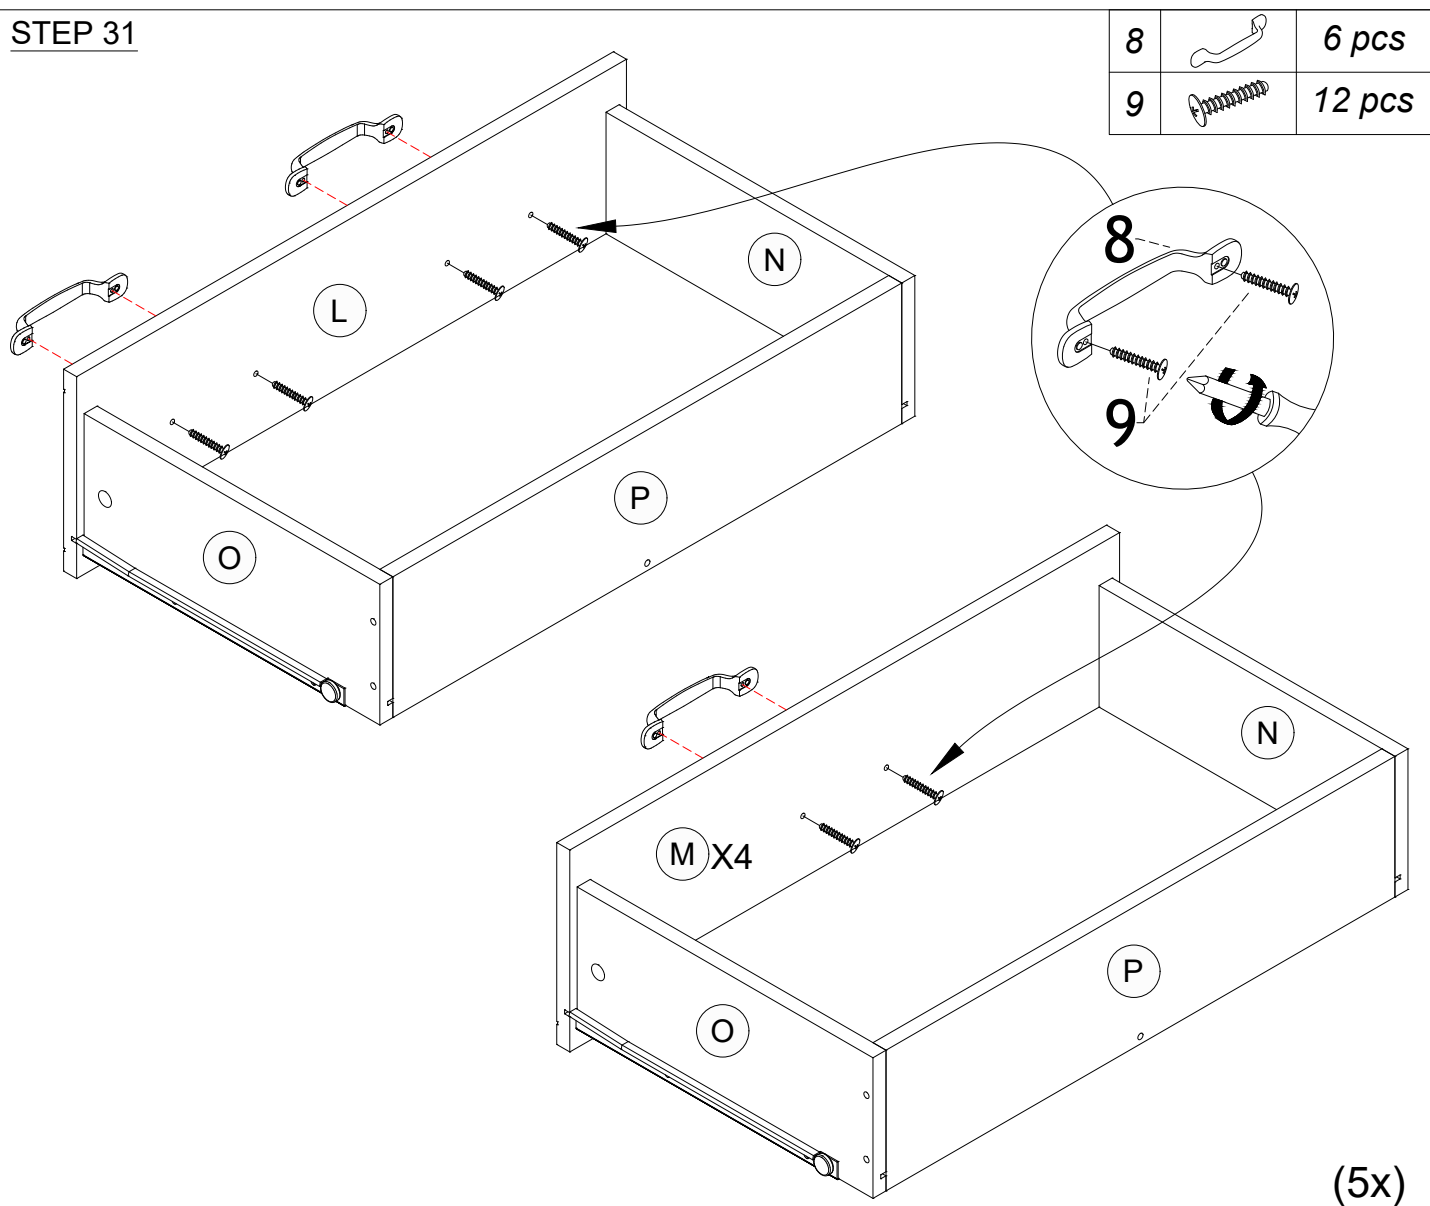

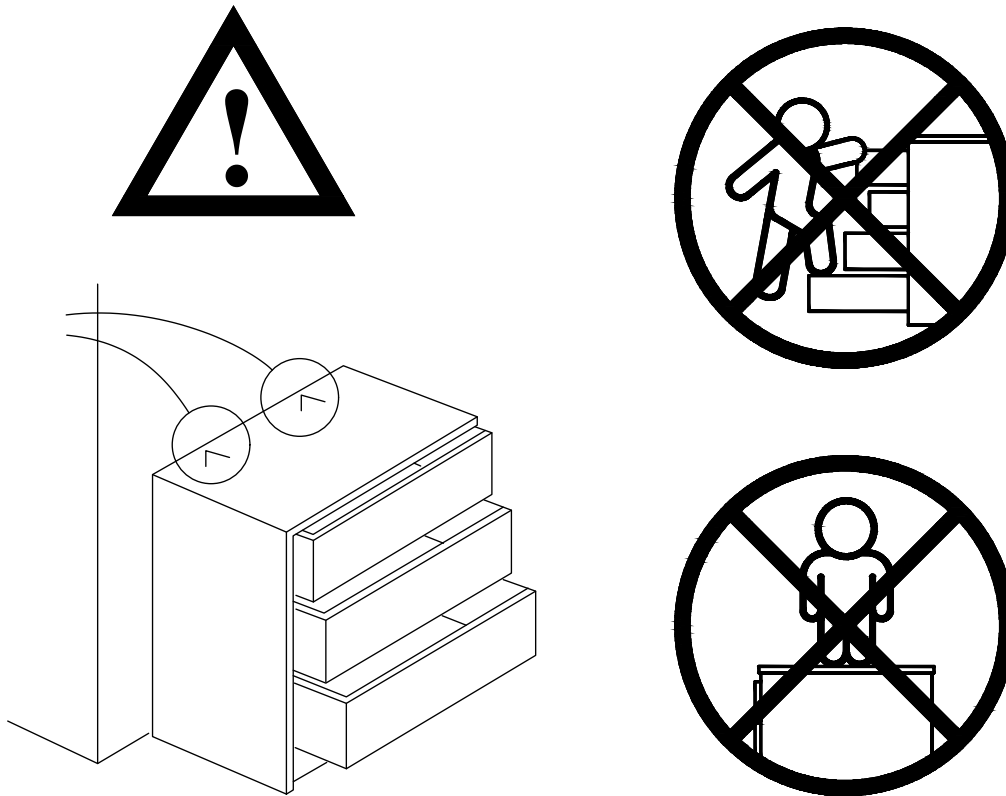

IMPORTANT: THIS UNIT MUST BE SECURE TO THE WALL TO HELP PREVENT TIPOVER. FOLLOW THESE INSTRUCTIONS TO INSTALL THE ANTI-TIPPING SAFETY BRACKET PROVIDED WITH THIS PRODUCT.




STEP 32

16







1 pc

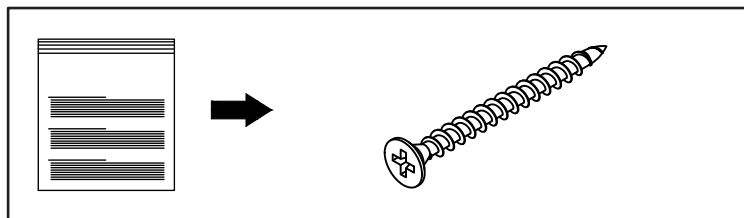

Drywall anchor that supplied with this product is general purpose wall plug only.

Consult your local hardware store for appropriate anchors for the type of wall you intend to securely attach the safety bracket.

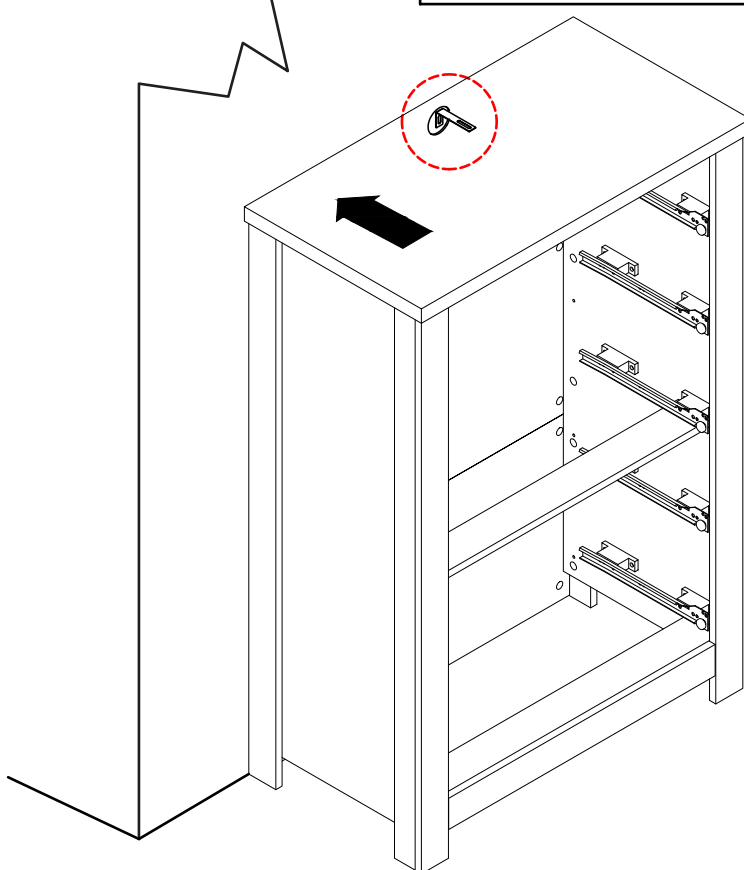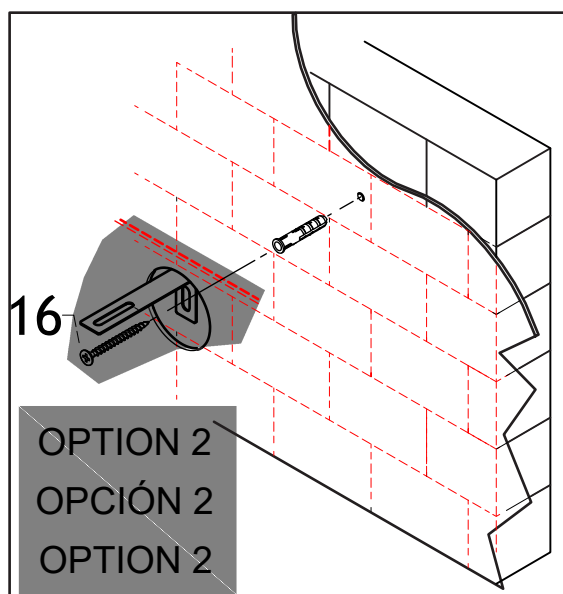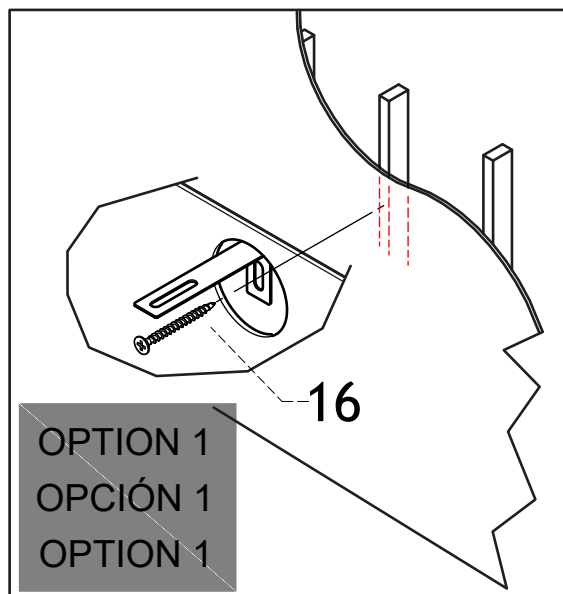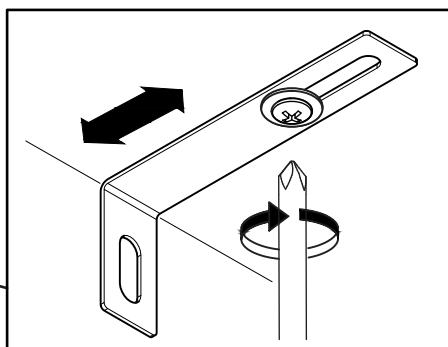


OPTION 1: Attachment into a wall stud (preferred method)

Using a stud finder, locate a stud in the wall. Place your unit against the wall, with the safety bracket aligned in this location. To make driving the screw easier, you can drill a 3mm diameter pilot hole through the safety bracket into the stud. Drive the screw through the safety bracket into the wall stud. Tighten the screw that was not fully tightened in step 9.

OPTION 2: Attachment into masonry

Locate your unit where desired against a wall and mark the wall through the safety bracket, then move your unit aside. Drill a 6mm diameter hole into the wall. Tap the wall anchor into the hole until it is flush. Move your unit into location and fasten the wall bracket to the wall anchor with the screw. Tighten the screw that was not fully tightened in step 9.

STEP 33

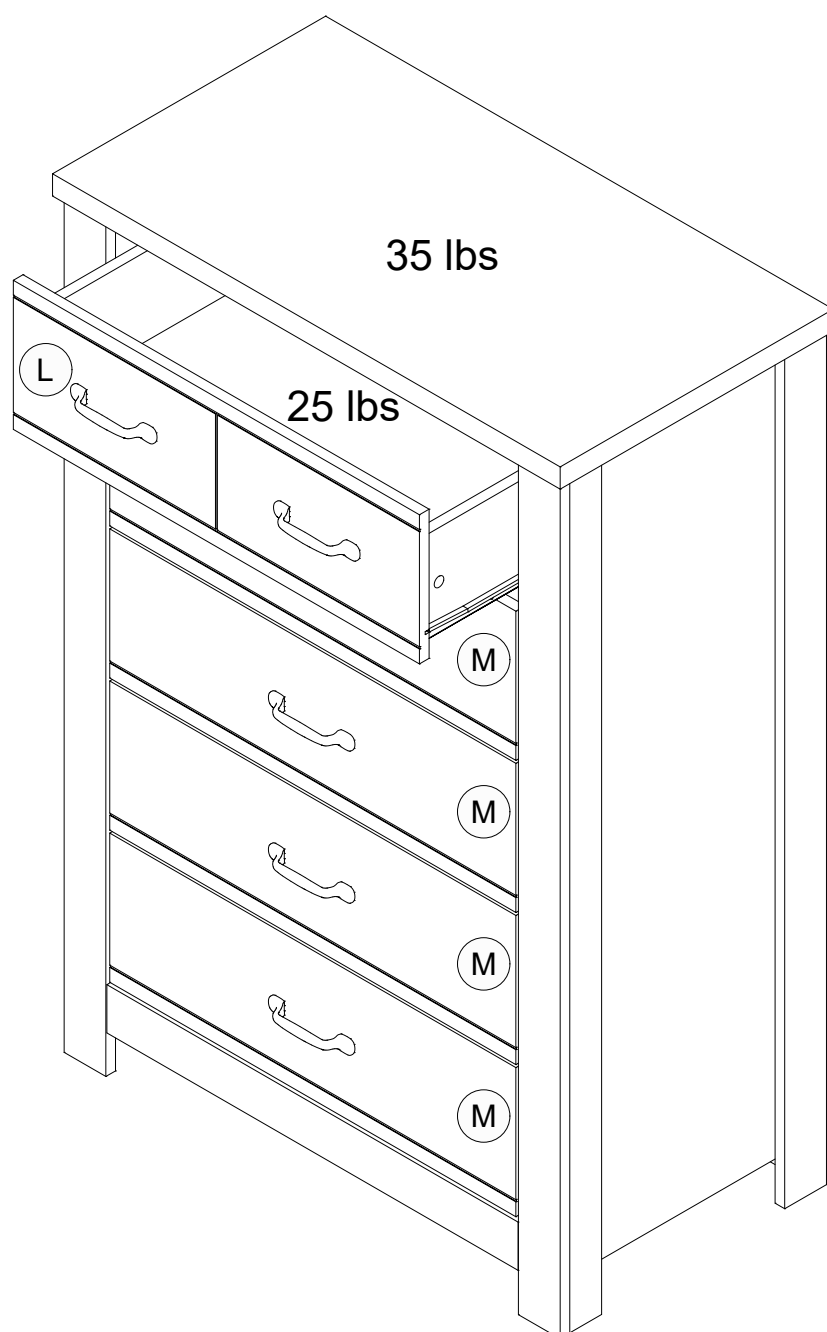

This product is designed to withstand the weight vindicated on the plan. We are not responsible for the breakage of parts or any injury caused by failure to comply with this recommendation.

