



ASSEMBLY INSTRUCTIONS

TWIN LOFT BED WITH DESK, 4 DRAWERS CHEST, BOOKCASE

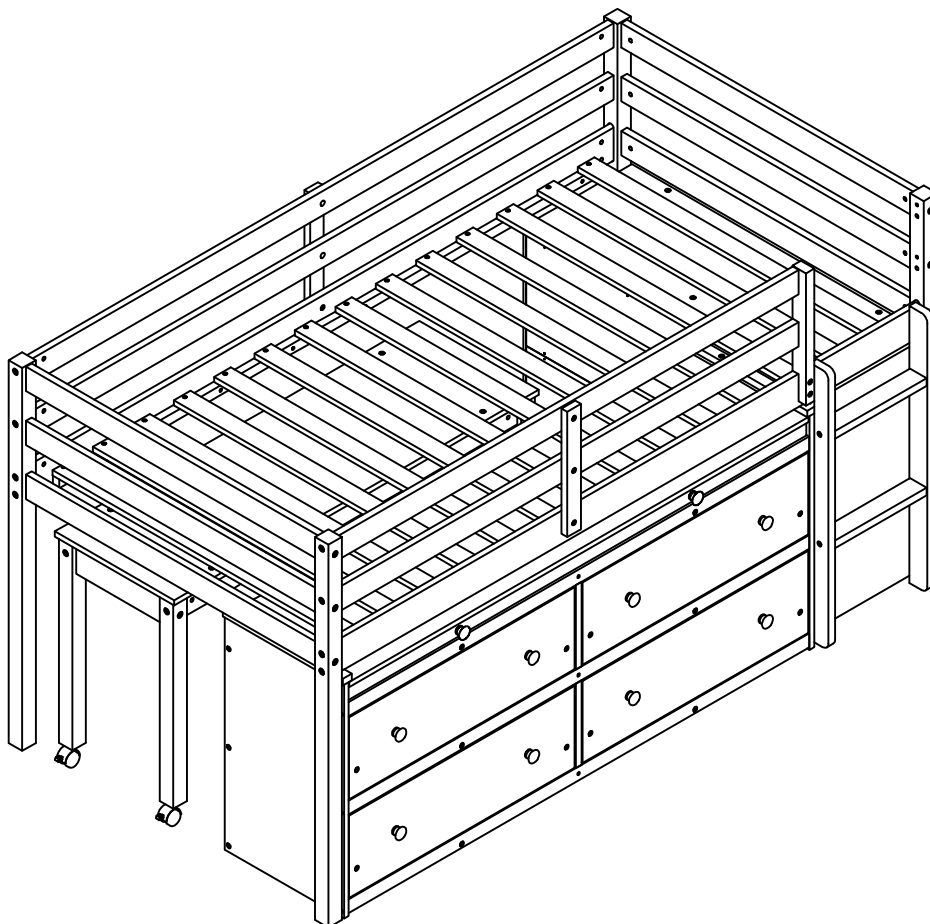















WF303291/WF303292

Detail View

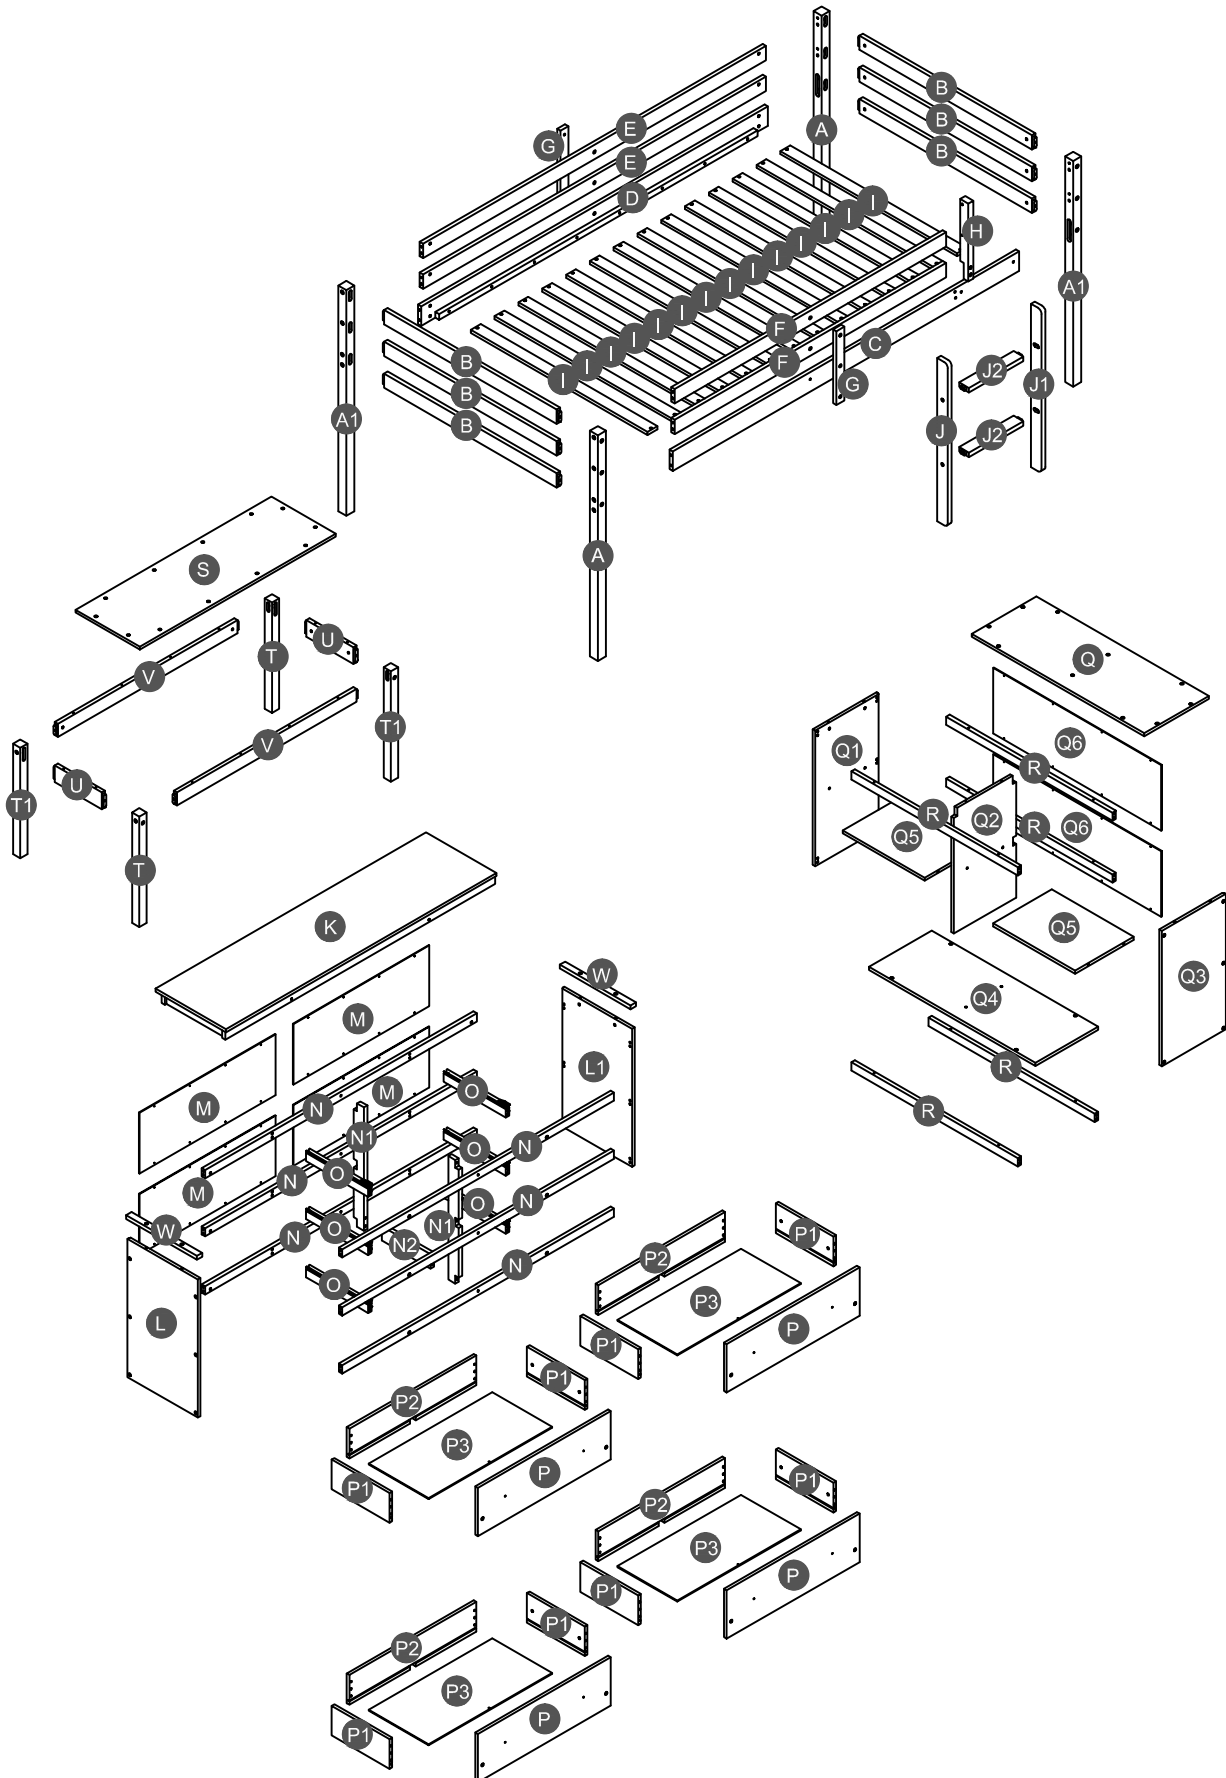










Part List

WF303291 - Hardware inside




A  Leg (Left Front/Right Back) - 2pcs	A1  Leg (Left Back/Right Front) - 2pcs	B  Horizontal bar FB/HB - 6pcs
C  Side rail (Front) - 1pc	D  Side rail (Back) - 1pc	E  Long guard rail (back) - 2pcs
F  Short guard rail (front) - 2pcs	G  Vertical guard rail - 2pcs	I  Slat - 14pcs
J  Ladder (left) - 1pc	J1  Ladder (right) - 1pc	J2  Step ladder - 2pcs
M  Back panel - 4pcs	N1  Vertical bar (Front/Back) - 2pcs	P  Drawer front - 4pcs
P2  Drawer back - 4pcs	R  Horizontal bar (Front/Back) - 5pcs	T  Leg (Left Front/Right Back) - 2pcs
T1  Leg (Left Back/Right Front) - 2pcs	V  Apron (front-back) - 2pcs	W  Cap for upper - 2pcs

Part List

WF303292 - Hardware inside

H  Support guard rail (Right) - 1pc	K  Top - 1pc	L  Side panel (left) - 1pc
L1  Side panel (right) - 1pc	N  Horizontal bar (Front/Back) - 6pcs	N2  Lower support - 1pc
O  Support drawer - 6pcs	P1  Drawer (left/right) - 8pcs	P3  Drawer bottom - 4pcs
Q  Top panel - 1pc	Q1  Side panel (left) - 1pc	Q2  Divider panel - 1pc
Q3  Side panel (right) - 1pc	Q4  Bottom panel - 1pc	Q5  Shelf panel - 2pcs
Q6  Back panel - 2pcs	S  Top table - 1pc	U  Apron (left-right) - 2pcs

WF303292 - Hardware inside


1	 Ø10*40mm Wood dowel (8pcs)	2	 Ø8*30mm Wood dowel (64pcs)	3	 (Ø15)1/4"*100mm Hex-Head bolts (16pcs)
4	 (Ø15)1/4"*80mm Hex-Head bolts (22pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (62pcs)	6	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)
7	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	8	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)	9	 1/4"*15 (9.5mm) Horizontal-Hole bolts(100pcs)
10	 (Ø12)1/4"*40mm Hex-Head bolts (24pcs)	11	 (1/4")4.5*58mm Allen key (1pc)	12	 Ø4*30mm Wood screws (28pcs)
13	 Ø3.5*15mm Wood screws (18pcs)	14	 Ø3.5*15mm Wood screws (48pcs)	17	 340*30mm Upper slider drawer (6pcs)
19	 3/16"*25mm Ph zinc(Knob) (10pcs)	20	 1/4"*25mm Leveler (1pc)		

Hardware List WF303291

15	 64*52*95mm Castor (2pcs)	16	 64*52*95mm Castor (2pcs)	18	 Ø38*31mm Pine Knob (10pcs)
-----------	--	-----------	--	-----------	--





ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

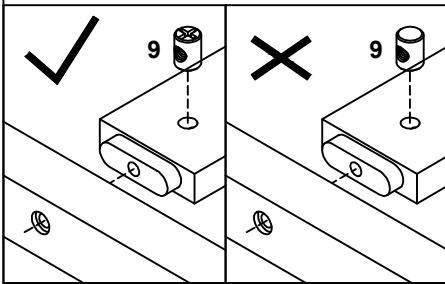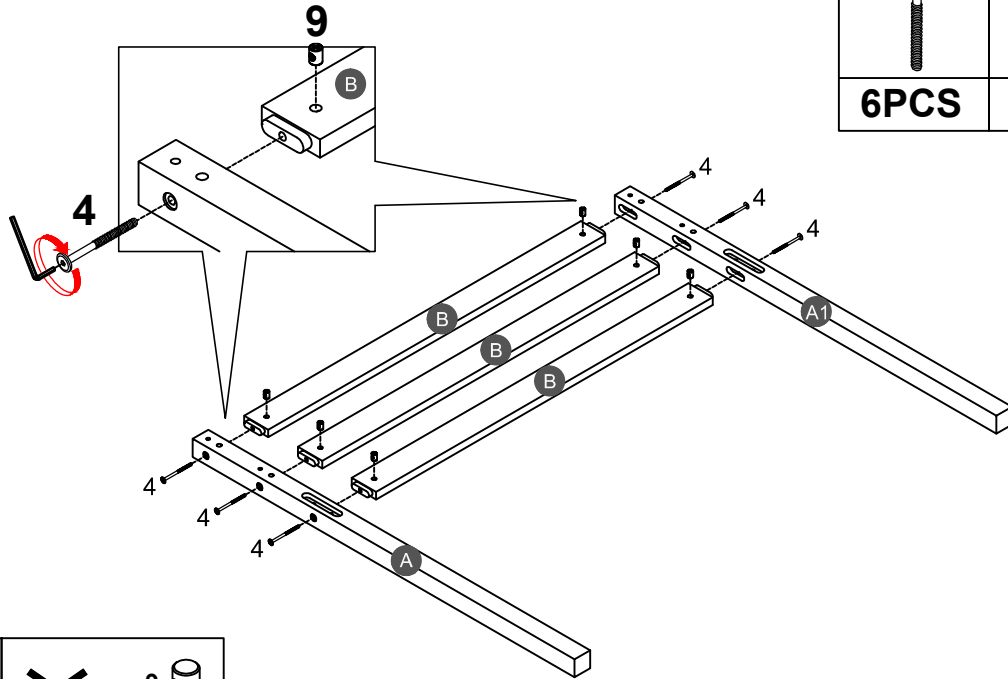


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 2:

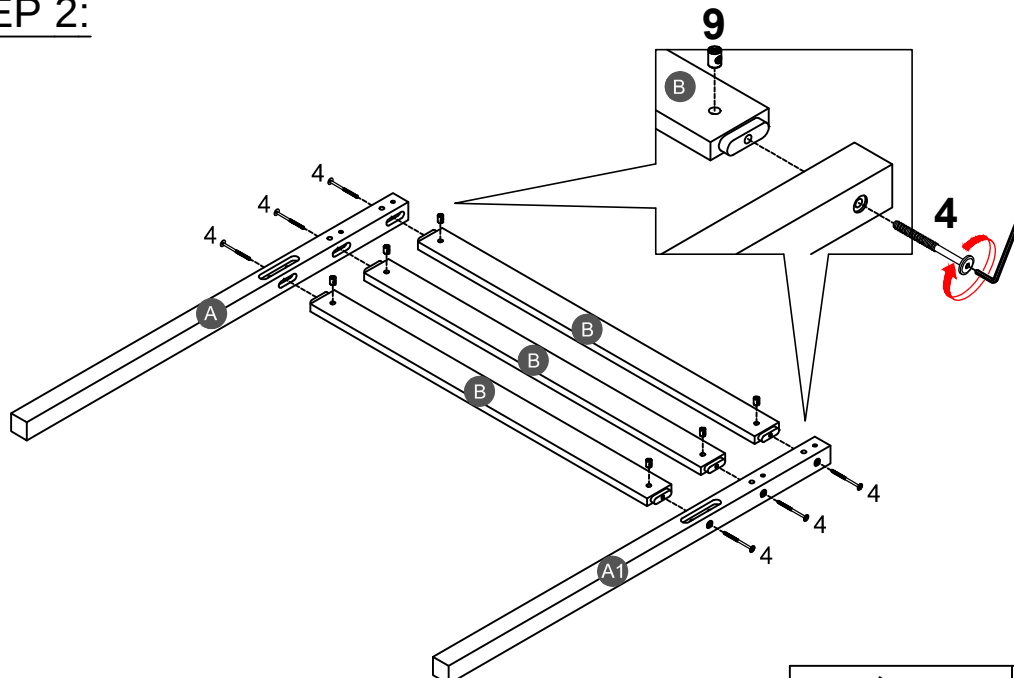

Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

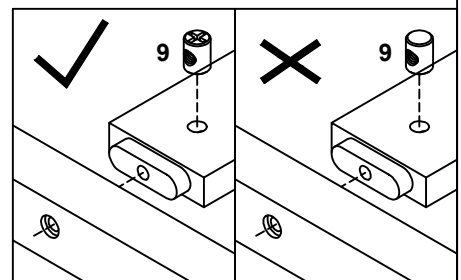


STEP 3:

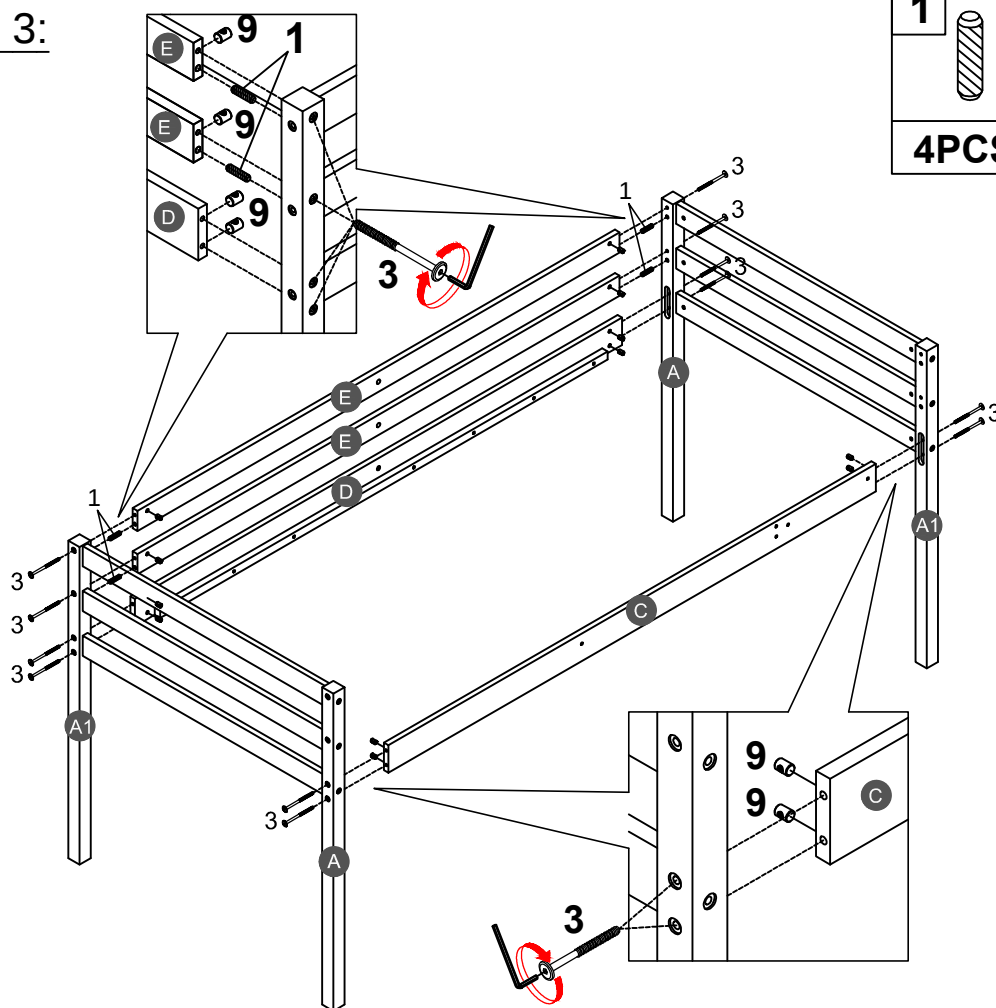


1		3	
4PCS		12PCS	
		9	
		12PCS	

STEP 4:

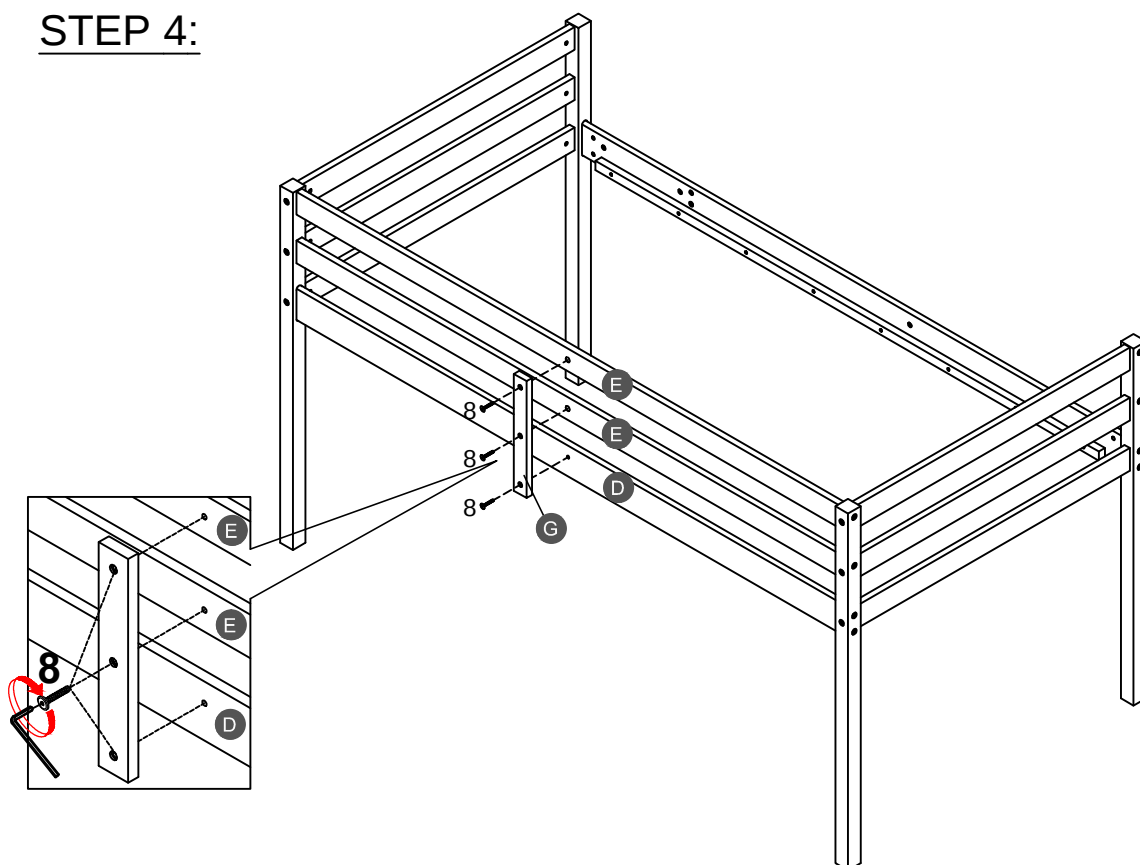


8	
3PCS	

STEP 5:

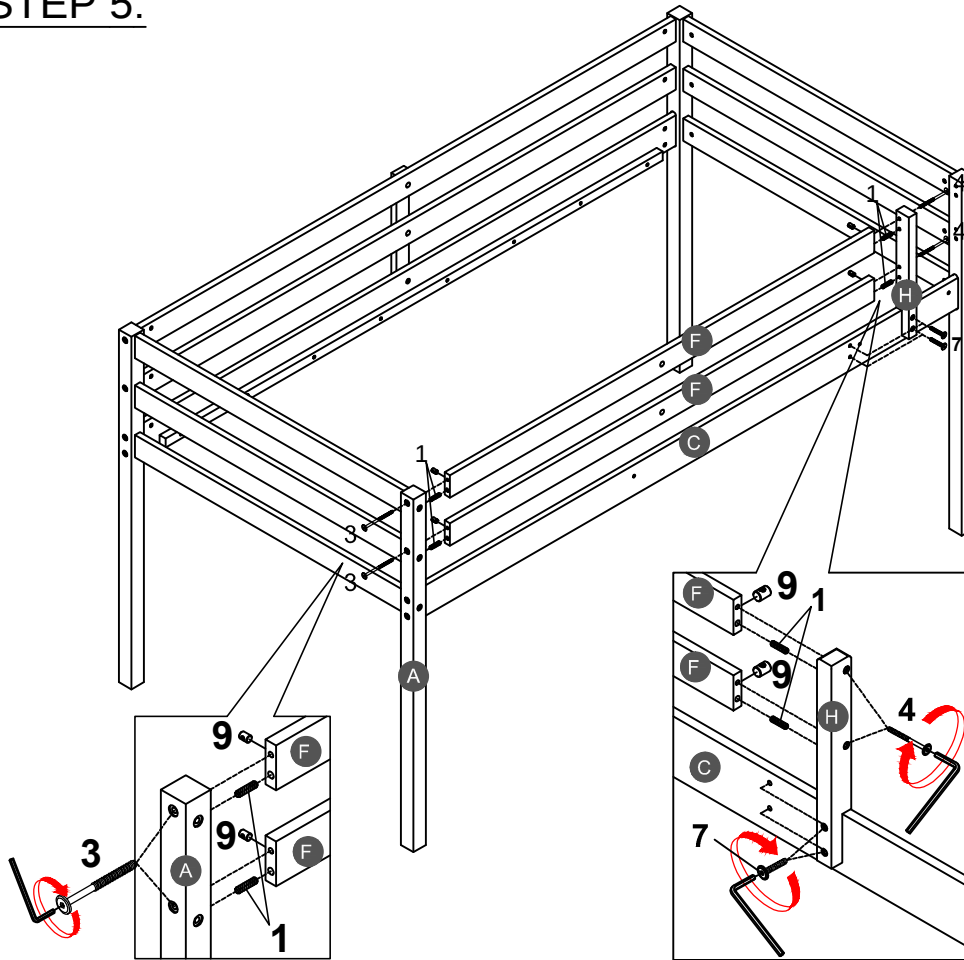

1	
4PCS	
3	
2PCS	
4	
2PCS	
7	
2PCS	
9	
4PCS	


STEP 6:

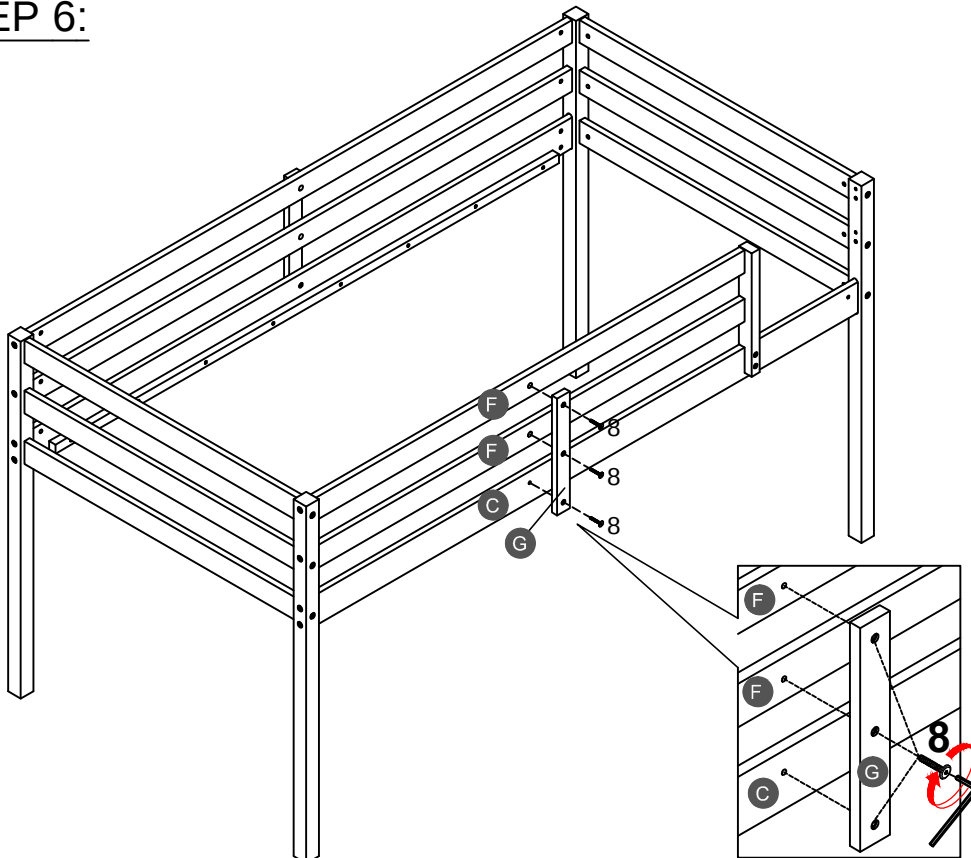


8	
3PCS	


STEP 7:

5		9	
4PCS		4PCS	


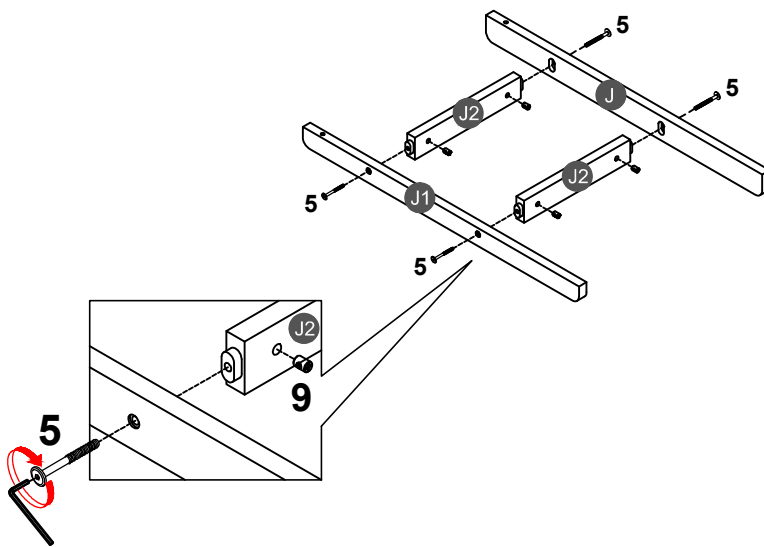


STEP 8:

6	
2PCS	

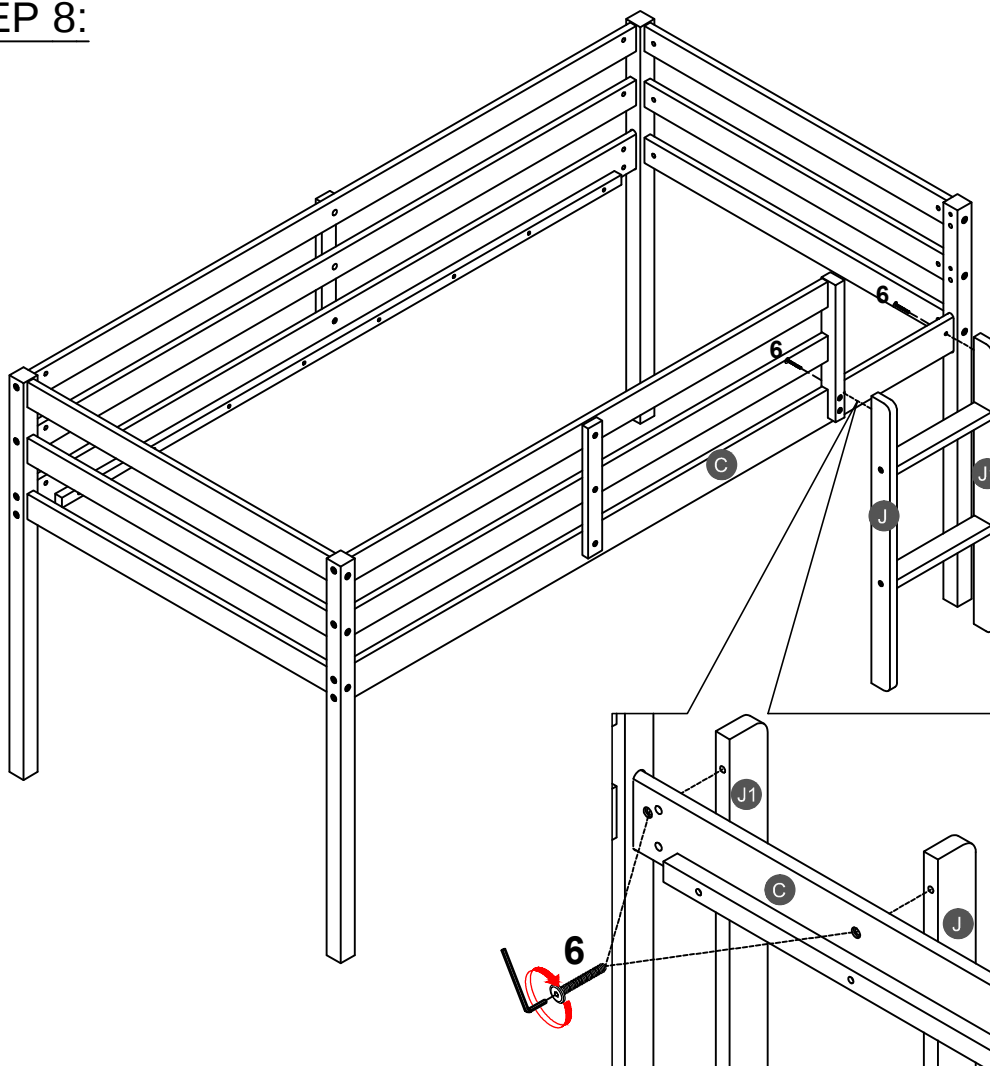


STEP 9:

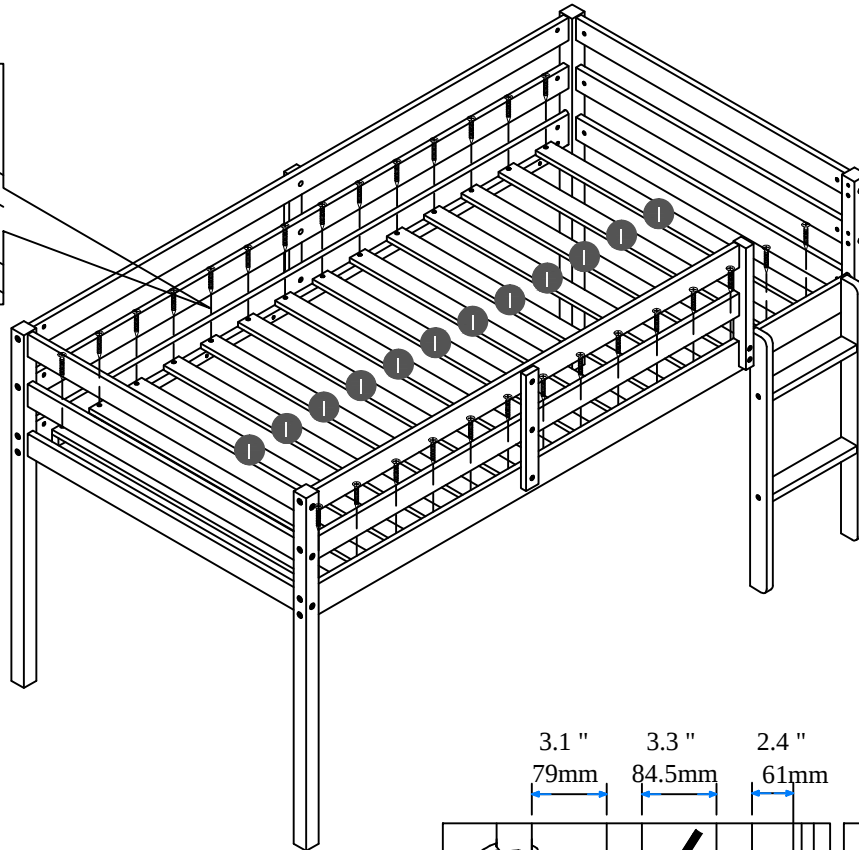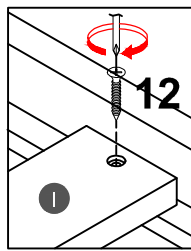

12




28PCS

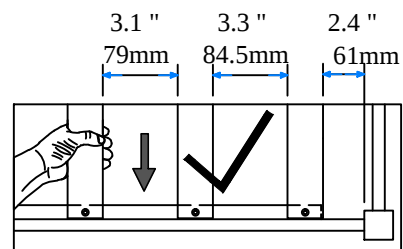

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 10:

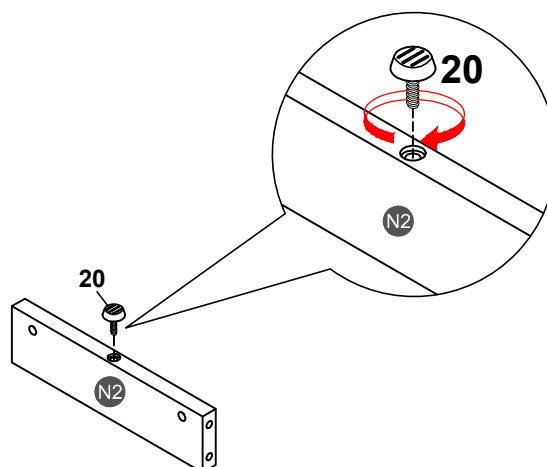

20




1PC

STEP 11:

6



4PCS

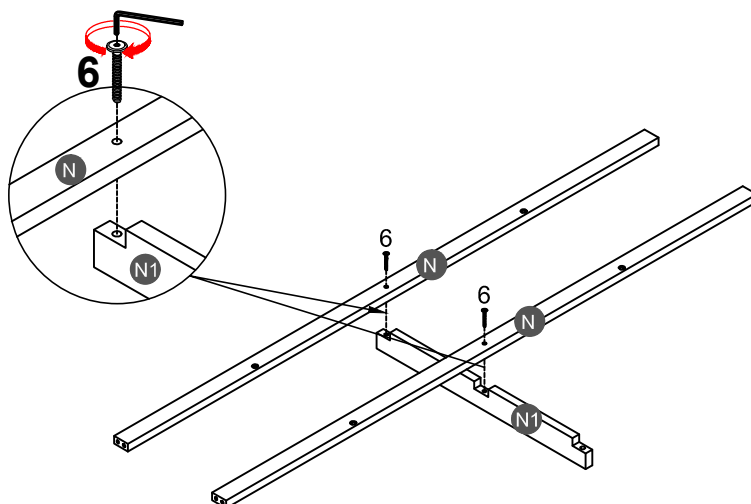

x 2

STEP 12:

2



6PCS

5




6PCS


9



6PCS

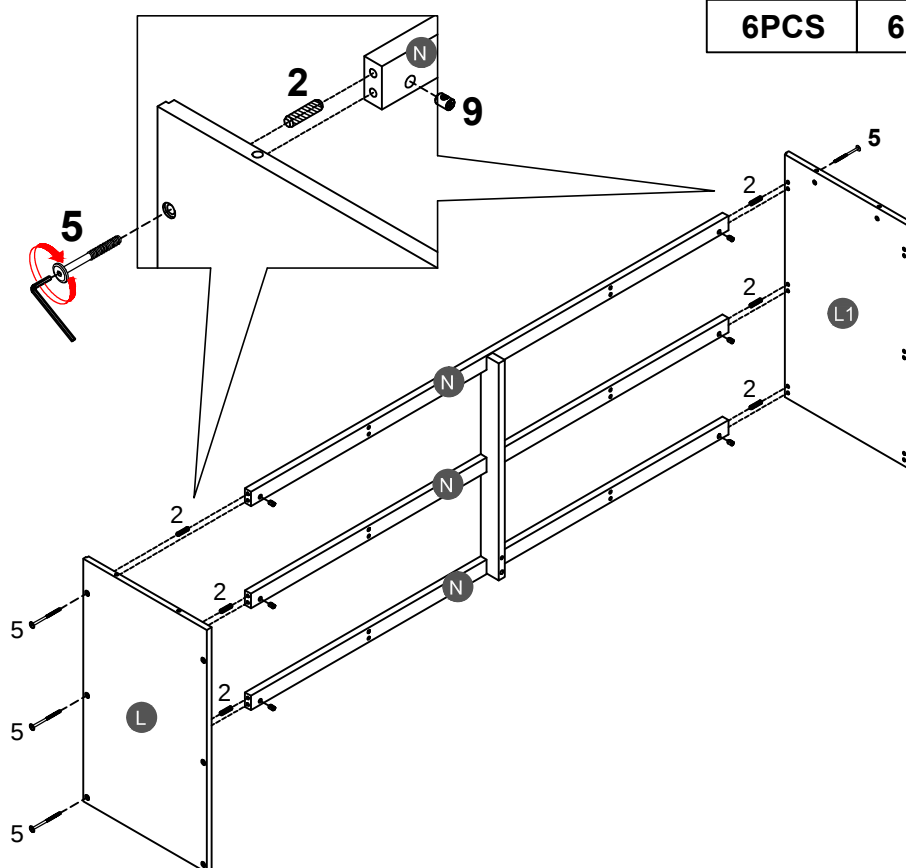


STEP 13:

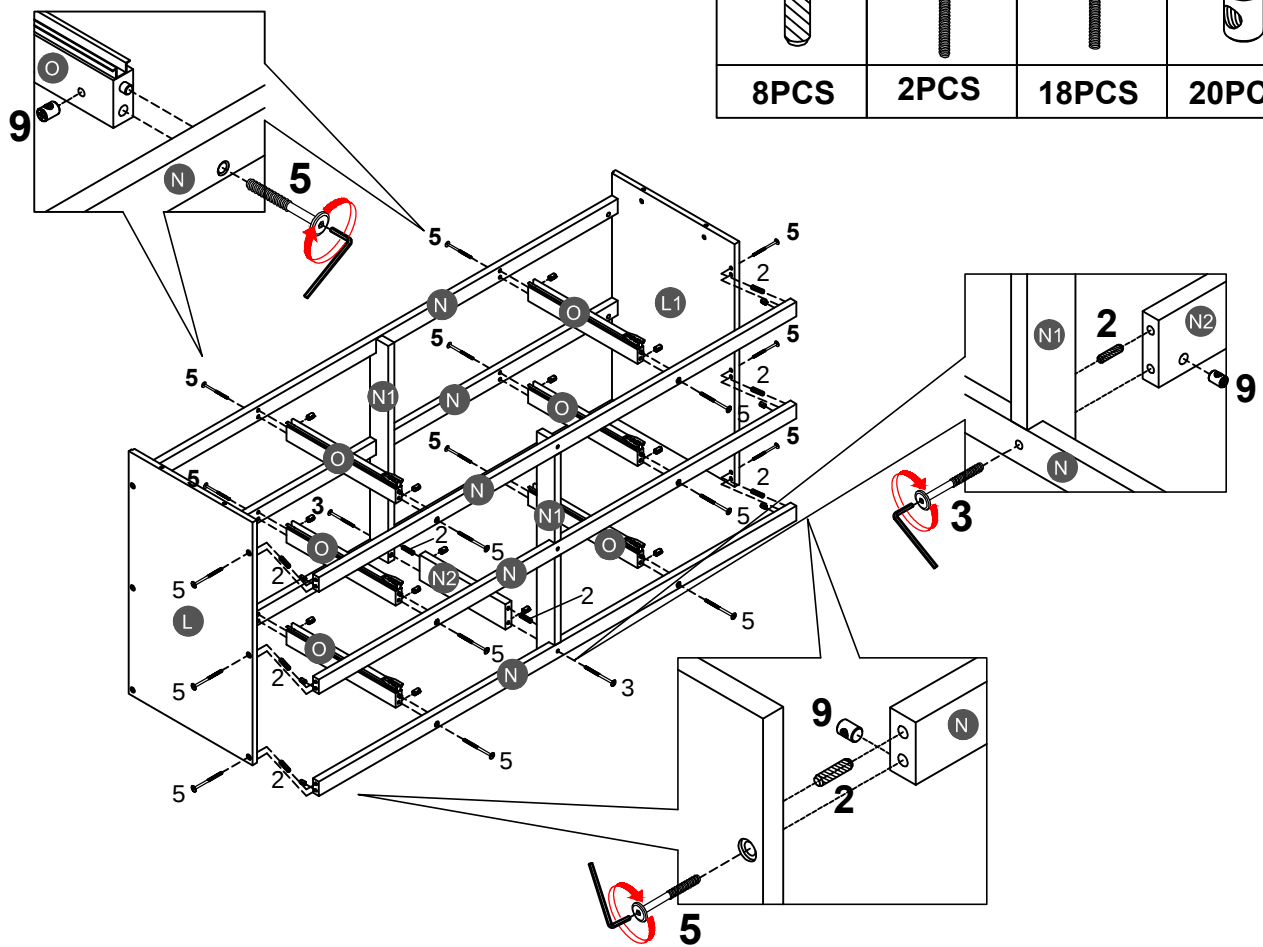


2		3		5		9	
8PCS		2PCS		18PCS		20PCS	

STEP 14:

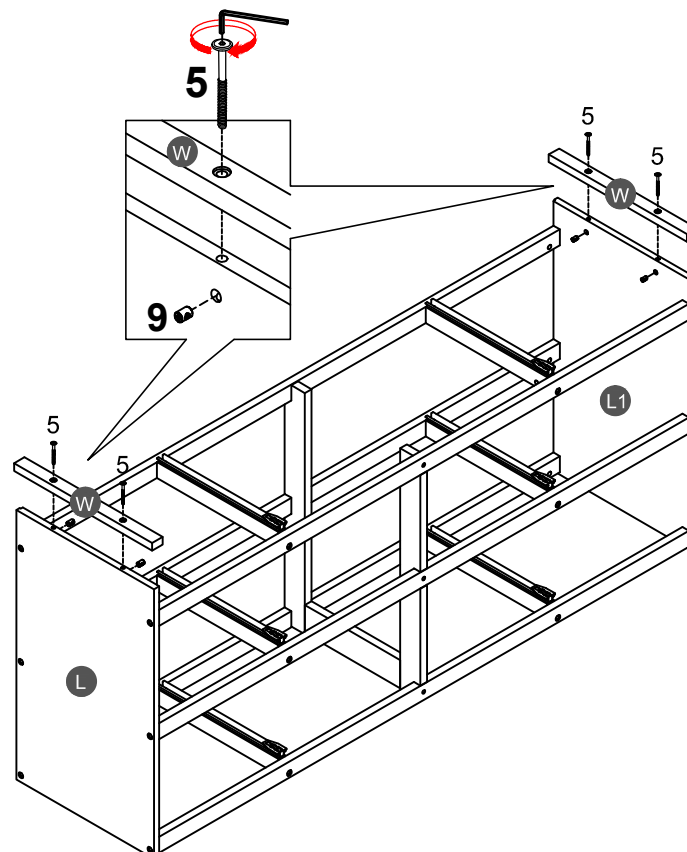


5	
4PCS	
9	
4PCS	

STEP 15:

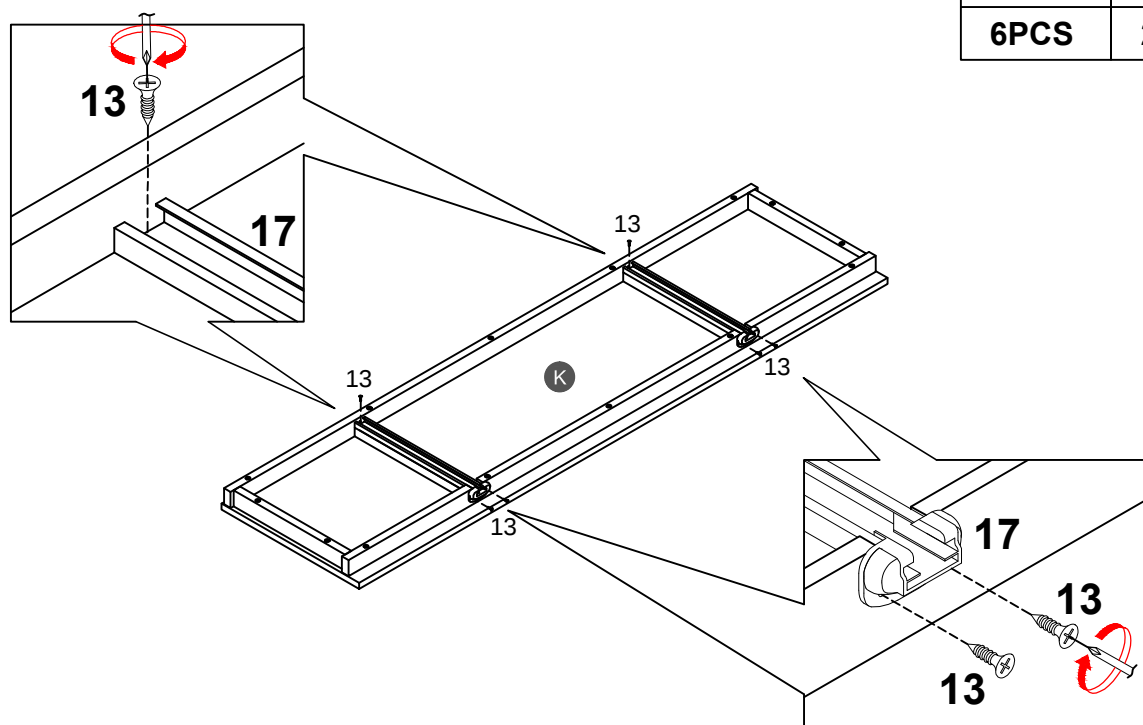


13		17	
6PCS		2PCS	

STEP 16:

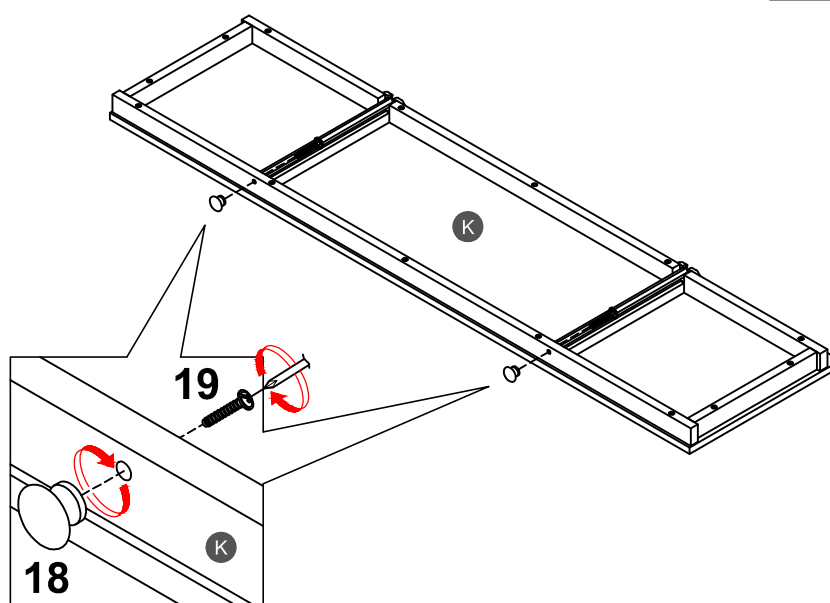


18		19	
2PCS		2PCS	

STEP 17:

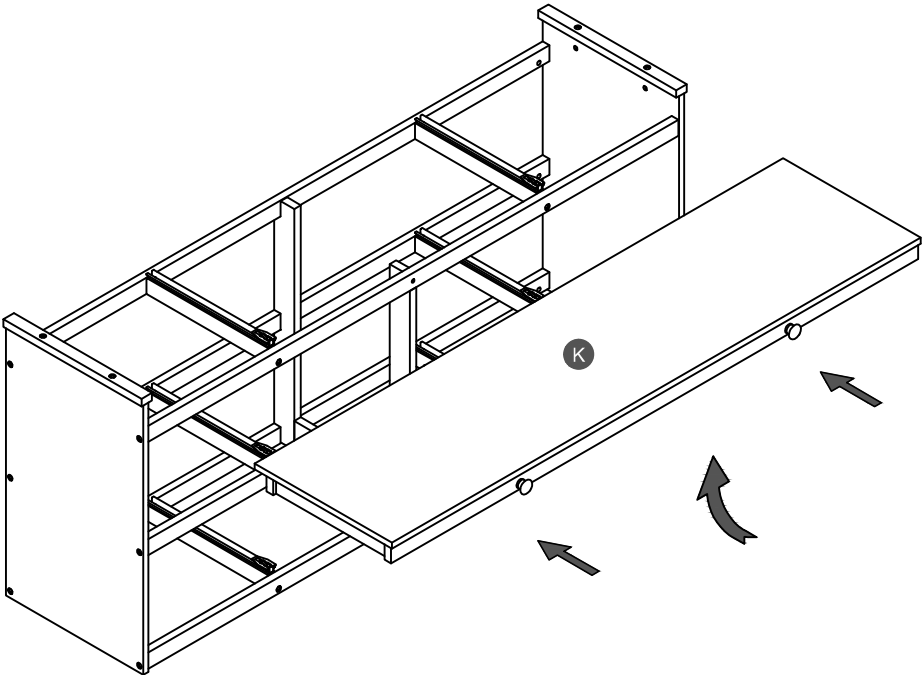


STEP 18:

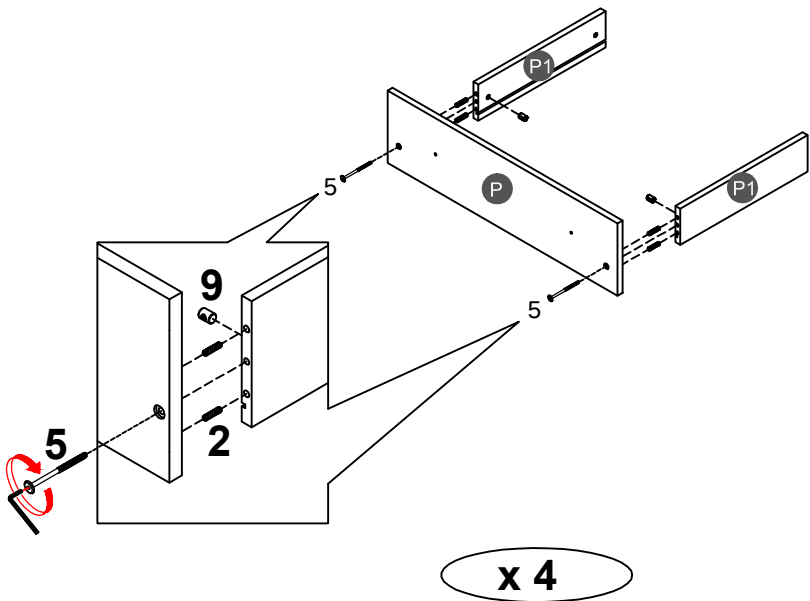


2		5	
16PCS		8PCS	
		9	
		8PCS	

STEP 19:

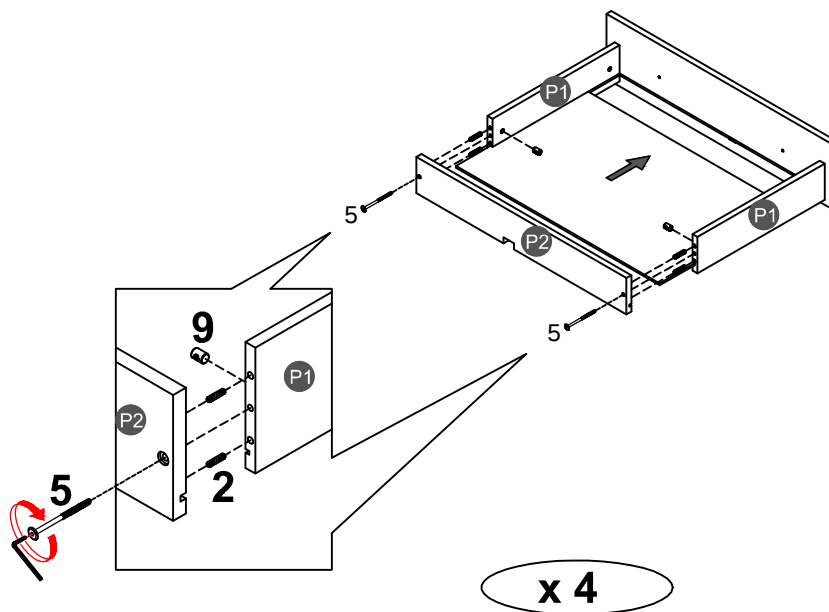


2		5	
16PCS		8PCS	
		9	
		8PCS	

STEP 20:

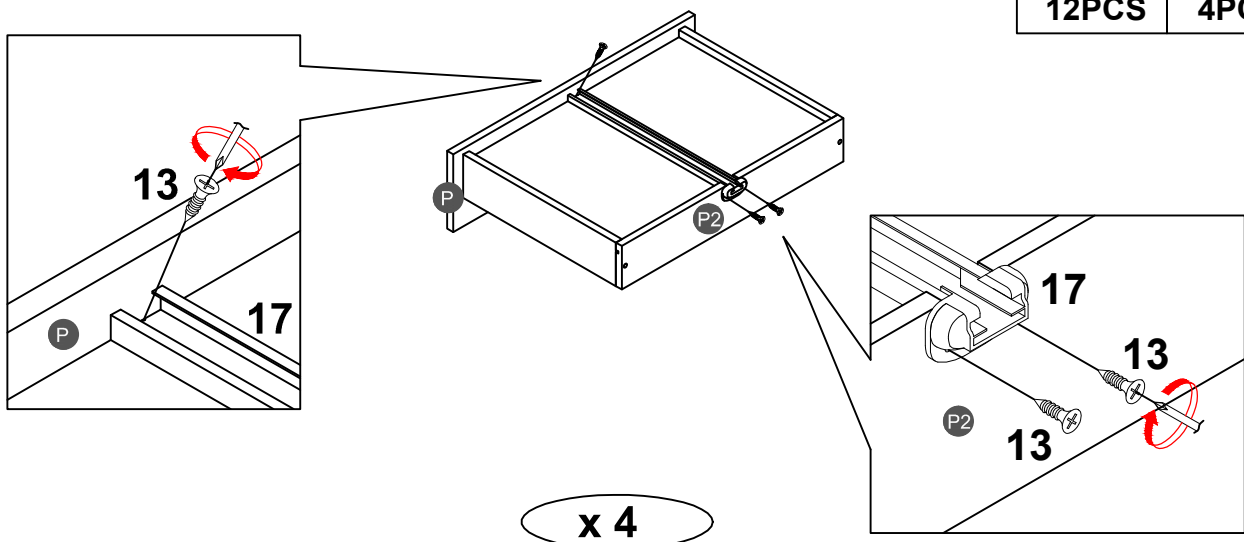


13		17	
12PCS		4PCS	

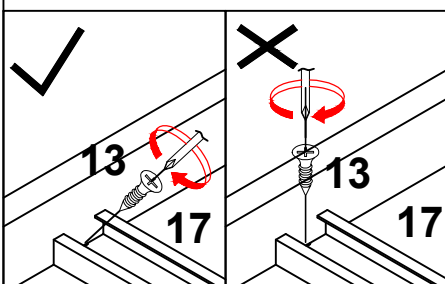


STEP 21:

18		19	
8PCS		8PCS	

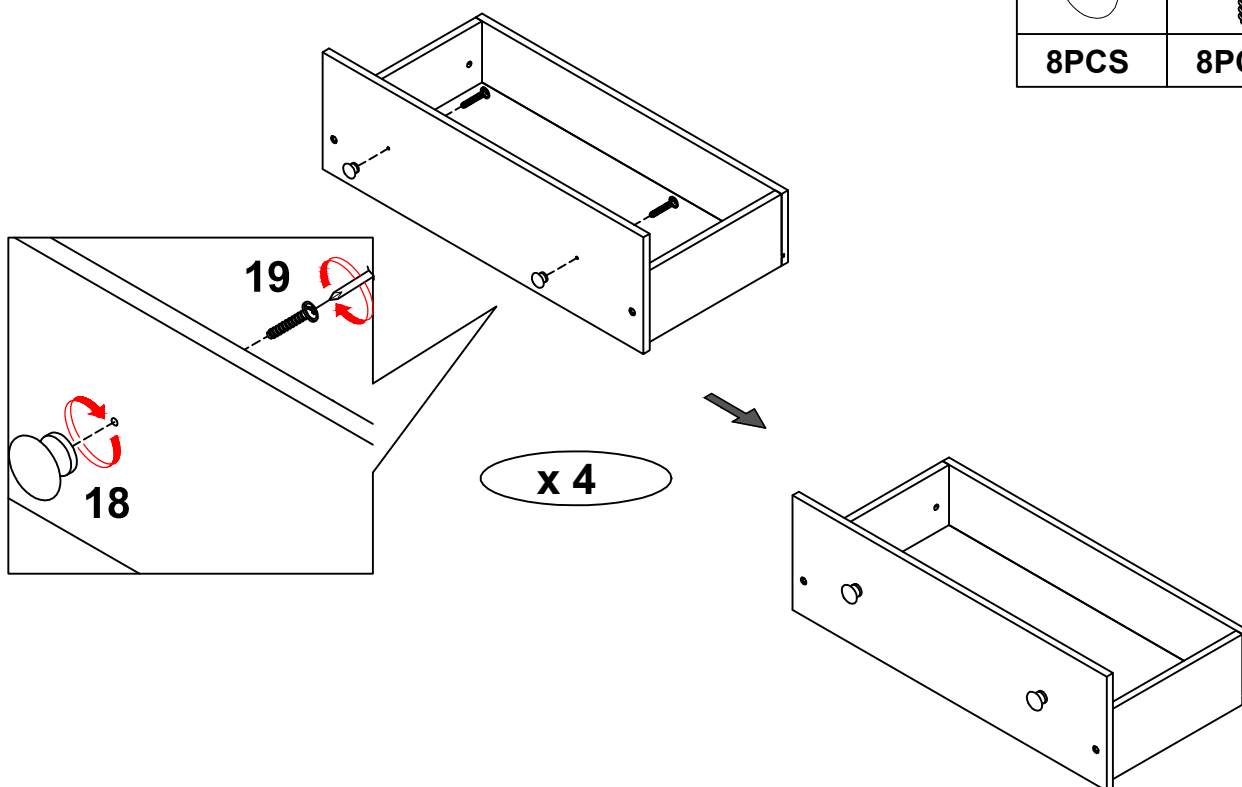

STEP 22:

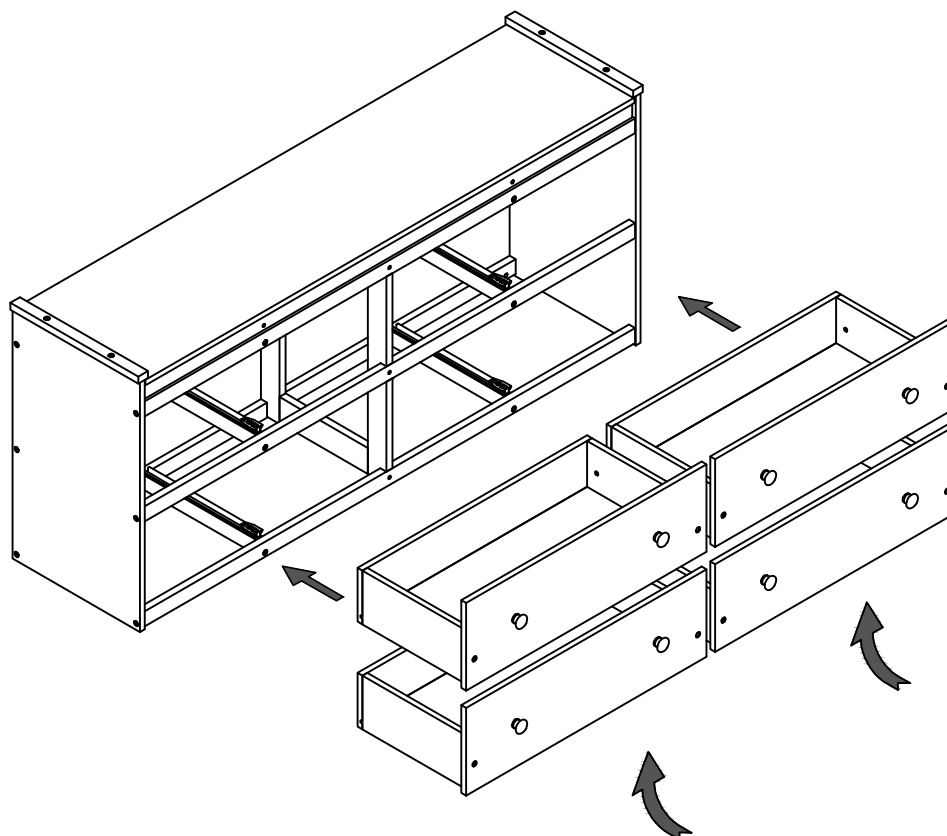


STEP 23:


14



32PCS

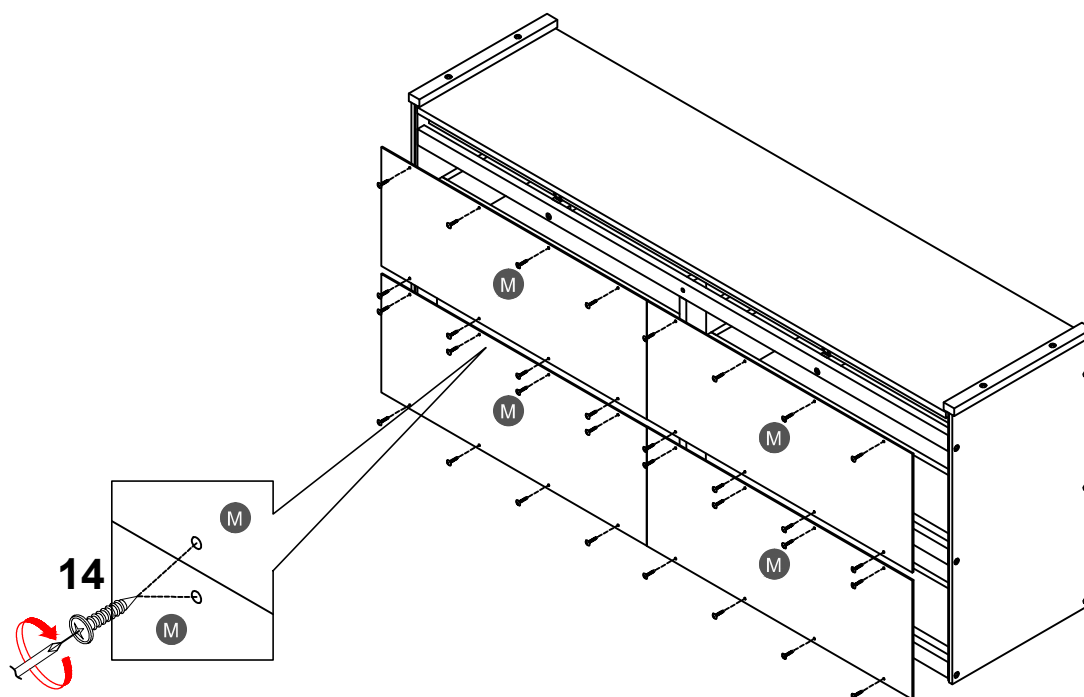

STEP 24:

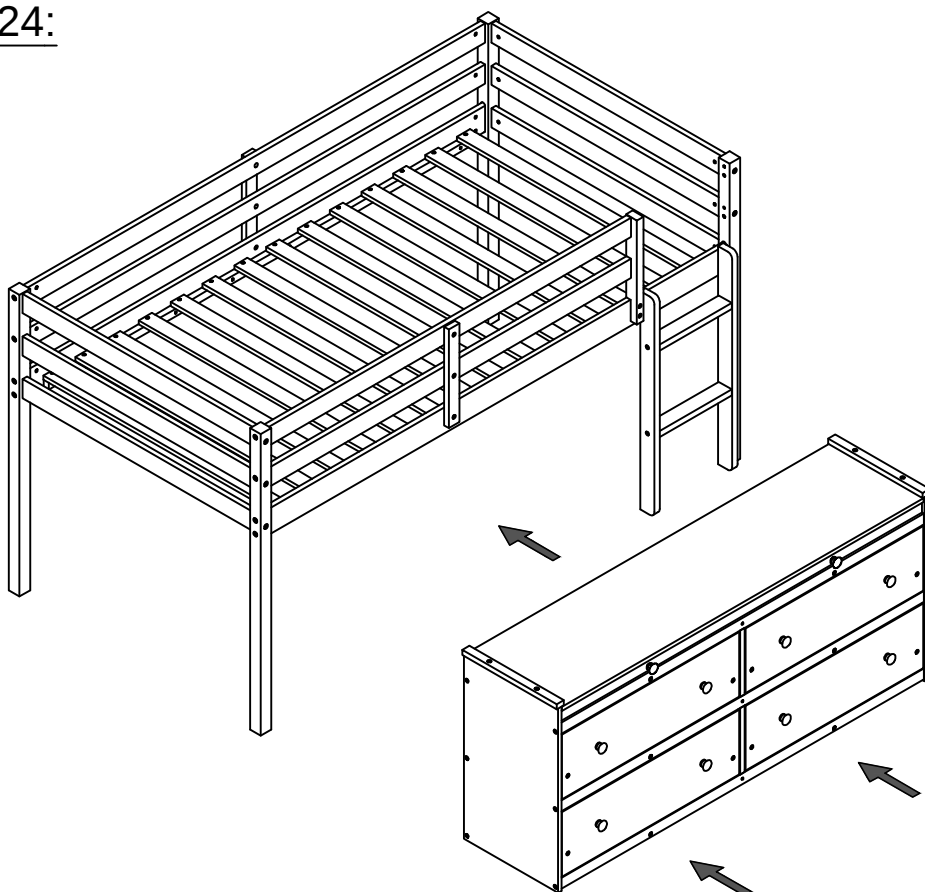


STEP 25:

10



4PCS

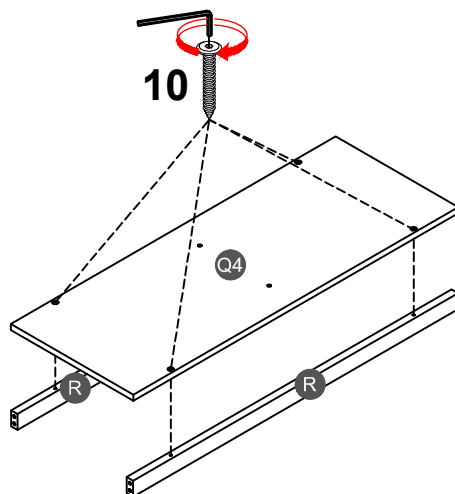


STEP 26:


10




2PCS

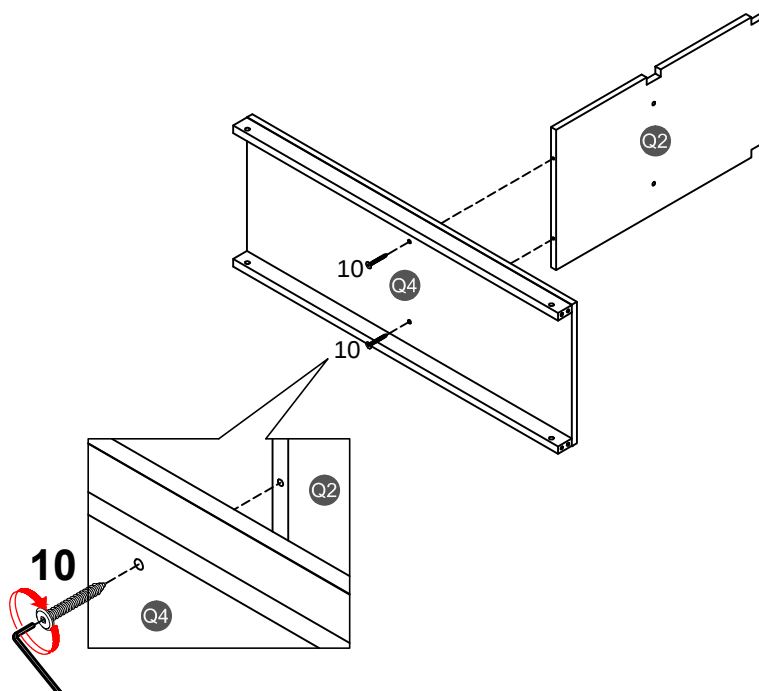


STEP 27:

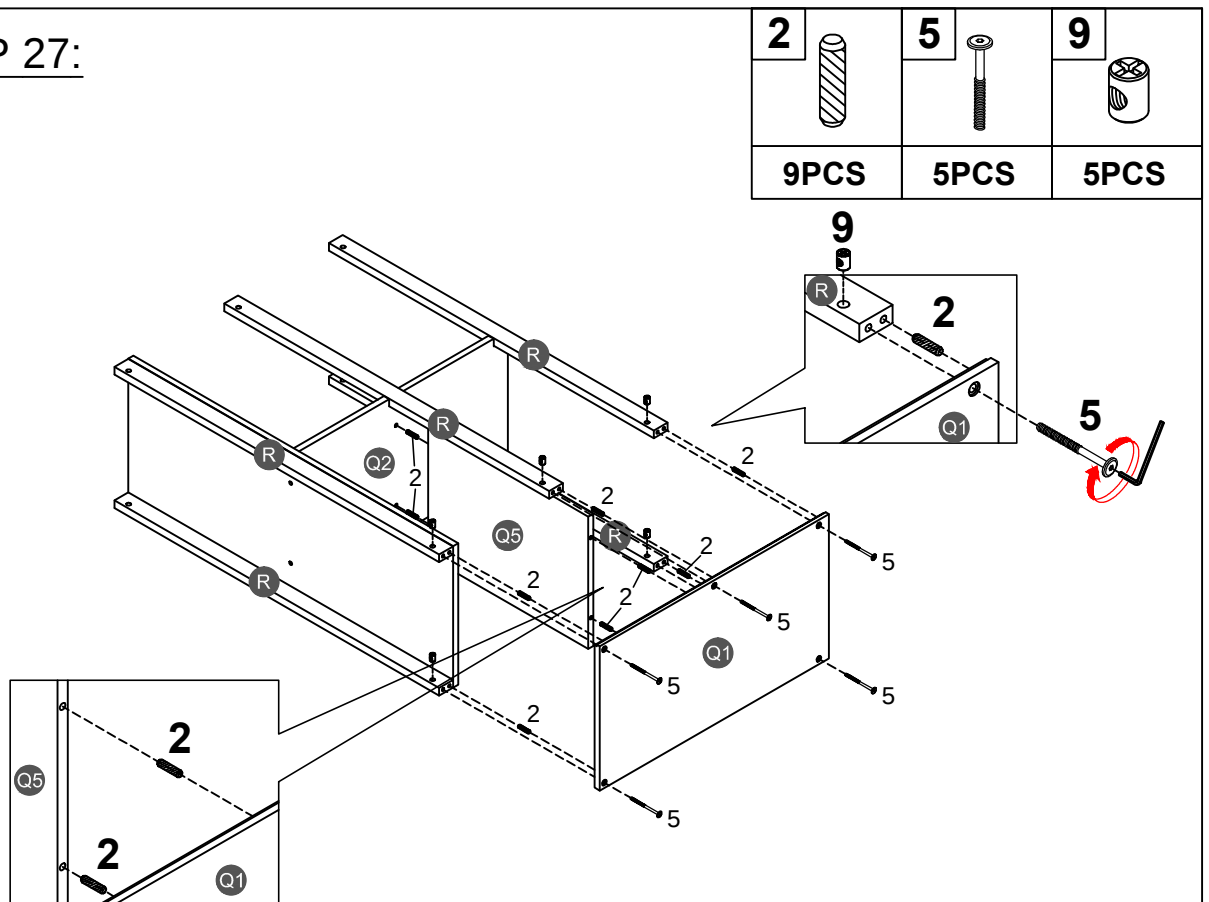

STEP 28:

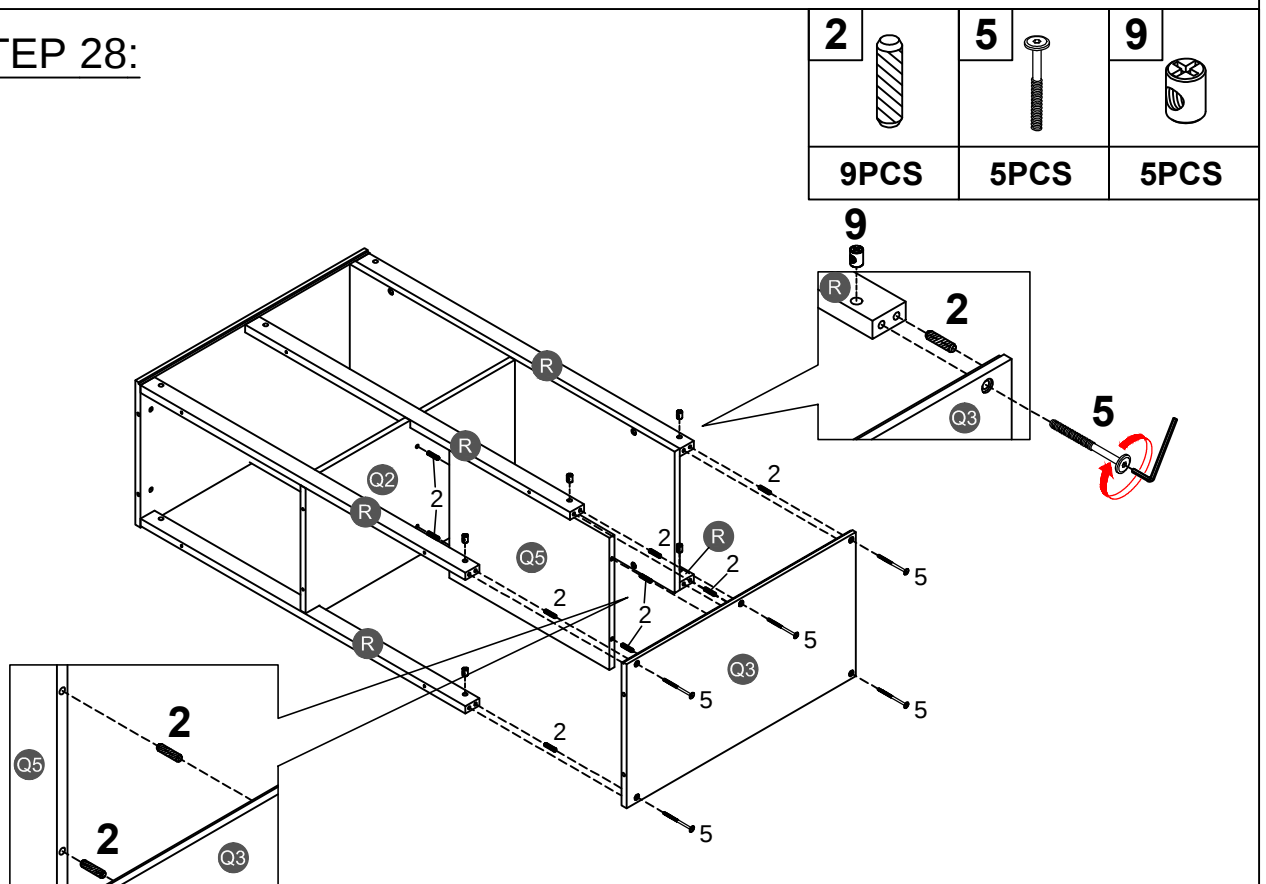


STEP 29:

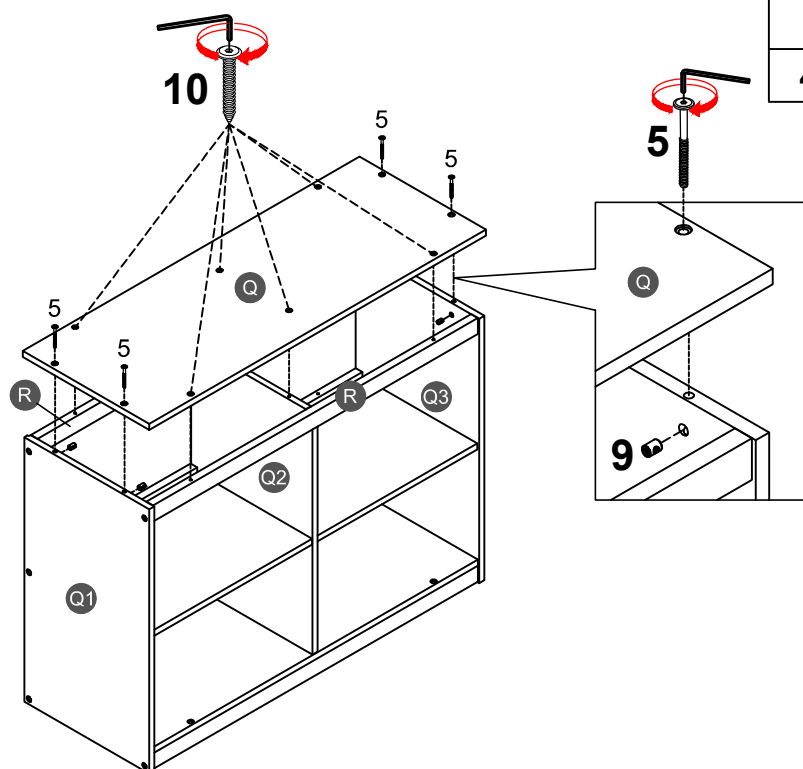


5		9	
4PCS		4PCS	
		10	
		6PCS	

STEP 30:

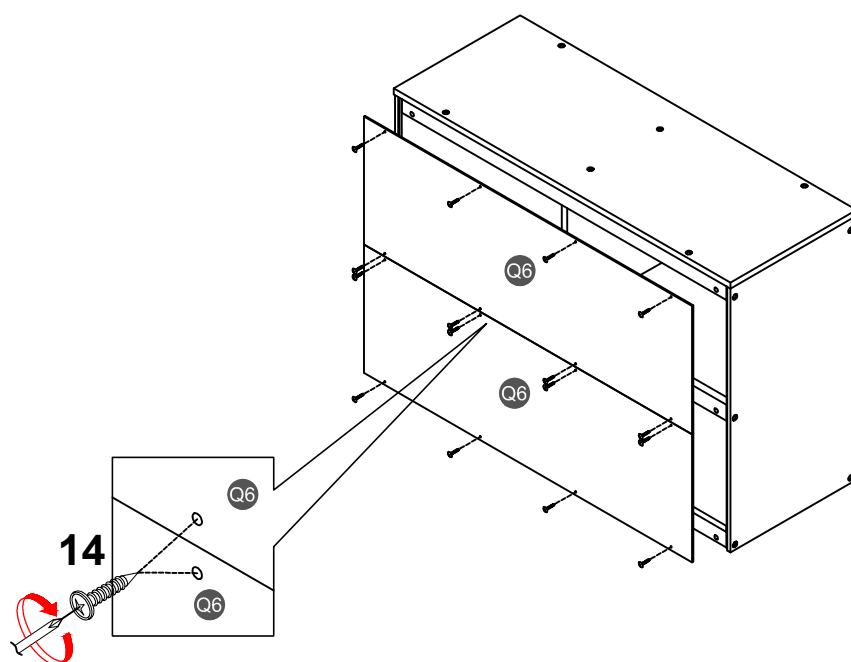


14	
16PCS	

STEP 31:

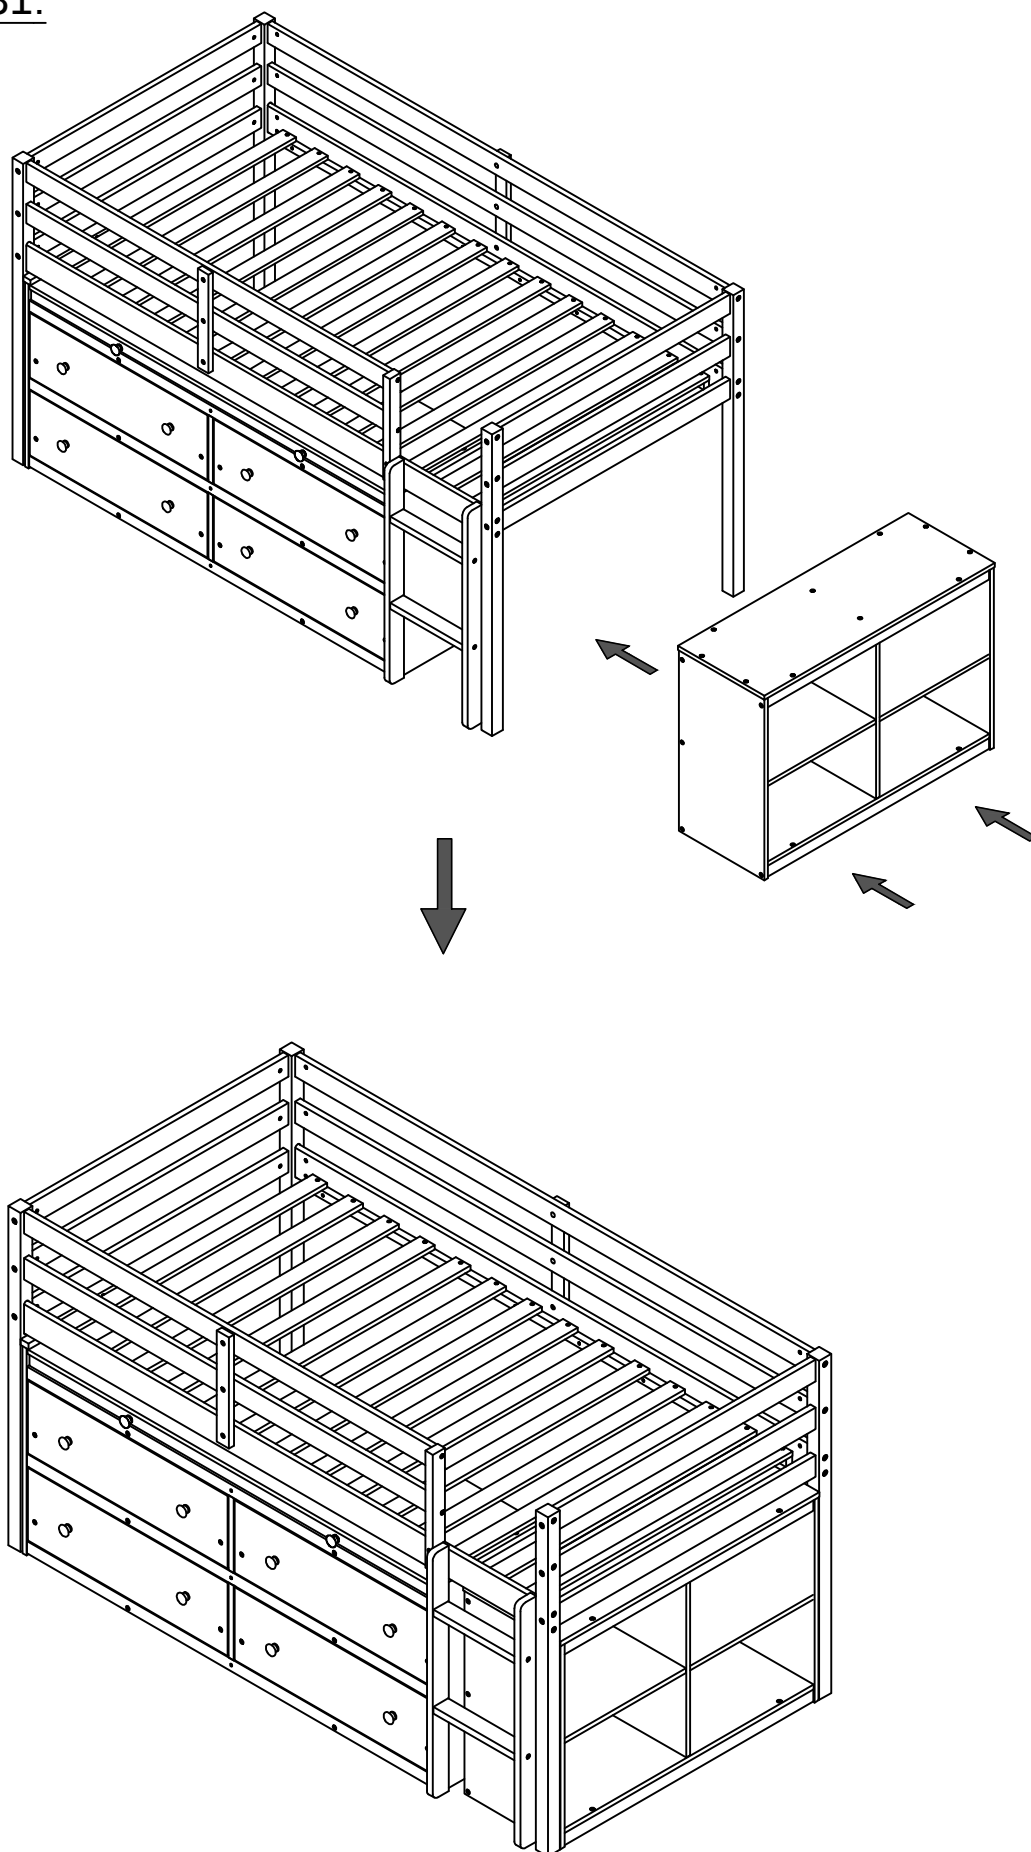

STEP 32:

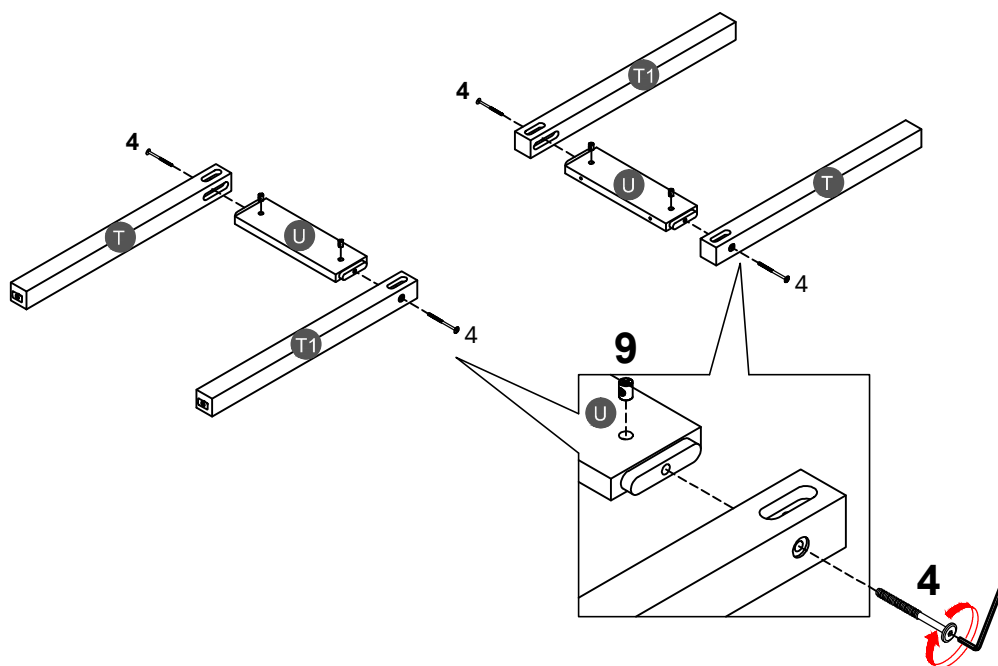

4




4PCS

9



4PCS

STEP 33:

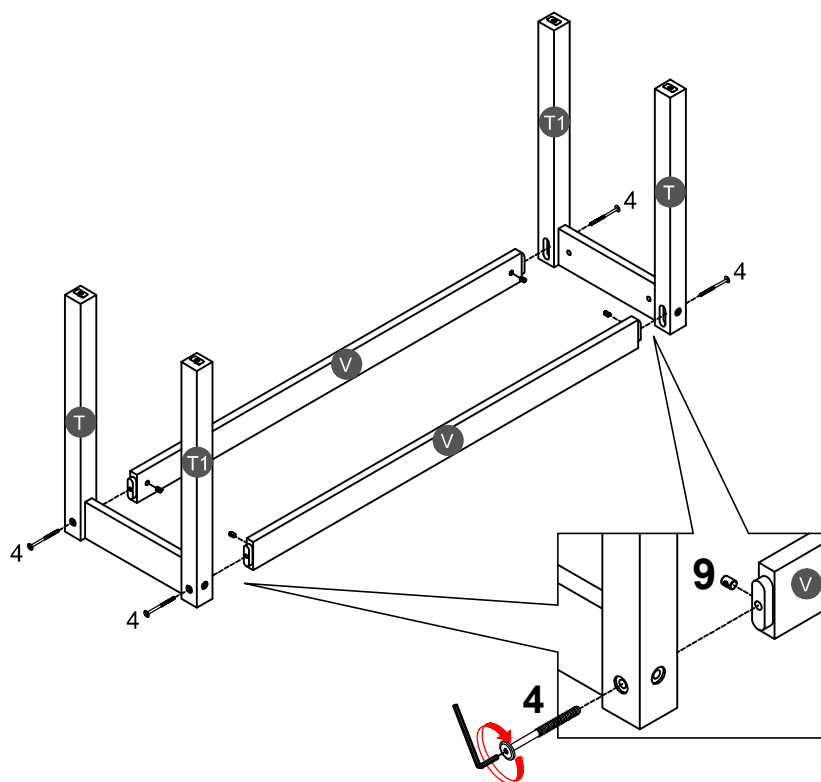

4





4PCS

9



4PCS

STEP 34:

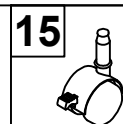
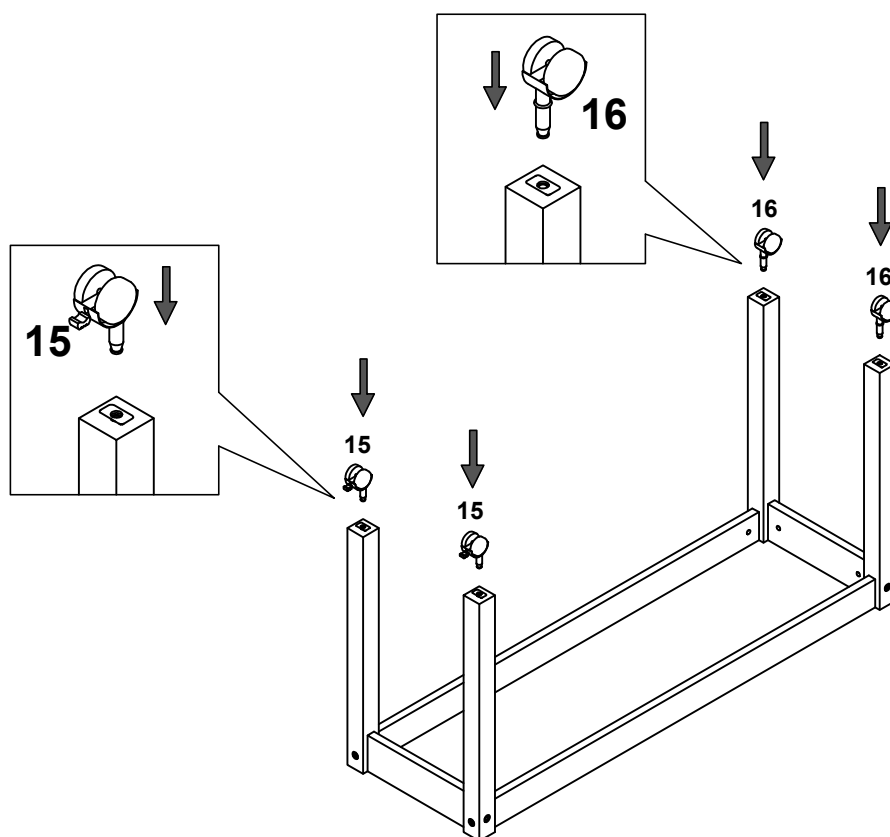


2PCS




2PCS

STEP 35:

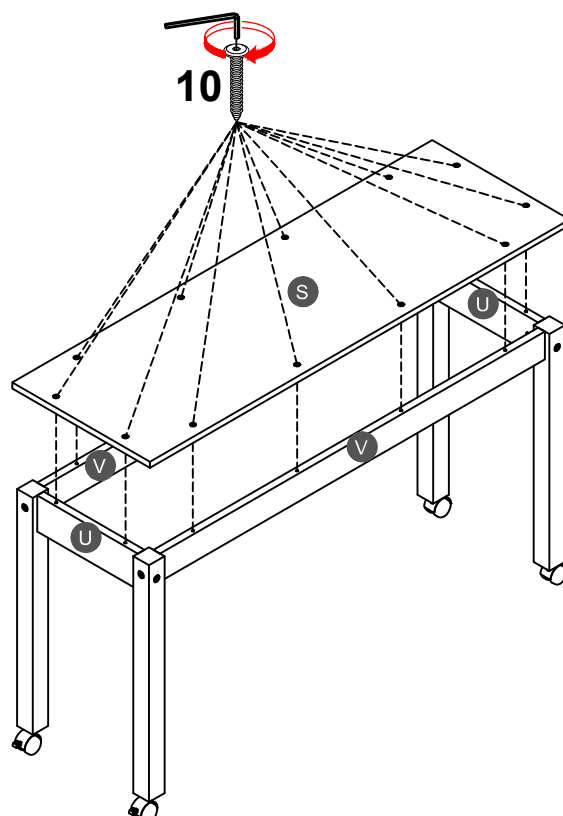

12PCS

STEP 36:

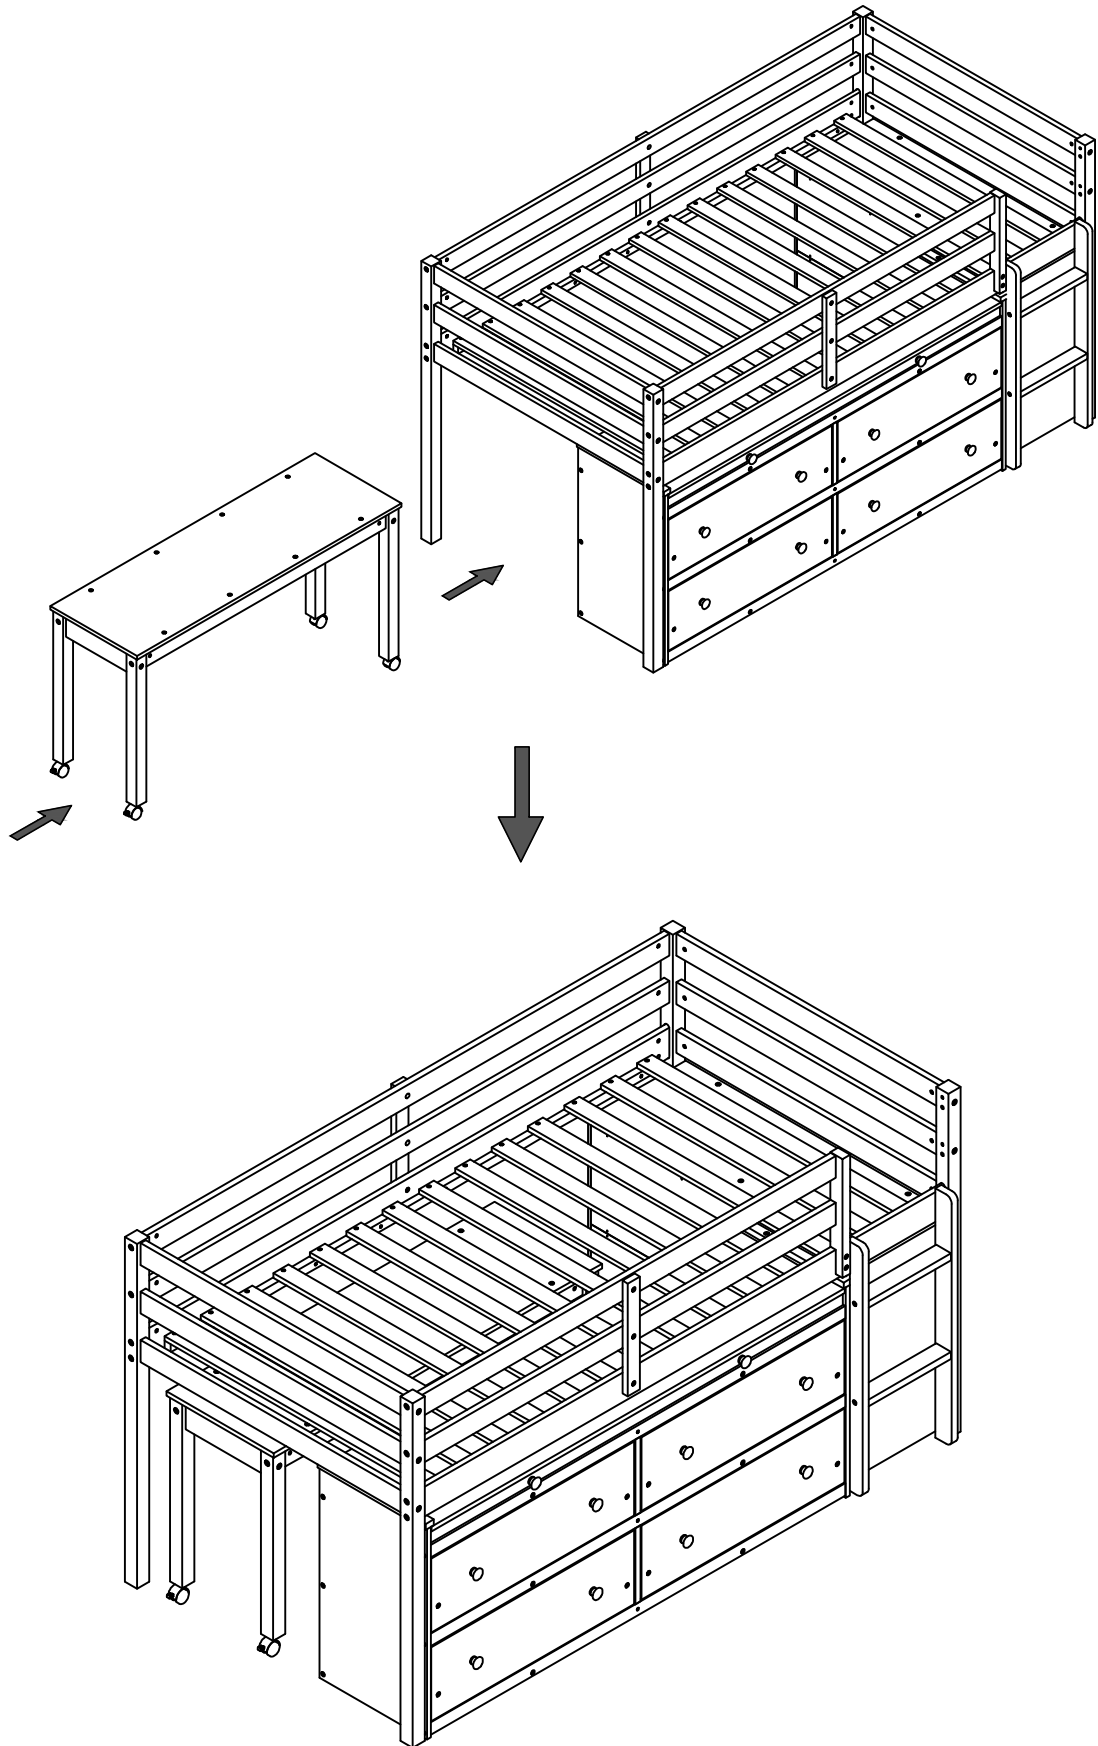

Make sure to tighten all the screws of the bed.