



ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH DESK, 4 DRAWERS CHEST, BOOKCASE

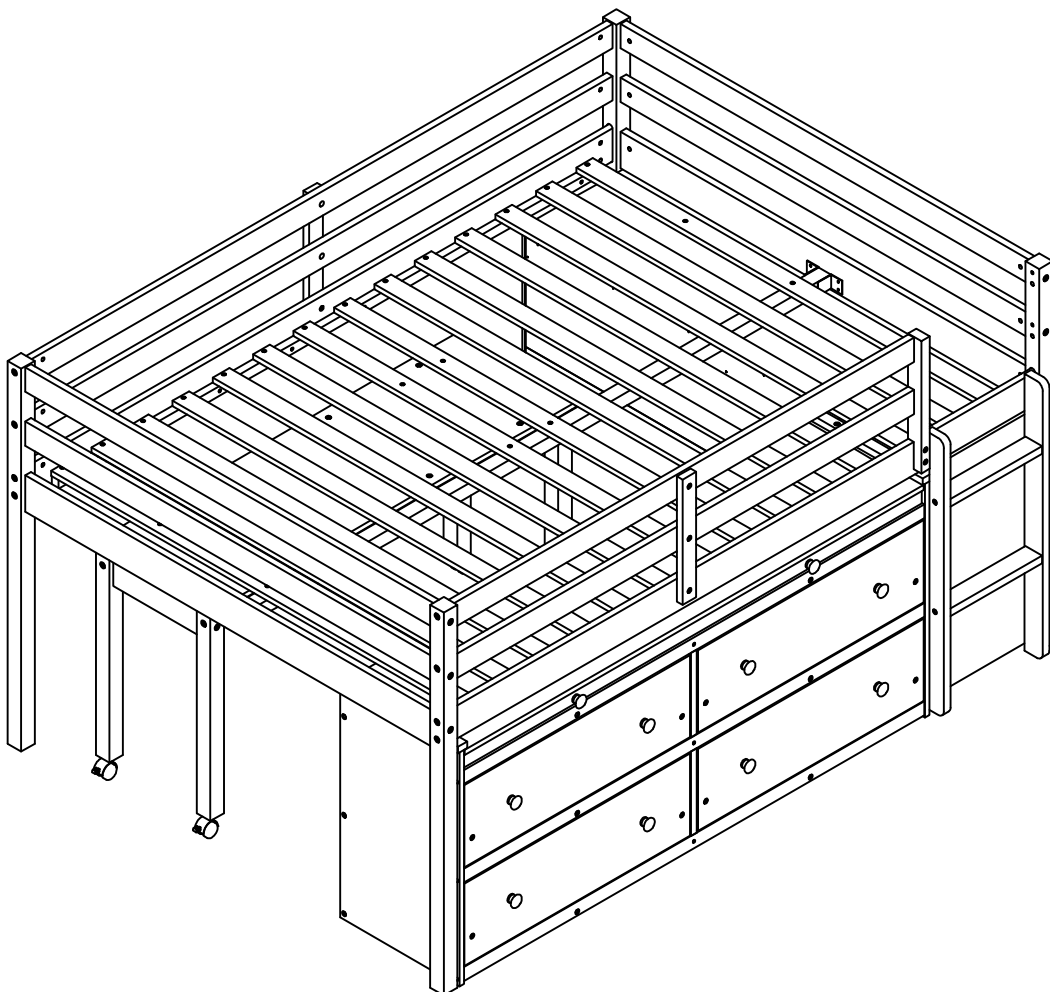












WF303293/WF303294/WF303295

Detail View

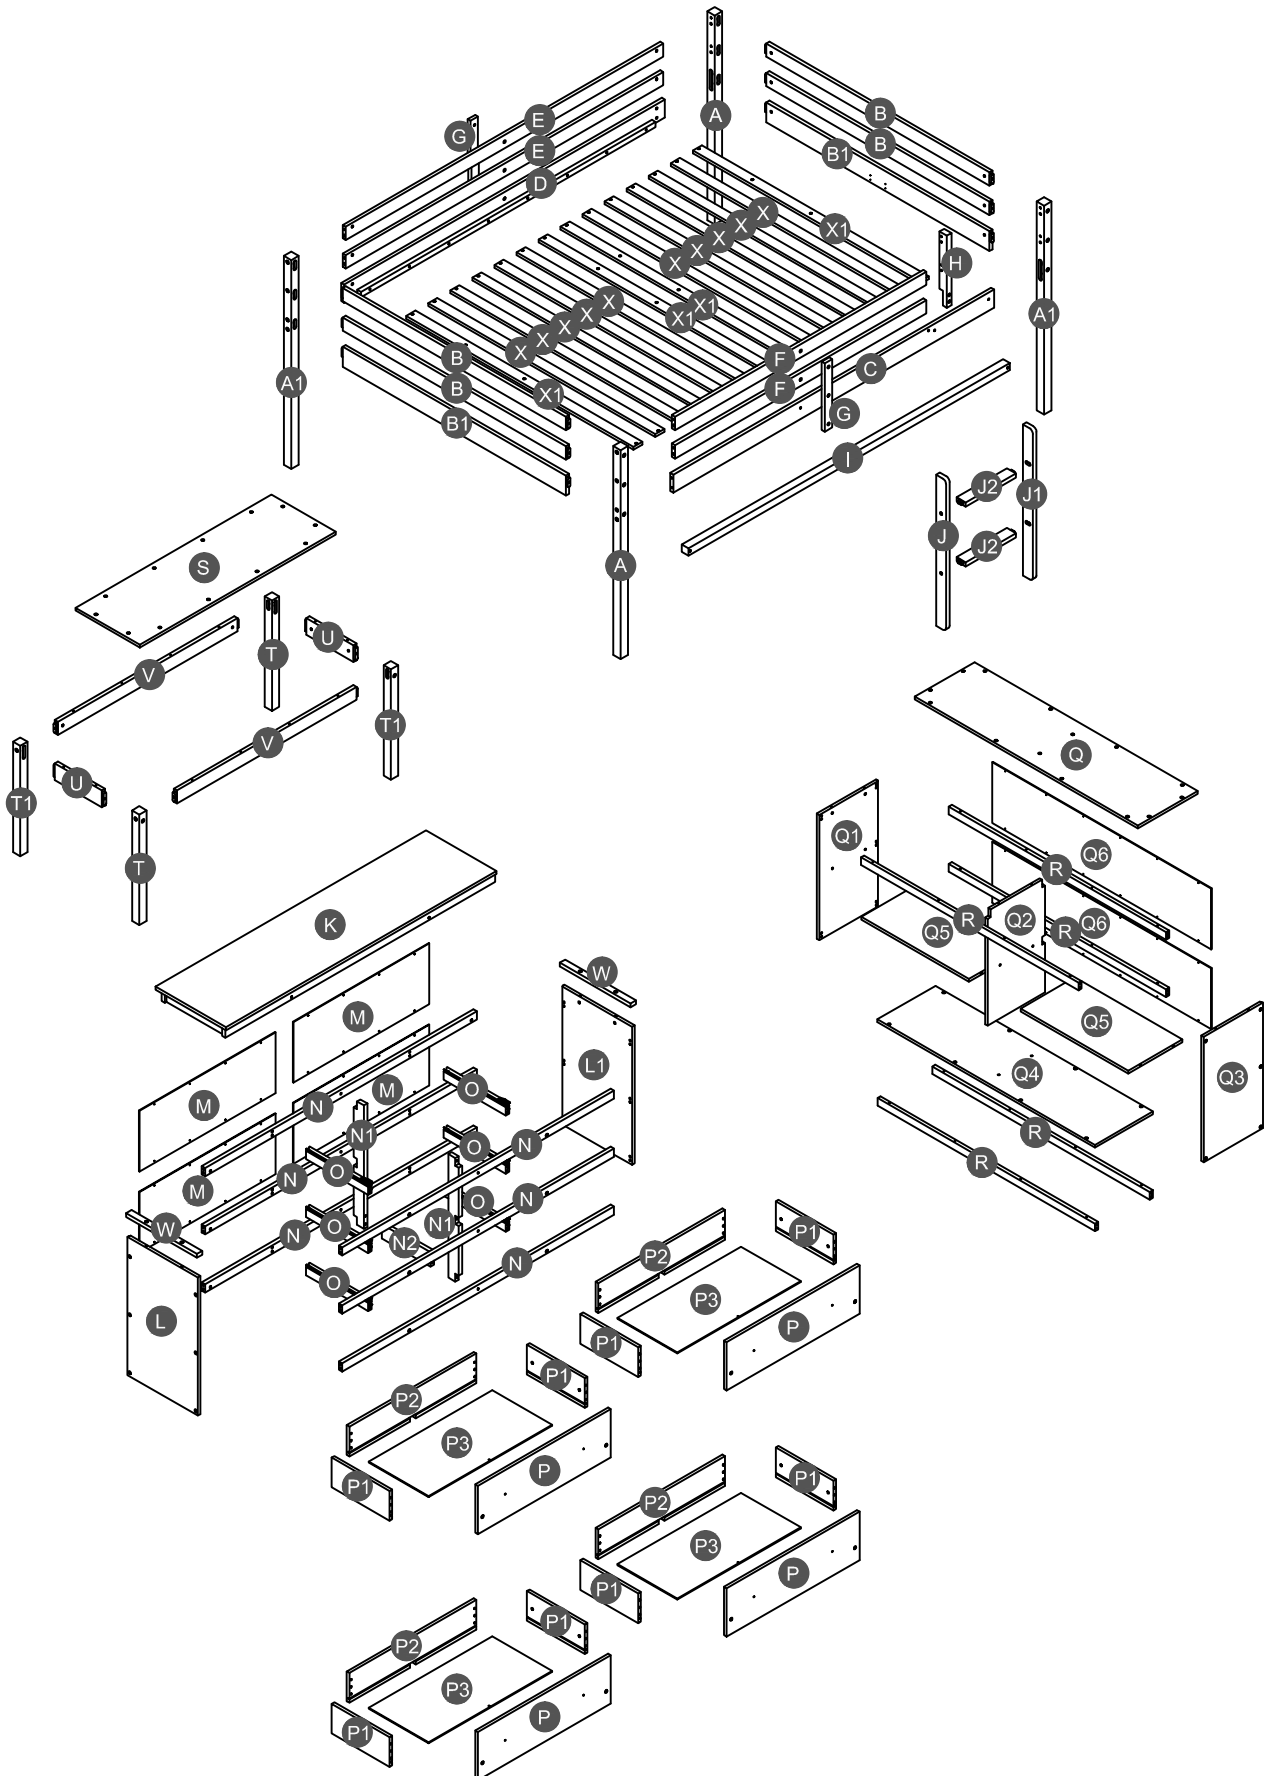








Part List

WF303293 - Hardware inside





A  Leg (Left Front/Right Back) - 2pcs	A1  Leg (Left Back/Right Front) - 2pcs	C  Side rail (Front) - 1pc
D  Side rail (Back) - 1pc	E  Long guard rail (back) - 2pcs	F  Short guard rail (front) - 2pcs
G  Vertical guard rail - 2pcs	I  Lower support slat - 1pc	J  Ladder (left) - 1pc
J1  Ladder (right) - 1pc	J2  Step ladder - 2pcs	N1  Vertical bar (Front/Back) - 2pcs
N2  Lower support - 1pc	Q6  Back panel - 2pcs	R  Horizontal bar (Front/Back) - 5pcs
T  Leg (Left Front/Right Back) - 2pcs	T1  Leg (Left Back/Right Front) - 2pcs	U  Apron (left-right) - 2pcs
W  Cap for upper - 2pcs	X  Slat - 10pcs	X1  Slat - 4pcs

Part List






WF303294

B  Horizontal bar FB/HB - 4pcs	B1  Horizontal bar FB/HB - 2pcs	M  Back panel - 4pcs
Q  Top panel -1pc	Q1  Side panel (left) - 1pc	Q2  Divider panel - 1pc
Q3  Side panel (right) - 1pc	Q4  Bottom panel - 1pc	Q5  Shelf panel - 2pcs
V  Apron (front-back) - 2pcs		

WF303295 - Hardware inside

H  Support guard rail (Right) -1pc	K  Top -1pc	L  Side panel (left) - 1pc
L1  Side panel (right) - 1pc	N  Horizontal bar (Front/Back) - 6pcs	O  Support drawer - 6pcs
P  Drawer front - 4pcs	P1  Drawer (left/right) - 8pcs	P2  Drawer back - 4pcs
P3  Drawer bottom - 4pcs	S  Top table - 1pc	

Hardware List WF303295


1	 Ø10*40mm Wood dowel (8pcs)	2	 Ø8*30mm Wood dowel (64pcs)	3	 (Ø15)1/4"*100mm Hex-Head bolts (16pcs)
4	 (Ø15)1/4"*80mm Hex-Head bolts (22pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (62pcs)	6	 (Ø12)1/4"*40mm Hex-Head bolts (8pcs)
7	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	8	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)	9	 1/4"*15 (9.5mm) Horizontal-Hole bolts(100pcs)
10	 (Ø12)1/4"*40mm Hex-Head bolts (32pcs)	11	 (1/4")4.5*58mm Allen key (2pcs)	12	 Ø4*30mm Wood screws (32pcs)
13	 Ø3.5*15mm Wood screws (26pcs)	14	 Ø3.5*15mm Wood screws (56pcs)	17	 340*30mm Upper slider drawer (6pcs)
19	 3/16"*25mm Ph zinc(Knob) (10pcs)	20	 1/4"*25mm Leveler (1pc)	21	 (Ø13)1/4"*14mm Connect bolt (2pcs)
22	 116*40*27mm Metal bracket (2pcs)				

Hardware List WF303293

15	 64*52*95mm Castor (2pcs)	16	 64*52*95mm Castor (2pcs)	18	 Ø38*31mm Pine Knob (10pcs)
-----------	--	-----------	--	-----------	--




ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

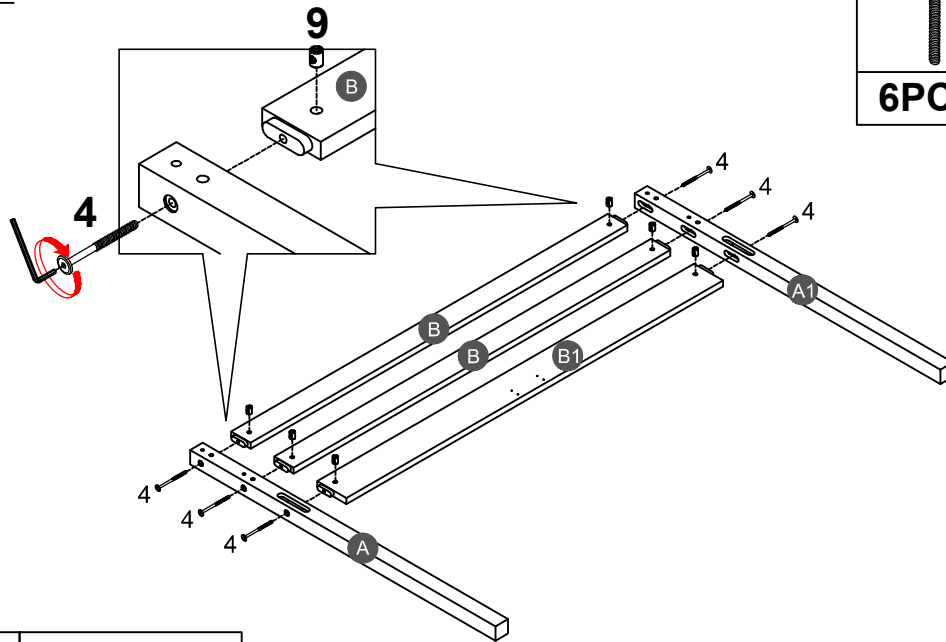


4		9	
6PCS		6PCS	

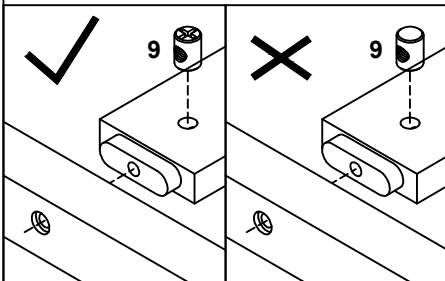


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

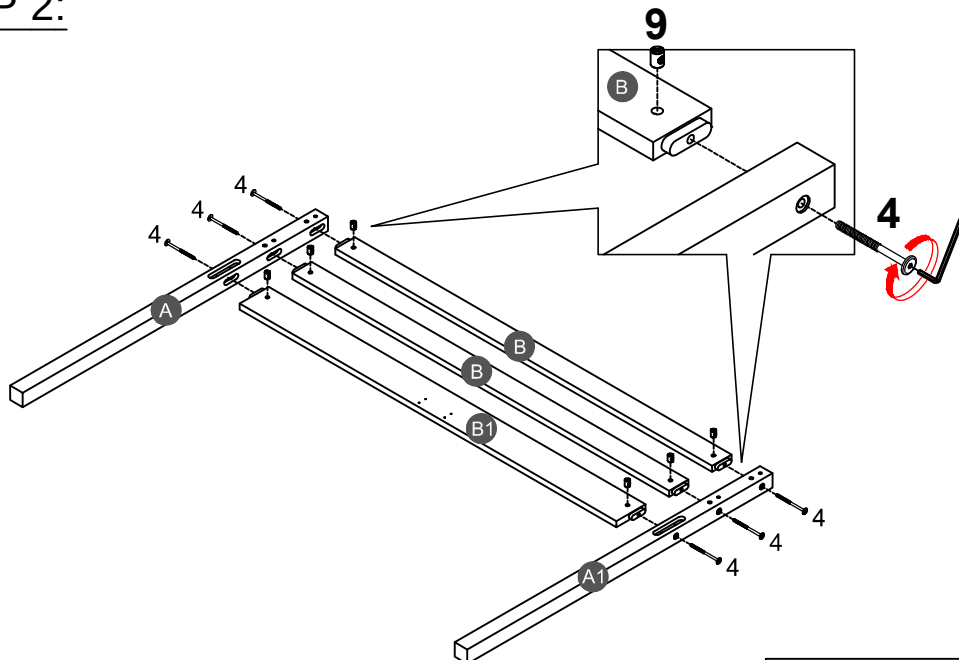


4	
6PCS	
9	
6PCS	

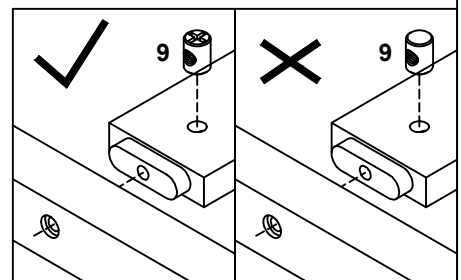


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 3:

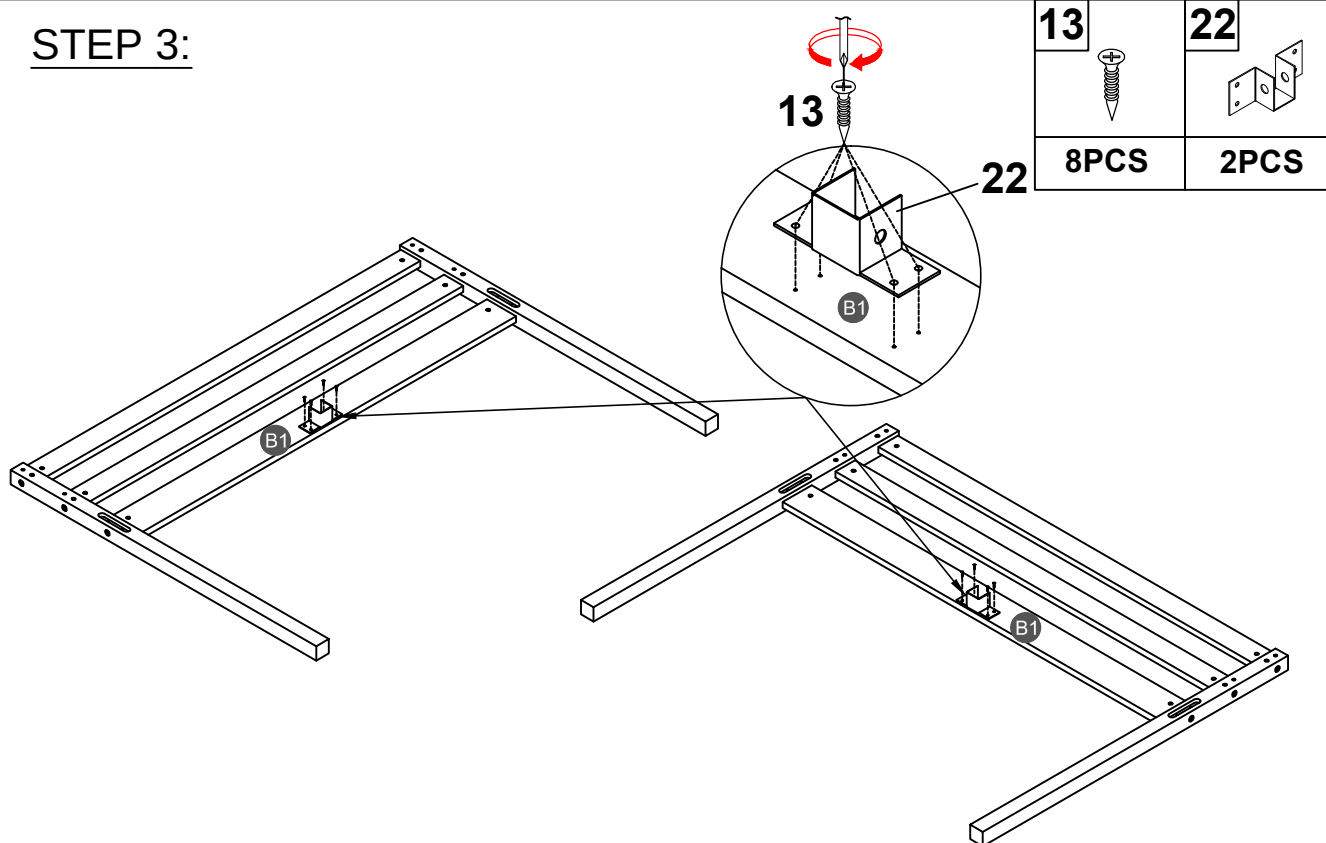

STEP 4:

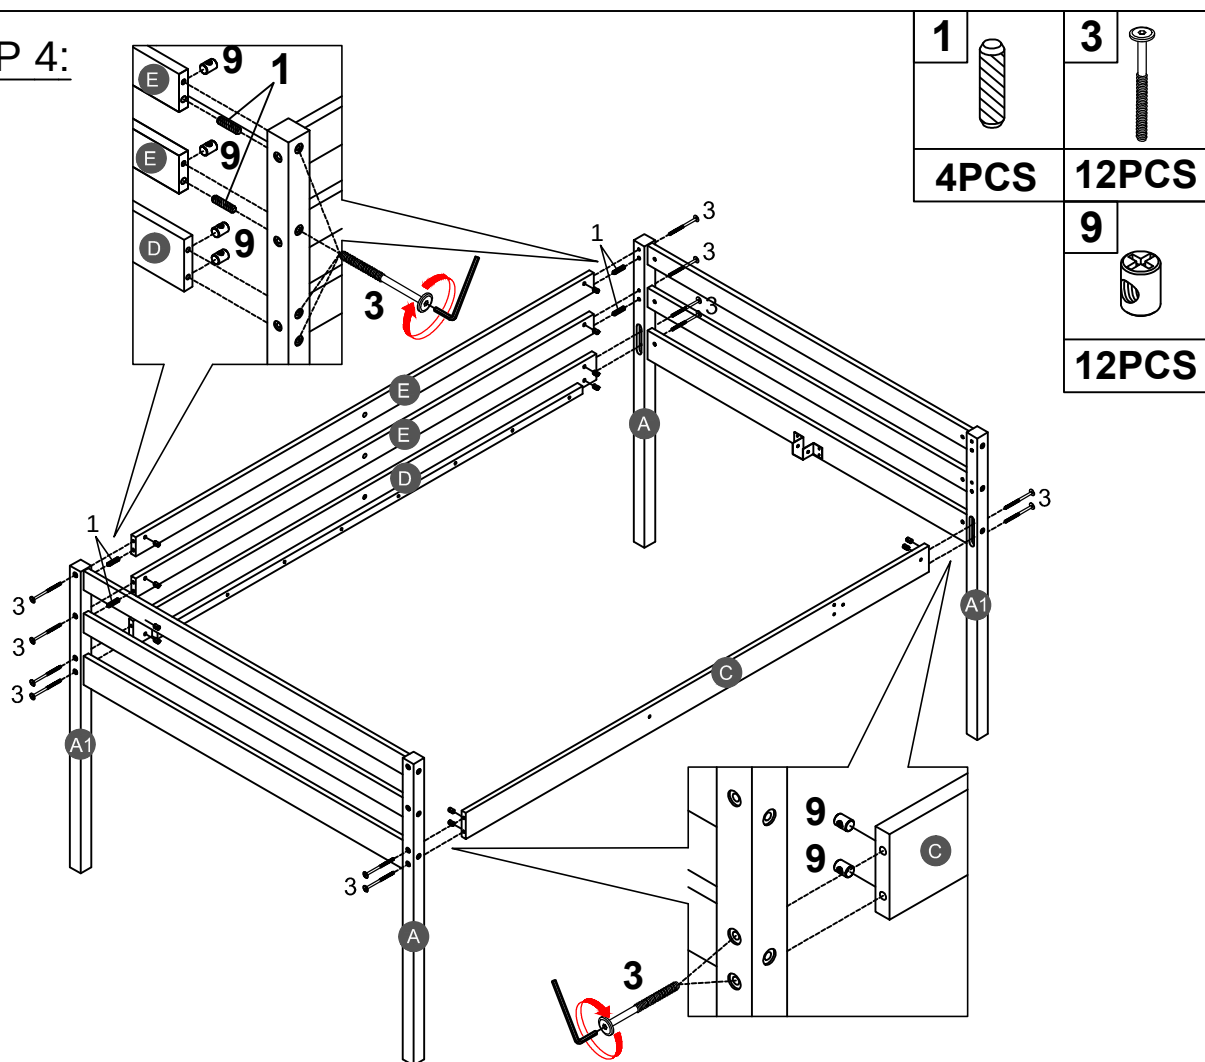

STEP 5:

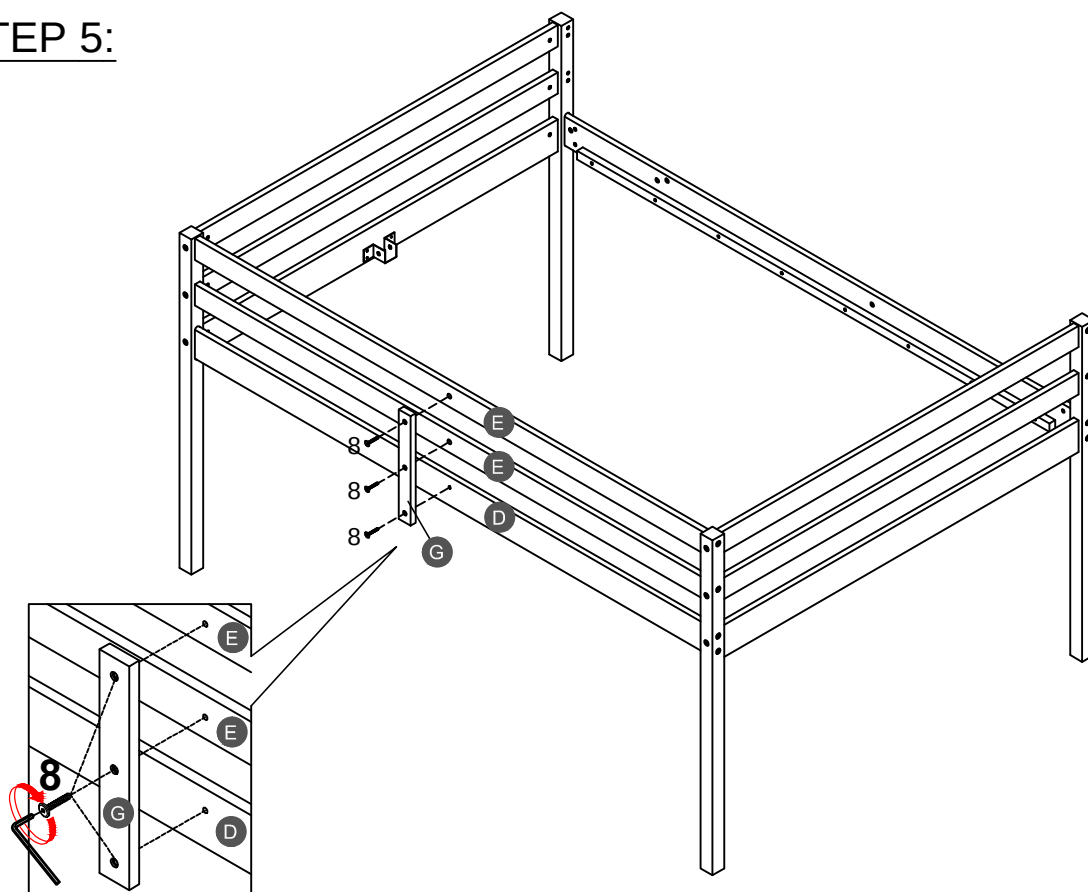


8



3PCS

STEP 6:

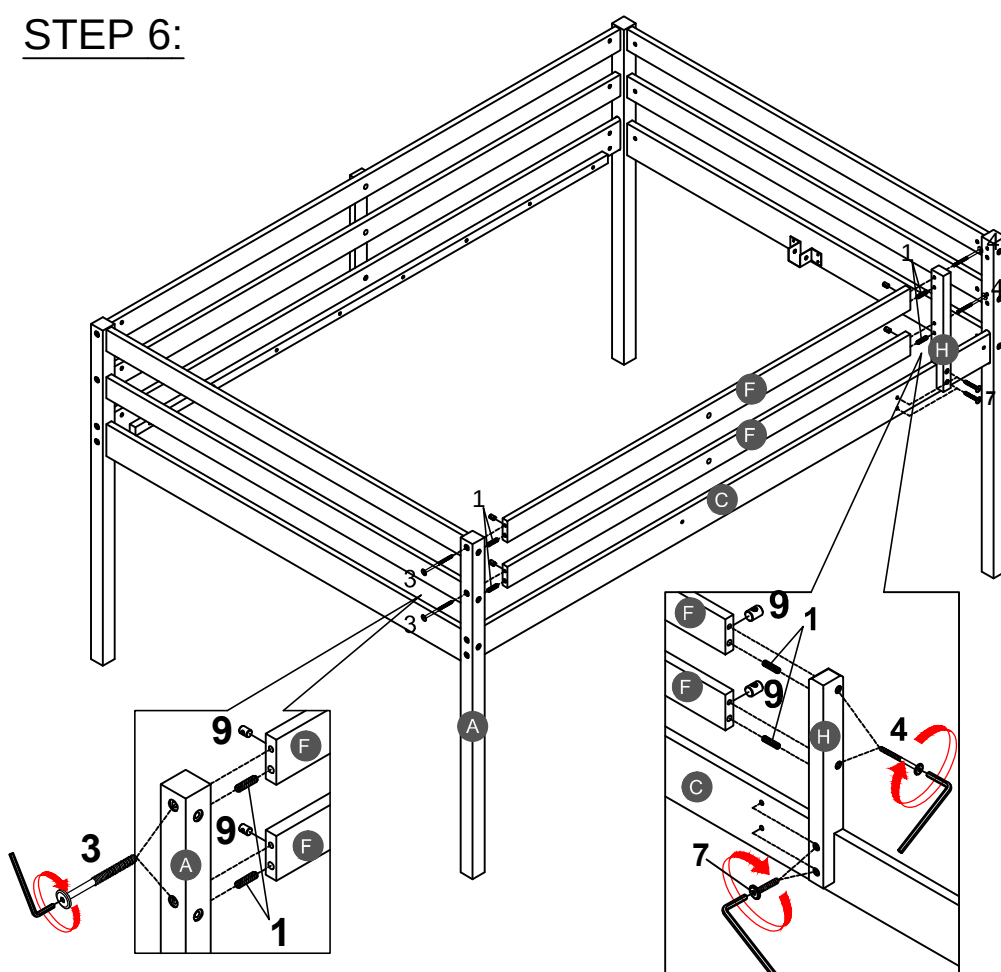

1



4PCS

3



2PCS

4



2PCS

7



2PCS

9




4PCS

STEP 7:

8



3PCS

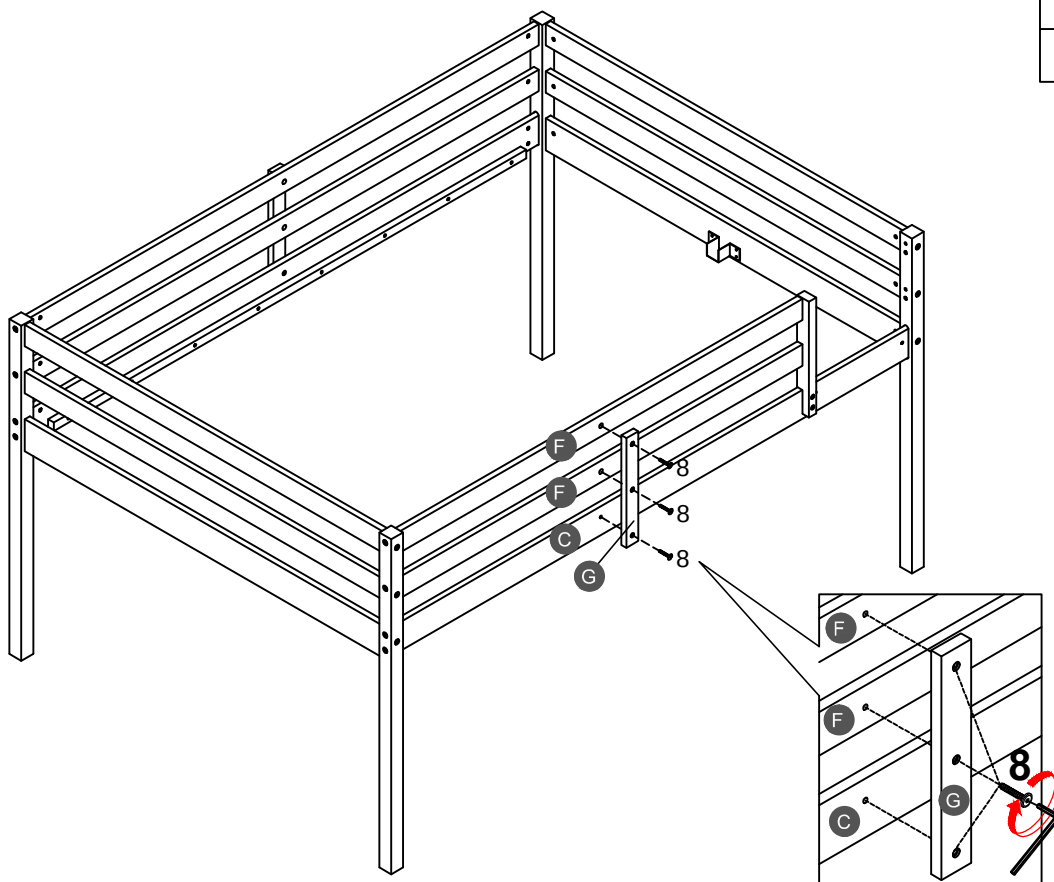

STEP 8:

5




4PCS


9



4PCS

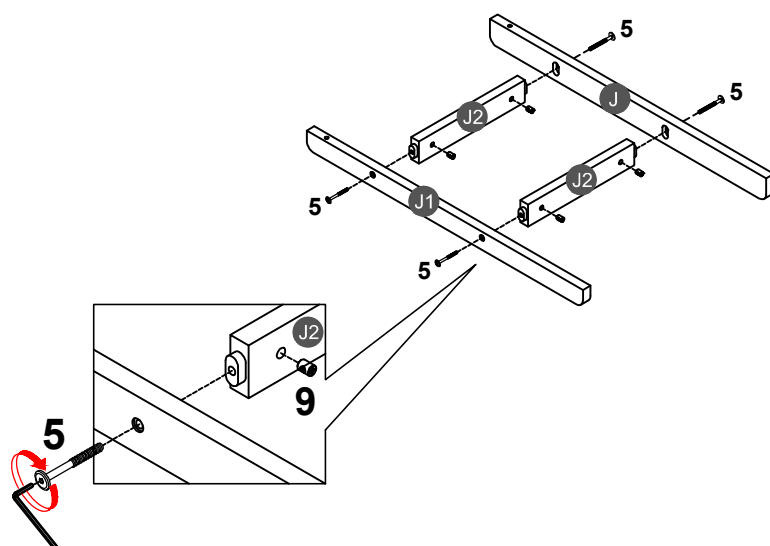

STEP 9:

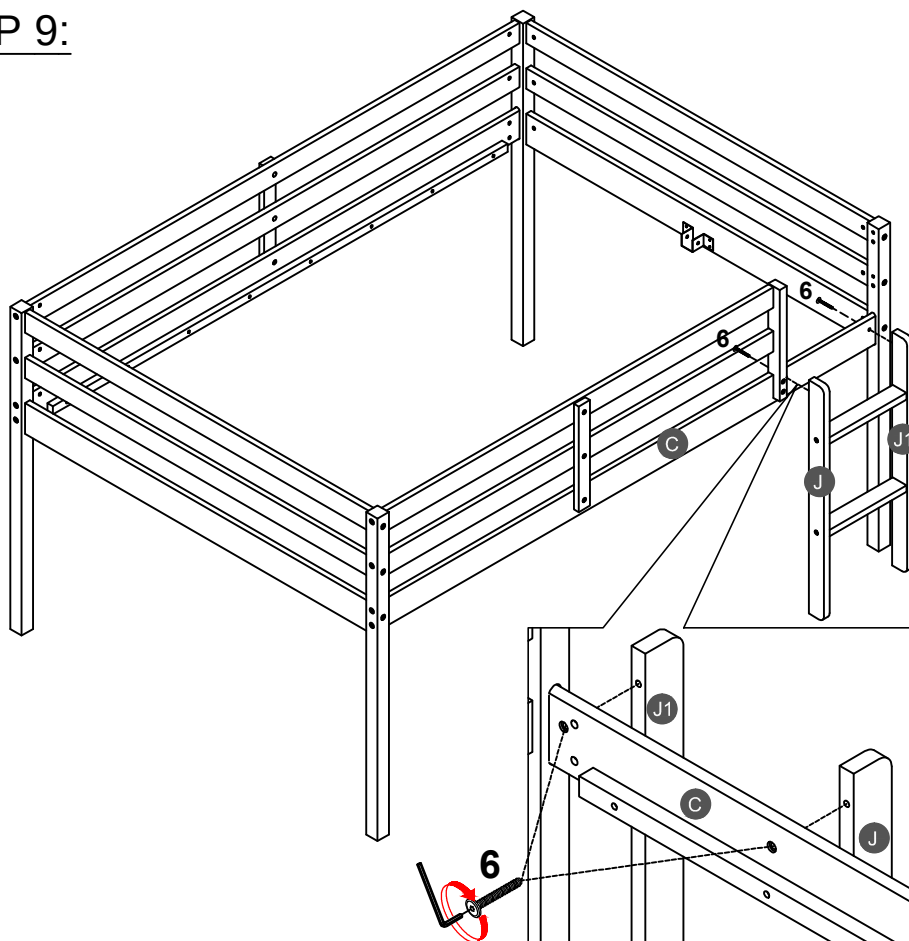


6



2PCS

STEP 10:

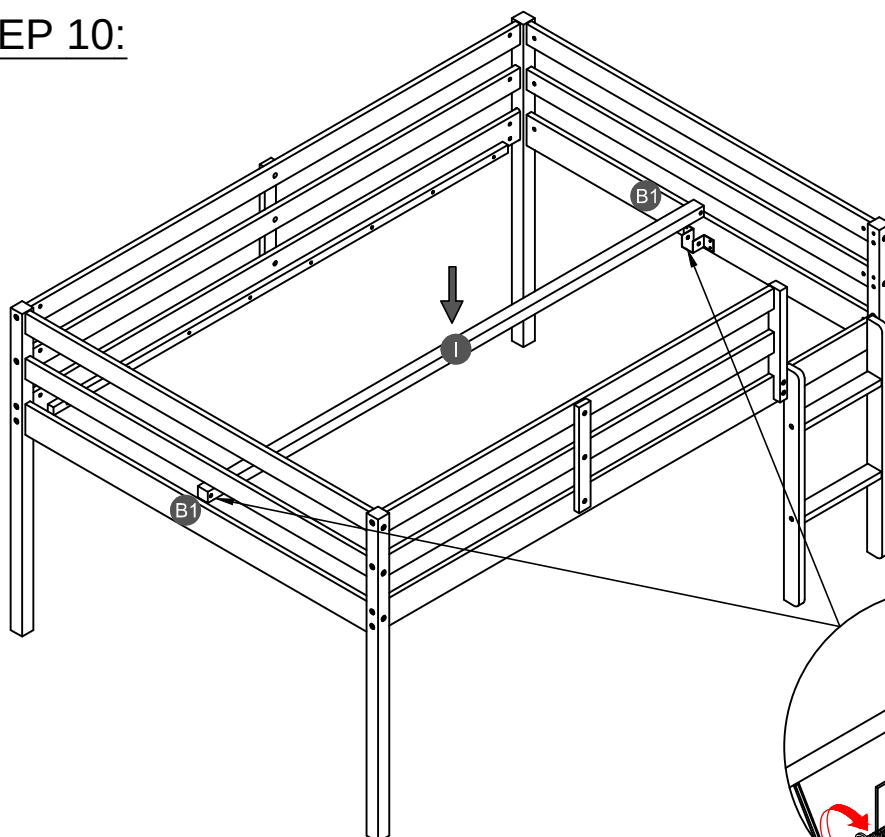

6




2PCS

21



2PCS

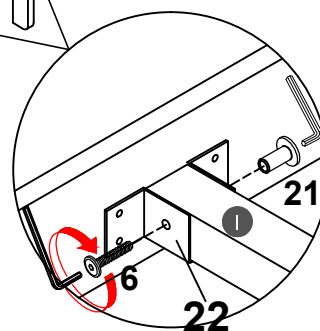


STEP 11:

12



32PCS

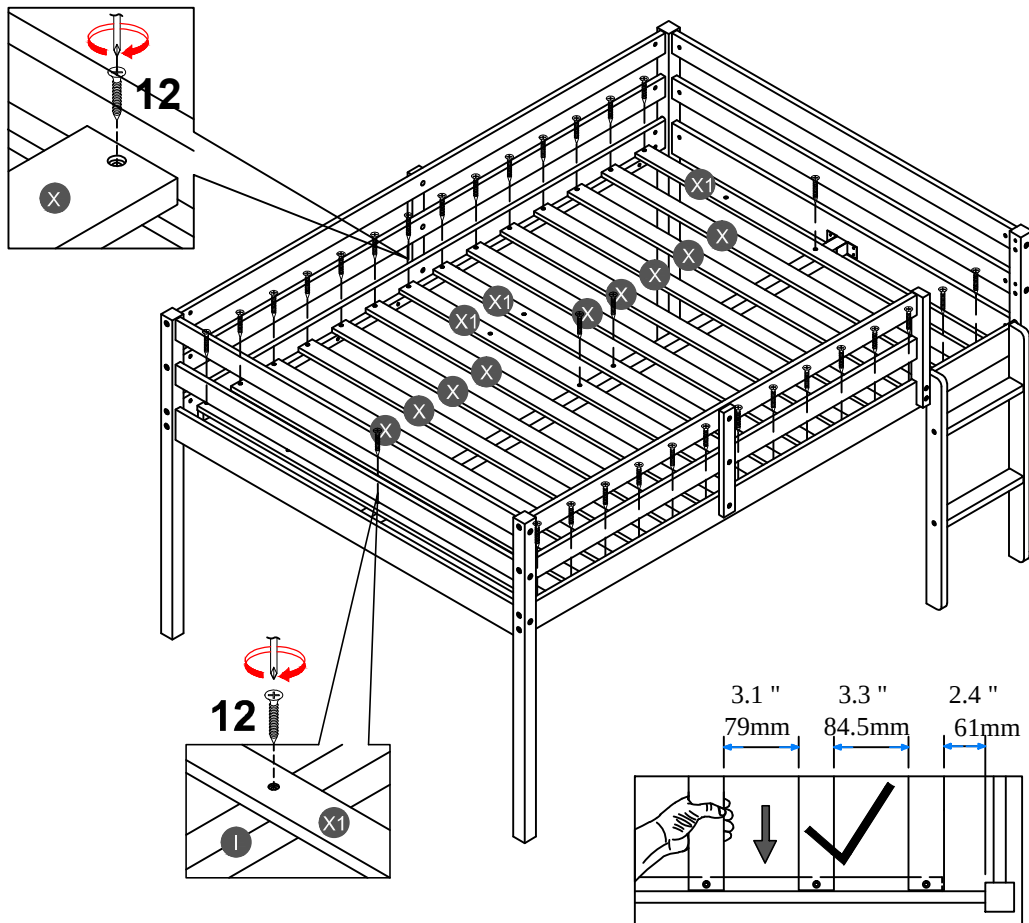


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 12:

20



1PC

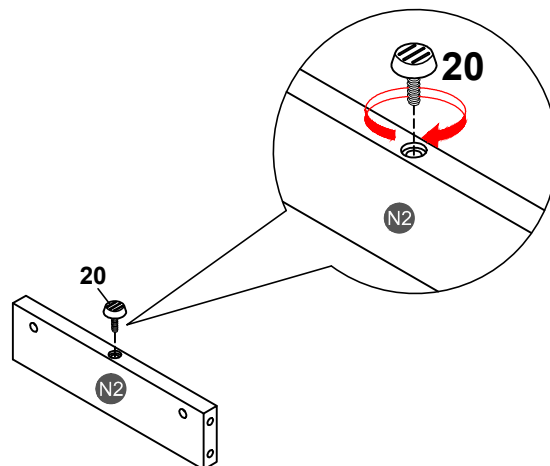


STEP 13:

6



4PCS

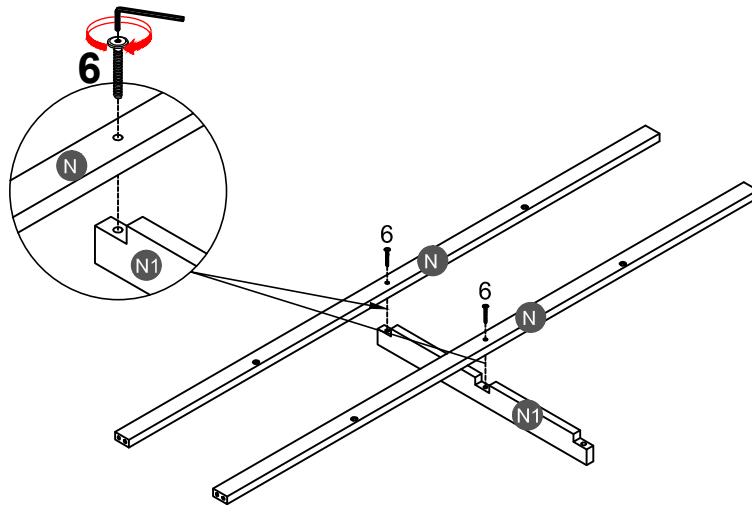

x 2

STEP 14:

2



6PCS

5




6PCS


9



6PCS

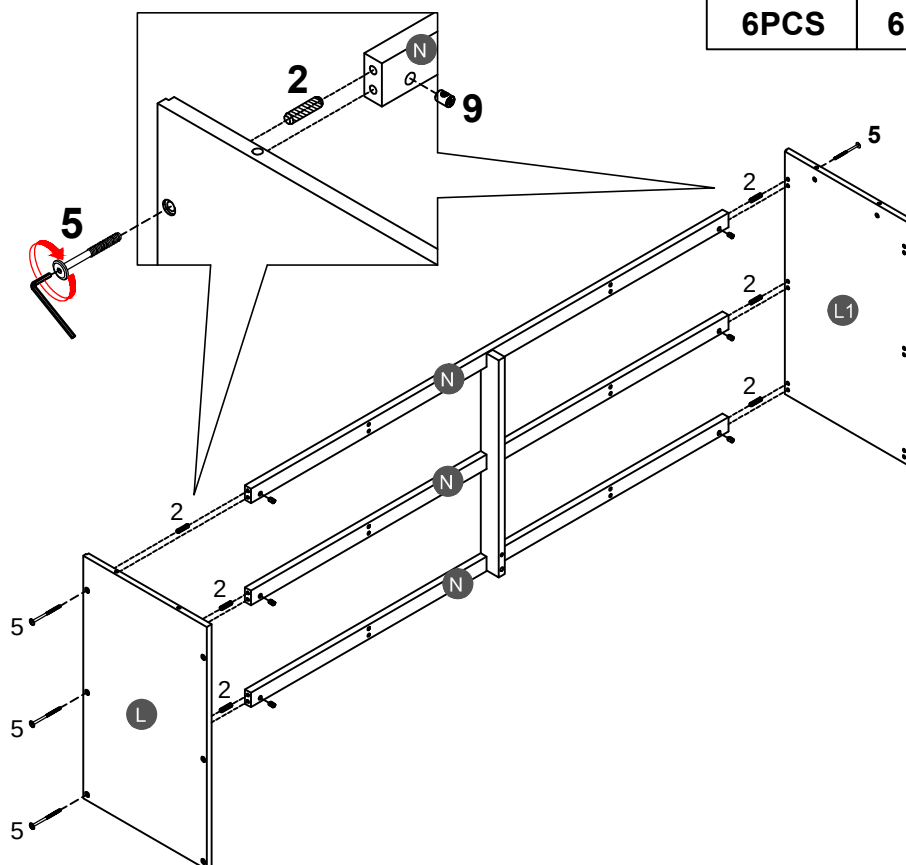


STEP 15:

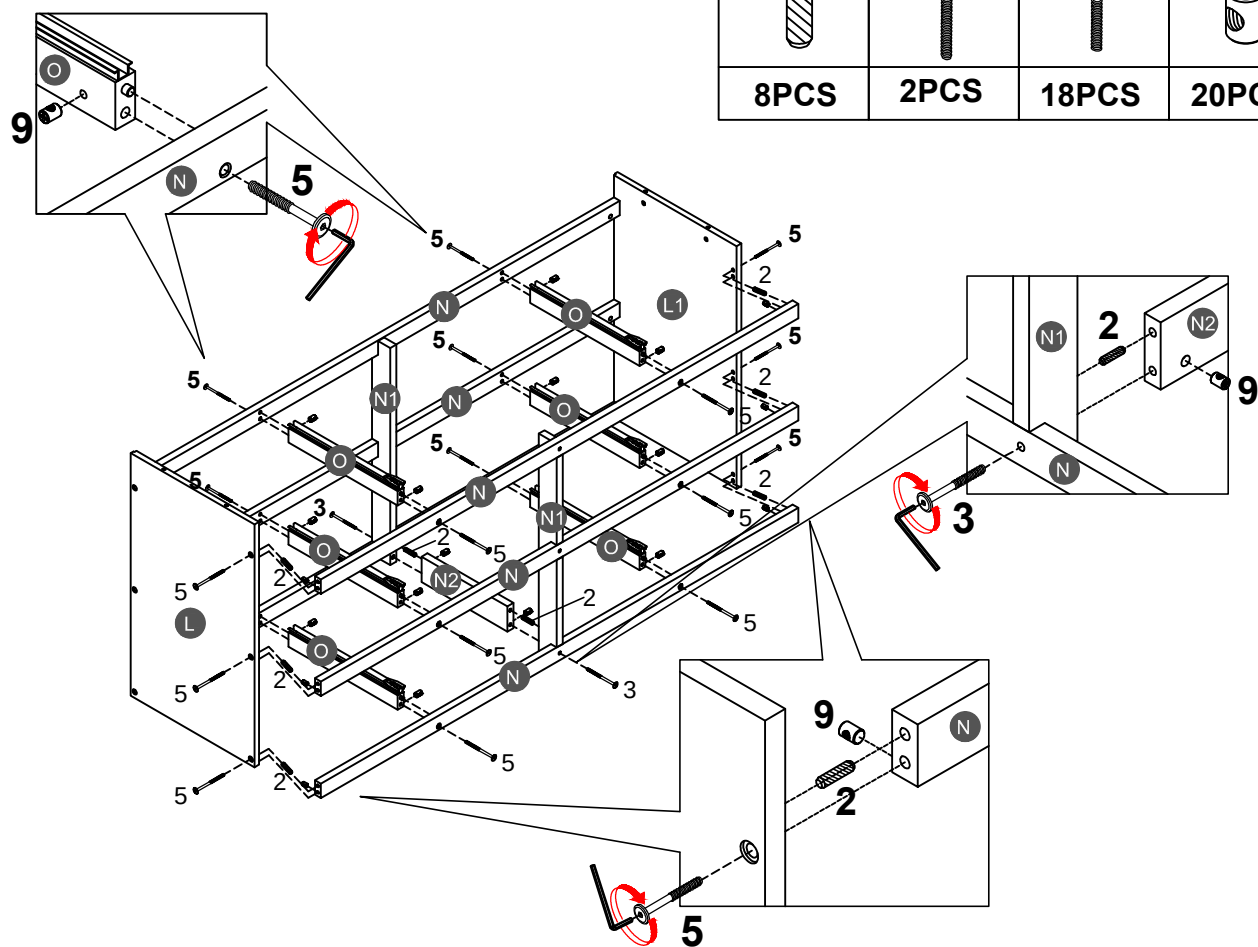


2		3		5		9	
8PCS		2PCS		18PCS		20PCS	

STEP 16:

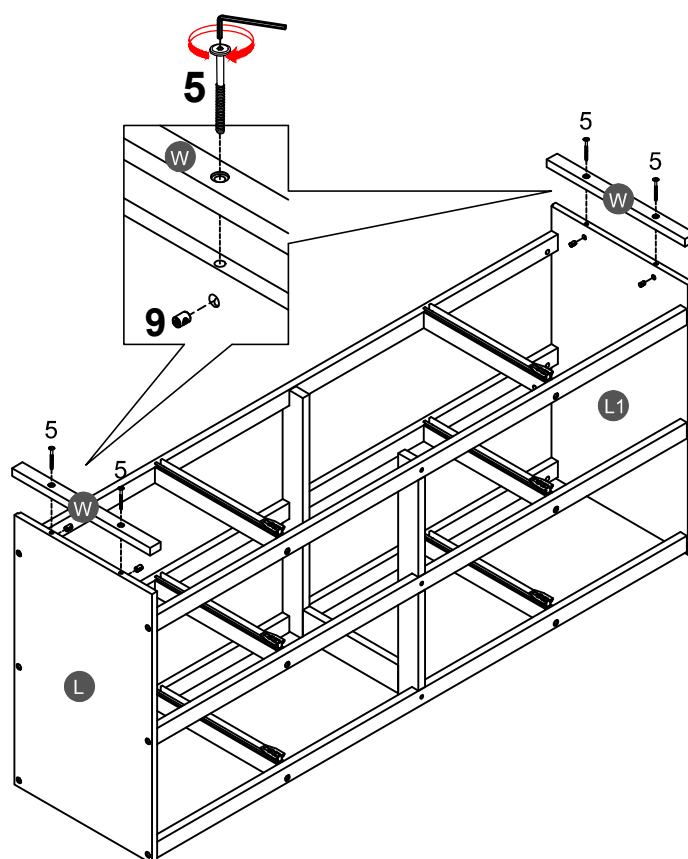


5	
4PCS	
9	
4PCS	

STEP 17:

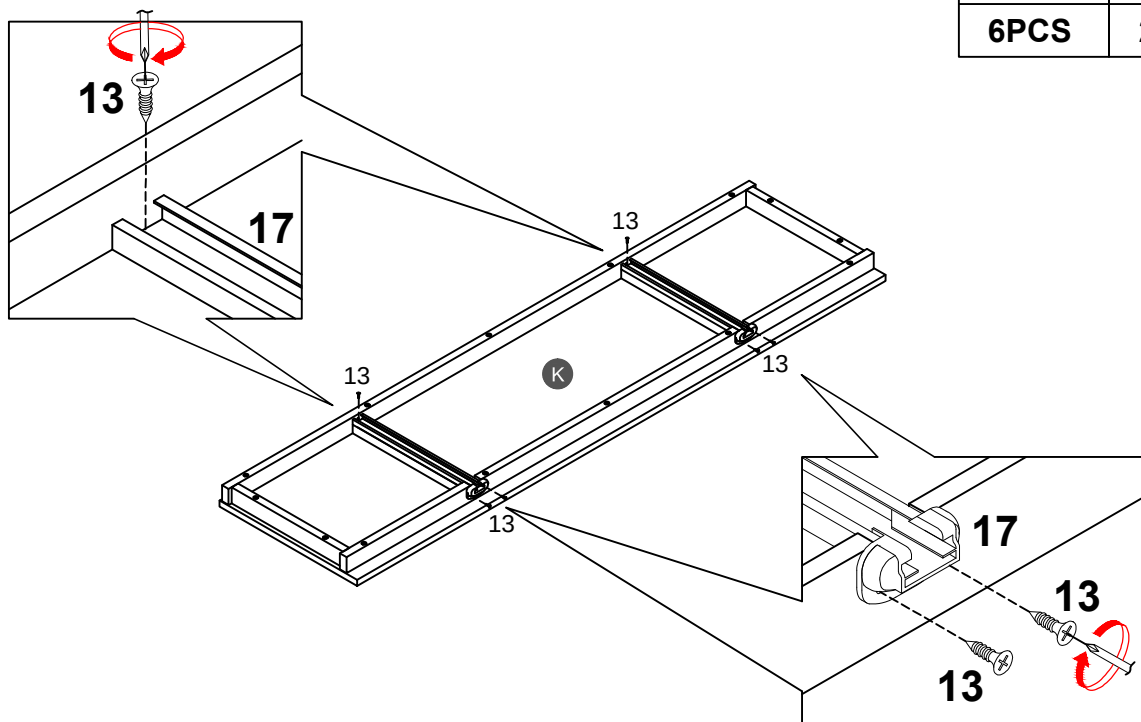


13		17	
6PCS		2PCS	

STEP 18:

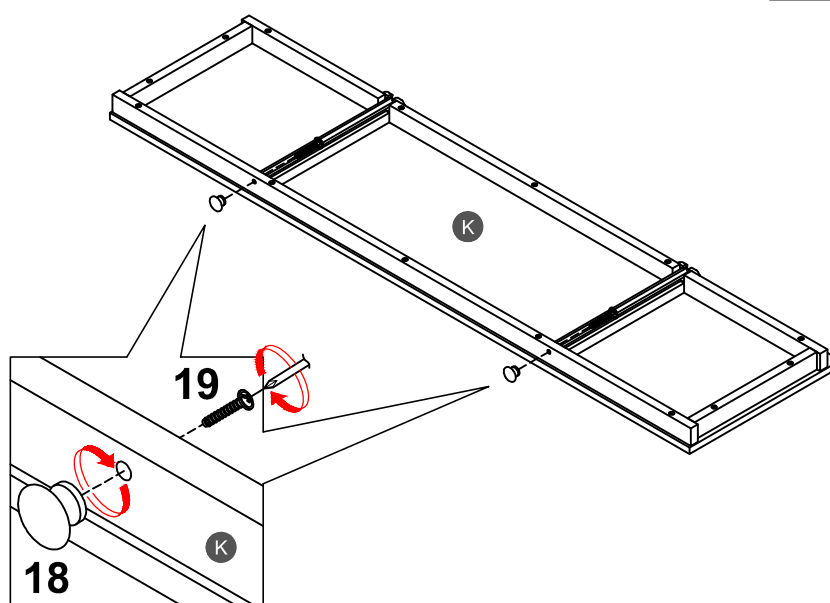


18		19	
2PCS		2PCS	

STEP 19:

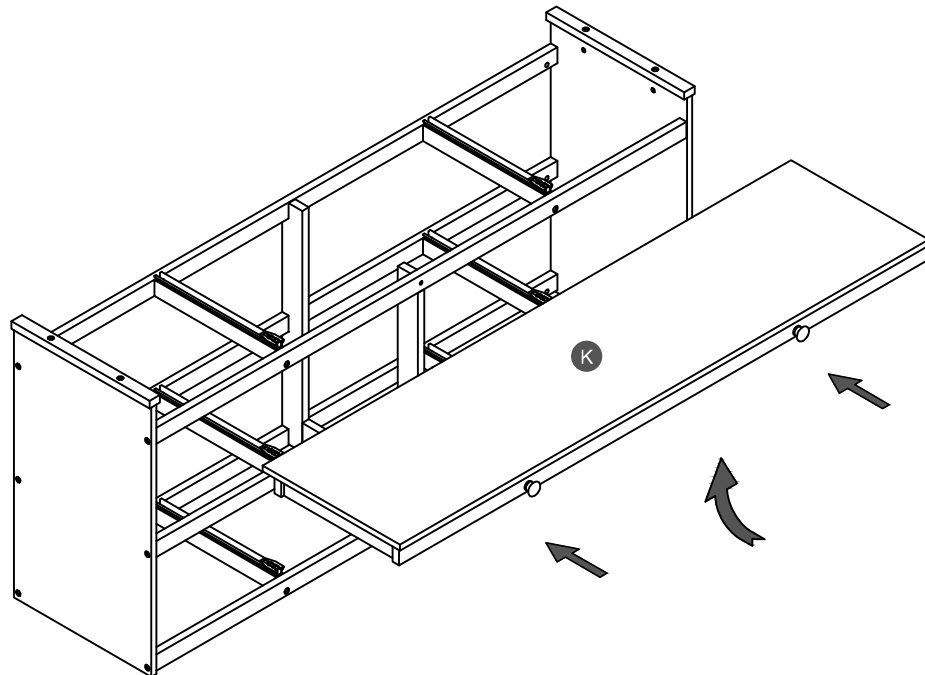


STEP 20:

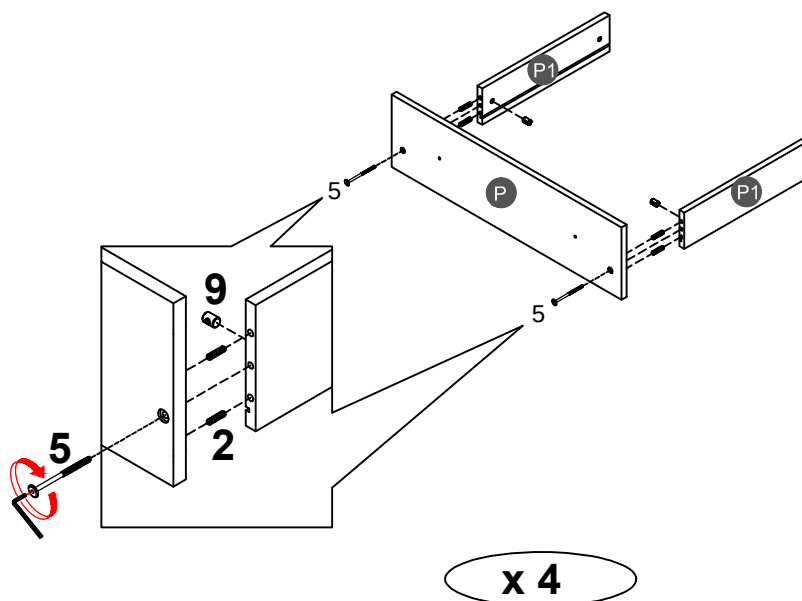


2		5	
16PCS		8PCS	
		9	
		8PCS	

STEP 21:

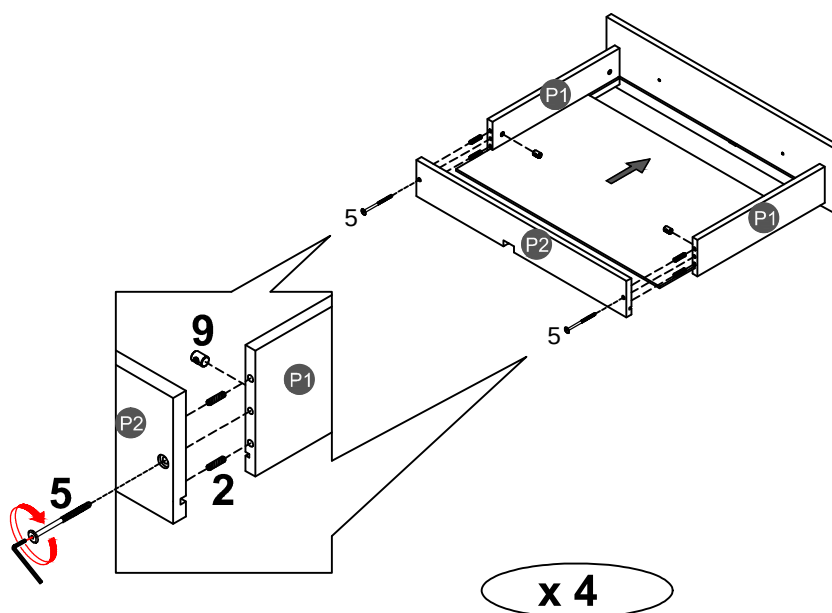


2		5	
16PCS		8PCS	
		9	
		8PCS	

STEP 22:

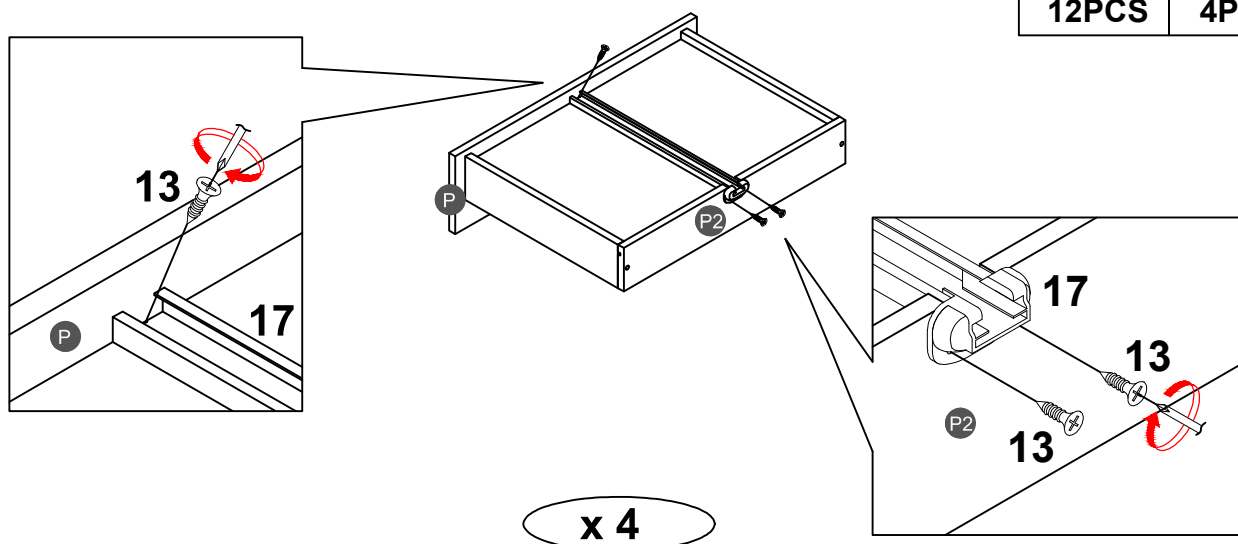


13		17	
12PCS		4PCS	

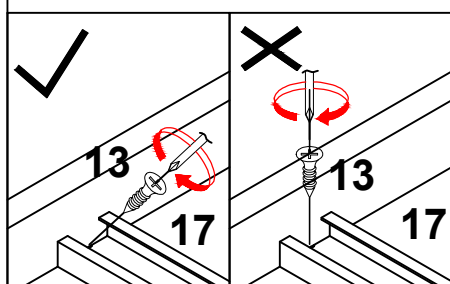


STEP 23:

18		19	
8PCS		8PCS	

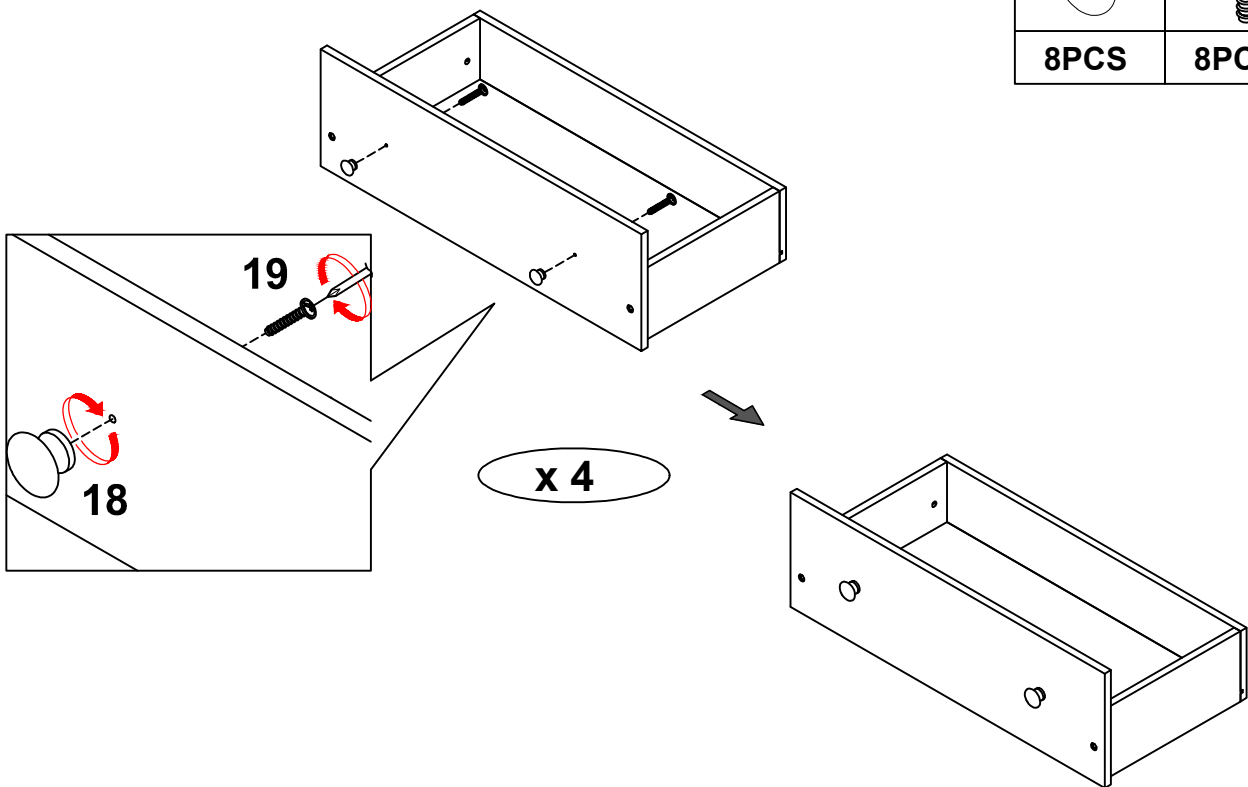

STEP 24:

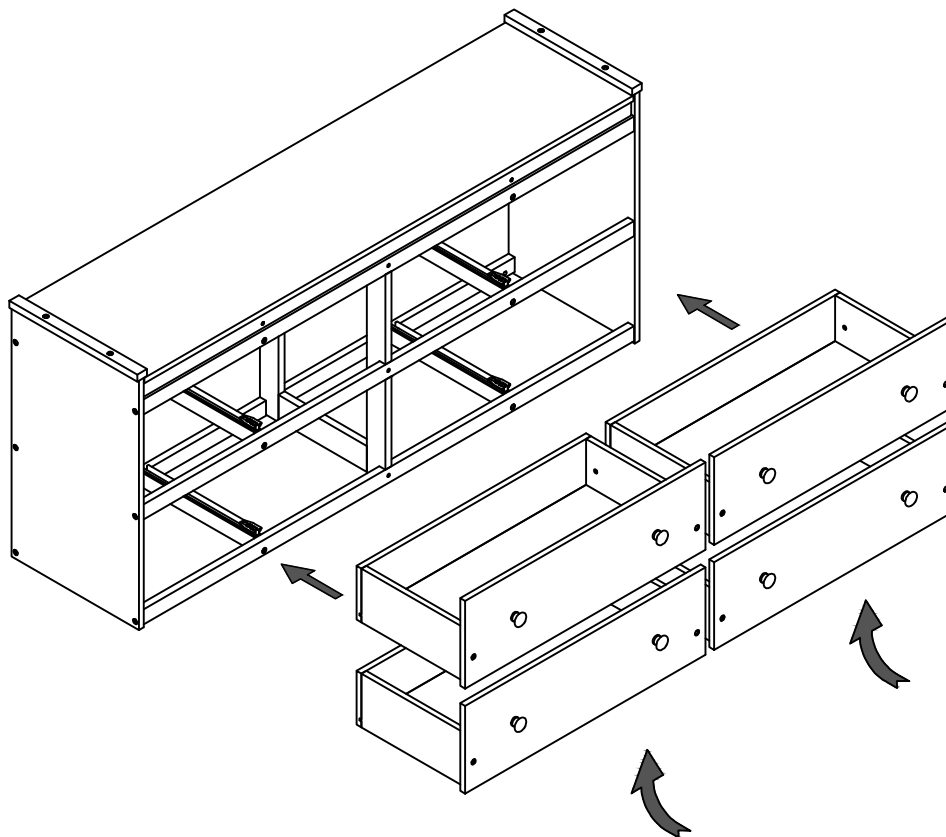


STEP 25:


14



32PCS

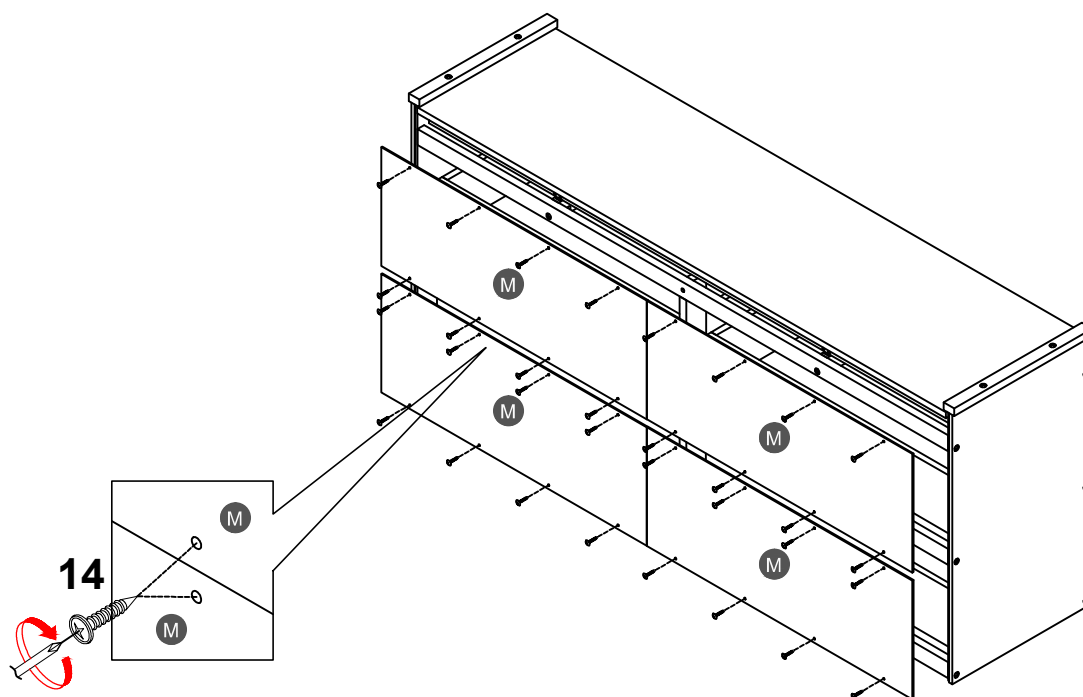

STEP 26:

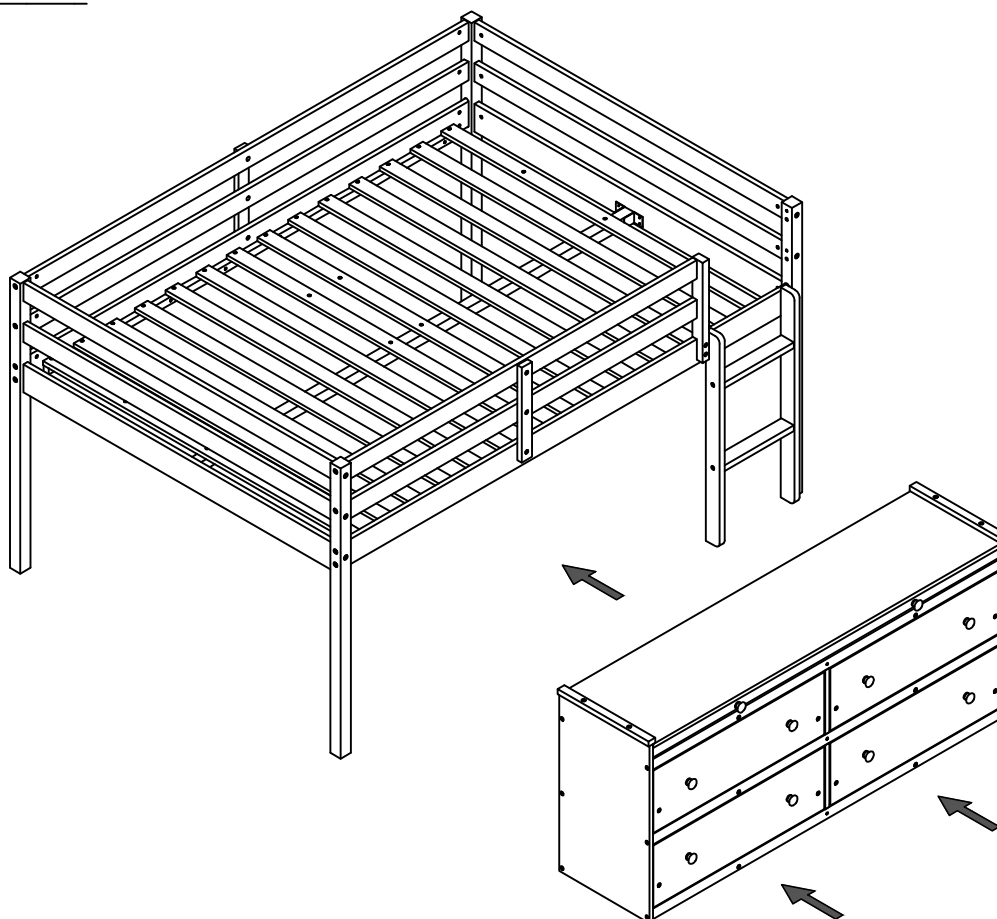


STEP 27:

10



8PCS

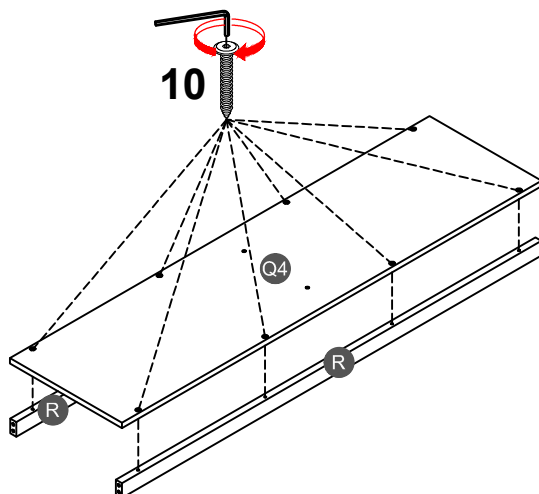


STEP 28:


10




2PCS

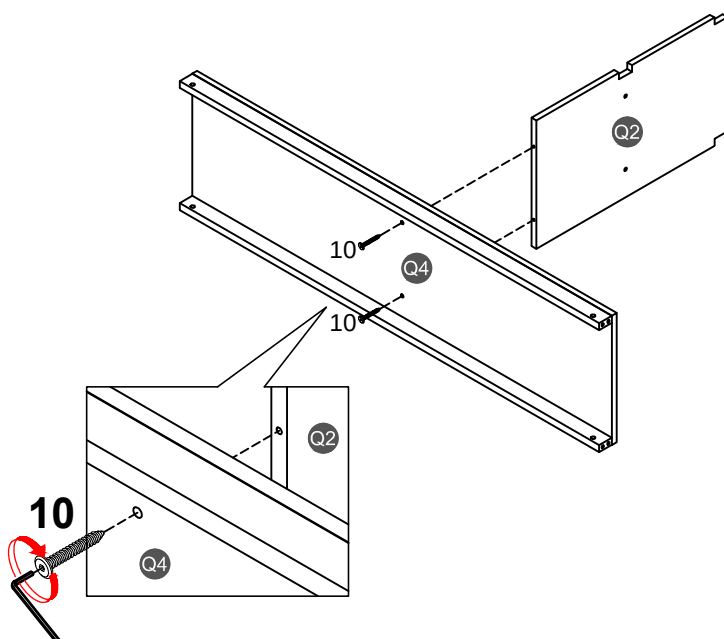


STEP 29:

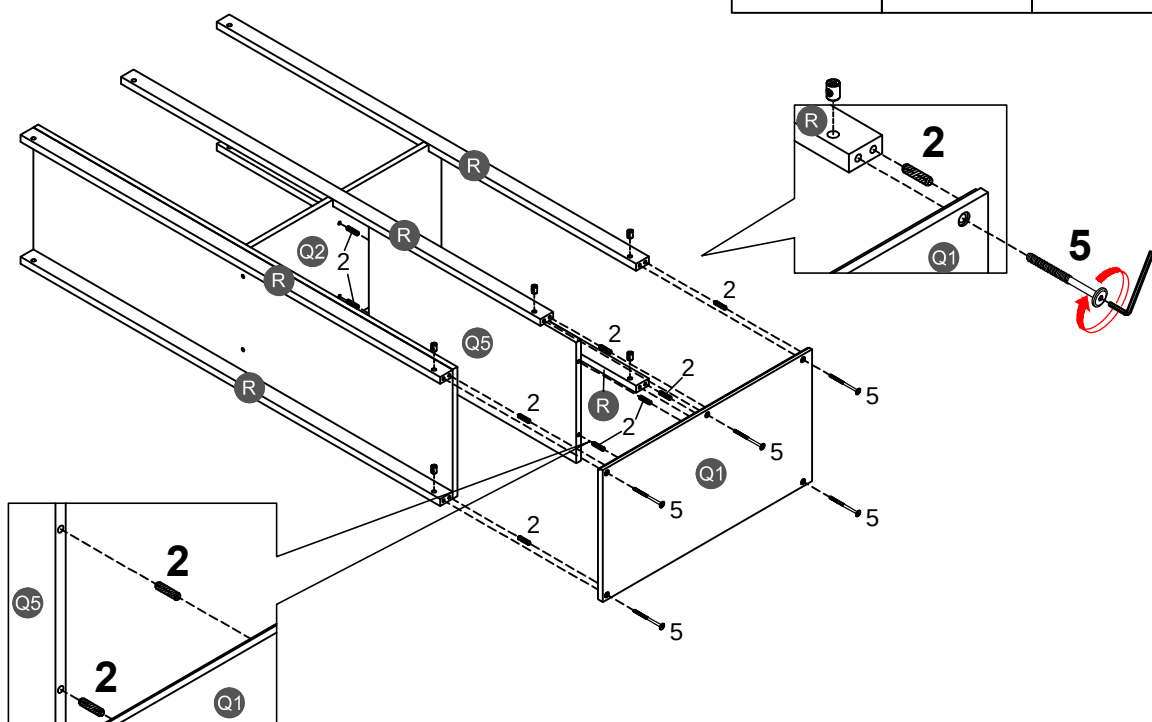

STEP 30:

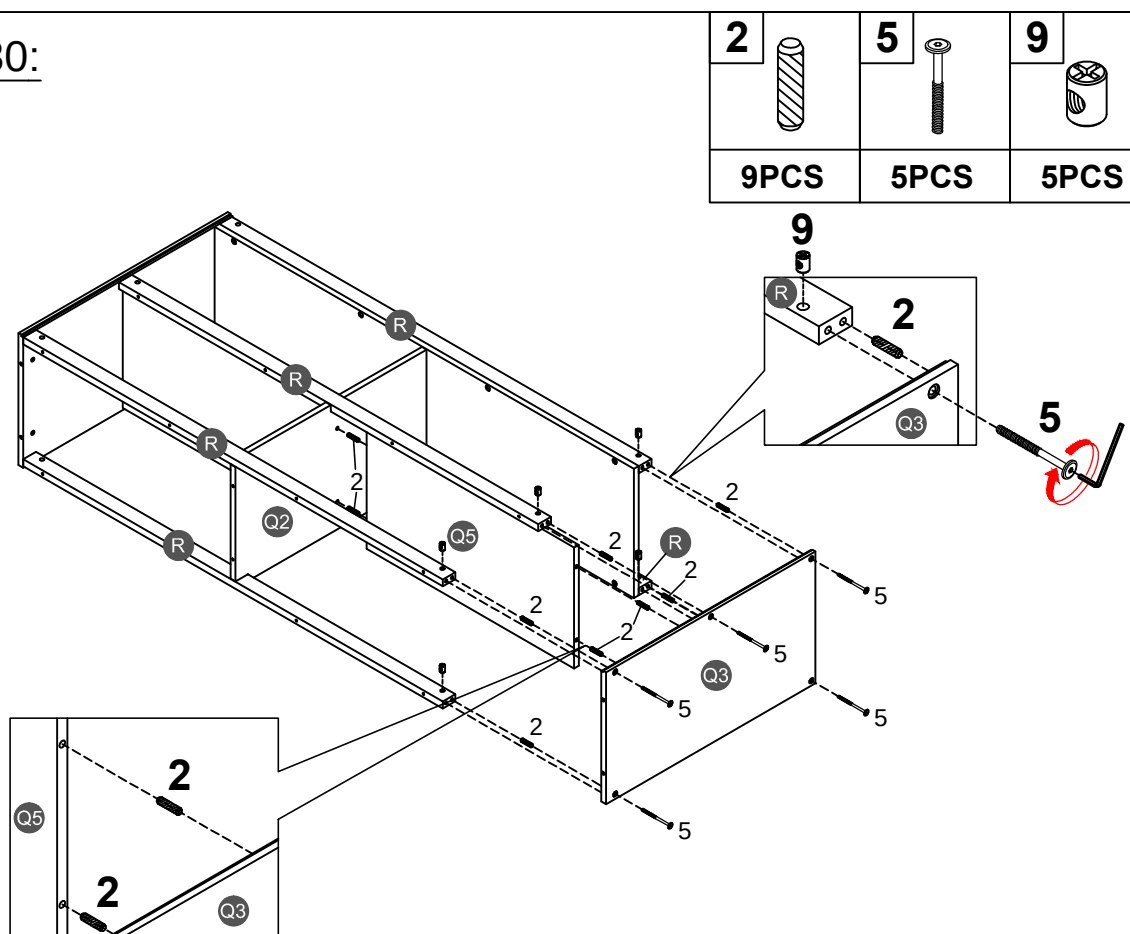


STEP 31:

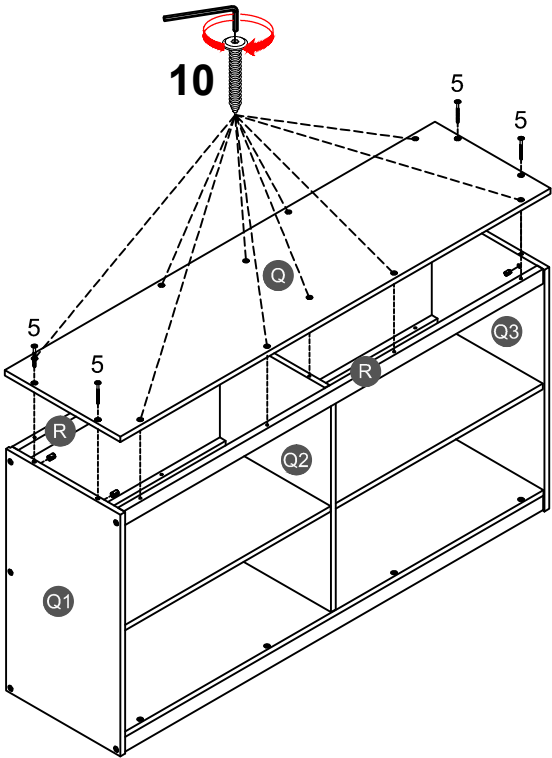


5		9	
4PCS		4PCS	
		10	
		10PCS	

STEP 32:

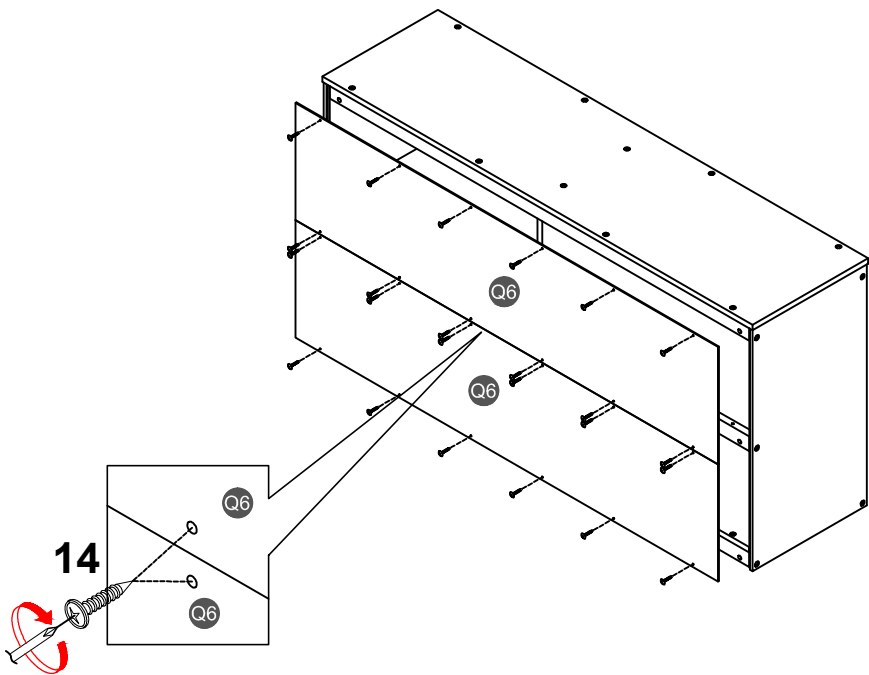


14	
24PCS	

STEP 33:

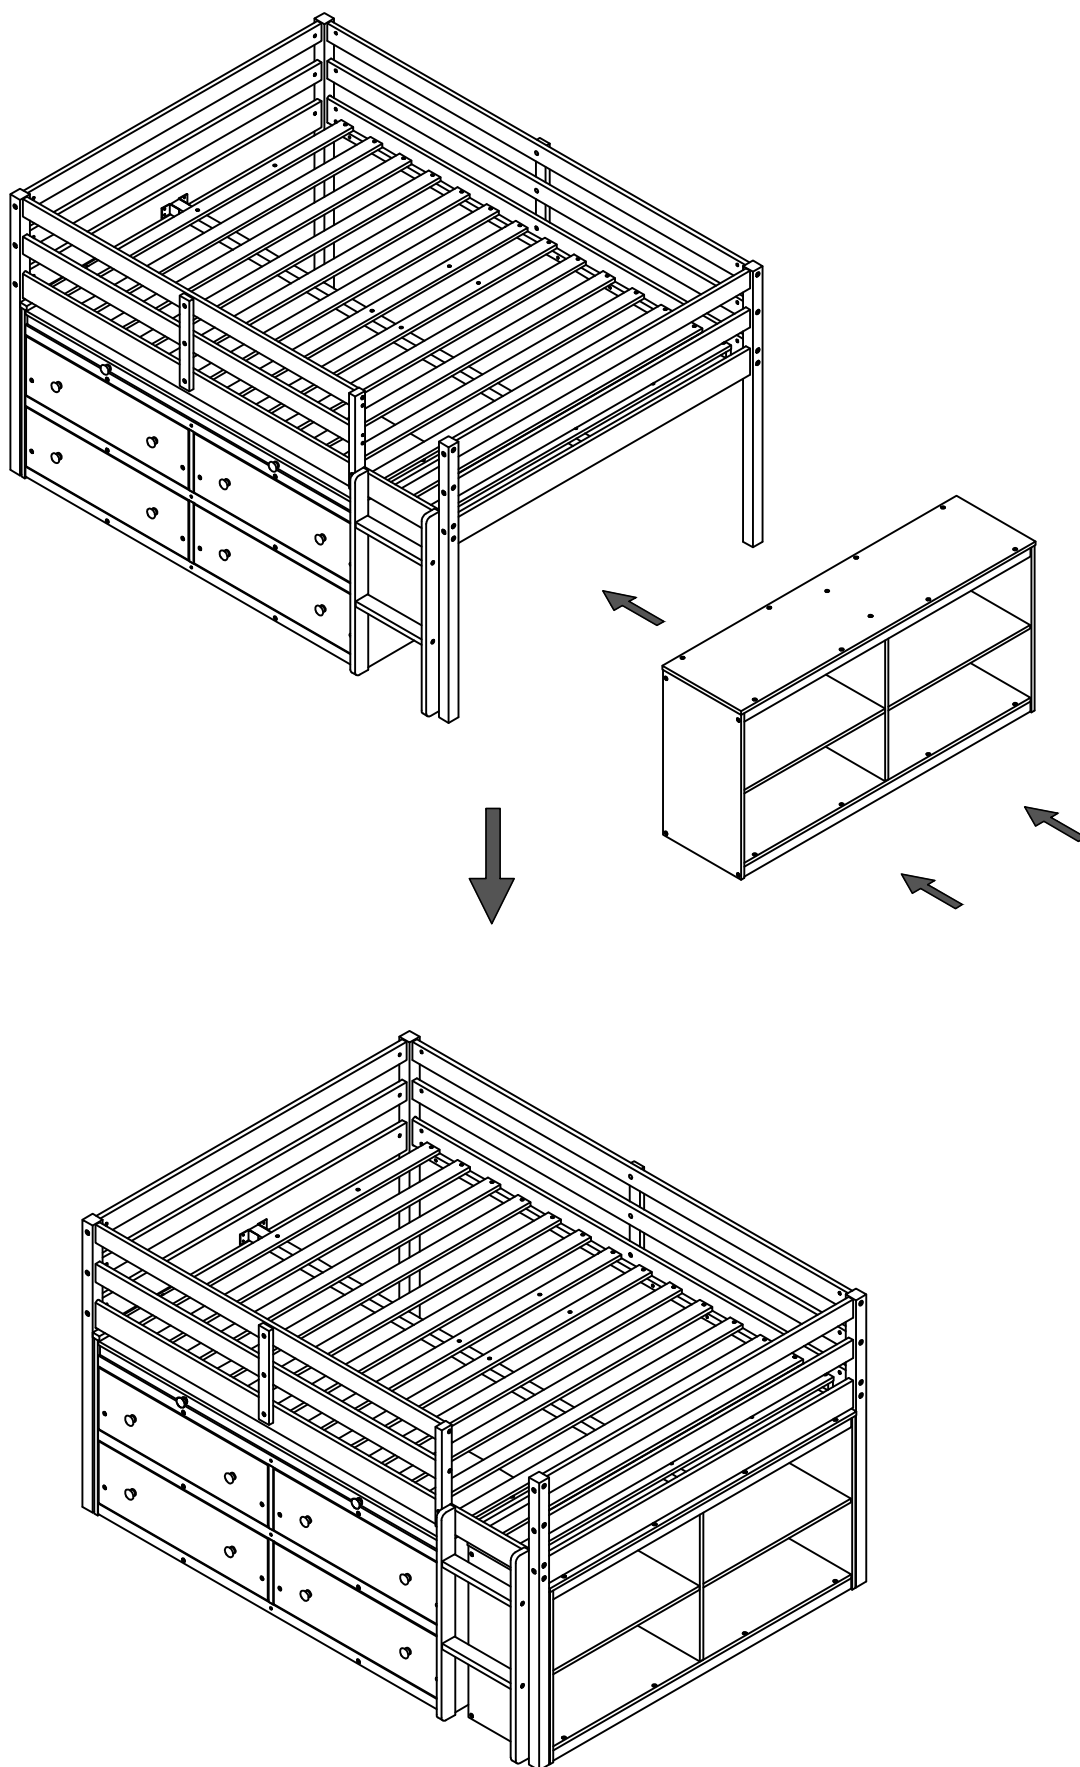

STEP 34:

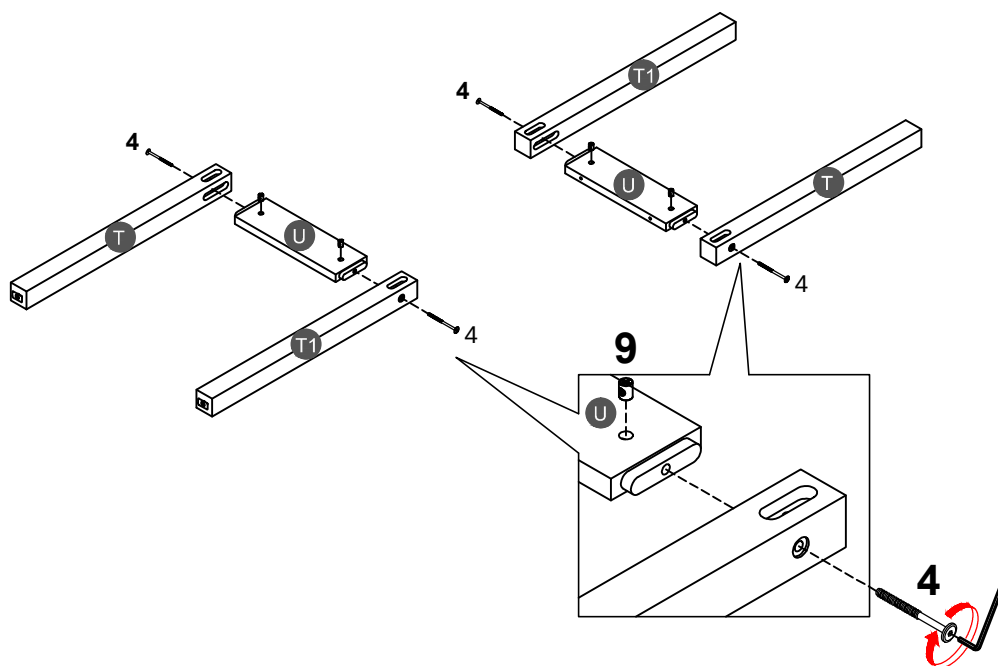

4




4PCS

9



4PCS

STEP 35:

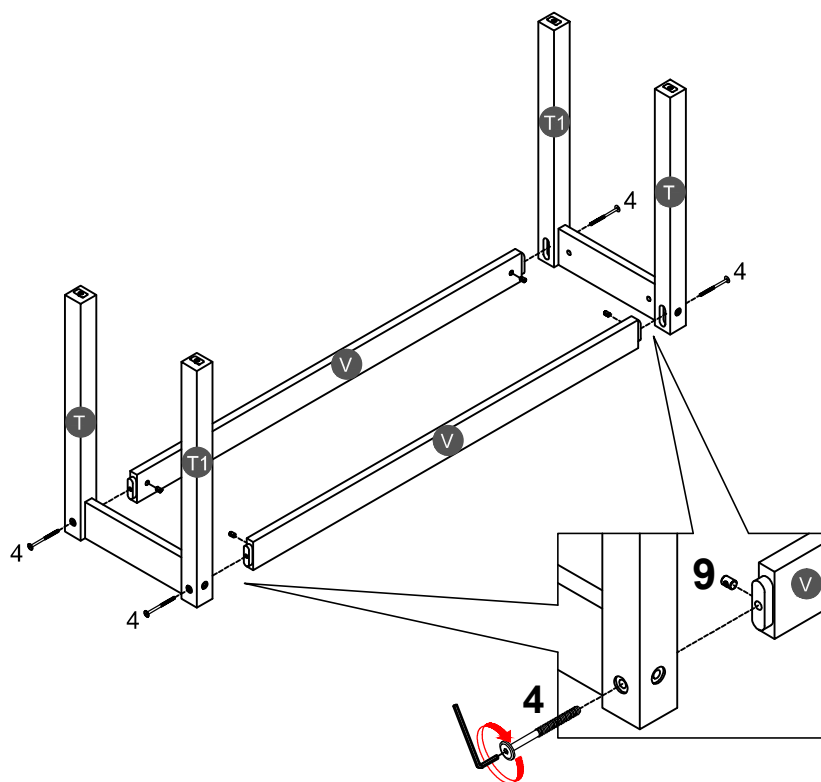

4





4PCS

9




4PCS

STEP 36:

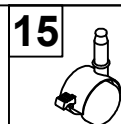
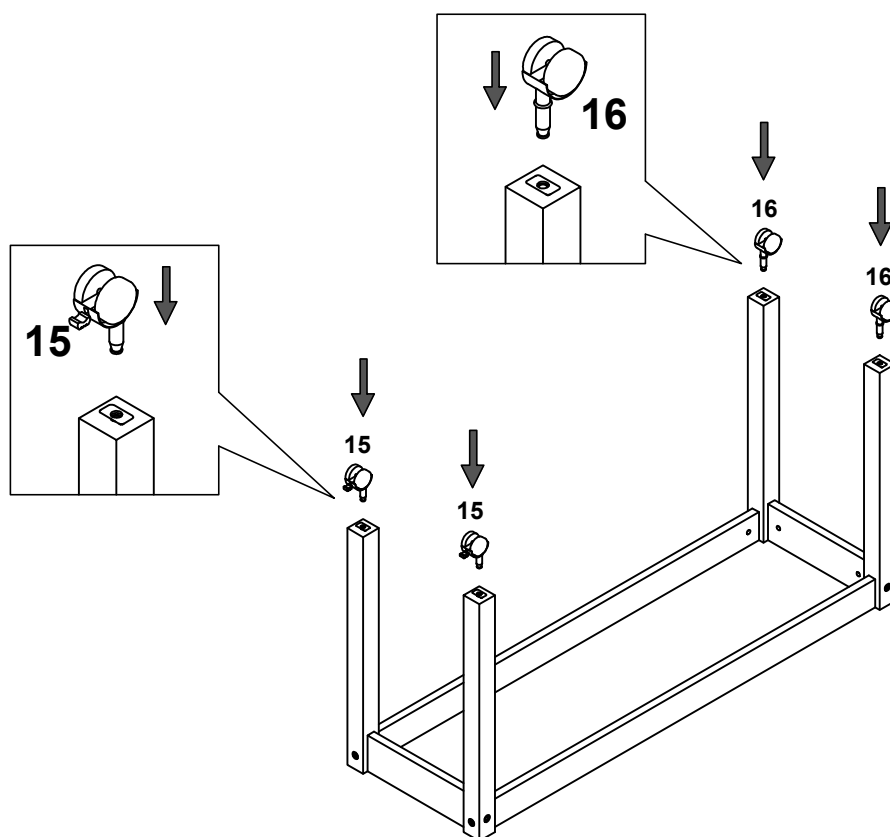


2PCS

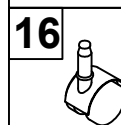


2PCS

STEP 37:

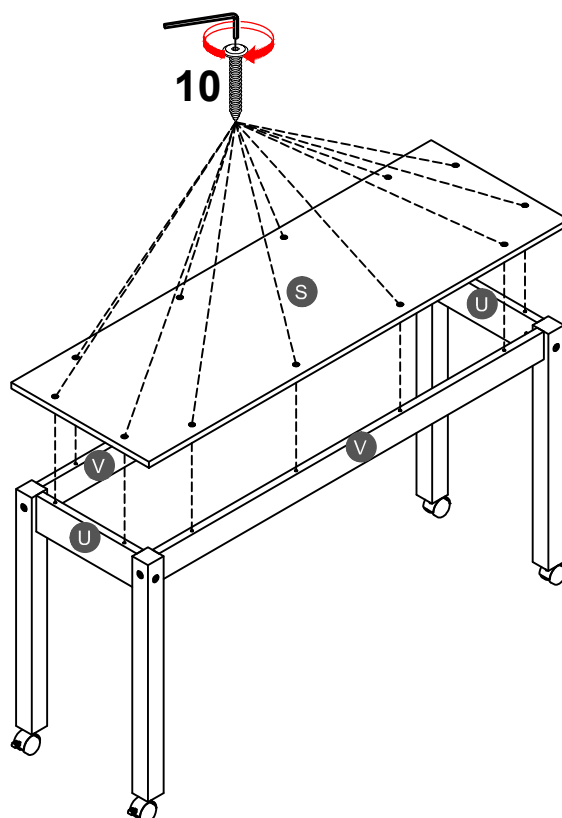

12PCS

STEP 38:

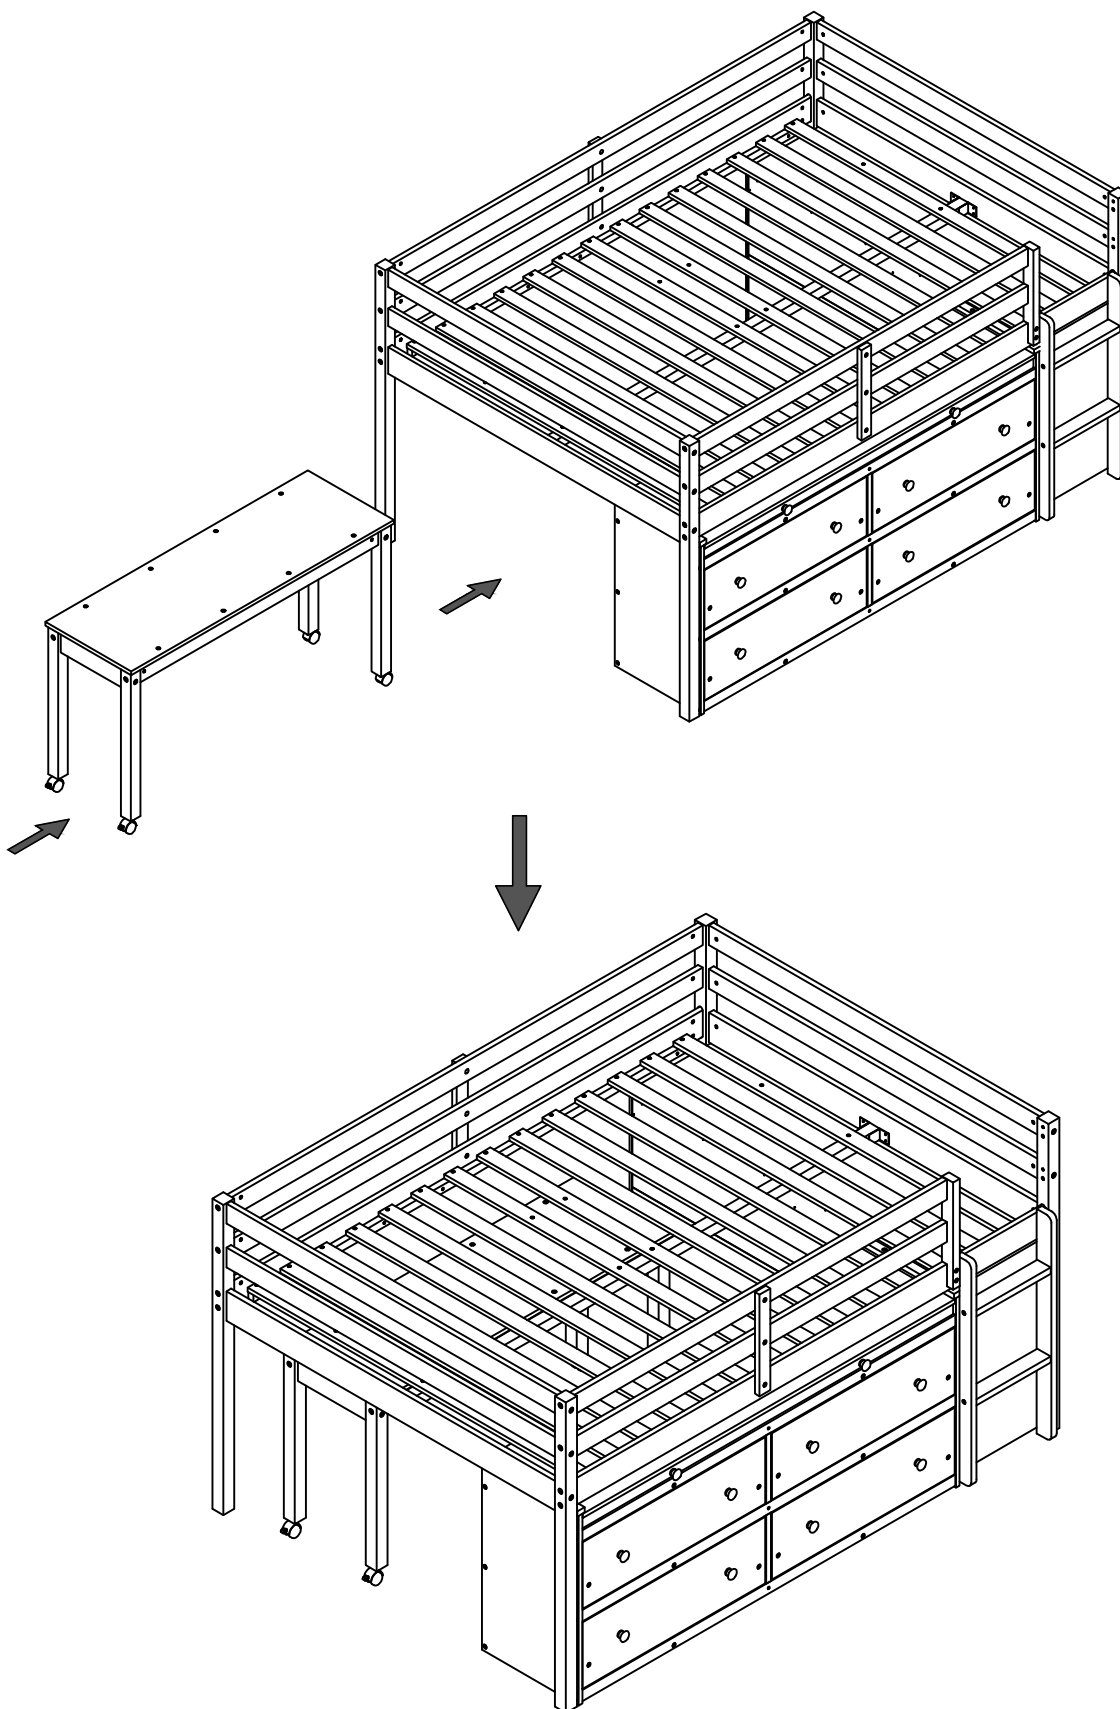

Make sure to tighten all the screws of the bed.