


W252113553  
W252113554

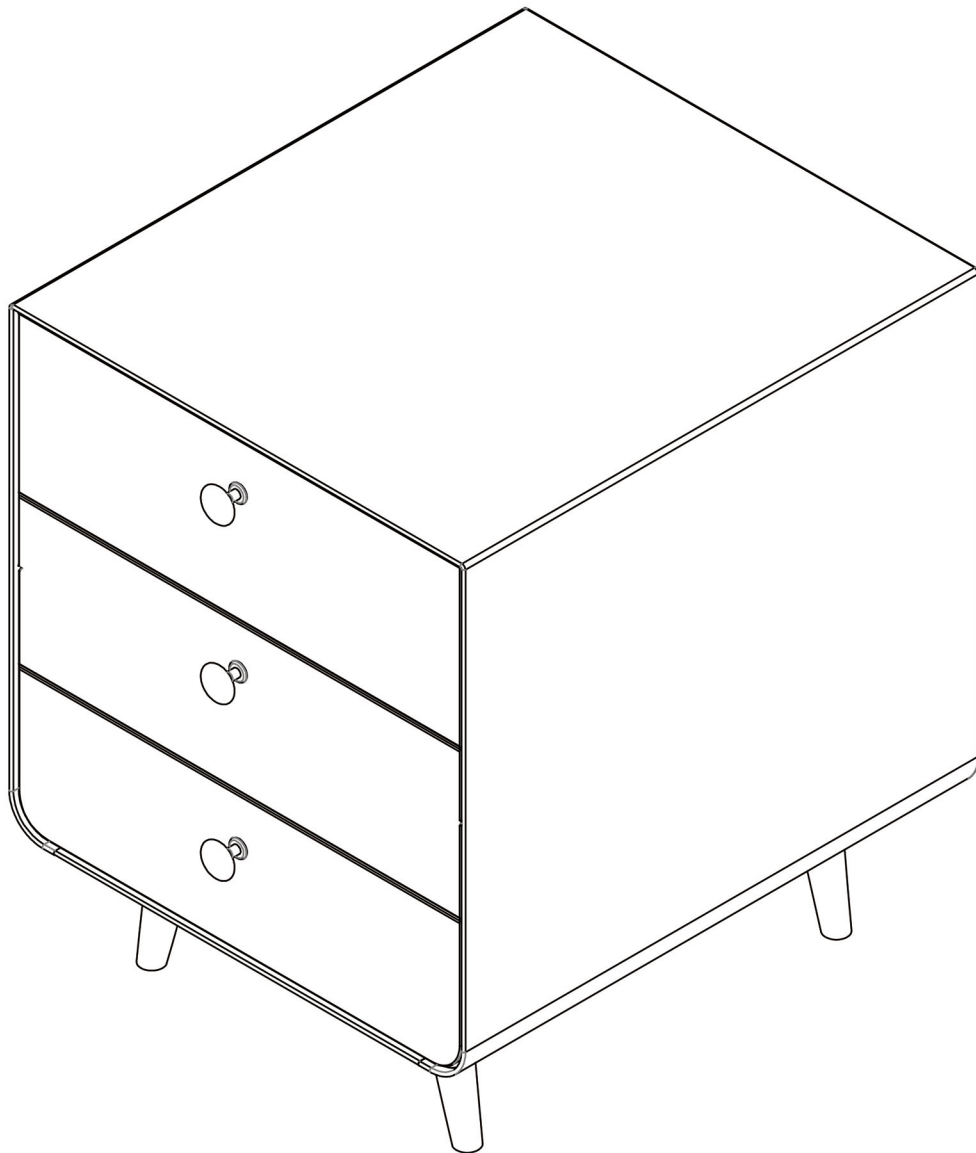





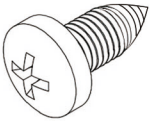
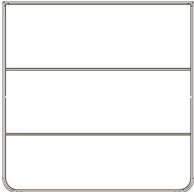
BEDSIDE CABINET

**⚠ Attention:** If you notice any fingerprints on the surface please know that they were left there during manual lifting. Simply clean the surface using a cloth and rubbing alcohol.



1. Gather and organize all required parts before assembling.
2. Assemble cabinet on a flat, clean, soft surface.

## Tools Required For Assembly

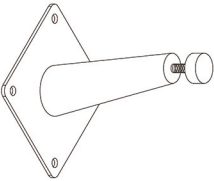


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>a</b>		<b>X4</b>	<b>d</b>		<b>X3</b>
<b>b</b>		<b>X5</b>	<b>e</b>		<b>X1</b>
<b>c</b>		<b>X20</b>	<b>f</b>		<b>X1</b>


STEP 1

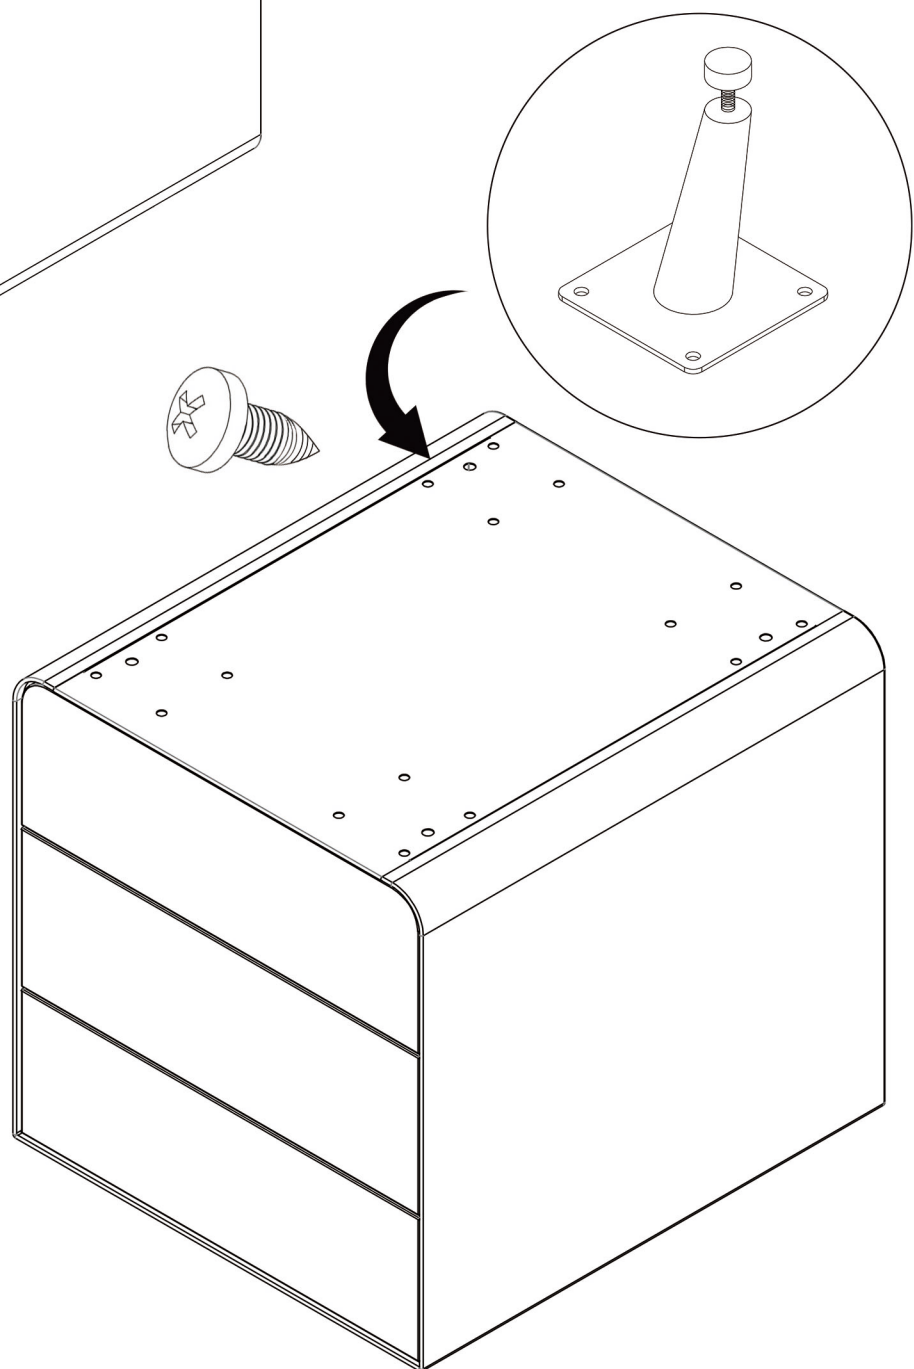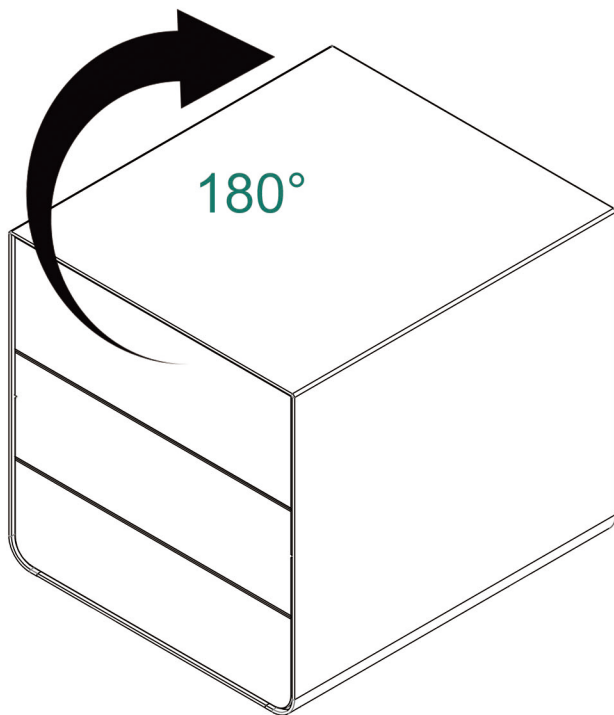

STEP 2

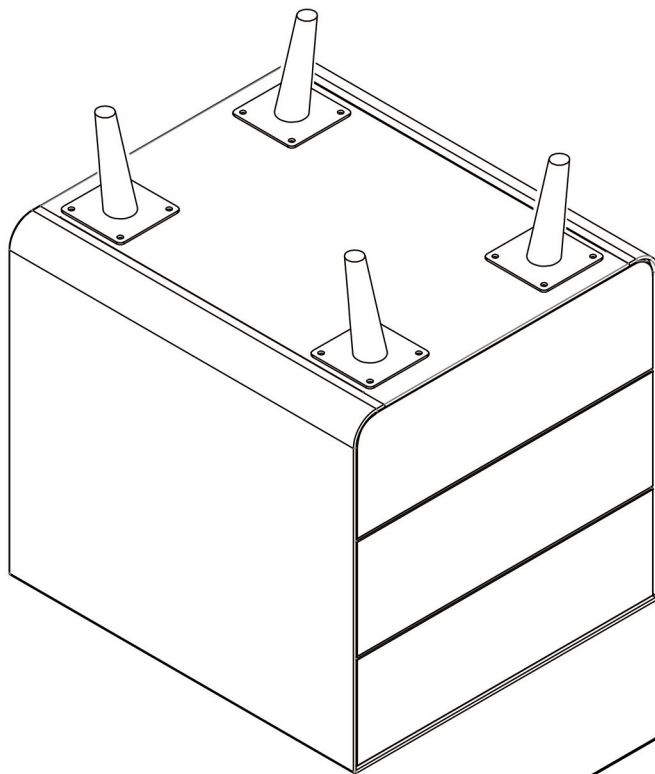

180°

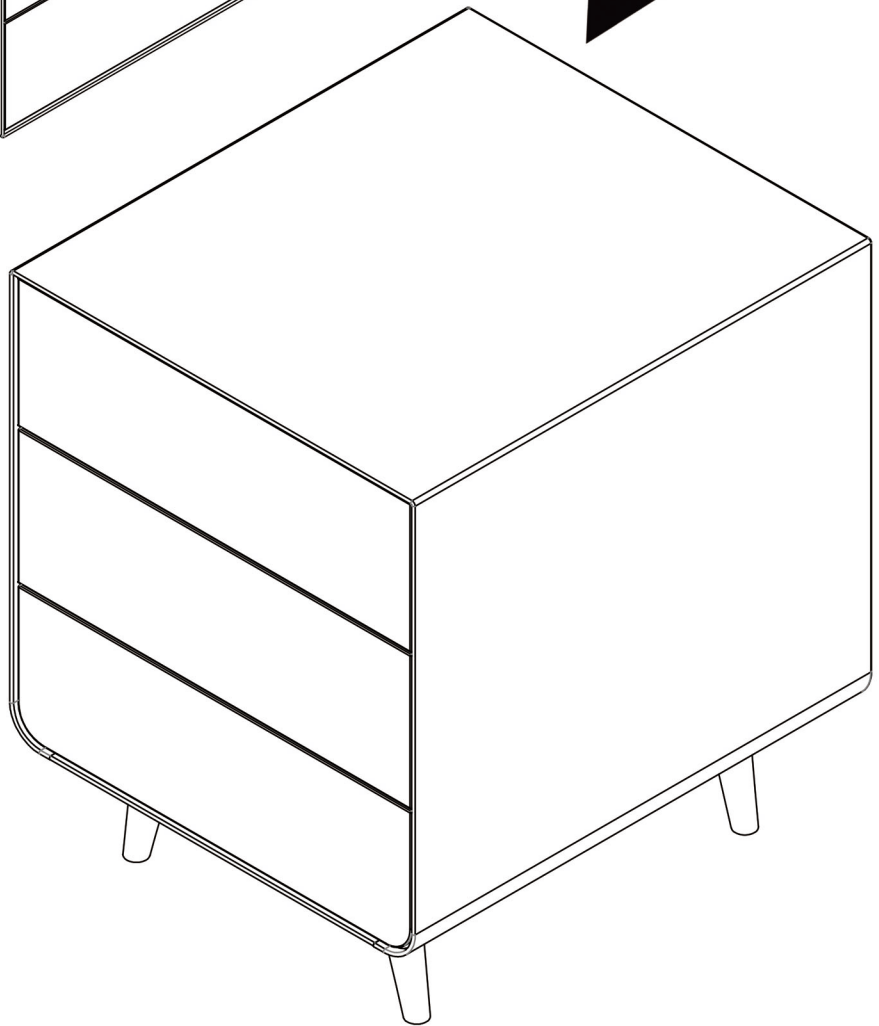

### STEP 3

