


ASSEMBLY INSTRUCTION

DEAR CUSTOMER

Thank you for purchasing our product. Please read this assembly instruction carefully before assemble and use, and keep it for future reference.


Tips:

1. Please check whether the outer packaging is intact before opening to avoid damage during transportation.
2. Assemble this product on a flat and clean surface to avoid scratching. It is recommended for one or two people to assemble.
3. After unpacking, please confirm in time all the parts and hardware are included.
Please do not discard any packaging, if for any reason you need to return this product, it must be returned in its original packaging.
4. Please keep small parts out of reach of children or pets to prevent them from swallowing.
5. Please read the installation steps in the Instruction carefully and follow the steps in the Instruction to assemble.

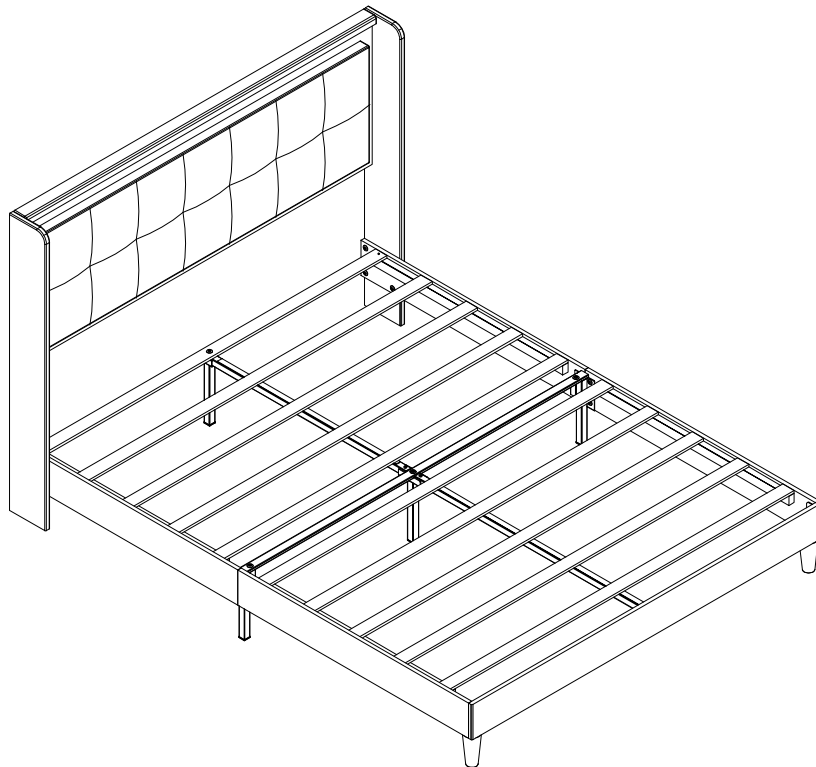

PAST LIST


M
6
*
5
0
m
m



x4

Ⓐ Screw A


M
6
*
3
5
m
m



x6

Ⓑ Screw B


M
6
*
1
8
m
m



x12

Ⓒ Screw C


4
*
3
0
m
m



x2


Ⓓ Crossed screw

x30




Ⓔ Metal Gasket

x1



Ⓕ M4 Hexagonal Wrench


M
6
*
2
5
m
m



x2

Ⓖ Screw G


M
8
*
5
0
m
m



x1

Ⓗ Screw H


M
8
*
3
5
m
m



x5


Ⓘ Screw I

x2




⑨ Side Mid-leg

x2




⑩ Back Leg

x1

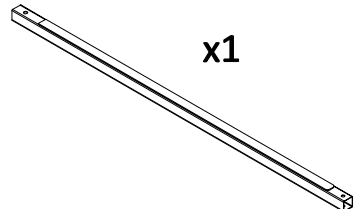


⑪ Center Front Pipe

x1

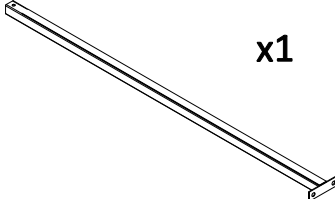


⑫ Center Back Pipe

x1

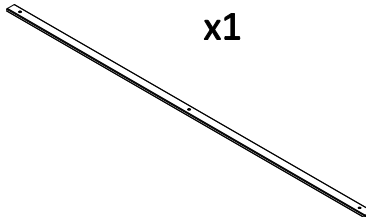


⑬ Cross-connecting Pipe

x1



⑭ Front support leg


x1




⑮ Middle Support Leg

Additional hardwares
will be provided.


Main support

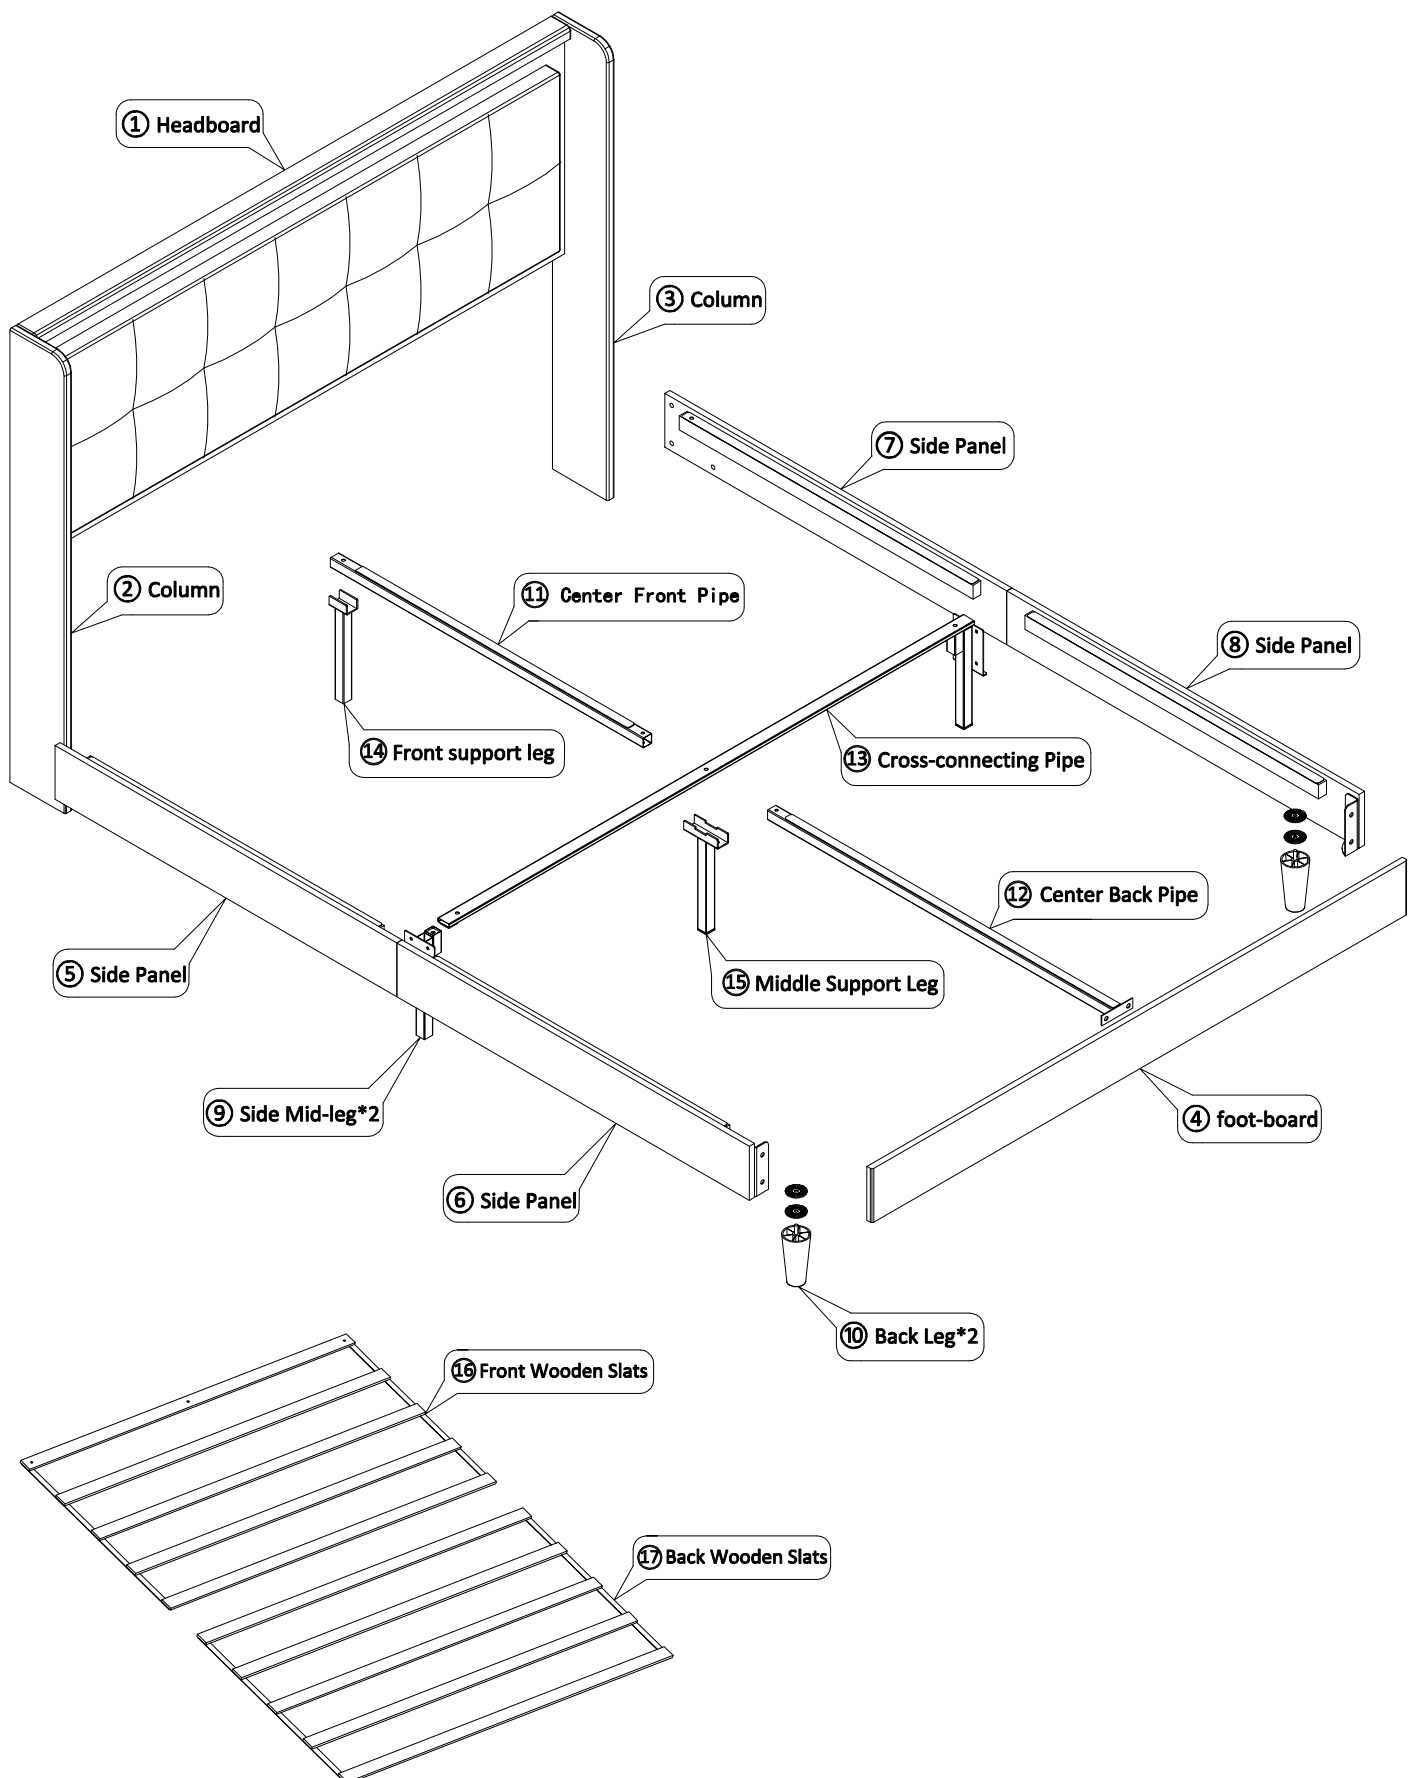



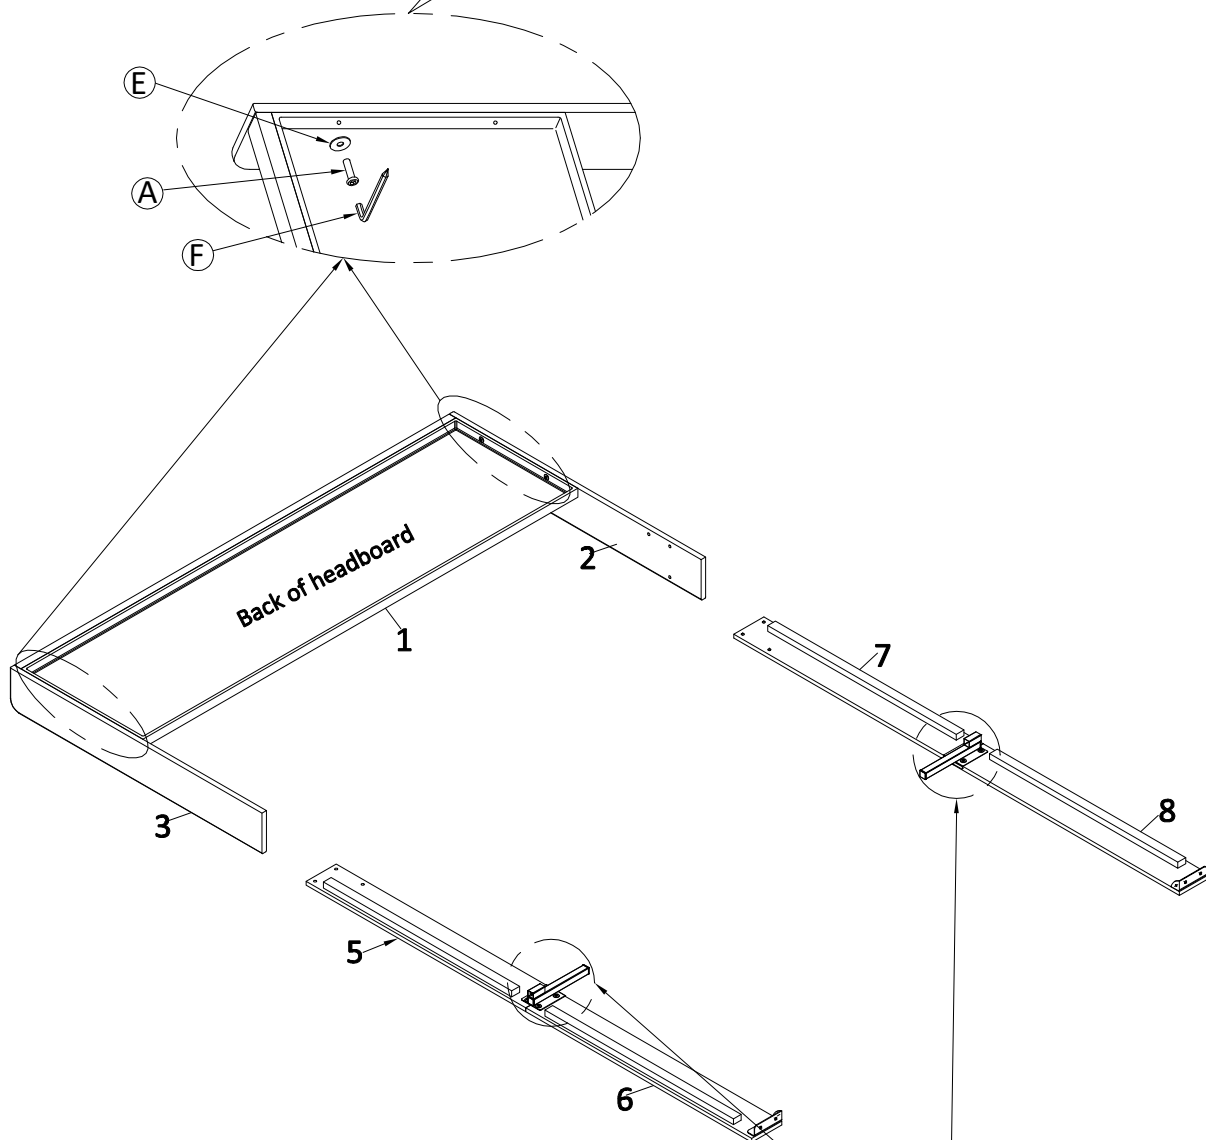

Step1 Fasten the (1) headboard and (2)(3) columns with screw A and (E) metal gaskets using the (F) m4 wrench.

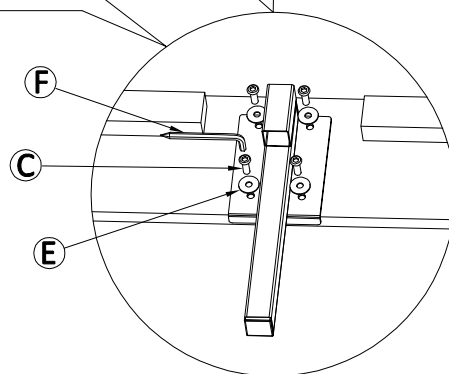


Step2 Fasten the (9) side mid-legs to the two side panels with screw C and metal gaskets using the wrench.




-  x2
-  x12
-  M6*50MM x4
-  M6*18MM x8


Step3 Fasten the side panels to the (2)(3)columns with screw B and metal gaskets using the wrench.

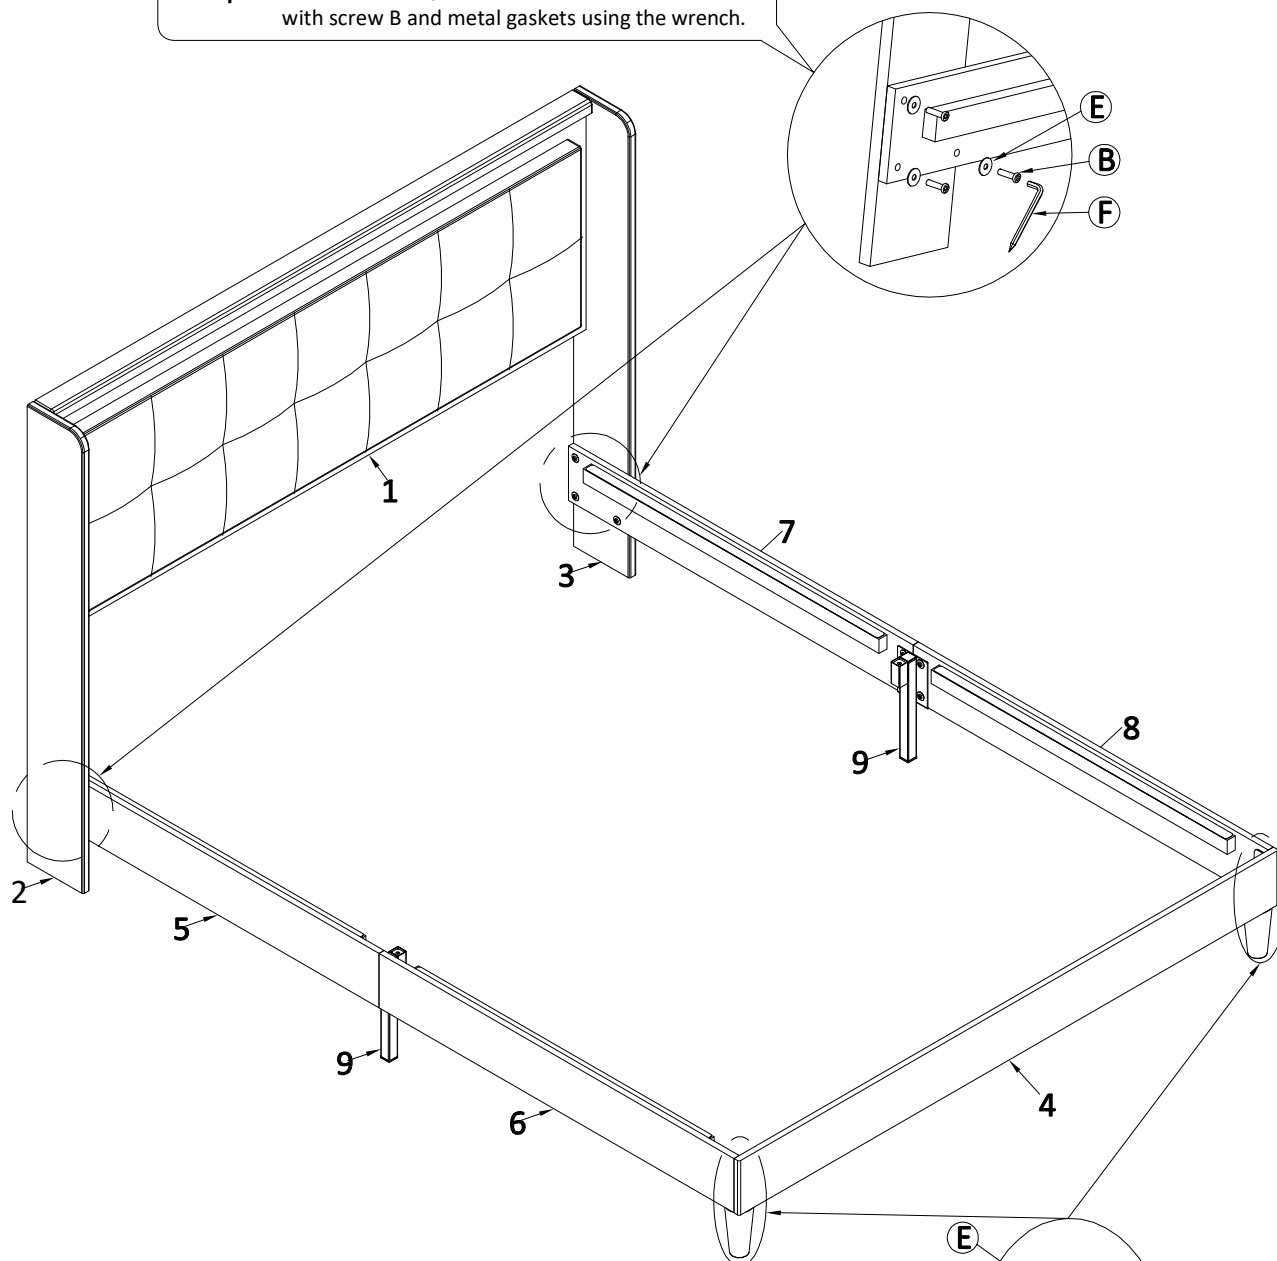



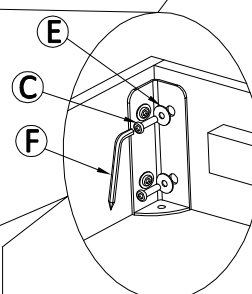


Step4 Fasten the (4)foot-board and the side panels with screw C and metal gaskets using the wrench.

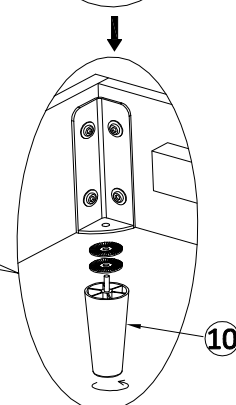




Step5 Remove the protective caps from the back legs, then screw the back legs to the bed.



-  M6*35MM x6
-  M6*18MM x4
-  x10
-  x2

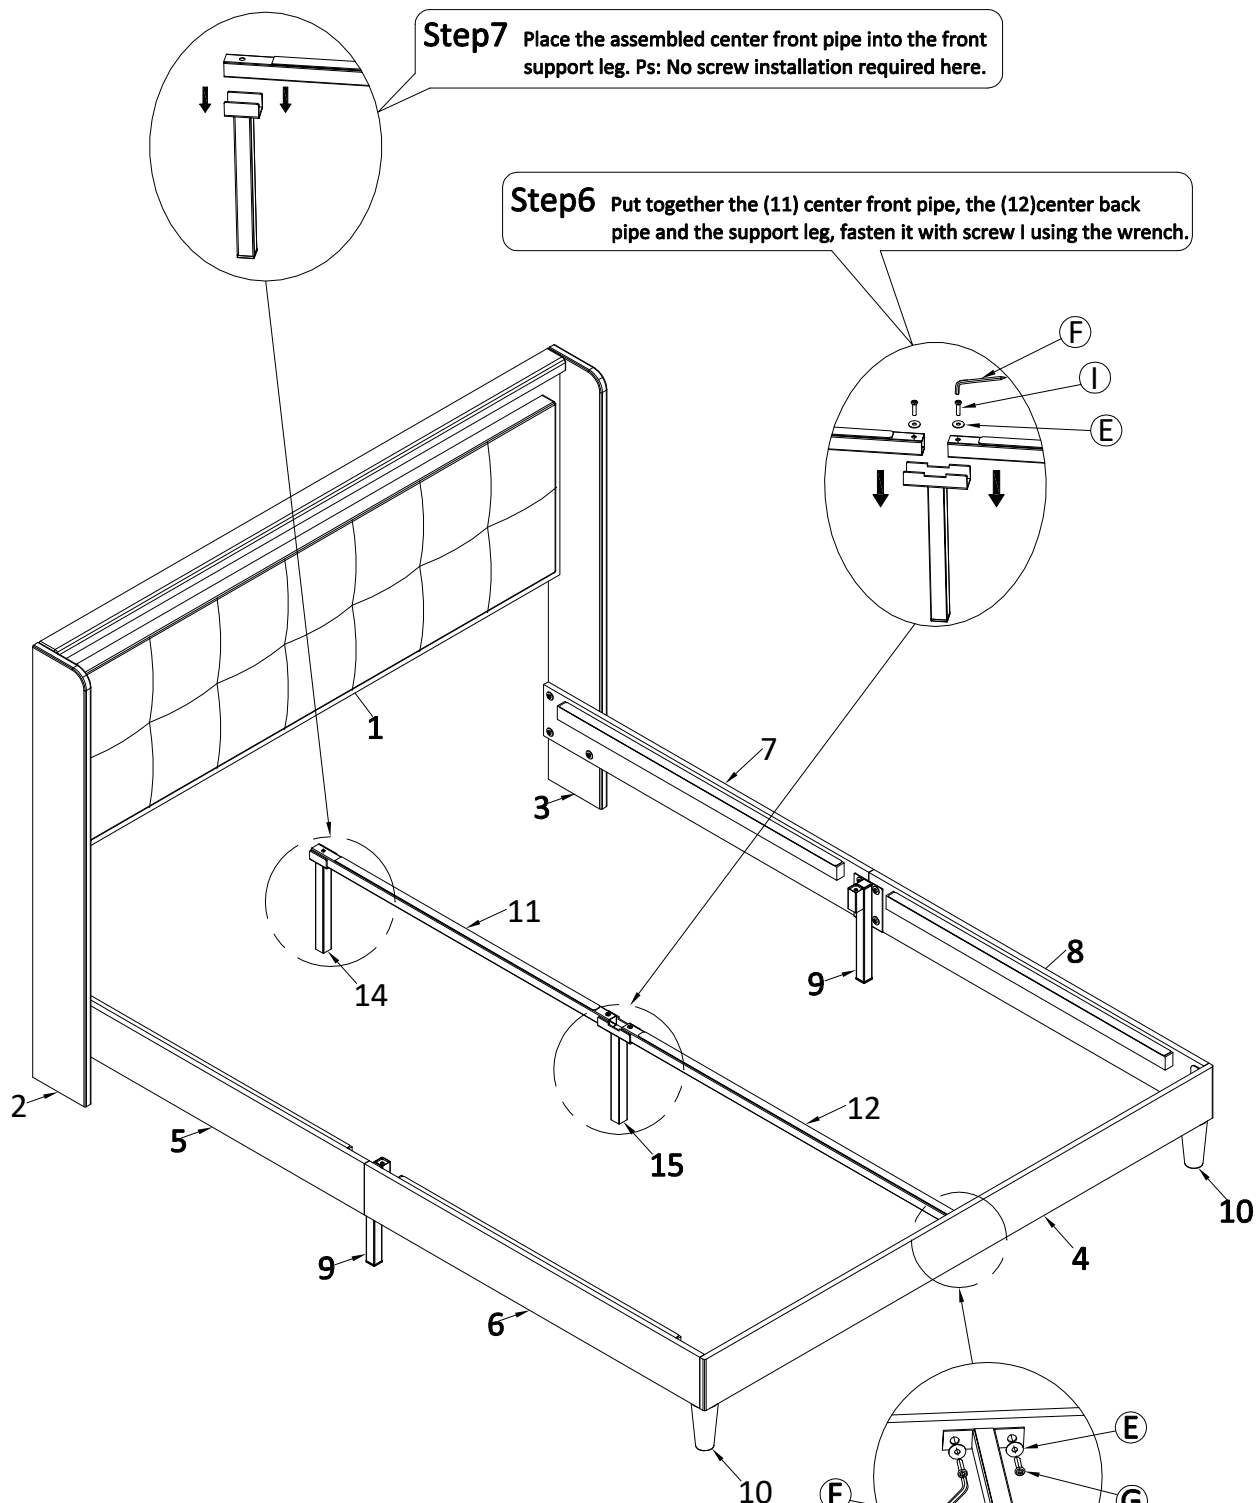


Step9 Tighten both ends with screw I using the wrench.

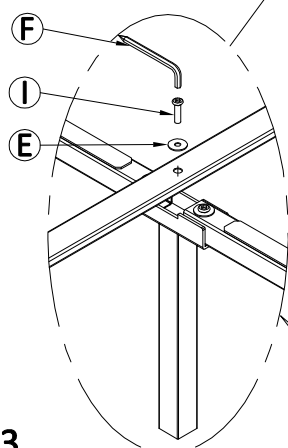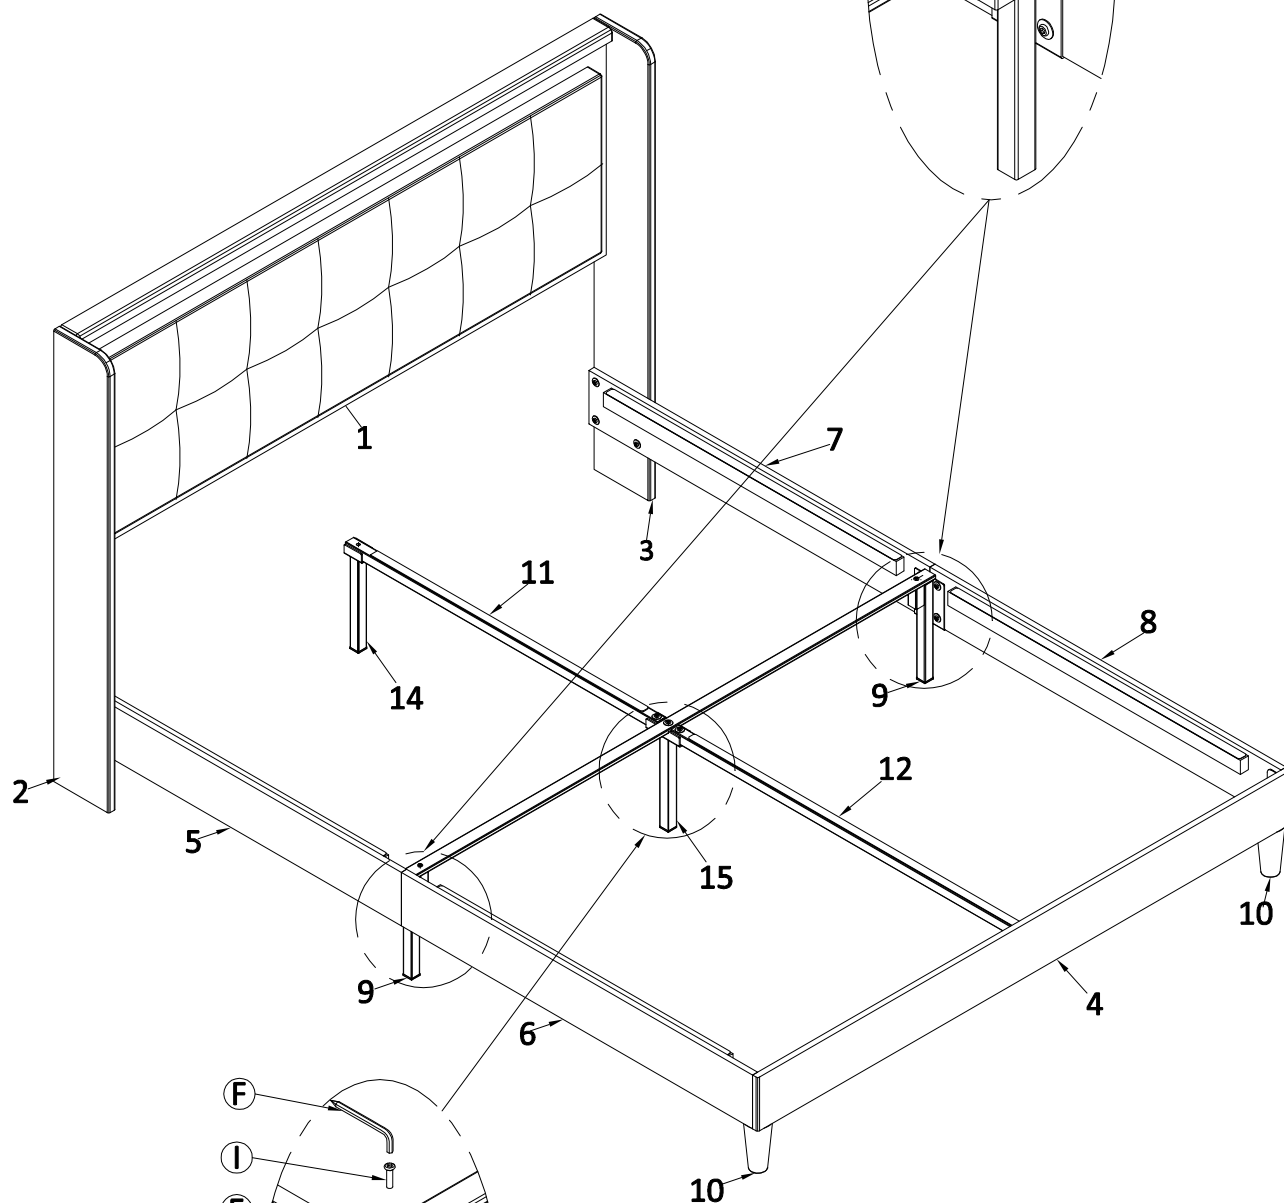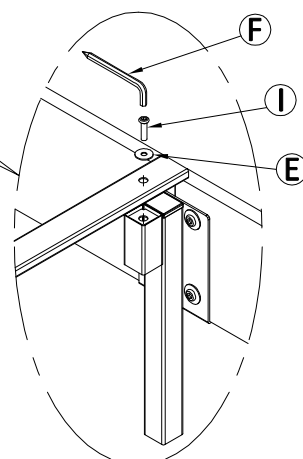



Step10 Tighten the cross-connecting pipe and center pipe with screw I using the wrench.



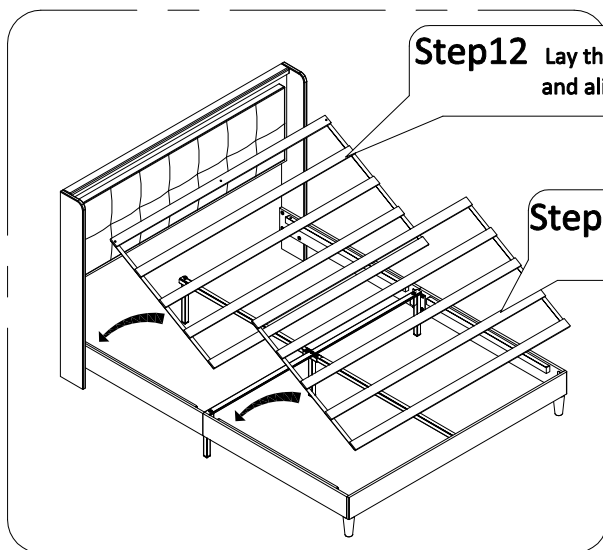


Step12 Lay the (16) front wooden slats on the front of the bed frame and align the Hook and Loop fastener on both sides to adhere firmly.


Step11 Lay the (17) back wooden slats on the end of the bed frame and align the Hook and Loop fastener on both sides to adhere firmly.

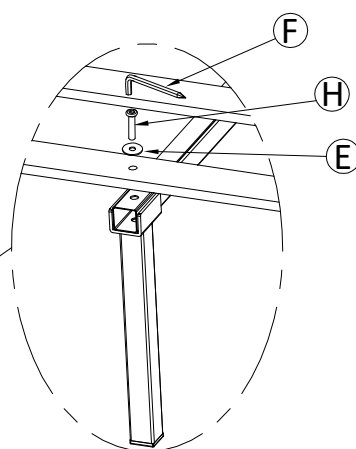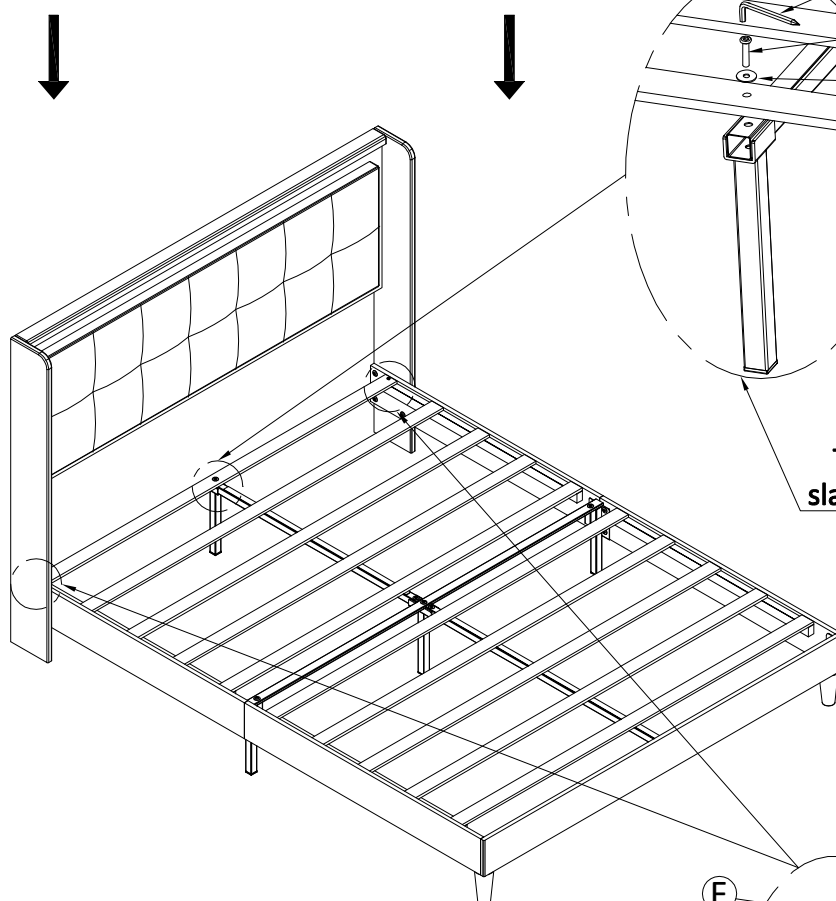

The middle of the wooden slats is tighten with screw H.

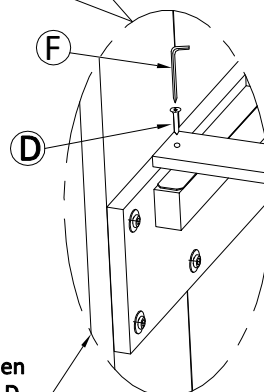

Both ends of the wooden slats is tighten with screw D.

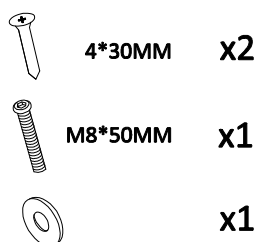

Assembly completed!

Please enjoy your bed!