




THKFBV038BK0A2 THKFBV038WH0A2 INSTALLATION INSTRUCTIONS

Unit: inch

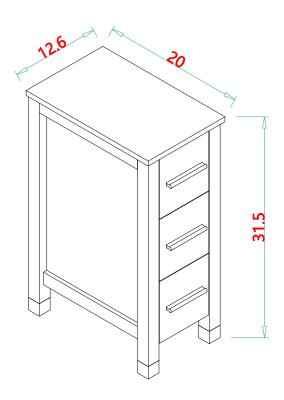

ASSEMBLY DIAGRAM

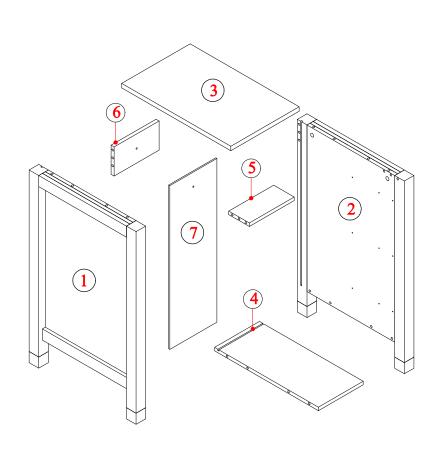

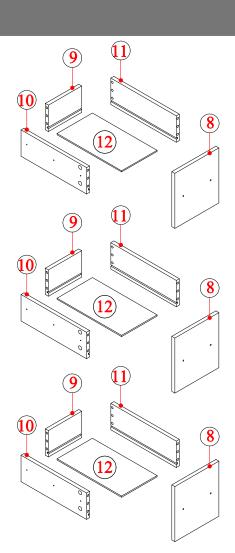


PARTS LIST


PARTS LIST				
No.	Description	QTY		
1		1		
2		1		
3	\Diamond	1		
4	\Diamond	1		
5		1		
6		1		
7	<u></u>	1		
8		3		
9		3		
10		3		
11		3		
12	\bigcirc	3		

HARDWARE LIST			
No.	Description		QTY
Α		Three-in-one Connector	40
В		Handle	3
В	()	Handle Screws M4x15	6
С	X	Slider	6
D	@Magaz	Screws M3x12	38
E		Wood Plug	26
F	Continue Continue	Screws For Fix On The Wall	1


YOU MAY NEED (NOT SUPPLIED)

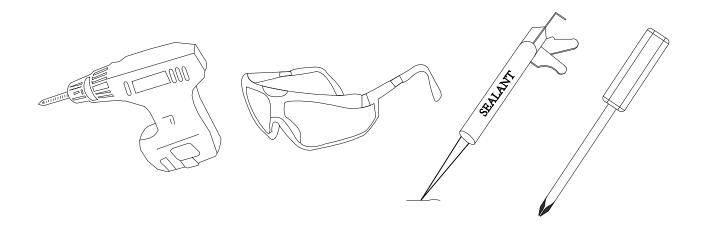


INSTALLATIONS

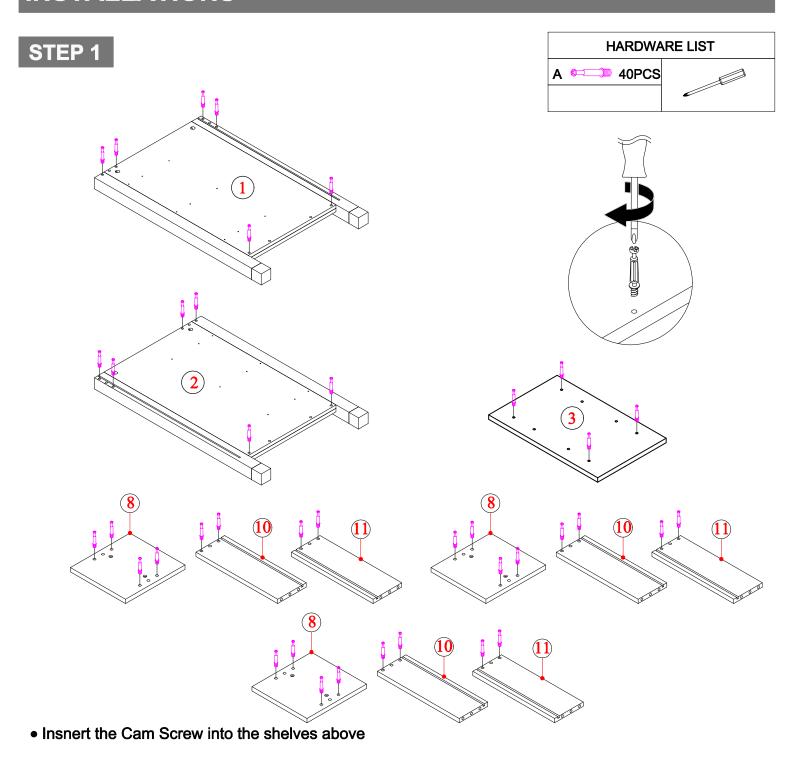


STEP 2

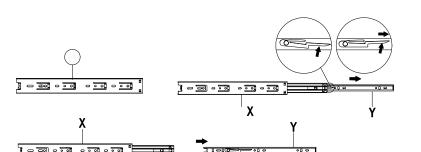





Keep pressing here, then pull out to devide the slide.

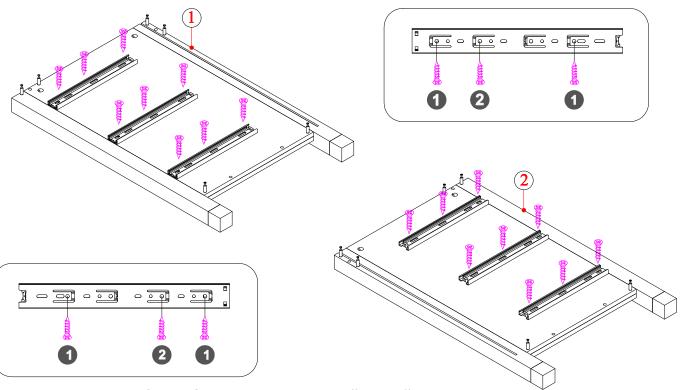



• Refer to the illustration to fix the Slide rails to theboard #1 and #2 with screws.

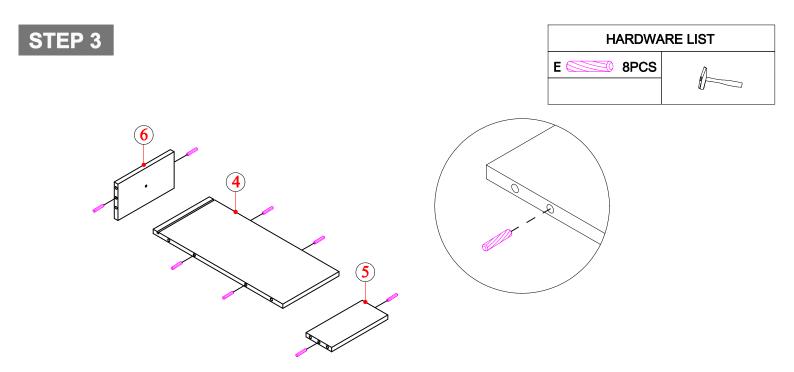






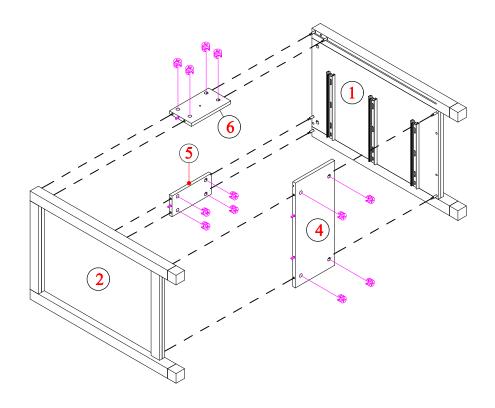

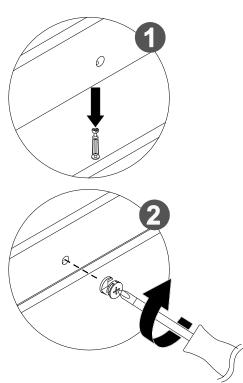



• Refer to the illustration, already assembled #4,#5,#6 on the panel #1 and #2. Then tighten the cam lock.


STEP 5

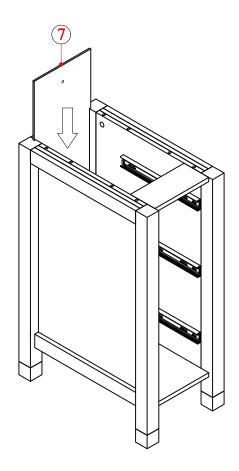

• Insert back panel #7 downwards to the cabinet

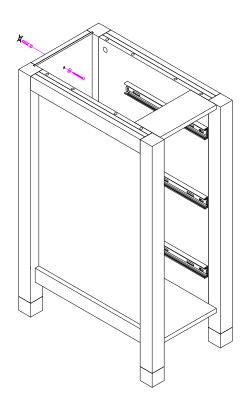


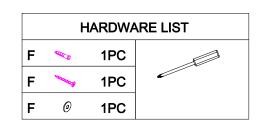


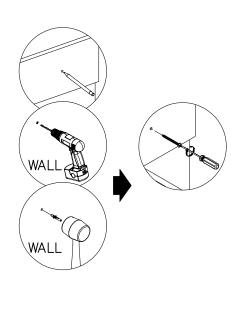


• Refer to the illustration, Draw the spacing between the walls on the cabinet, punch holes in the wall, and fix the cabinet to the wall with screws.


STEP 7

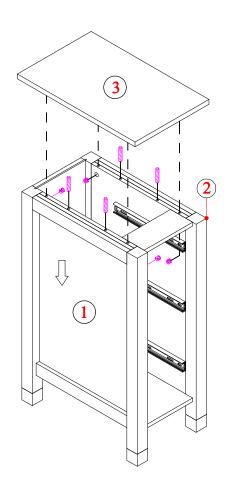


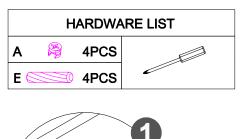

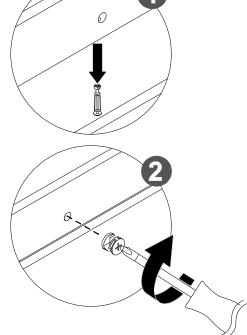


- Insnert the wooden dowel pins into the panel #1 and #2
- Insert panel to their corresponding positions. Then tighten the cam lock.

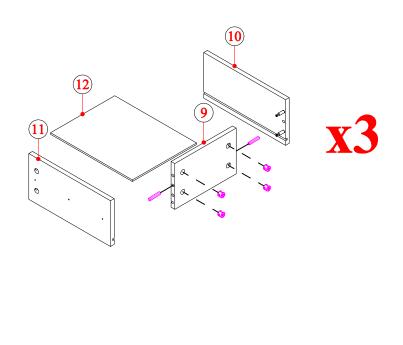


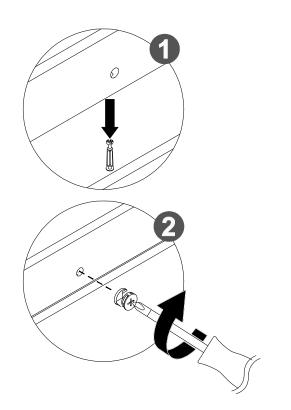


- Insnert the wooden dowel pins into the panel #9
- Insert shelves #9,#10, #11 and #12 to their corresponding positions. Then tighten the cam lock.

STEP 9




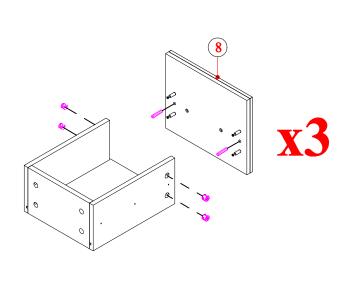


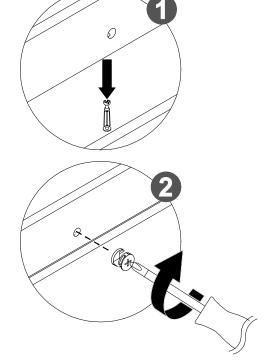


- Insnert the wooden dowel pins into the panel #8
- Insert drawer panel to their corresponding positions. Then tighten the cam lock.



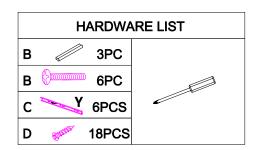


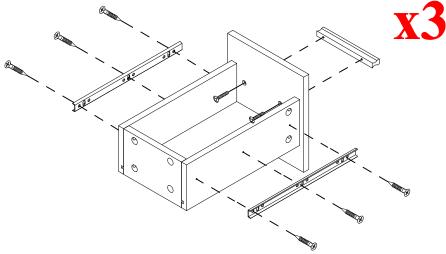


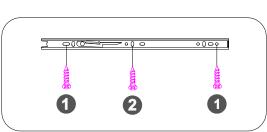

- Refer to the illustration, Apply Screws to fix the Slides on the panel #10, #11.
- Use Screws to install the handle

STEP 11

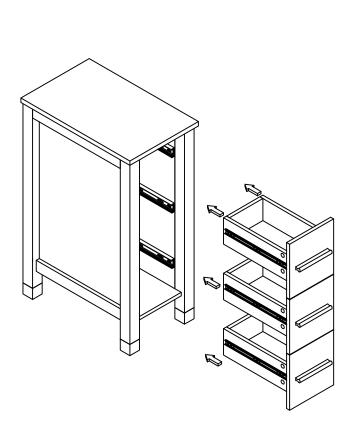




- If the drawers are not in the same level, please adjust the screws in the drawer box.
- Assembled drawers are loaded onto cabinets.

CARE AND CLEANING

- 1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
- 2. Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
- 3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathrom humidity by opening windows and doors and using the exhaust fan (if available).
- 4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. eep away from res and high temperatures.
- 5. Please do not sit, lean or step on the basin cabinet.

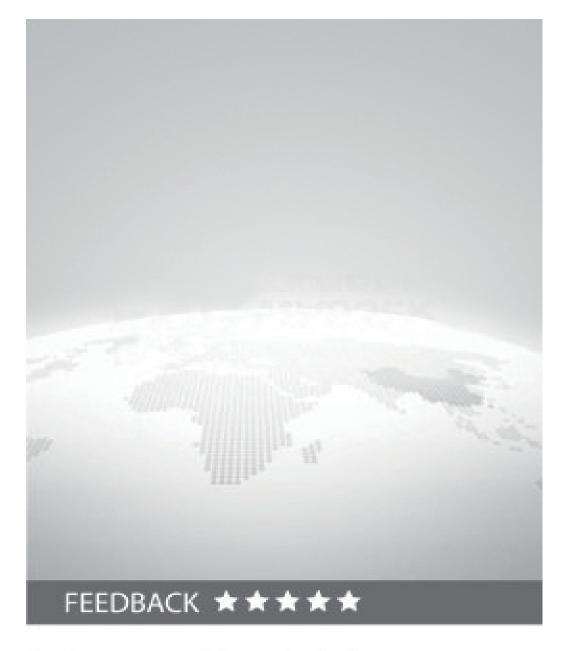

Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satis ed with our products and leave us FIVE STARS and POSITIVE feedback/ review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Many thanks and welcome to our shop again!

Contact number: (323)-393-8260 E-mail: service@eclifeusa.com