



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

223651Q (B1&B2)
Queen Bed

ITEM: 223651Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










ASSEMBLY TIME




20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

| | | | |
|---|-------------------------------|--|------|
| A | HEADBOARD PANEL |  | 1PC |
| B | FOOTBOARD PANEL |  | 1PC |
| C | RIGHT HEADBOARD LEG |  | 1PC |
| D | LEFT HEADBOARD LEG |  | 1PC |
| E | BED SLAT |  | 4PCS |
| F | BED SLAT SUPPORT WITH LEVELER |  | 4PCS |
| G | FOOTBOARD LEG |  | 2PCS |

B2 (BOX 2)

| | | | |
|----|--|--|------|
| H | BED RAIL |  | 2PCS |
| HB | 223651Q(B1) FROM BOX 1 HEADBOARD COMPLETE |  | 1PC |
| FB | 223651Q(B1) FROM BOX 1 FOOTBOARD COMPLETE |  | 1PC |

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223651Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223651Q (B1)

| | | | |
|---|--|---|------|
| 1 | SHORT BOLT (M6 x 30mm - BLK) |  | 6PCS |
| 2 | LONG BOLT (M6 x 40mm - BLK) |  | 2PCS |
| 3 | LOCK WASHER (1/4" - BLK) |  | 8PCS |
| 4 | FLAT WASHER (1/4" x 13mm - BLK) |  | 8PCS |
| 5 | SMALL ALLEN WRENCH (M4 x 60mm - BLK) |  | 1PC |
| 6 | BIG ALLEN WRENCH (M5 x 65mm - BLK) |  | 1PC |
| 7 | FLAT HEAD SCREW (M4 x 32mm - RBW) |  | 8PCS |
| 8 | WOOD DOWEL (8mm x 30mm) |  | 2PCS |

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **223651Q (B1&B2)**



ASSEMBLY INSTRUCTIONS


STEP 1

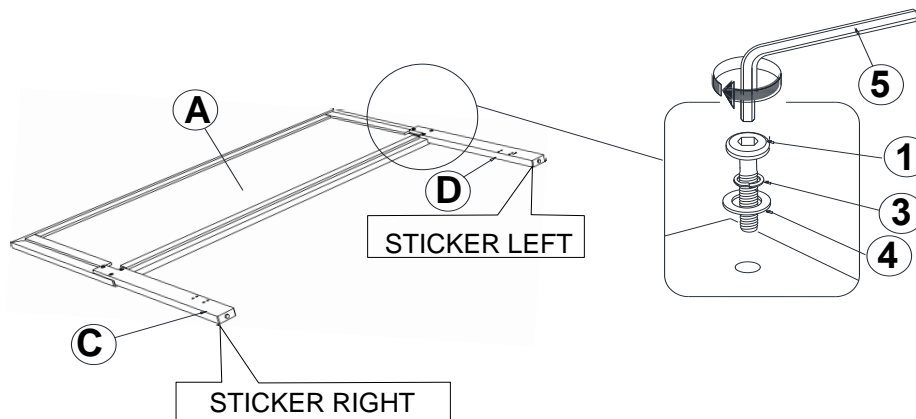


*** BACK VIEW ***

Note: please take note of marking sticker (L & R) on the headboard legs.

STEP 2

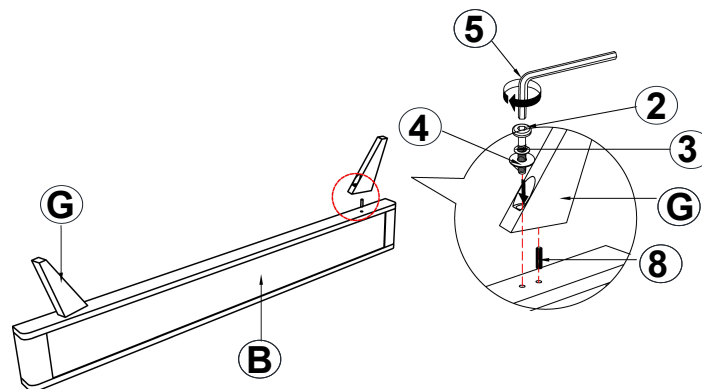

STEP 3

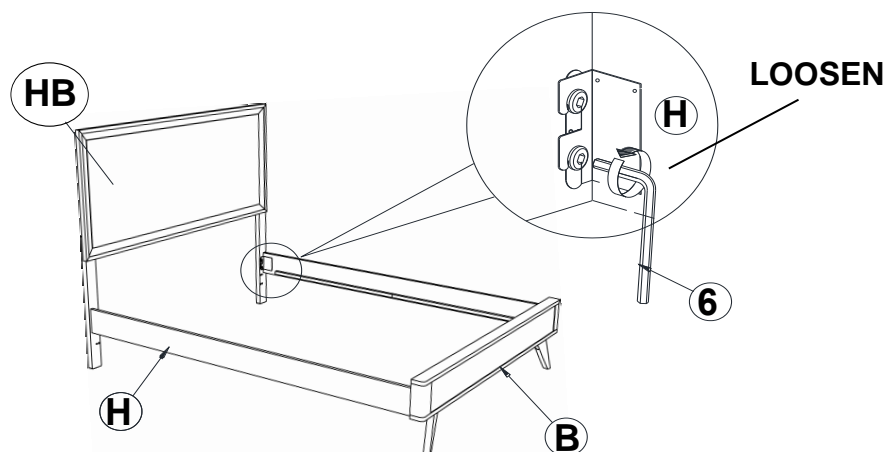


ITEM: **223651Q (B1&B2)**




ASSEMBLY INSTRUCTIONS



STEP 4

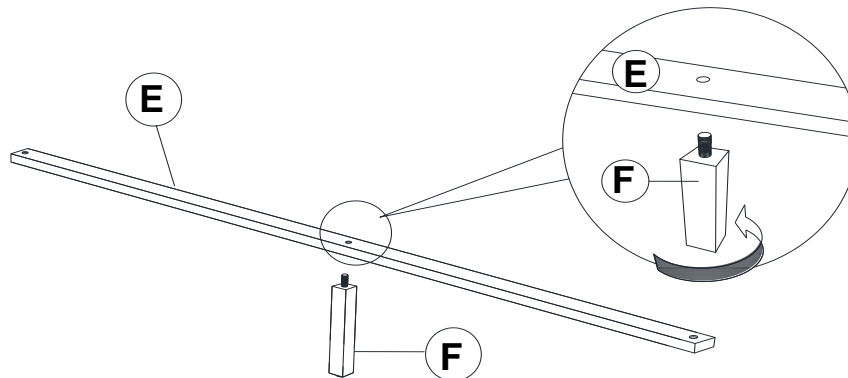

STEP 5

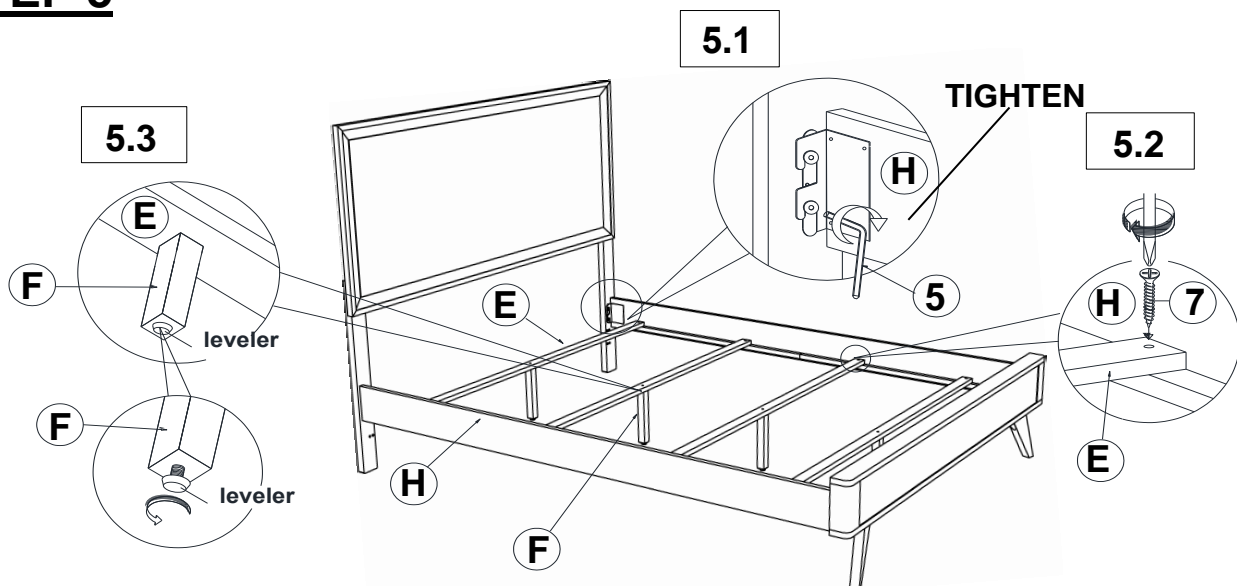


STEP 6 **COMPLETE**

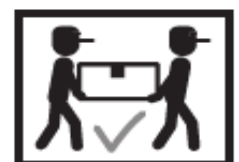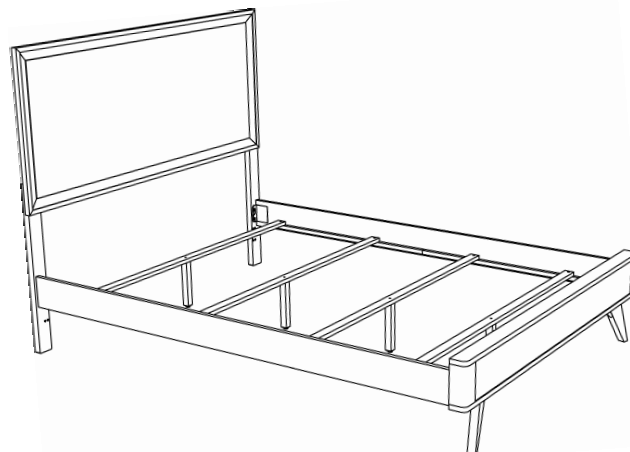

ITEM: **223651Q (B1&B2)**



Inner Size: 63.50"W x 81.00"D

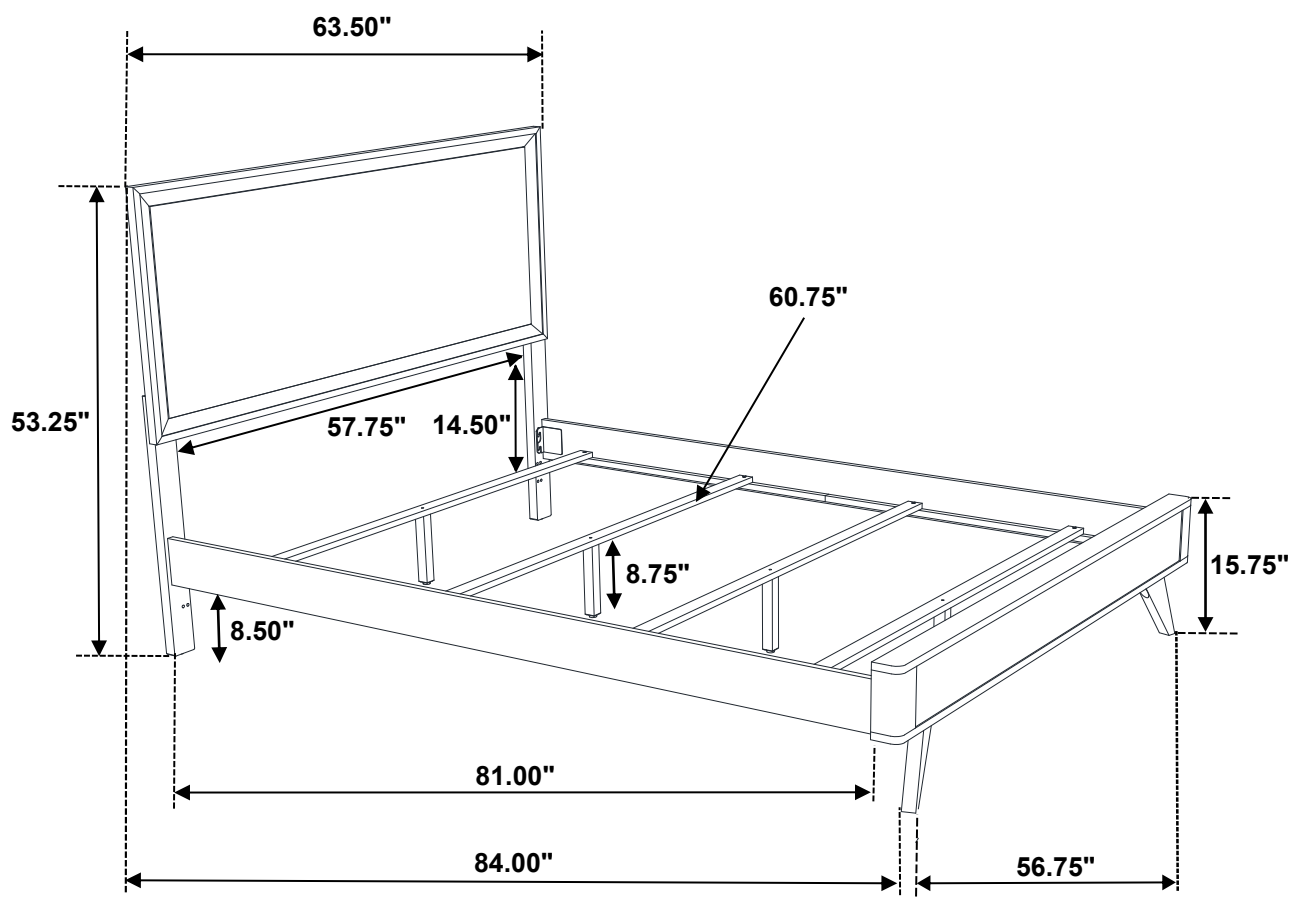

Note : Dimension tolerance $\pm 5\%$