
Product Assembly Instructions Item#: BM304911

Helpers needed to assemble: 2 Estimate time frame to assemble: 10 minutes

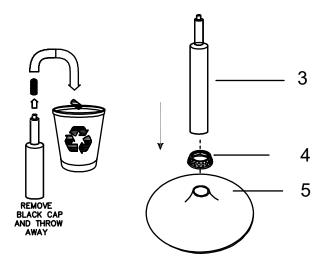



#	Picture	Description	Quantity
1		Seat	1
2		Footrest	1
3		Hydraulic	1
4		Decorative ring	1
5		Base	1
Α		Bolts(M6x16)	4+1EXT
G		Allen Key	1


- Step 1: Remove the black Cap on Hydraulic(3) and throw away.
- Step 2: Put the Decorative ring (4) on the top of the Base (5).
 - Step 3: Insert the Hydraulic (3) into the Base (5) through Decorative ring (4).
- Step 4: Carefully turn the Seat upside down on a smooth and scratch-free surface. Place Footrest (2) on the bottom of the chair as shown.

Attach 4 Bolts (A) in the pre-drilled holes until all in position.

Tighten all bolts with Allen Key.

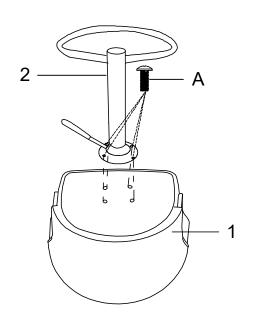

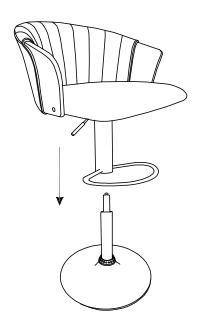

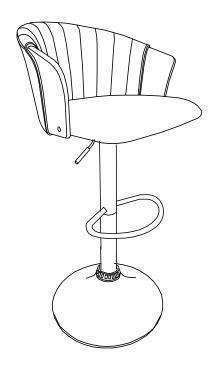

- Step 5: Flip the barstool seat over upright as seen. Insert the Hydraulic (3) into Foorest (2).
- Step 6: Test the barstool is firmly on the ground and the seat does not wiggle.
- Step 7: Sit and enjoy your new barstool.