


Assembly Instruction


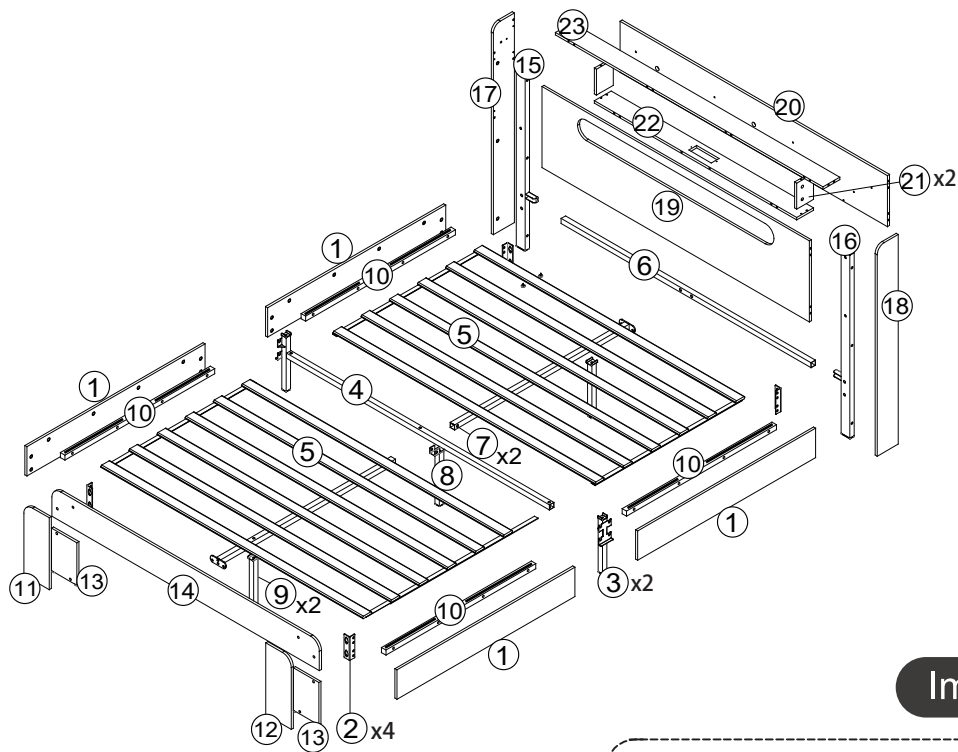






Important Note

HARDWARE NOTE :



1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

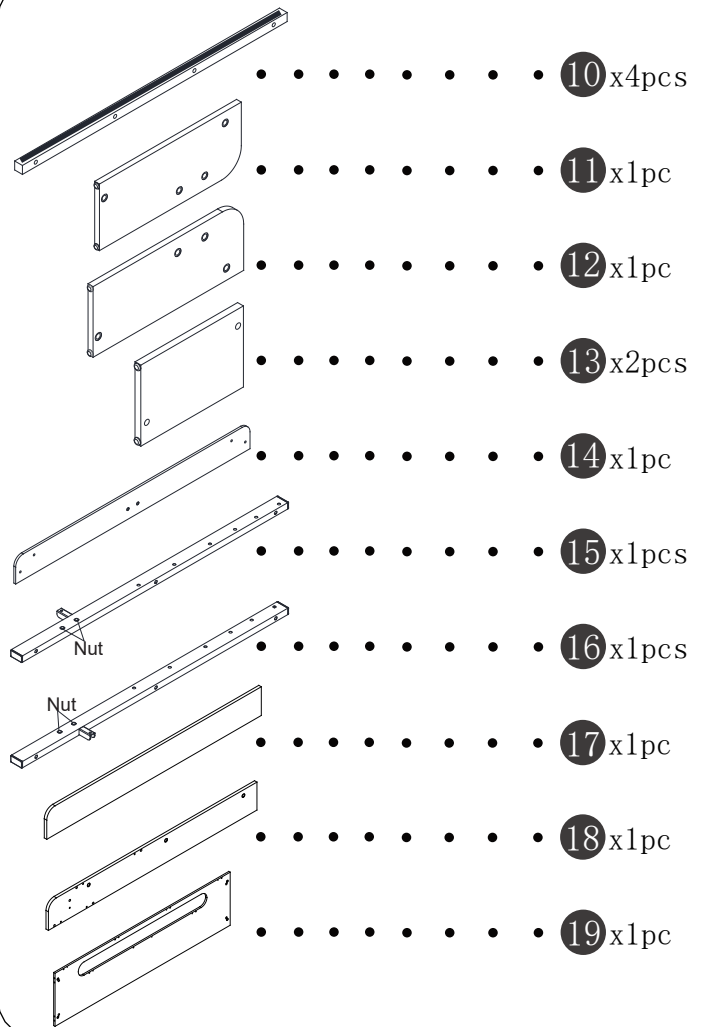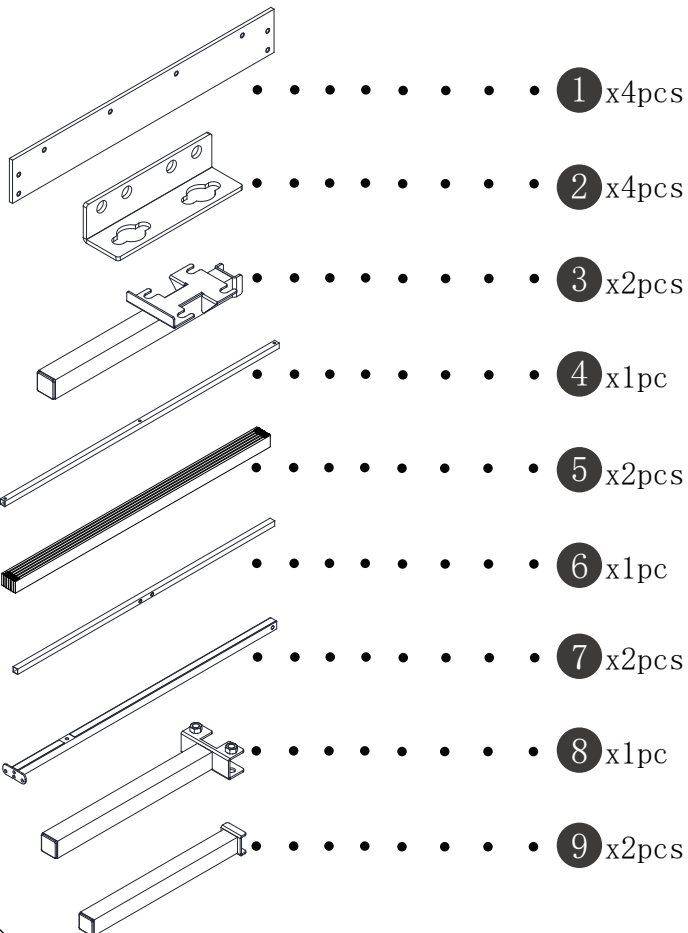

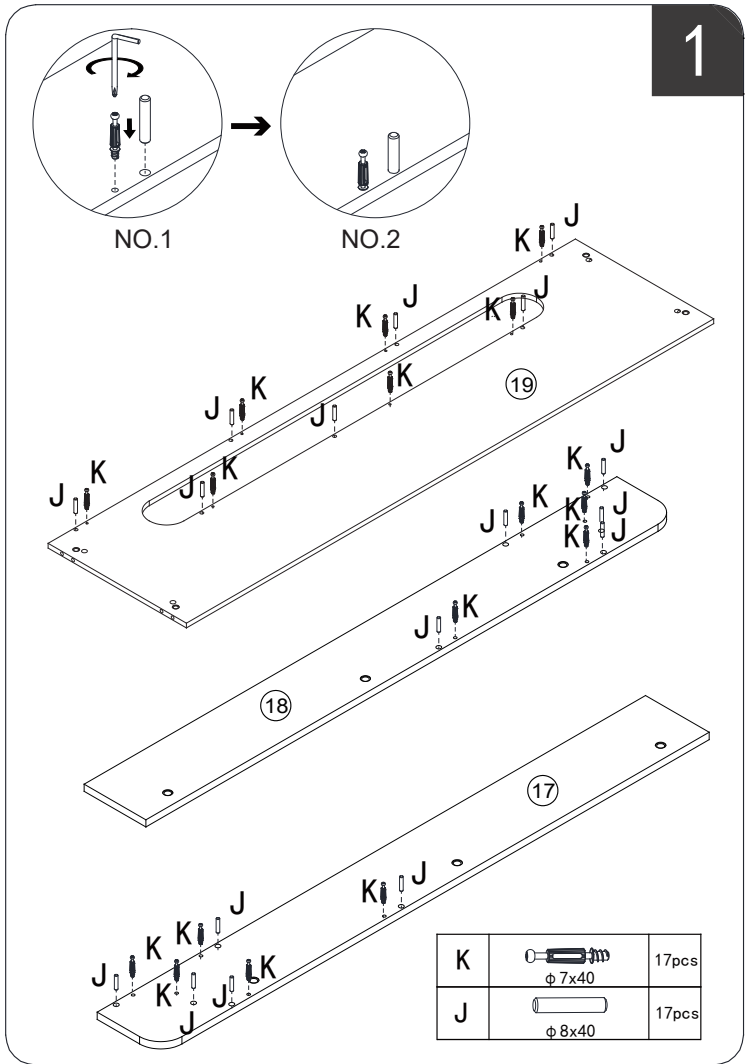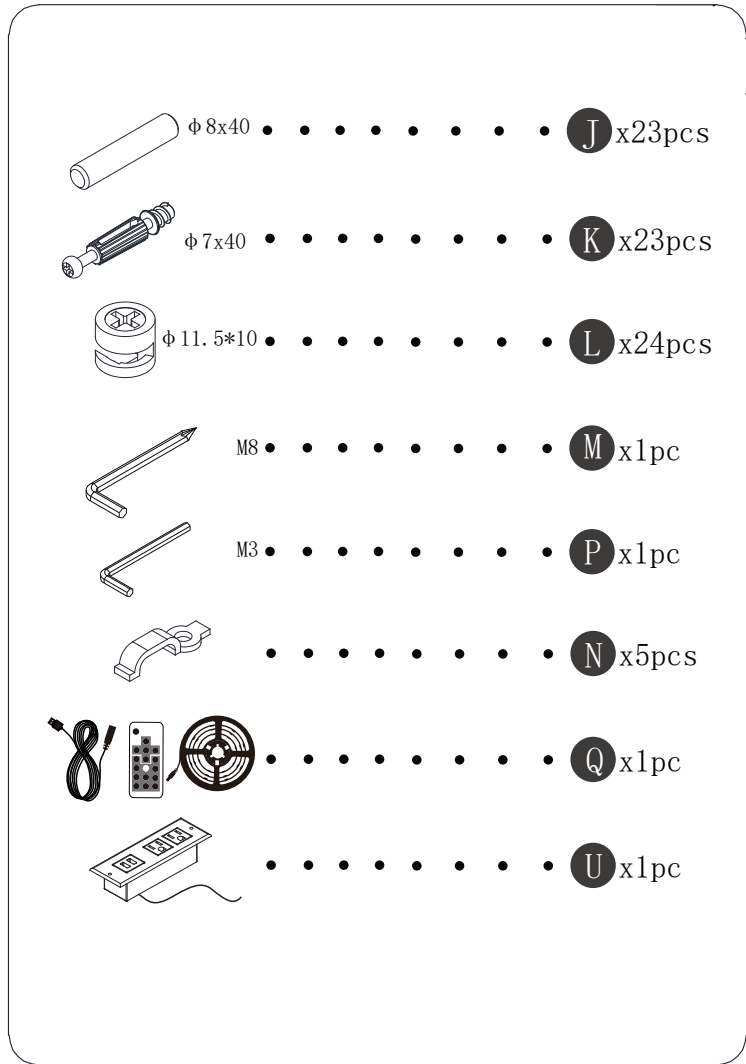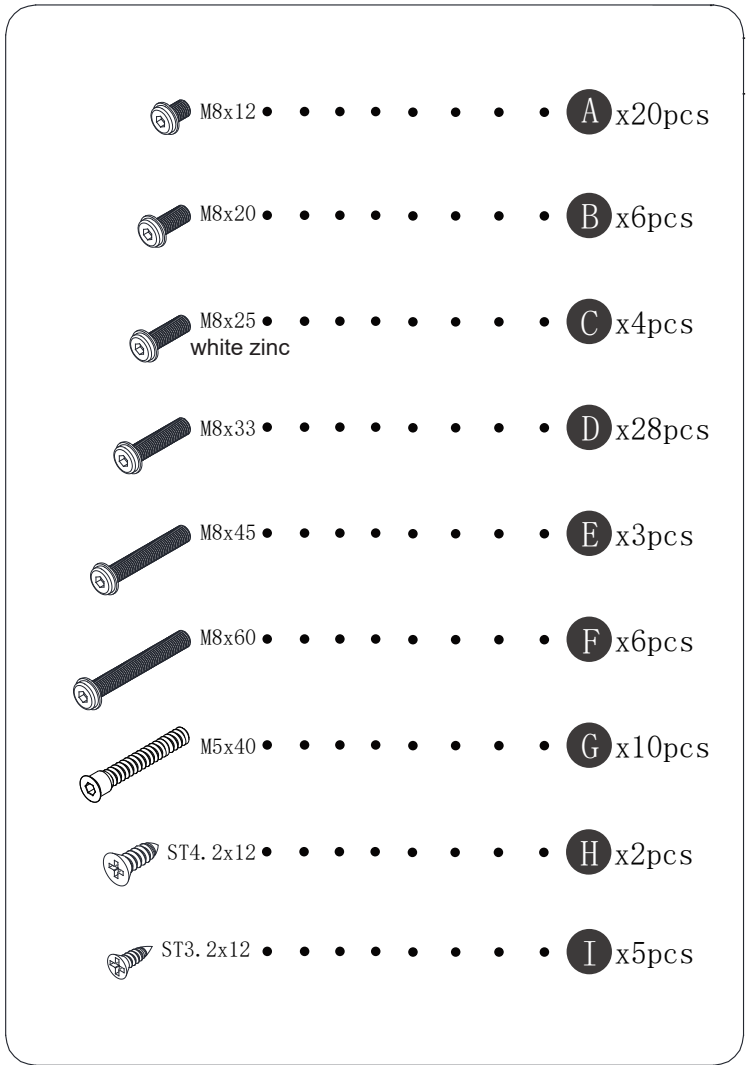
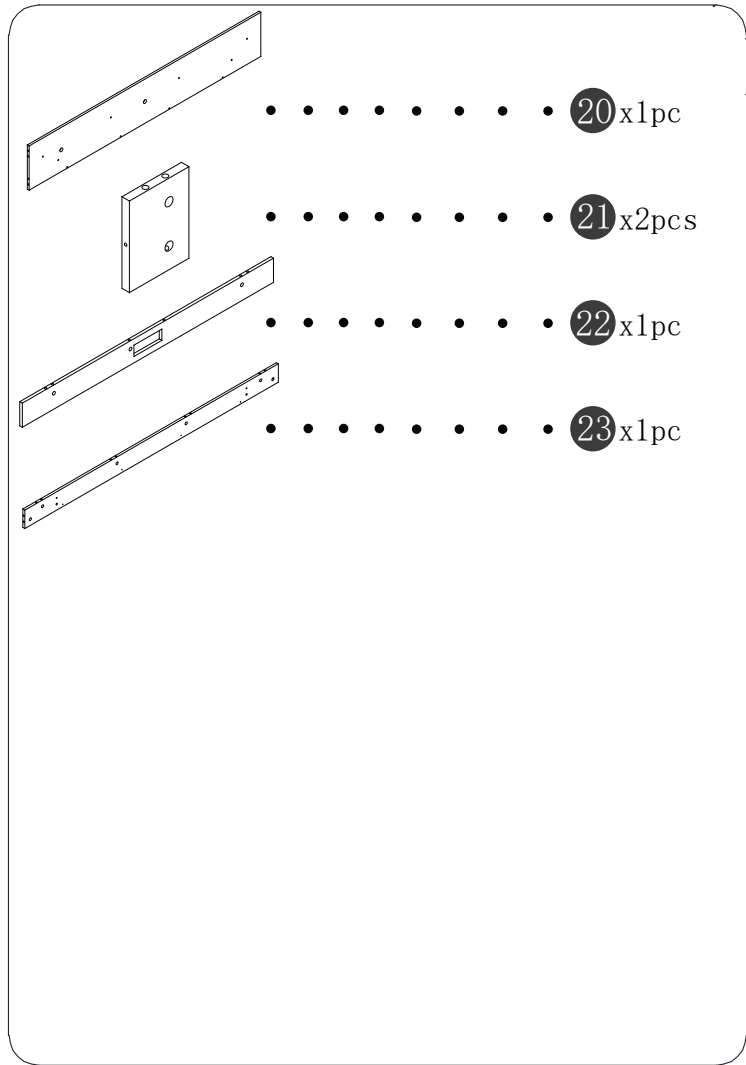


2

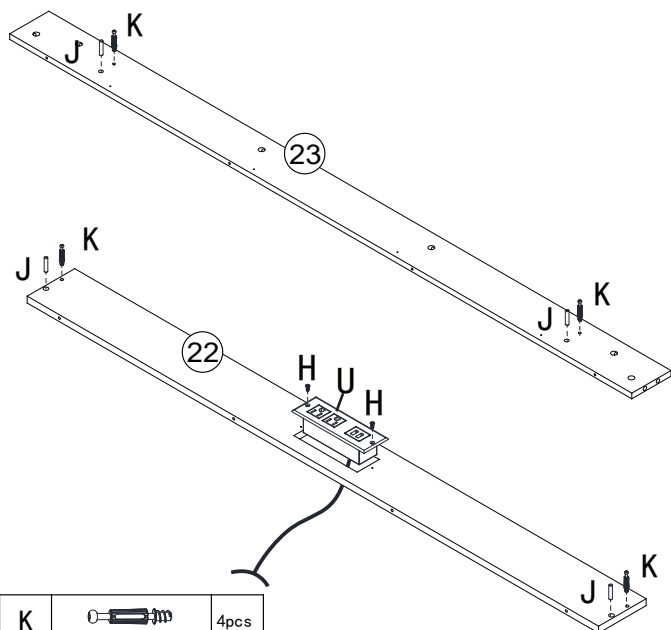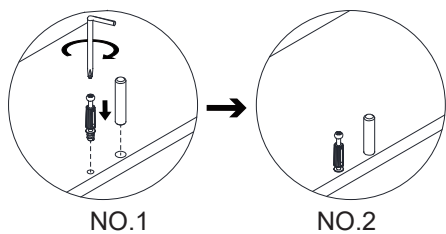


K		4pcs
J		4pcs
H		2pcs

3


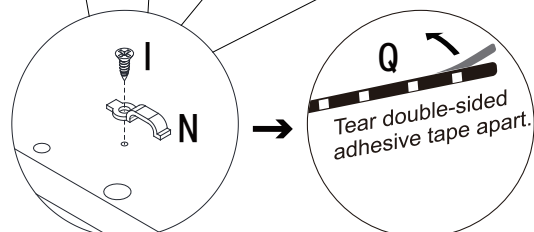
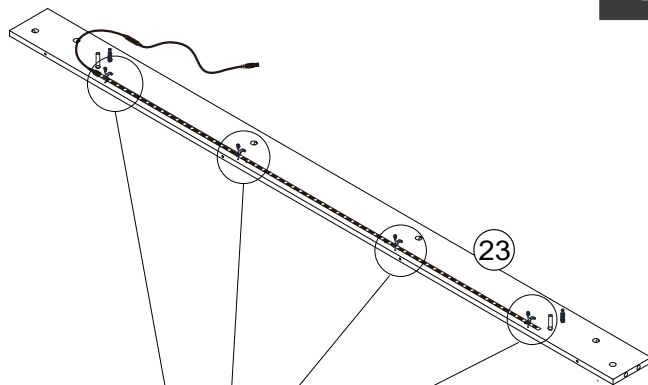


Accessory N is notocked tight at first

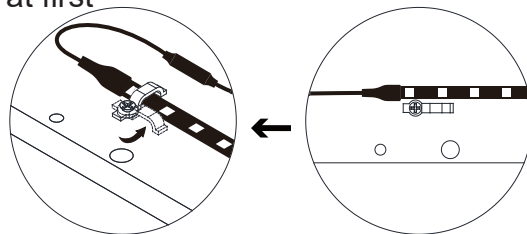




Fastening accessories N

4

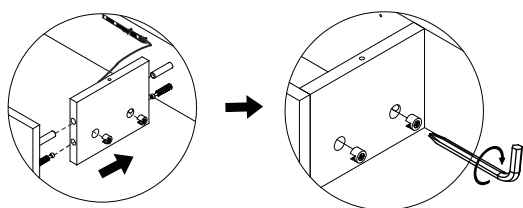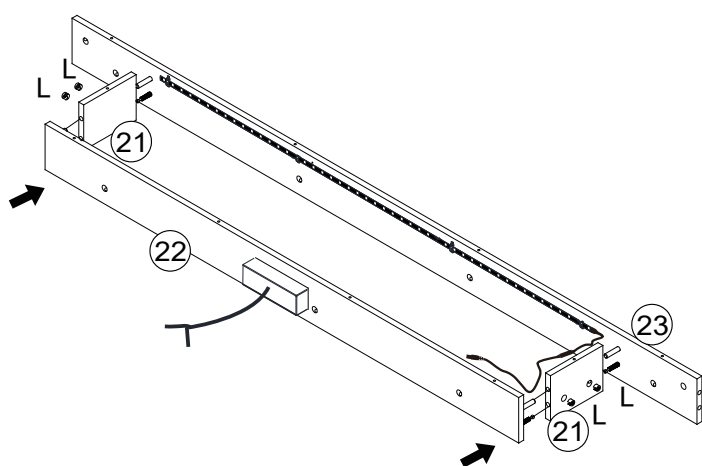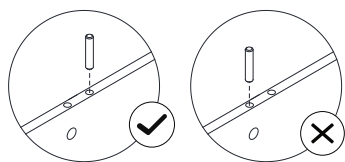


L		4pcs
---	--	------

5

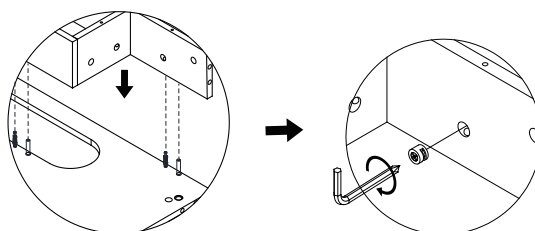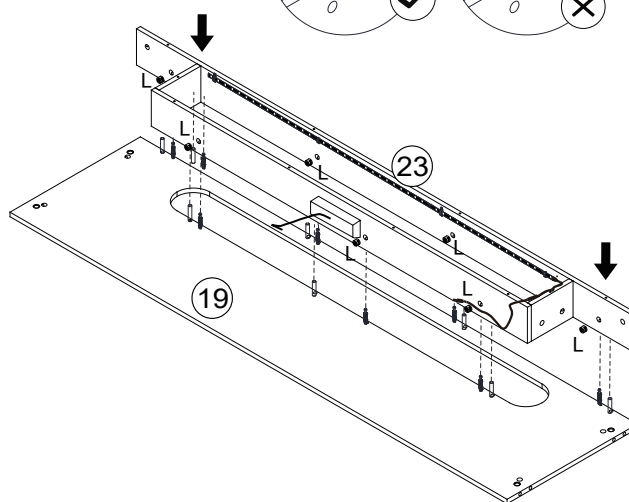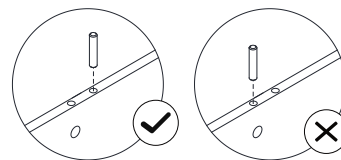


L		7pcs
---	--	------

6

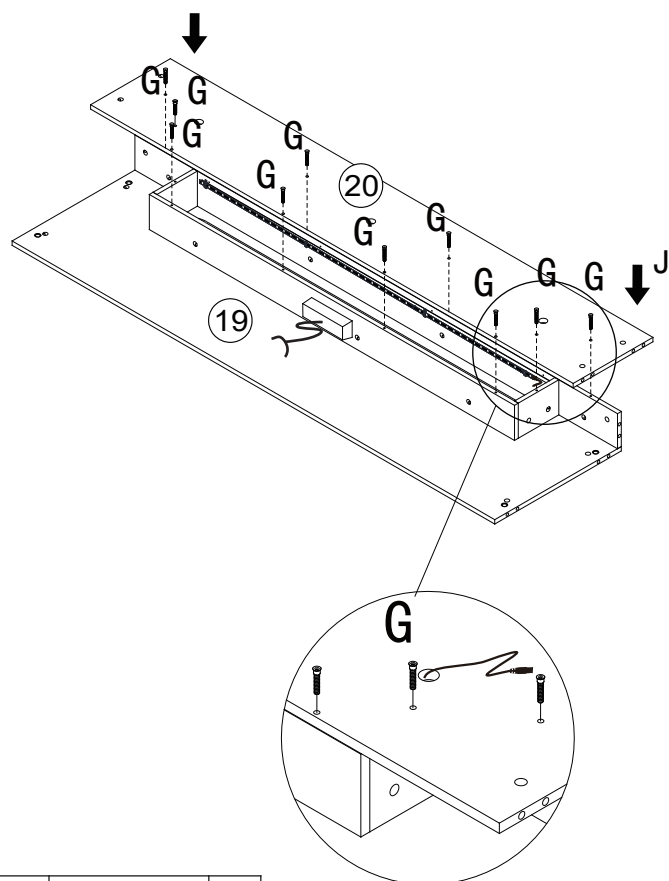


G		10pcs
M5*40		

7

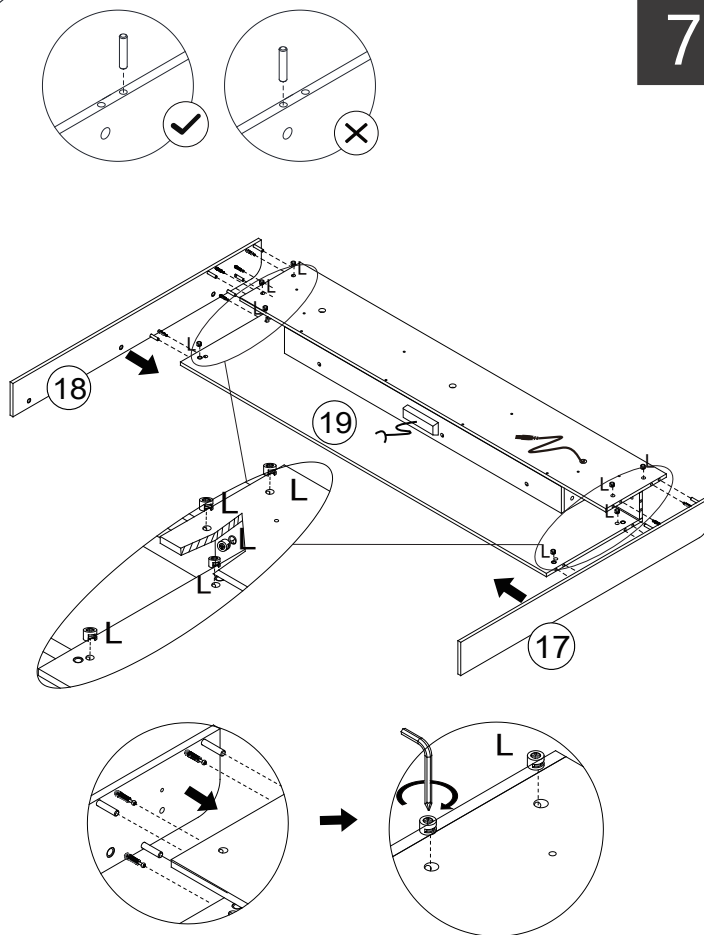


L		10pcs
$\phi 11.5 \times 10$		

8

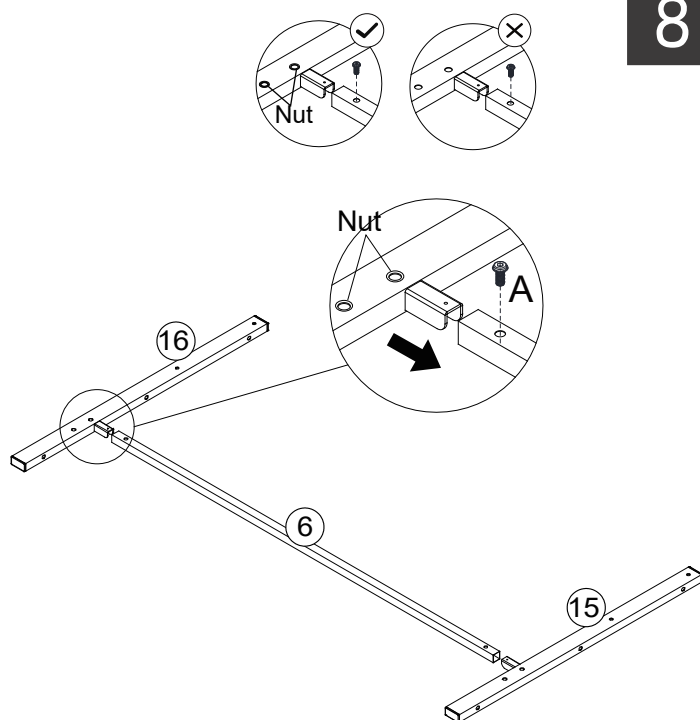


A		2pcs
M8x12		

9

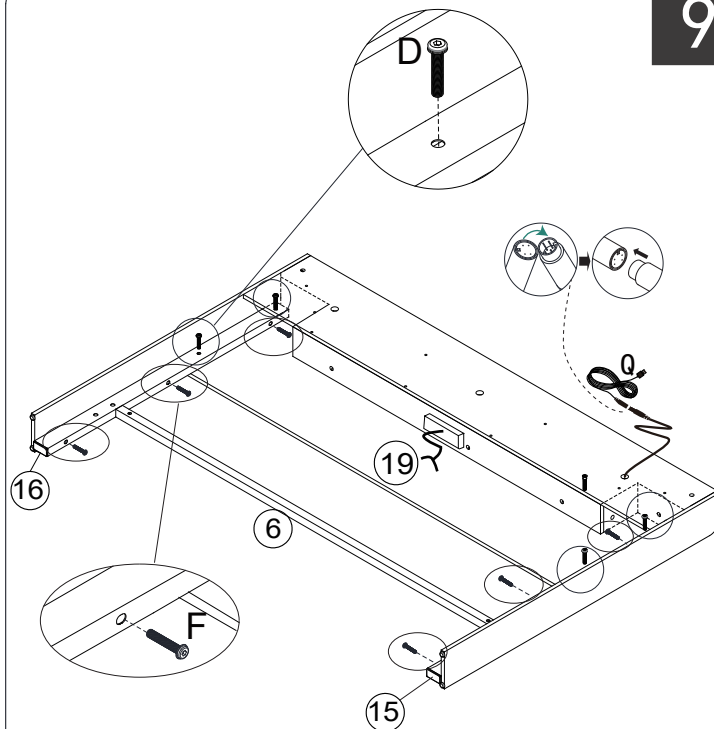


D		4pcs
M8x33		
F		6pcs
M8x60		

10
x2

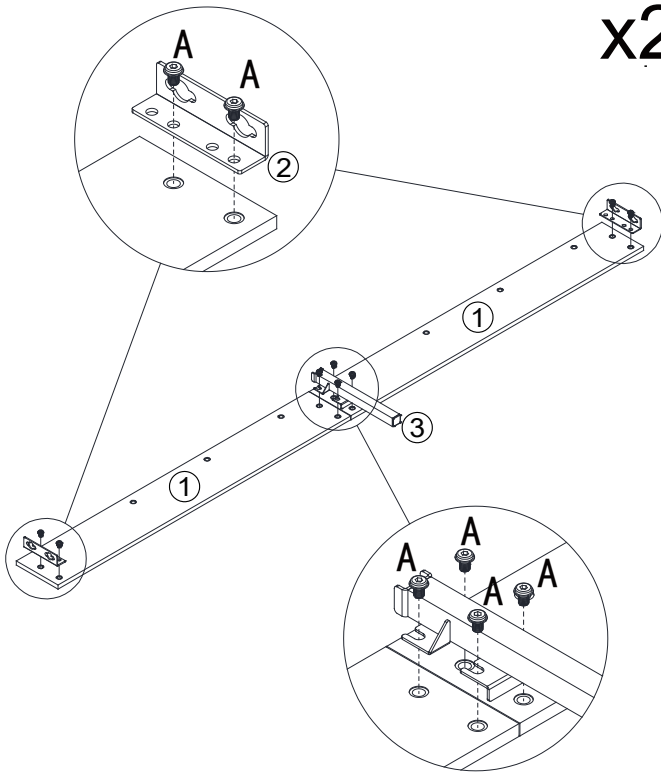


A		16pcs
---	---	-------

11
x2

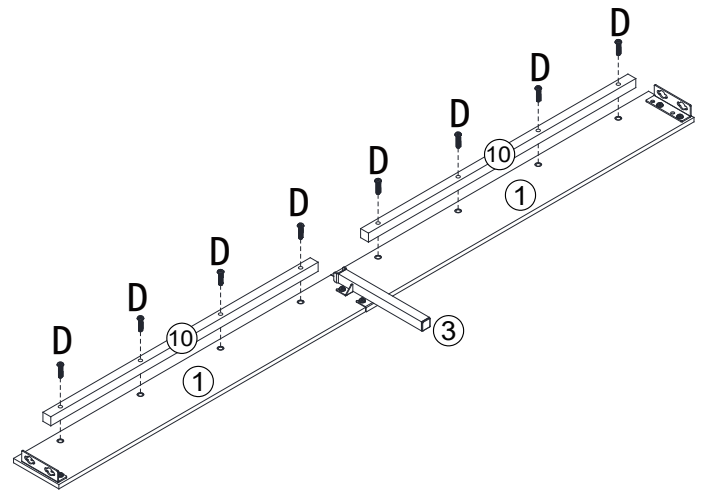

D		16pcs
---	--	-------


12

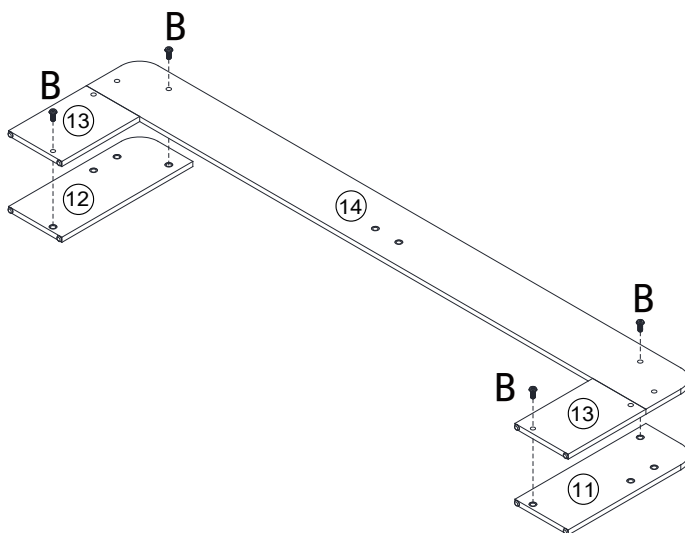

B		4pcs
---	---	------

13


Tighten screws C

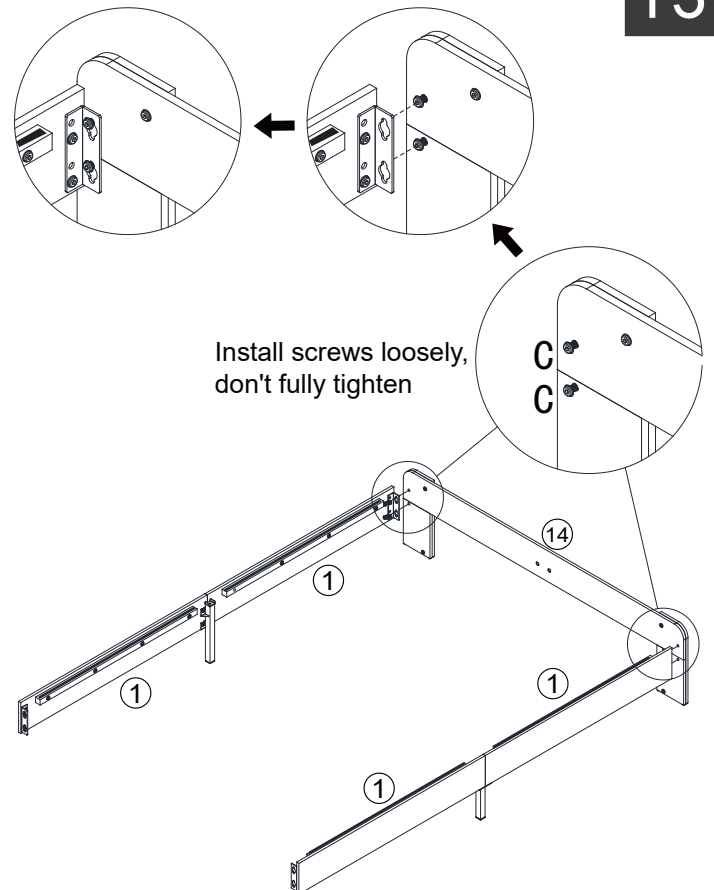


C		4pcs
---	---	------

white zinc

14

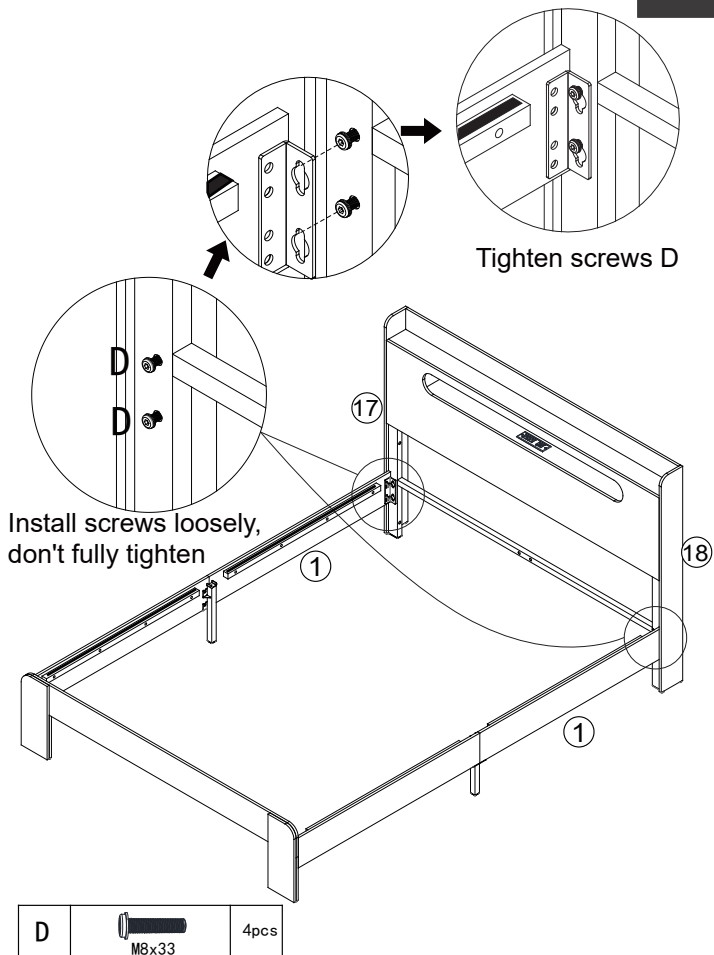


15

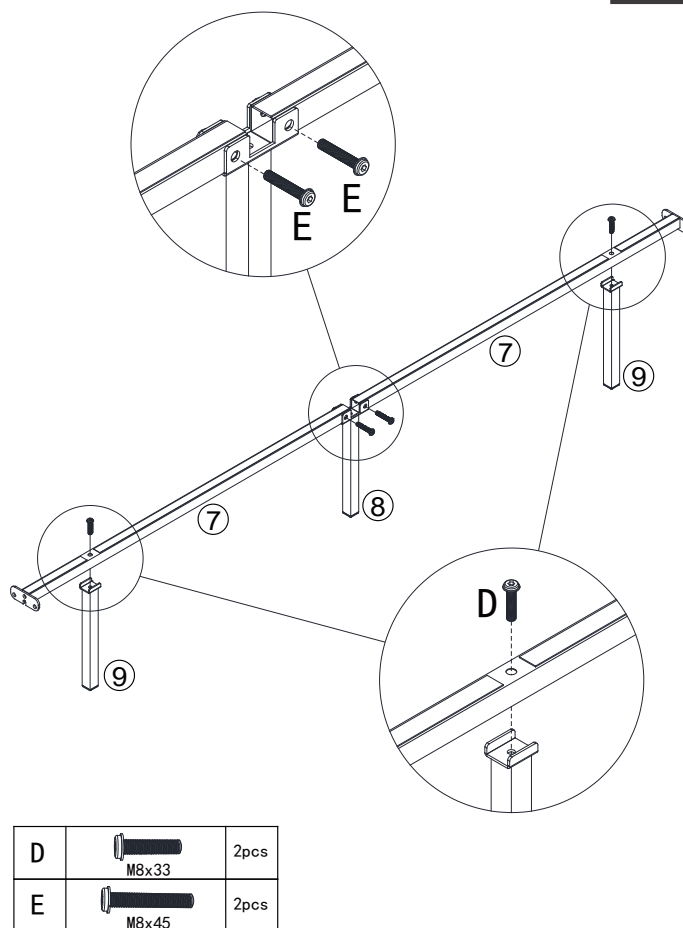


Assemble second


16

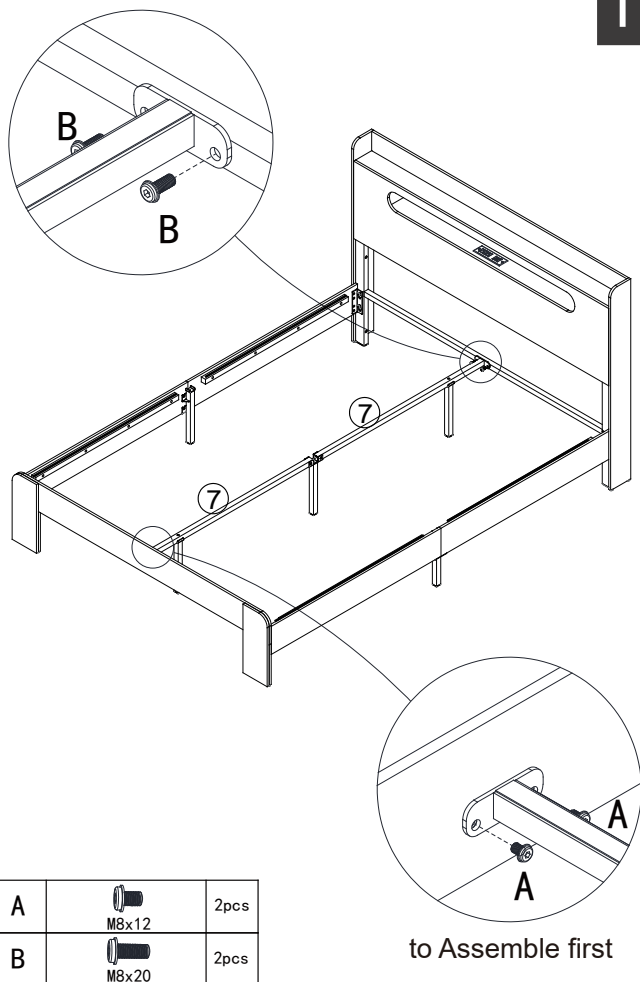

17

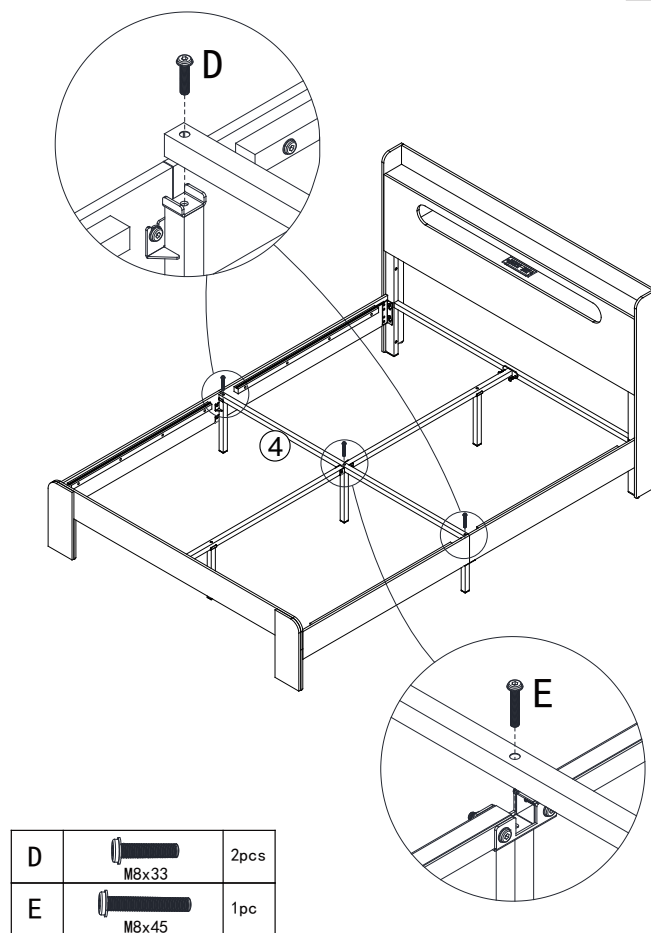


18

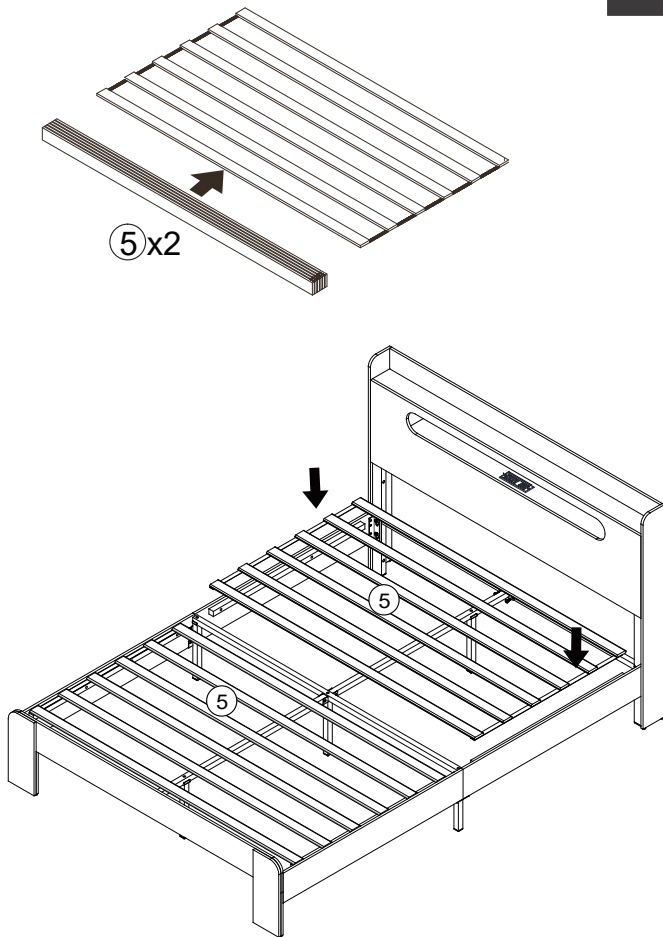

Finish

19

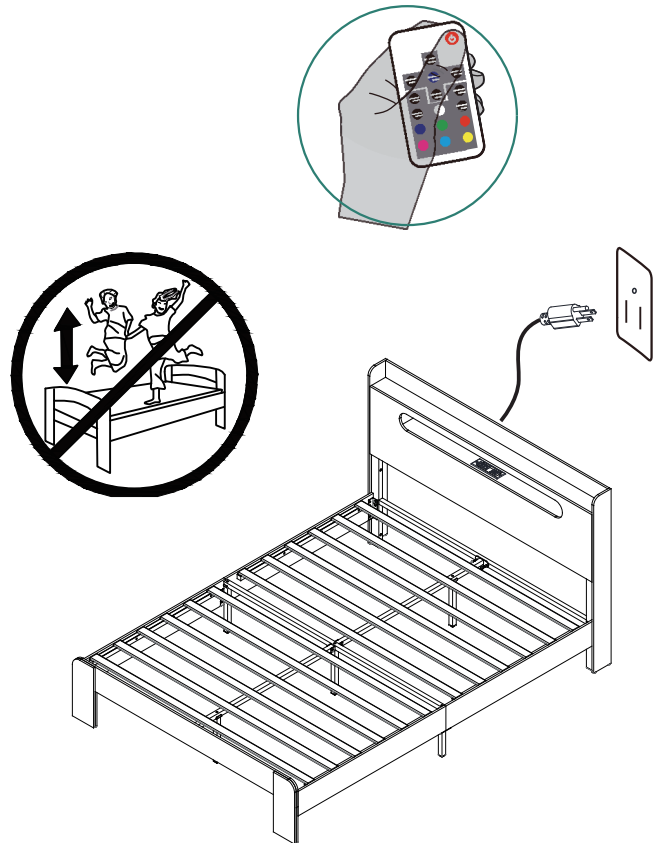

Note: Now you can tighten all the bolts.