

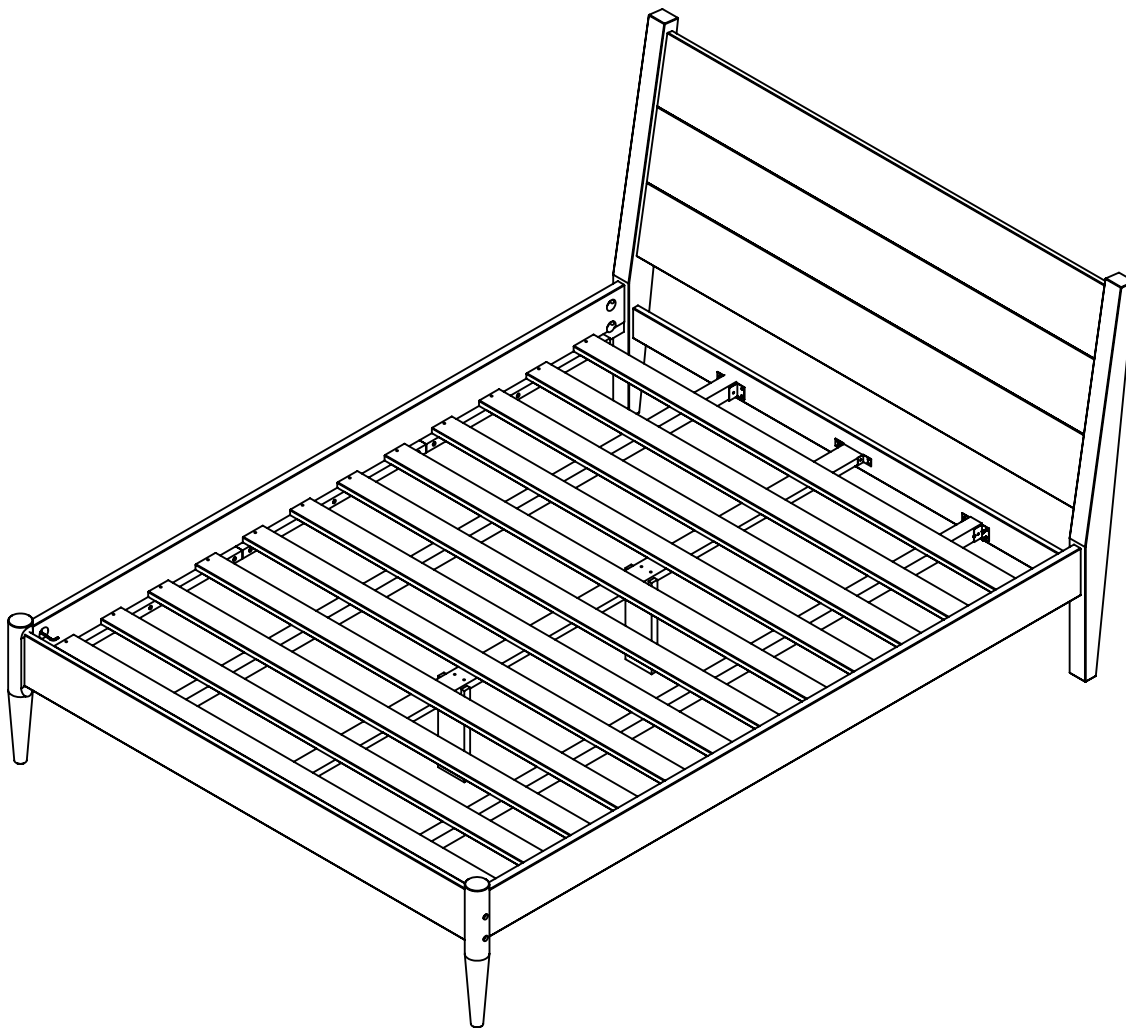
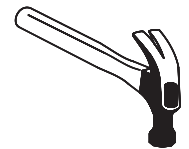
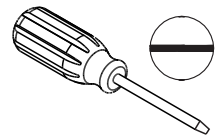



ASSEMBLY INSTRUCTIONS

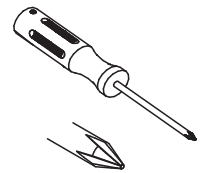

00:40 Hs

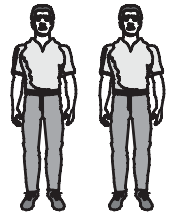

HARDWARE INCLUDED



A - 10,0x40
Qty. 22
SPARE +2




B - 1/4x120
Qty. 04



C - 1/4x90
Qty. 04



D - 1/4x50
Qty. 04




E - Cylindrical nut
Qty. 04




F - Clog
Qty. 04



G - Half moon nut
Qty. 04




H - 4,0x45
Qty. 04



I - 3,5x30
Qty. 24




J - 3,5x16
Qty. 36




K - Allen key
Qty. 01




L - Hole plugs
Qty. 04
SPARE +2




M - Metal bracket
Qty. 02




N - Metal bracket
Qty. 04



O - Space wooden
Qty. 02




P - 4,0x40
Qty. 12





Q - 4,0x30
Qty. 12

PARTS INCLUDED

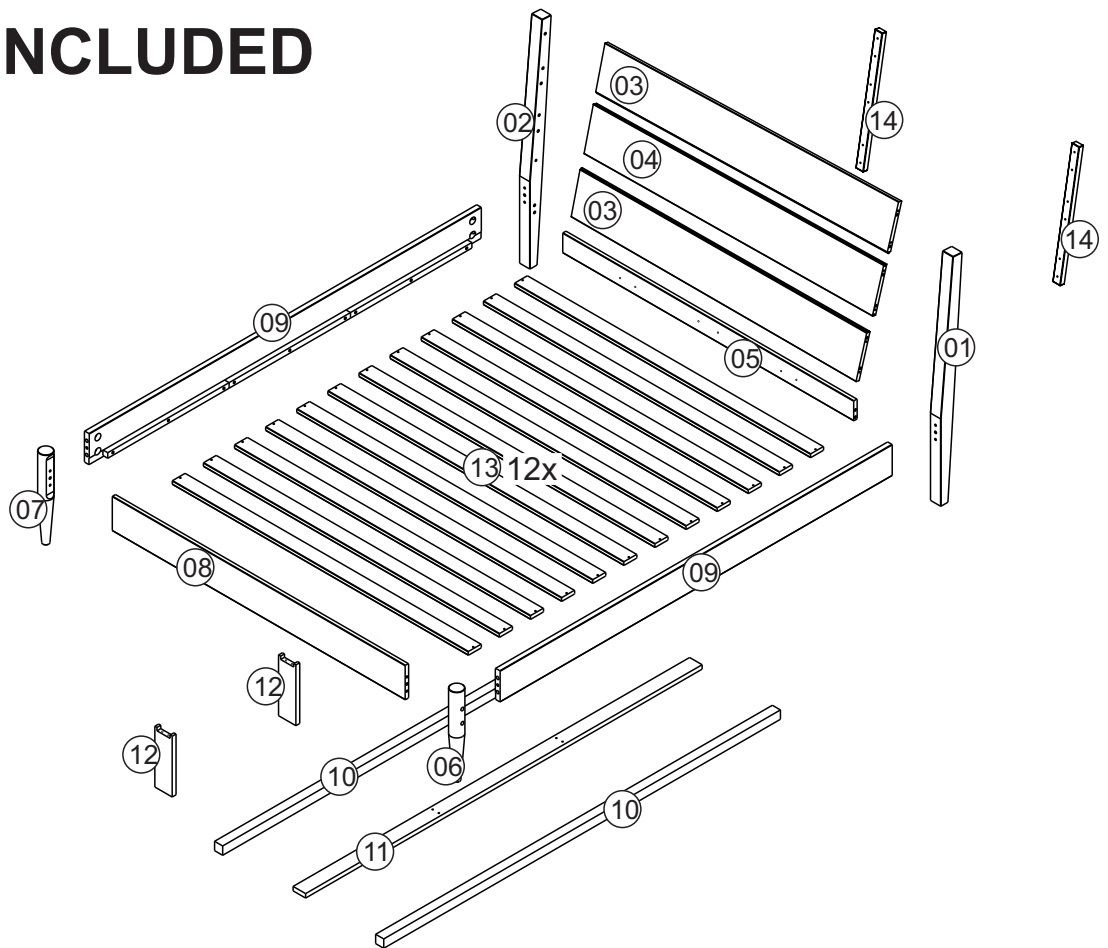


STEP 1

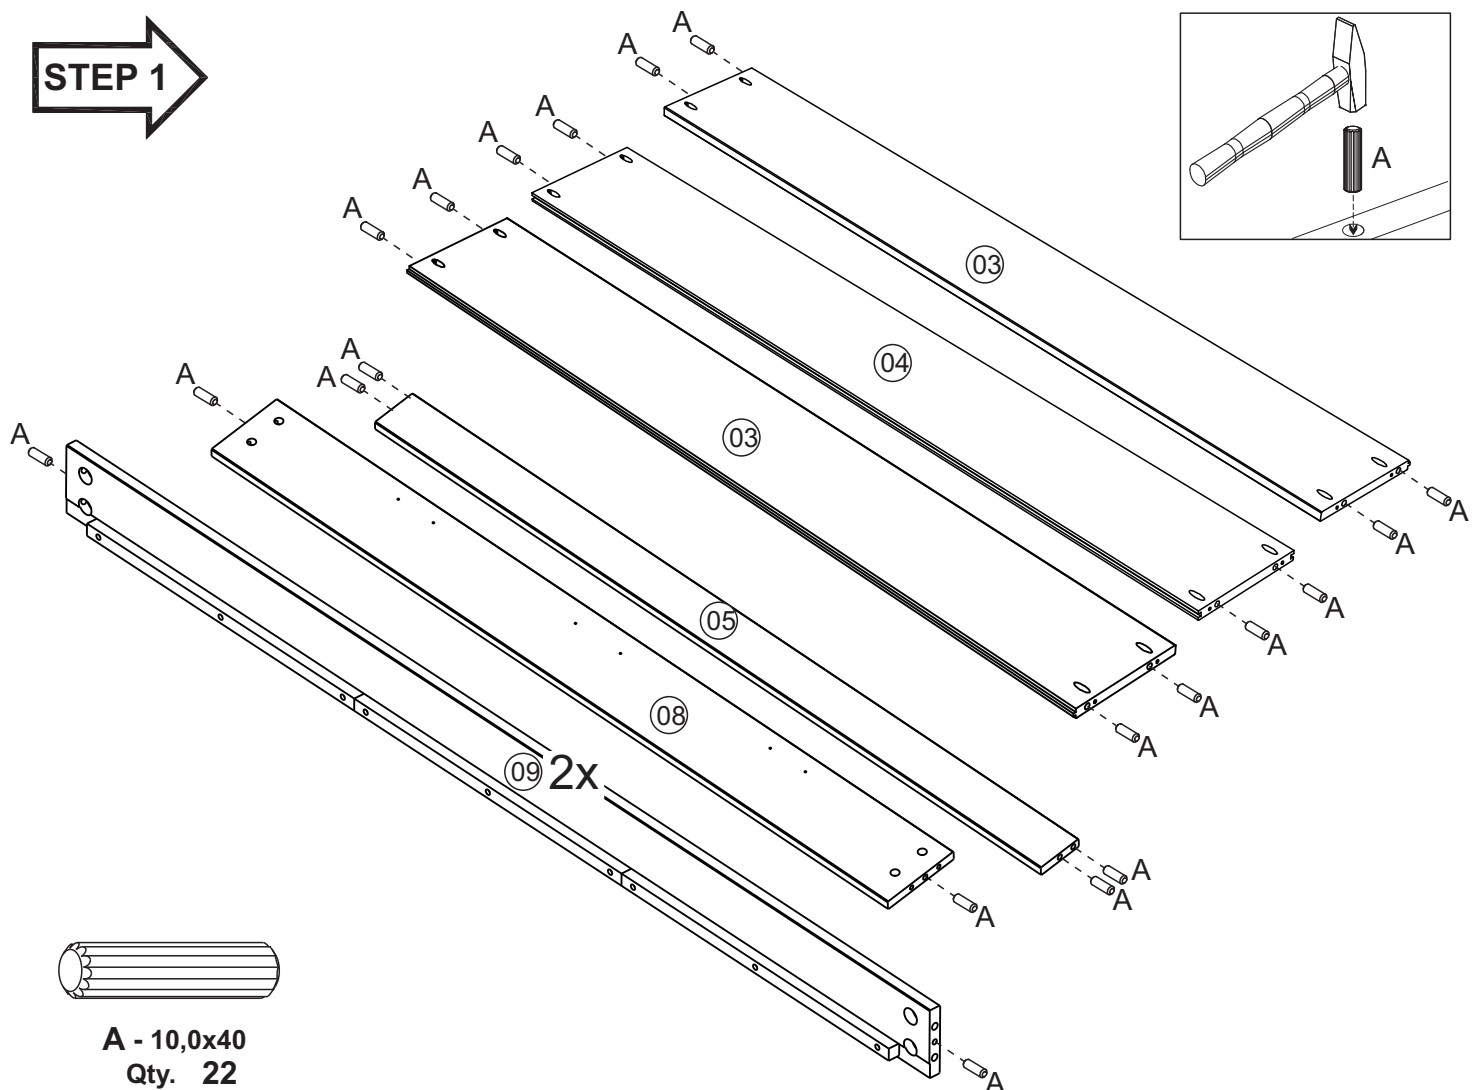


A - 10,0x40
Qty. 22


STEP 2

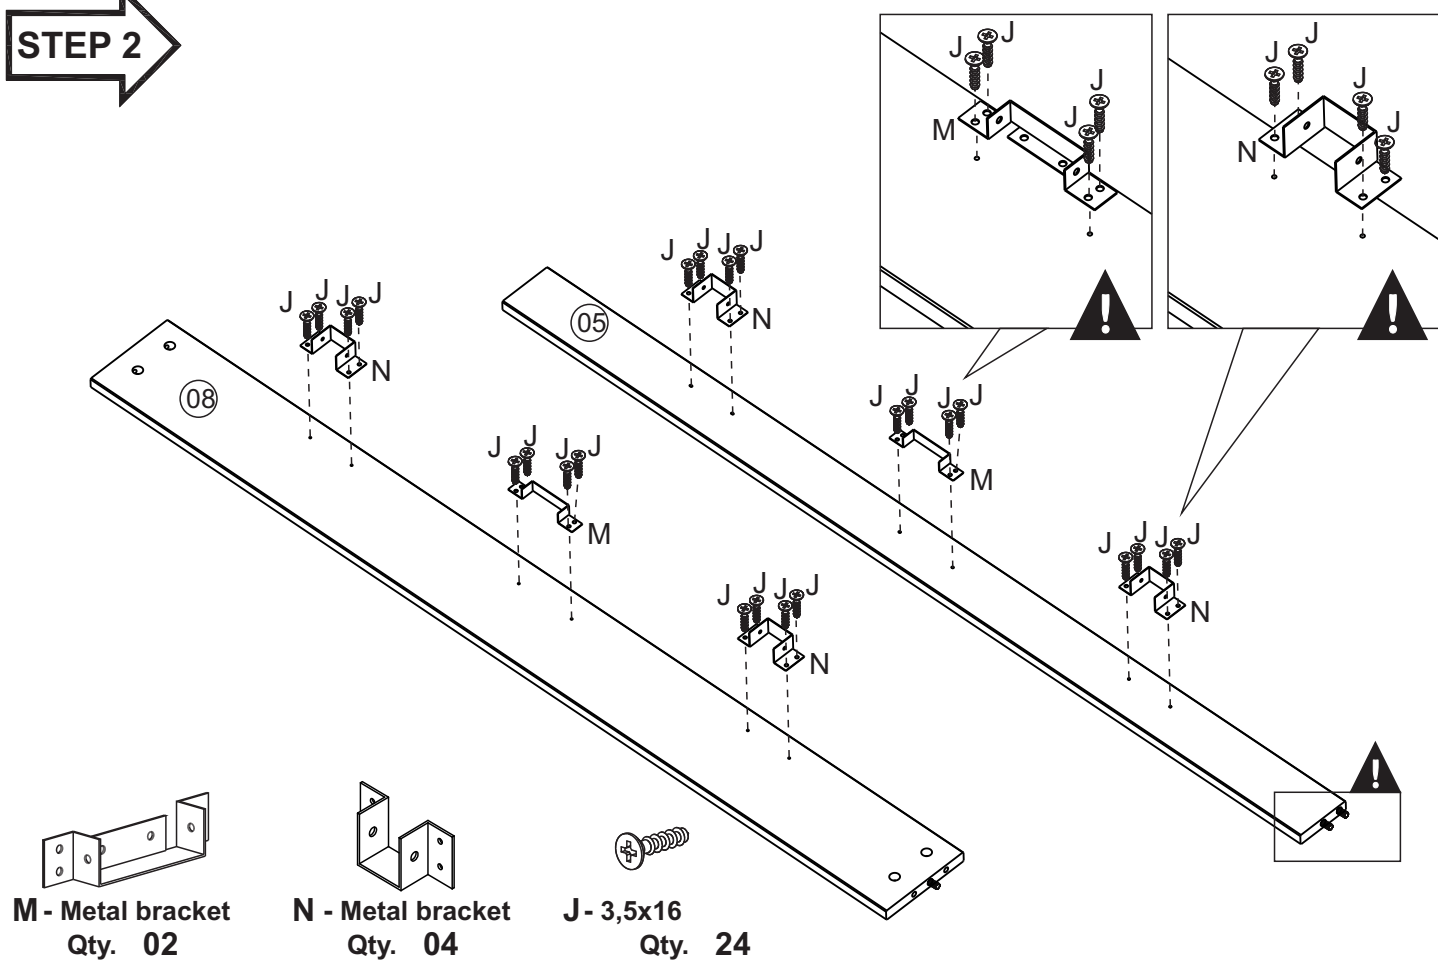


STEP 3

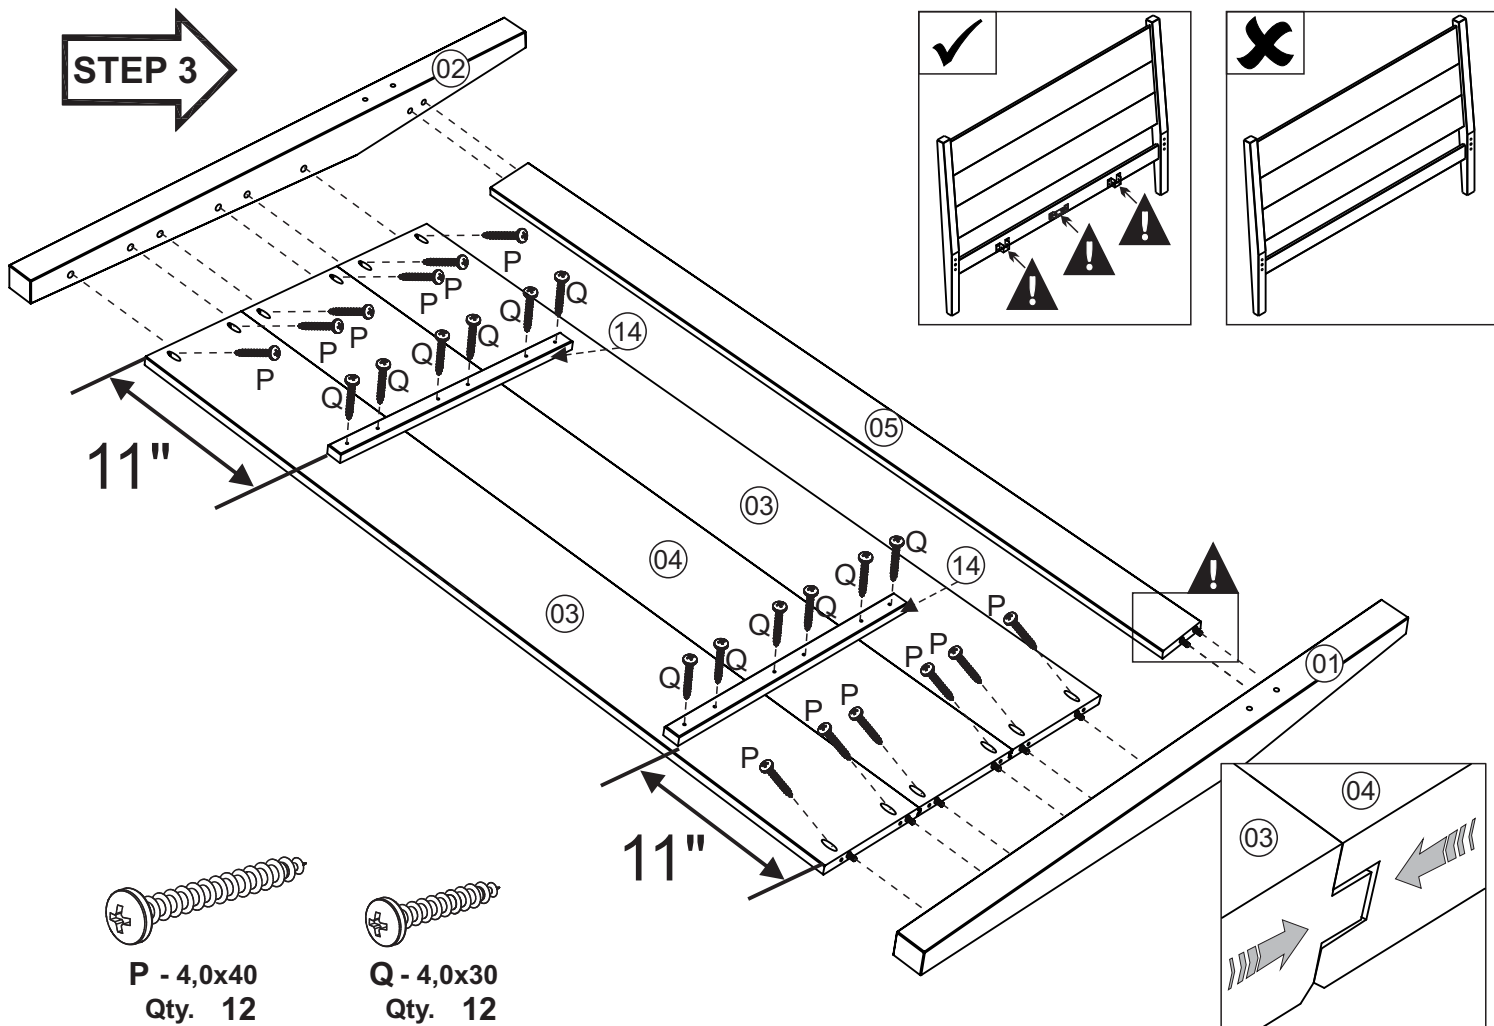


STEP 4

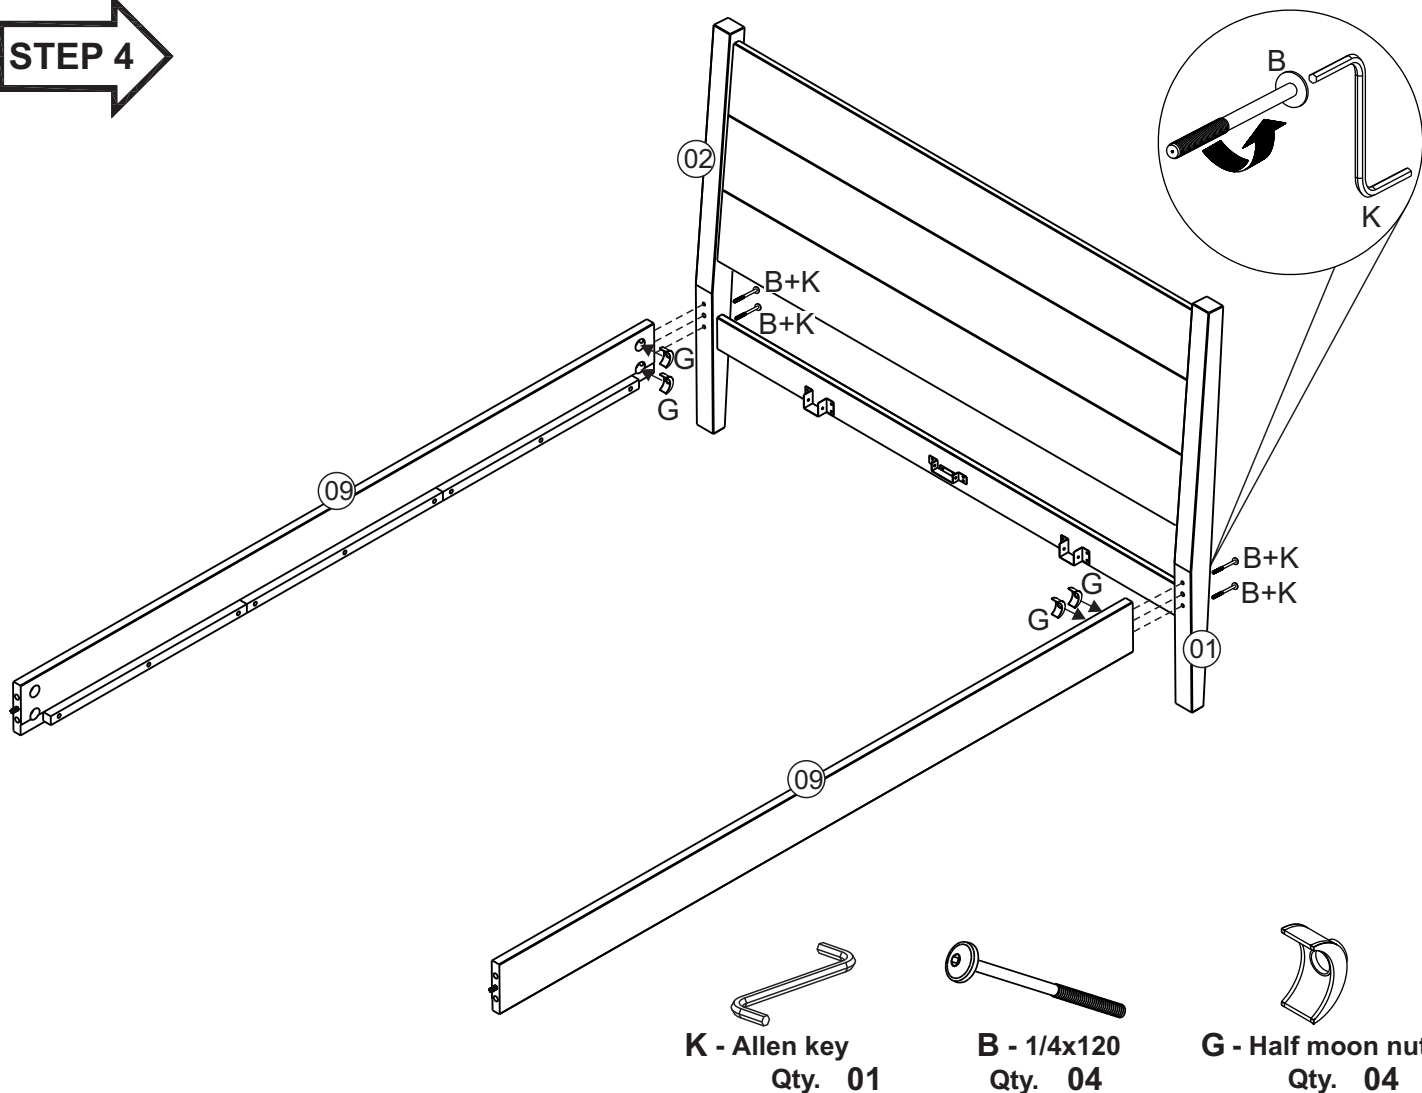

STEP 5

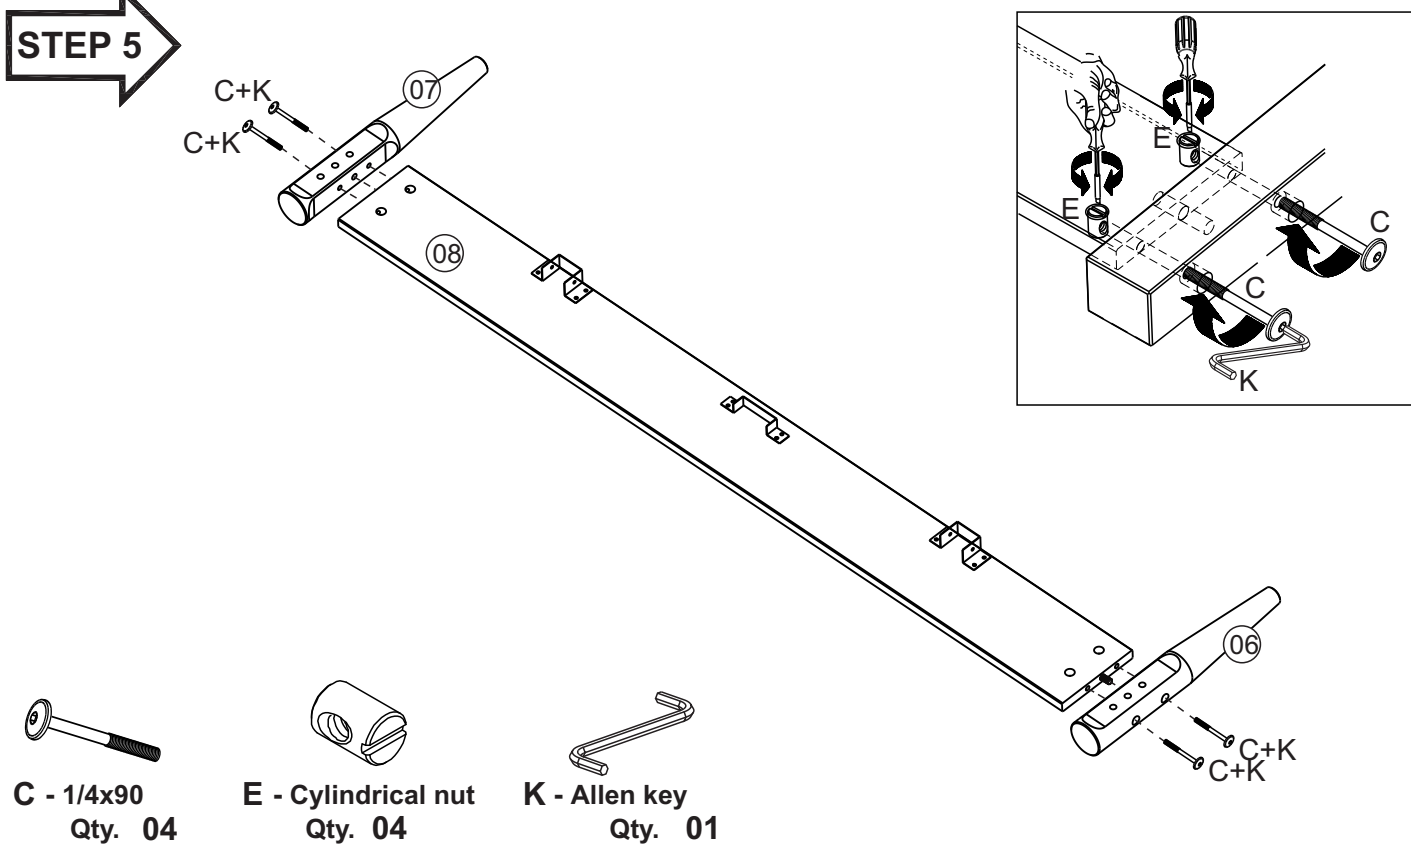


STEP 6

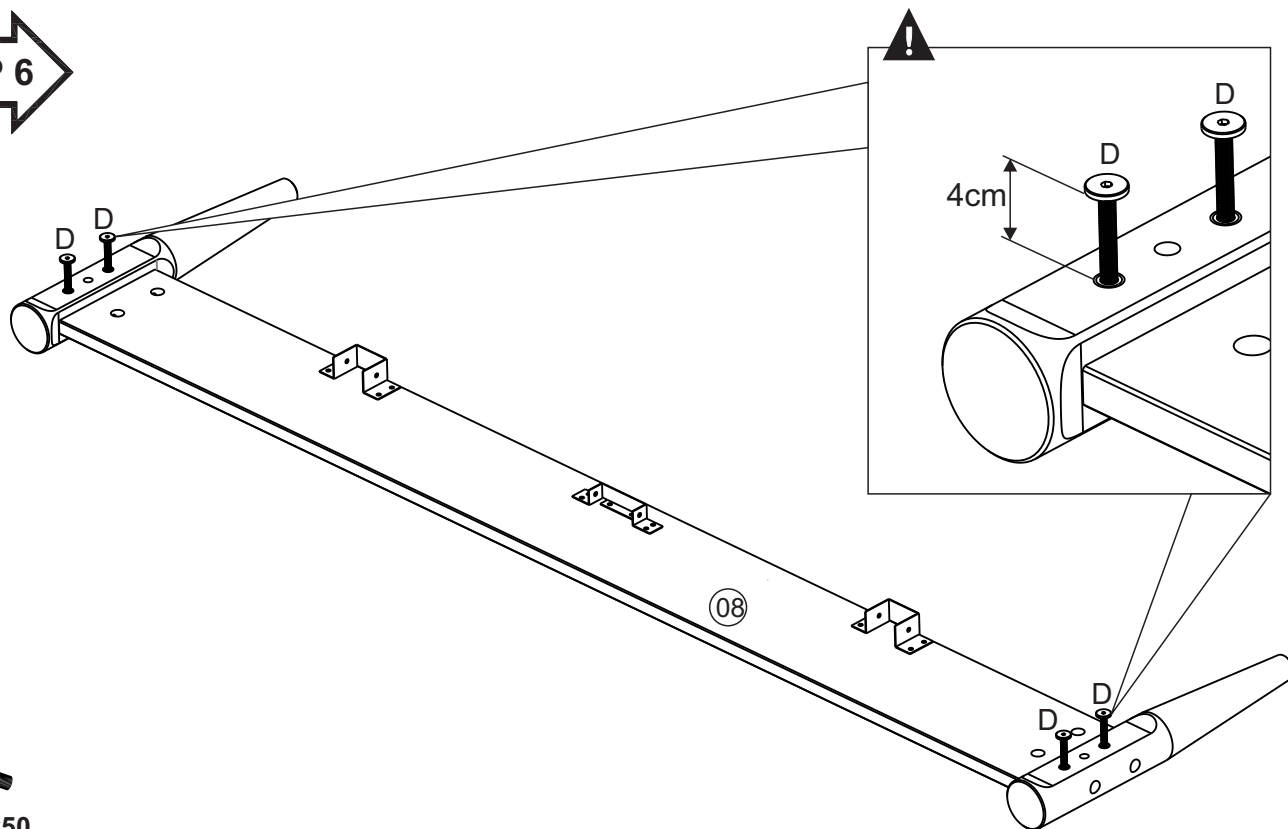

D - 1/4x50
Qty. 04


STEP 7

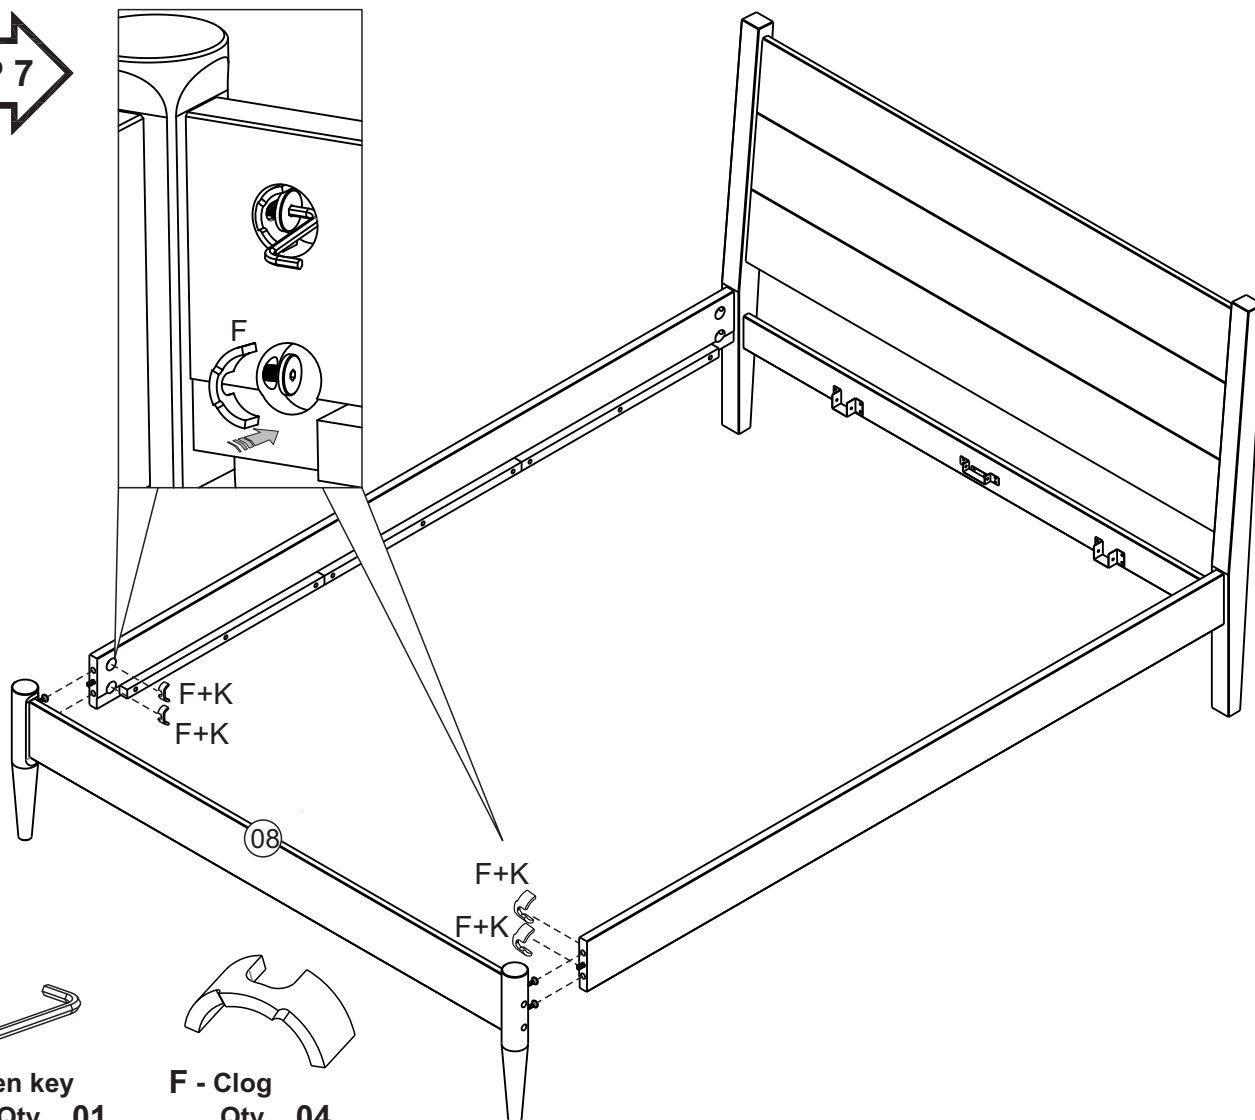


K - Allen key
Qty. 01

F - Clog
Qty. 04


STEP 8


 H - 4,0x45
 Qty. 04


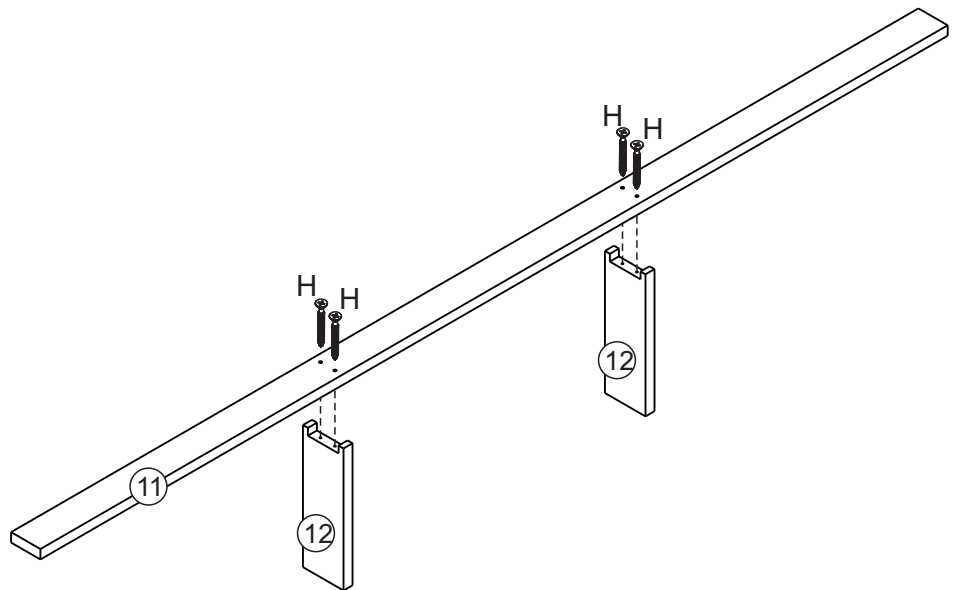


STEP 9


 J - 3,5x16
 Qty. 12


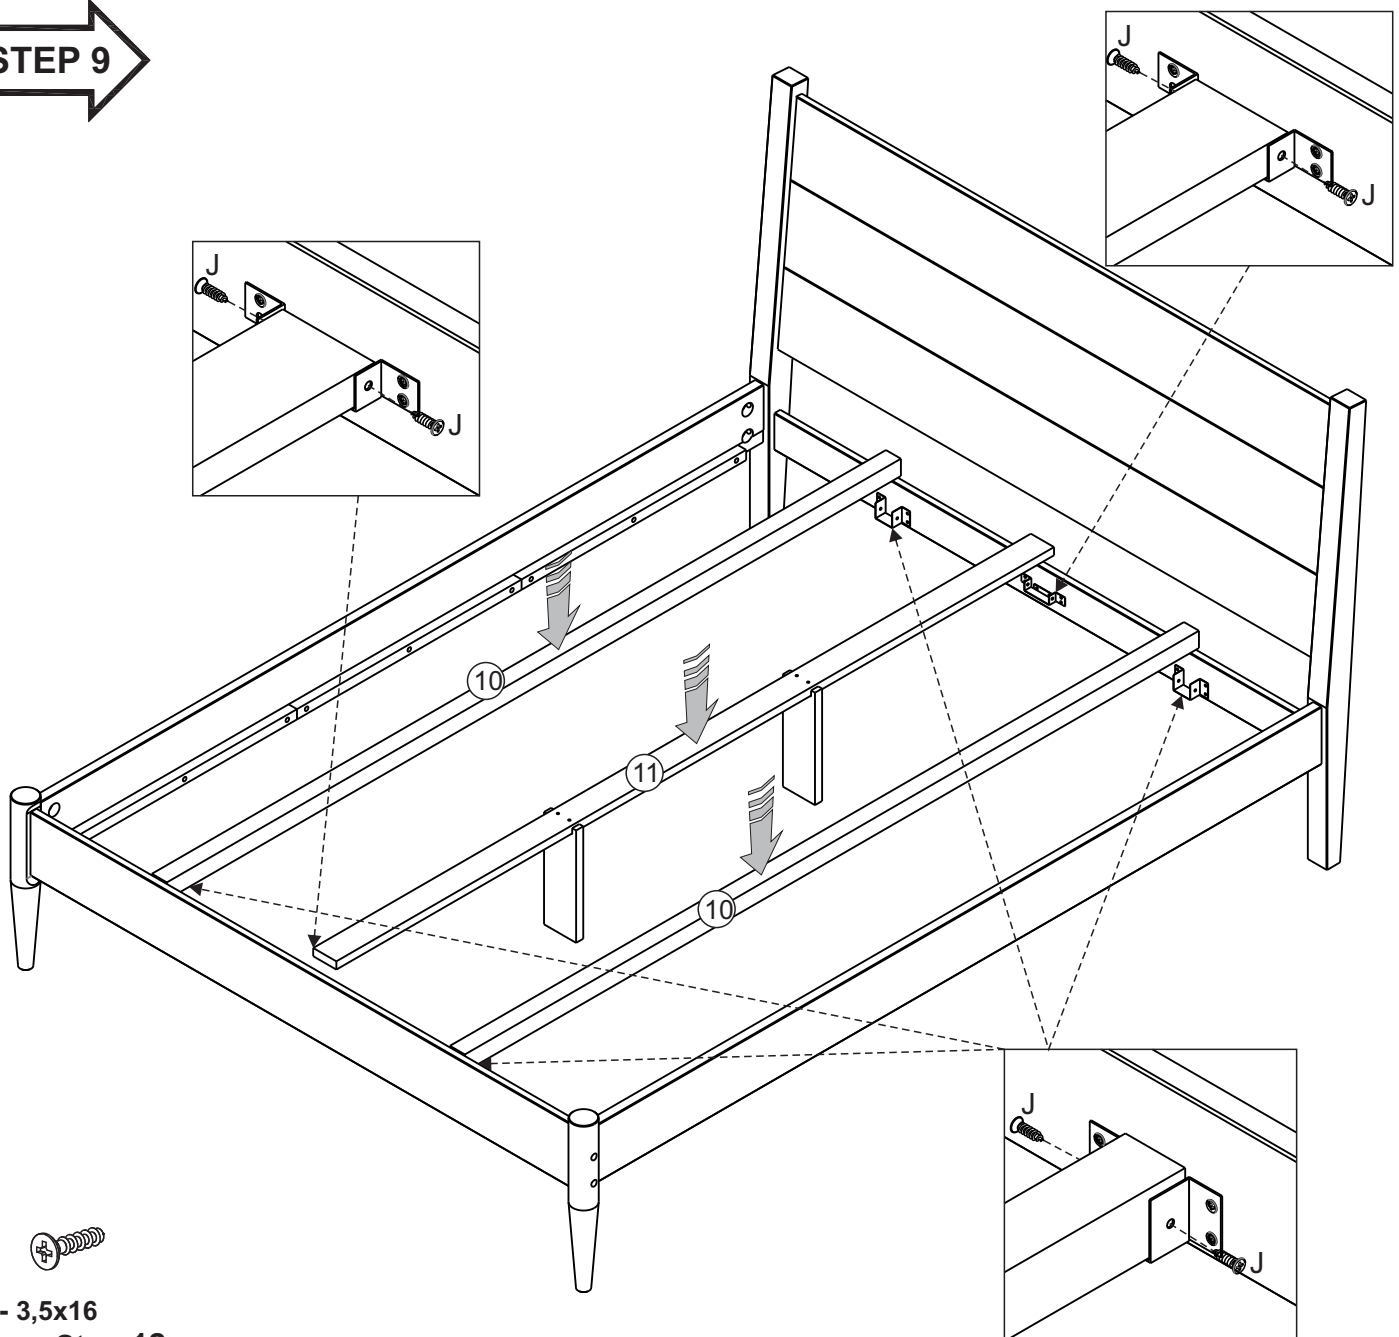


STEP 10

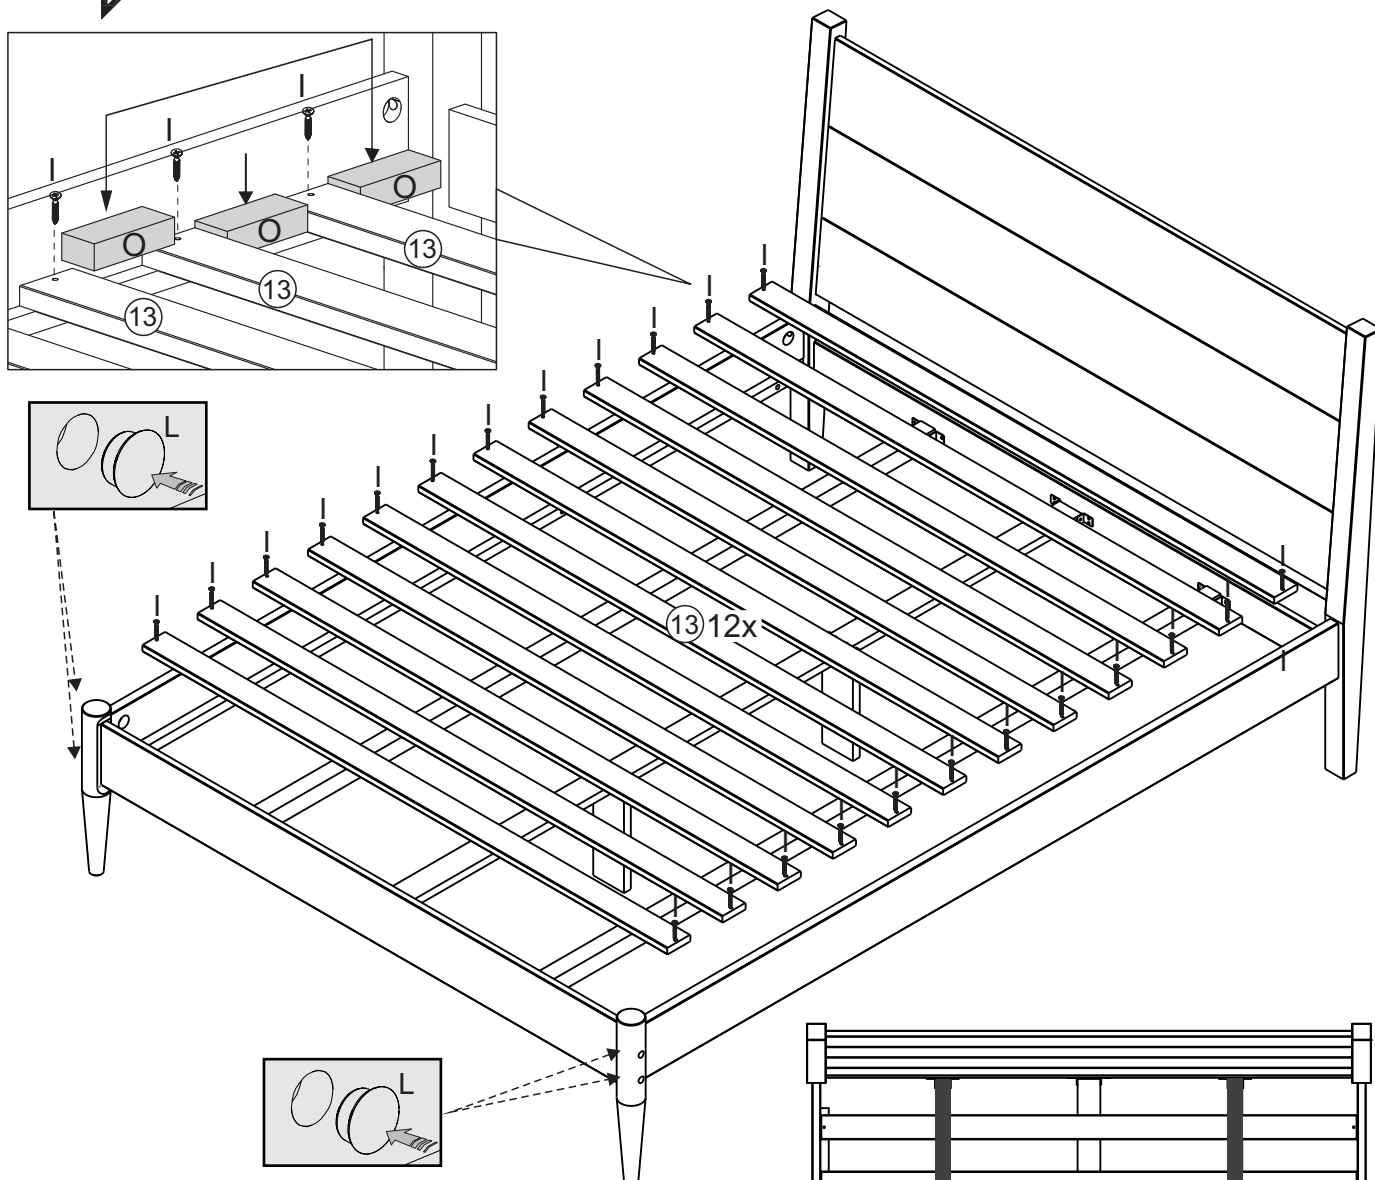

Apply pressure to cross beams (9) to ensure that mattress supports (13) fit evenly between cross beams.


Install slat kit with spacer tape on top (Facing up).

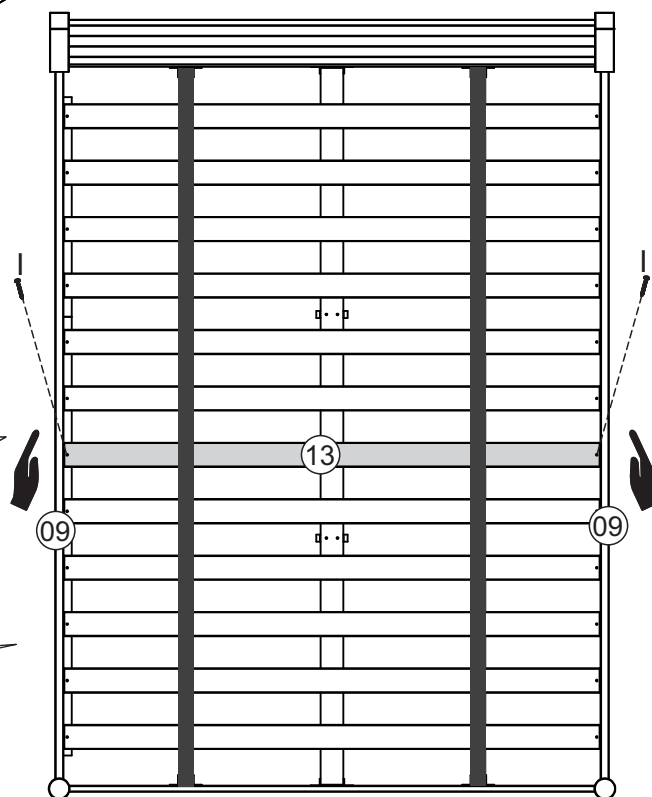

I - 3,5x30
Qty. 24



L - Hole plugs
Qty. 04



O - Space wooden
Qty. 02