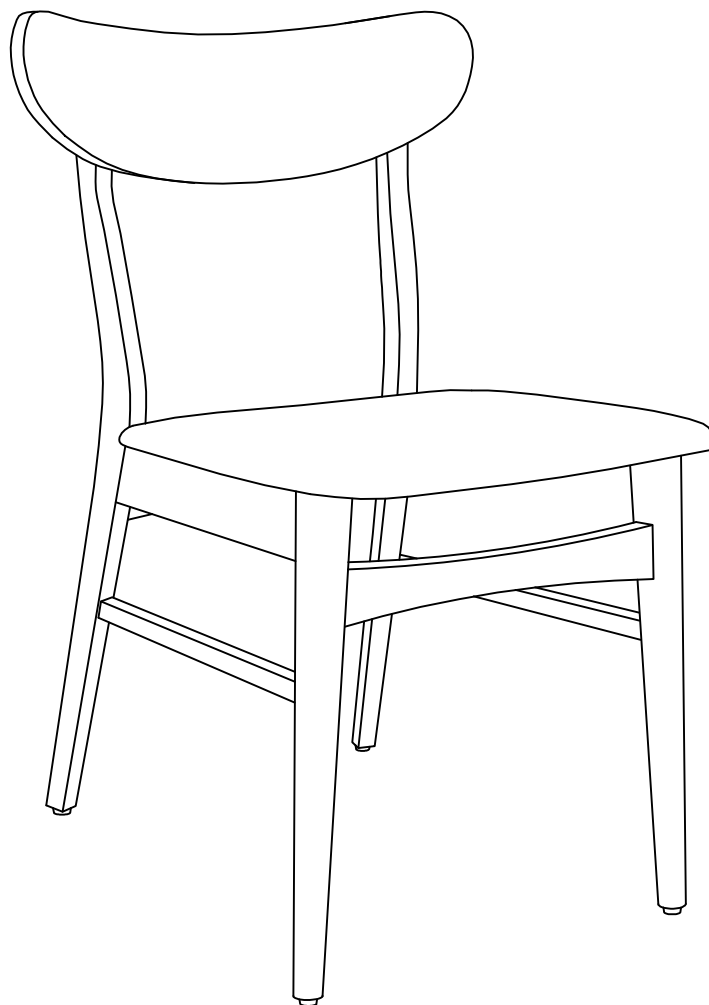








CROSLEY

FURNITURE





Wood Dining Chair CF6021



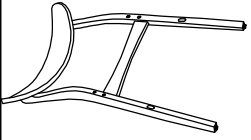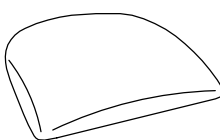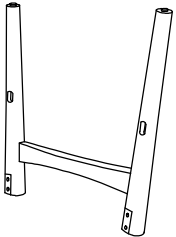PART LIST


<div data-bbox="167 154 217 203" data-label="Text">A</div> 	<div data-bbox="419 154 469 203" data-label="Text">B</div> 	<div data-bbox="671 154 721 203" data-label="Text">C</div> 	<div data-bbox="924 154 973 203" data-label="Text">DL</div> 	<div data-bbox="1176 154 1225 203" data-label="Text">DR</div> 
<div data-bbox="247 439 336 506" data-label="Text">Back 2 PCS</div>	<div data-bbox="499 439 588 506" data-label="Text">Seat 2 PCS</div>	<div data-bbox="726 439 869 506" data-label="Text">Front Leg 2 PCS</div>	<div data-bbox="957 439 1158 506" data-label="Text">Left Side Rail 2 PCS</div>	<div data-bbox="1193 439 1417 506" data-label="Text">Right Side Rail 2 PCS</div>
<div data-bbox="167 533 217 582" data-label="Text">E</div>  <div data-bbox="226 819 367 887" data-label="Text">Stretcher 4 PCS</div>				

HARDWARE LIST

<div data-bbox="167 1072 217 1122" data-label="Text">#1</div>  <div data-bbox="213 1301 379 1335" data-label="Text">M6 x 50mm</div>	<div data-bbox="419 1072 469 1122" data-label="Text">#2</div>  <div data-bbox="517 1301 579 1335" data-label="Text">1/4"</div>	<div data-bbox="671 1072 721 1122" data-label="Text">#3</div>  <div data-bbox="716 1301 882 1335" data-label="Text">M4 x 38mm</div>	<div data-bbox="924 1072 973 1122" data-label="Text">#4</div>  <div data-bbox="1027 1301 1075 1335" data-label="Text">M4</div>
<div data-bbox="185 1357 402 1424" data-label="Text">Bolt 16 PCS (Extra 2)</div>	<div data-bbox="435 1357 655 1424" data-label="Text">Spring Washer 16 PCS (Extra 2)</div>	<div data-bbox="691 1357 908 1424" data-label="Text">Screw 16 PCS (Extra 2)</div>	<div data-bbox="962 1357 1145 1424" data-label="Text">Allen Wrench 1 PC</div>

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Step 1 . Attach side rails (parts DL & DR) to back (part A) using bolts (part #1), spring washers (part #2) and allen wrench (part #4). See Figure 1. Attach stretchers (part E) to back (part A) using screws (part #3) and phillips head screwdriver. See Figure 2.

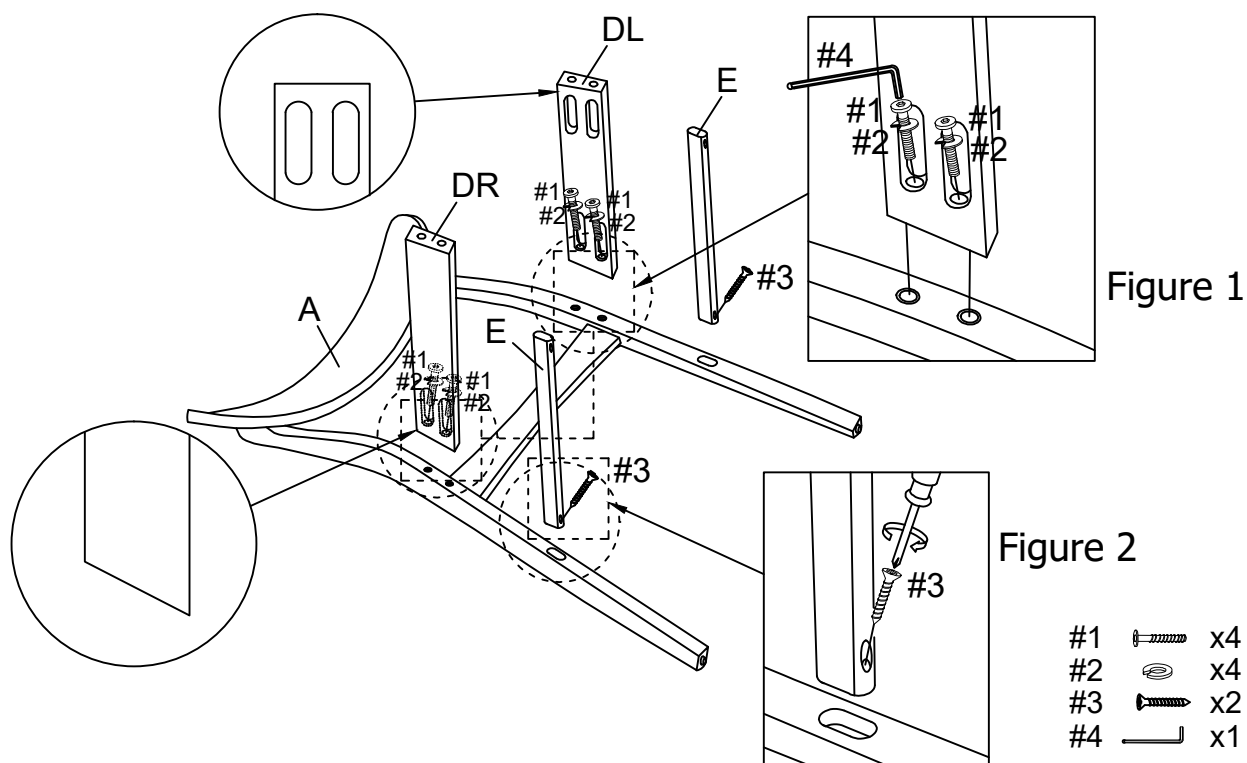NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 2 . Attach front leg (part C) to side rails (parts DL & DR) and stretchers (part E) using bolts (part #1), spring washers (part #2), screws (part #3), allen wrench (part #4) and phillips head screwdriver.

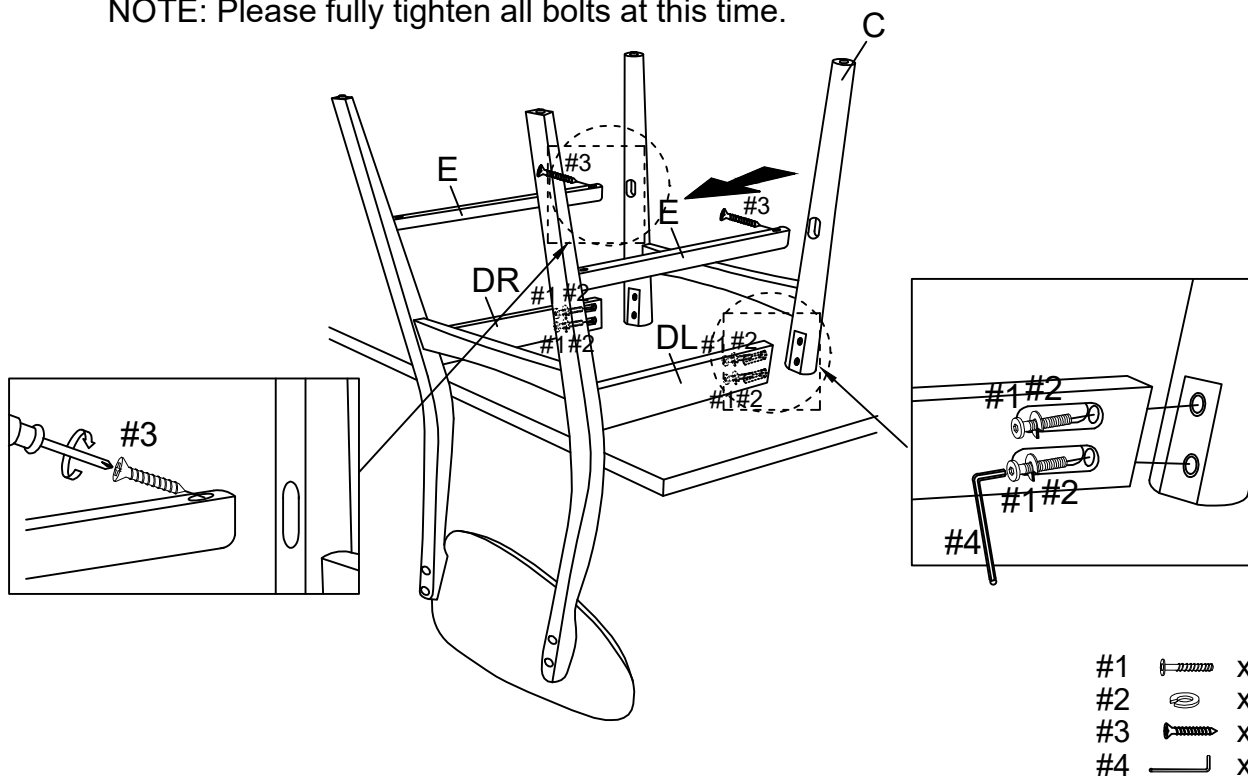NOTE: Please fully tighten all bolts at this time.



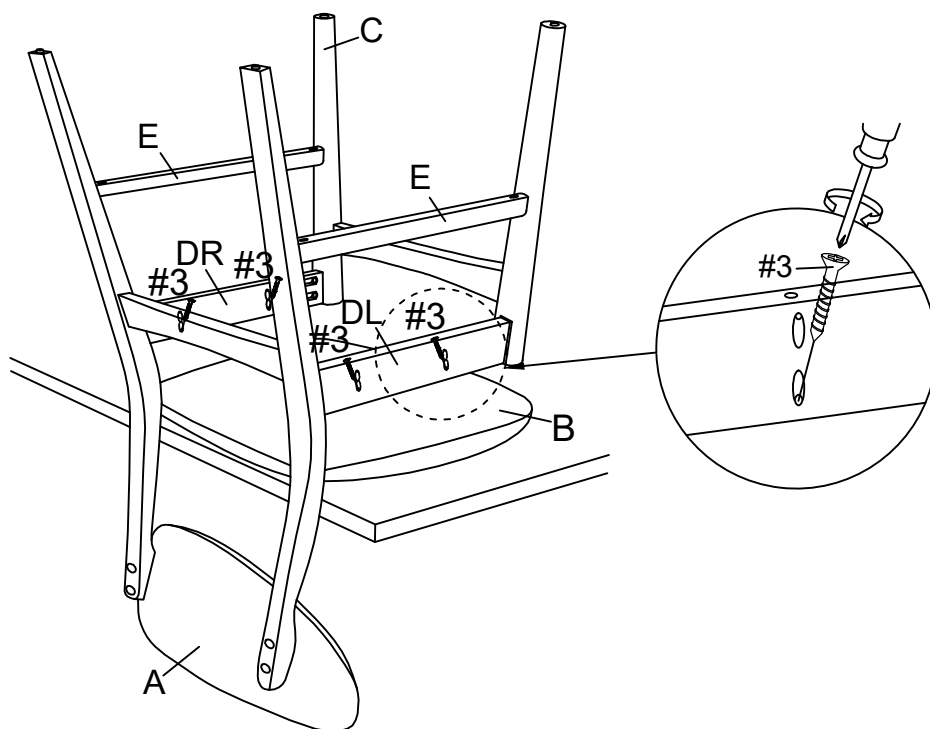Step 3 . Attach seat (part B) to side rails (parts DL & DR) using screws (part #3) and phillips head screwdriver.



#3  x4

Step 4. Carefully turn unit upright. Repeat steps 1-3 to assemble remaining chair.

