

WF 310874/WF 310875

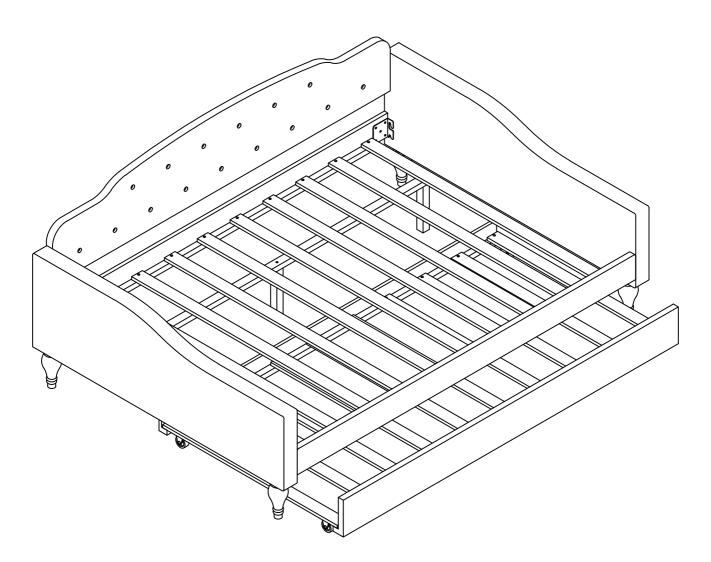


#### **IMPORTANT NOTE**

- \*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- \*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- \*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

**MADE IN VIETNAM** 

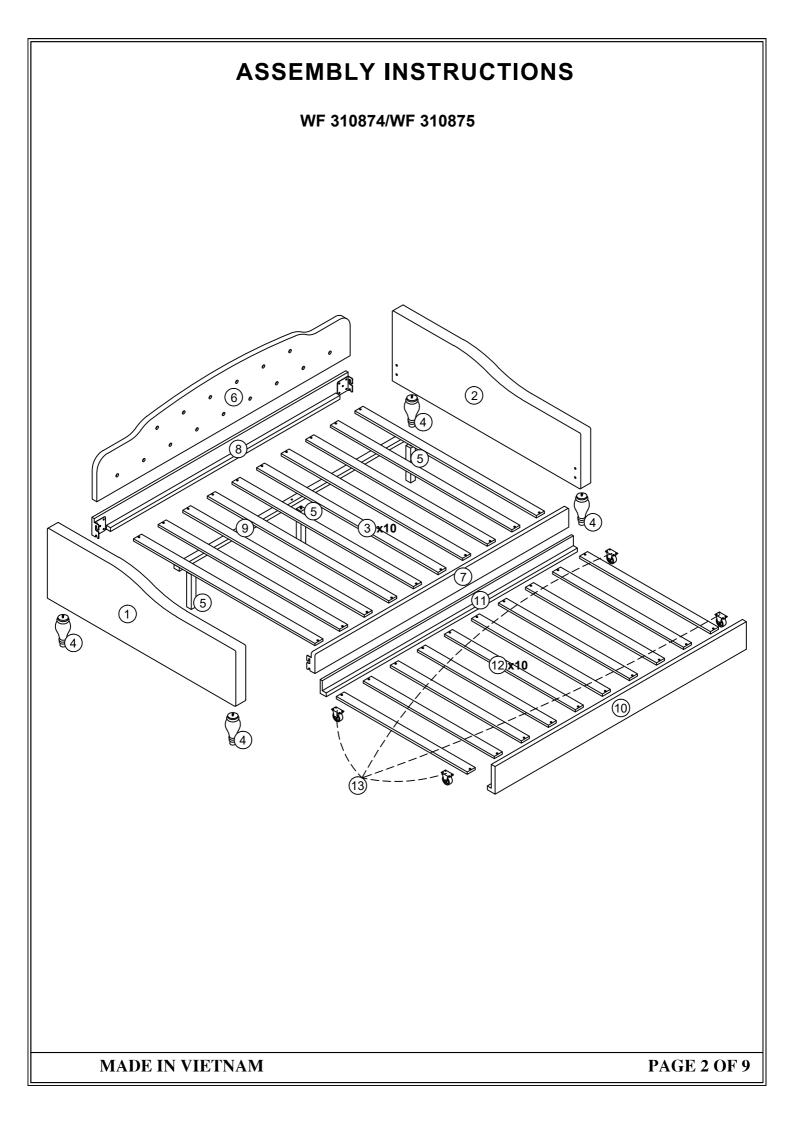


#### WF 310874/WF 310875

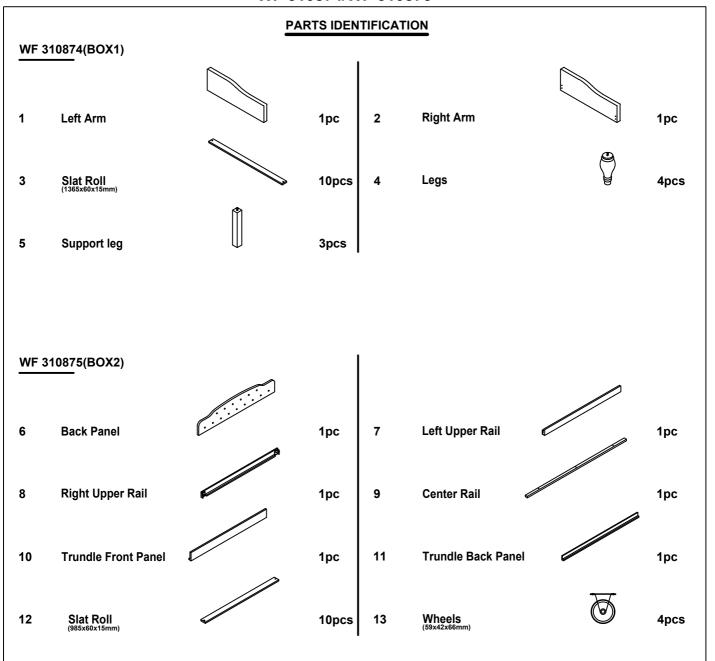

MADE IN VIETNAM PAGE 3 OF 9


#### WF 310874/WF 310875

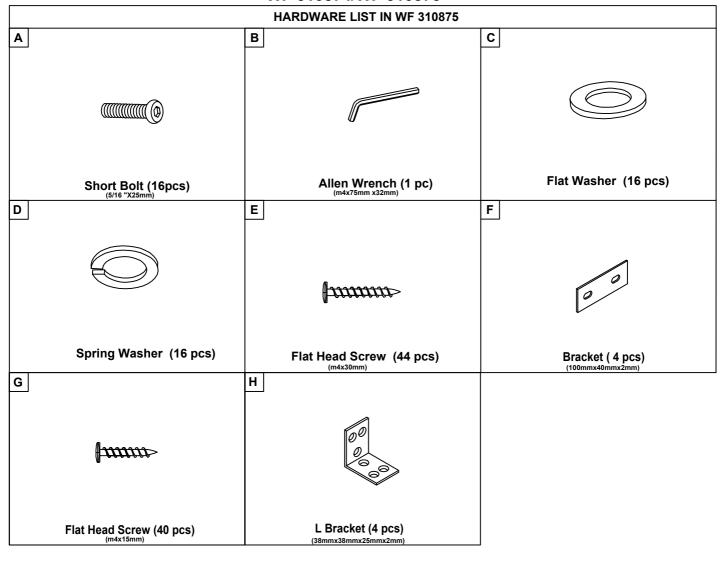


MADE IN VIETNAM

PAGE 4 OF 9



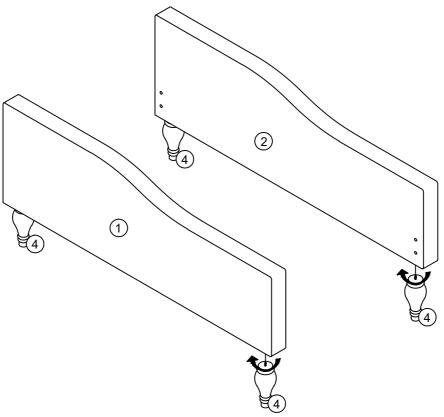


### STEP 2

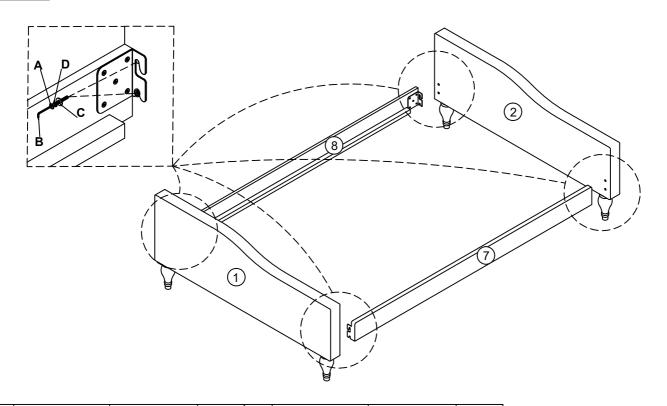



A	Bolt (5/16 "x25mm)	8pcs	D	Spring Washer	8pcs
В	Allen Wrench (M5x75mm x32mm)	1рс	С	Flat Washer	8pcs


MADE IN VIETNAM

PAGE 5 OF 9

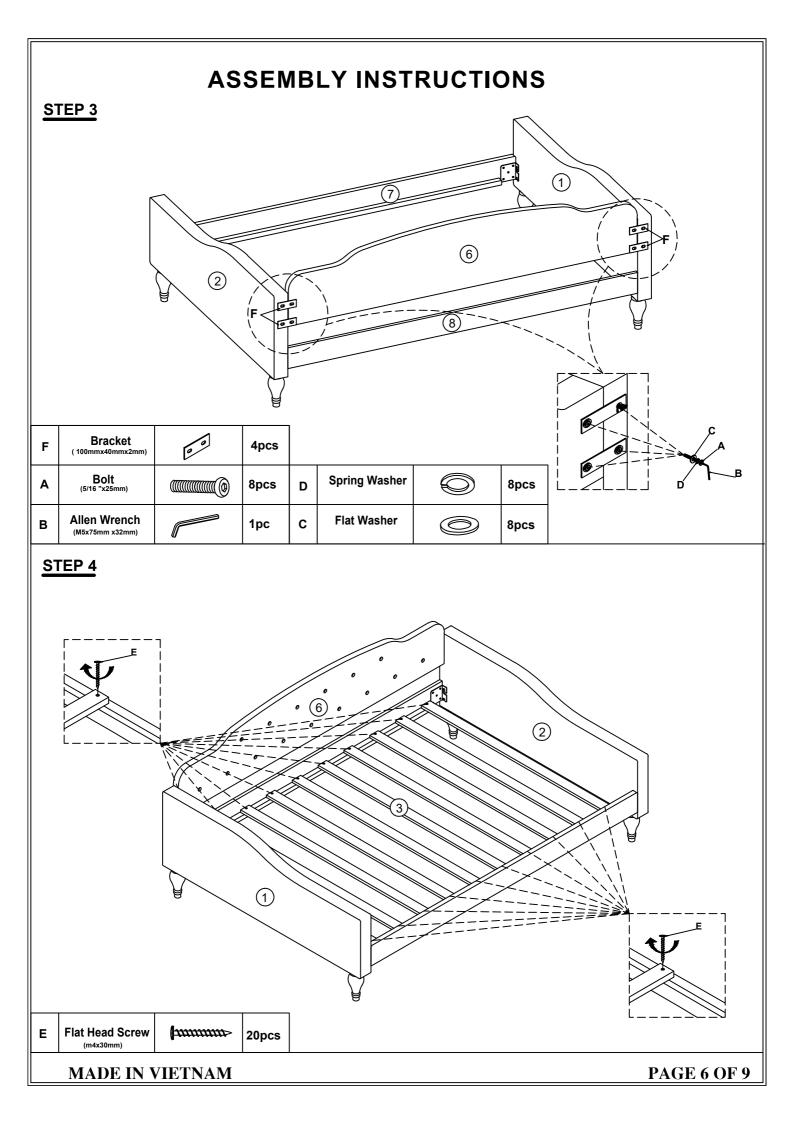


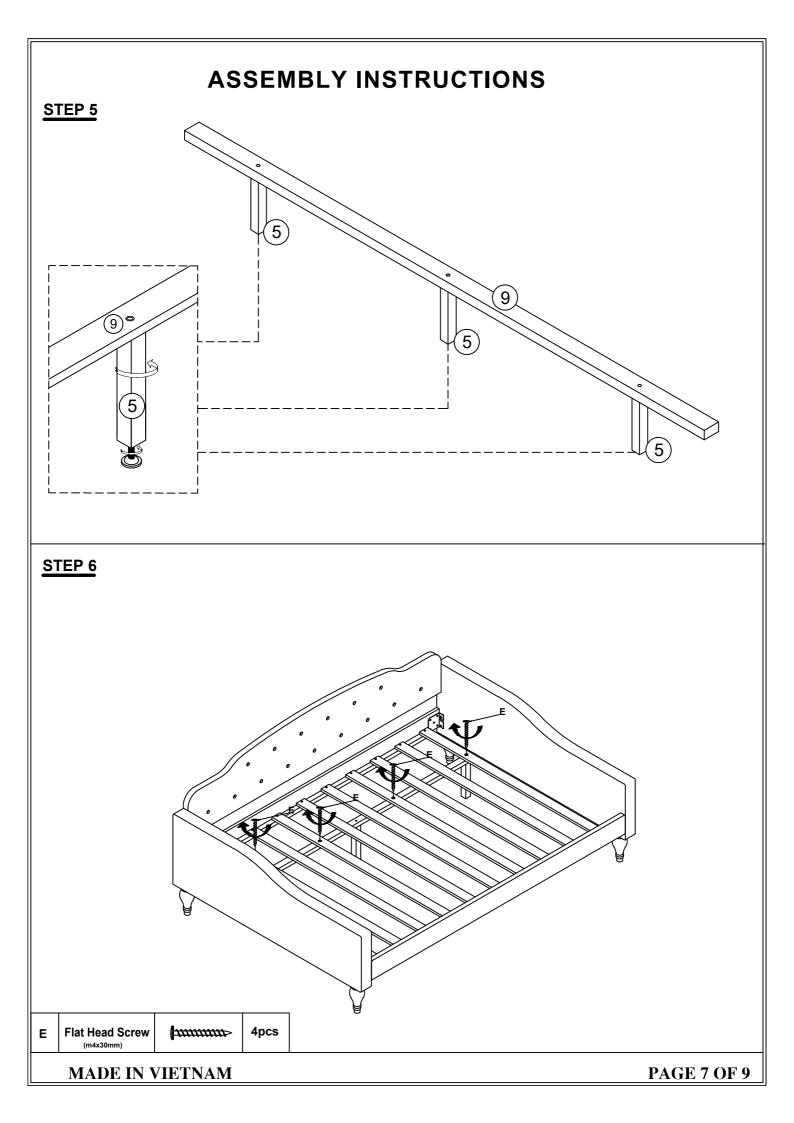

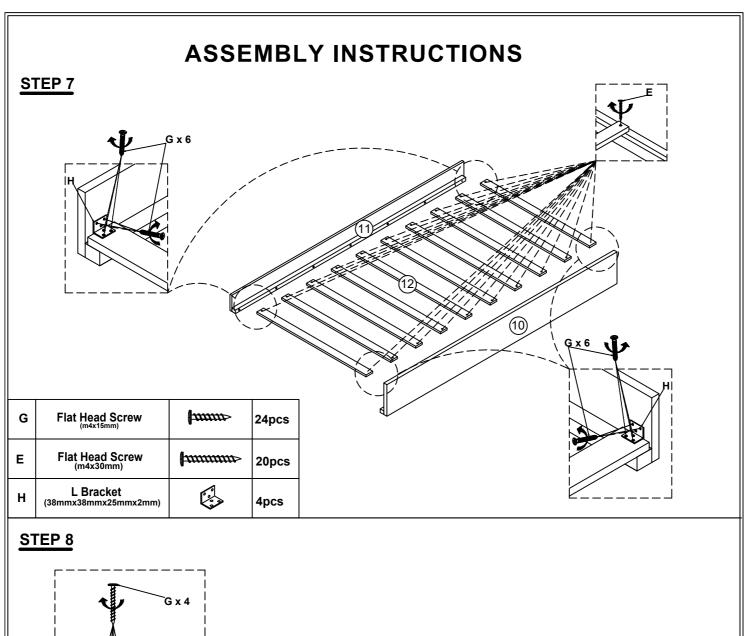

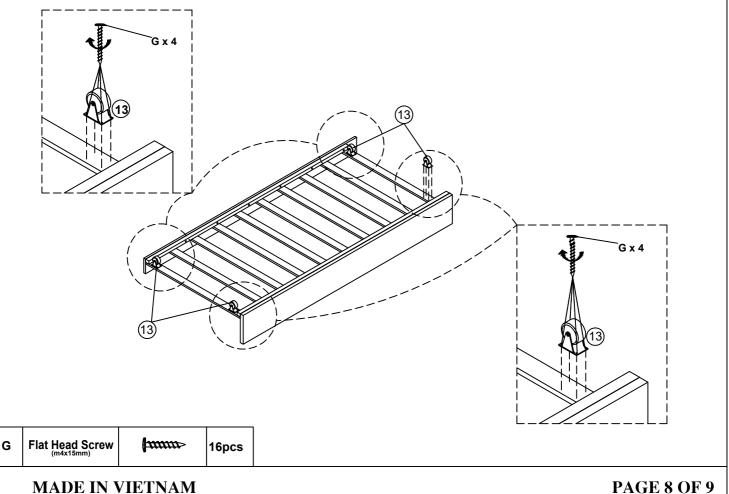

STEP 9 COMPLETE

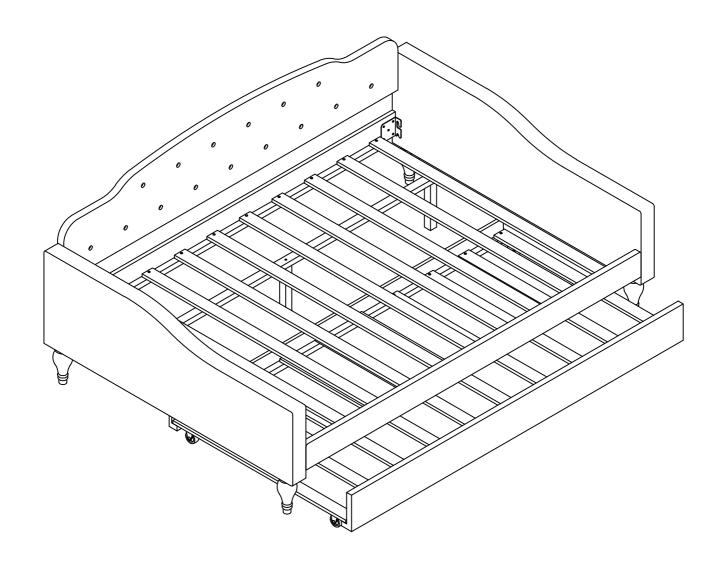

MADE IN VIETNAM

PAGE 9 OF 9