


Wardrobe

Assembly Instructions - Please keep for future reference

WF311140AAK

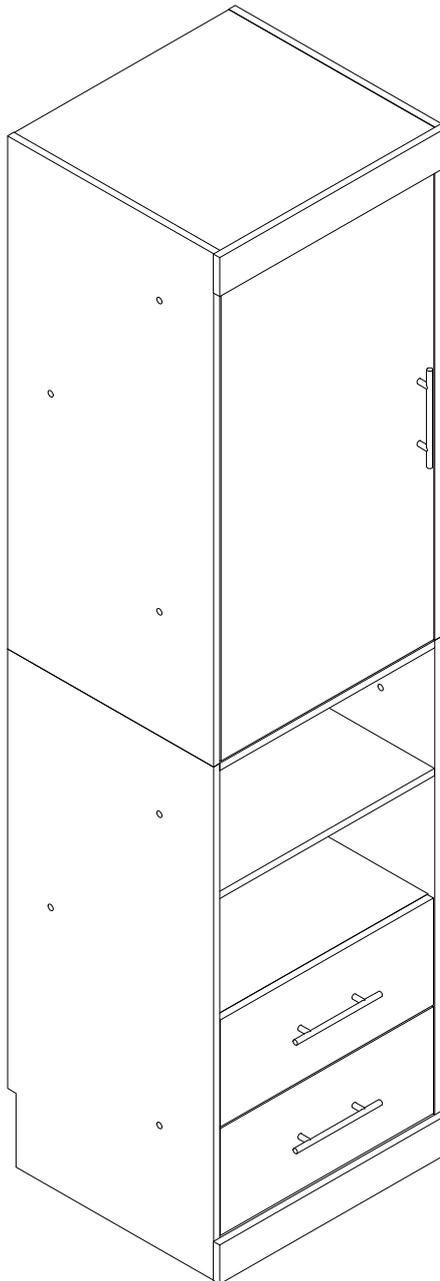

Dimensions

Width - 21.1inch
Depth - 19.7inch
Height - 83inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

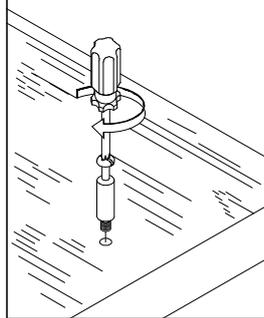

Step 2

Push the male camlock into the entry hole.

2

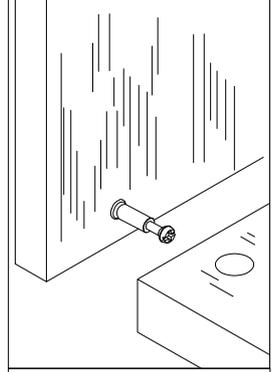


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

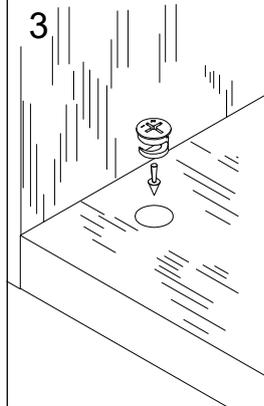


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

4

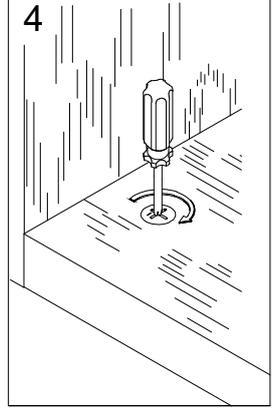

Adjusting Hinges

Hinge adjustment:



a: To move the top panel up or down, loosen screws shown and move top panel to suit

b. To move the top panel in or out, loosen screws shown and move top panel to suit.


Retighten screws

C: To move the top panel left or right, adjust screws shown.



a:

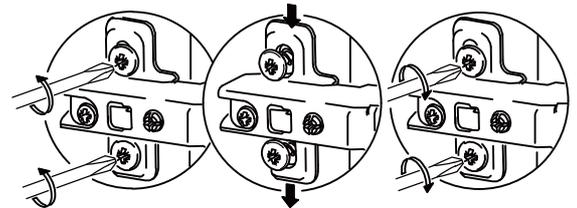


b:

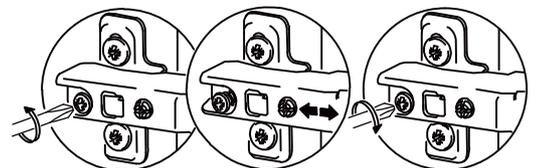

























c:

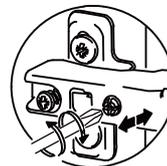

Assembly Instructions

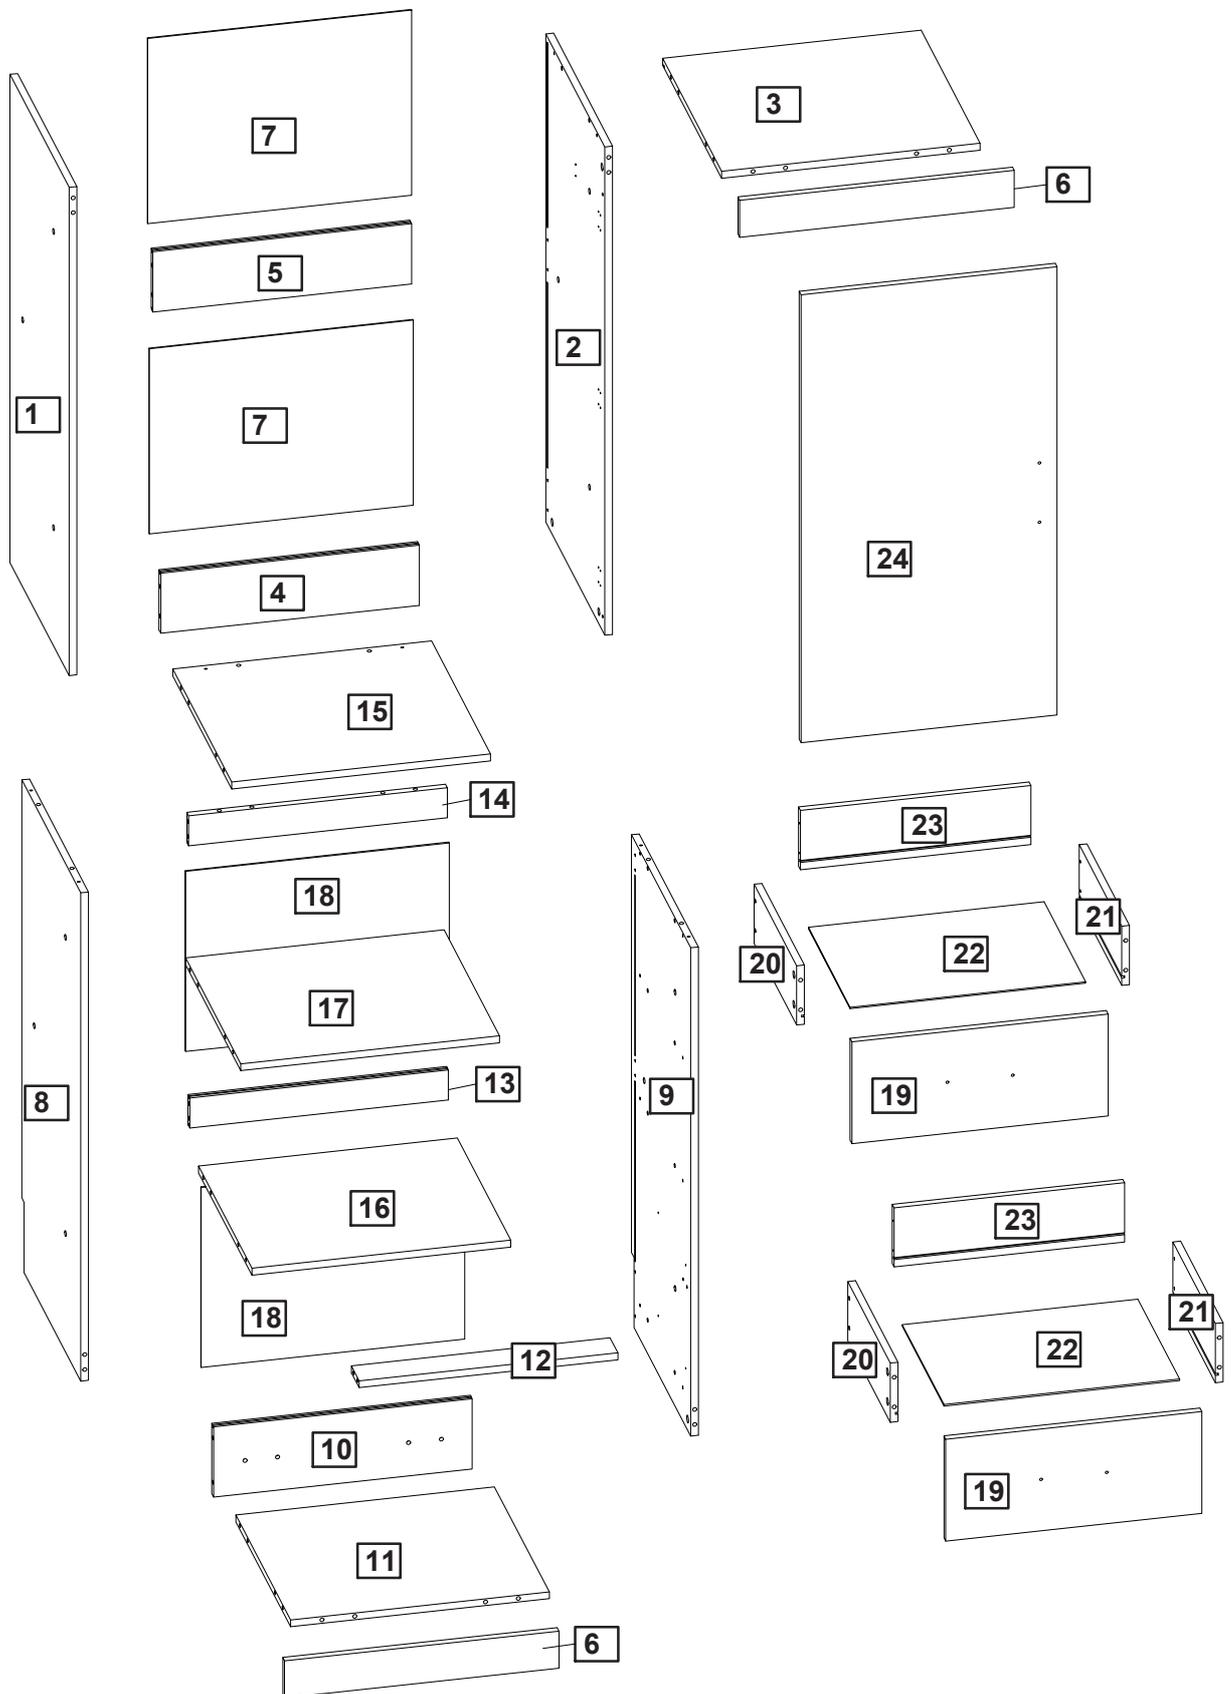

Part List: WF311140AAK

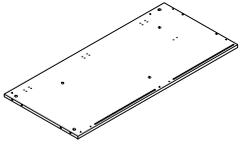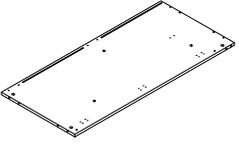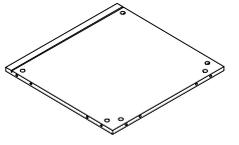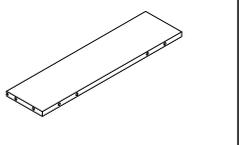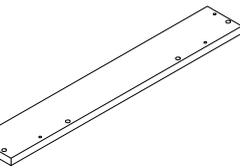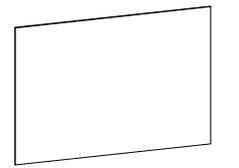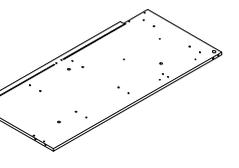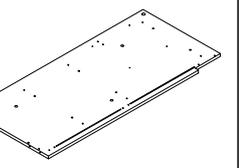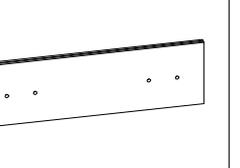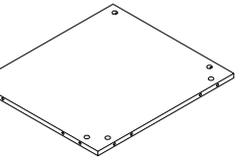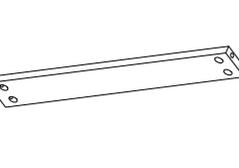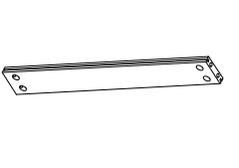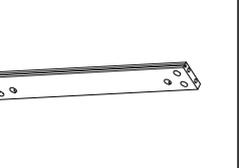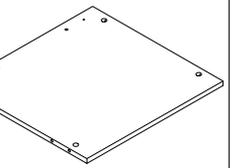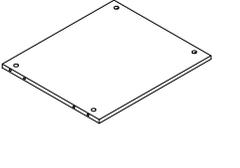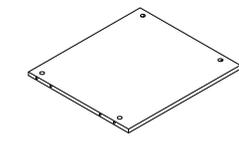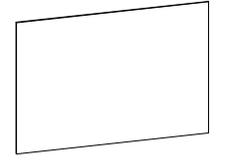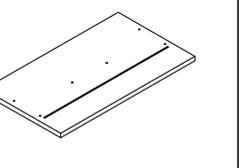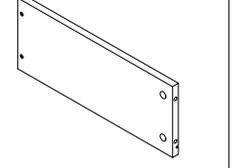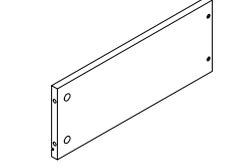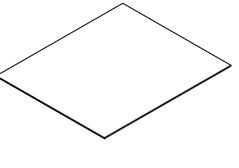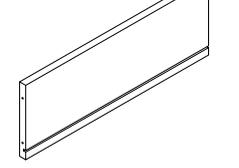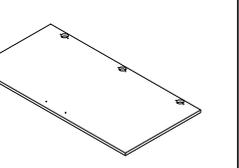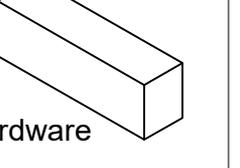 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>2 PCS</p>	 <p>2 PCS</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>	 <p>1 PC</p>
 <p>1 PC</p>	 <p>1 PC</p>	 <p>2 PCS</p>	 <p>2 PCS</p>	 <p>2 PCS</p>
 <p>2 PCS</p>	 <p>2 PCS</p>	 <p>2PCS</p>	 <p>1 PC</p>	 <p>Hardware 1 PC</p>

Hardware list: WF311140AAK


Please check you have all the panels listed below

Note: The quantitie below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Male Camlock x 68	B  Female Camlock x 68	C  Dowel x 38
D  6*50mm Screw x 2	E  Hex Key M4 x 1	F  4*30mm Screw x 8
G  Back Panel Stiffener x 16	H  Door Hinge x 3	I  Handle & Fixings x 3
J  Drawer slider 14" x 2	K  3.5*14mm Screw x 22	L  Ø20 Sticker x 36
M  Nut x 6	N  Coat Hook x 2	O  Clothes Hanger x 1
P  3*12mm Screw x 16	Q  Shelf Support Pin x 2	




Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1


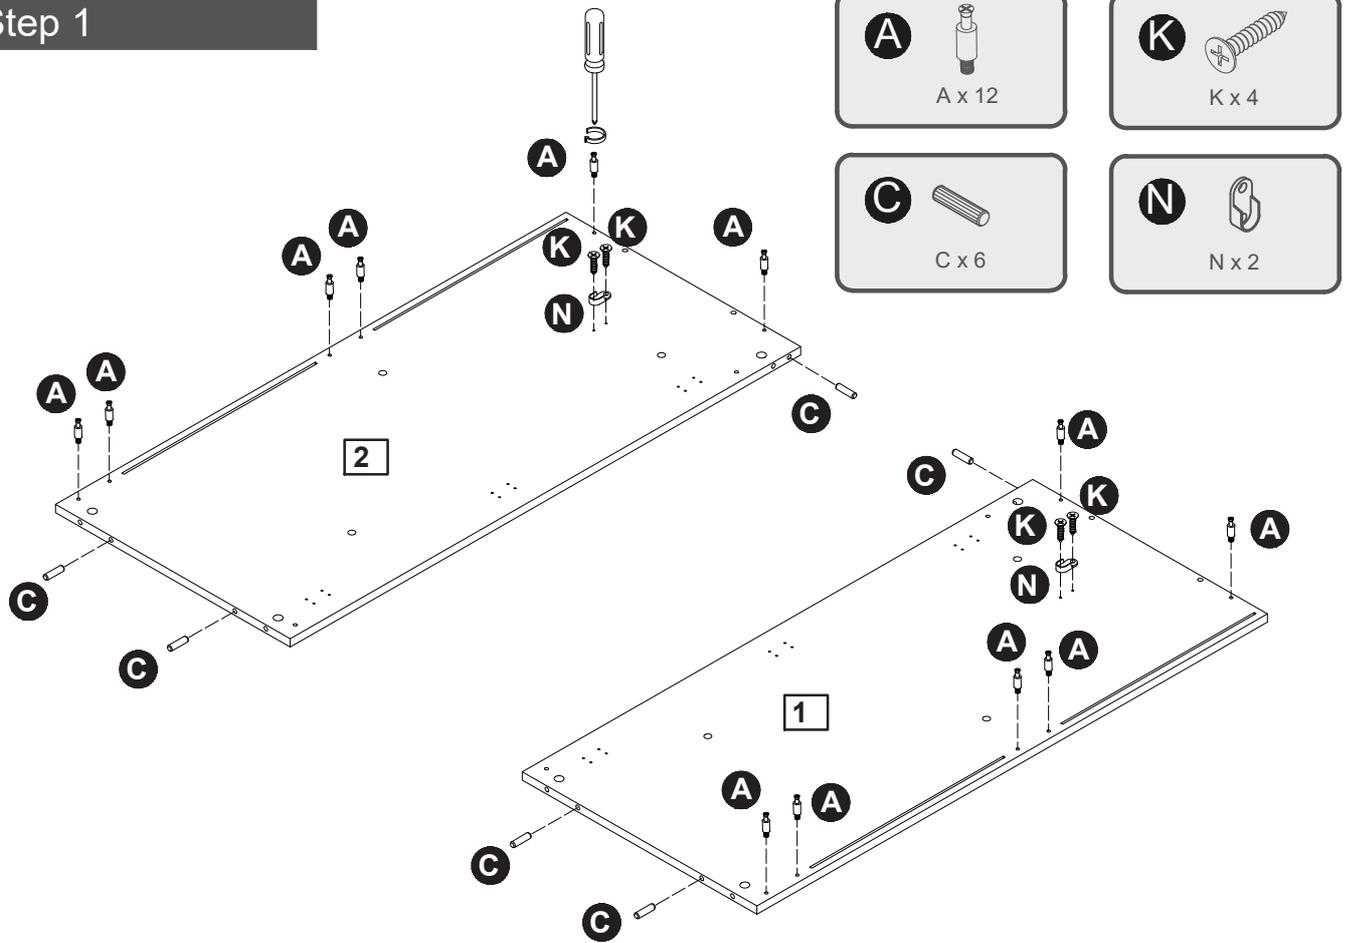


Step 2


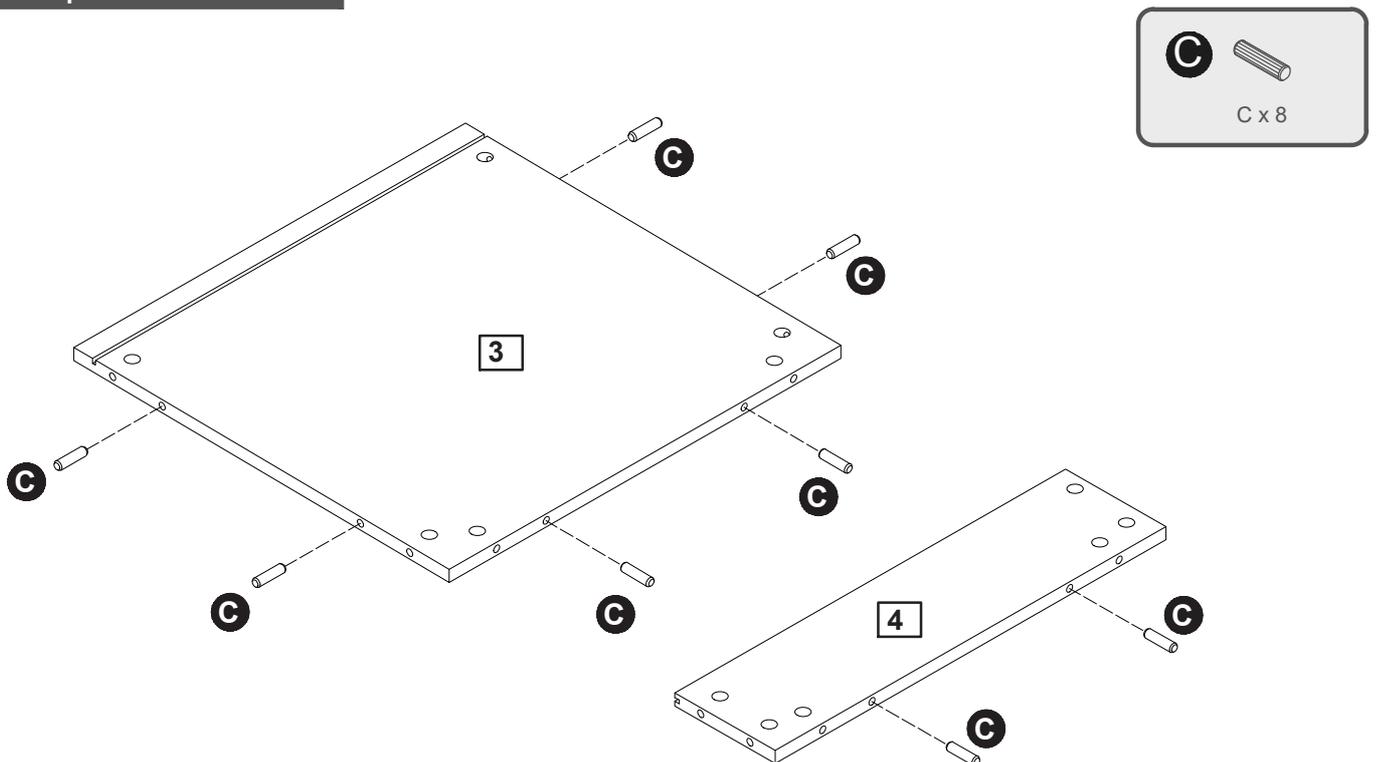


Assembly Instructions

Step 3

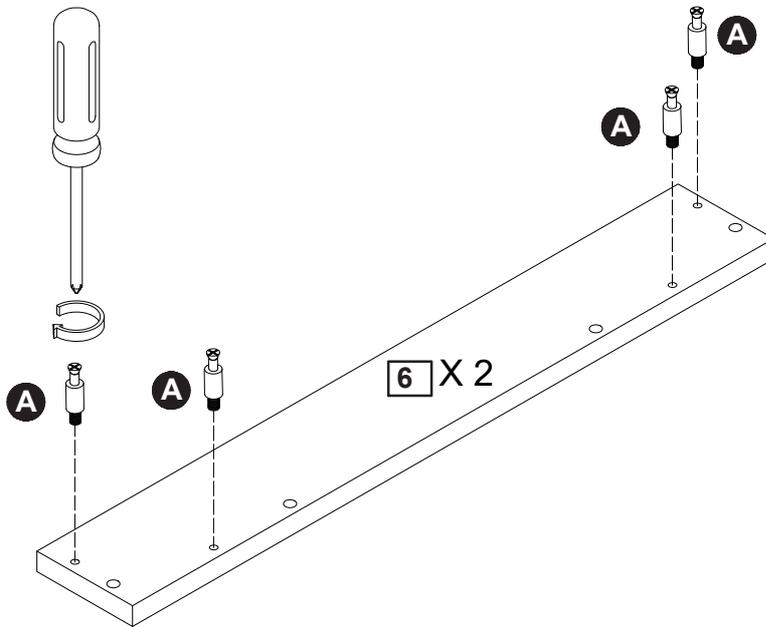
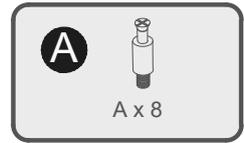


Step 4

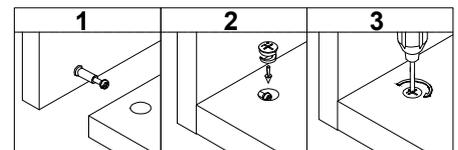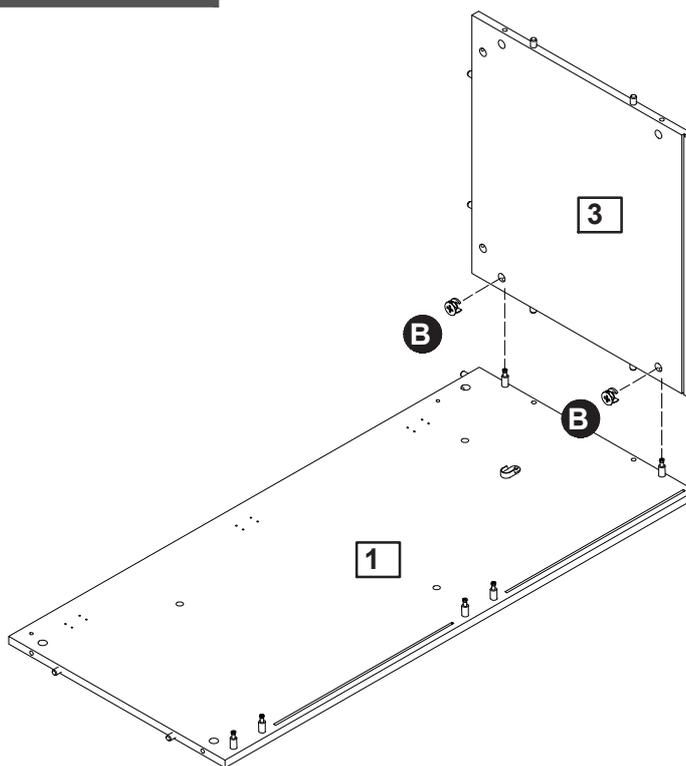


Assembly Instructions

Step 5

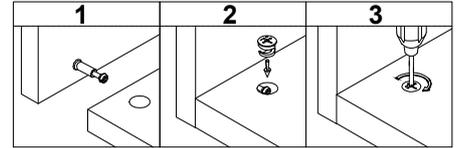
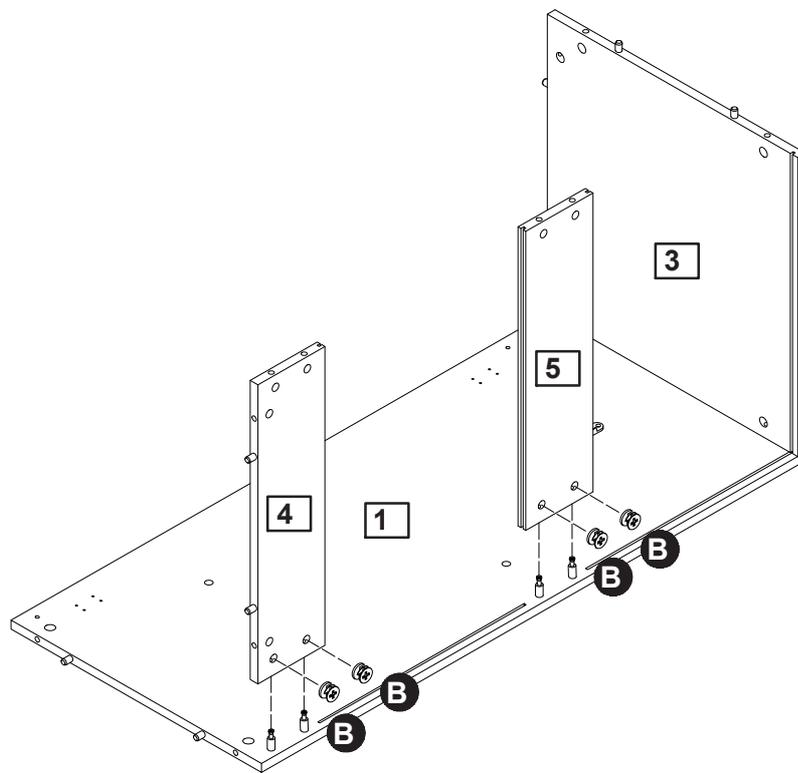


Step 6


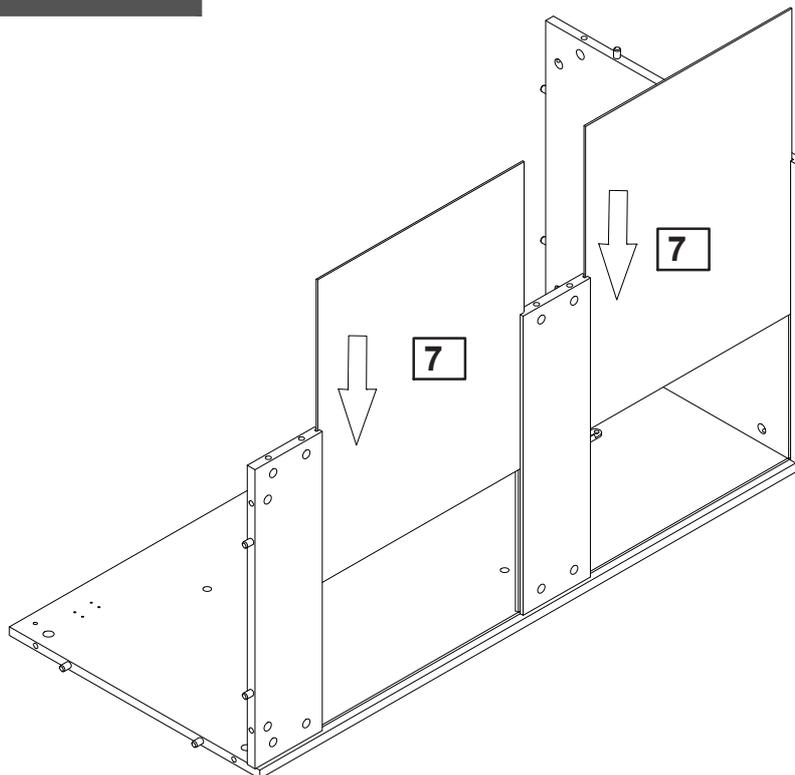


Assembly Instructions

Step 7


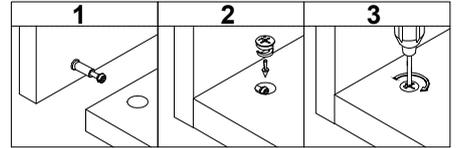
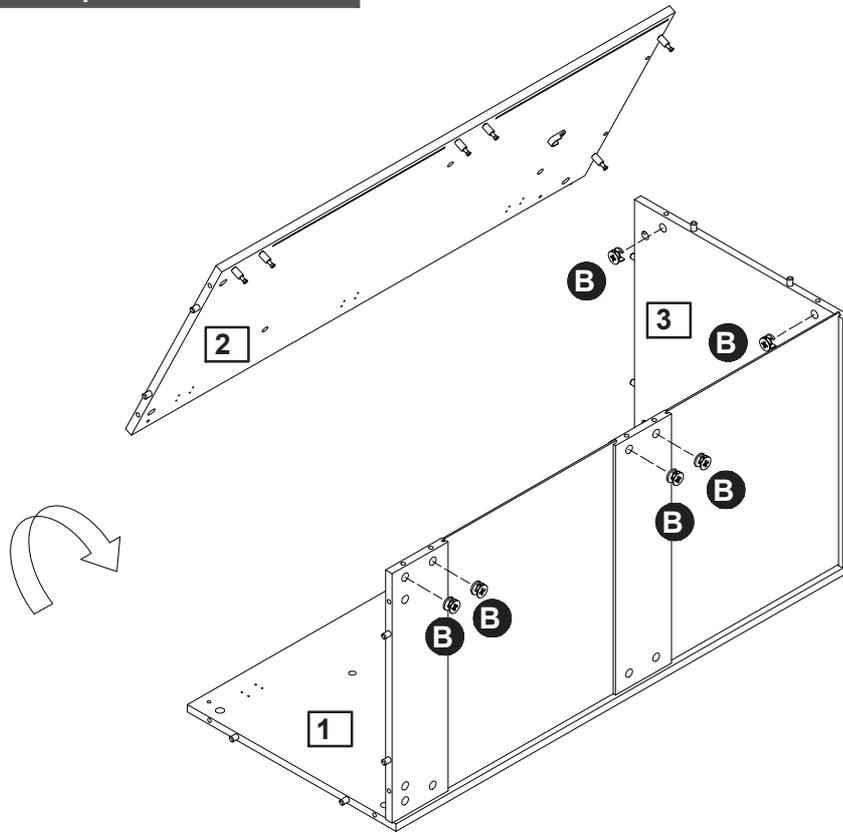


Step 8

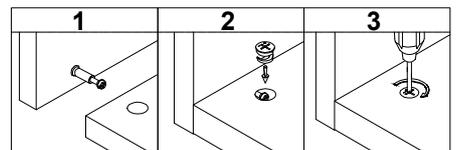
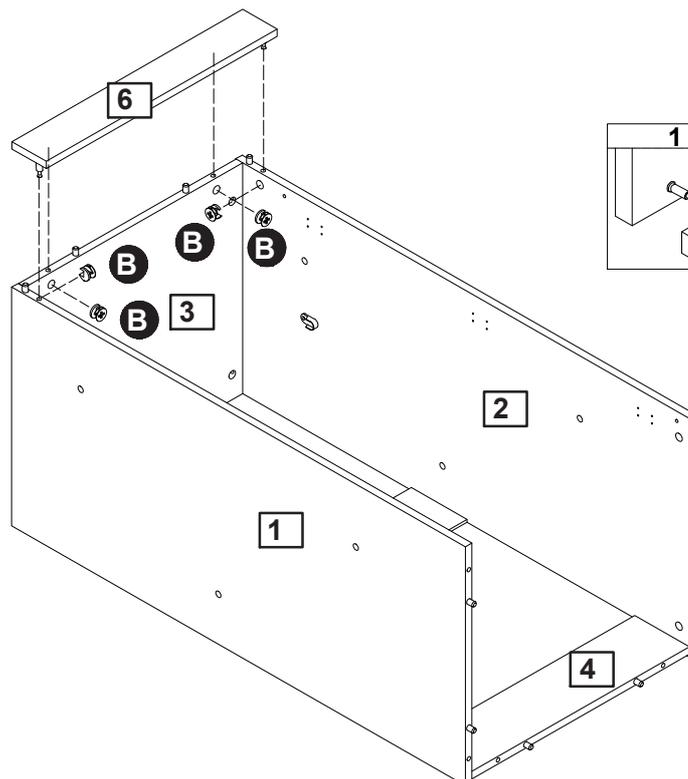


Assembly Instructions

Step 9

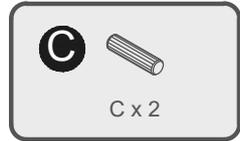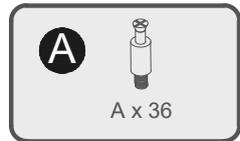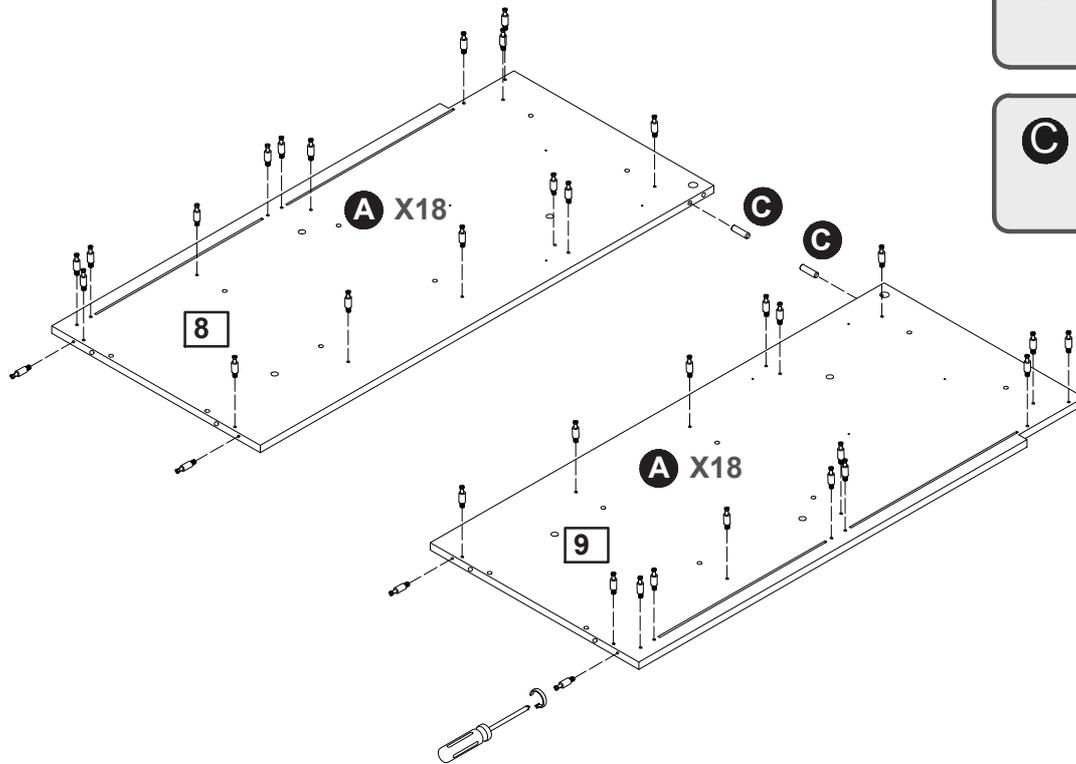

Step 10

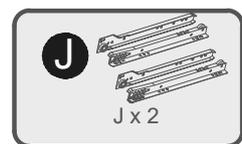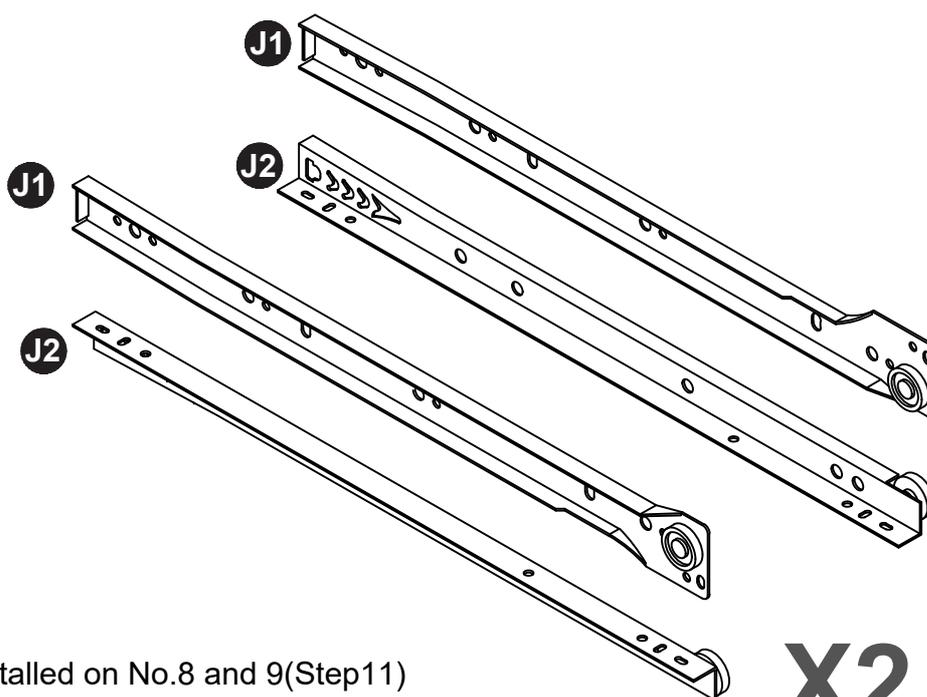


J1 installed on No.8 and 9(Step11)

J2 installed on the bottom of the drawer.(Step 33)


X2

Assembly Instructions

Step 11

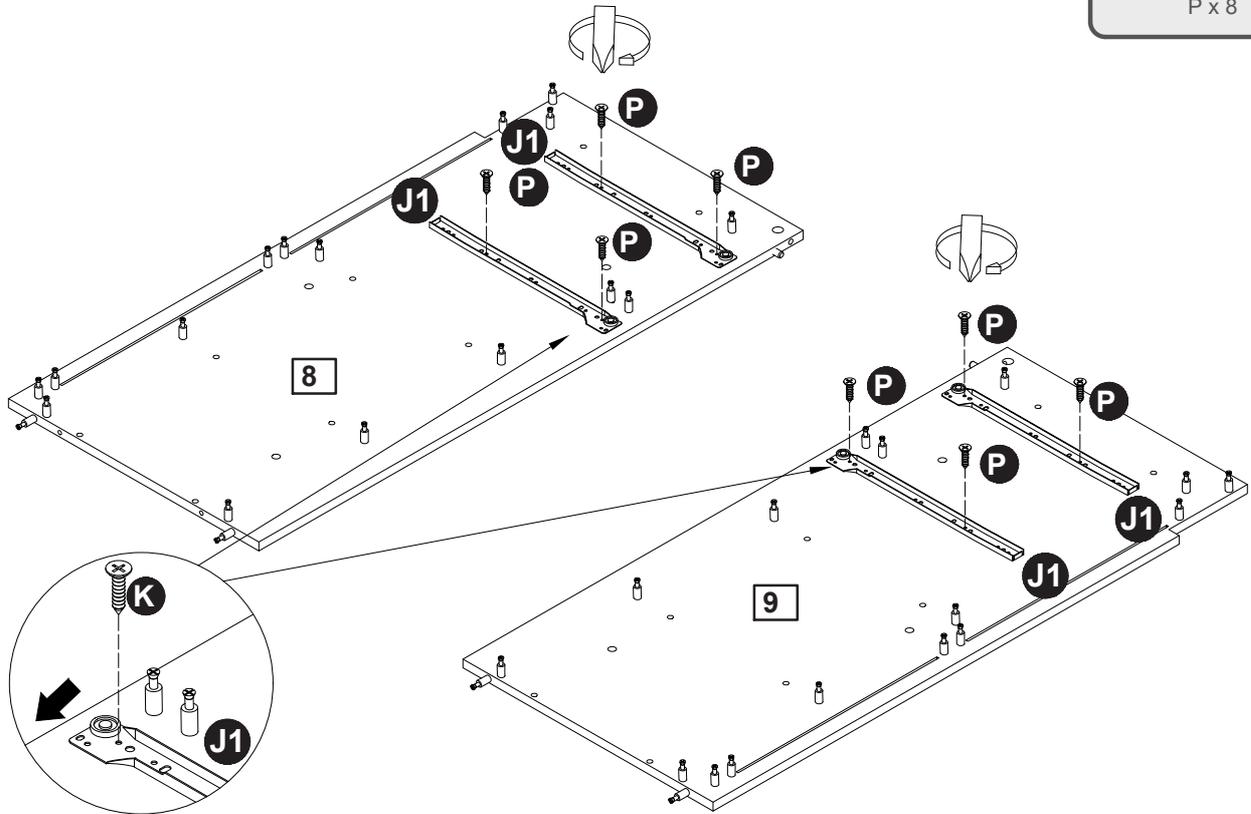


Step 12


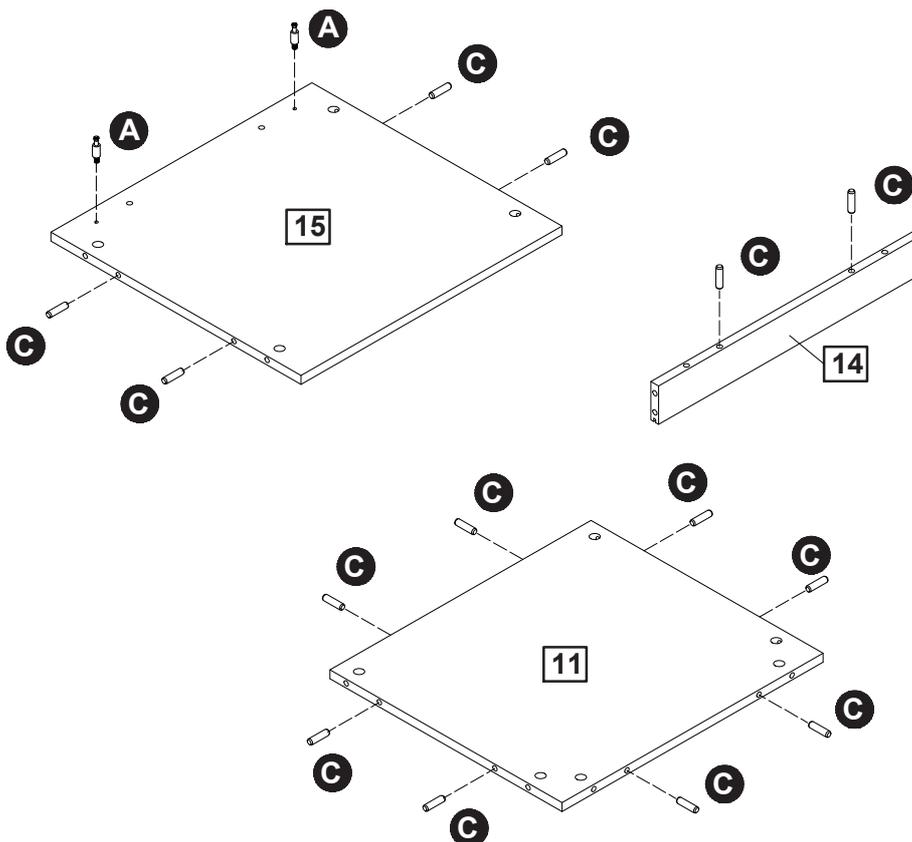


Assembly Instructions

Step 13


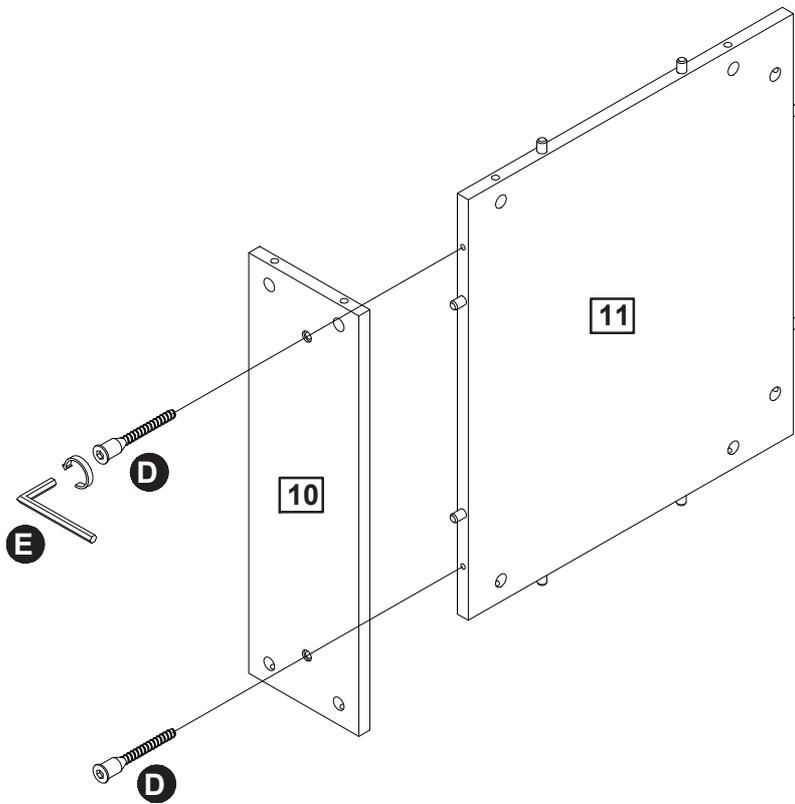


Step 14

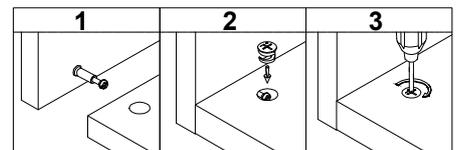
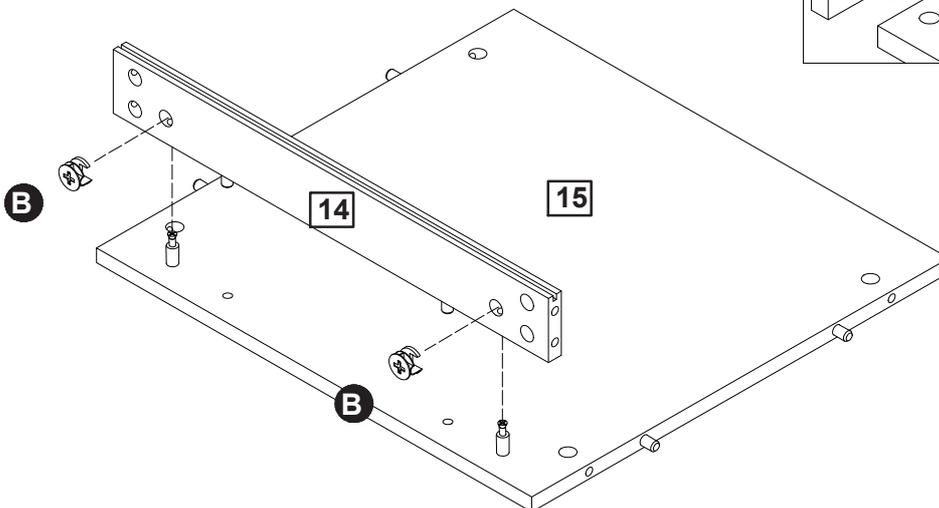


Assembly Instructions

Step 15

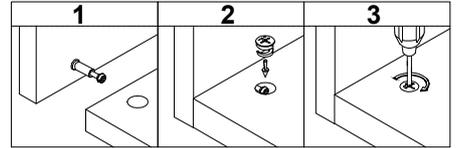
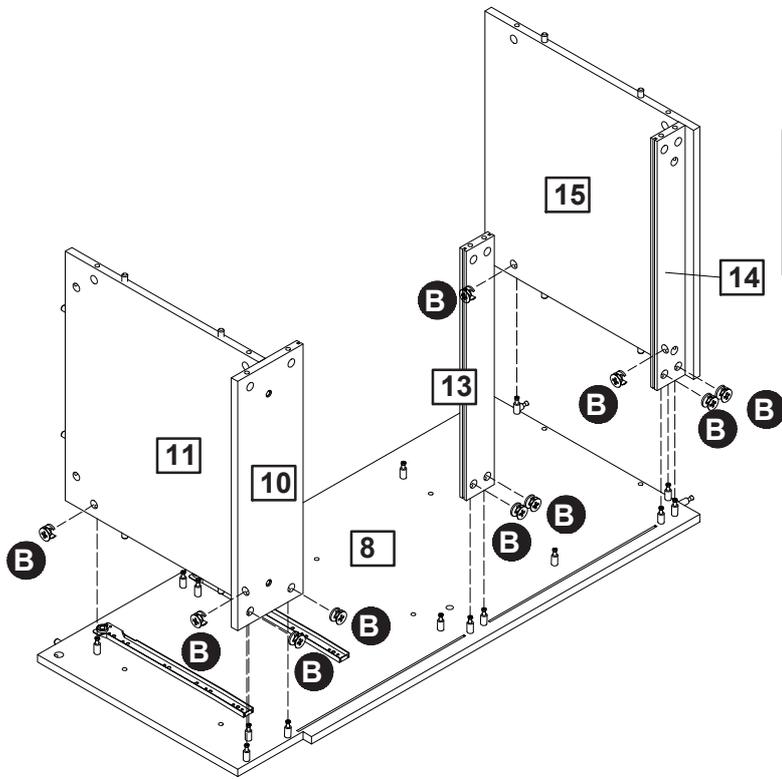


Step 16

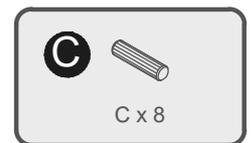
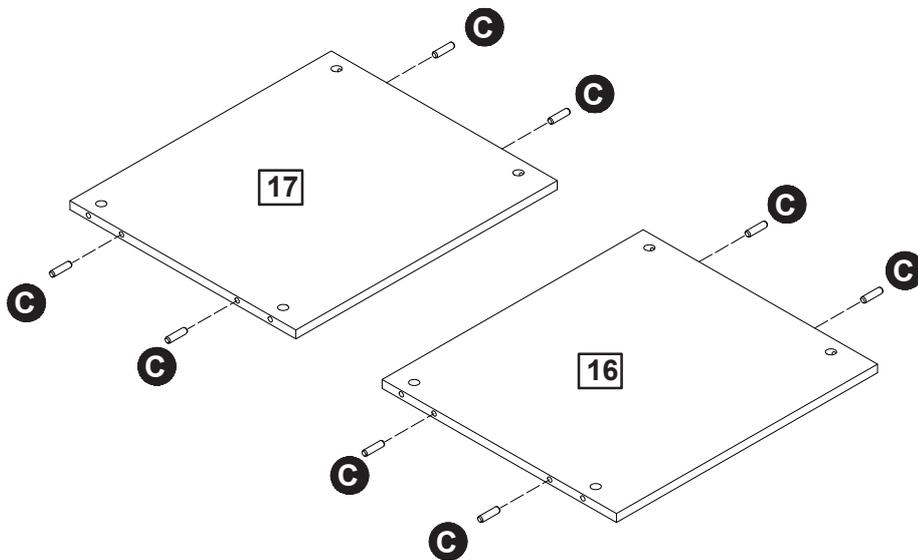


Assembly Instructions

Step 17

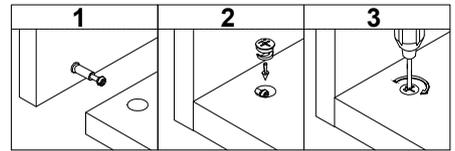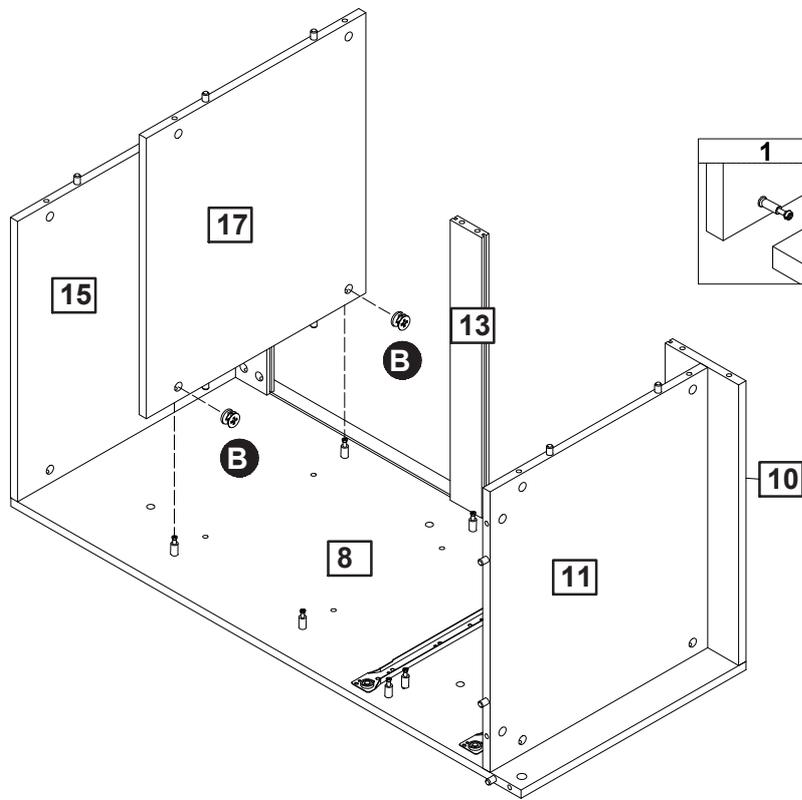


Step 18

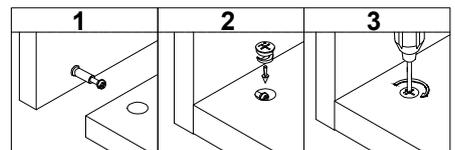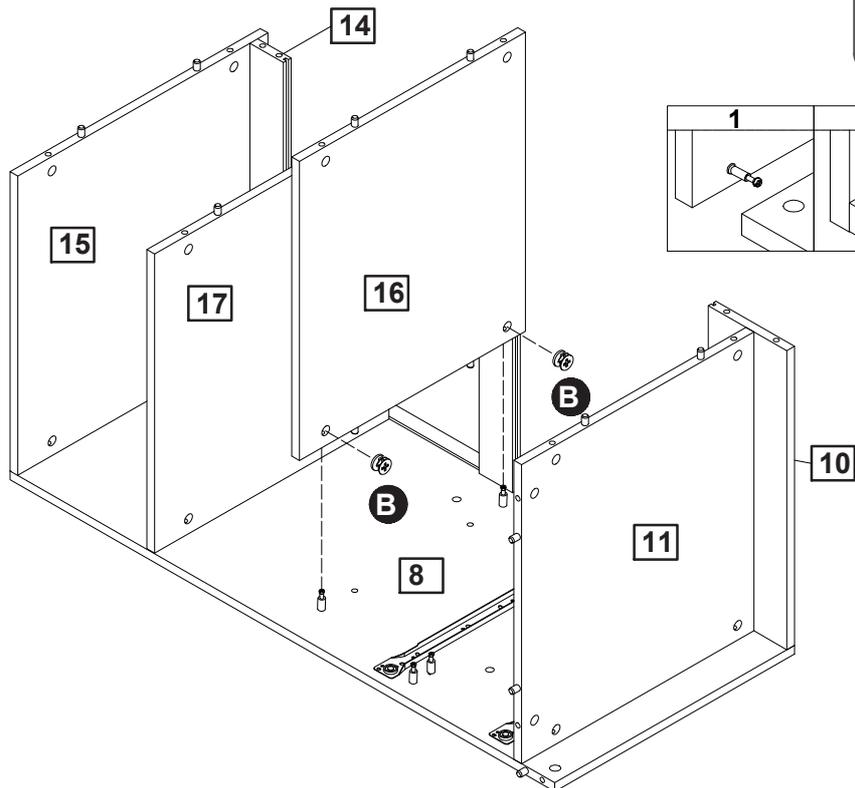


Assembly Instructions

Step 19

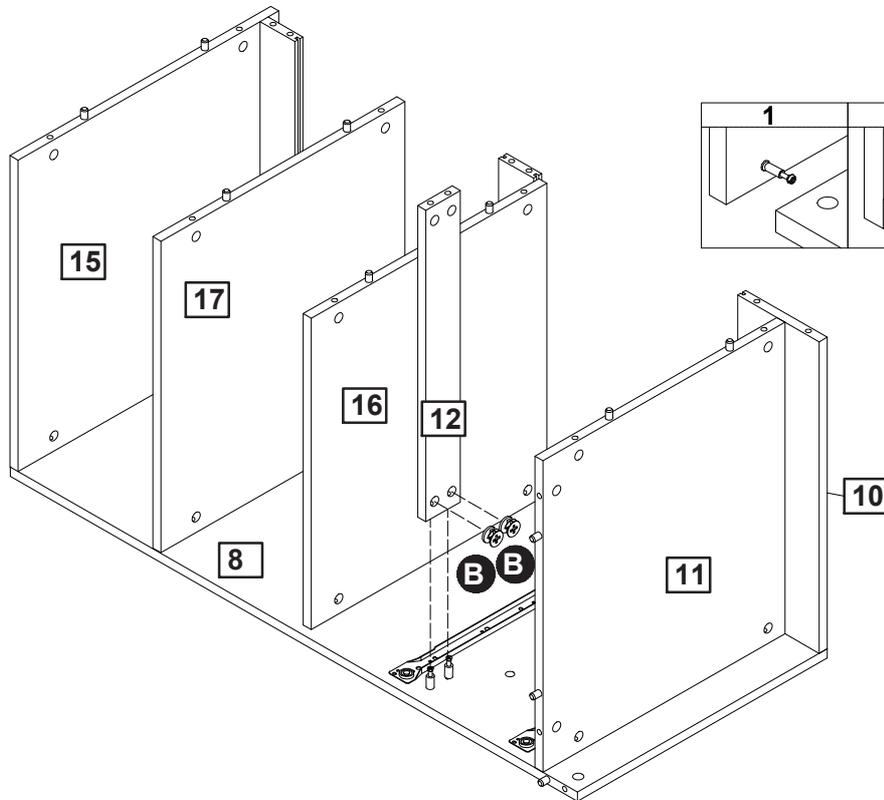

Step 20

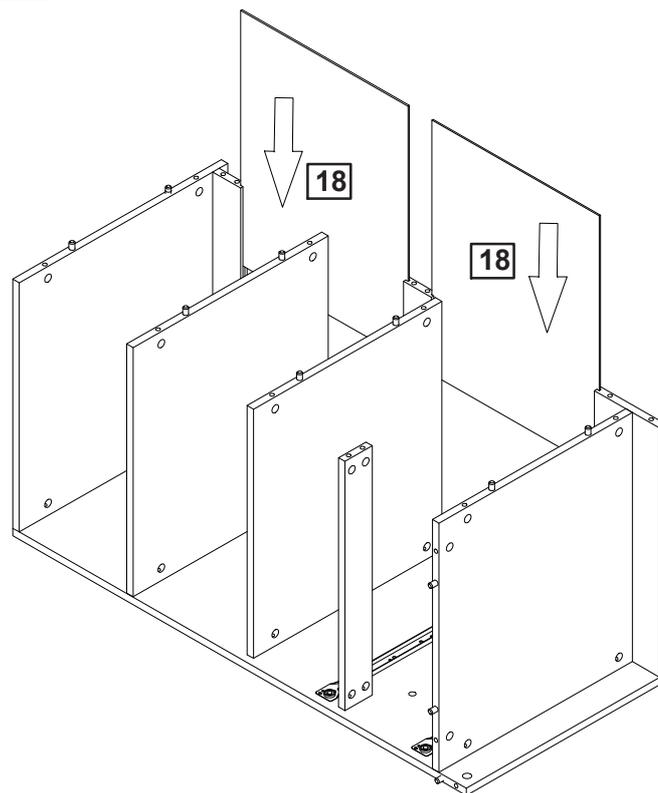



Assembly Instructions

Step 21

B



B x 16

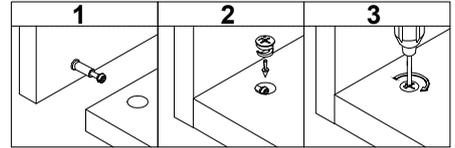
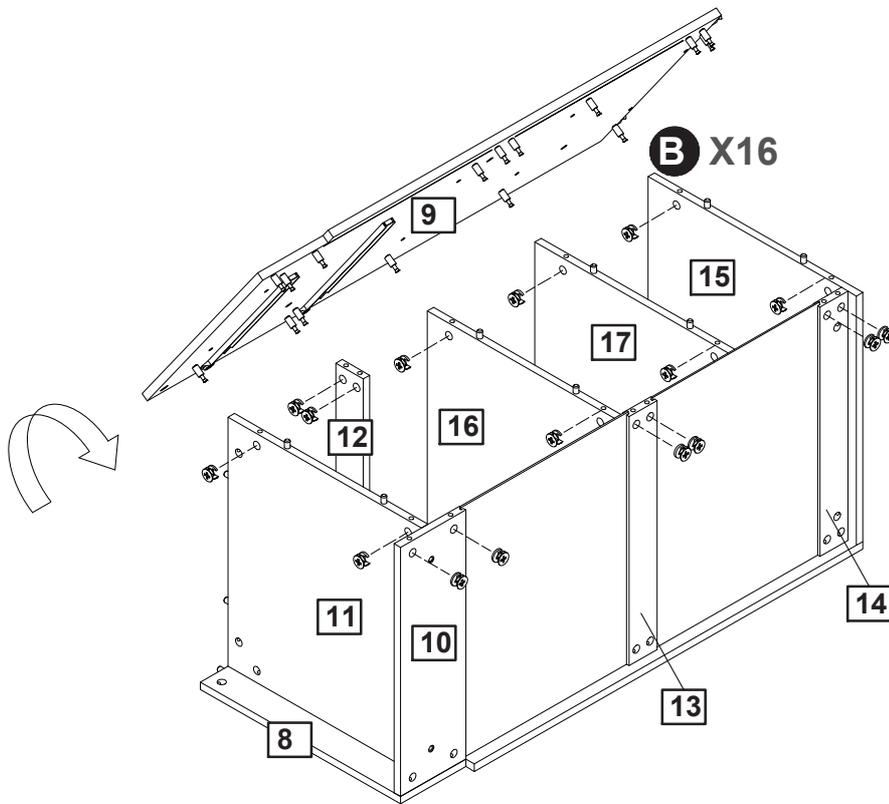


Step 22

B





B x 4

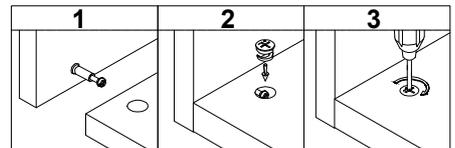
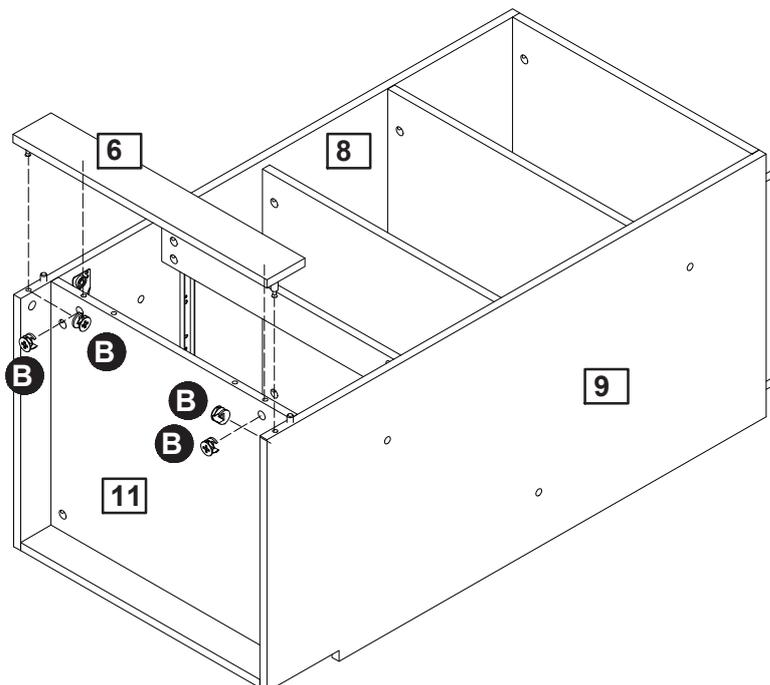


Assembly Instructions

Step 23

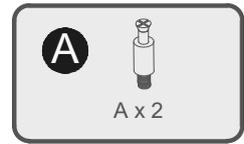
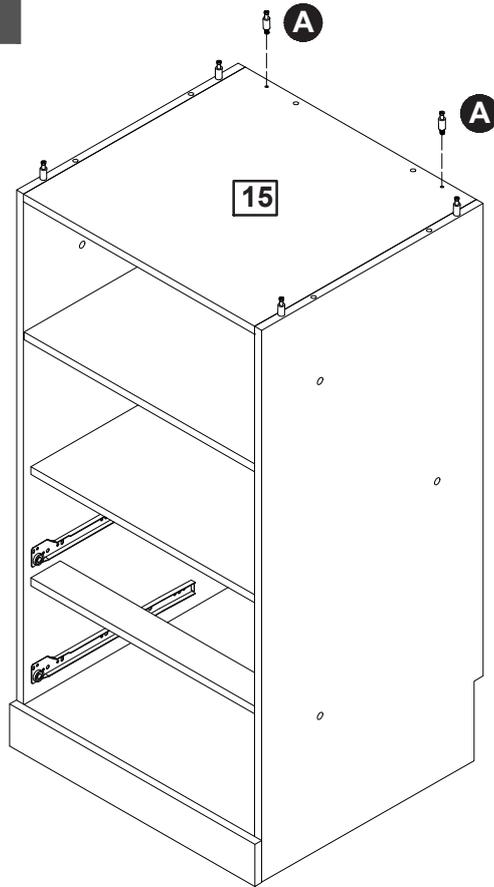


Step 24

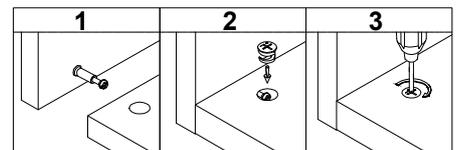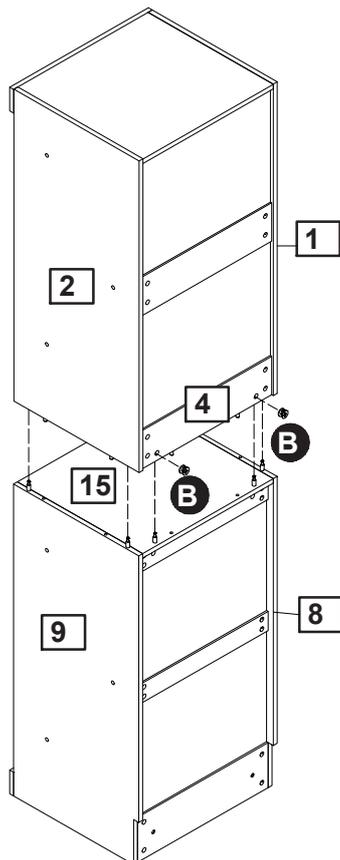


Assembly Instructions




Step 25

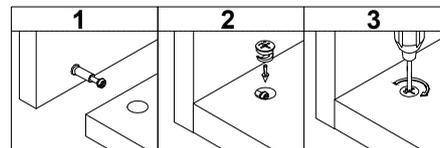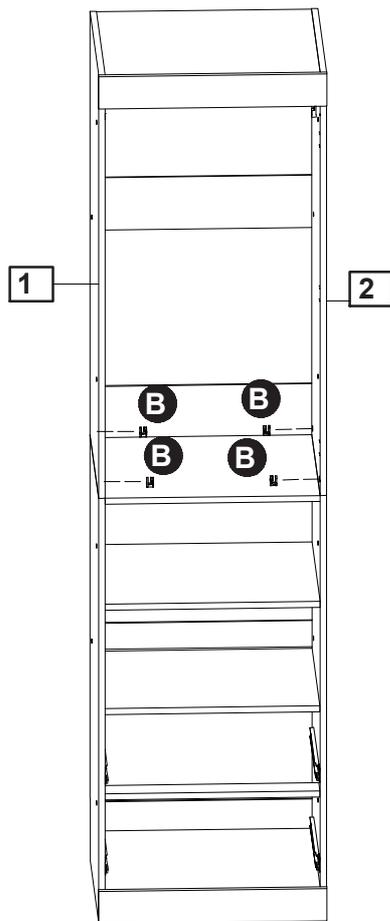

Step 26


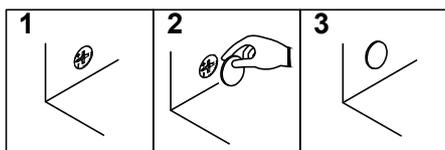


L X28

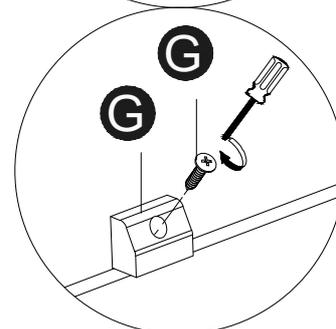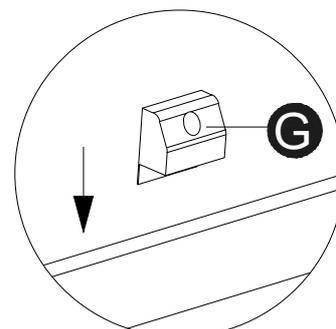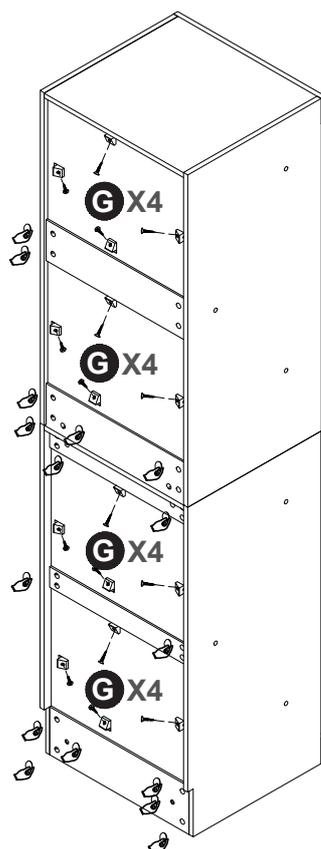


Assembly Instructions

Step 27

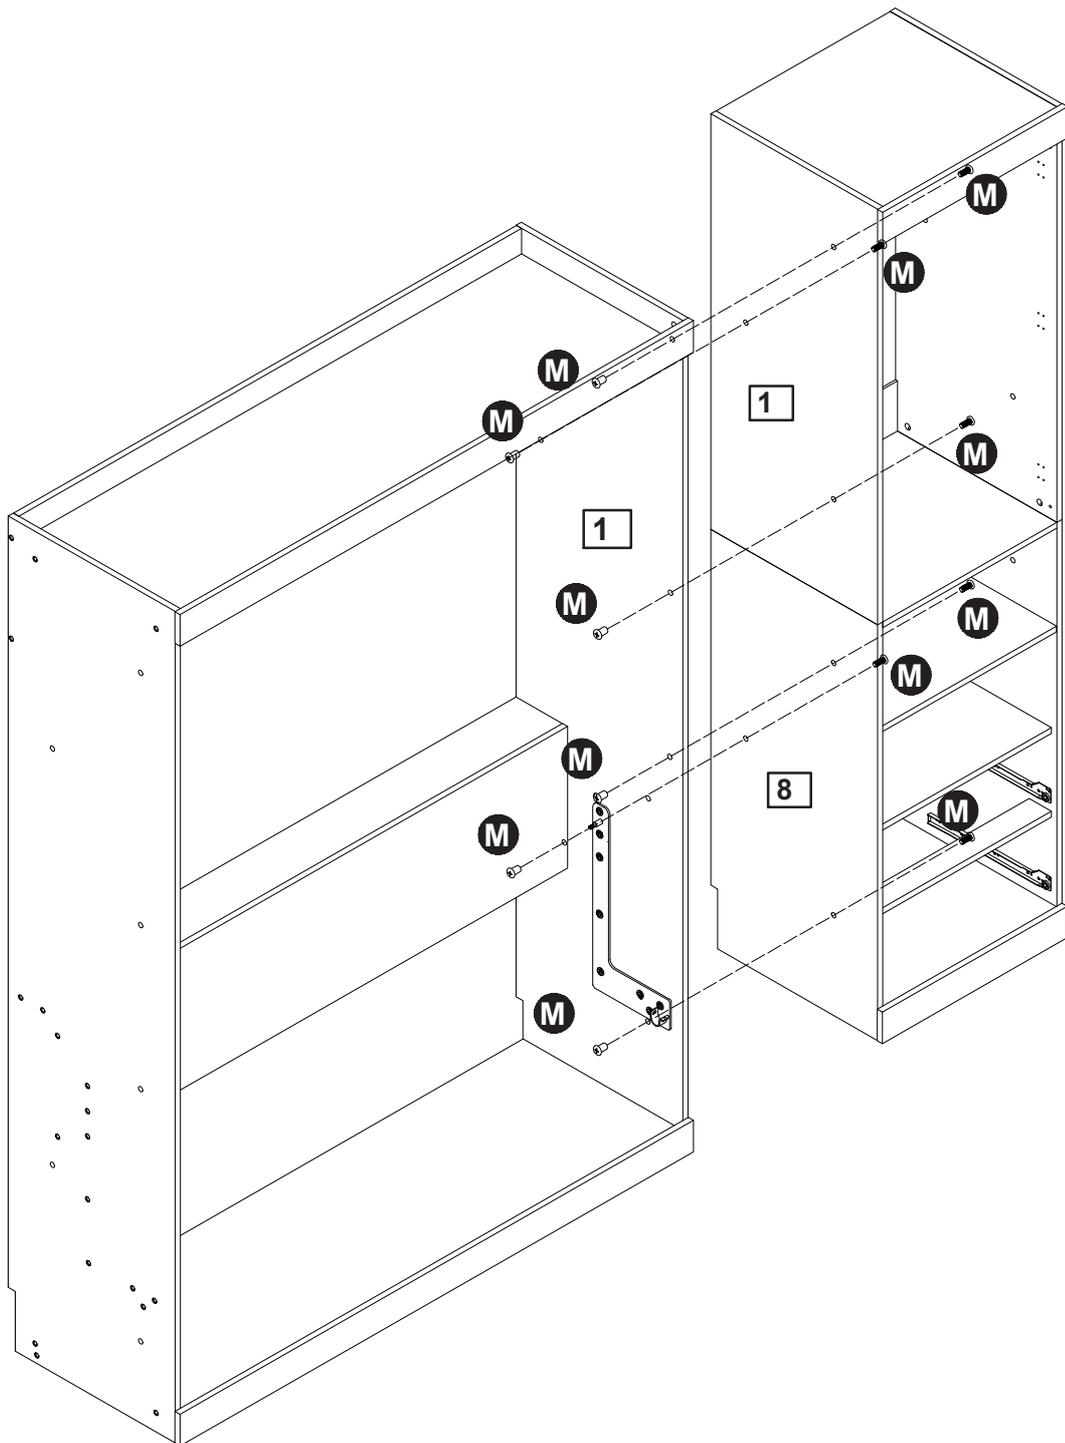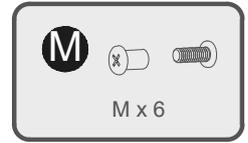


Assembly Instructions

Step 28

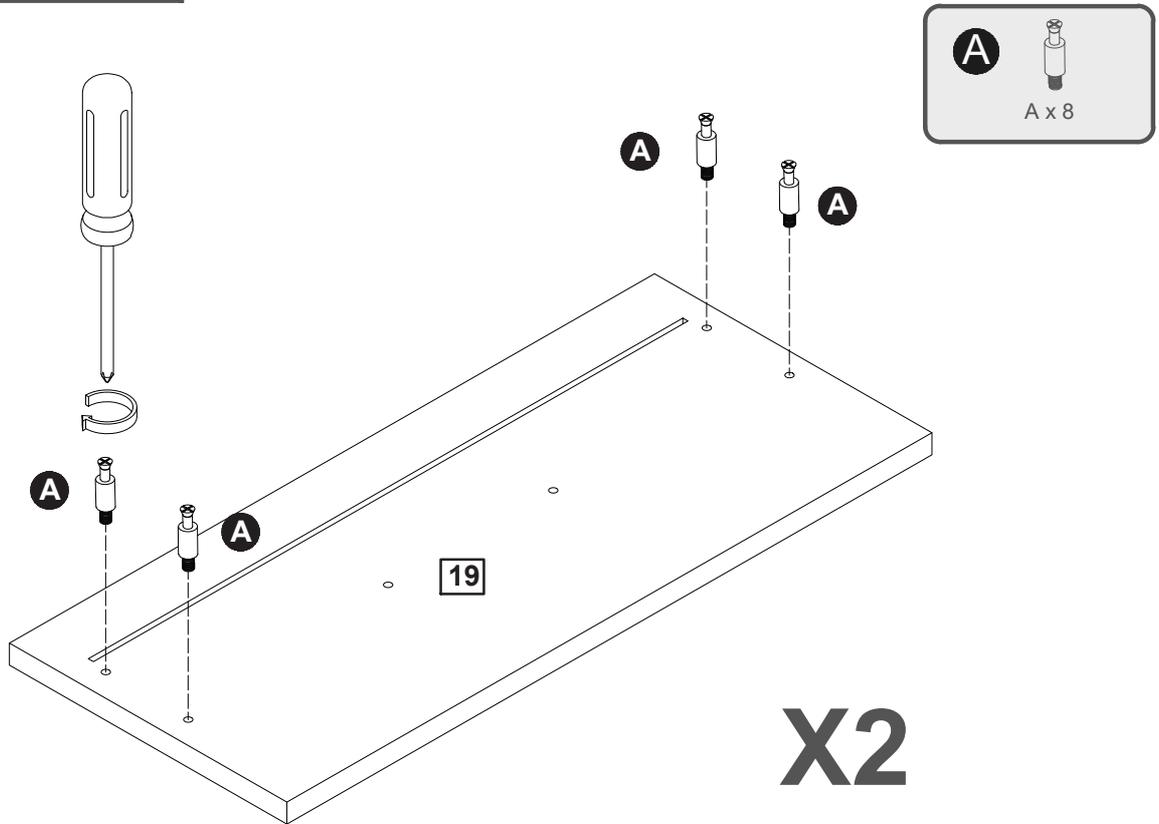


Step 29

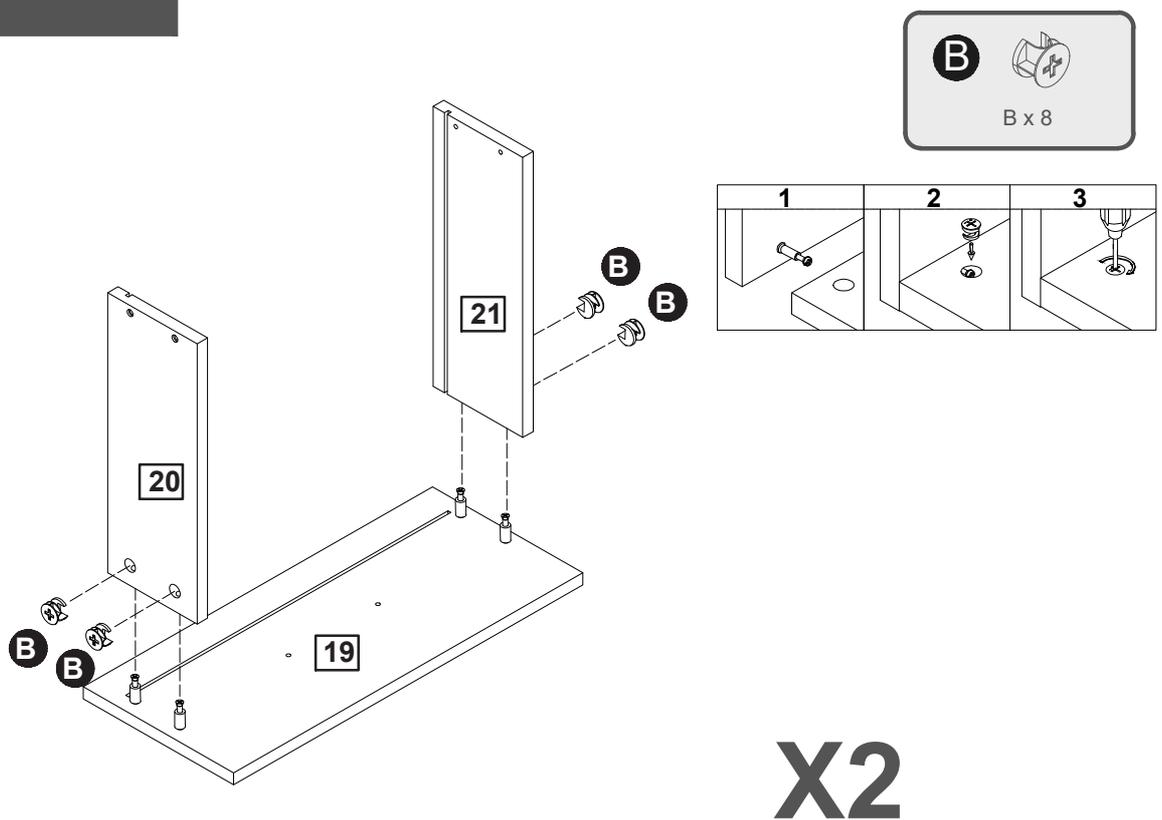


Assembly Instructions

Step 30

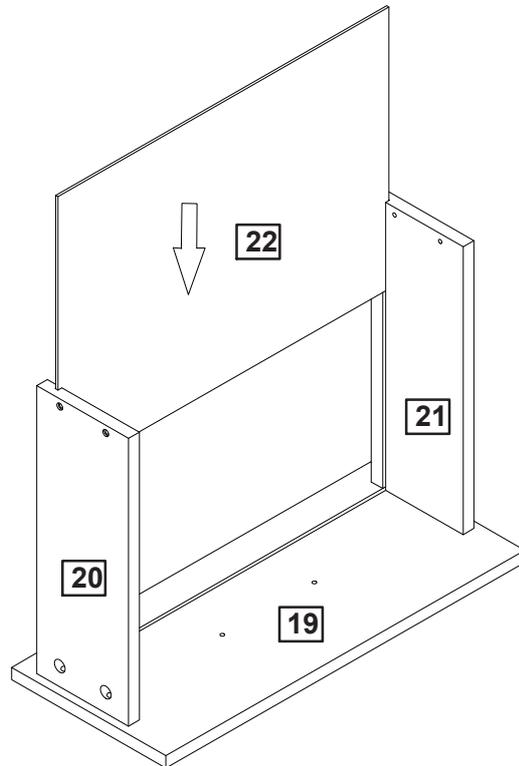

X2


Step 31

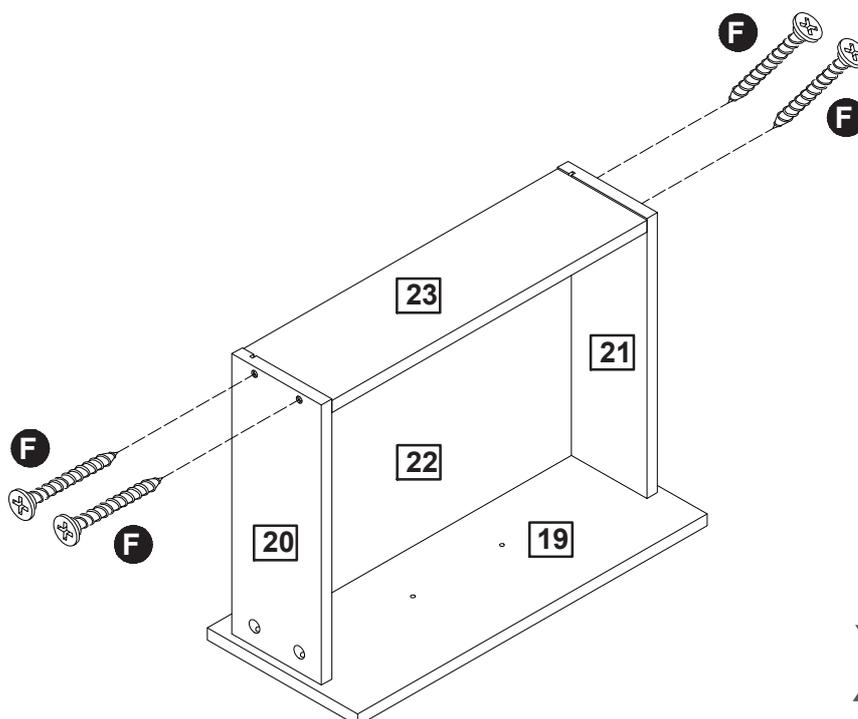


X2

Assembly Instructions

Step 32

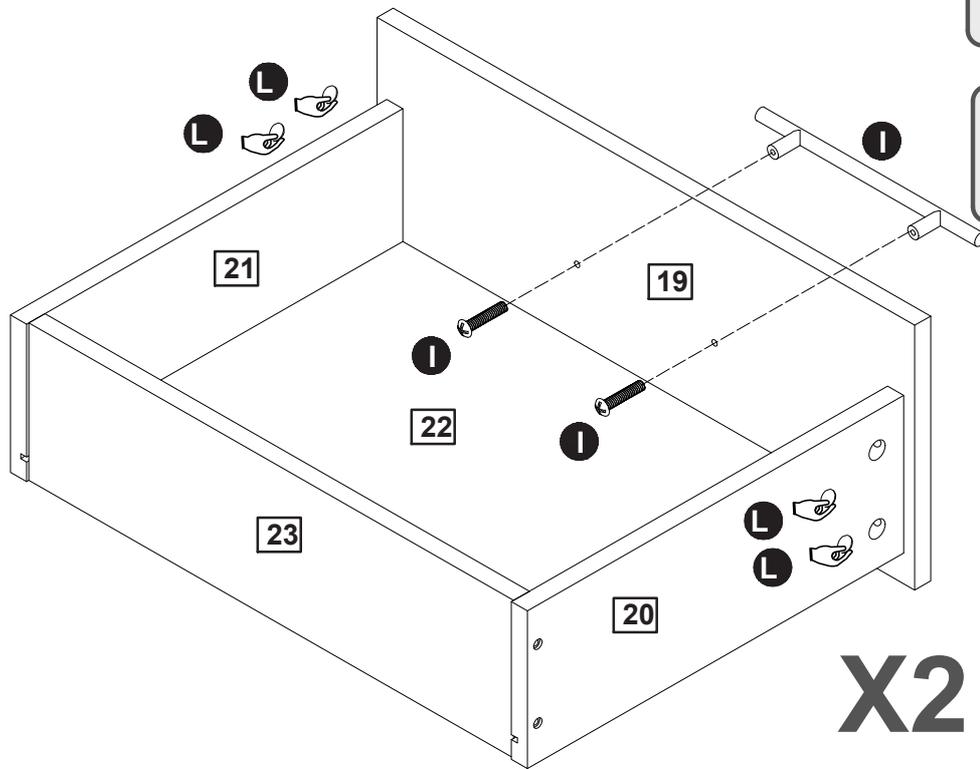


Step 33

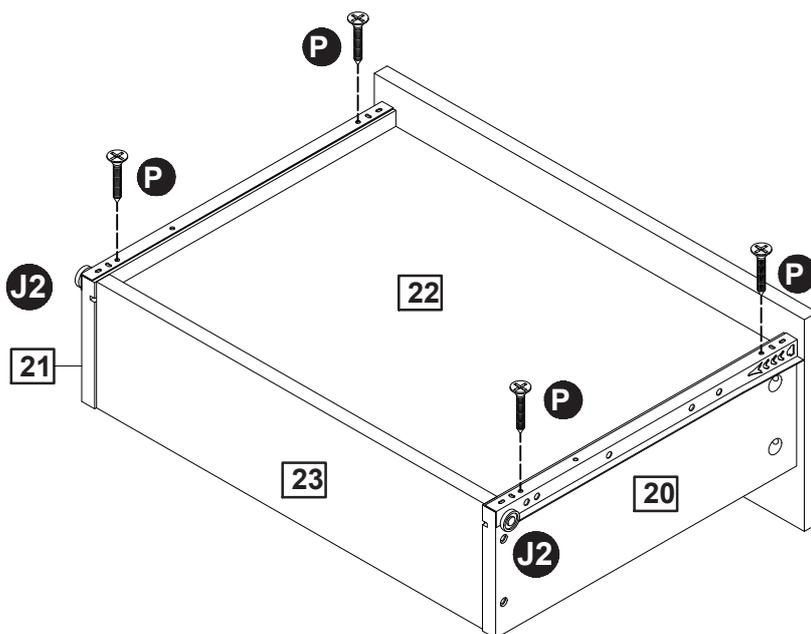


Assembly Instructions

Step 34

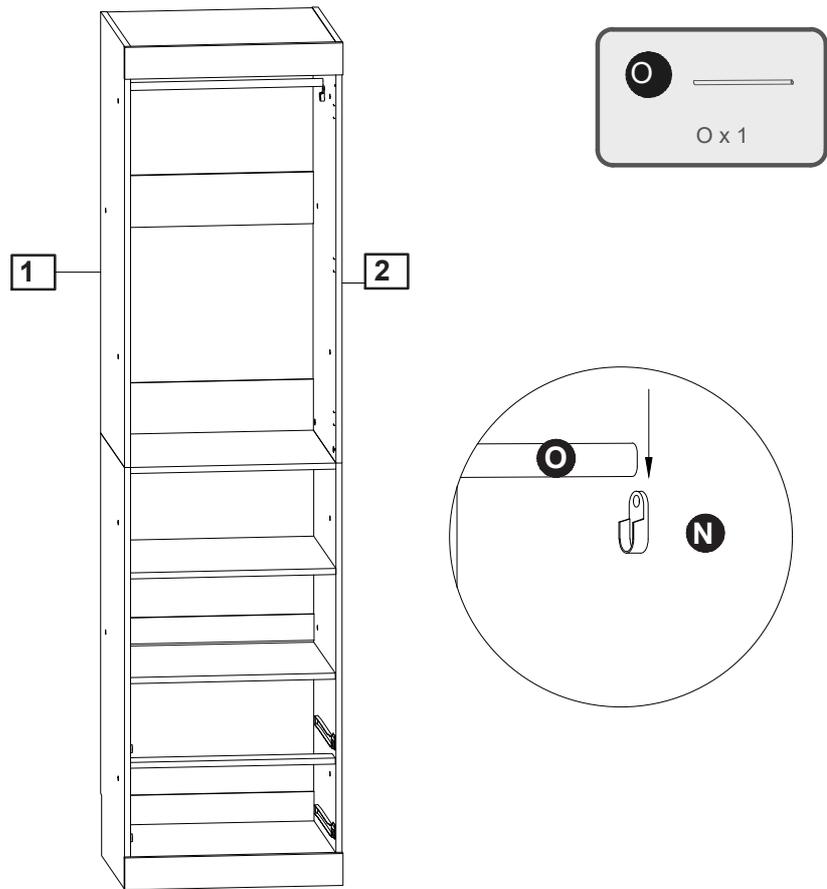


Step 35

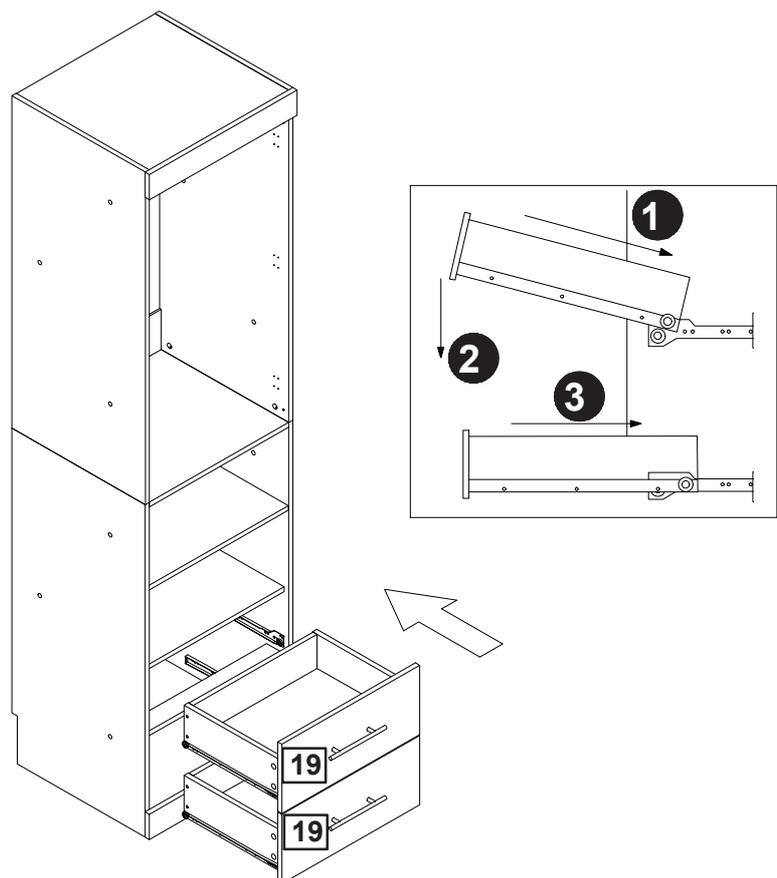

Assembly Instructions

Step 36

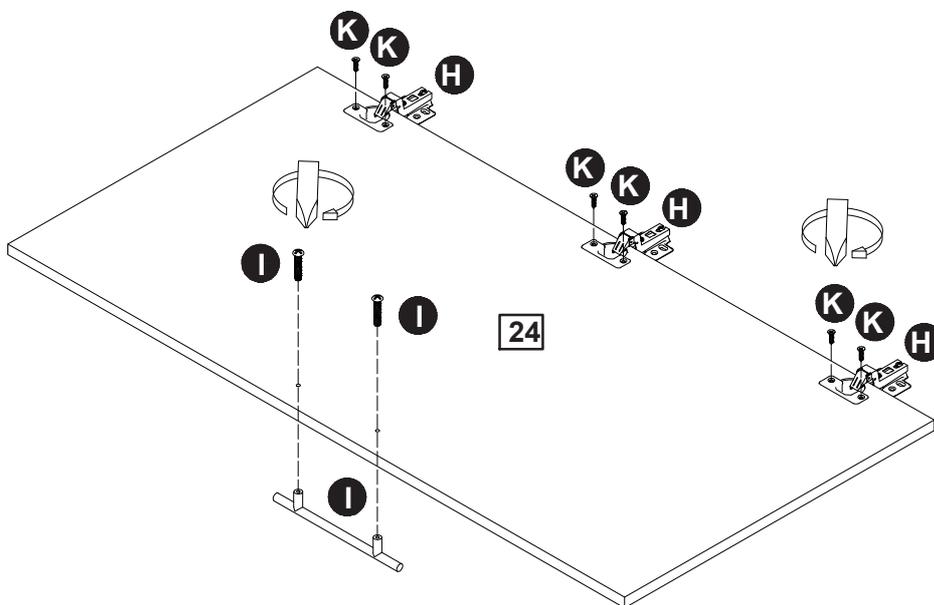

H



H x 3

I




I x 1

K



K x 6

Step 37

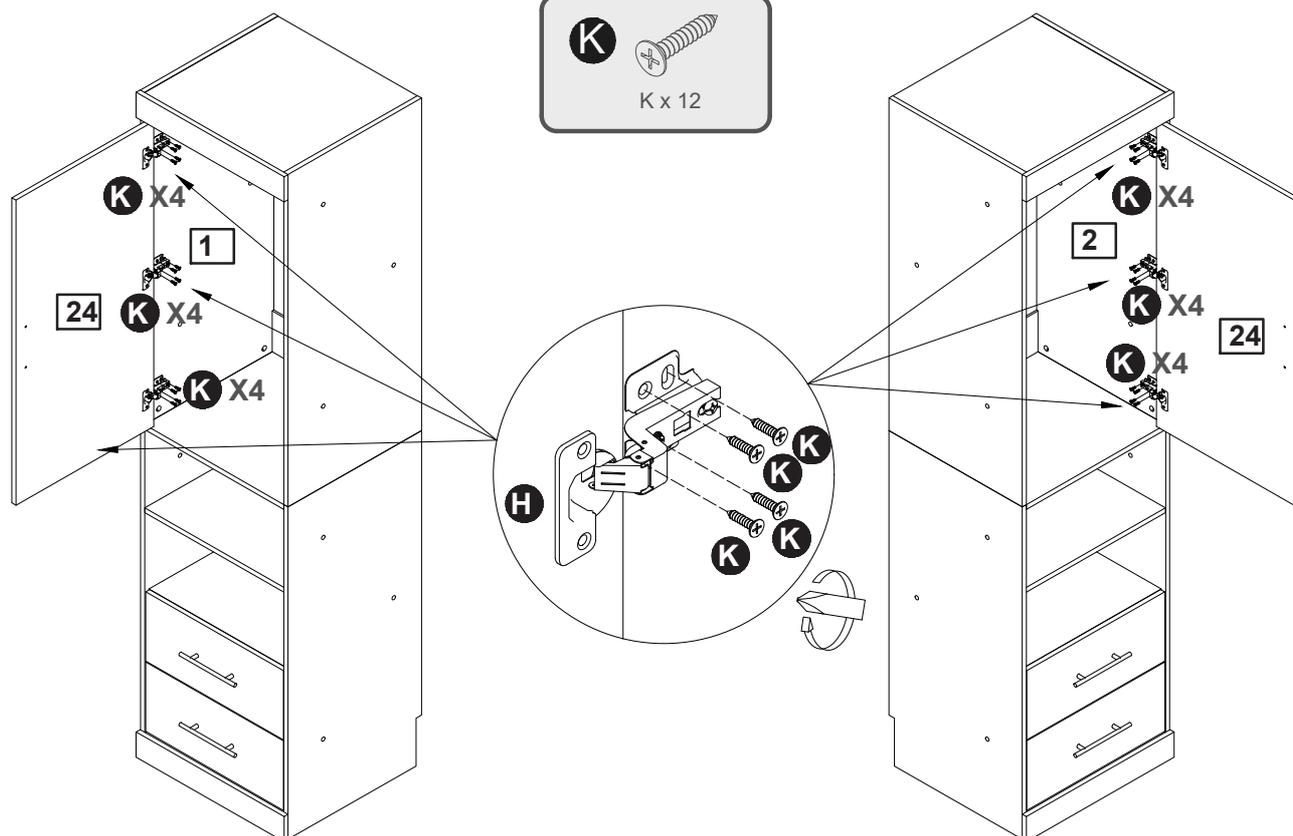

K



K x 12

K x 4

1

24

K x 4

K x 4

2


24

K x 4


K x 4

Assembly Instructions

Step 38

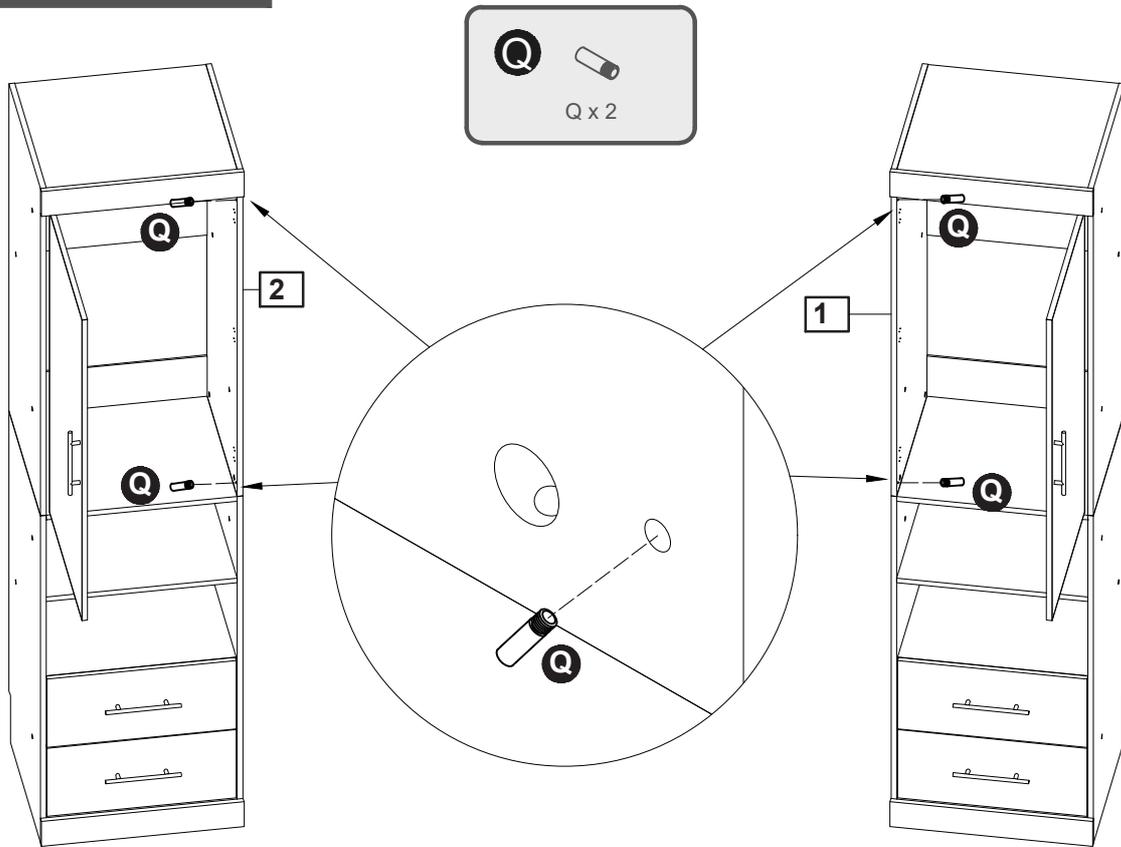


Step 39

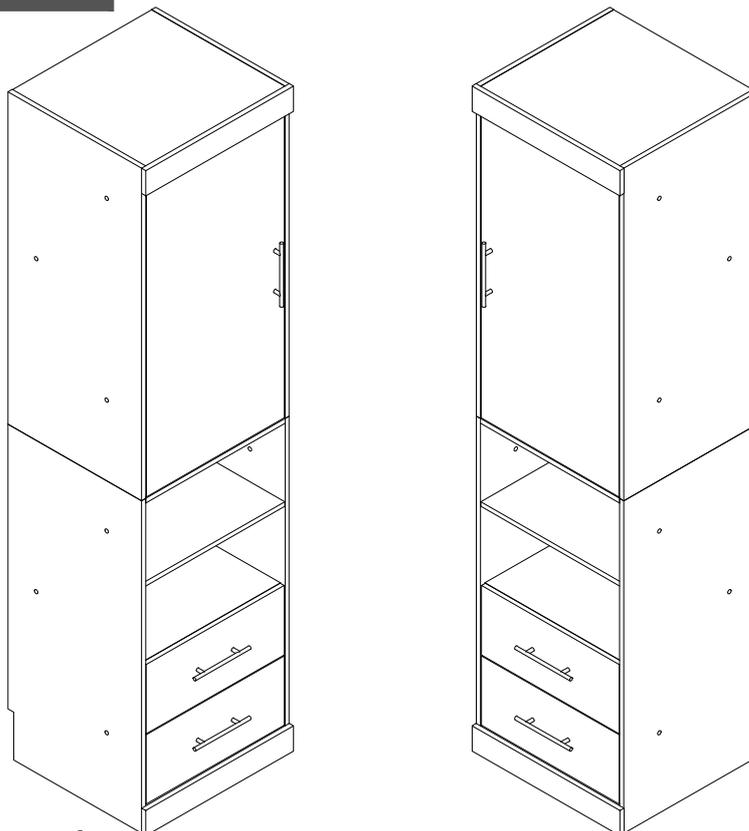

Assembly is complete.


Assembly Instructions

Step 40

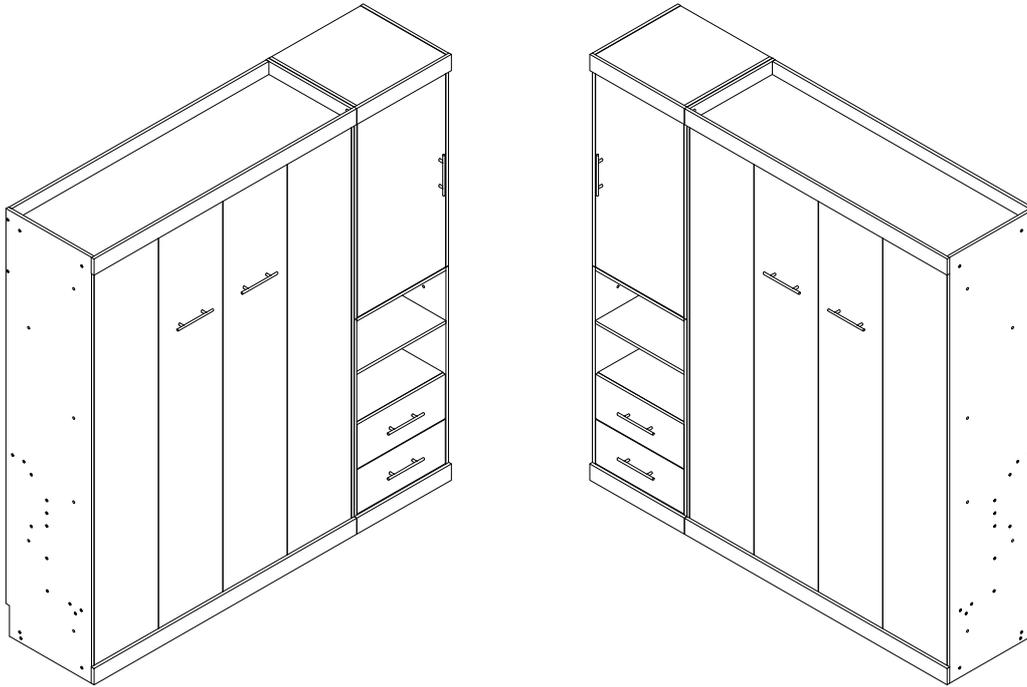

Assembly is complete.

Step 41

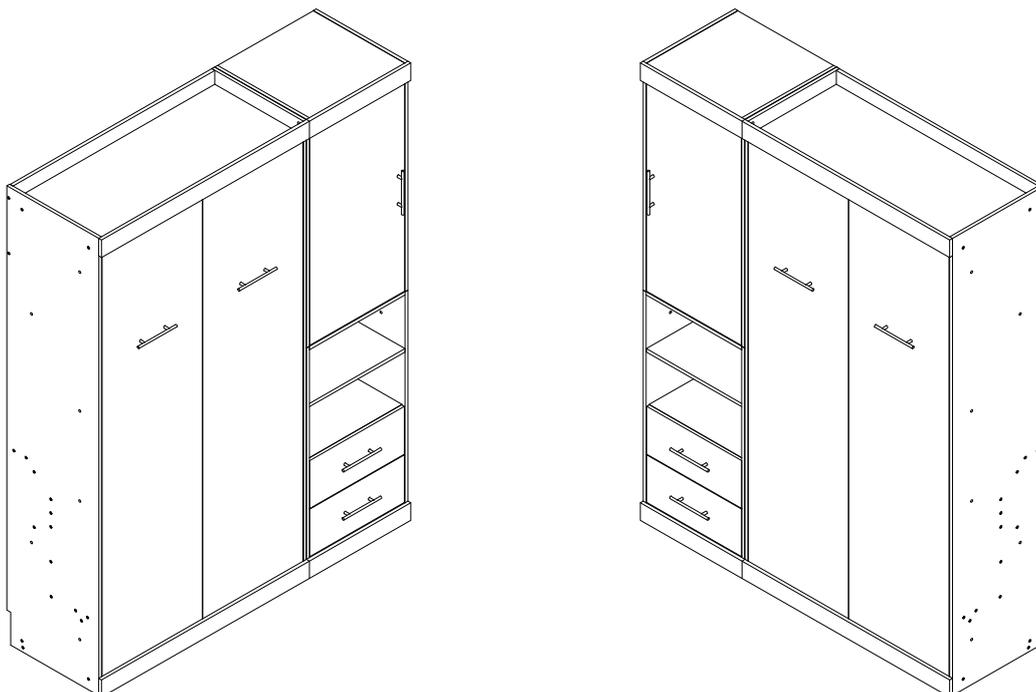

Assembly is complete.