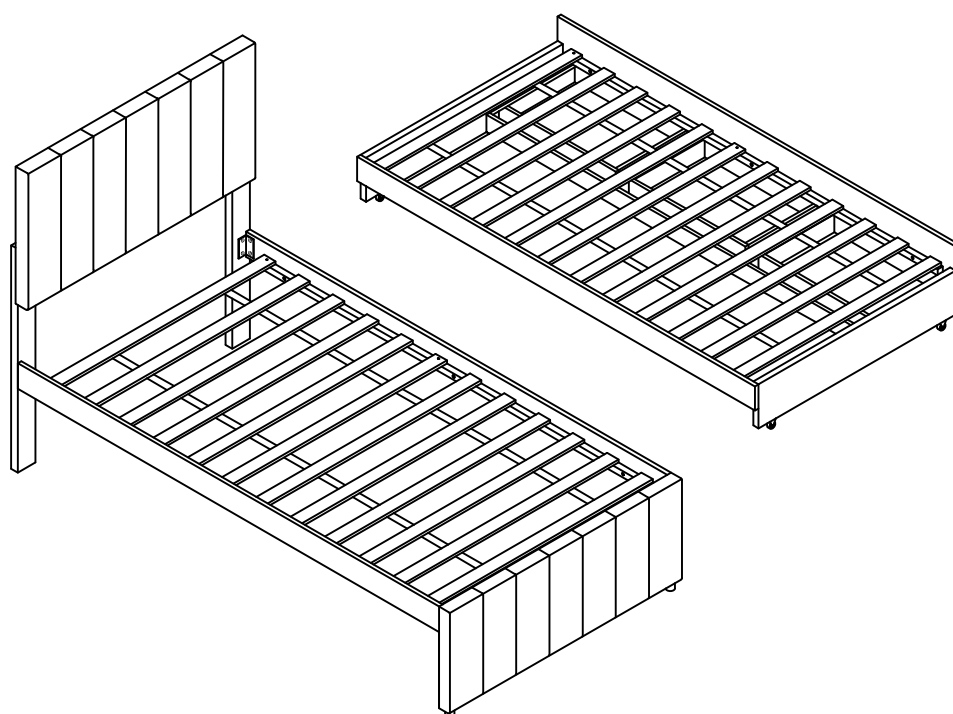
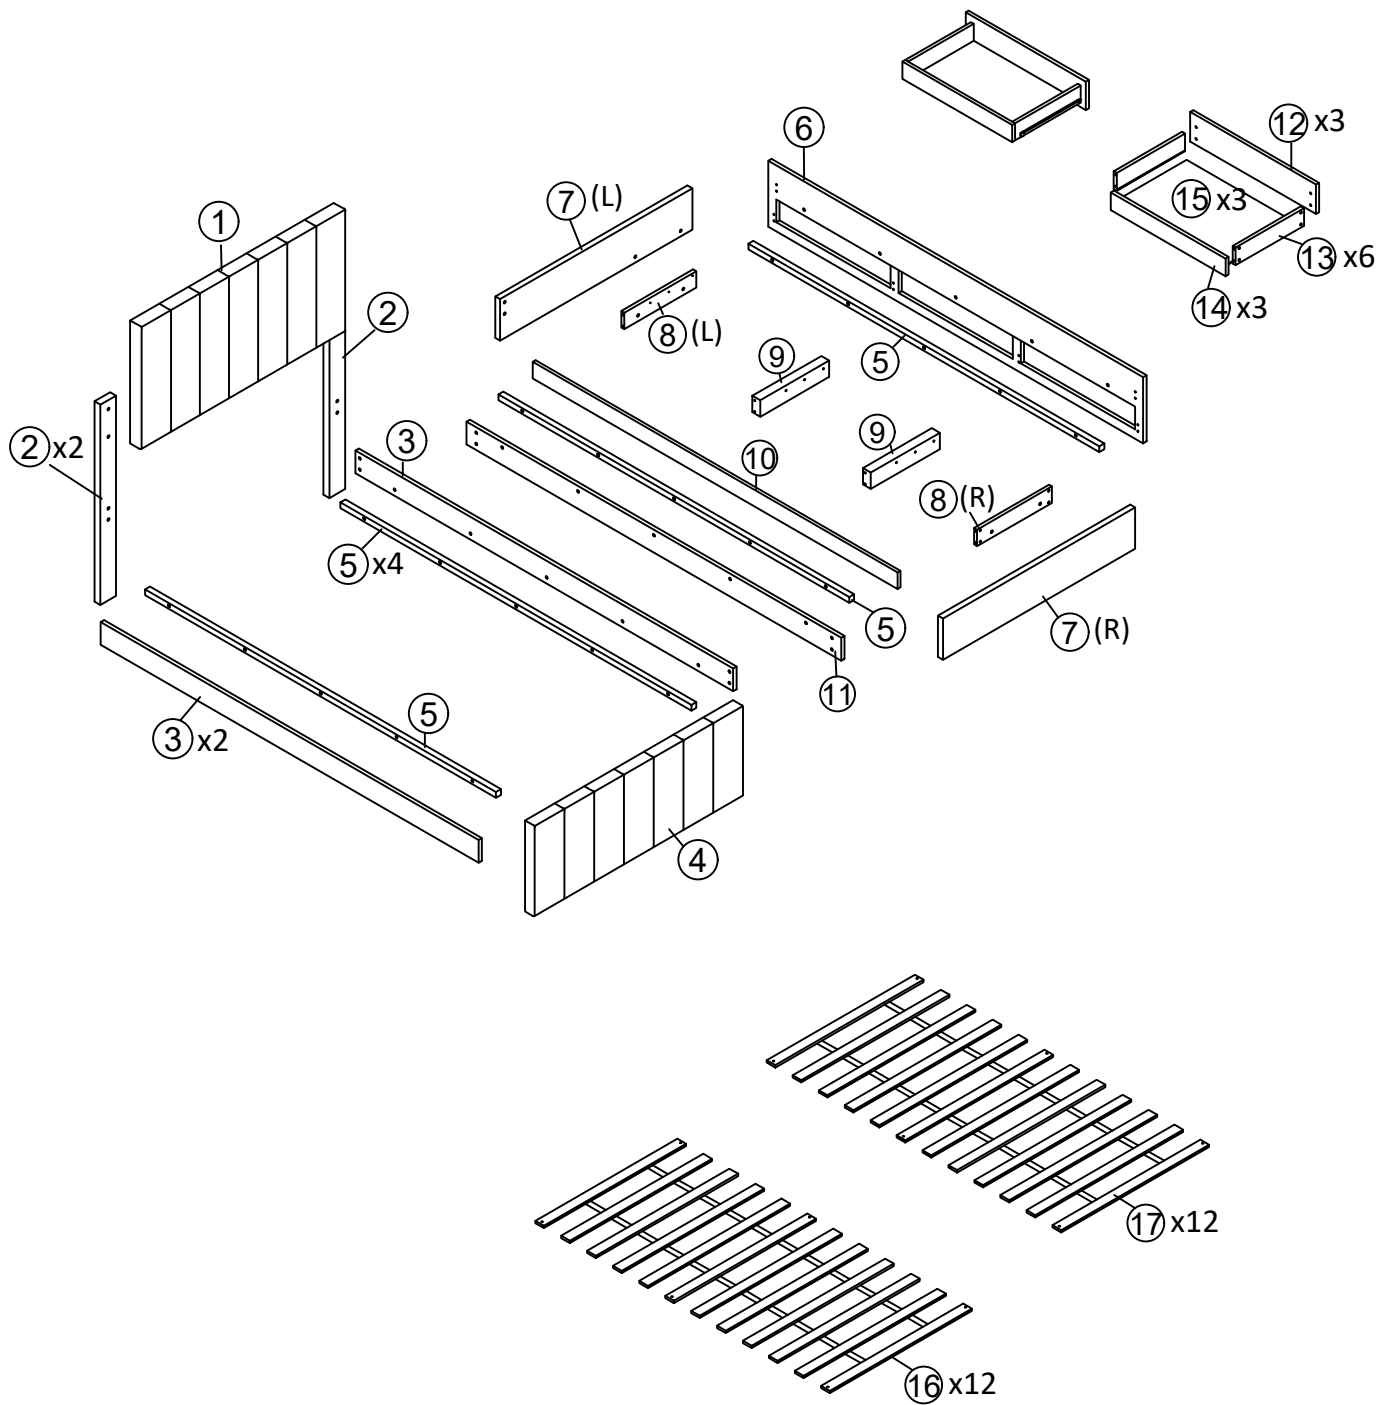


ASSEMBLY INSTRUCTION

SKU:WF310773 + WF310774



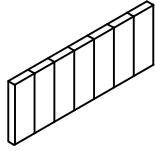






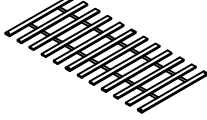



Detail View















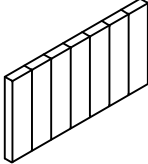Part List + Hardware List

WF310773



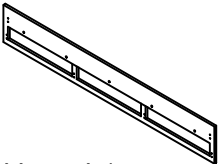

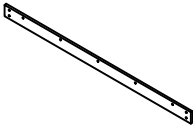

1  Head board-1pc	2  Head board legs-2pcs	4  Foot board-1pc
7  Bottom bed board-2pcs	8  Bottom bed board-2pcs	9  Bottom bed board-2pcs
12  Drawer outer board-3pcs	13  Drawer board-6pcs	15  Drawer bottom board-3pcs
16  Slats(970mm)-12pcs	17  Slats(984mm)-12pcs	

Hardware List




D  H:30mm Bed legs(2pcs)	E  Ø4*40mm Nails(2pcs)	F  77*33**33*3mm "7" Connector(6pcs)
G  Drawer fittings(40pcs)	H  Drawer fittings(40pcs)	I  Wheel(4pcs)
J  Ø3*16mm Nails(44pcs)	L  Ø3*25mm Nails(8pcs)	M  Ø4*30mm Nails(12pcs)
N  38*19mm Little "7" Connector(2pcs)	O  Drawer track(3pcsR/3pcsL)	P  Drawer track(3pcsR/3pcsL)

Part List + Hardware List

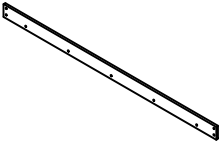WF310774

<div>3</div> <div></div> <div>Siderails-2pcs</div>	<div>5</div> <div></div> <div>Side rails support bar-4pcs</div>	<div>6</div> <div></div> <div>Bottom bed board-1pc</div>
<div>10</div> <div></div> <div>Bottom bed board-1pc</div>	<div>11</div> <div></div> <div>Bottom bed board-1pc</div>	<div>14</div> <div></div> <div>Drawer board-3pcs</div>


Hardware List

<div>A</div> <div></div> <div>Allen Key(1pc)</div>	<div>B</div> <div> Ø8*40mm</div> <div>Bolts(28pcs)</div>	<div>C</div> <div> Ø8*18mm</div> <div>Bolts(24pcs)</div>
---	---	---

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1

Fix the Headboard legs ② to the Headboard ① with Bolt B by using Allen key A. You can chose the hole a and c ,or b and d,or c and e.

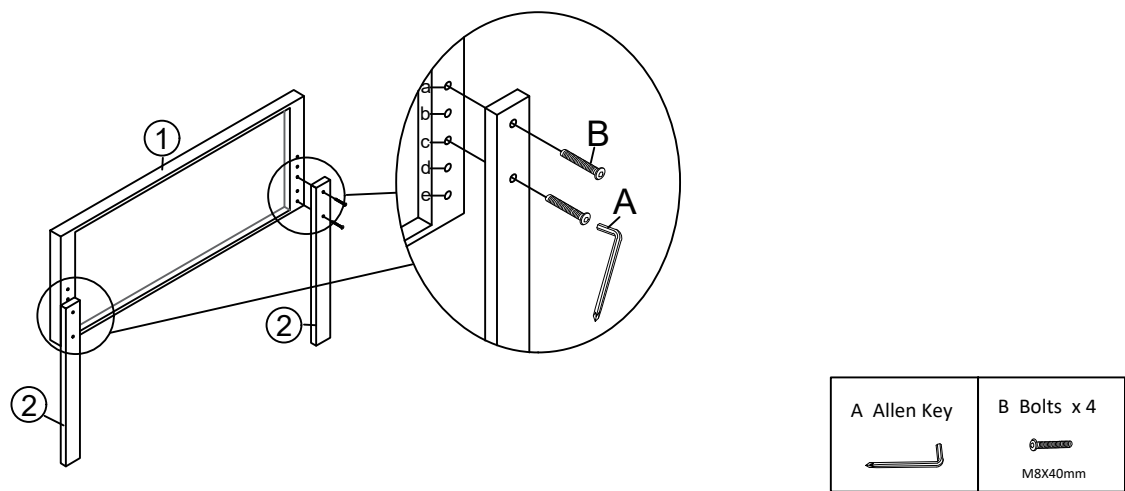


Step 2

Connect Siderails support bar ⑤ to siderails ③, Bottom bed board ⑥ and ⑪ with Bolts B by using Allen key A.

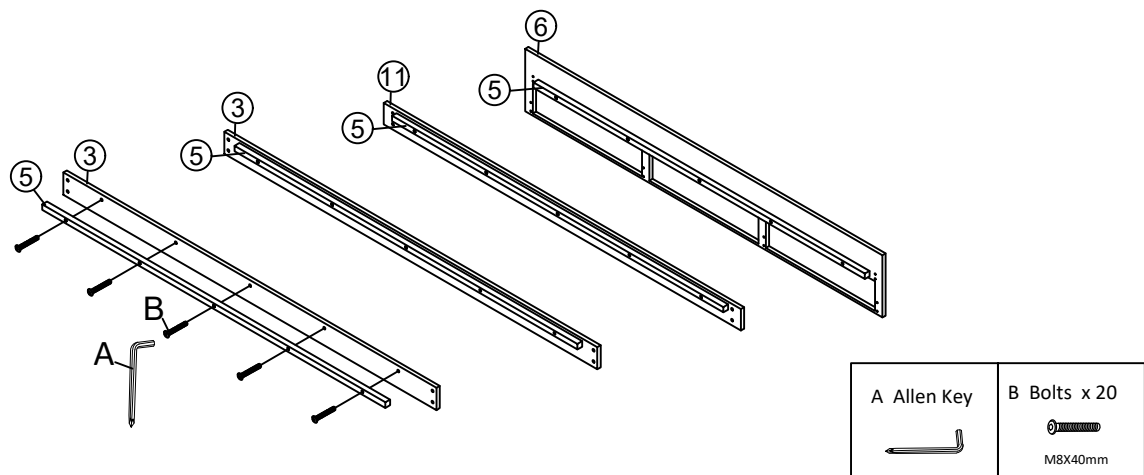


Step 3

Fix the legs D to the Footboard ④ with Nails E by using Allen key A or Electric drill .

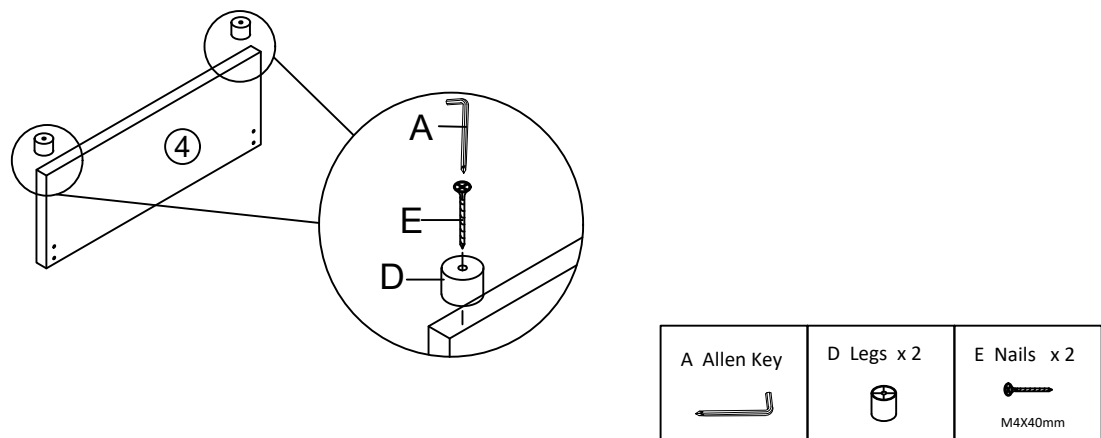

Step 4


Fix the siderails③to the Headboard legs ②and footboard ④with Bolt C and "7" Connector F by using Allen key A.

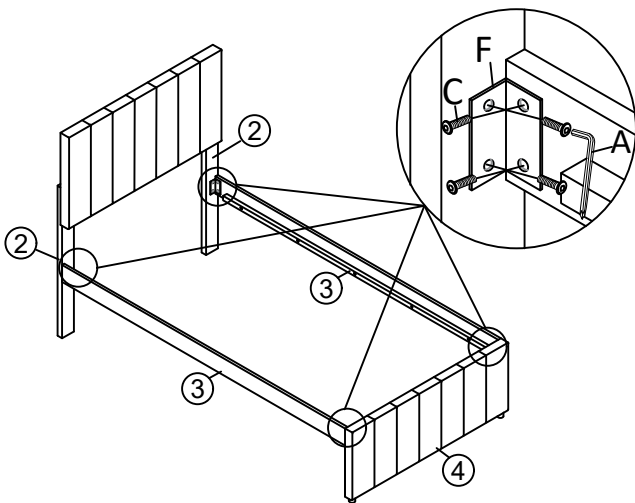

A Allen Key	C Bolts x 16 M8X18mm	F "7" Connector x 4

Step 5


Fix Drawer fittings G to Bottom bed board ⑥and⑩ .
Connect Bottom bed board ⑥and⑩ with Bottom bed Board ⑧and⑨ with Drawing fittings H by using Allen key A.

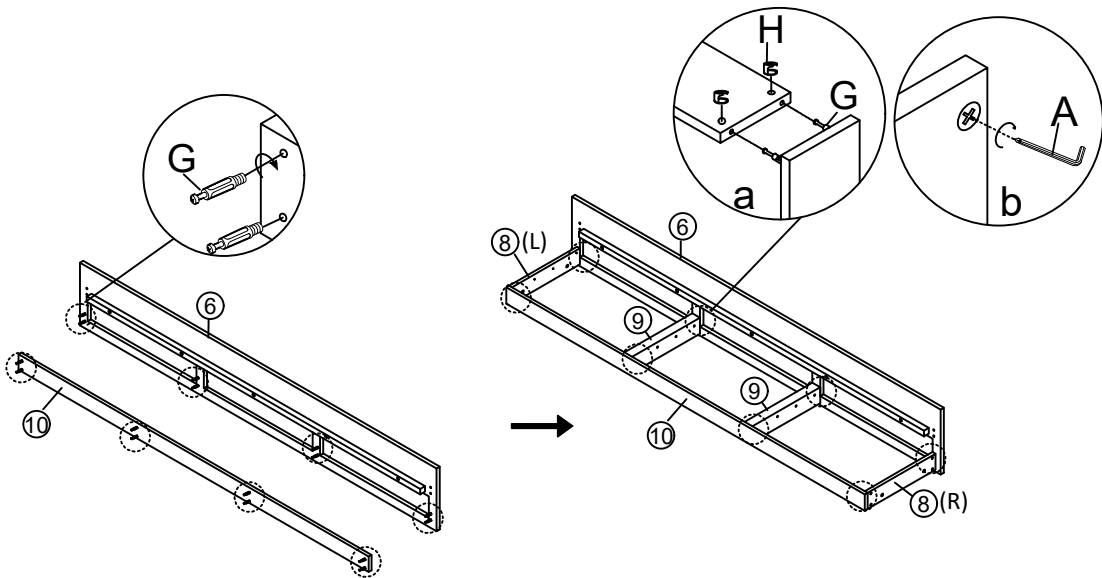




A Allen Key	G Drawer fittings x 16	H Drawer fittings x 16

Step 6

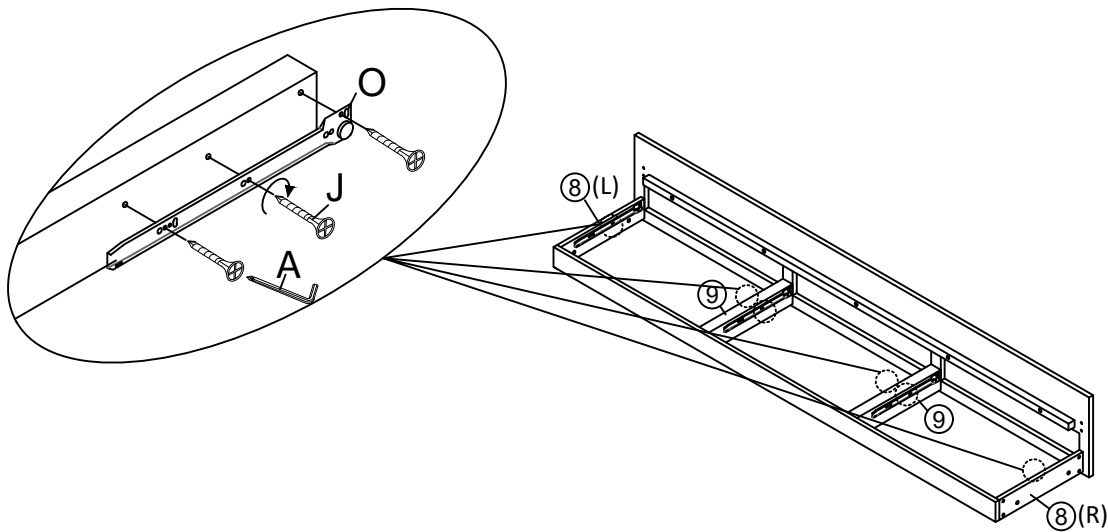Fix Drawer track O to Bottom bed board ⑧ and ⑨ with Nails J by using Allen key A or Electric drill.








A Allen Key	O Drawer track (3pcsR/3pcsL) x 6	J Nails x 18 M3X16mm
		

Step 7

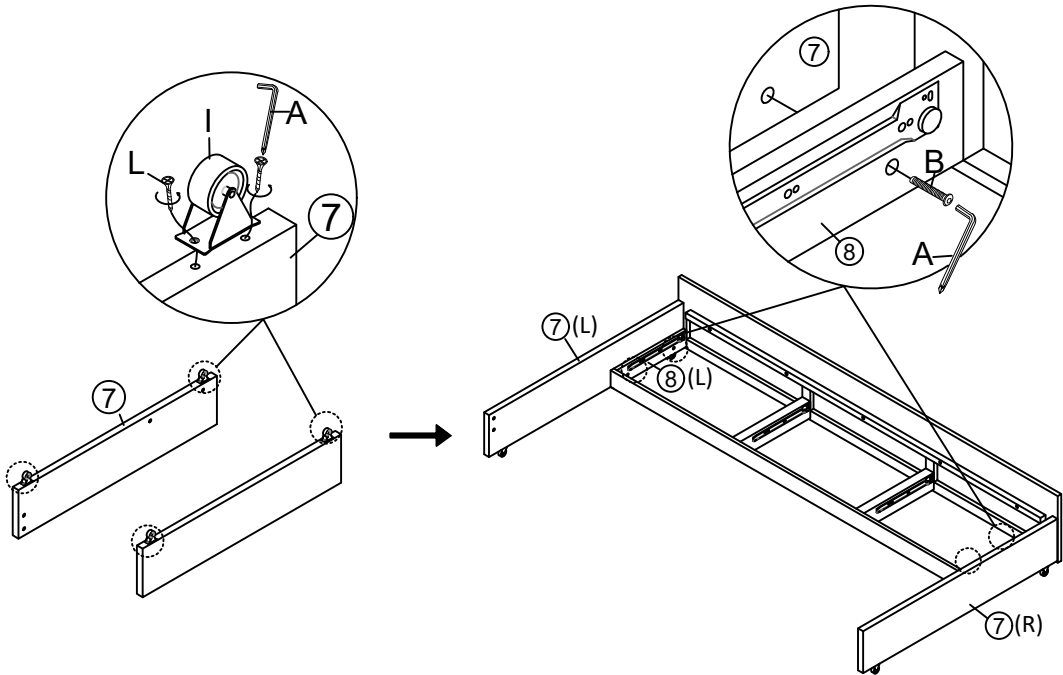Fix Wheel I to Bottom bed board ⑦ with Nails I by using Allen key A or Electric drill.


Attach Bottom bed board ⑦ to ⑧ with Bolts B by using Allen key A .



A Allen Key	B Bolts x 4 M8X40mm	L Nails x 8 M3X25mm	I Wheel x4
			


Step 8

Fix Bottom bed board ⑥ and ⑦ with small "7" Connector N and Nails J by using Allen key A or Electric drill.
Fix Bottom bed board ⑦ and ⑪ with "7" Connector F and Bolts C by using Allen key A .

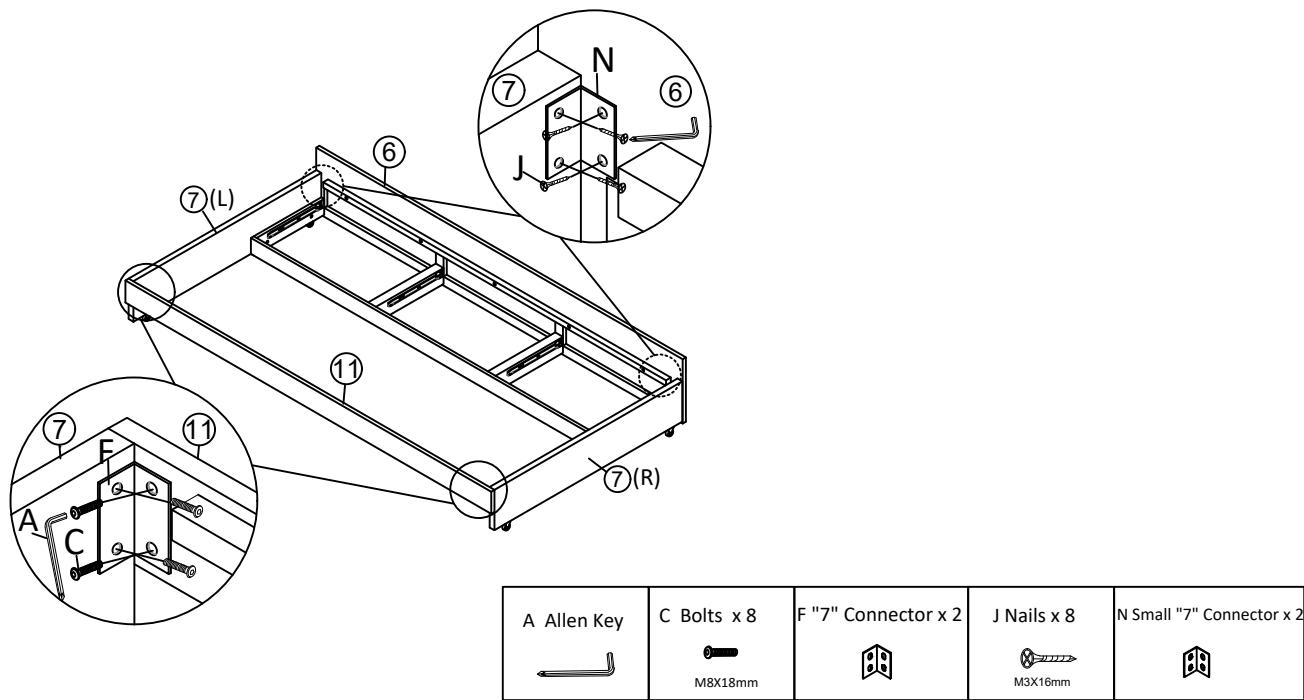

Step 9 x3


Fix the Drawing fitting G to the Drawer out board ⑫ and Drawer board ⑭ .Connect Drawer board ⑬ to ⑫ and ⑭ with Drawer fittings H by using Allen key A .

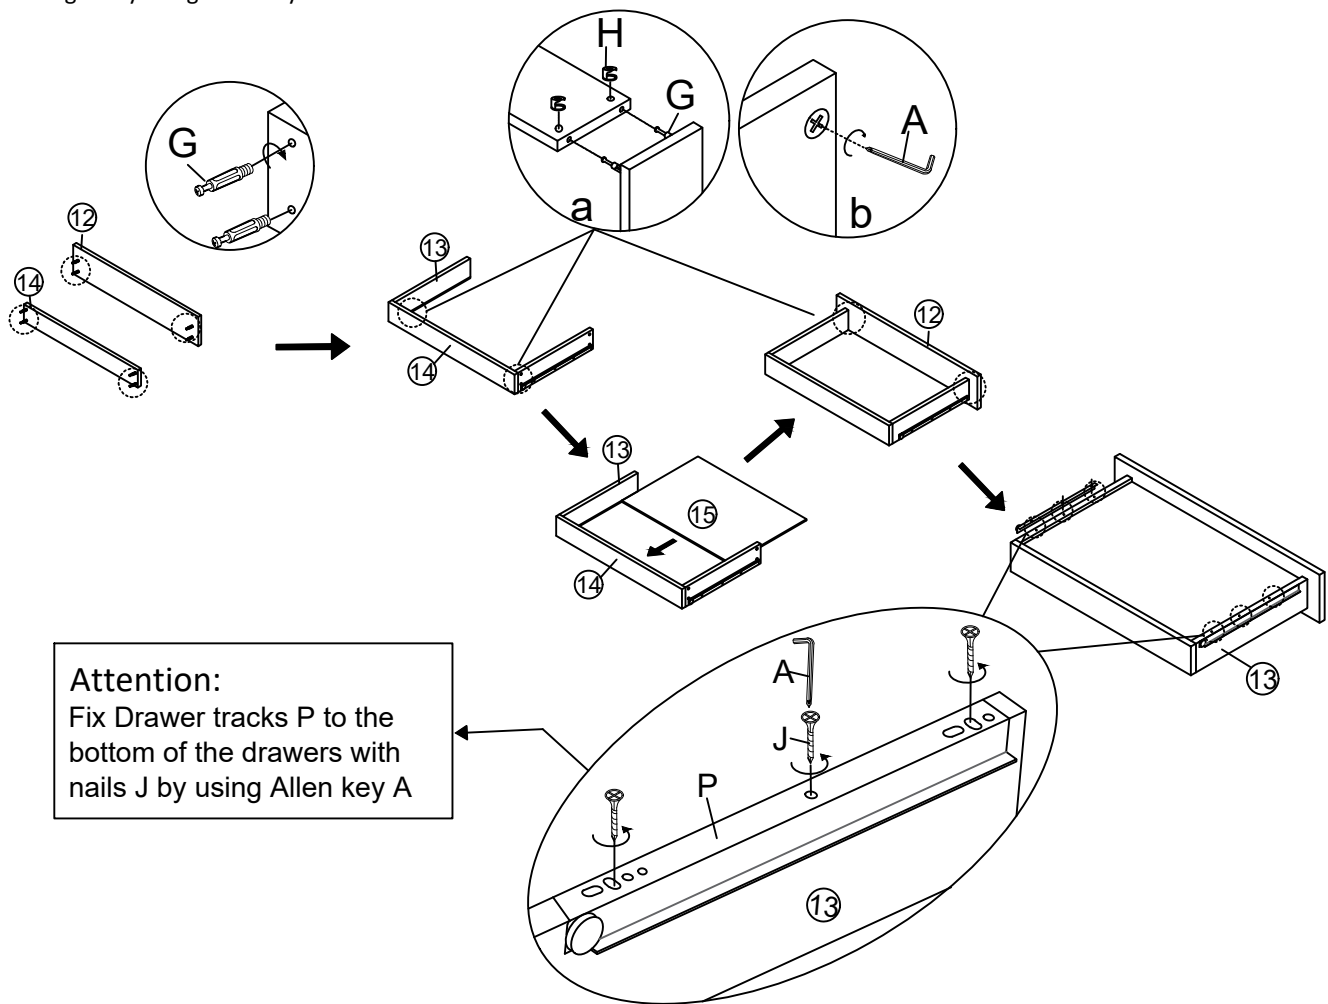



A Allen Key	G Drawer fittings x 24	H Drawer fittings x 24	J Nails x 18 M3X16mm	P Drawer track (3pcsR/3pcsL) x 6
-------------	------------------------	------------------------	-------------------------	----------------------------------

Step 10

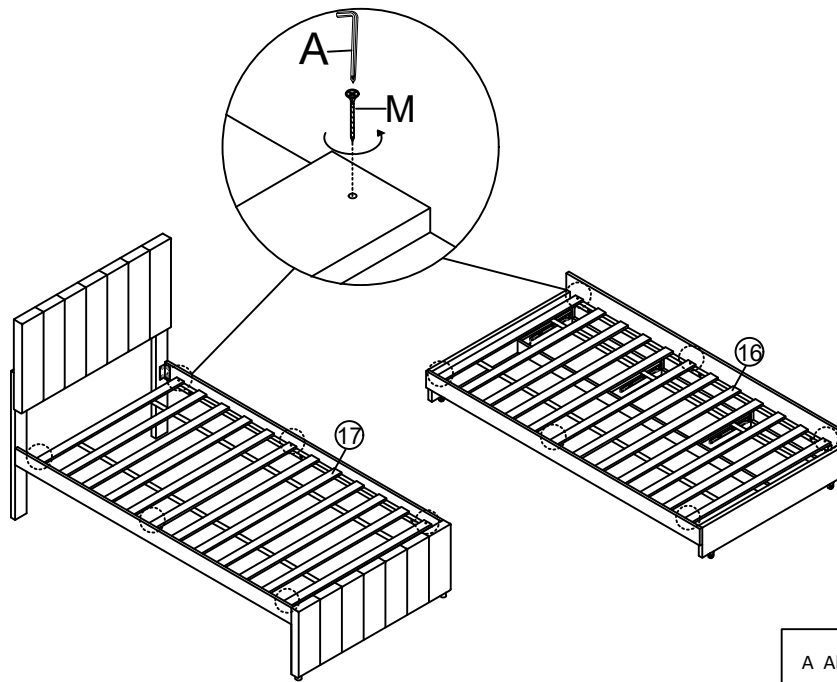
Fix the slats **16** and **17** to the side support bar with Nails M by using Allen key A or Electric drill.



A Allen Key	M Nails x 12
	 M4X30mm

Step 11

Push drawers into the bottom bed.

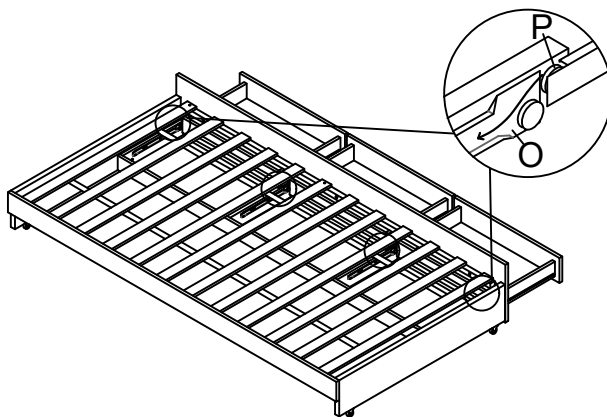

Step 12

Push the bottom bed into the bed and enjoy it.

