



ZTS007

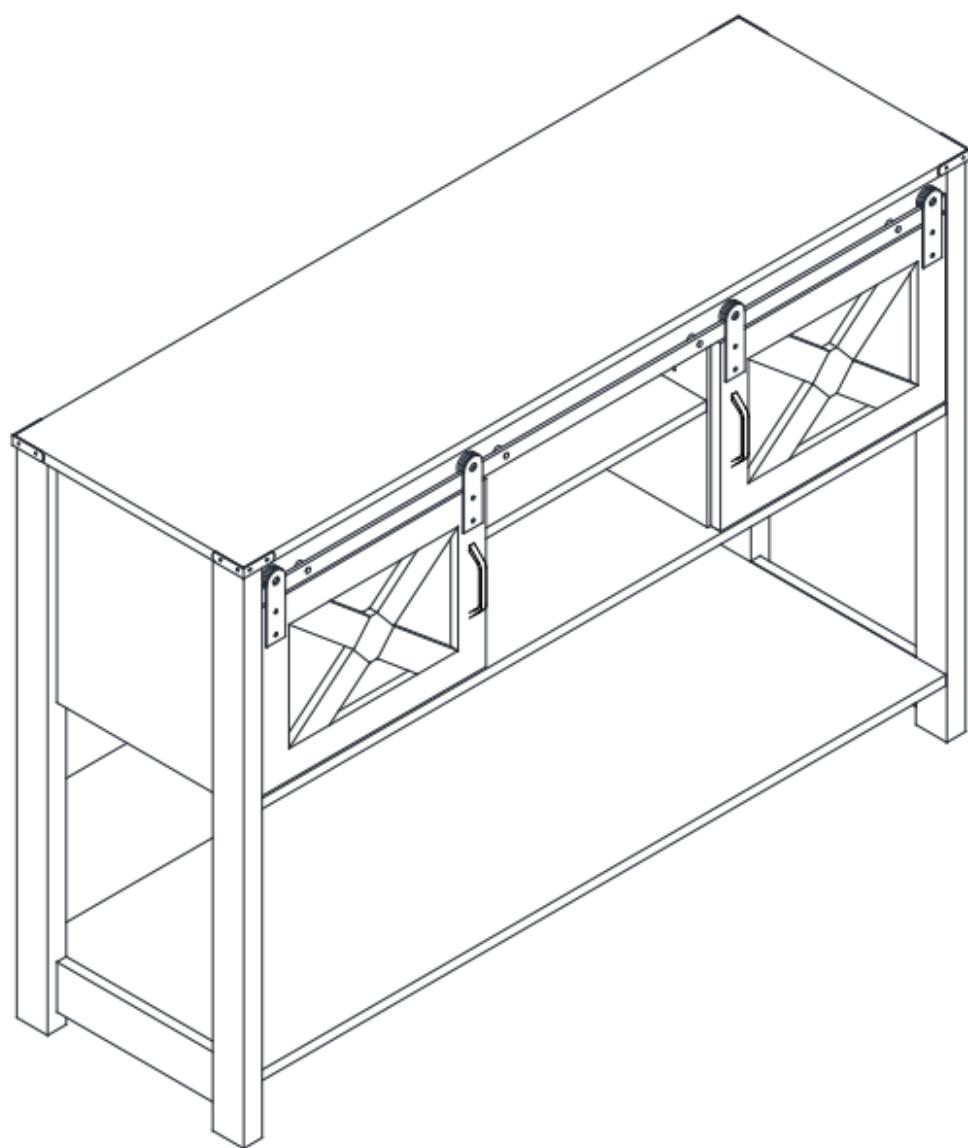

INSTRUCTION MANUAL

Before You Start

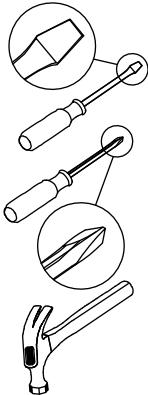

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing,
Please slow down or stop when the screw is tightened.
Otherwise it may cause the screws to peel off.

Helpful Hints




















PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting to assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.












Board Identification

Not actual size

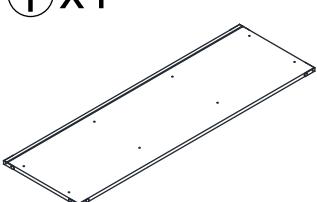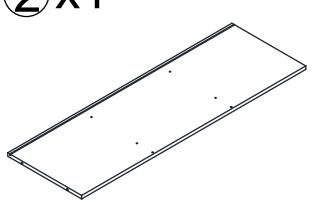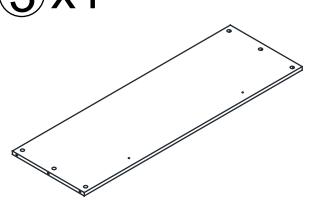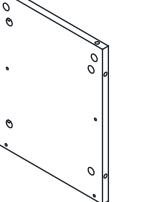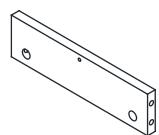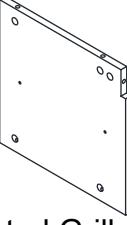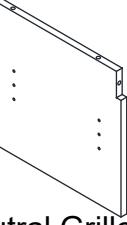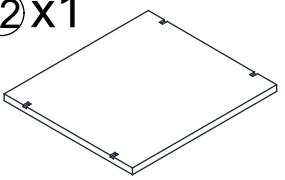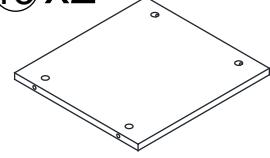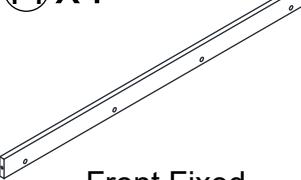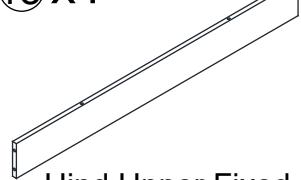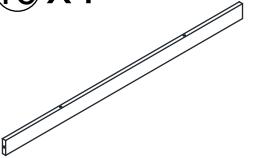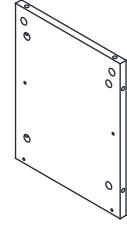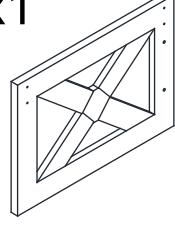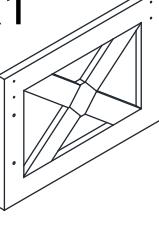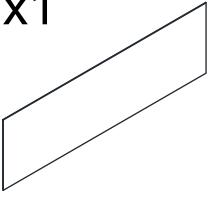
①x1  Roof Plate	②x1  Upper Fixing Plate	③x1  Bottom Plate	④x1  Left Upper Side Plate
⑤x2  Lower Side Plate	⑥x1  Left Front Leg	⑦x1  Left Hind Leg	⑧x1  Right Front Leg
⑨x1  Right Hind Leg	⑩x1  Neutral Grille On The Left	⑪x1  Neutral Grille On The Right	⑫x1  In The Middle Active Lamination
⑬x2  Left And Right Fixed Laminates	⑭x1  Front Fixed Slide Plate	⑮x1  Hind Upper Fixed Slide Plate	⑯x1  Hind Lower Fixed Slide Plate
⑰x1  Right Upper Side Plate	⑱x1  Left Door Frame	⑲x1  Right Door Frame	⑳x1  Back Panel

Part List

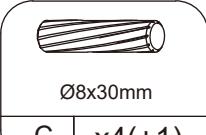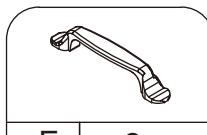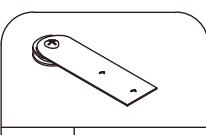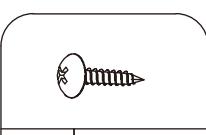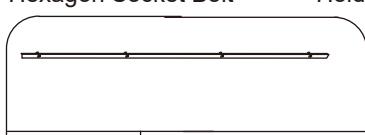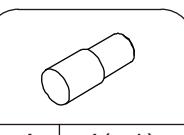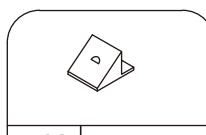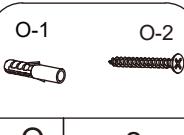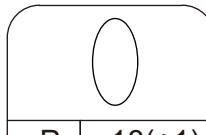
 Ø6x35mm A x56(+3)	 Ø15x10mm B x56(+3)	 Ø8x30mm C x4(+1)	 M6x20mm D x4(+1)	 E x 2
Cam Bolt	Cam Lock	Dowel	Hexagon Socket Bolt	Hold Hands
 M4x20mm F x 6(+1)	 G x 4	 H x 8(+1)	 I x1	The Iron Bars Of a Door Pulley
Handle Bolt	Door Pulley	Large Flat Head Screw		
 J x4(+1)	 K x6(+1)	 L x6(+1)	 M x 4(+1)	N-1 N-2 Anti-Fall Strip Large Flat Head Screw
Removable Plate Holder	Back Buckle	Back Buckle Screw	Foot Nail	Anti-Fall Strip Large Flat Head Screw
 O-1 O-2 Plastic Expansion Screw Self-Tapping Screw O x2	 P x18(+1)			
Plastic Expansion Screw Self-Tapping Screw O x2	Sticker			

Cam Lock Fastening System






This Cam Lock Fastening System will be used throughout the assembly process.

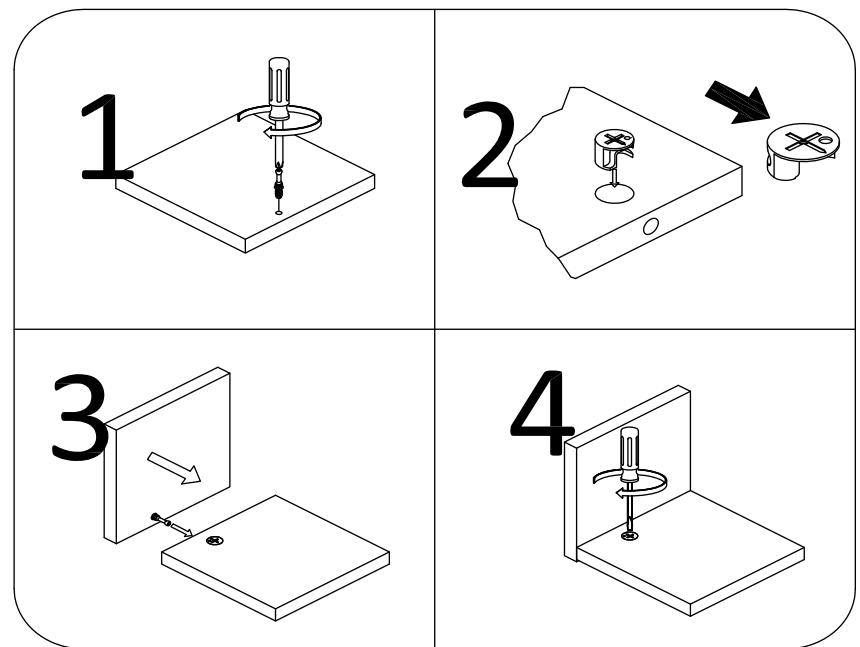






Board Identification

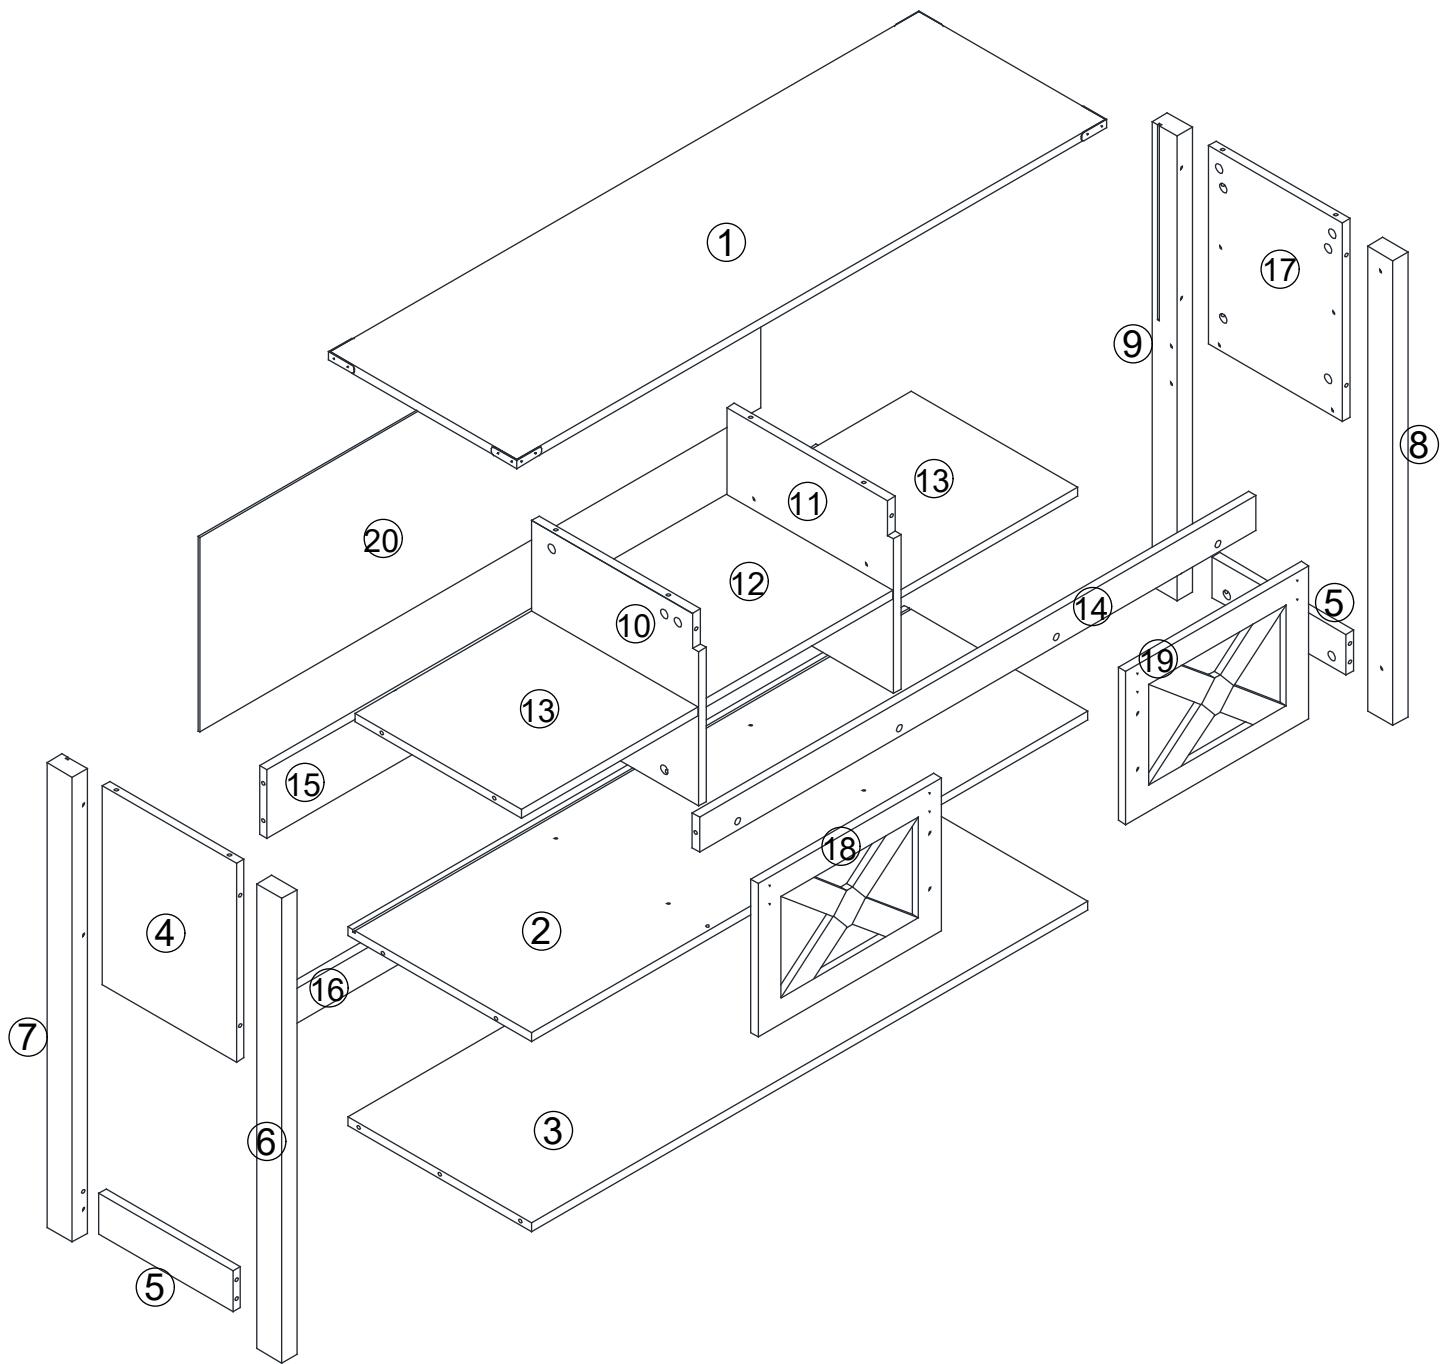





STEP 1

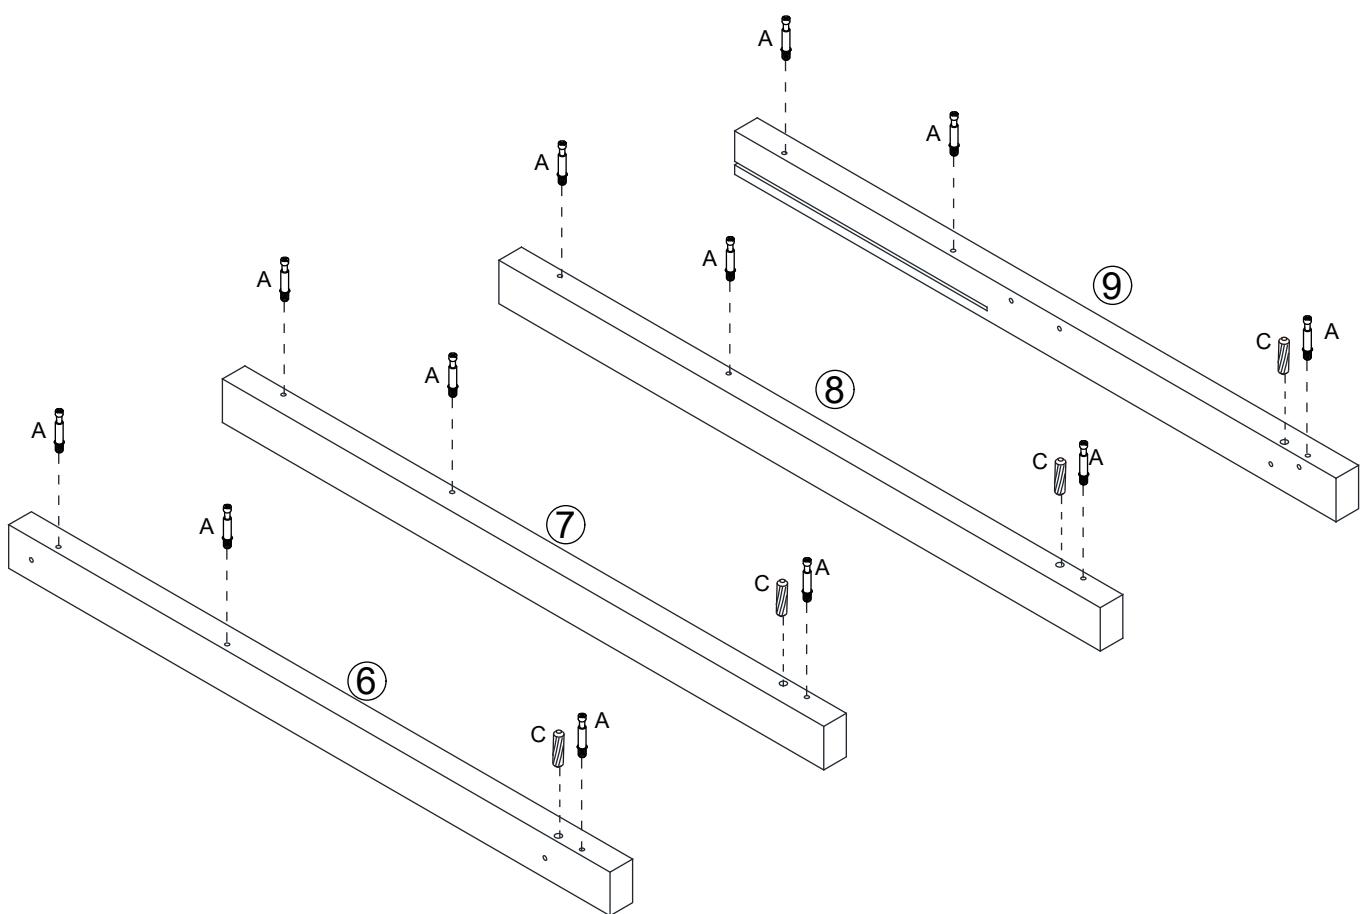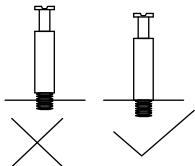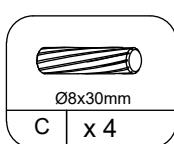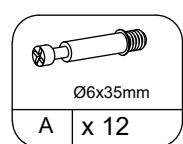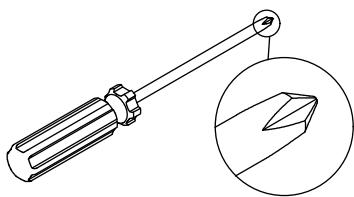








STEP 2

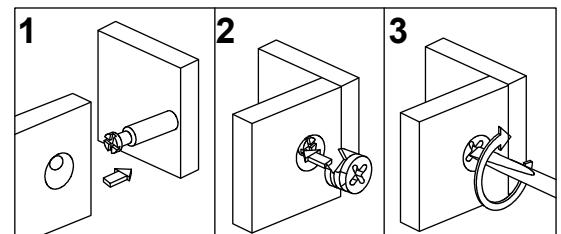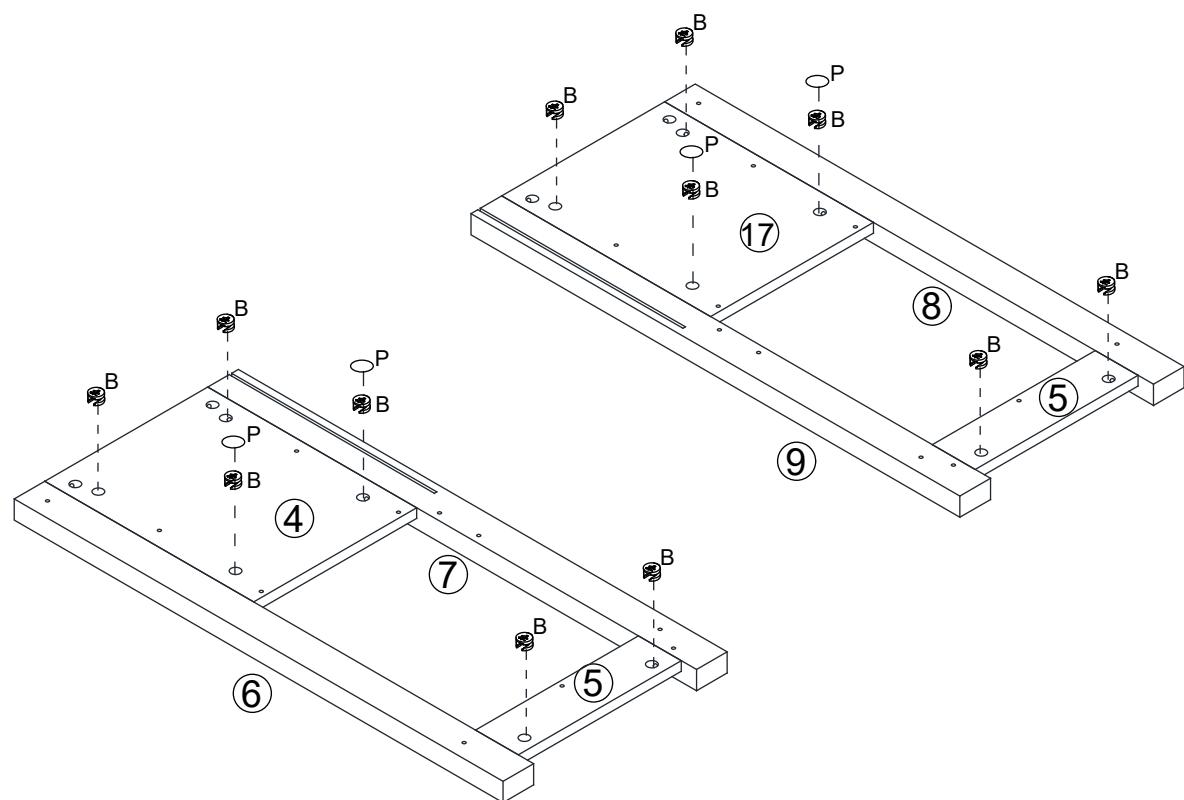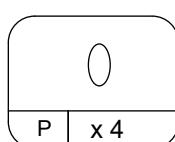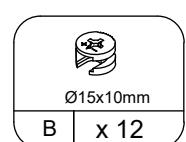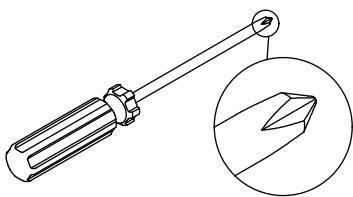









STEP 3

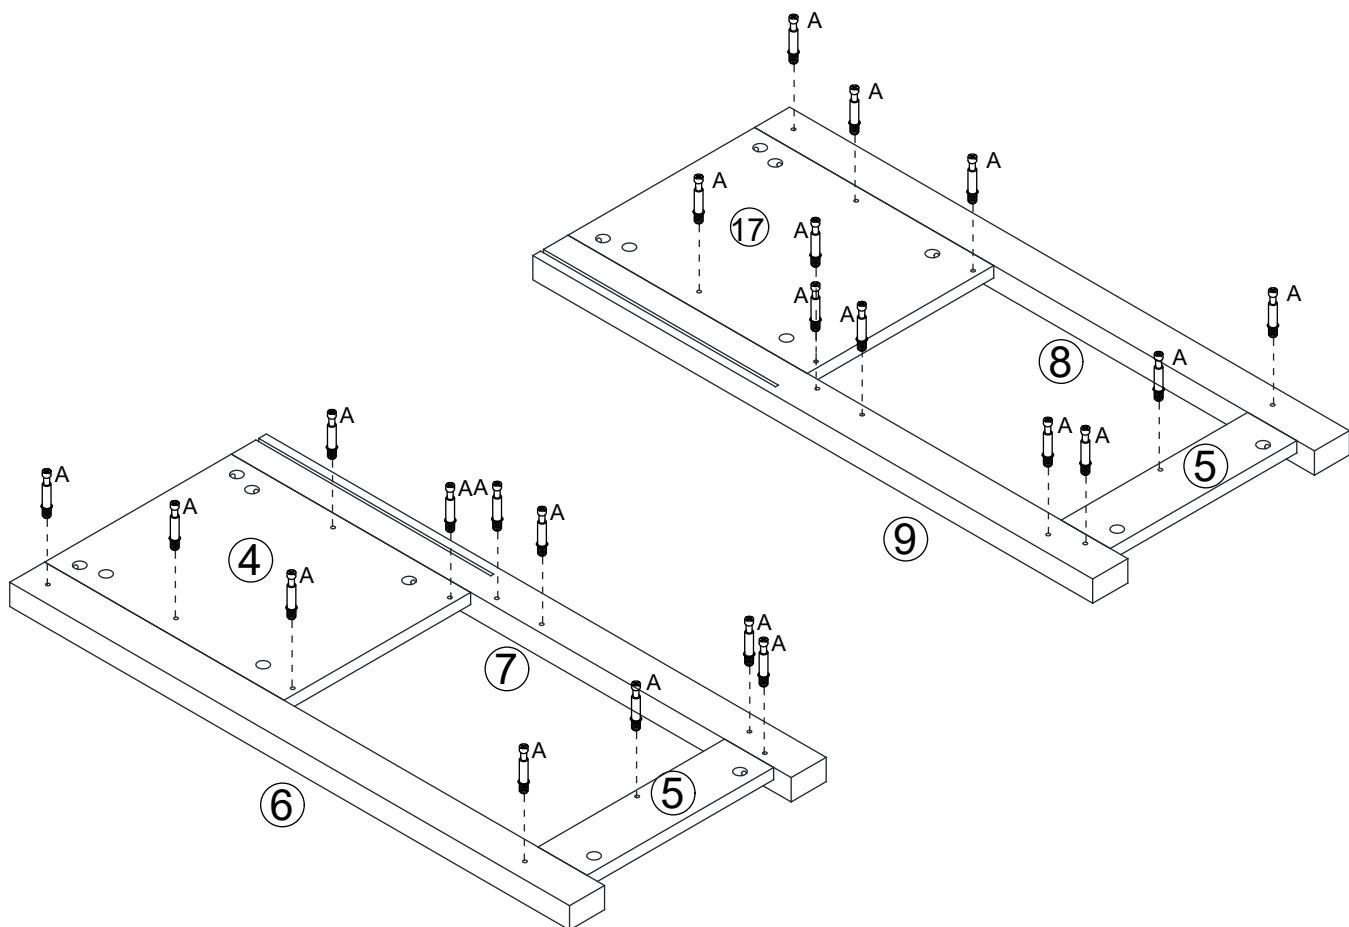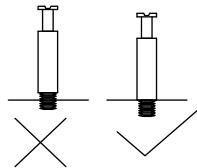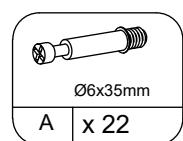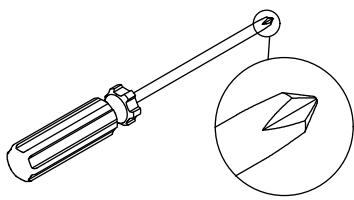









STEP 4

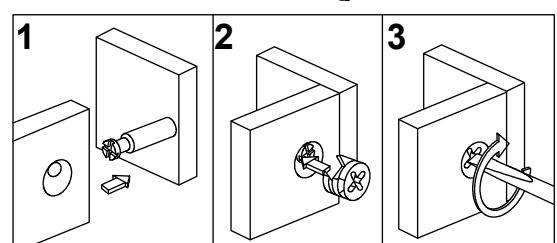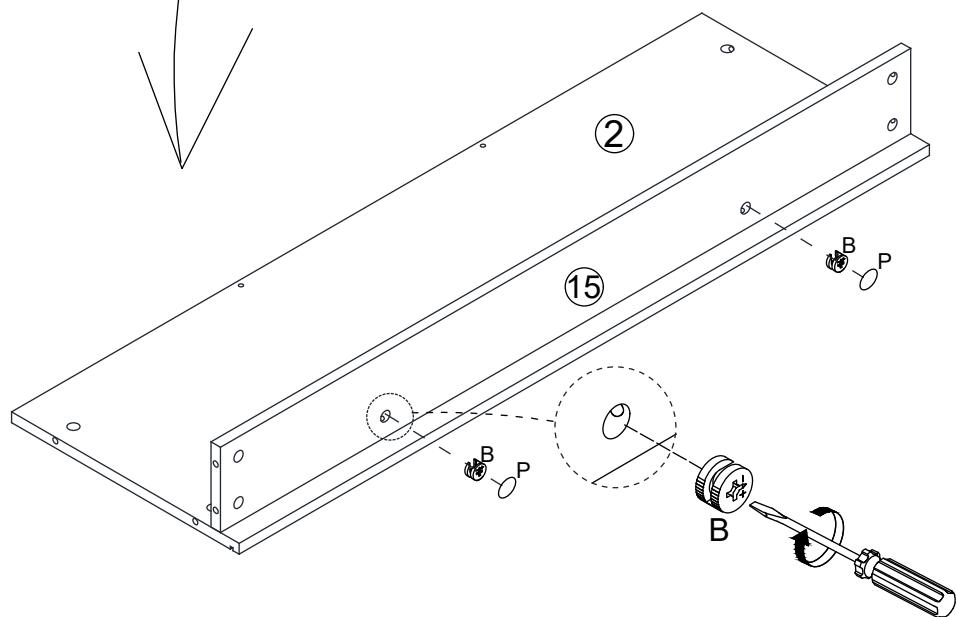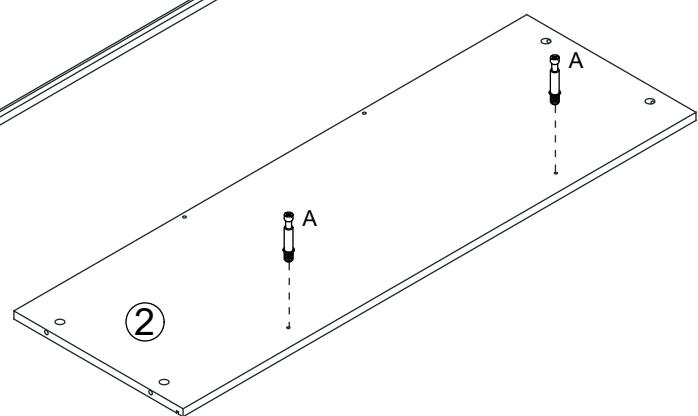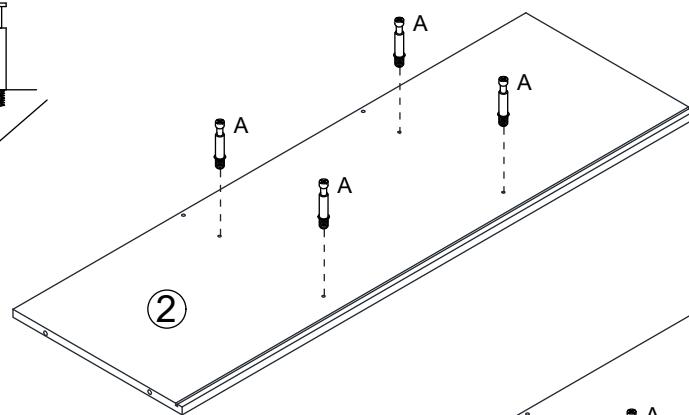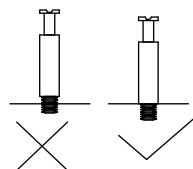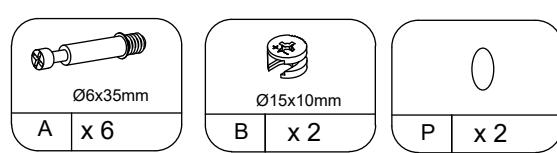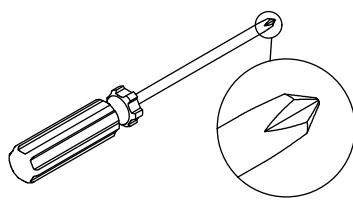






STEP 5

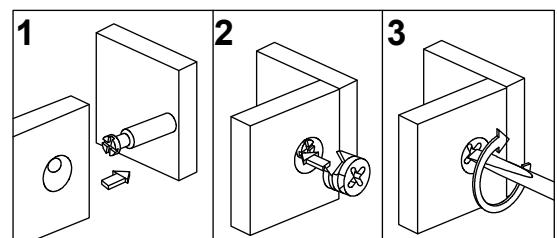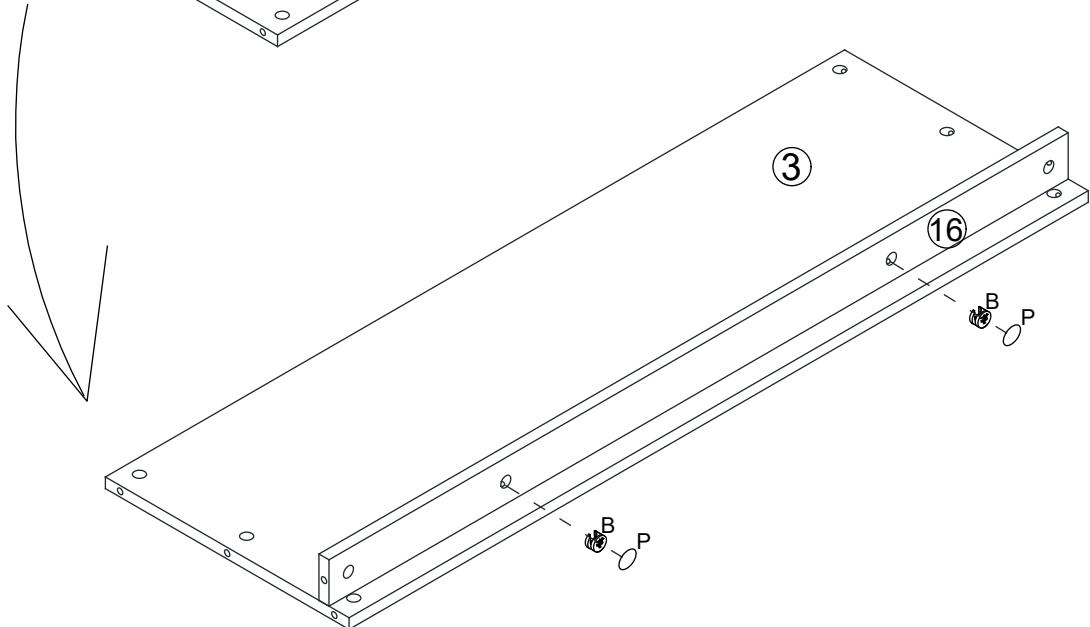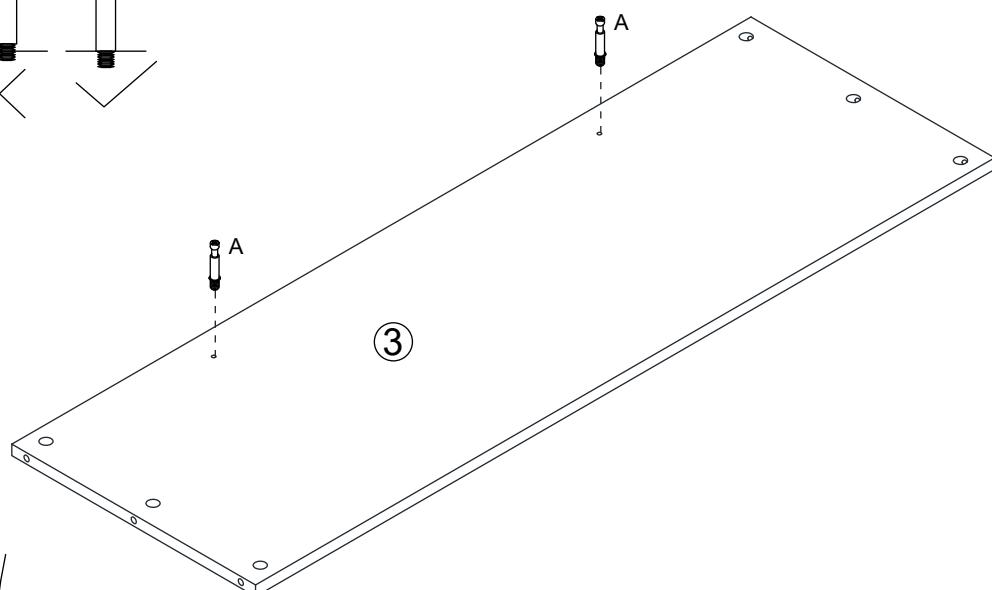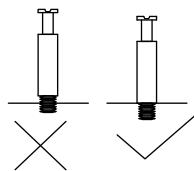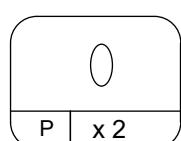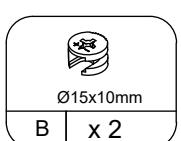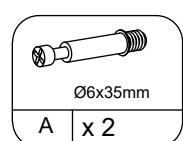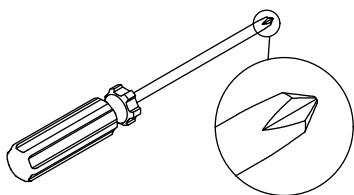








STEP 6

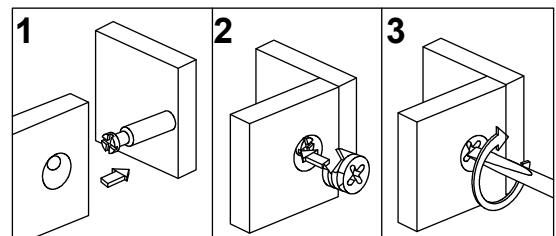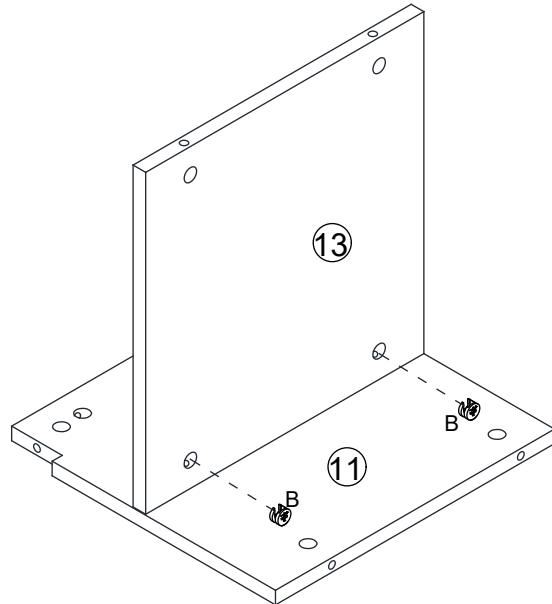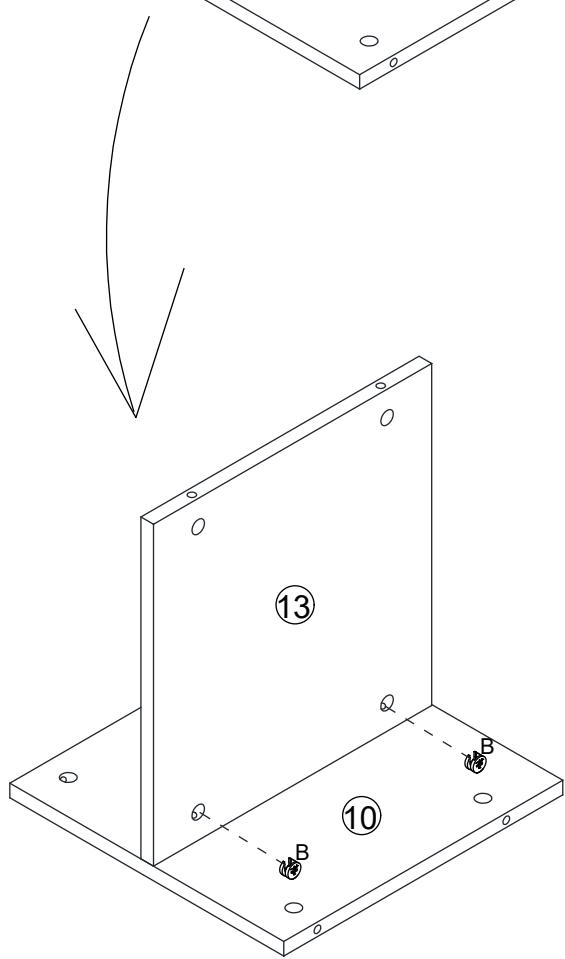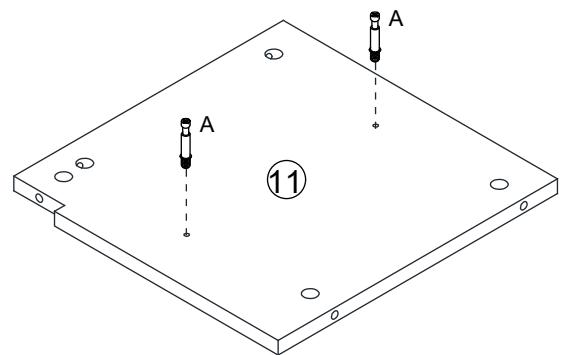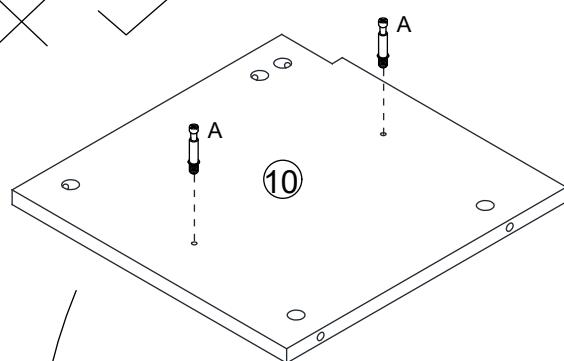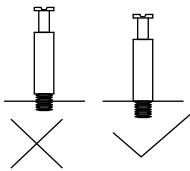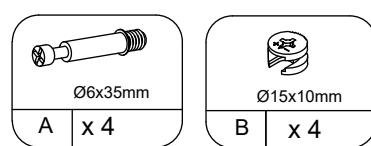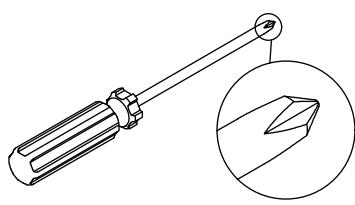






STEP 7

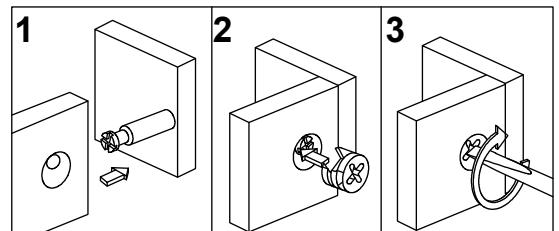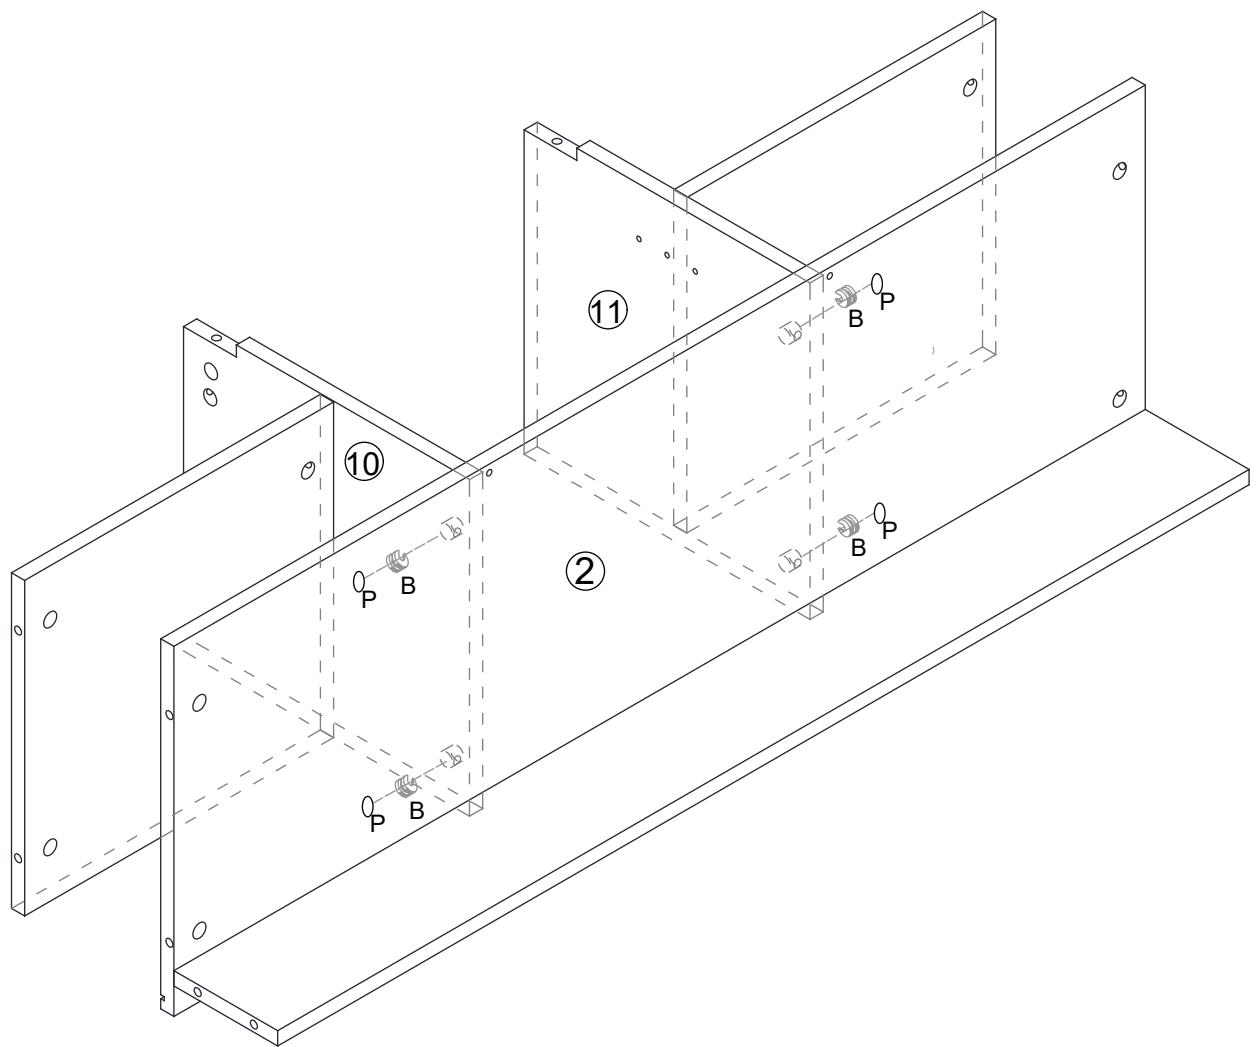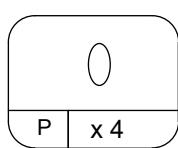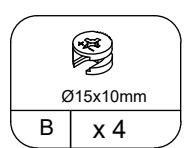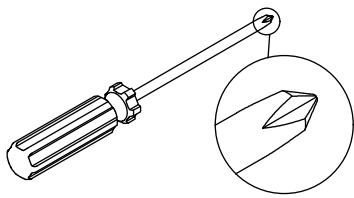






STEP 8

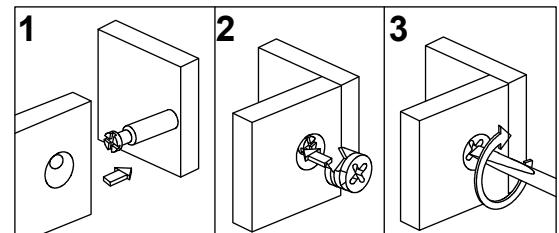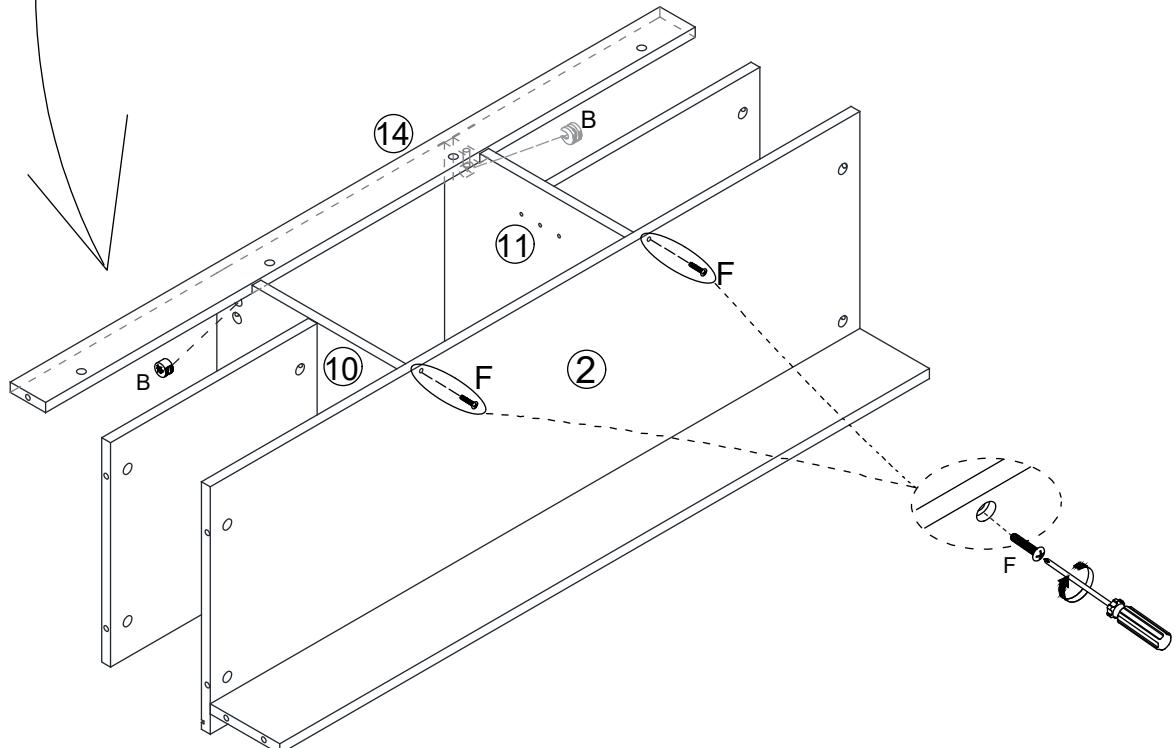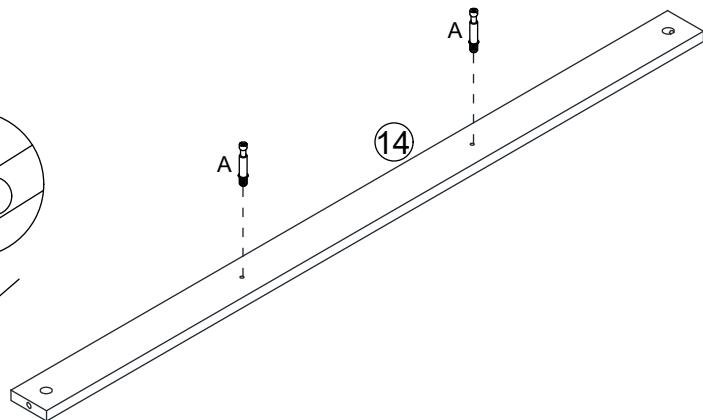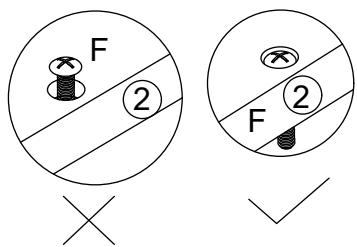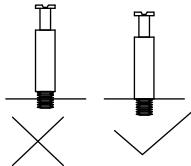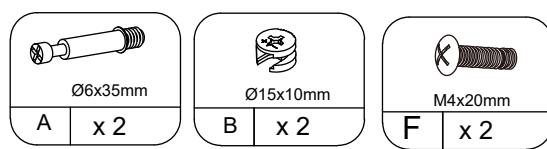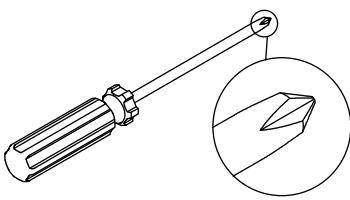


STEP 9

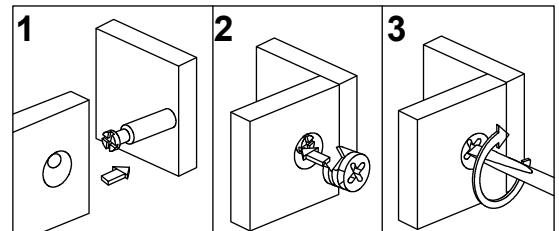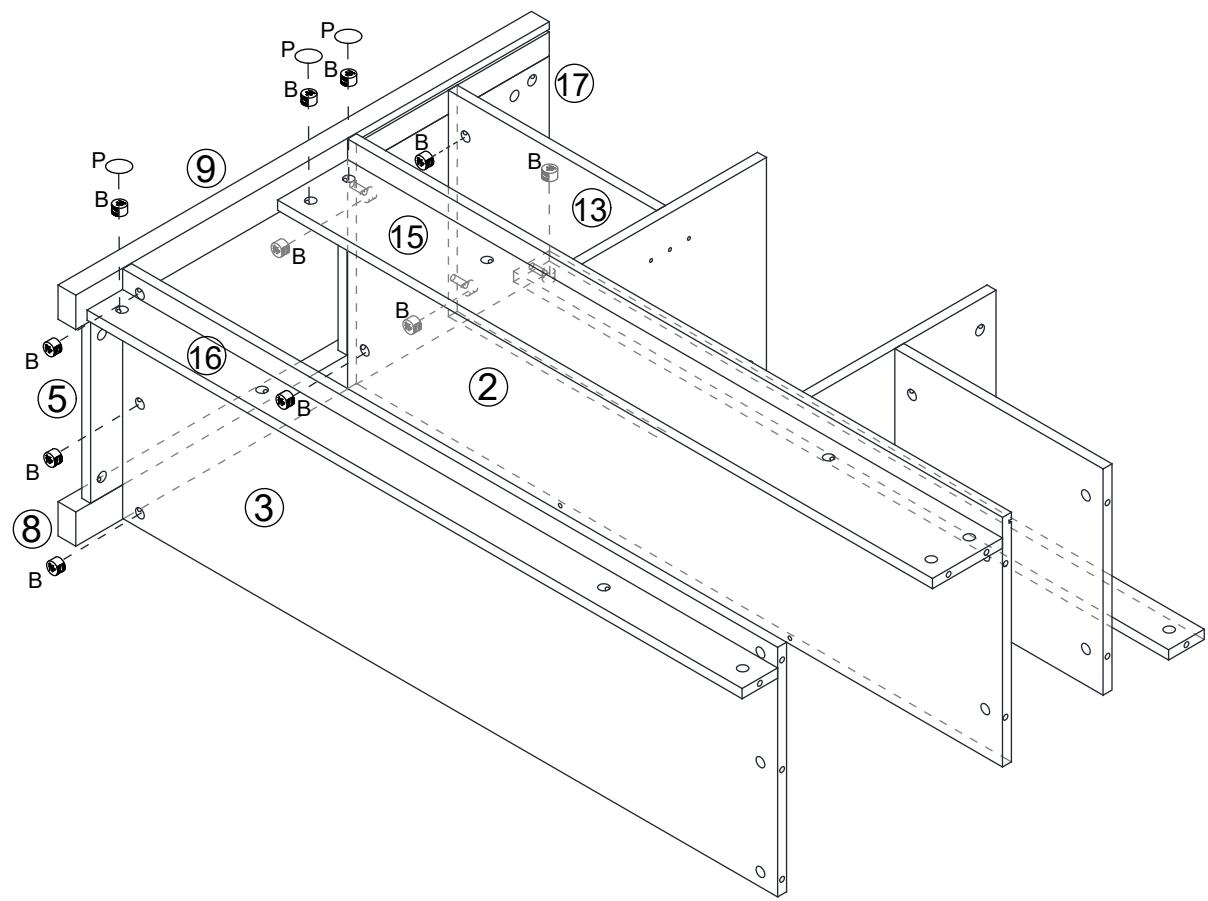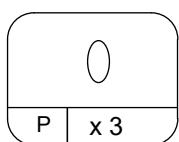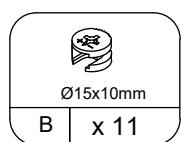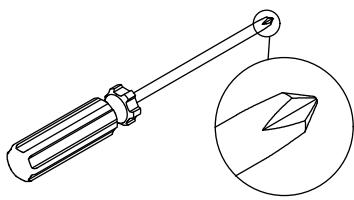


STEP 10

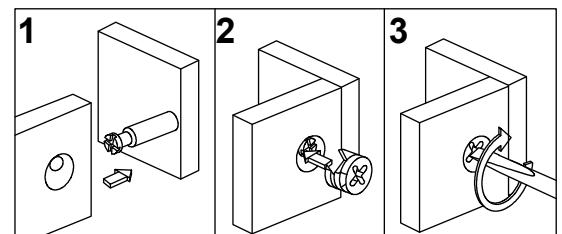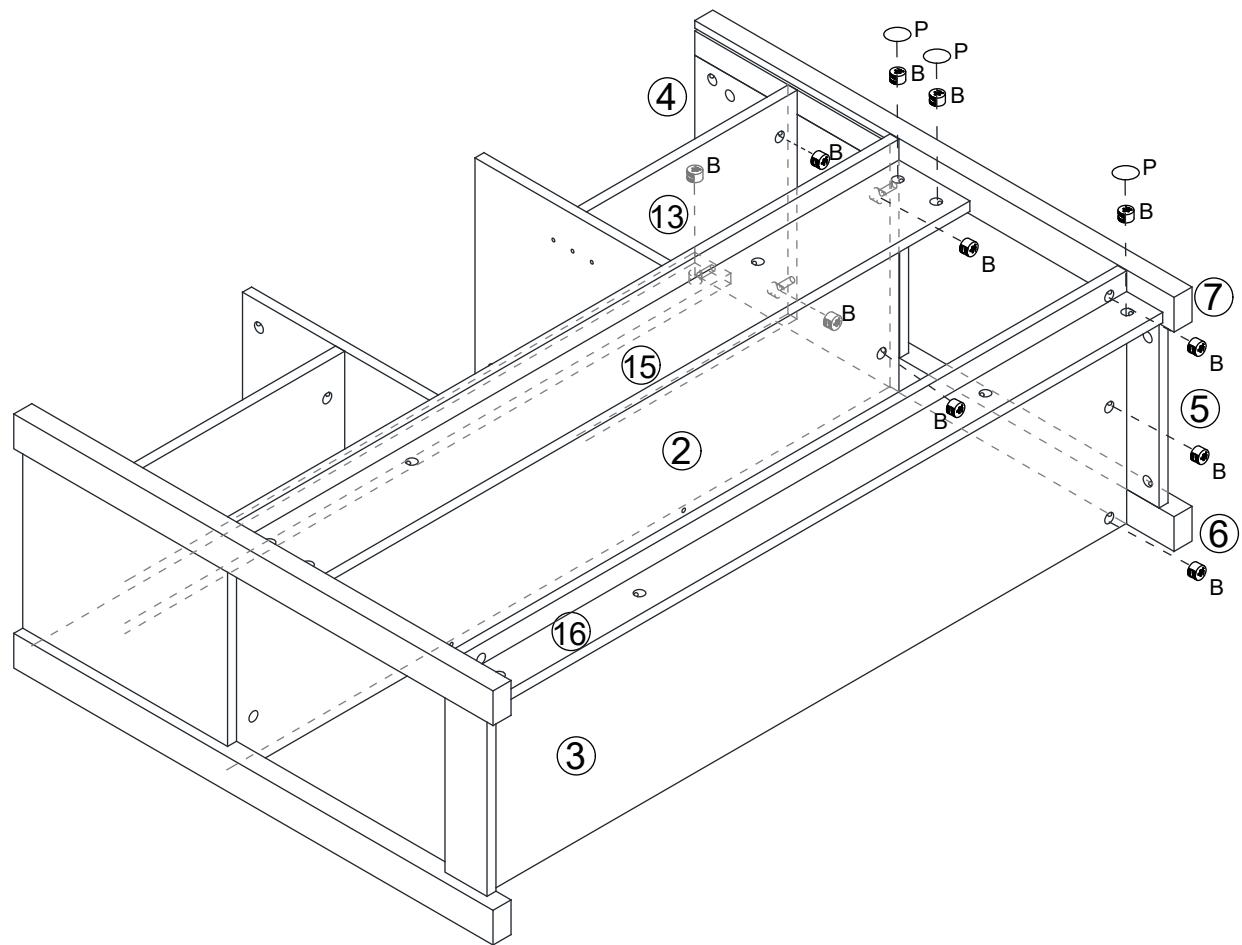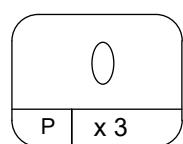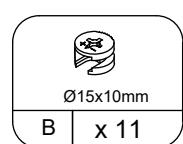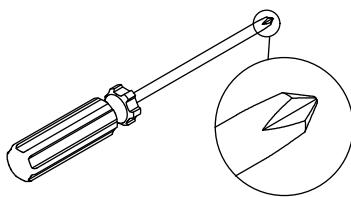








STEP 11

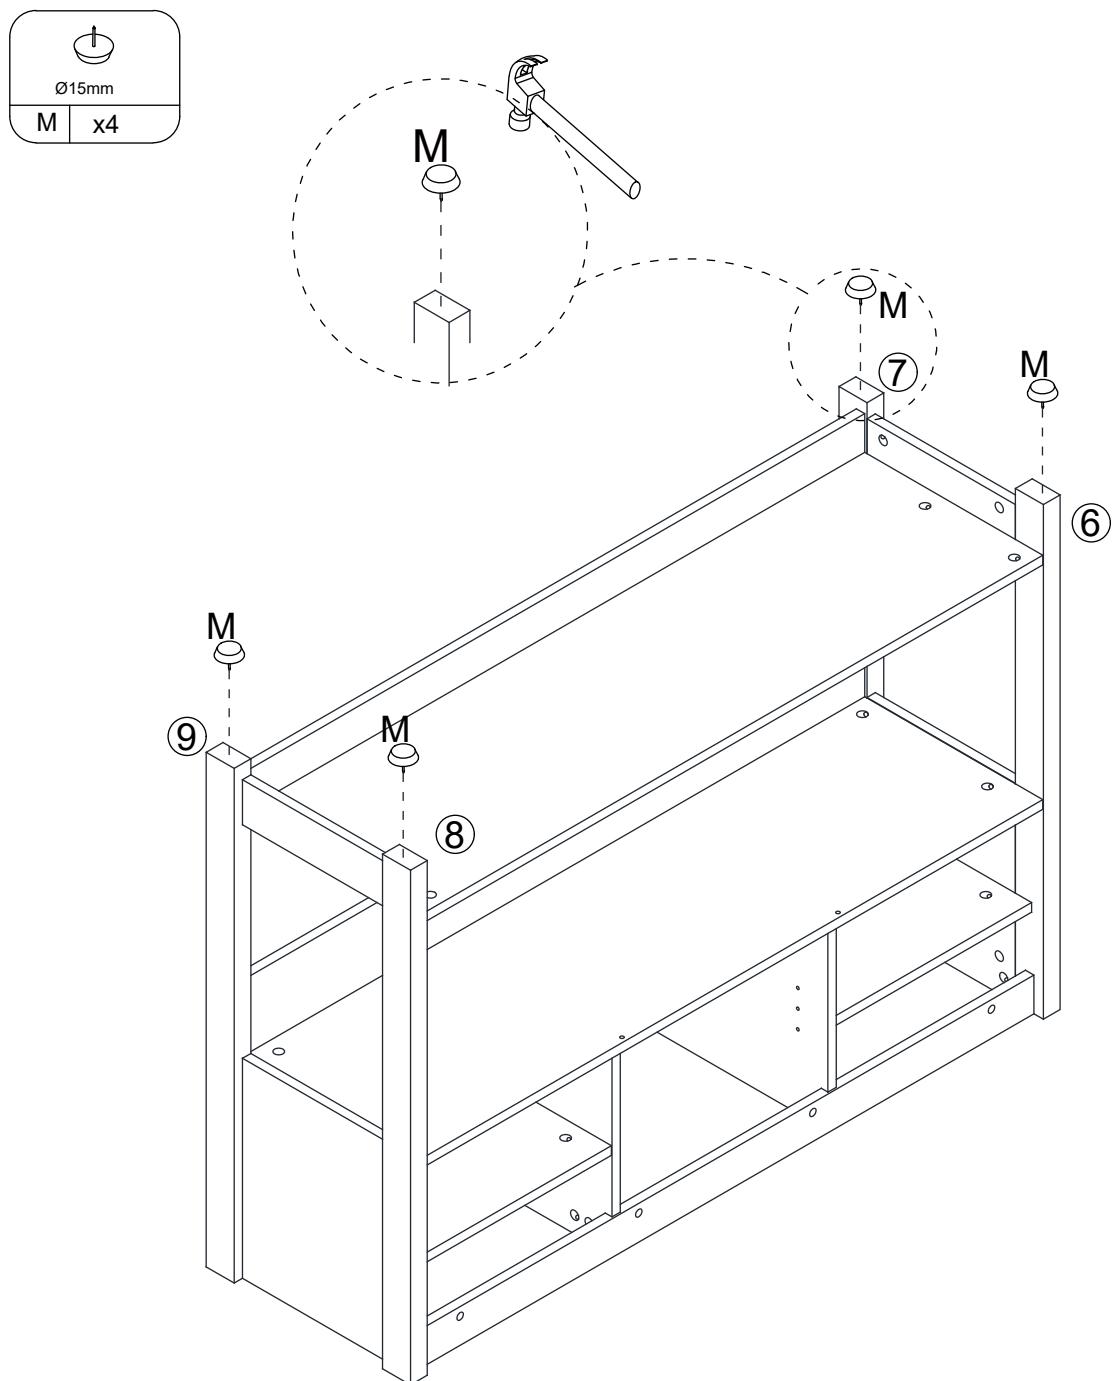


STEP 12

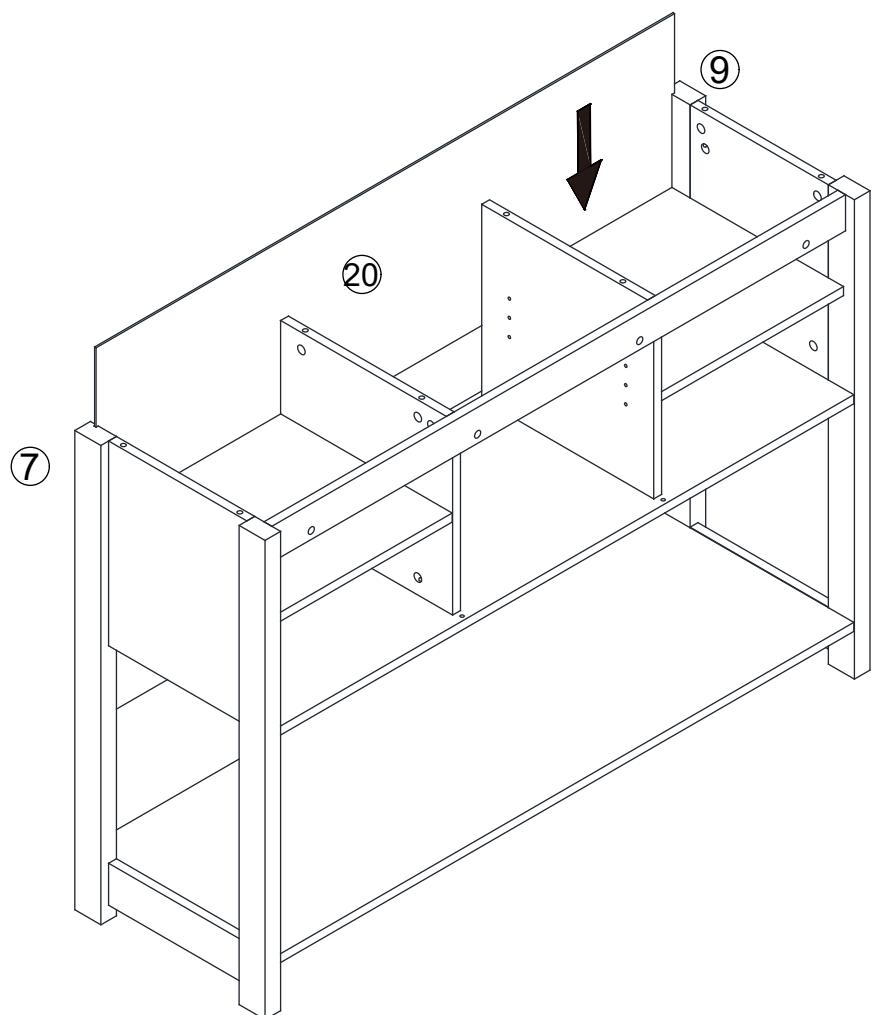


STEP 13

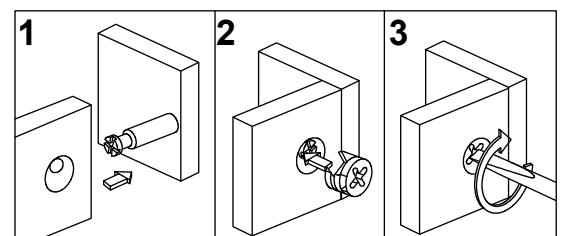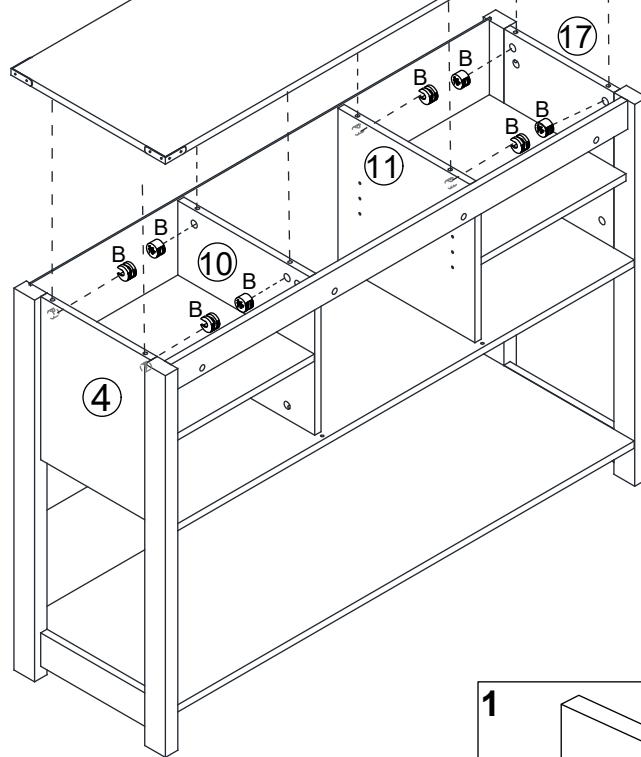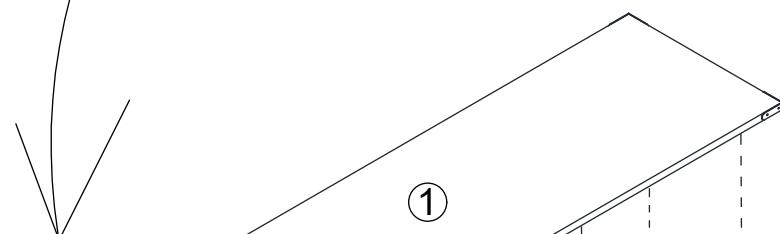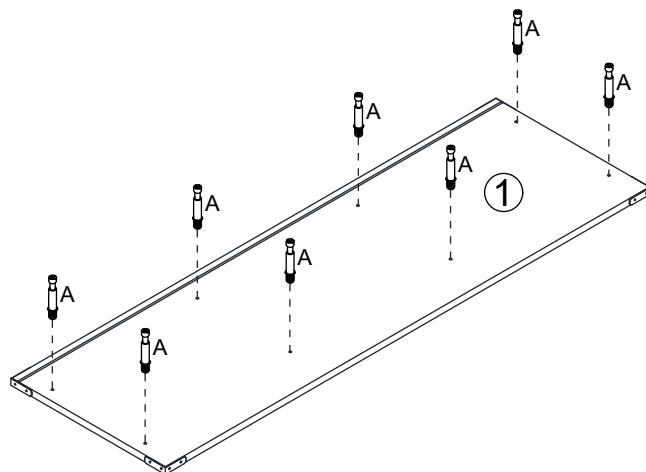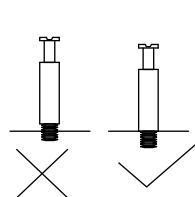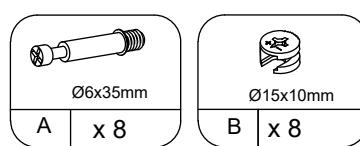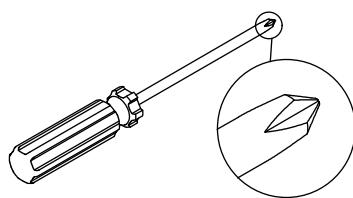




STEP 14

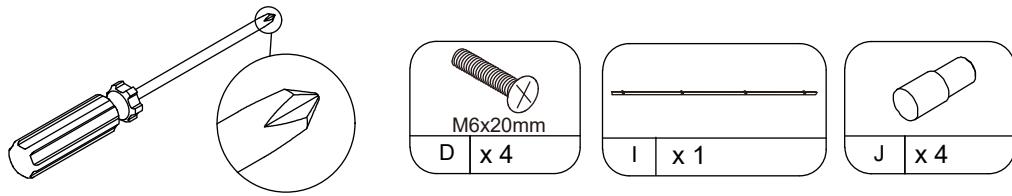





The door sliders have large holes on the outside and small holes on the inside

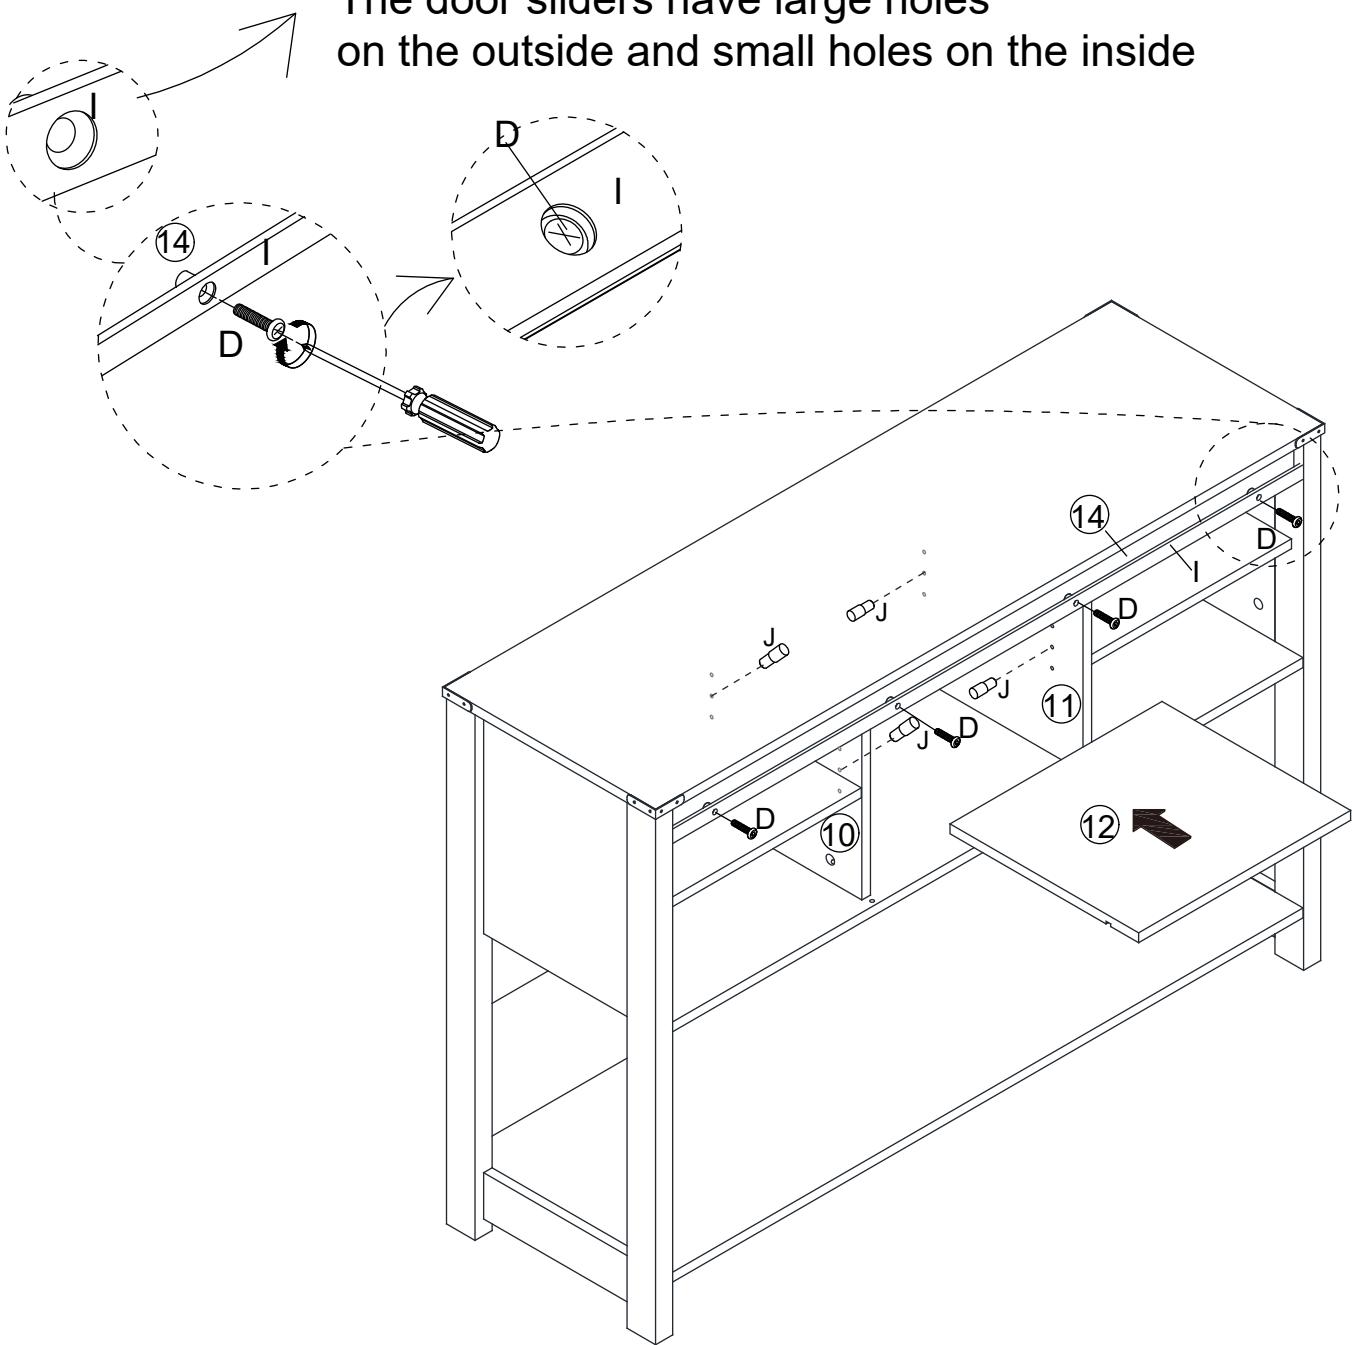



STEP 15

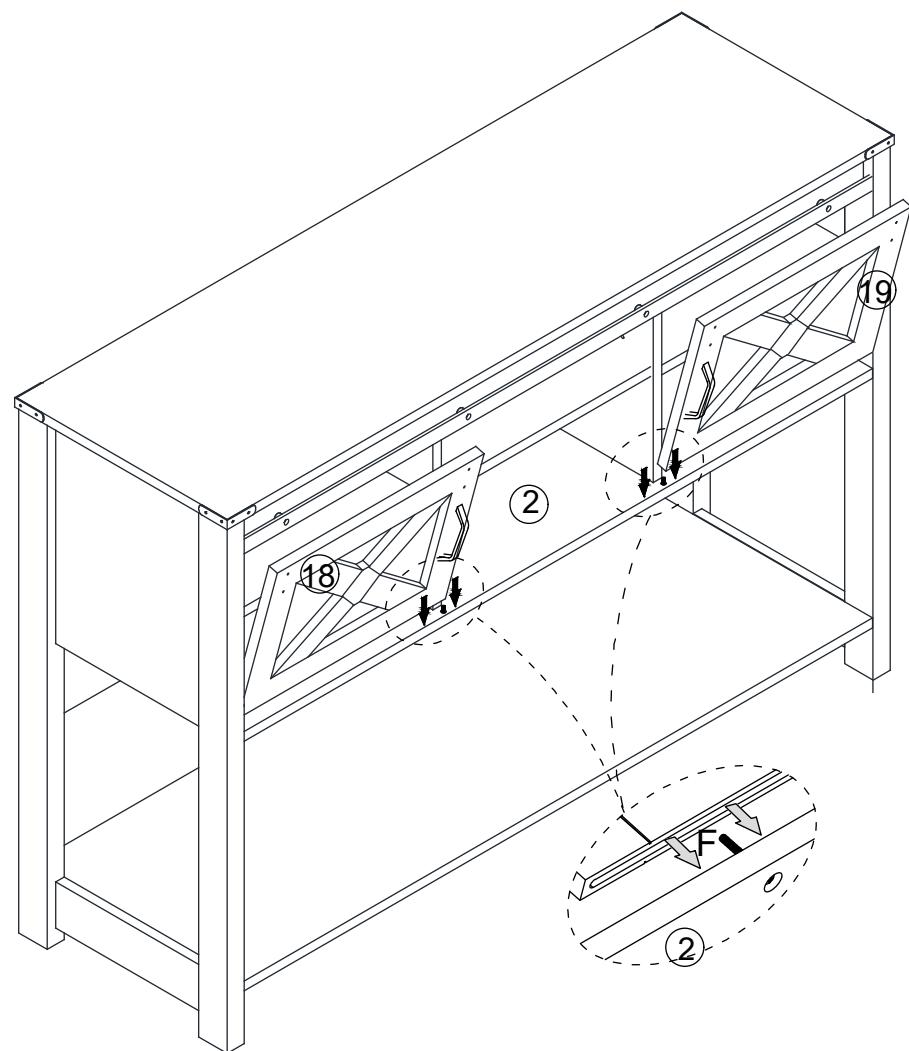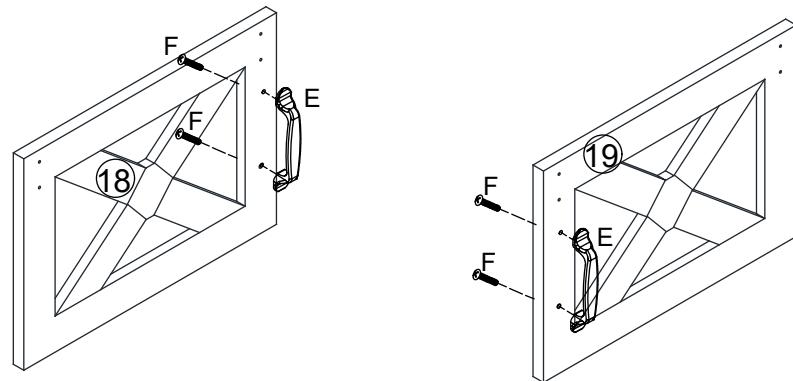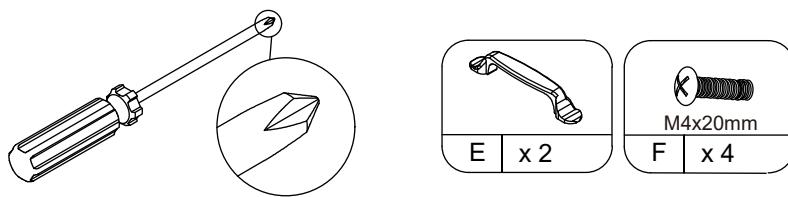


STEP 16

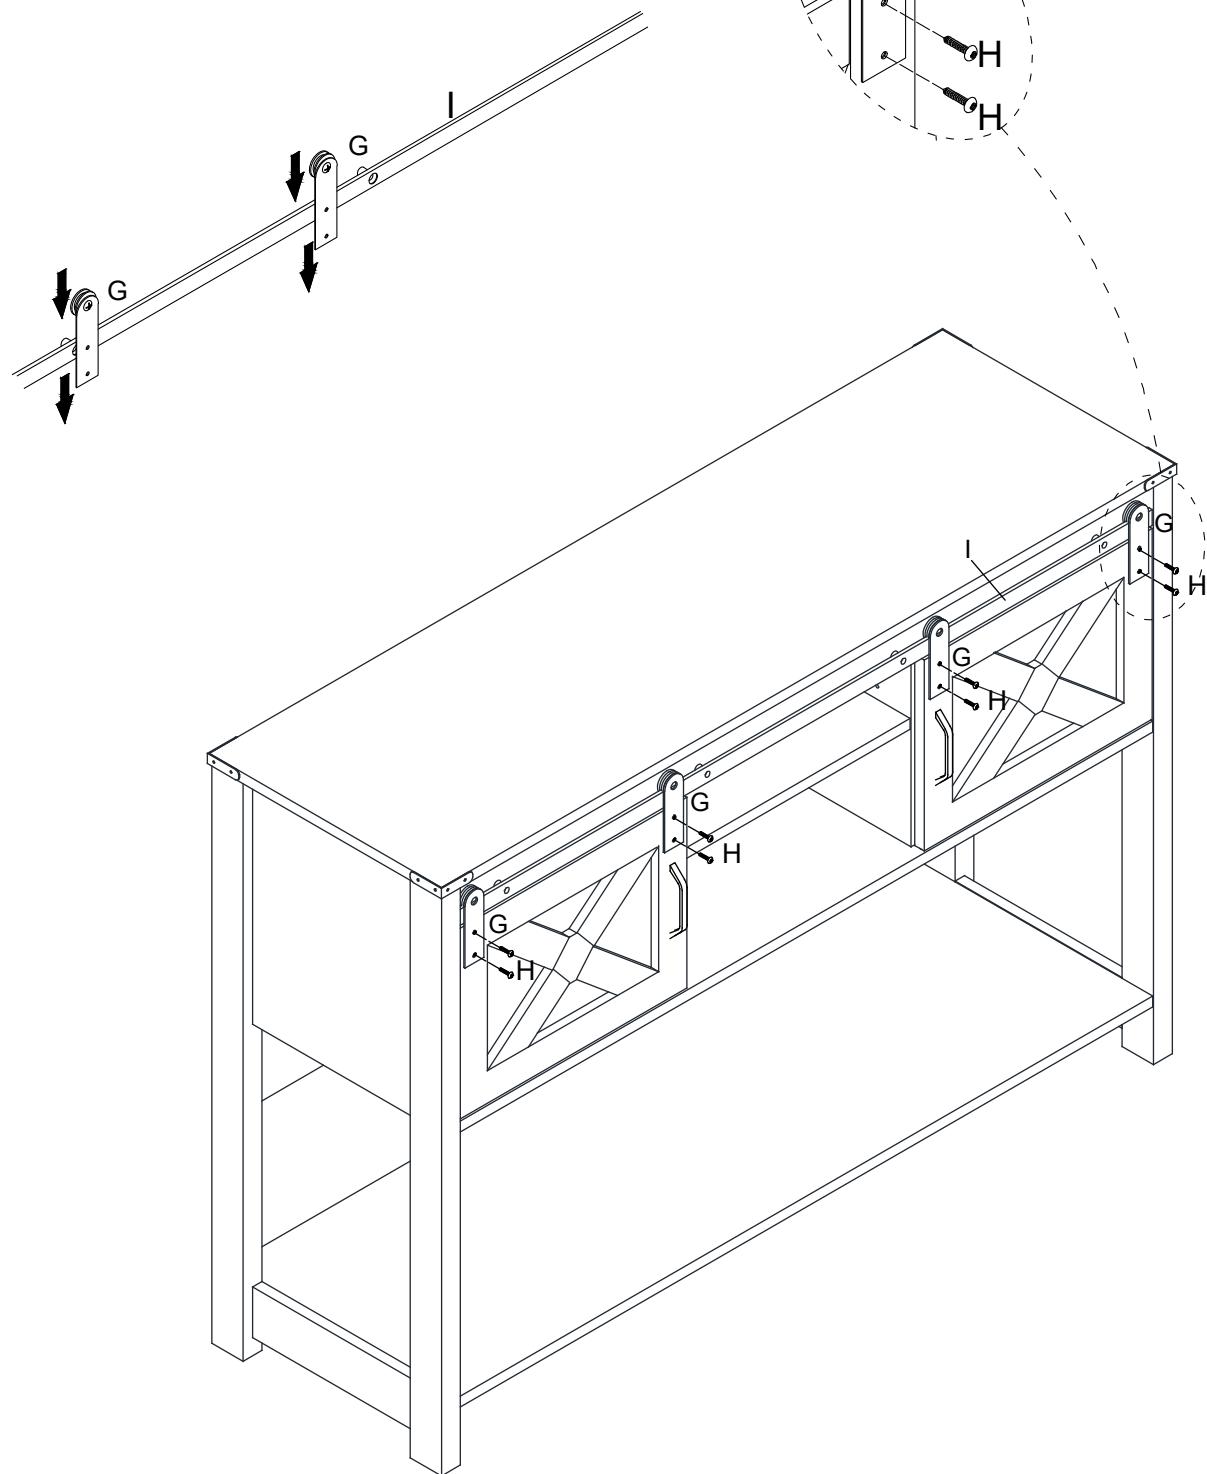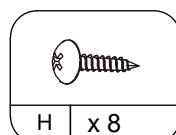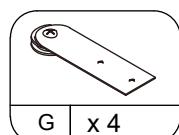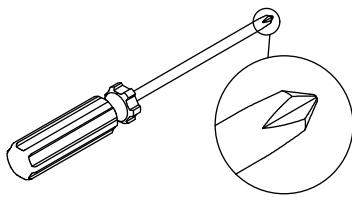


STEP 17

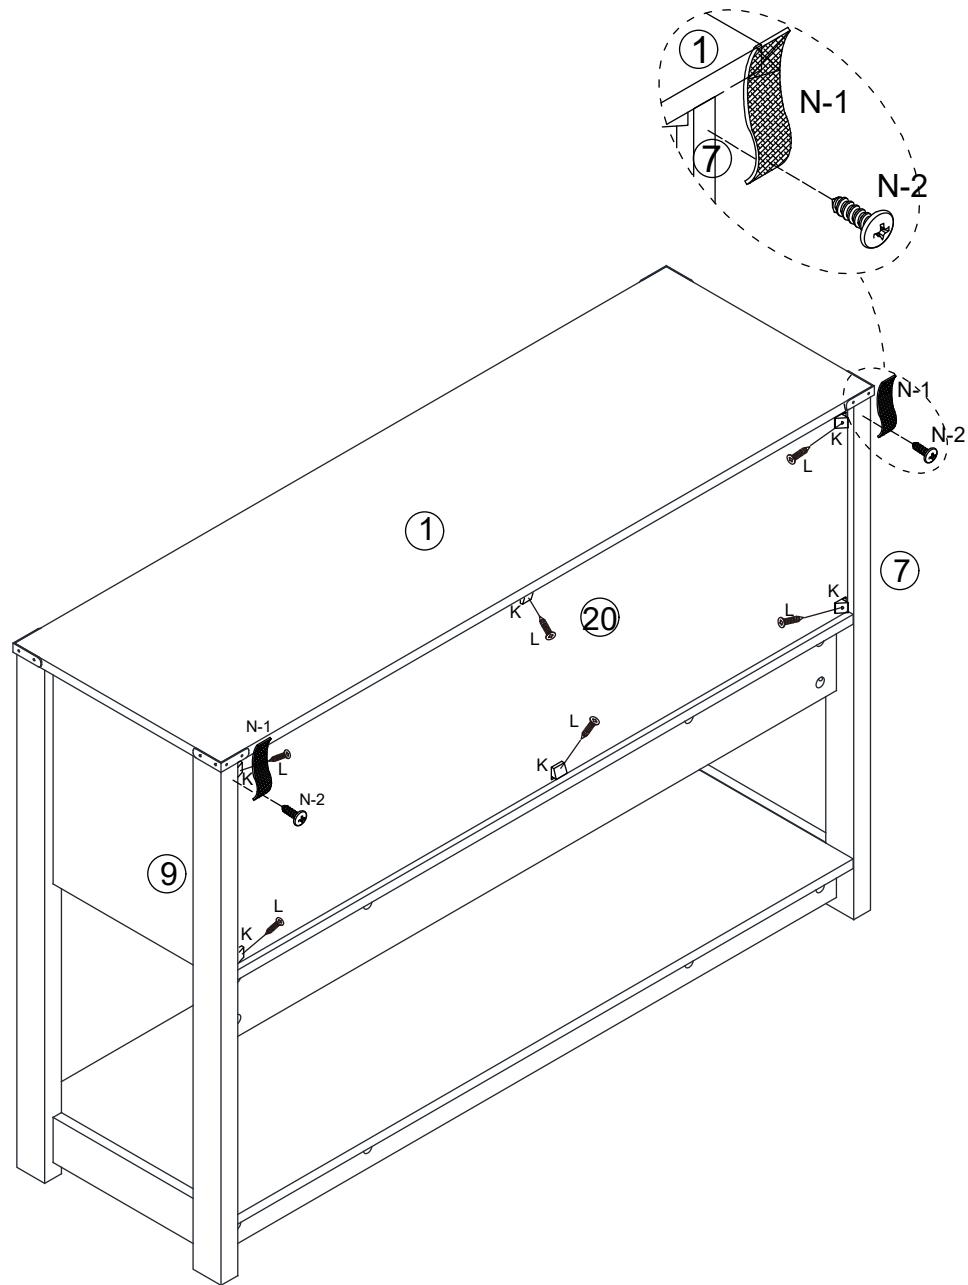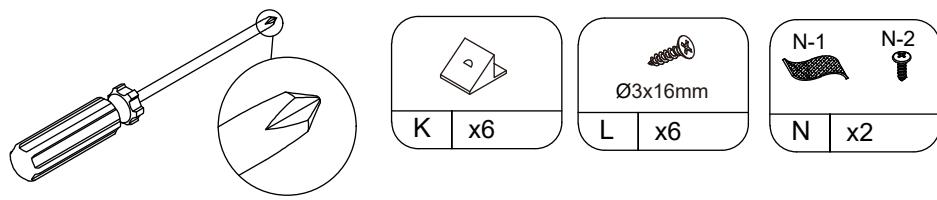

STEP 18

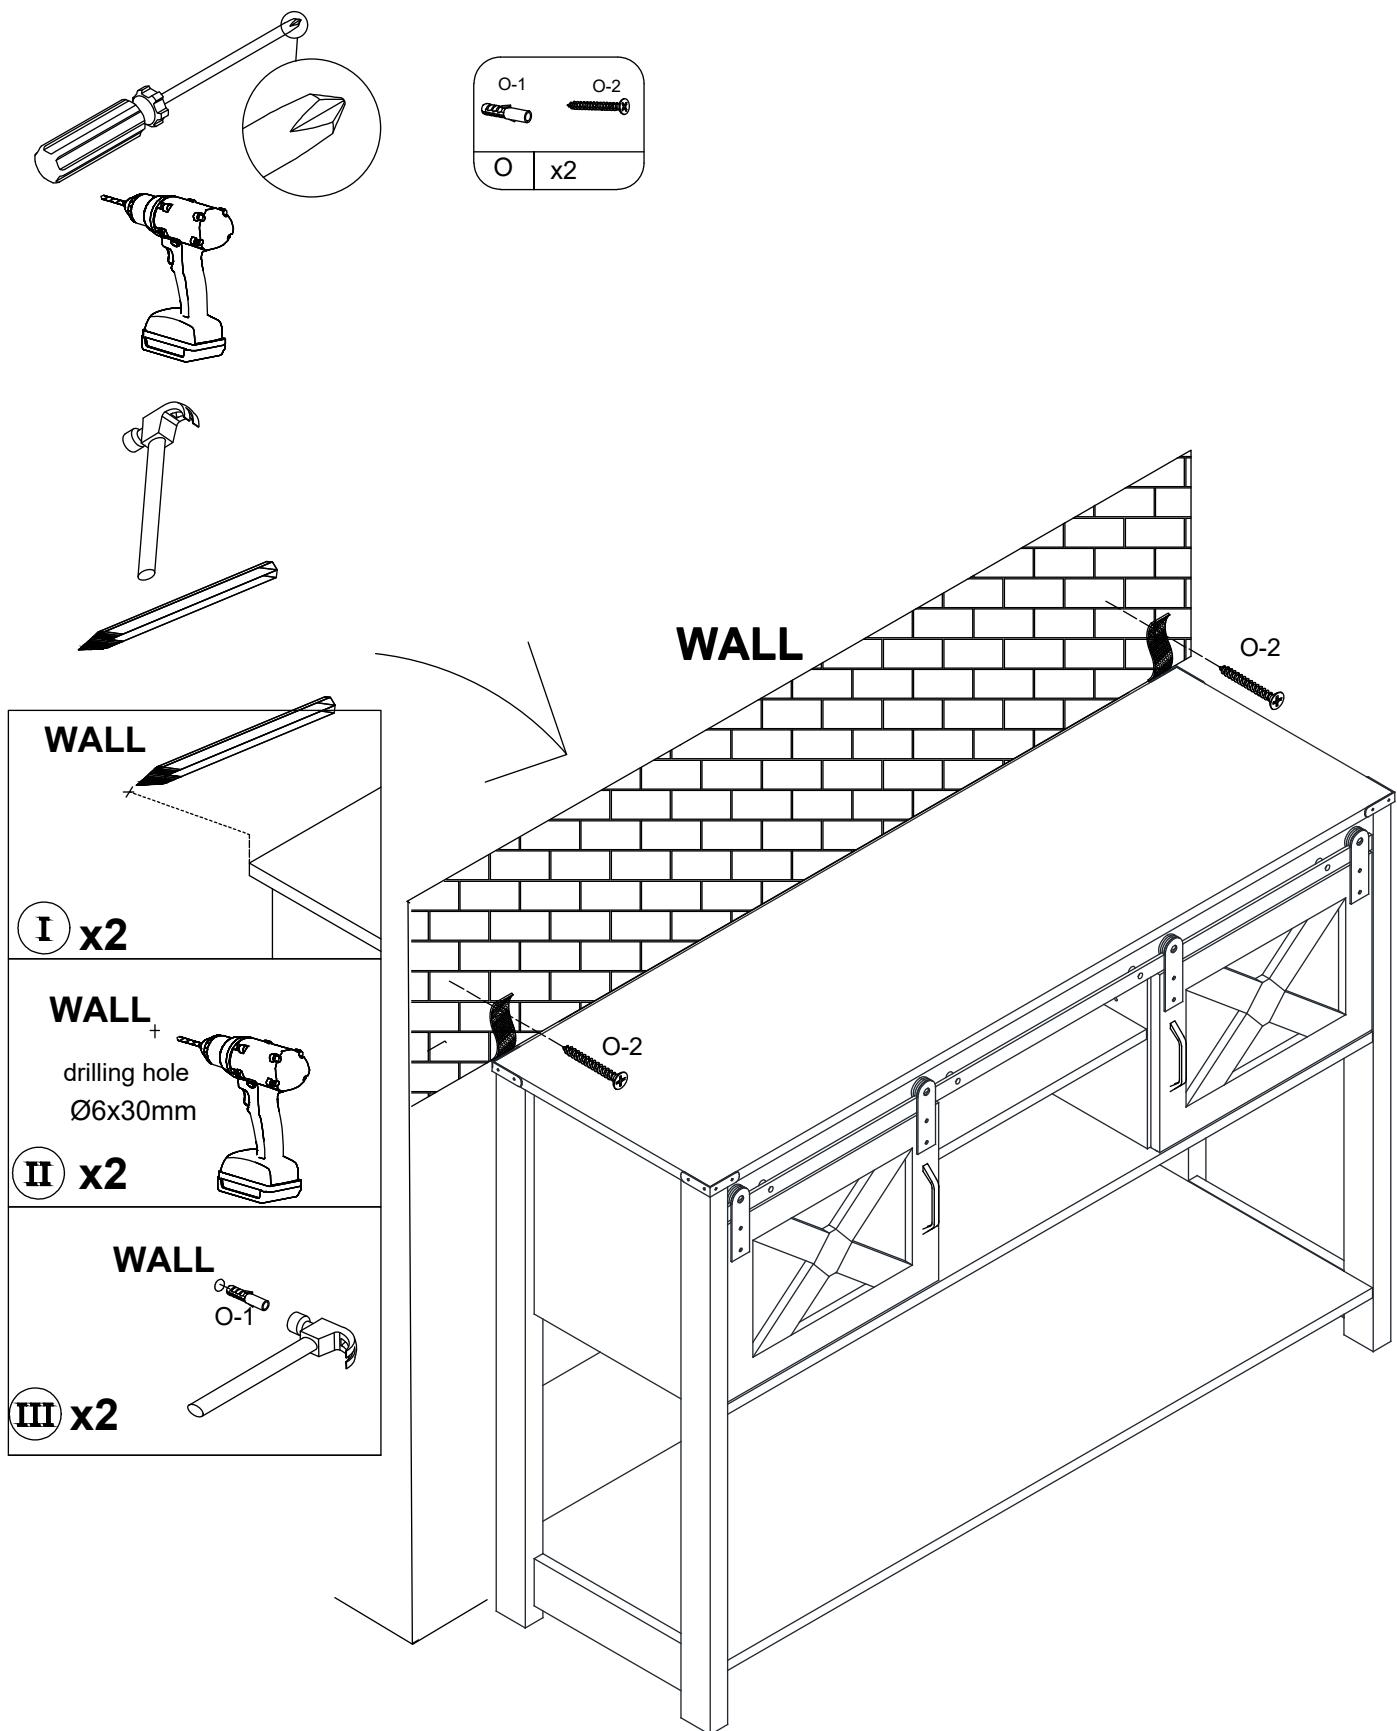

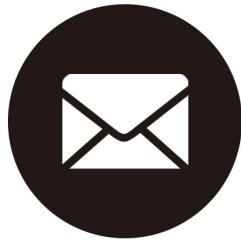

Contact Information

If you have any questions, concerns, or need assistance, please reach out to our customer support team using the contact information provided below:

Customer Support Email

support@royalcraft.store
