

#### ITEM NO.SBHM0888

#### NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

### **MAINTAINANCE AND WARNING**

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents, solvents, abrasives, spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills (Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6. Not for commercial use, only for residential use.




## **EXPLOSIVE VIEW**

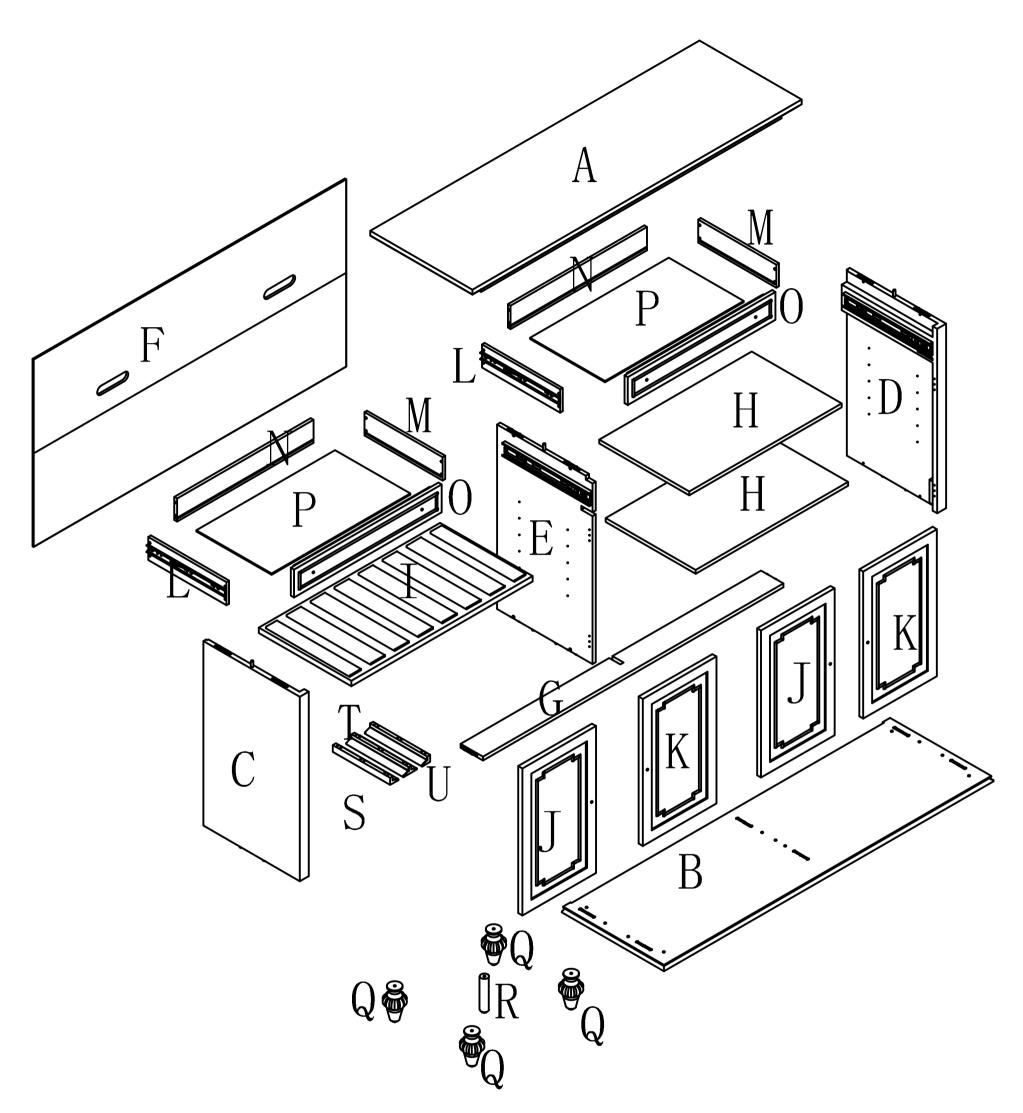






## **PARTS LIST**

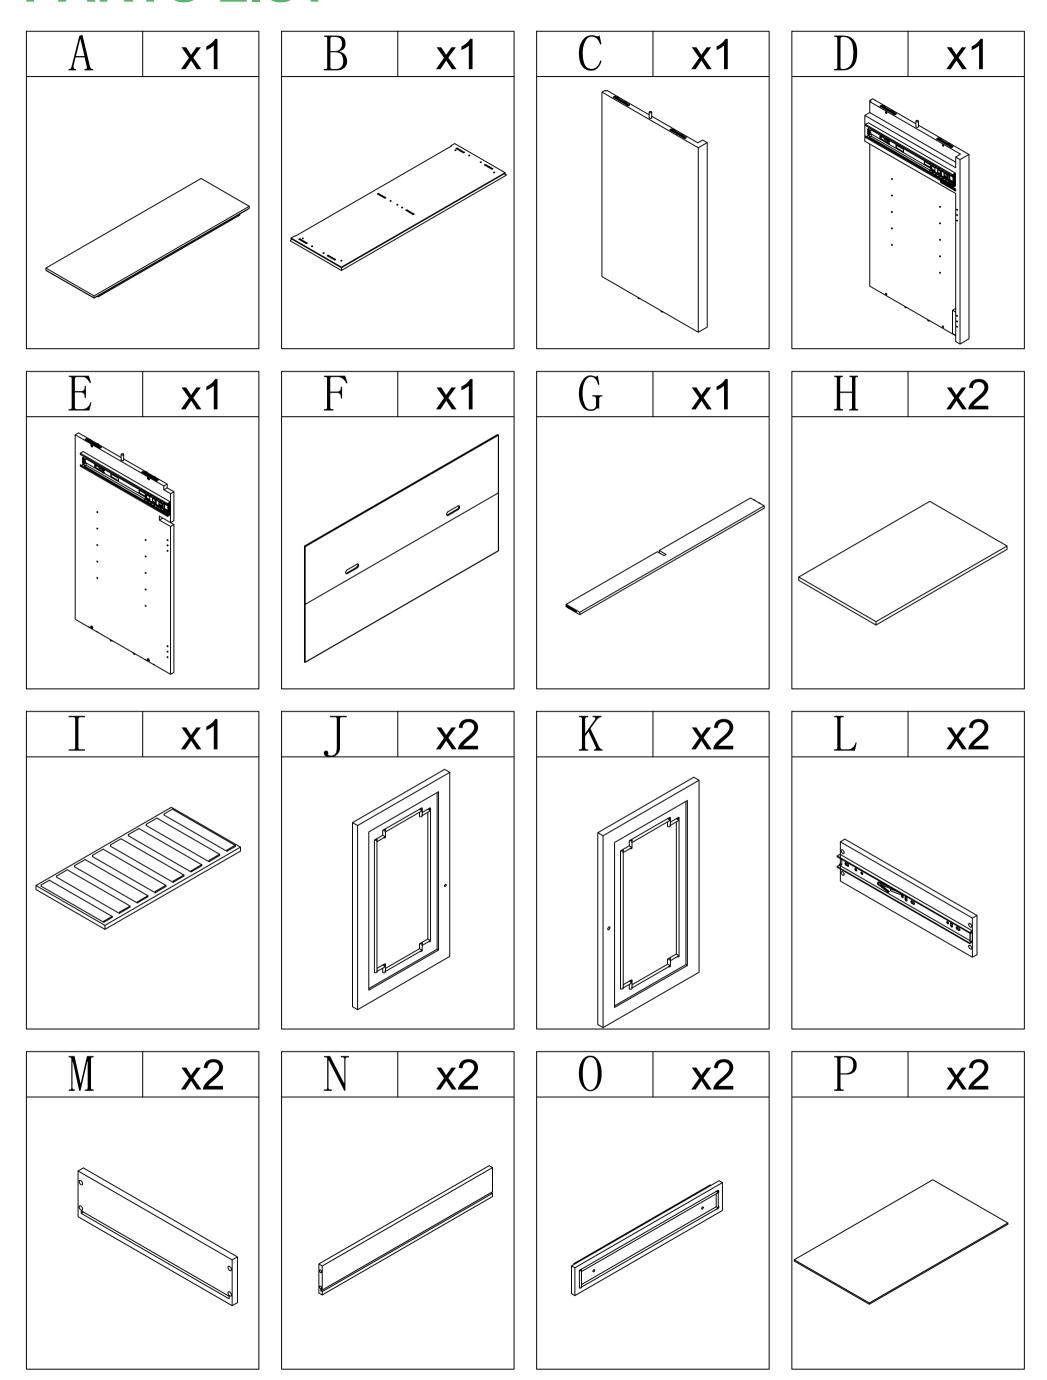



## **PARTS LIST**

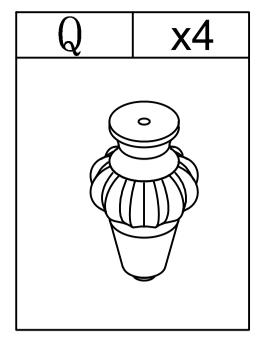

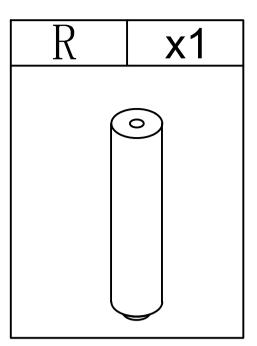


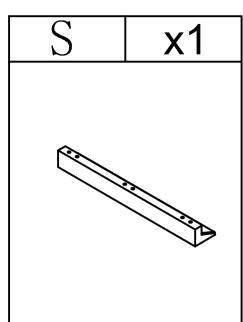

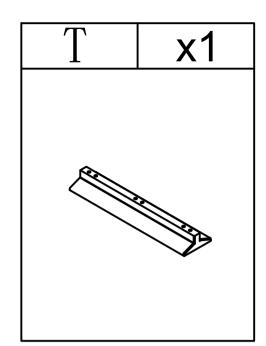


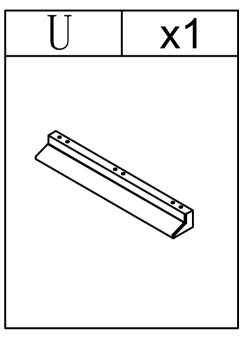

## **HARDWARE LIST**

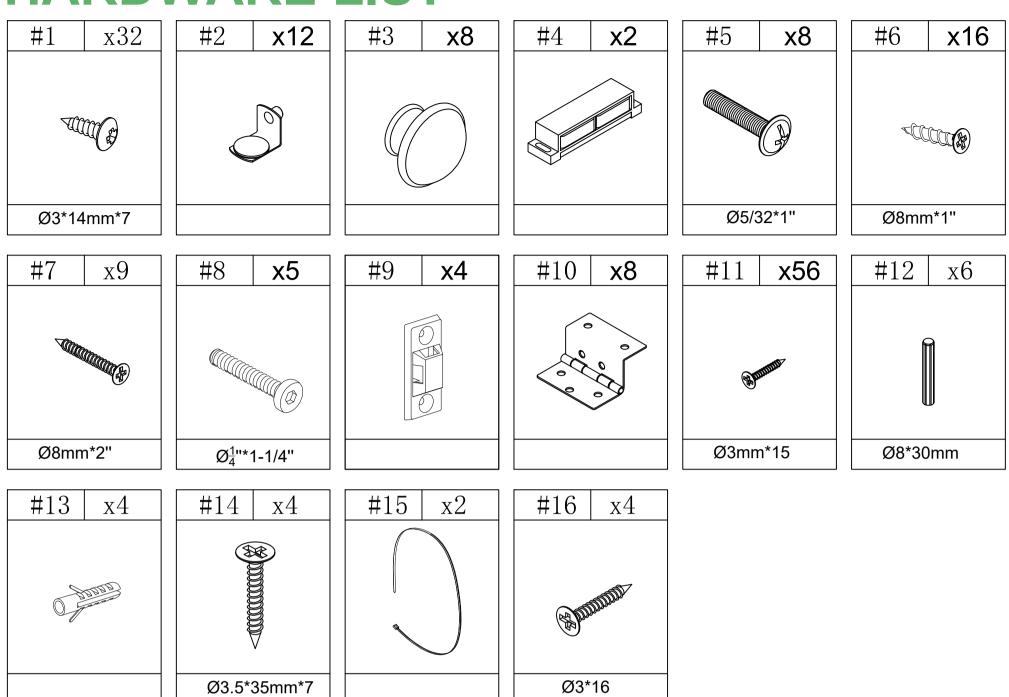

## **TOOL LIST**

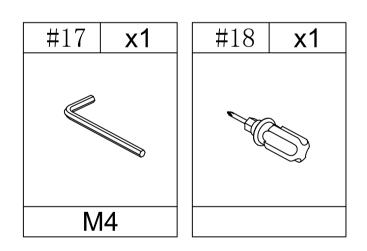


### **HARDWARE SPARE LIST**

#1	х3	#16	x1	#11	x5
AMA		ZCC		•	


# ASSEMBLY INSTRUCTIONS STEP-1

1.Use screw# 1 to attach magnetic catch #4 to the corresponding hole of panel(G), tighten screw with screwdriver #18.

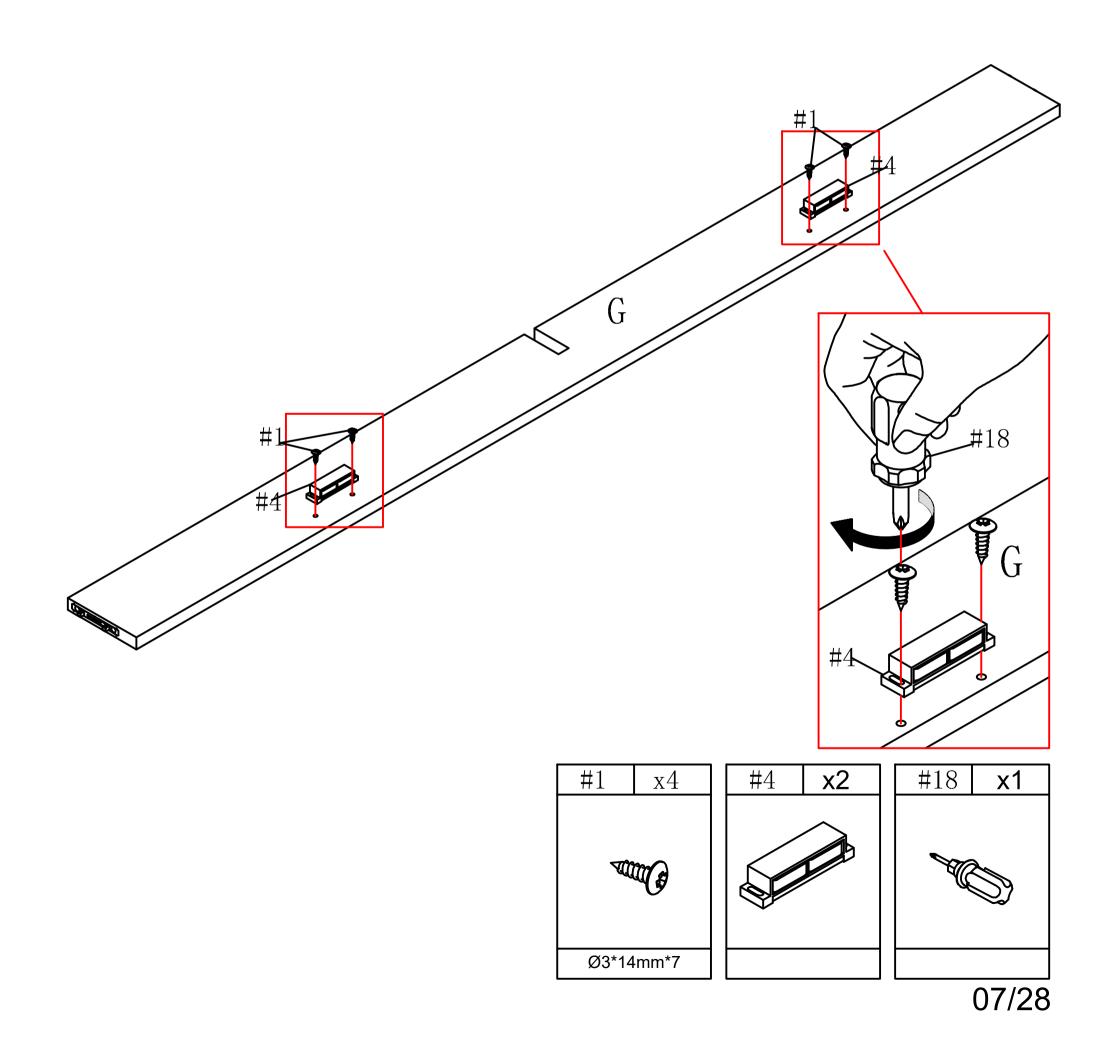


# **ASSEMBLY INSTRUCTIONS**STEP-2

1.Insert part (G) into part (E), as picture show.

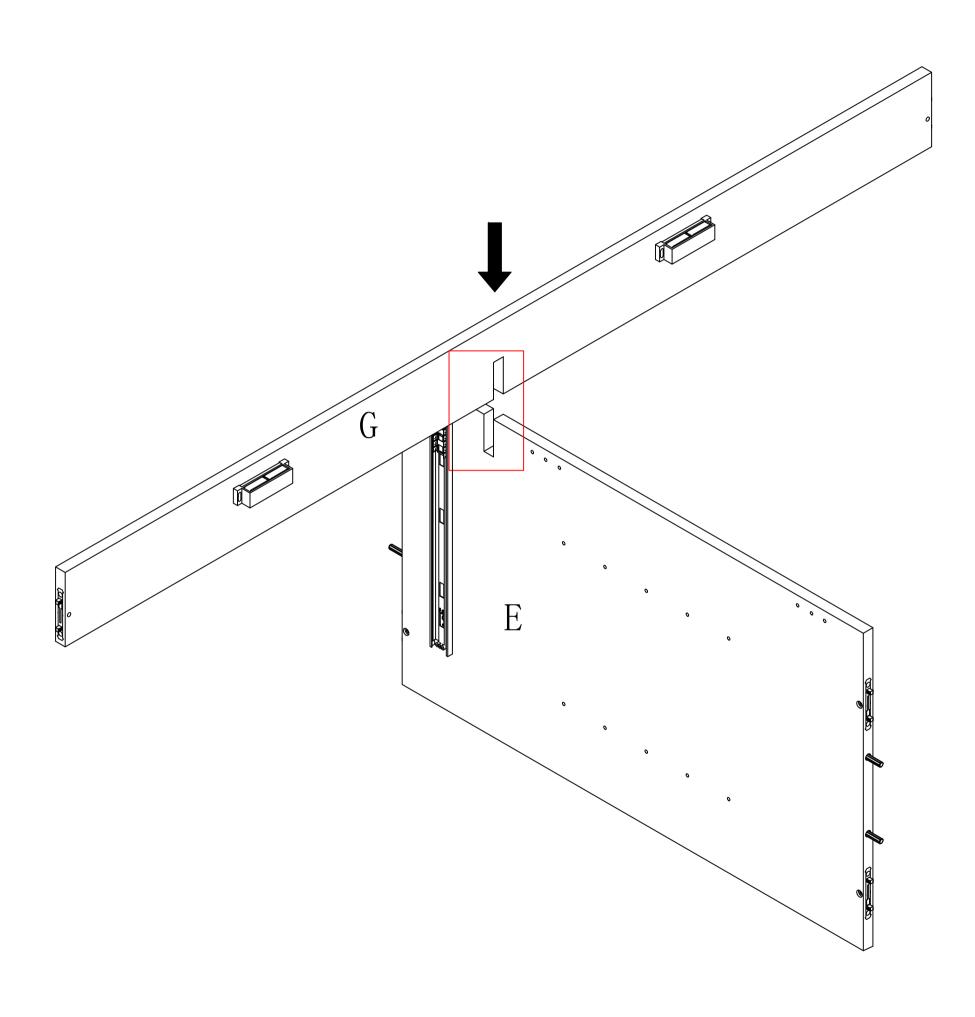


#### STEP-3


Use screw #8 to attach the legs (Q&R) to bottom panel B, tighten screws with Allen key #17.

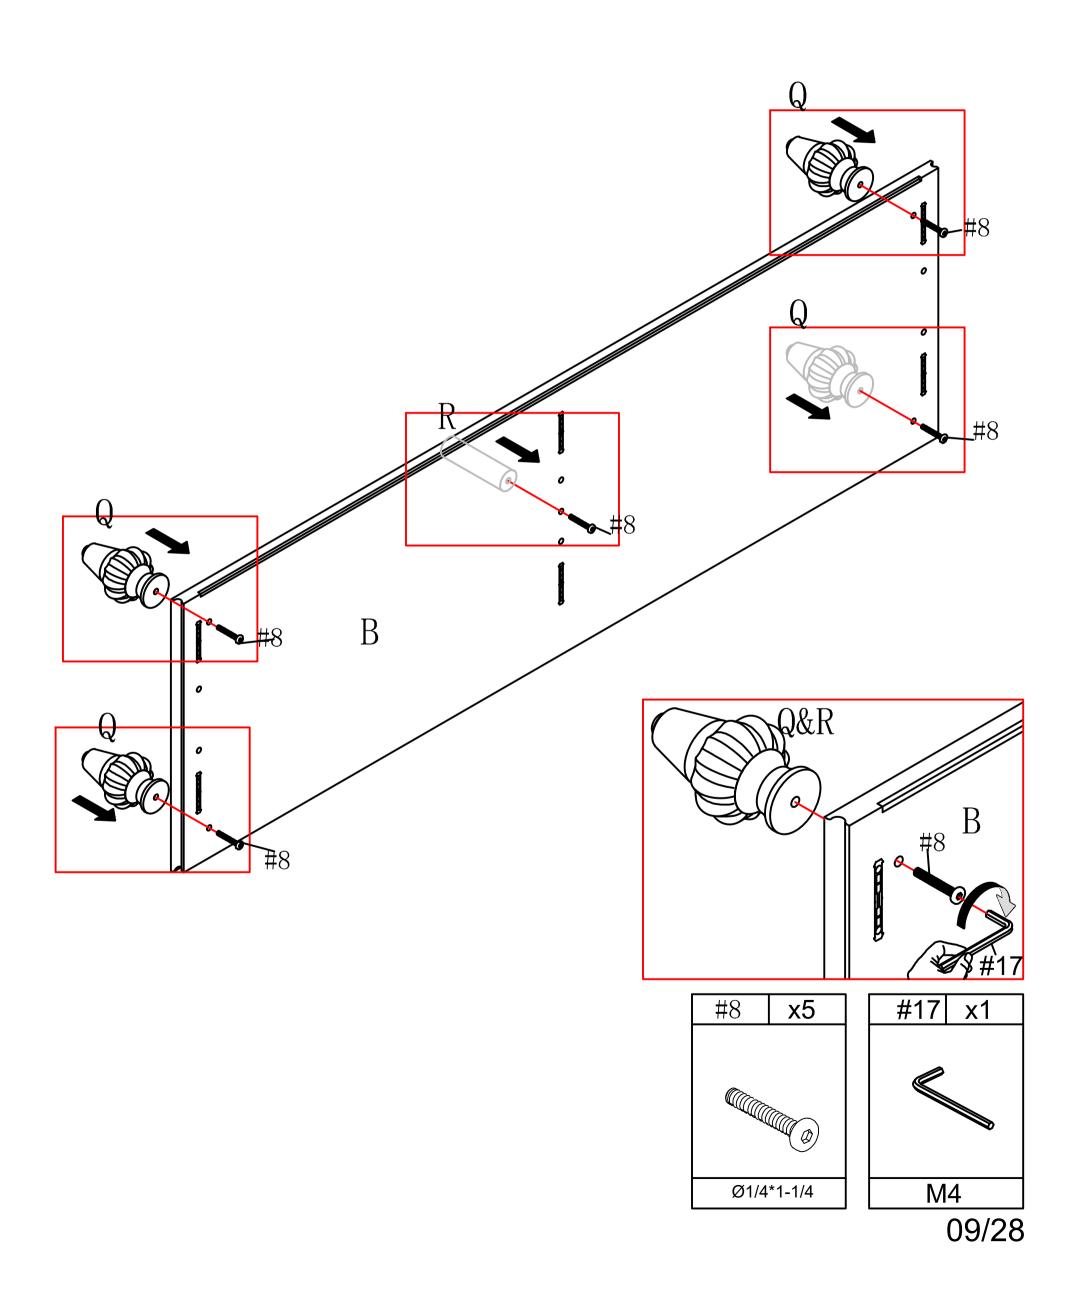

#### STEP-4


1.Insert side panel (C&D) into the corresponding hole of preassembled step 2, make sure all holes aligned and use allen key #17 to tighten it as picture show.

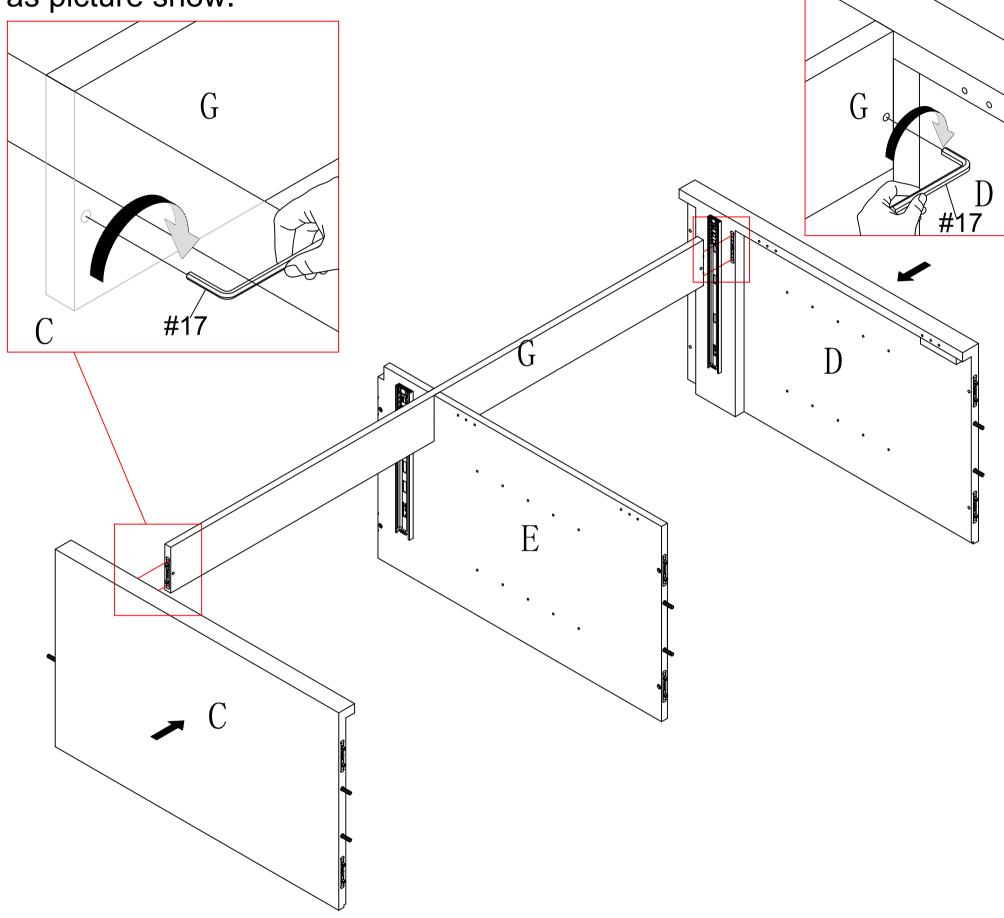


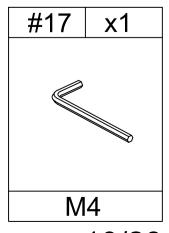

#### STEP-5


1.Insert bottom panel (B) into the corresponding hole of preassembled step 4, make sure all holes aligned and use allen key #9 to tighten it as picture show.

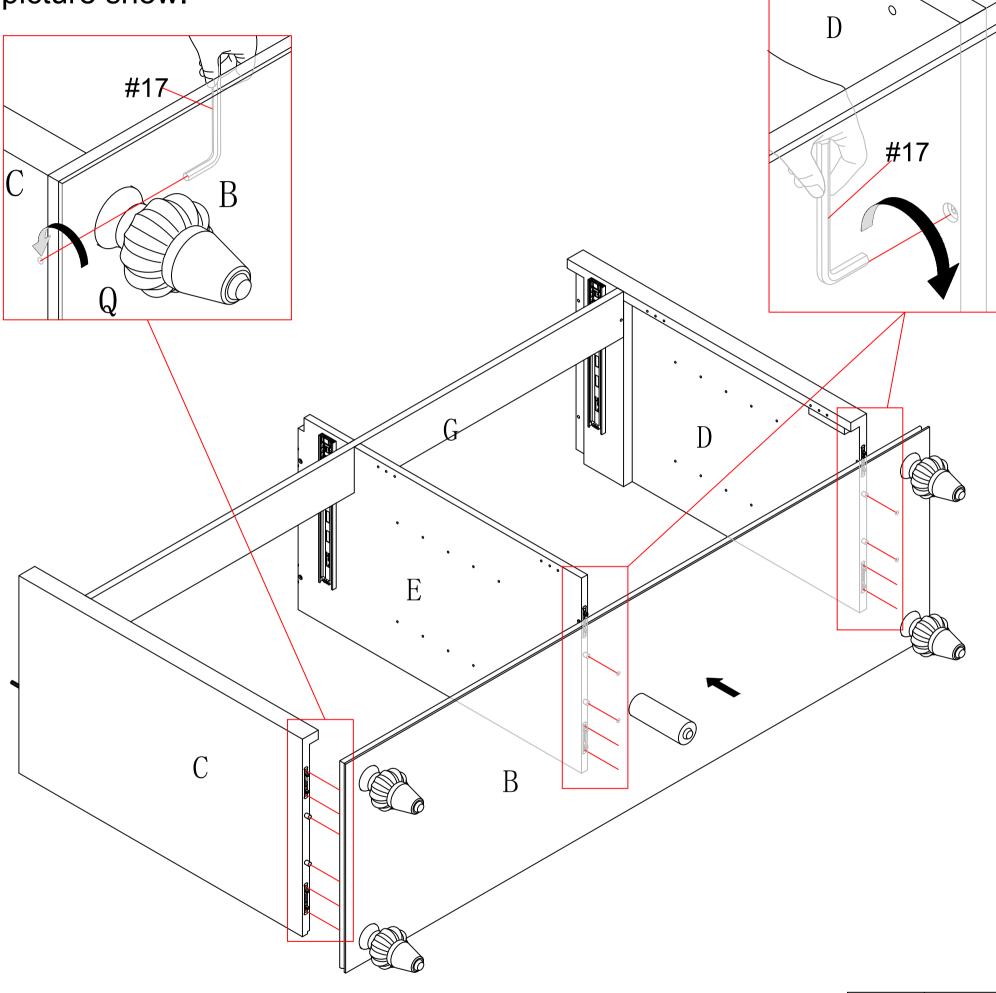

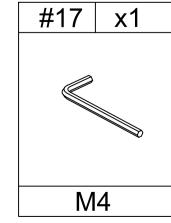


#### STEP-6


1.Insert top panel(A) into the corresponding hole of preassembled step 5.make sure all holes aligned and use allen key#17 to tighten it as picture show.

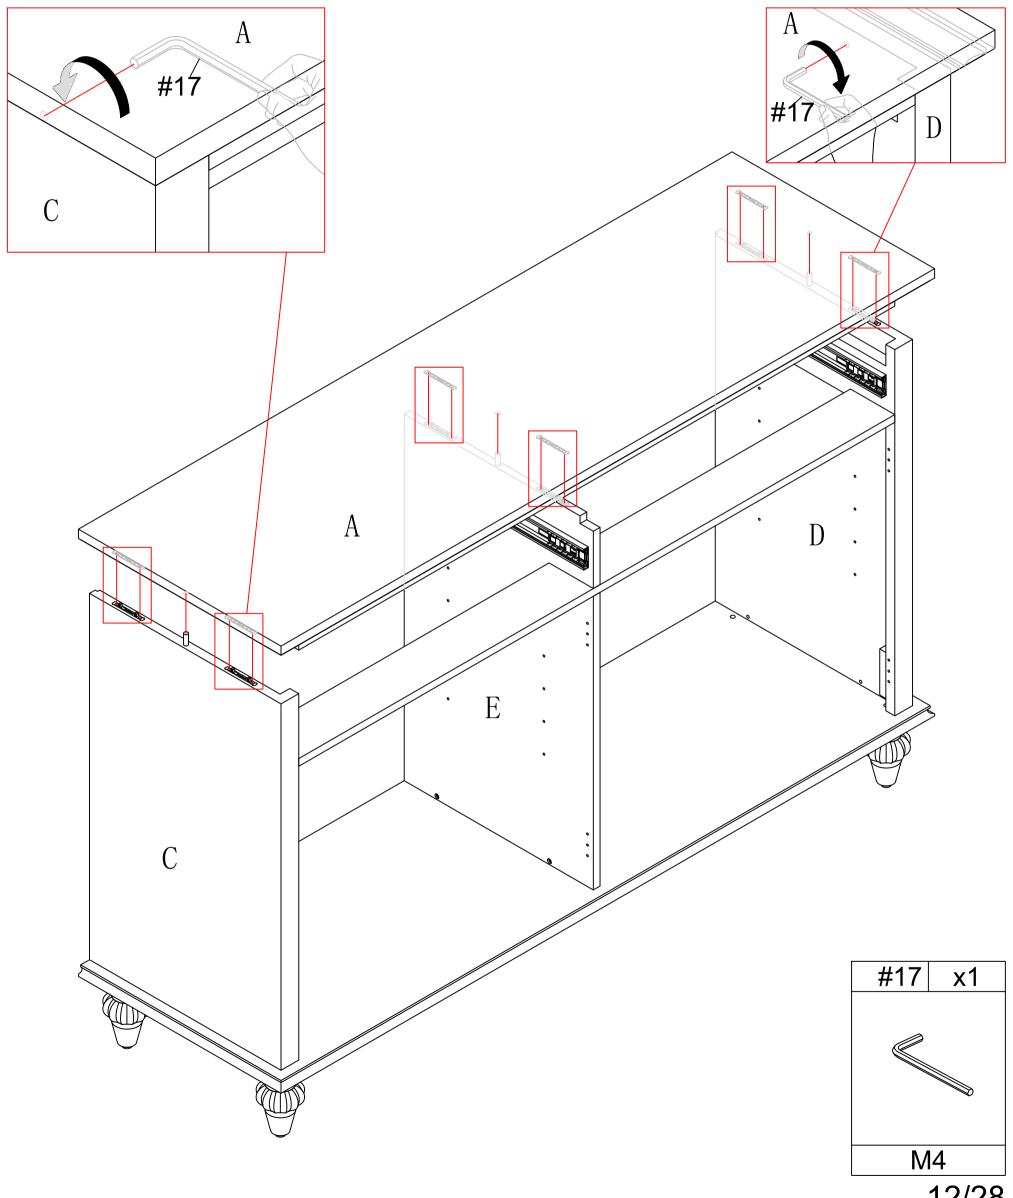

#### STEP-7


1.insert back panel(F) into the groove of preassembled step 6,make sure all holes aligned and use screw#1 to attach them, tighten screw #1 with screwdriver#18.

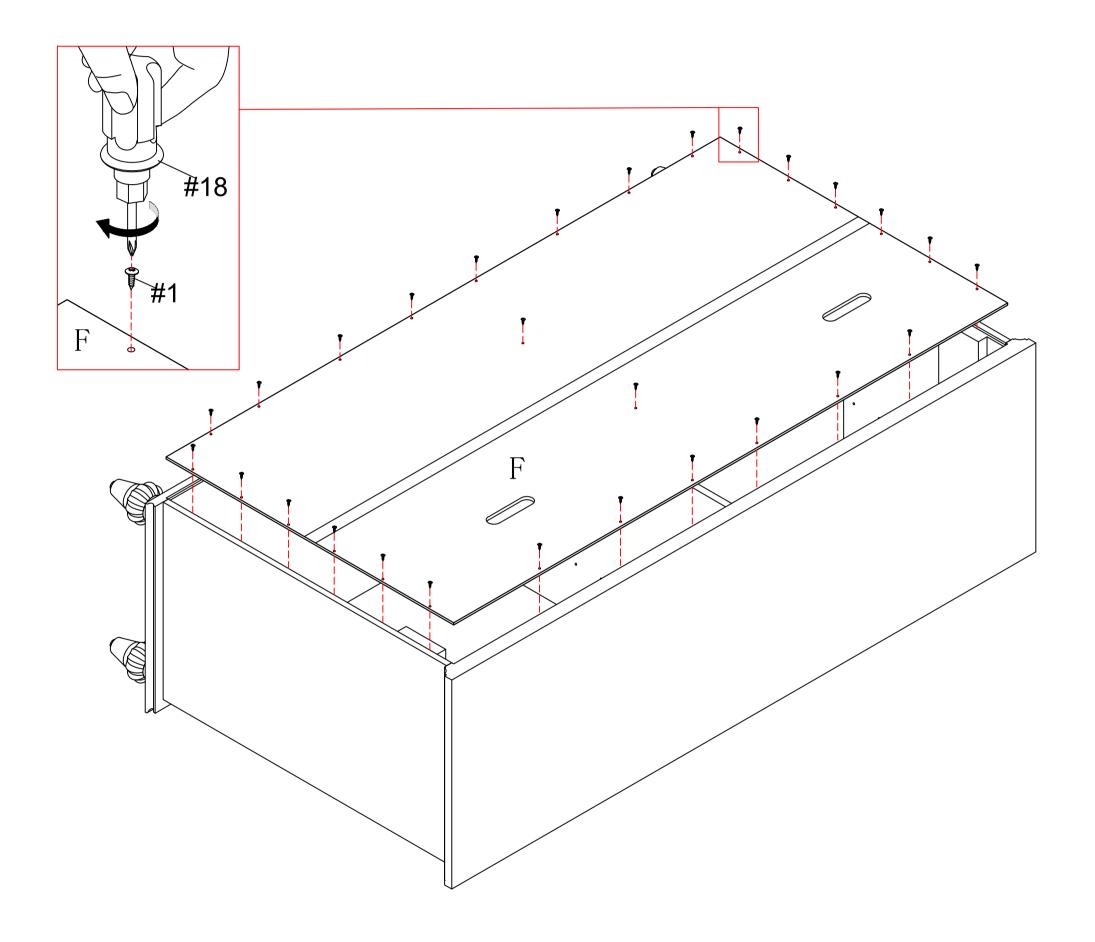

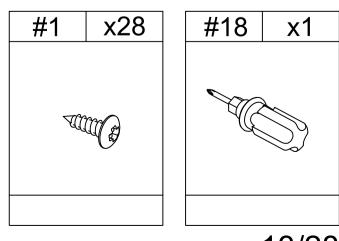


#### STEP-8

1.Connect part (M&L) to part N using screw #6 and tighten it with screwdriver #18.Slide in the part (P) into the groove in part (L&M). make sure they are also in groove in part (N).

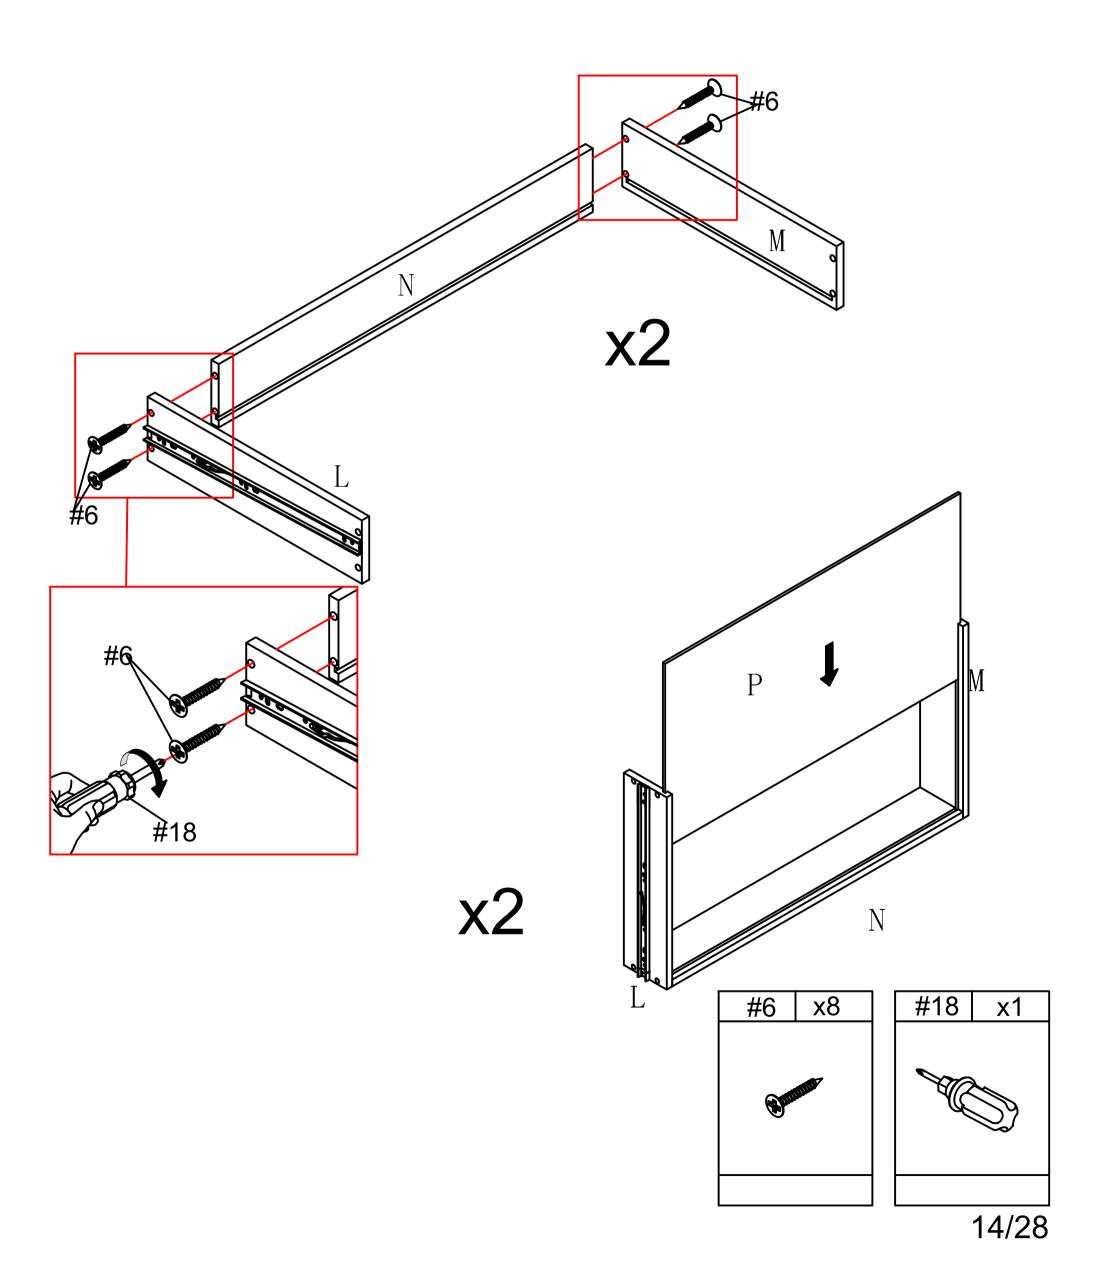


#### STEP-9

- 1.Connect part (M&L) to part O using screw #6 and tighten it with screwdriver #18.
- 2.Use screw# 5 to attach handle #3 to the corresponding hole of panel(O), tighten screw with screwdriver #18.

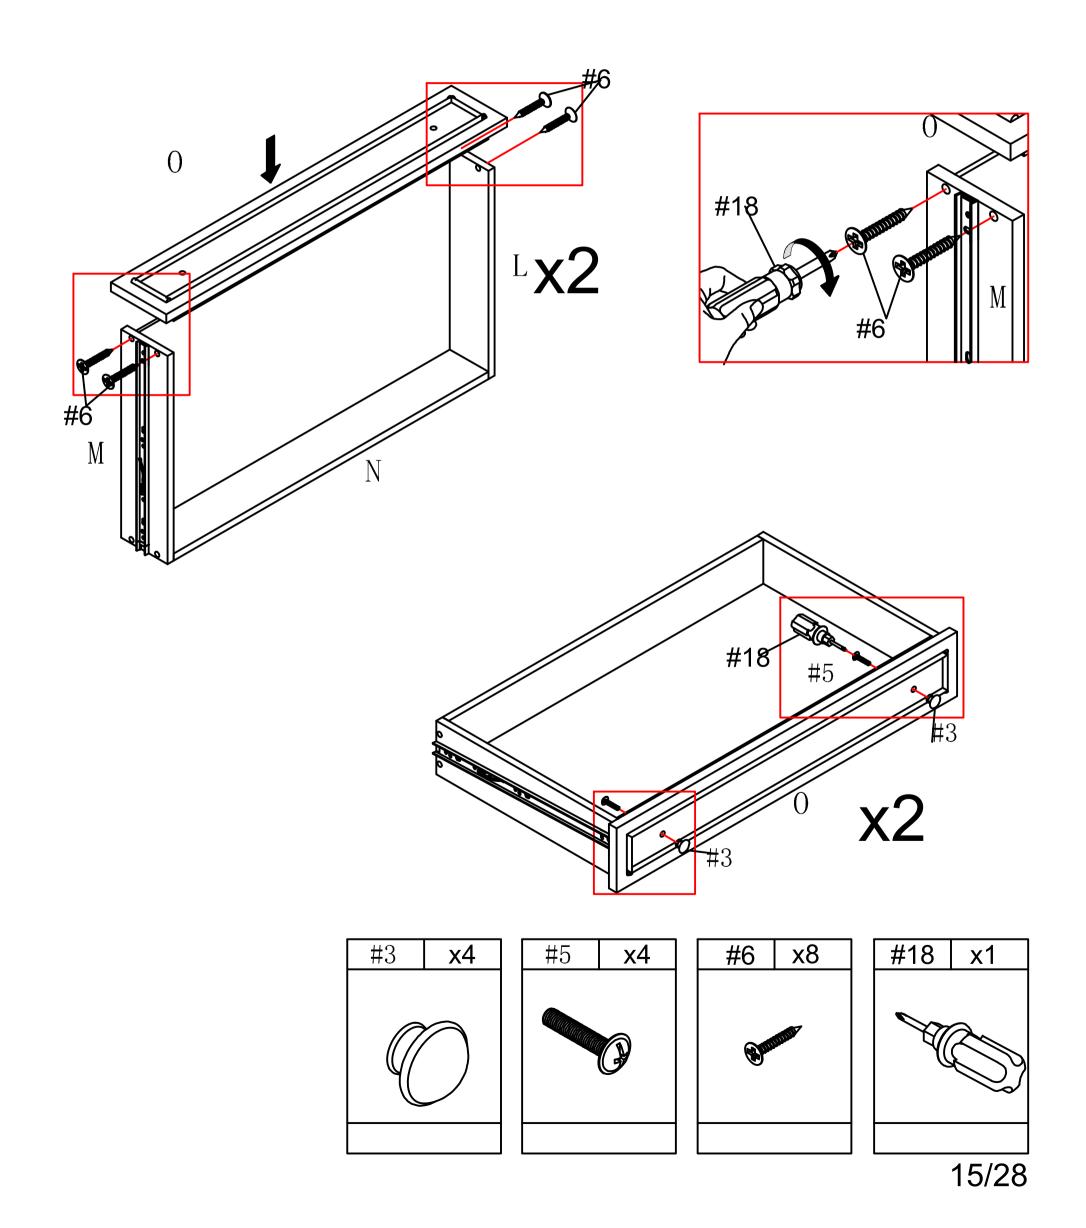


# ASSEMBLY INSTRUCTIONS STEP-10

1. Place the drawer to the rail.

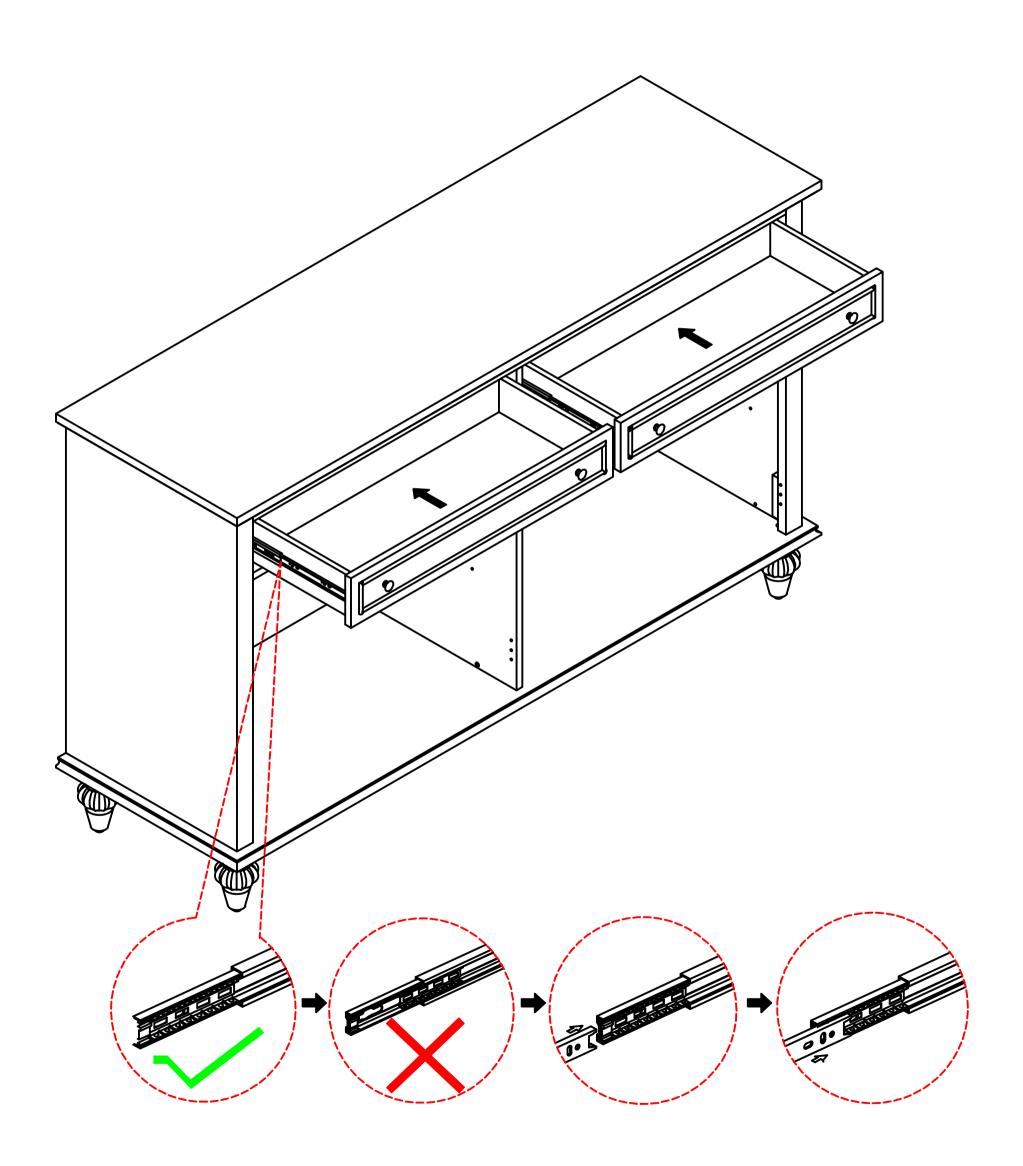


#### STEP-11


1.Use screw #7 to attach wine glass holder (S&T&U) to the corresponding hole of panel(I), tighten screw with screwdriver #18.

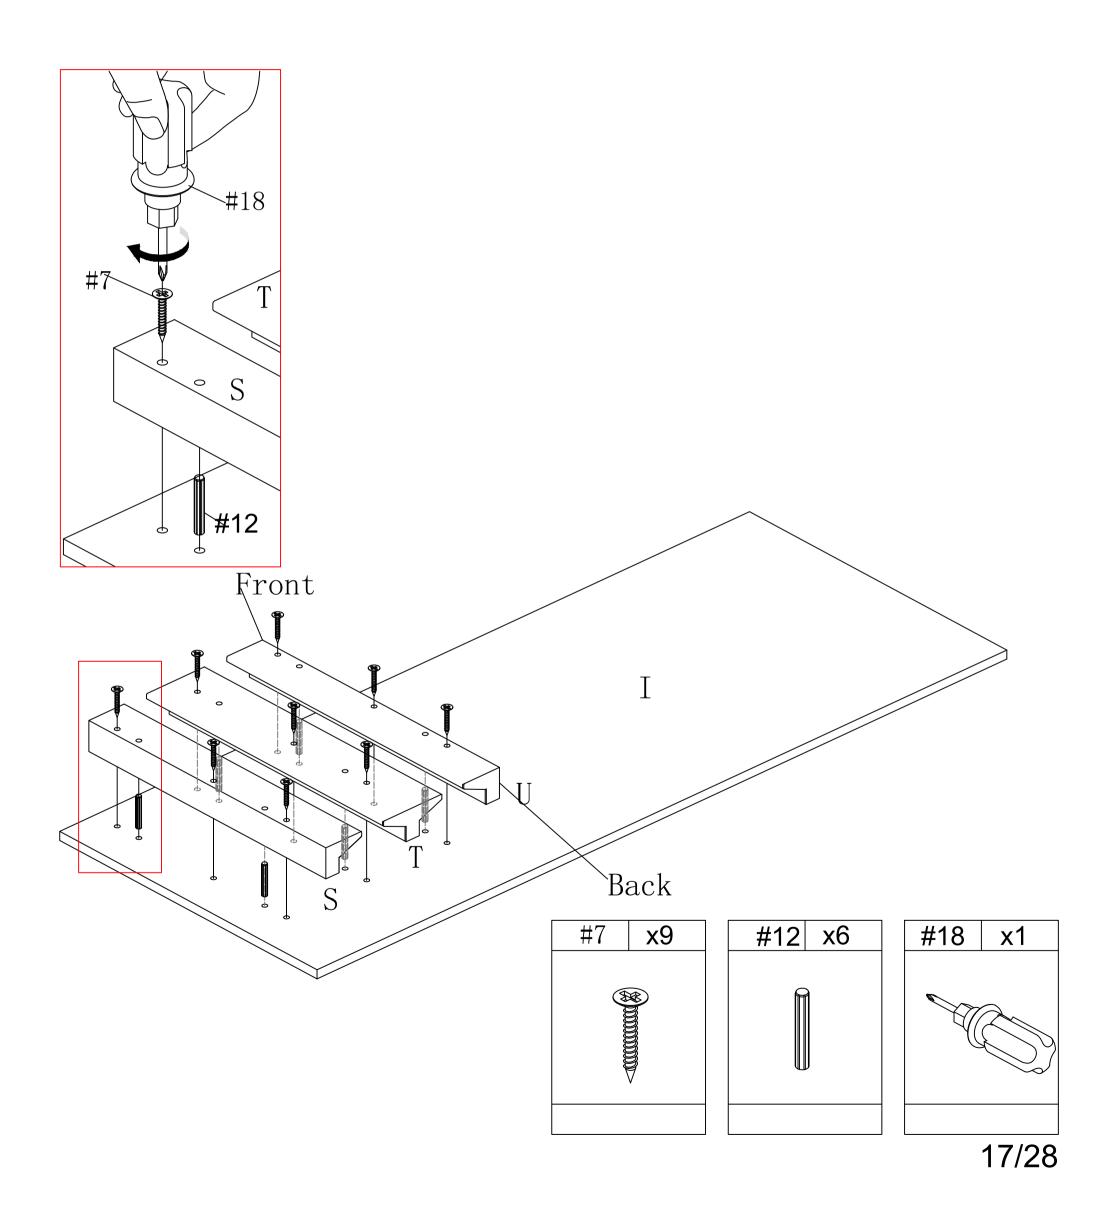

#### **STEP-12**


1.Insert shelf holder #2 into the corresponding hole of panel (C)&(D)&(E) and then attach panel (H&I) to it.

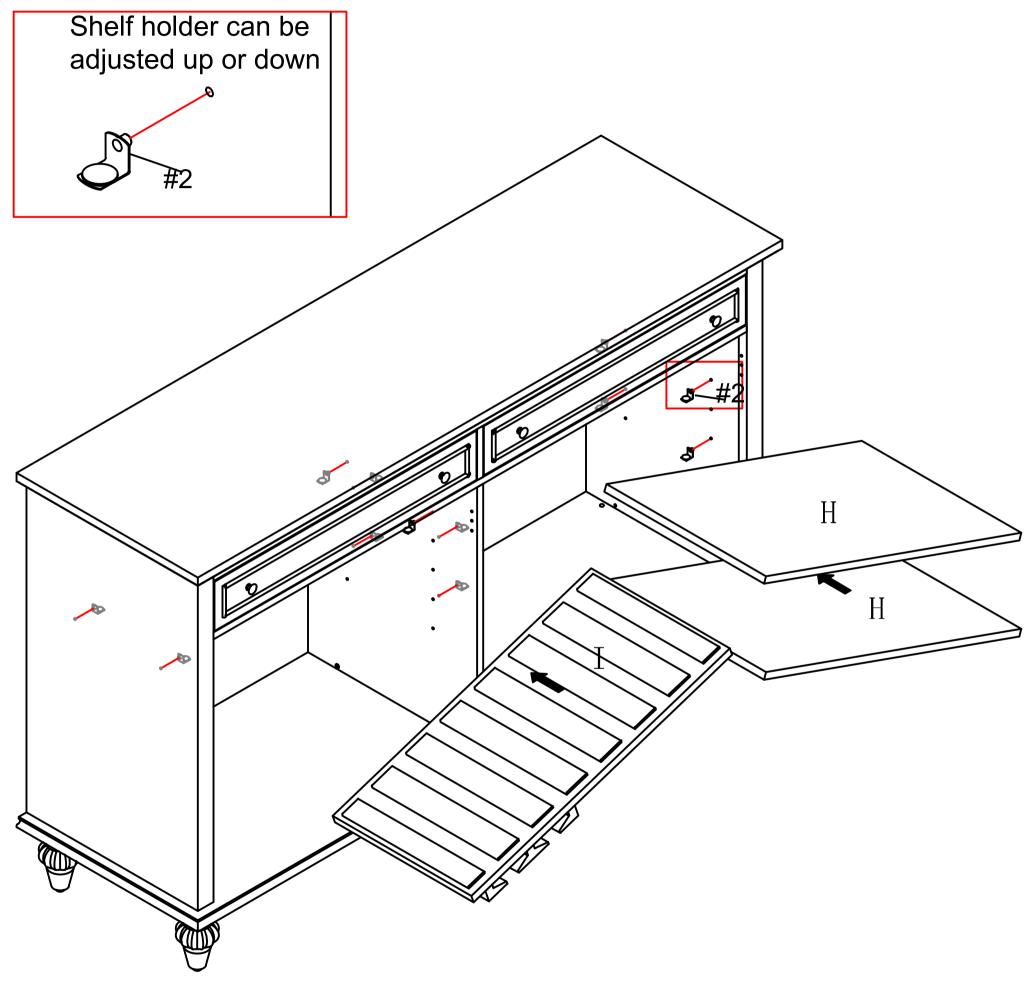

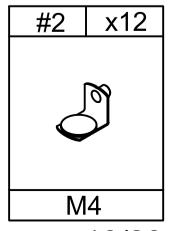


#### STEP-13

1.Use screw #11 to attach hinge #10 to the corresponding hole of panel(J&K), tighten screw with screwdriver #18.

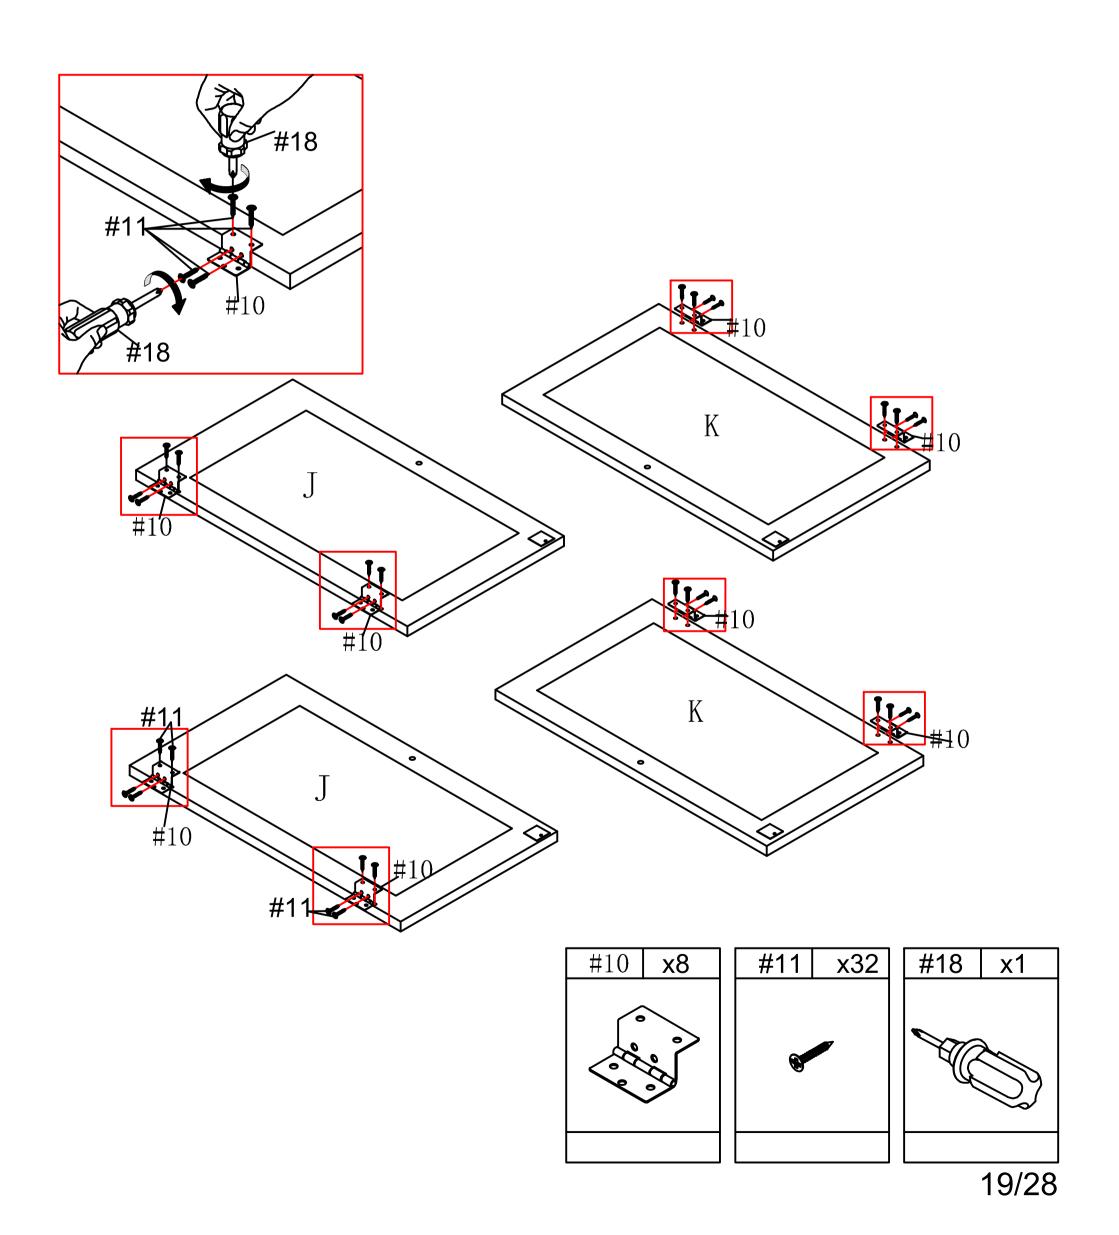


#### **STEP-14**

1.Move door (K) to corresponding position of side panel (E)&(D), make sure all holes aligned and use screw #11 to attach them, tighten screw#11 with screwdriver#18.

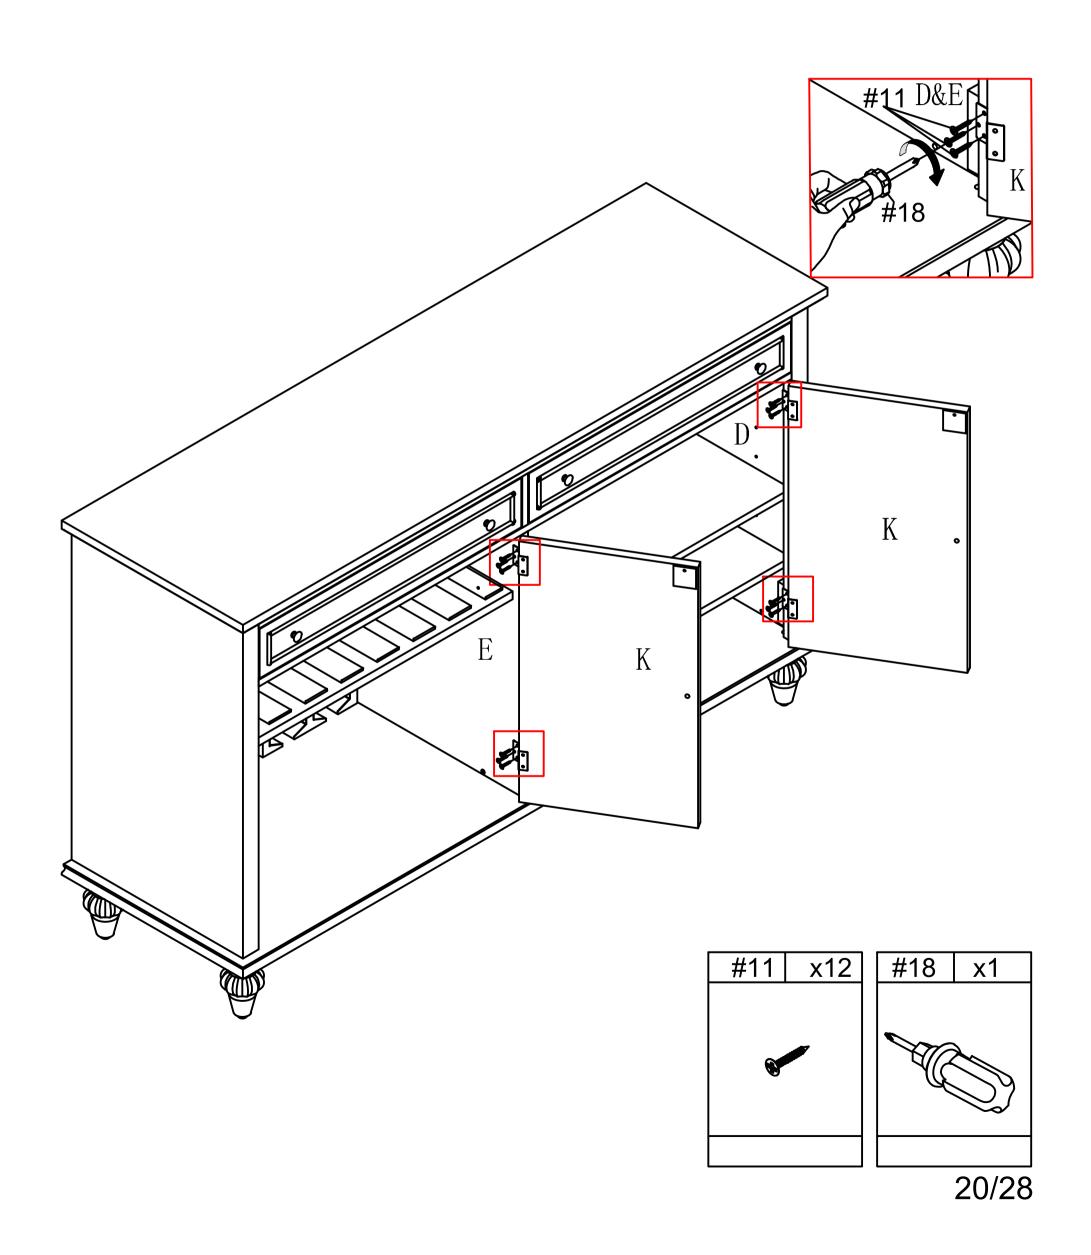


#### **STEP-15**

1.Move door (J) to corresponding position of side panel (E)&(C), make sure all holes aligned and use screw #11 to attach them, tighten screw#11 with screwdriver#18.

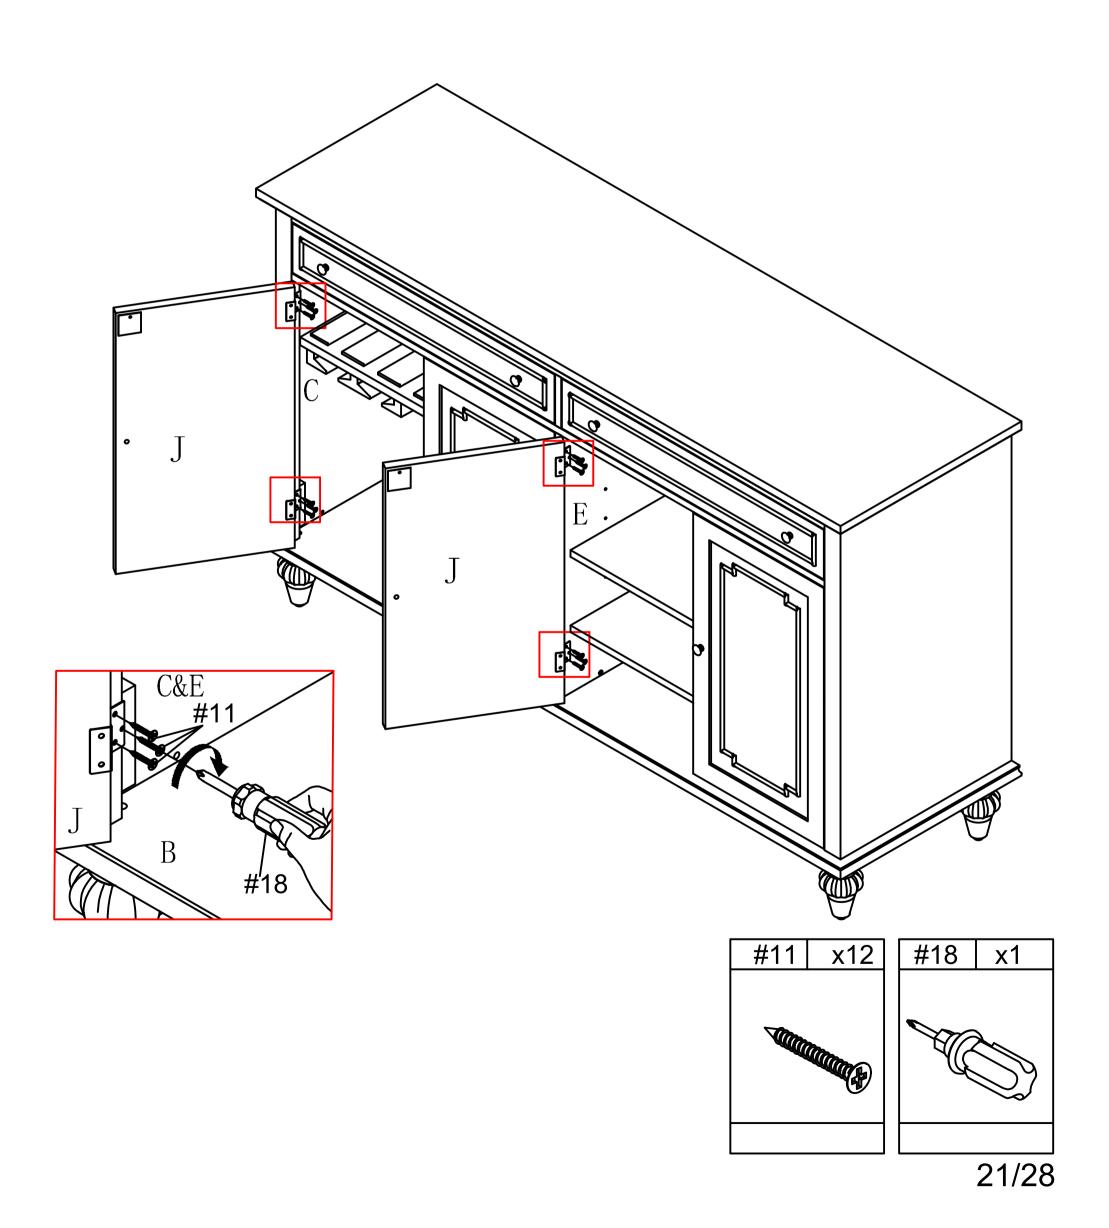


#### STEP-16

1.Use screw# 5 to attach handle #3 to the corresponding hole of panel(K), tighten screw with screwdriver #18.

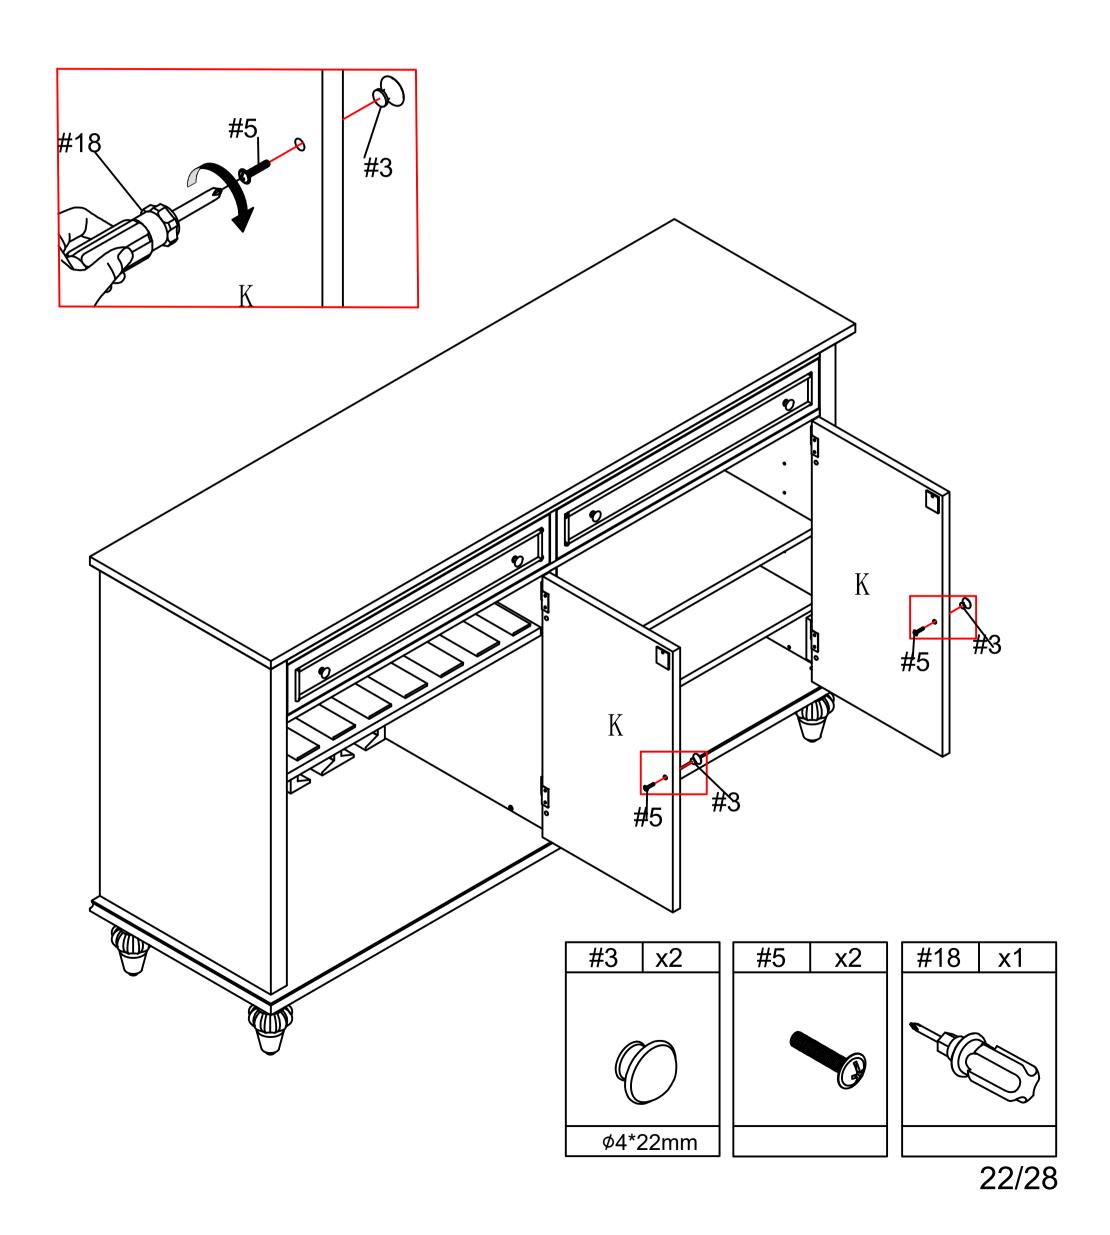



#### STEP-17


1.Use screw# 5 to attach handle #3 to the corresponding hole of panel(J), tighten screw with screwdriver #18.

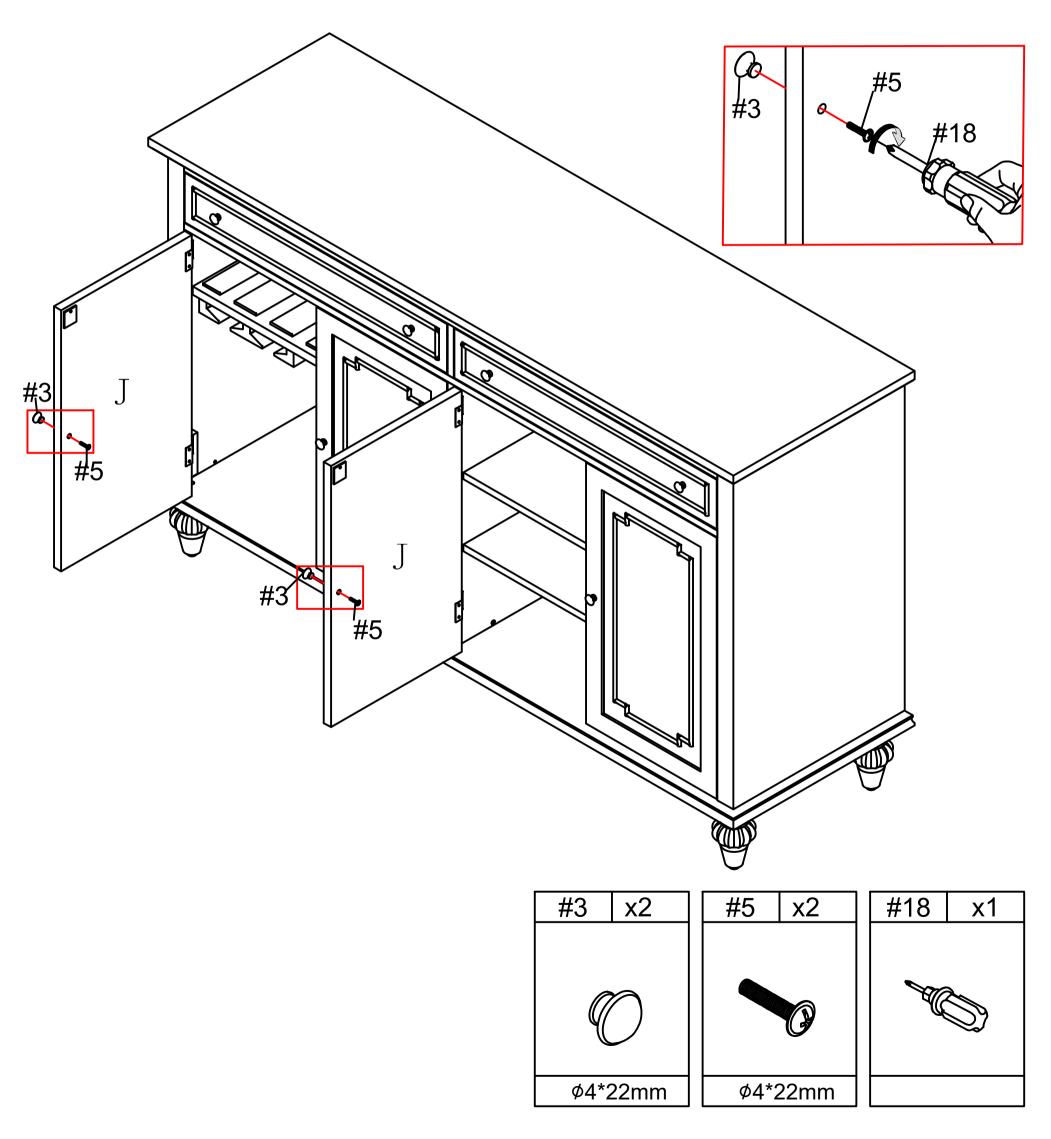

# ASSEMBLY INSTRUCTIONS STEP-18

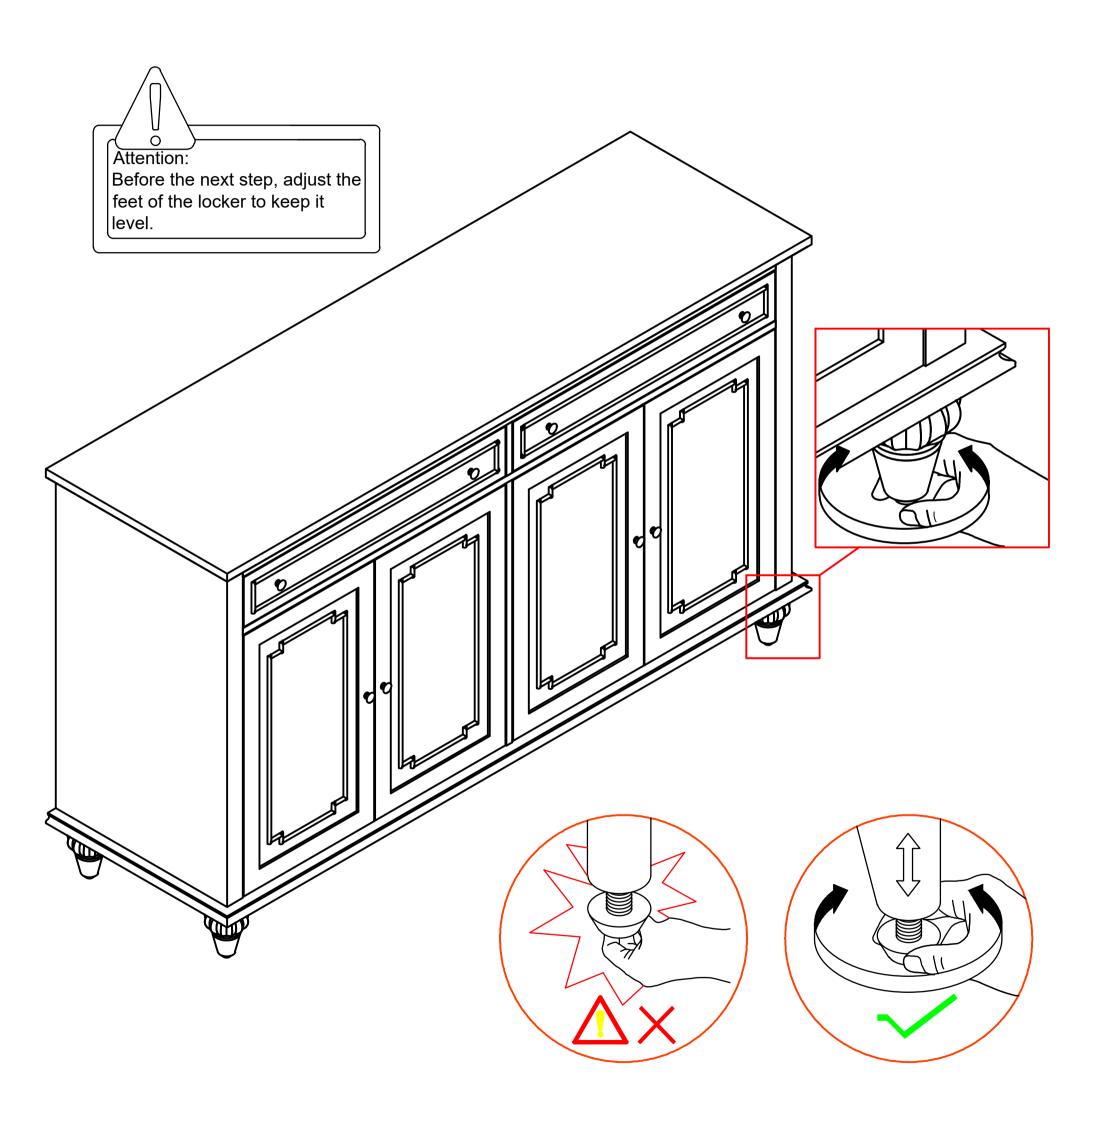


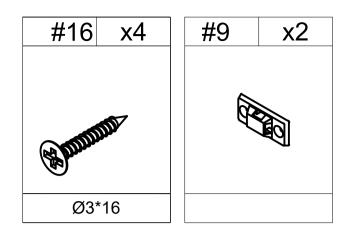


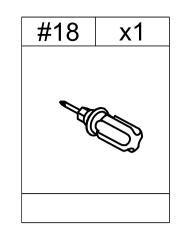


#### **STEP-19**

1.Use screw #16 to attach part #9 to preassemble unit at step 15

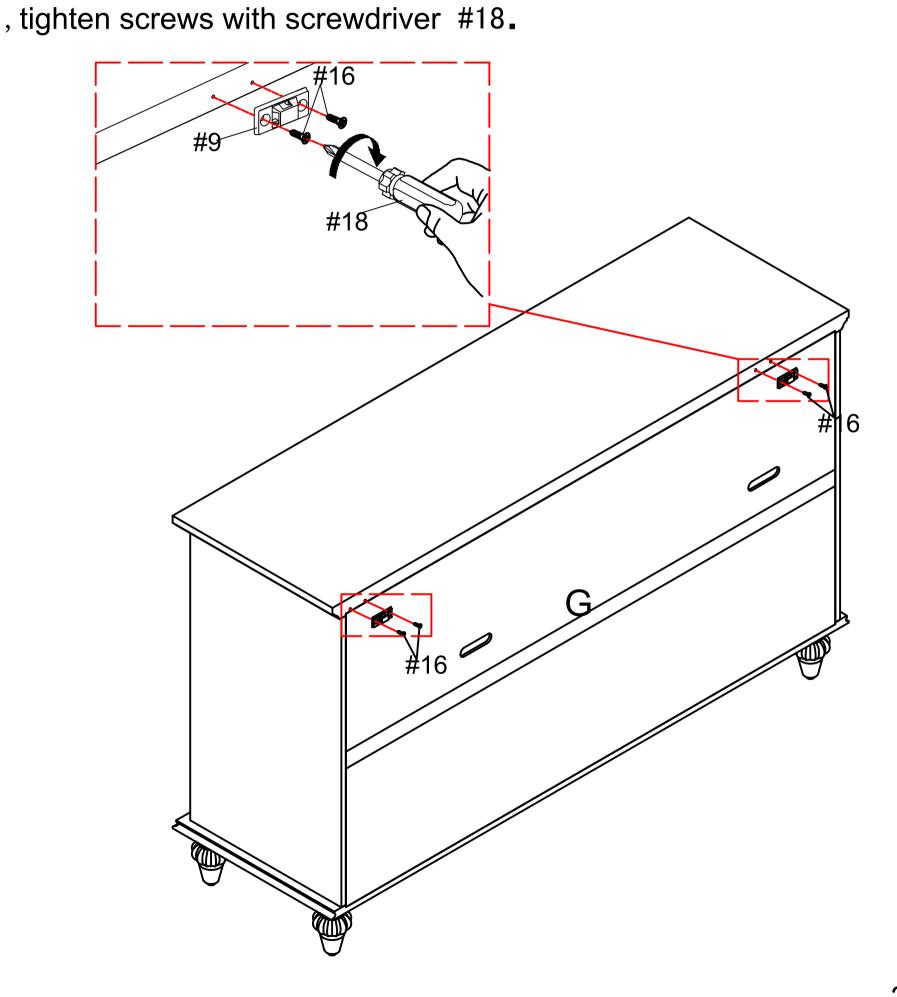


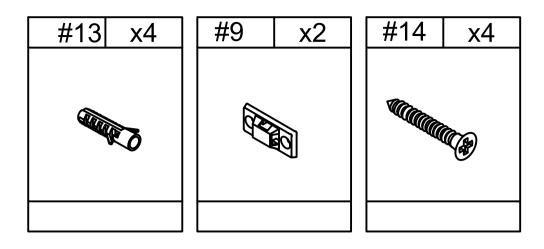


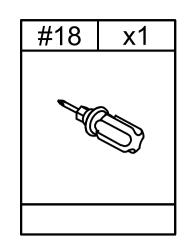

#### STEP-28


- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part#9 on the of panel (A); Drill and insert the expandable screw #13 by hammer.
- 3. Assemble the part #9 to the wall. Align the hole in the part #9 with the expandable screw #13, use screw #14 to attach it and tighten by screwdriver#18.

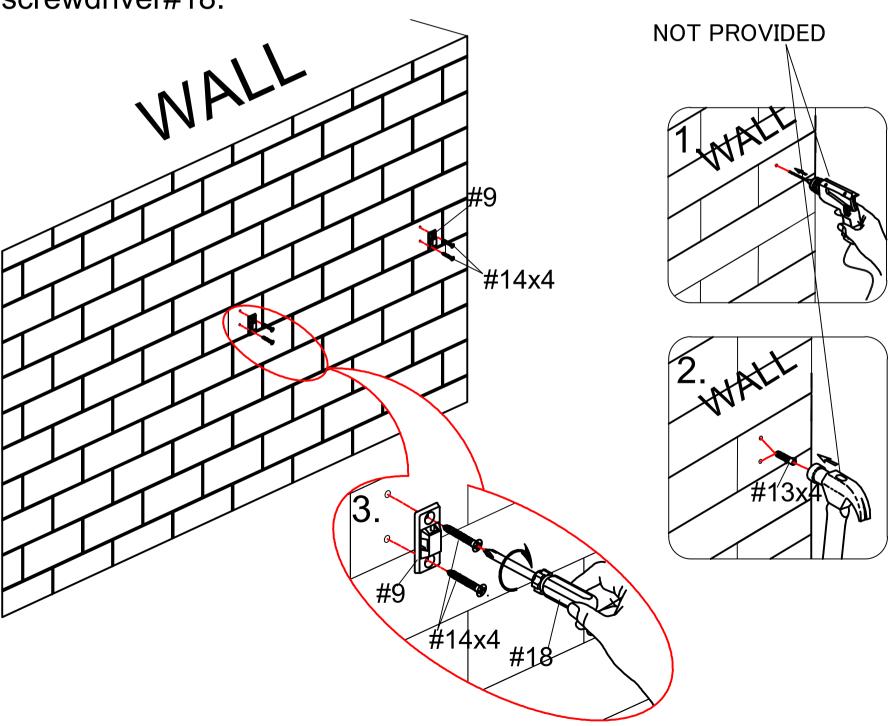

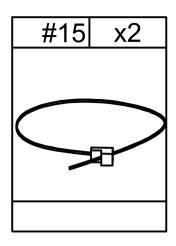

#### **STEP-21**

1.Let the plastic belt #15 pass through the both part #9 and pull tightly.

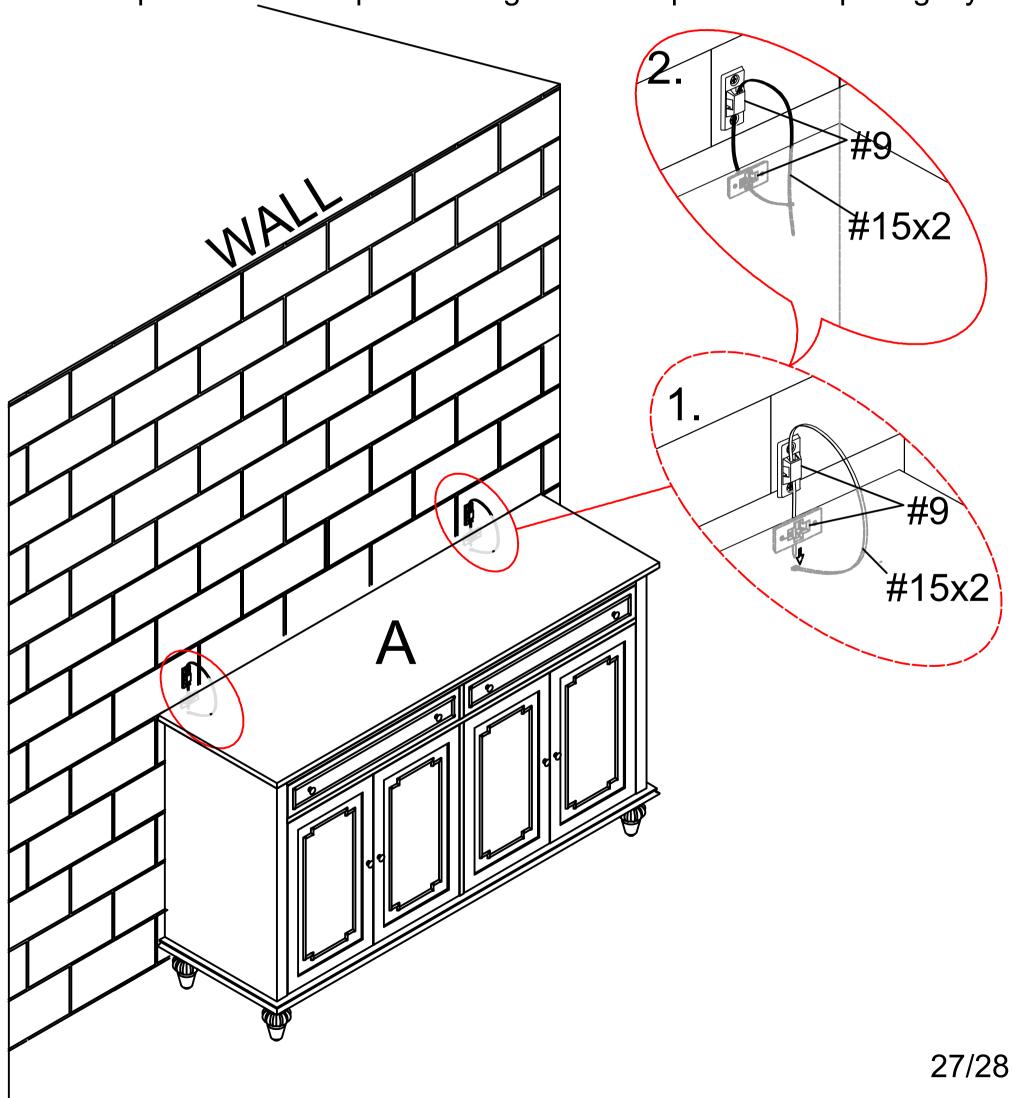

## WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly? Missing parts? Please send email with your order No to

#### customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!