



SUBRTEX HOUSEWARE INC
9935 BEVERLY BLVD UNIT 3 PICO RIVERACA 90660
CUSTOMERSERVICE@SUBRTEX.COM

www.subrtex.com


SUBRTEX[®]

Bring the best life to your home




PARTS LIST


Ax1

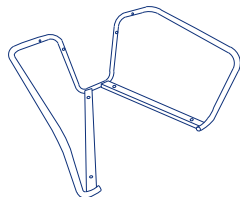


Bx2




Cx2

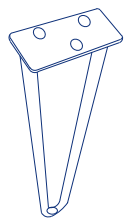

Dx1

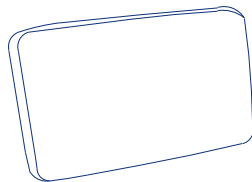


Ex1

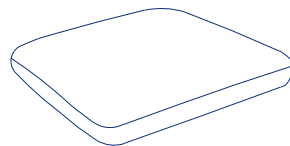


HARDWARE LIST

①x12




M6*20

②x4




M6*30

③x4




M6*30


④x16



⑤x1




STEP1

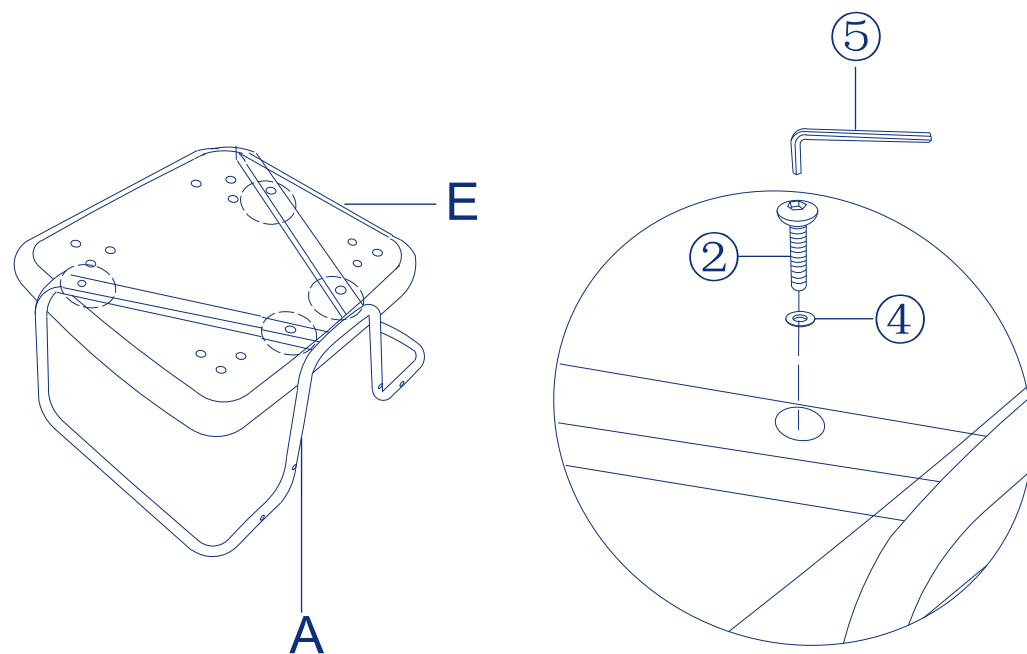


Leave bolts 80% tightened,
tighten after all alignment.

STEP2

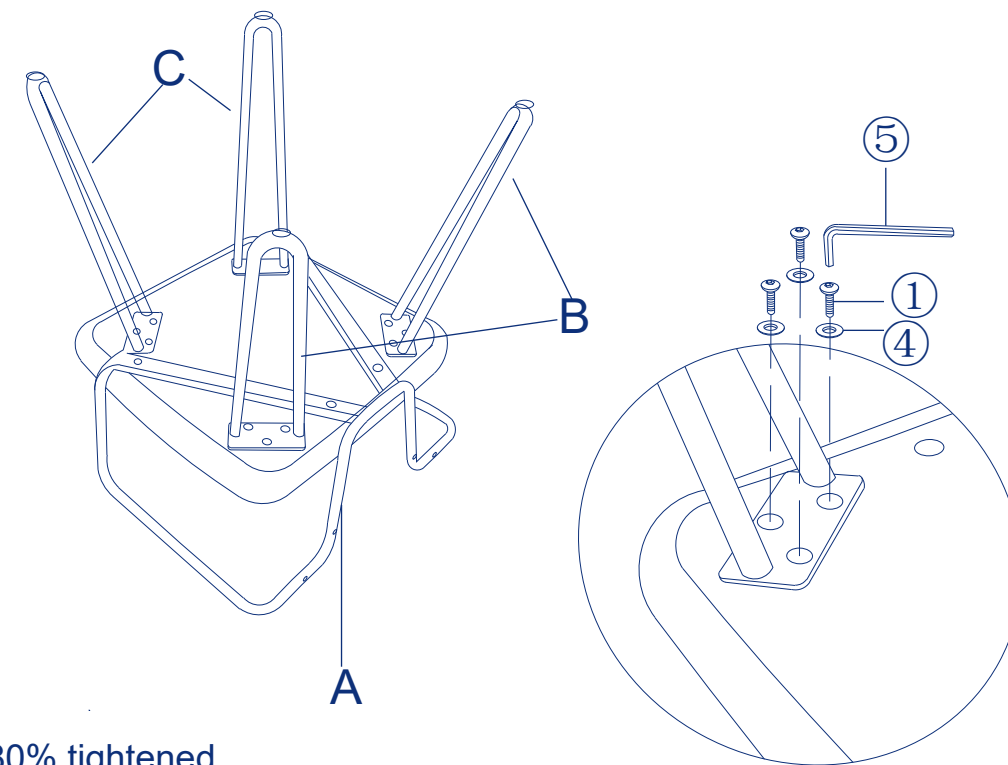


Leave bolts 80% tightened,
tighten after all alignment.

STEP3

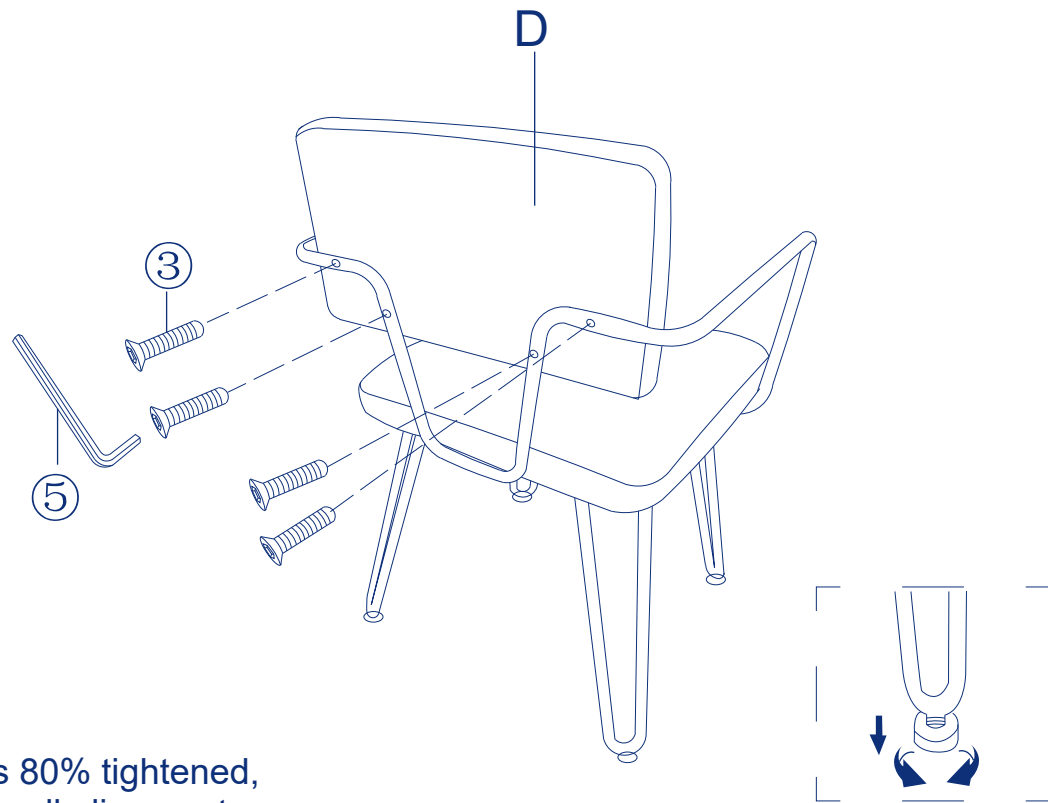

Leave bolts 80% tightened,
tighten after all alignment.

STEP4

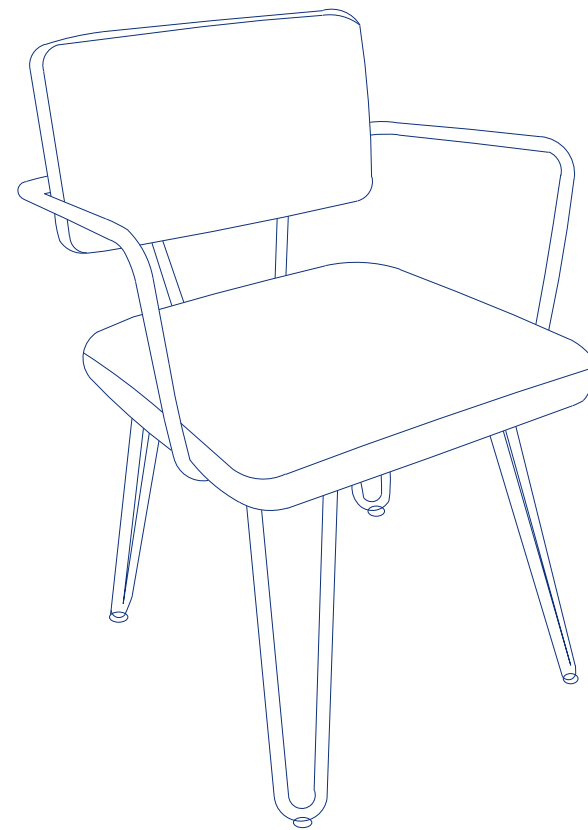



SUBRTEX HOUSEWARE INC
9935 BEVERLY BLVD UNIT 3 PICO RIVERACA 90660
CUSTOMERSERVICE@SUBRTEX.COM

www.subrtex.com


SUBRTEX®

Bring the best life to your home




PARTS LIST


Ax1

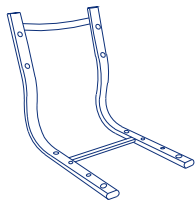


Bx1

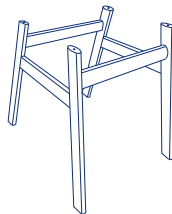

Cx1

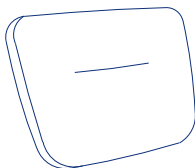


Dx1

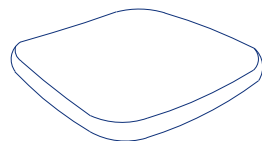


HARDWARE LIST

①x12




②x8



③x1




STEP1

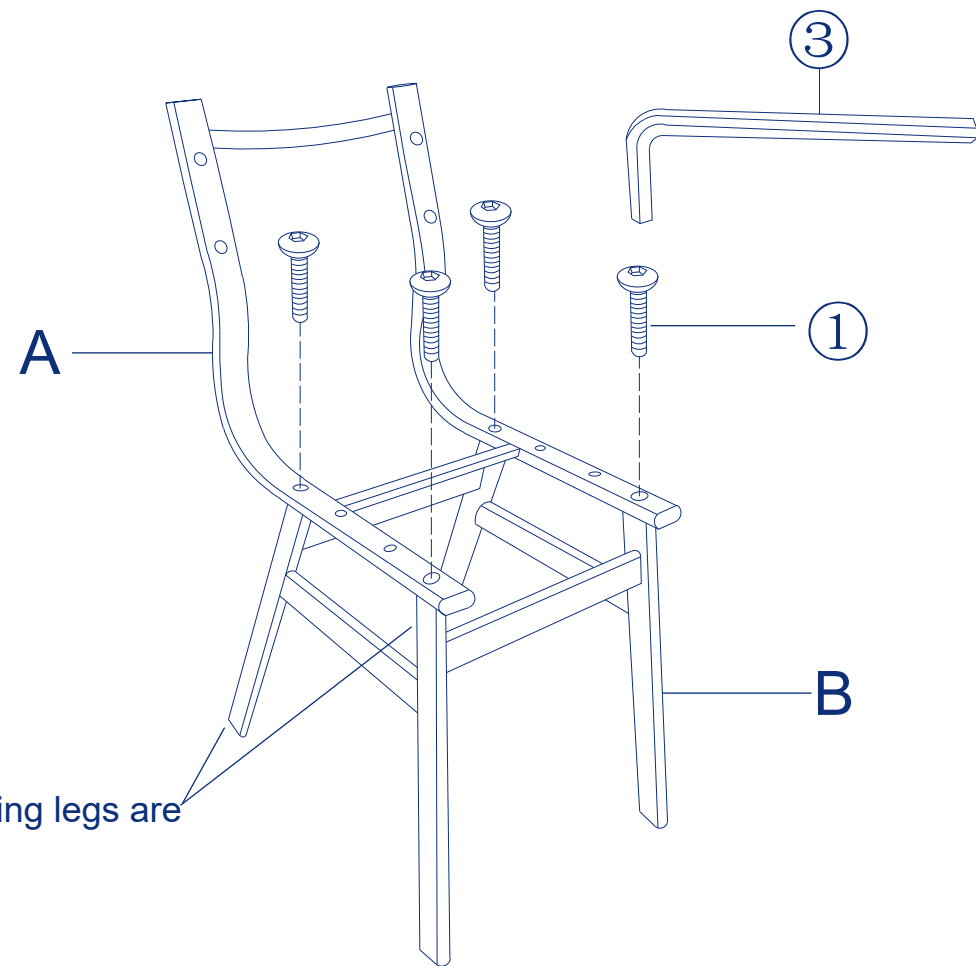


The more sloping legs are backward.

STEP2

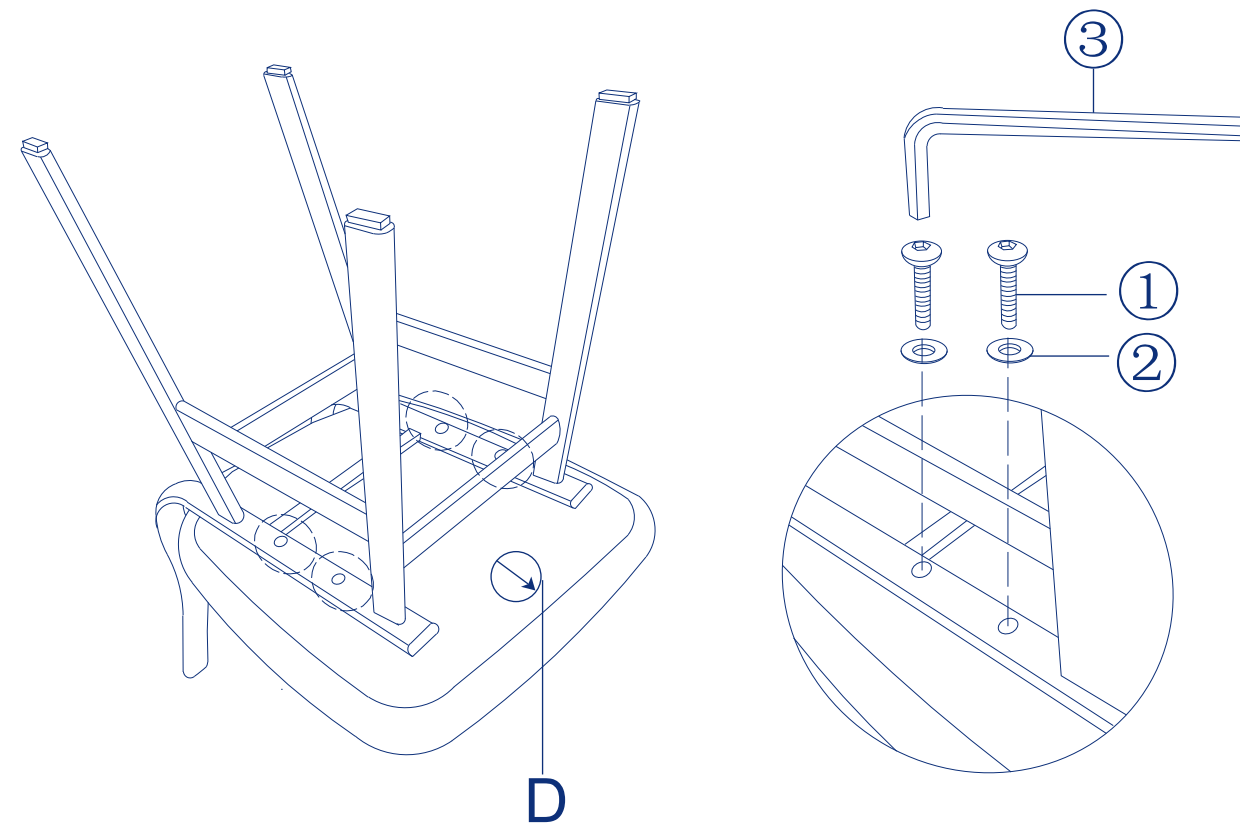

STEP3

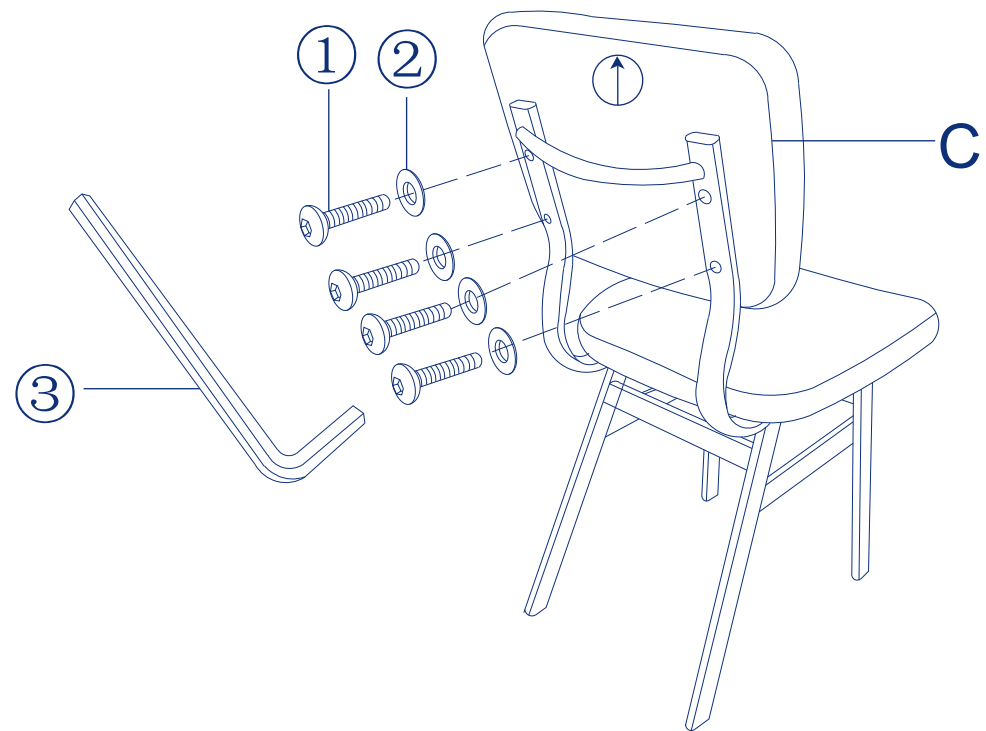

STEP4

