

Assembly Instruction


WF311924/WF311925/ WF311926/WF311927

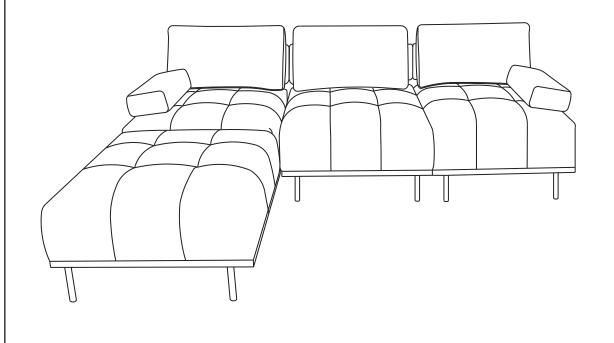

(A1)	(A2)	(A3)
Seat cushion×2	Seat cushion×1	Seat cushion×1
(B)	(C)	(D)
Handrail×2	Back pad×3	Backrest×3
(E)	(F)	(G)
Long iron foot×6	Short iron foot×10	Connecting iron×4
(H)	(I)	
Bolts×64	Allen Wrench×1	

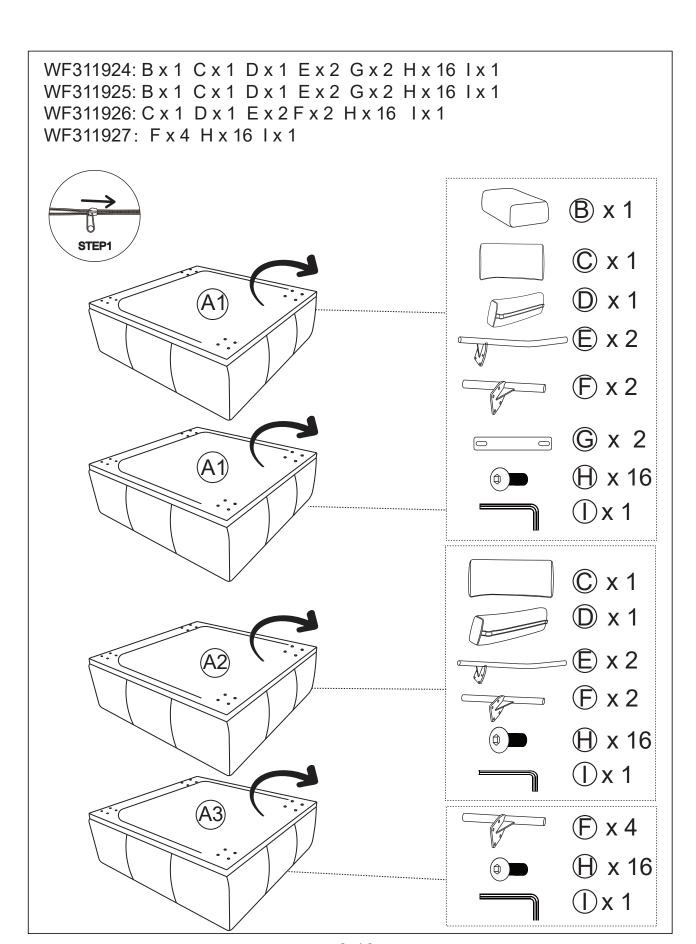


Step 1: Install iron feet (E)(F) to Seat cushion (A2).

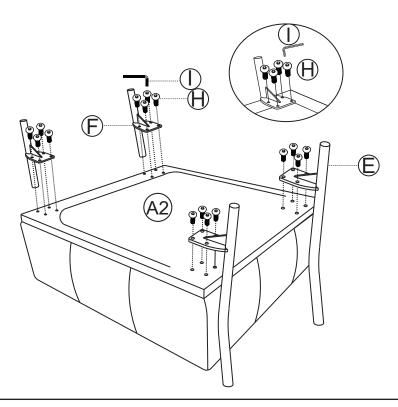


H x 16 F x 2 E x 2 I x 1


Step 2: Secure the Backrest (D) to the Long iron foot (E), then place the Back pad (C) on the seat cushion.

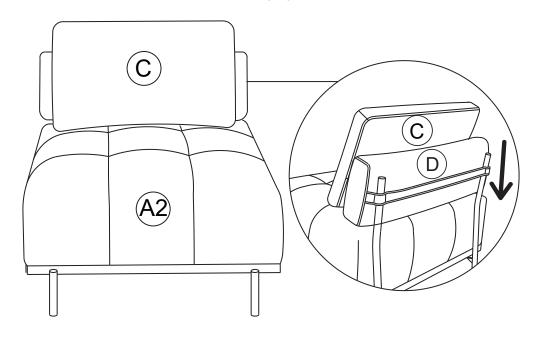



Step 3: Install iron feet (E)(F) to Seat cushion (A1).

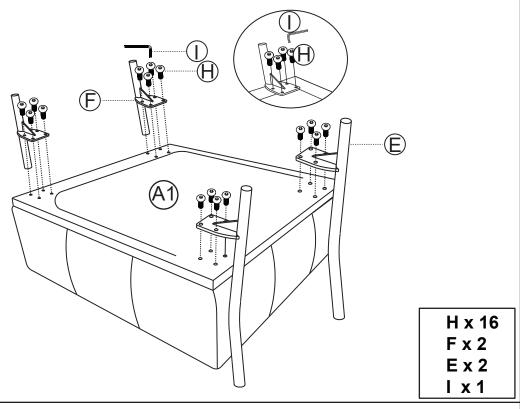


Step 4: Secure the Backrest (D) to the Long iron foot (E), then place the Back pad (C) and Handrail(B) on the seat cushion. Handrests can be placed as demand without fixation.

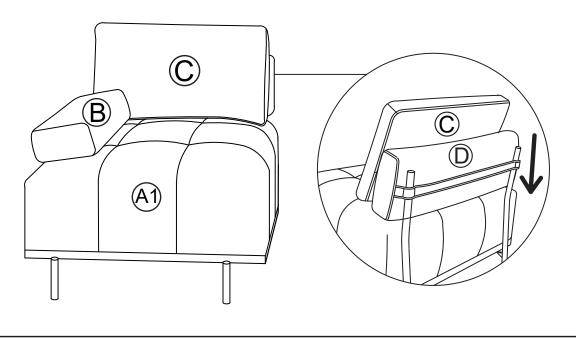


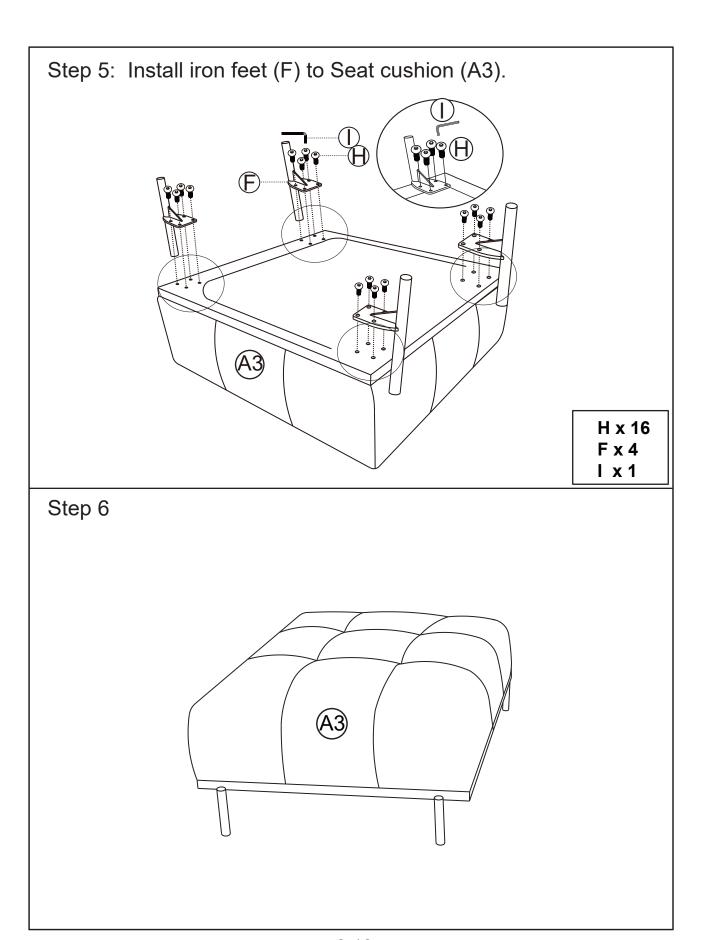

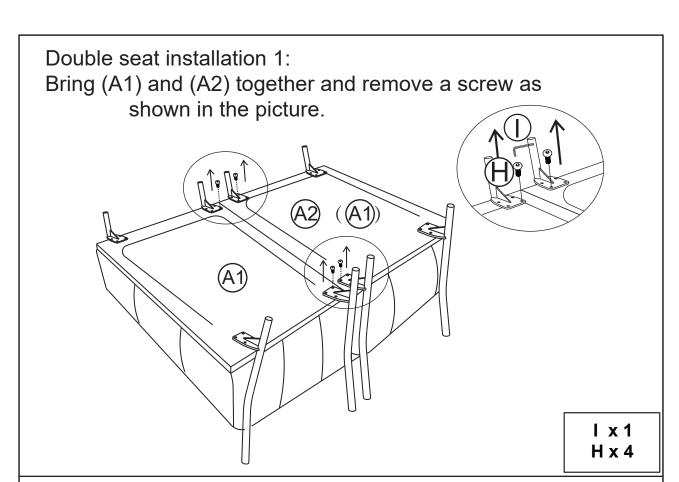


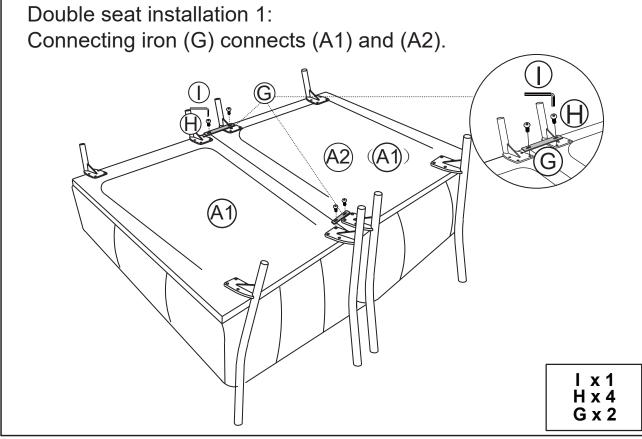

Double seat installation 3

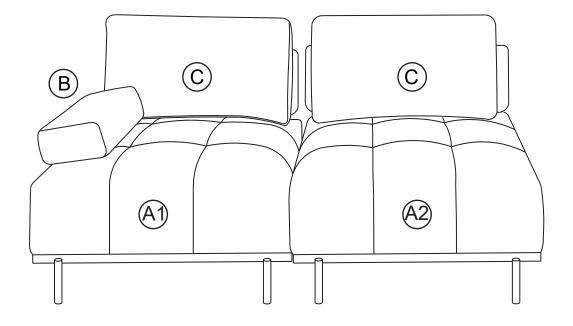


Double seat installation 4

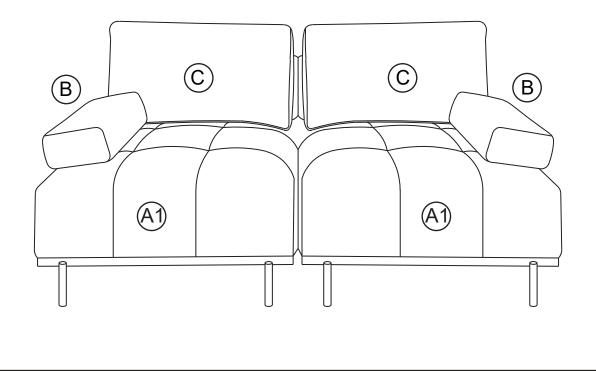

Triple seat installation 1:


Bring (A1) (A2) (A3) together and remove a screw as shown in the picture.

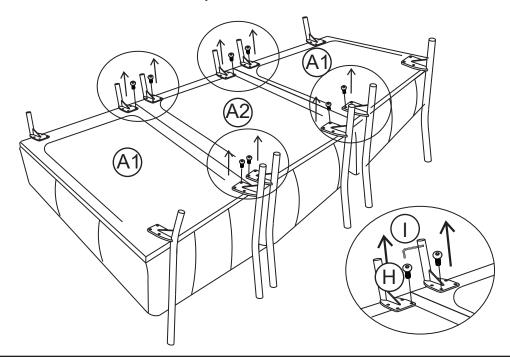

I x 1 H x 8


Triple seat installation 2:

Connecting iron (G) connects (A1) (A2) (A3).

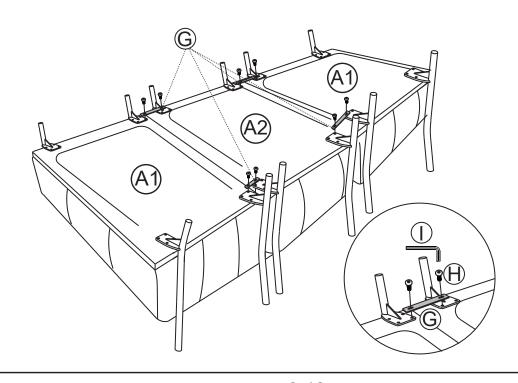

I x 1 H x 8 G x 4

Triple seat installation 3

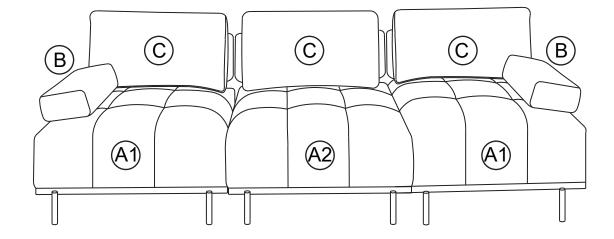

Triple seat installation 4

